




SHARP COLOUR TELEVISION MODEL 14L-SC SCHEMATIC DIAGRAM

PWB-B (CRT UNIT)
DUNTK9148WEV2

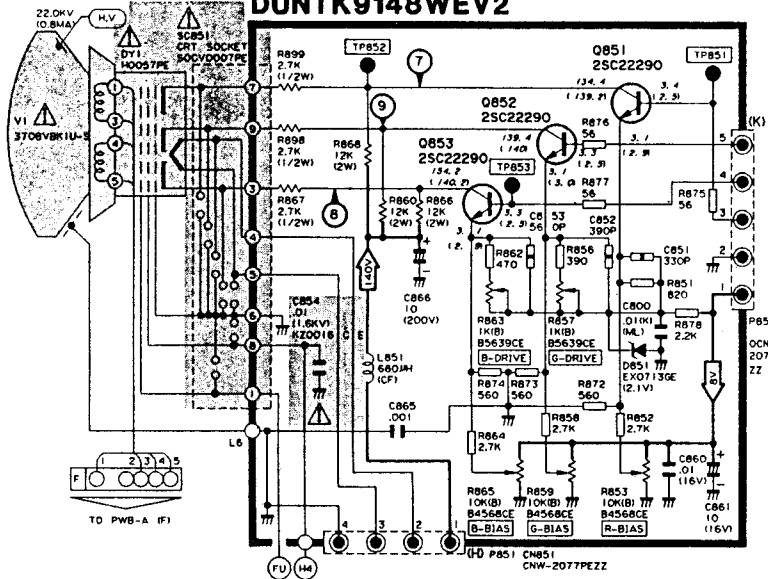


PWB-A
(MAIN UNIT)
DUNTK9146WEV2

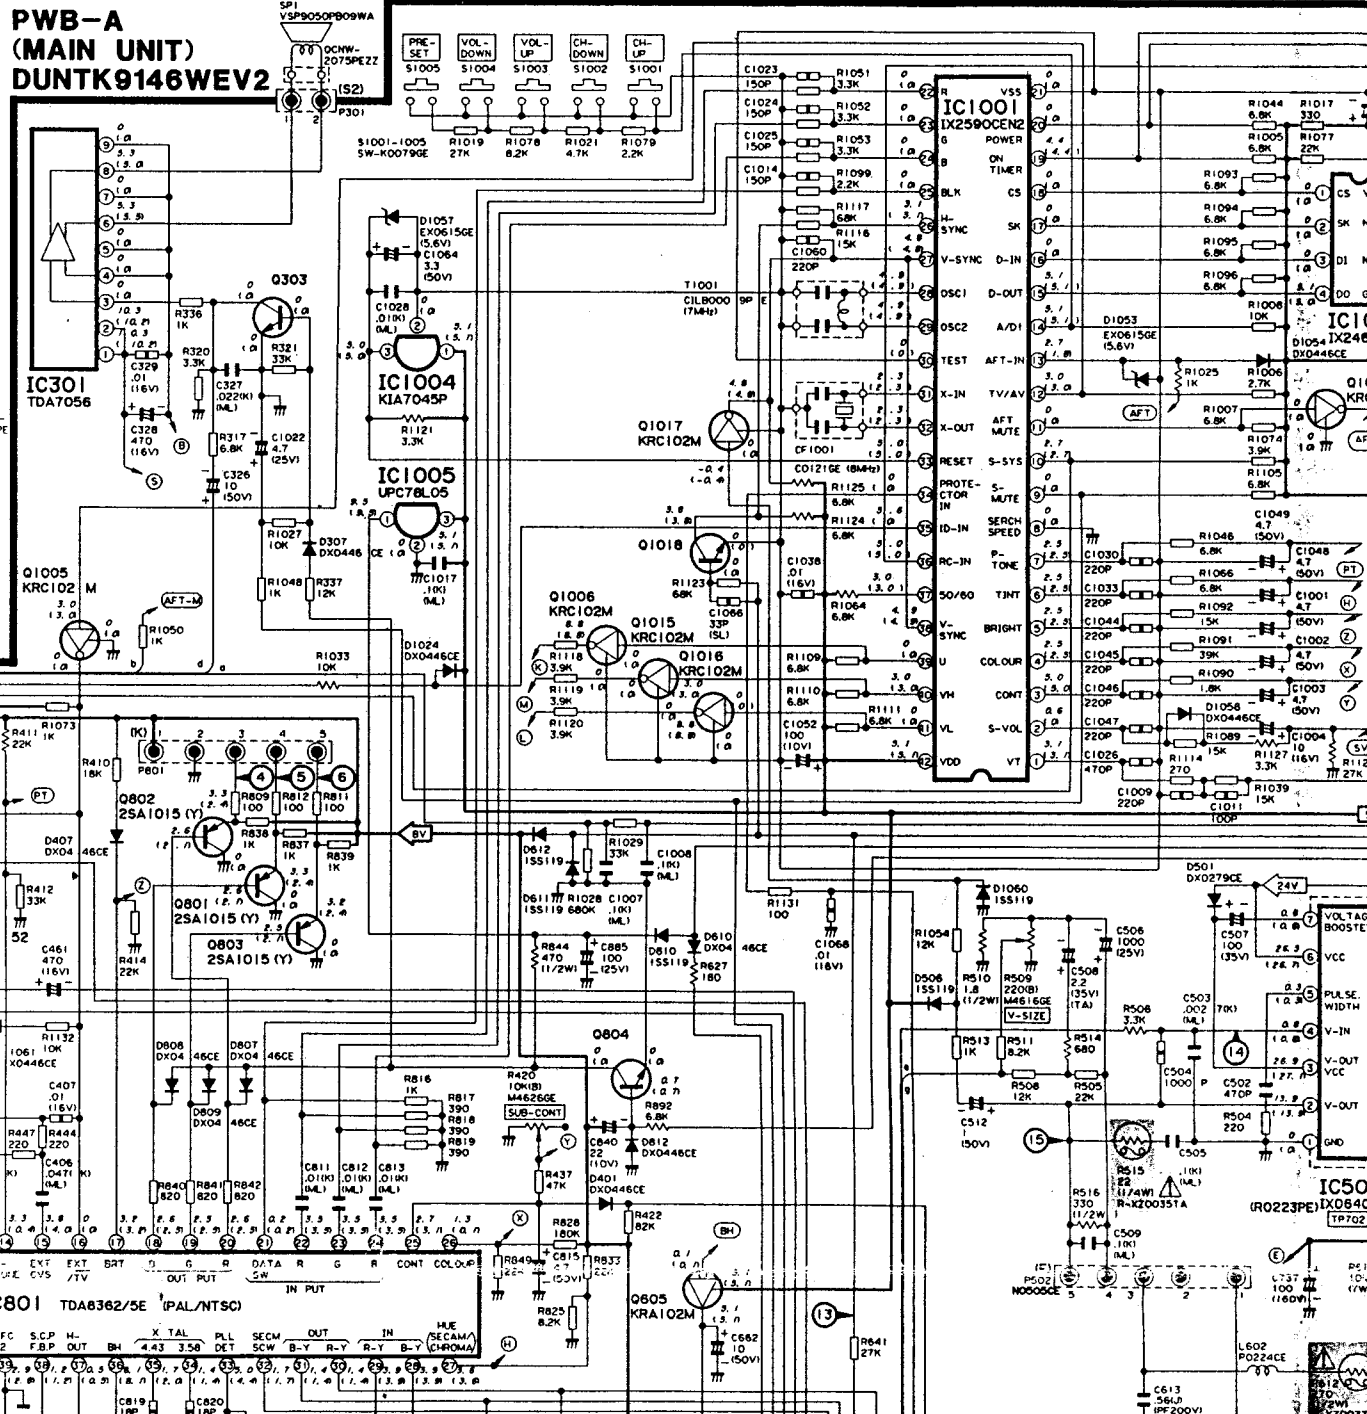



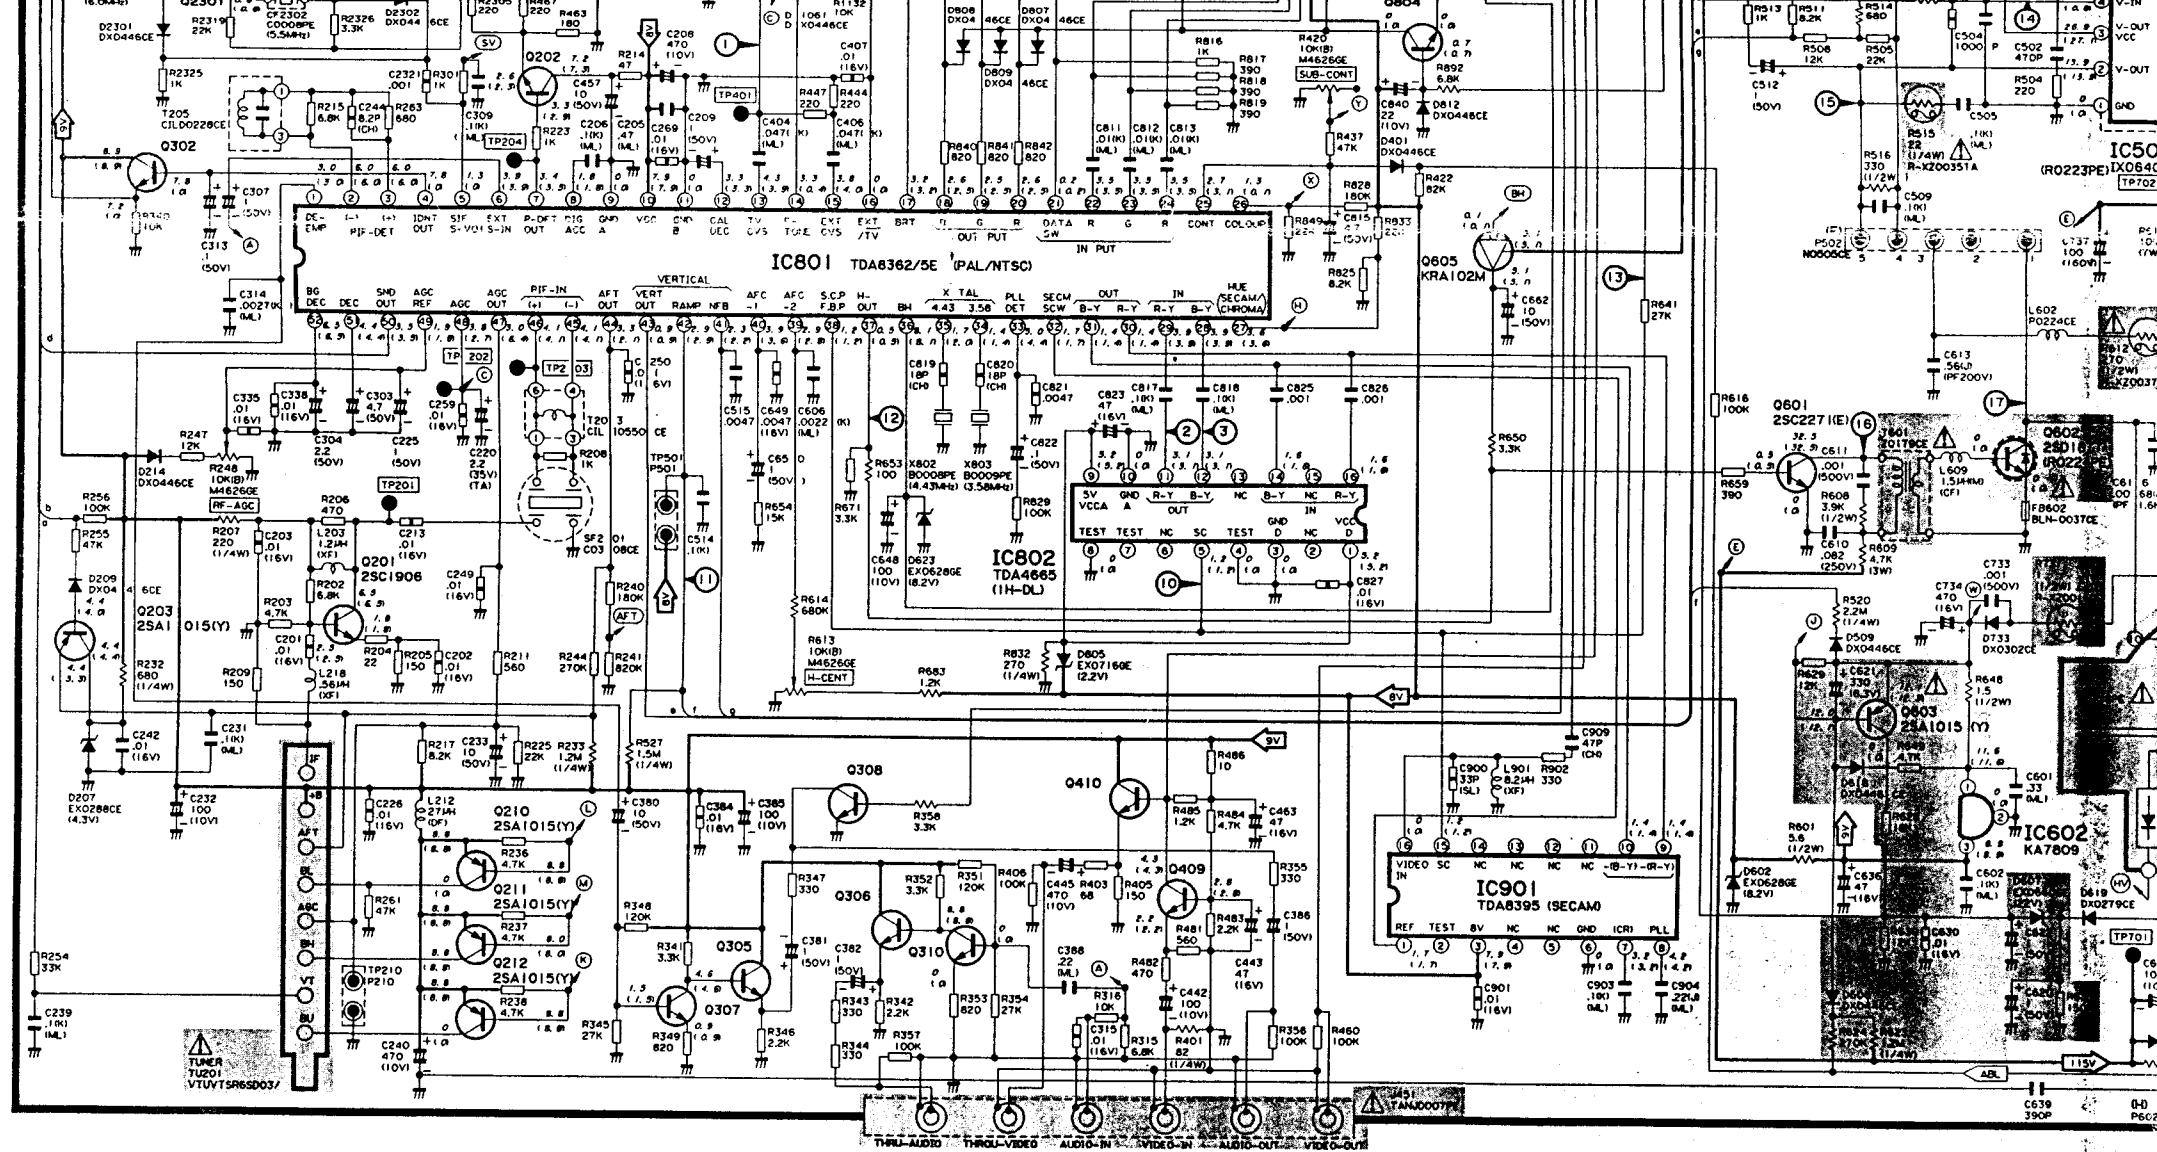


WAVE FORMS

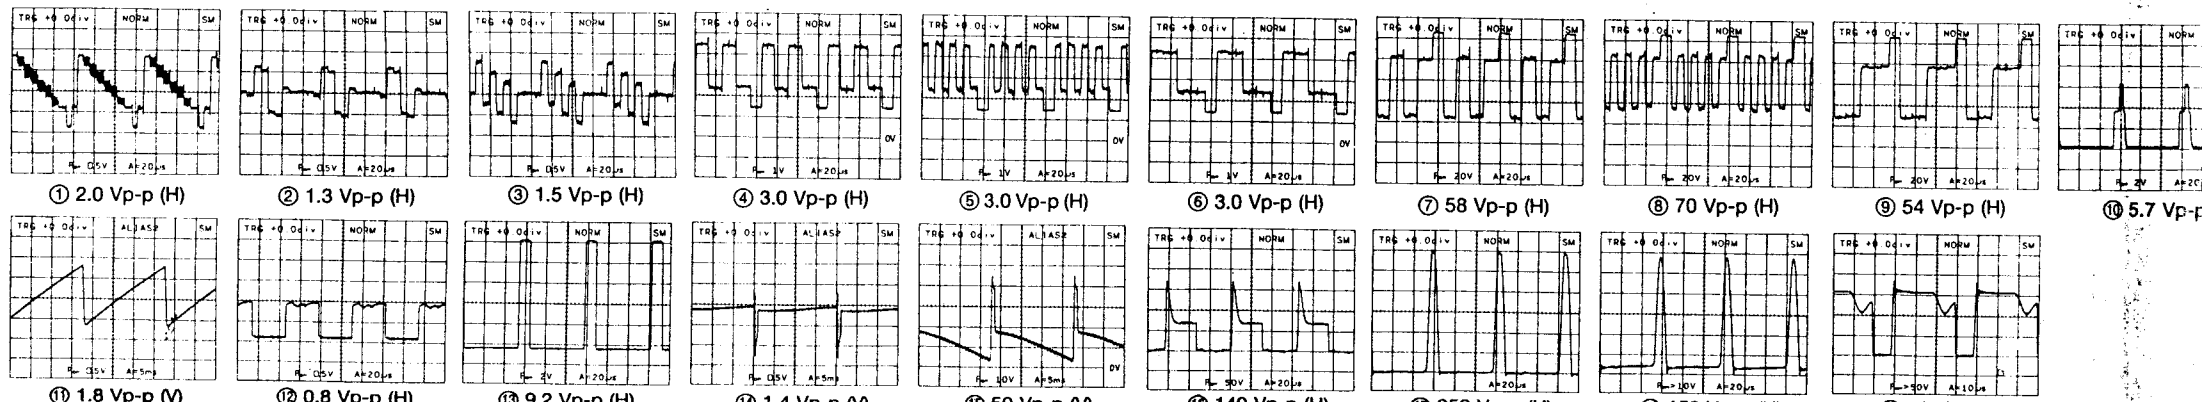

CHASSIS LAYOUT

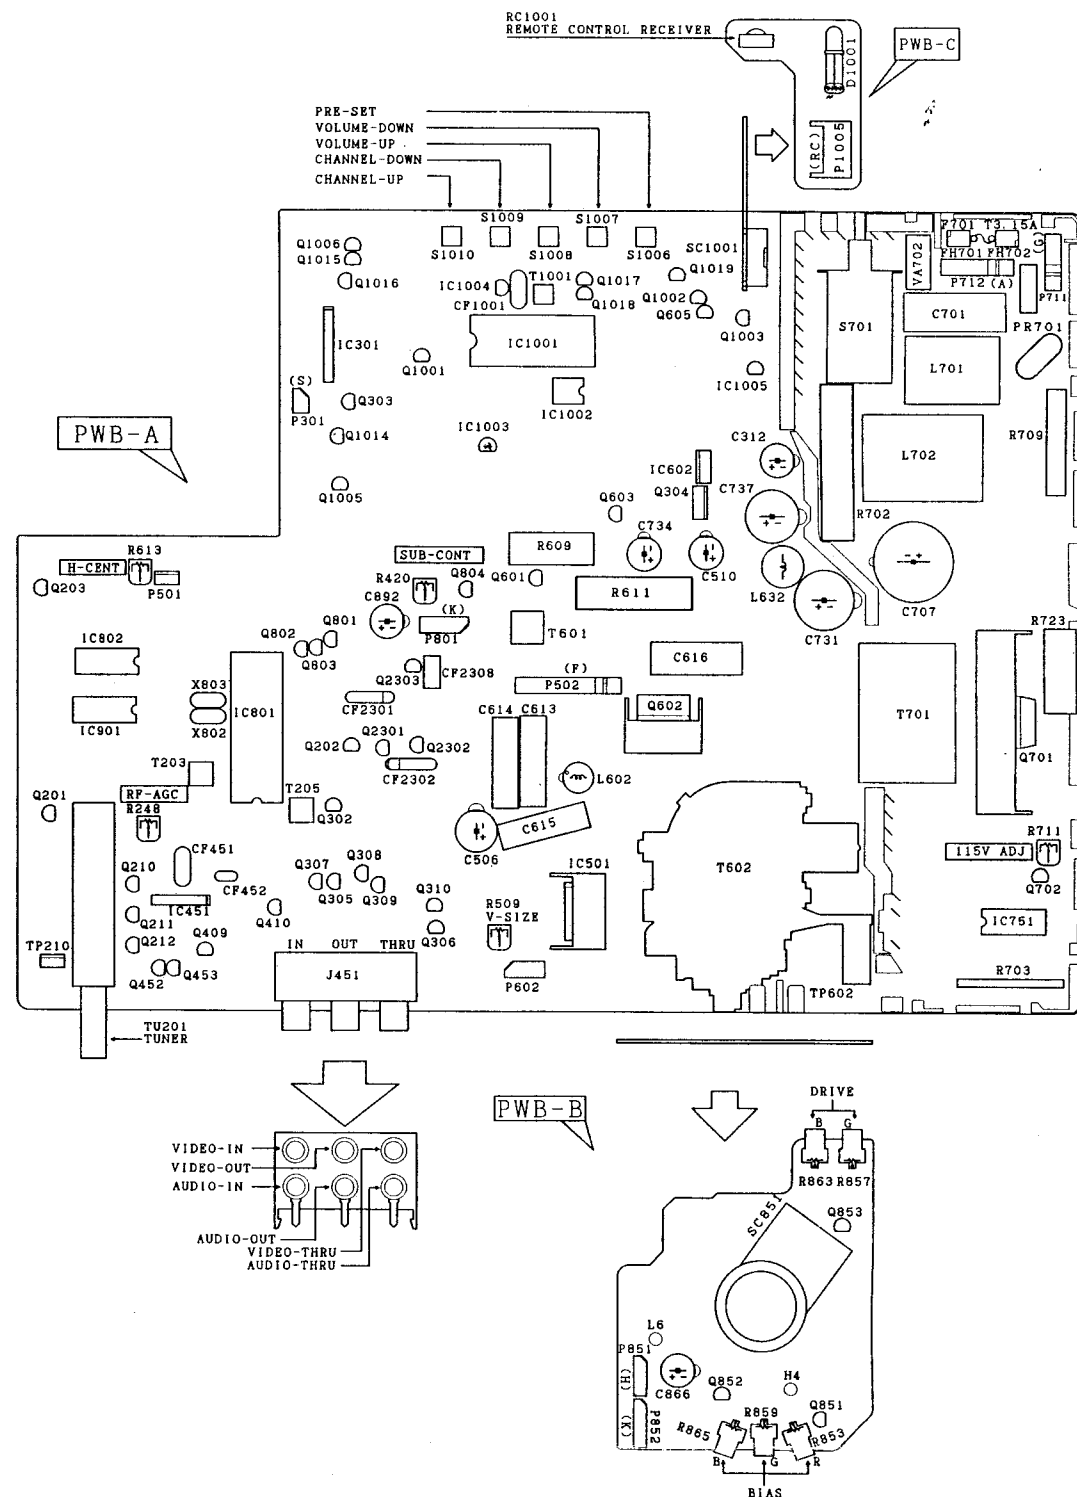

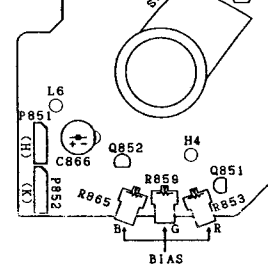 

Parts marked with "  " () are important for maintaining the safety of the set.
Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

IC501
SHARP P/N RH-1X0640CEZZ
IC751
SHARP P/N RH-1X1779CEZZ
IC1001
SHARP P/N RH-1X2590CEN2
IC1002
SHARP P/N RH-1X2467CEN1