



12. Schematic Diagram

- This Document can not be used without Samsung's authorization -


1-1. MAIN

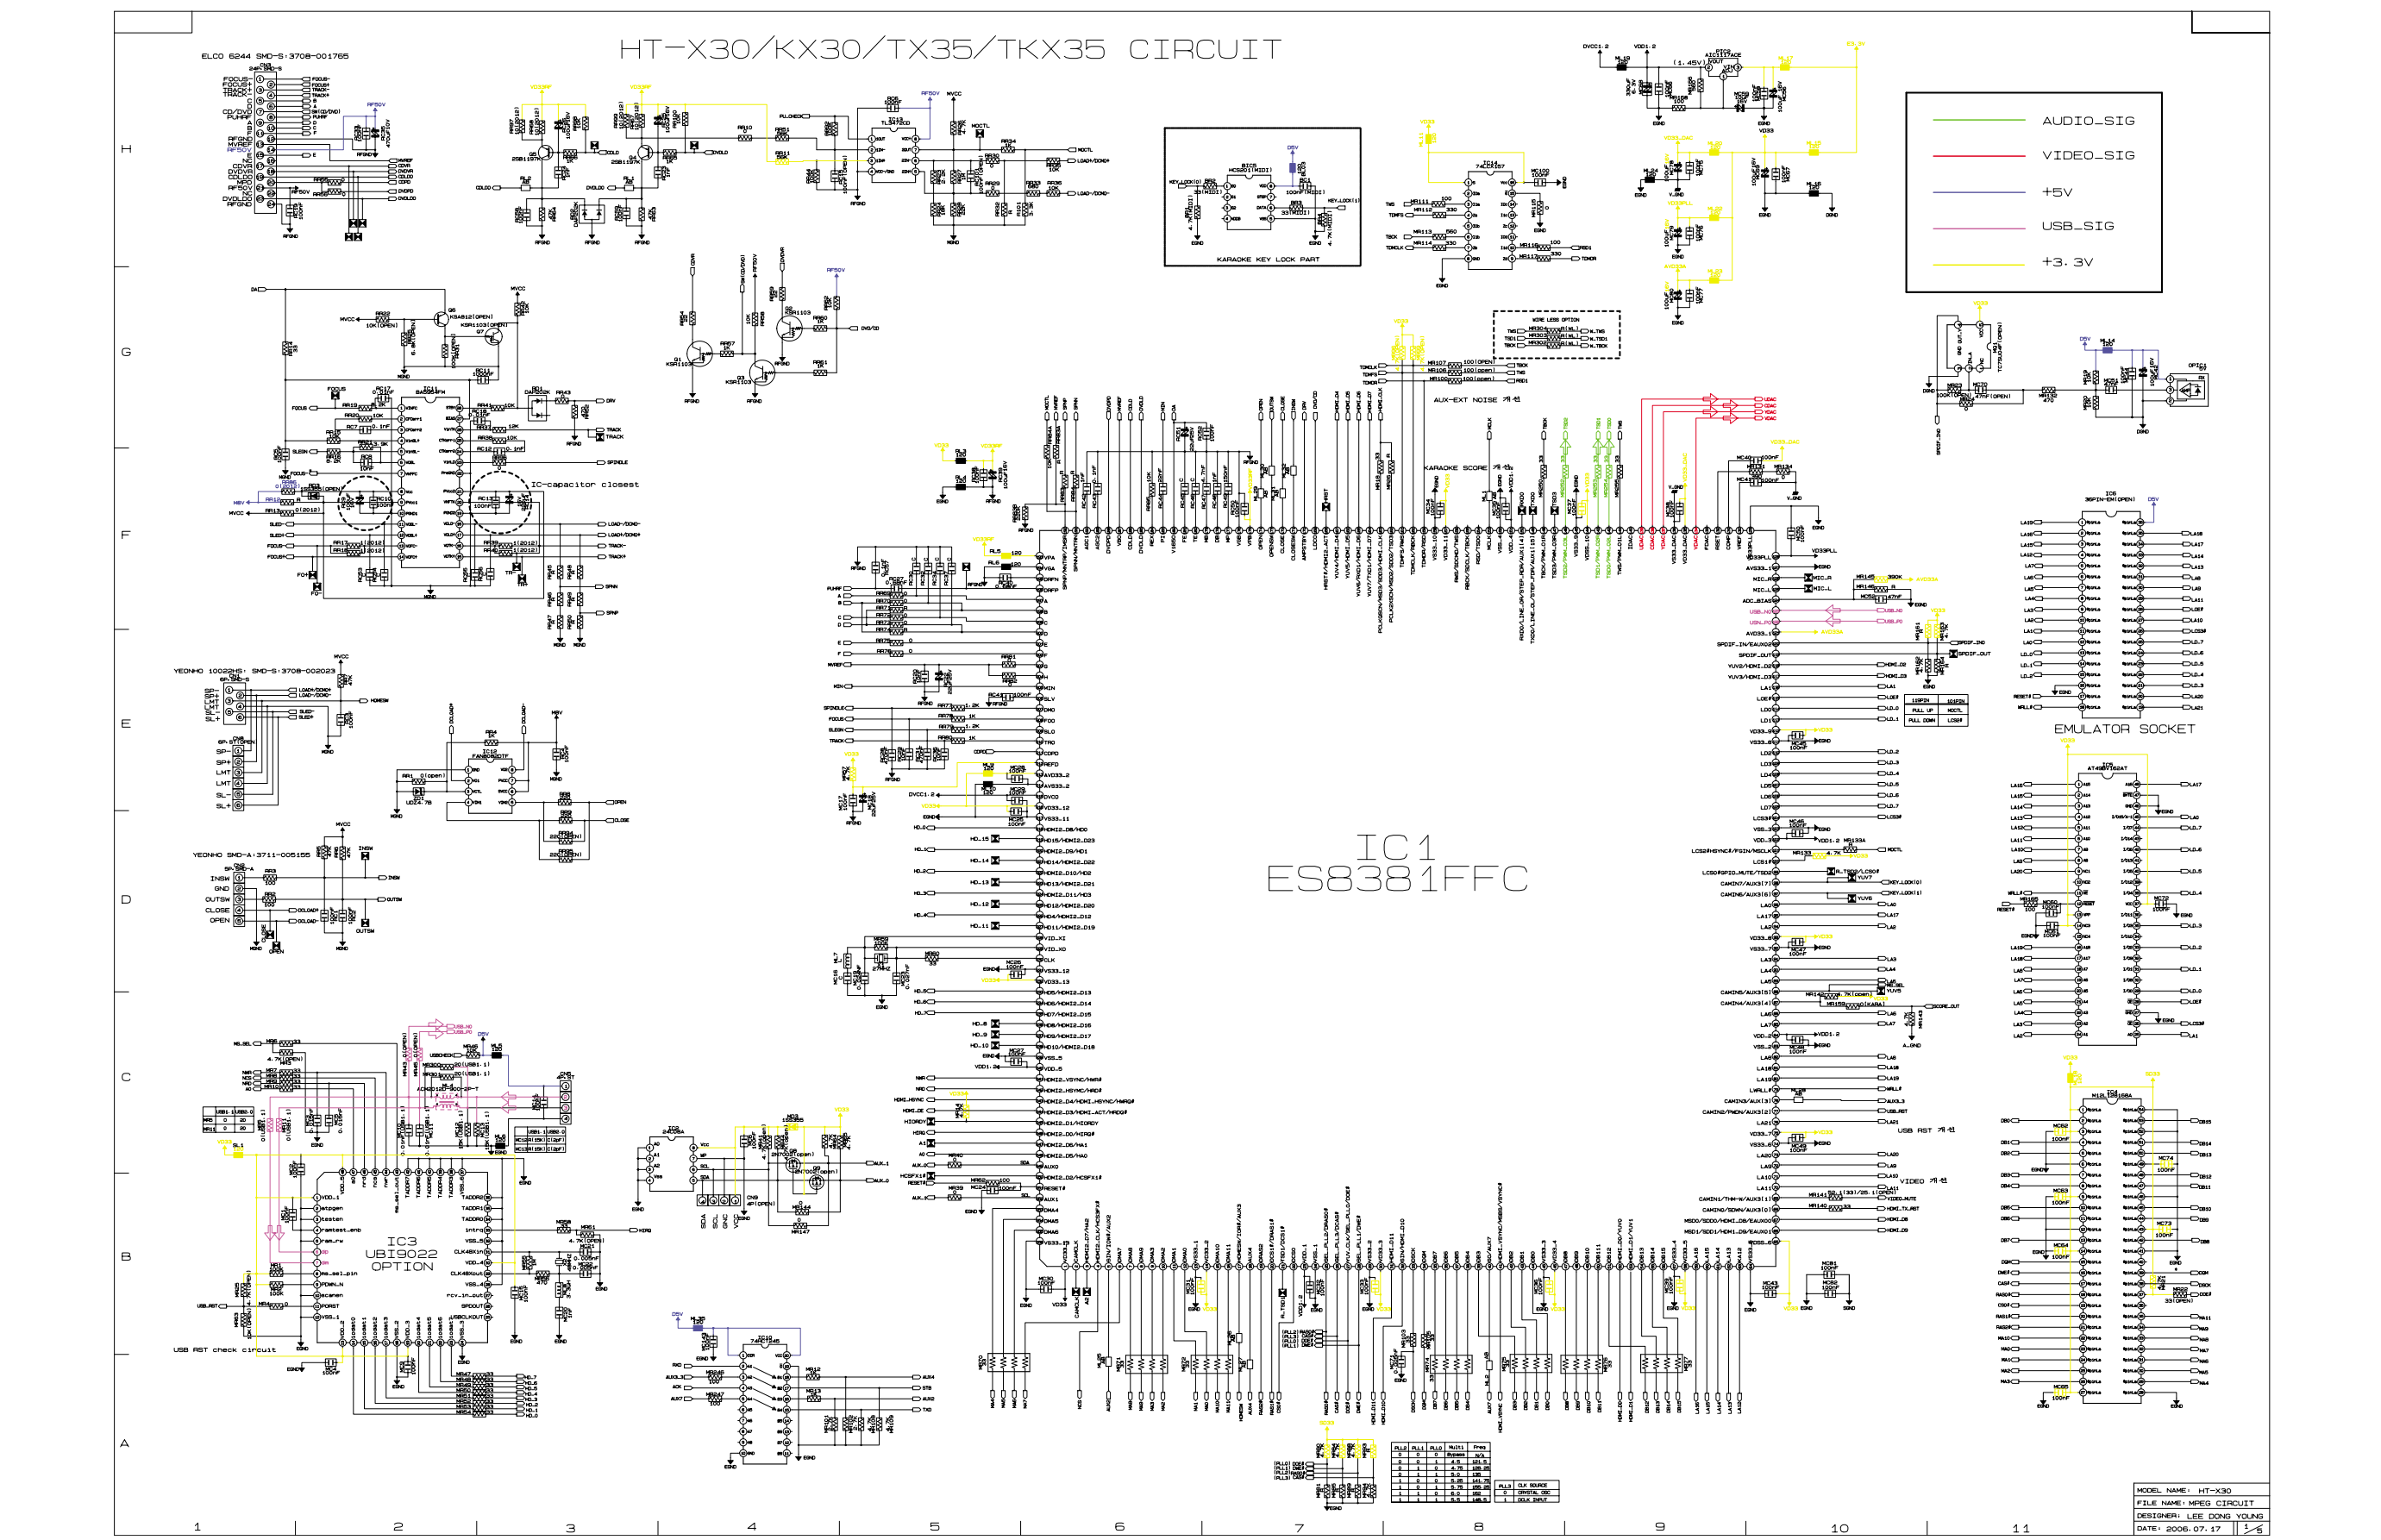

— AUDIO_SIG
— M5. 6V
— +12V
— +5V
— +3. 3V

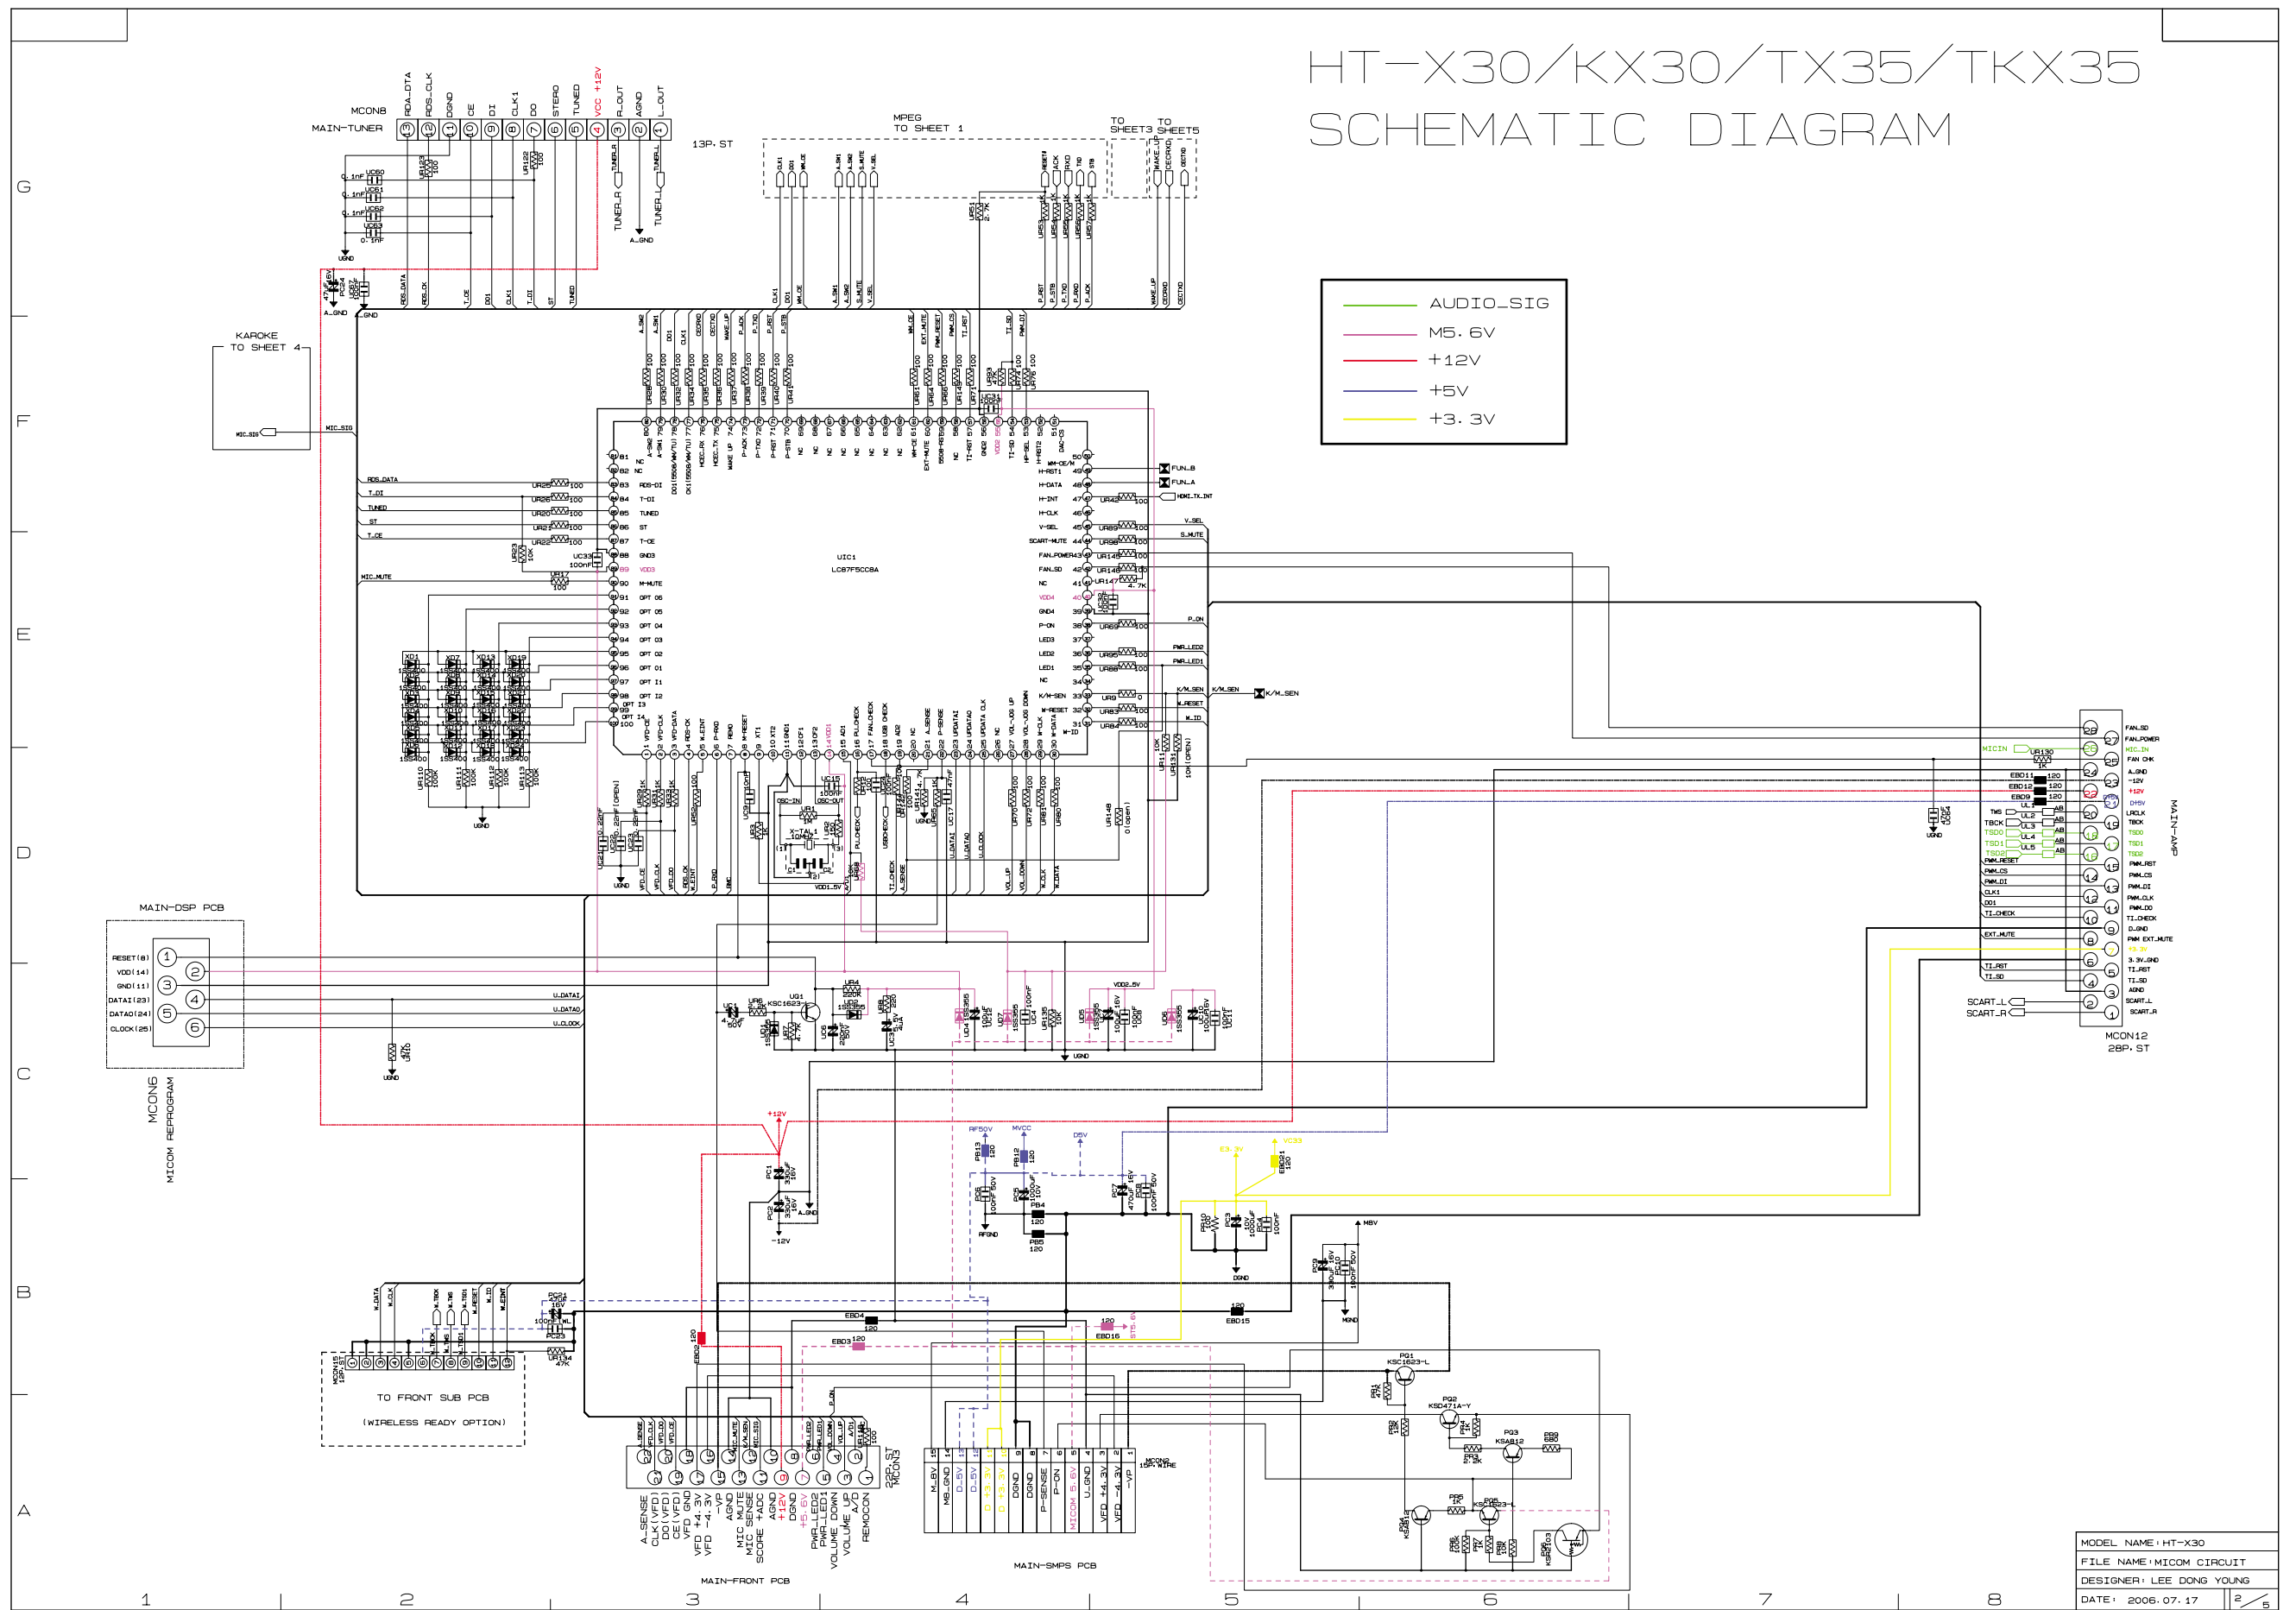


HT-X30/KX30/TX35/TKX35 CIRCUIT

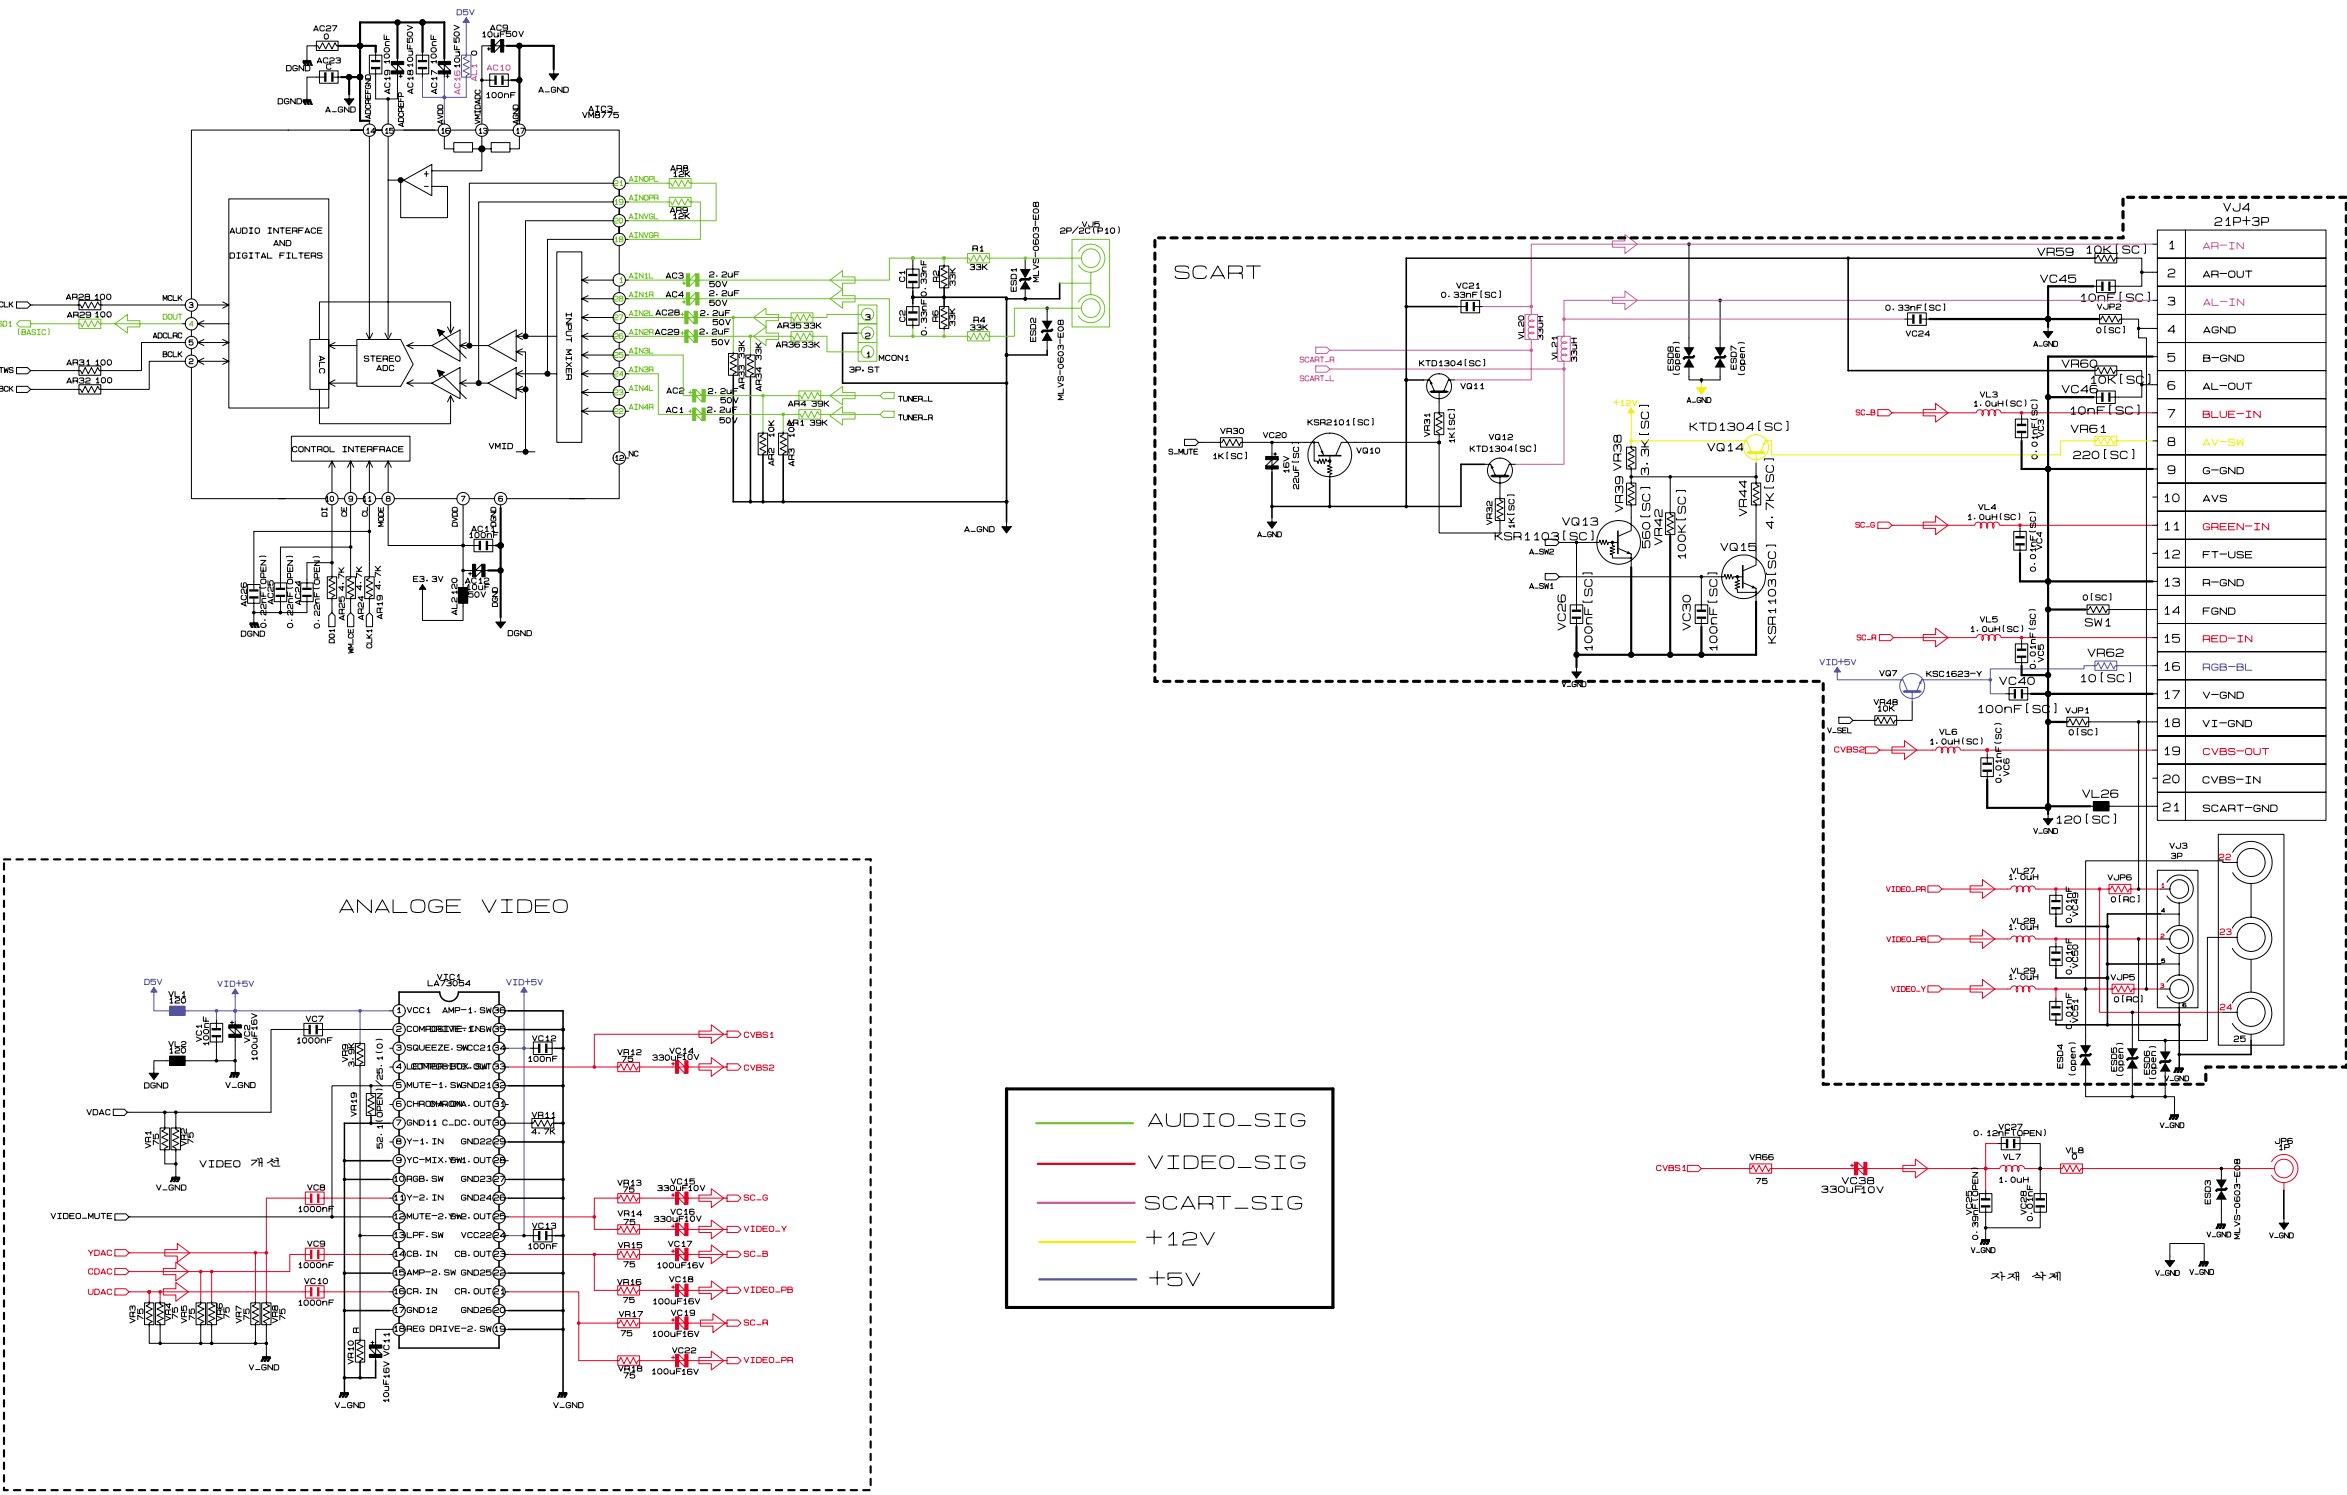

MODEL NAME: HT-X30
FILE NAME: AUX/VIDEO CIRCUIT
DESIGNER: LEE DONG YOUNG
DATE: 2006. 07. 17

MIC PART (X30/KX30/TX35/TKX35)

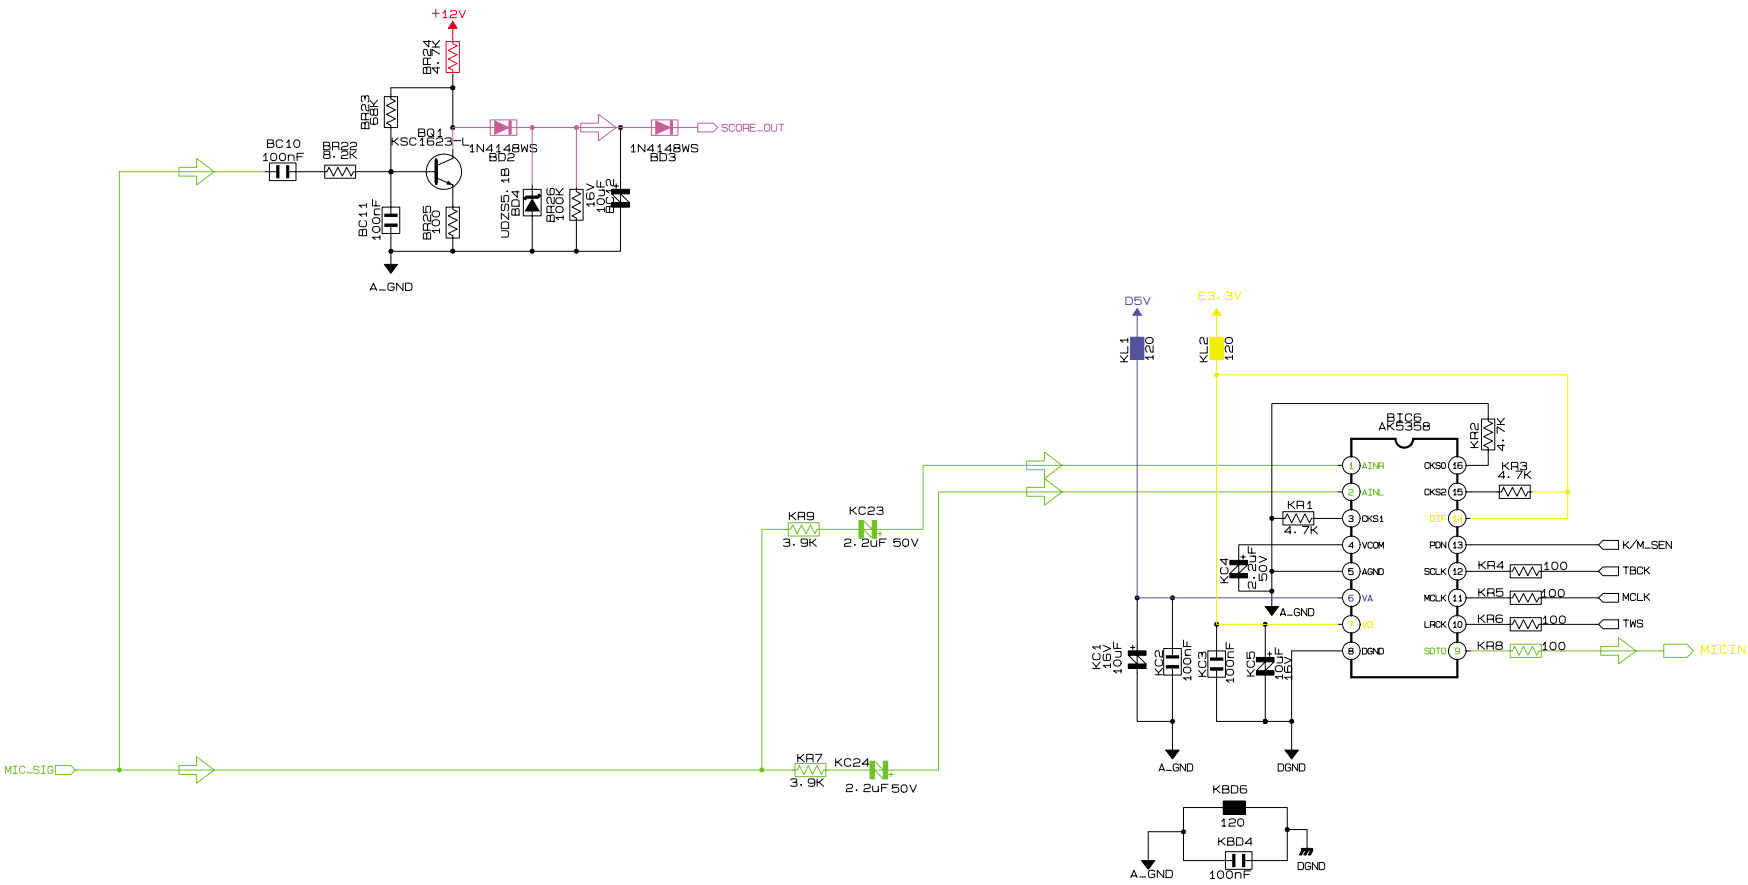

MIC_SIG

SCORE_OUT

+12V

+5V

+3.3V

MODEL NAME :	HT-X30
FILE NAME :	SEMI/MIDI KARAOKE CIRCUIT
DESIGNER :	LEE DONG YOUNG
DATE :	2006.07.17



