

Service Manual

 **PIONEER®**
The Art of Entertainment

ORDER NO.
CRT1933

HIGH POWER CASSETTE PLAYER WITH FM/MW/LW TUNER

KEH-1530

X1M/EW


KEH-1530

X1N/EW, X1IN/EW


- This additional service manual is designed to be used together with Model KEH-1300/X1M/EW Service Manual CRT1798. Refer to it for finding parts numbers and adjustment, etc. which are not shown in this manual.

IC INFORMATION

SN761027DL

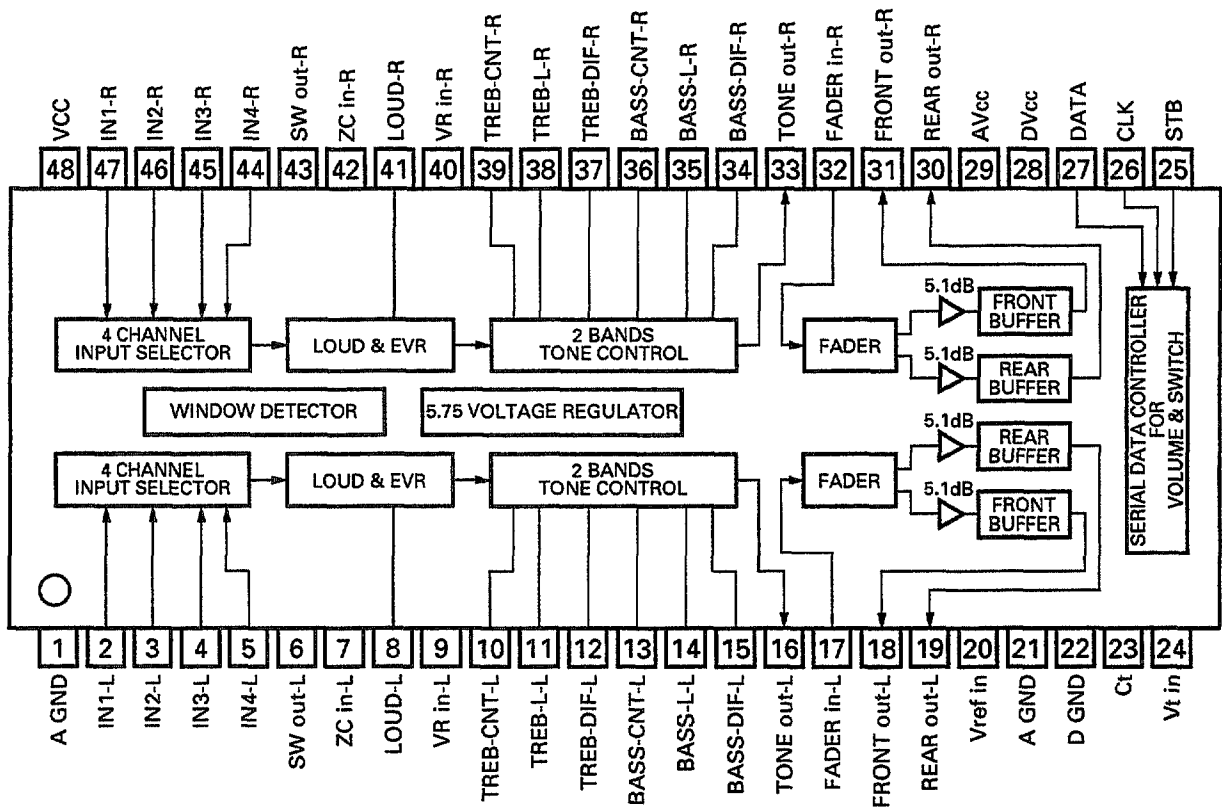

HA13151

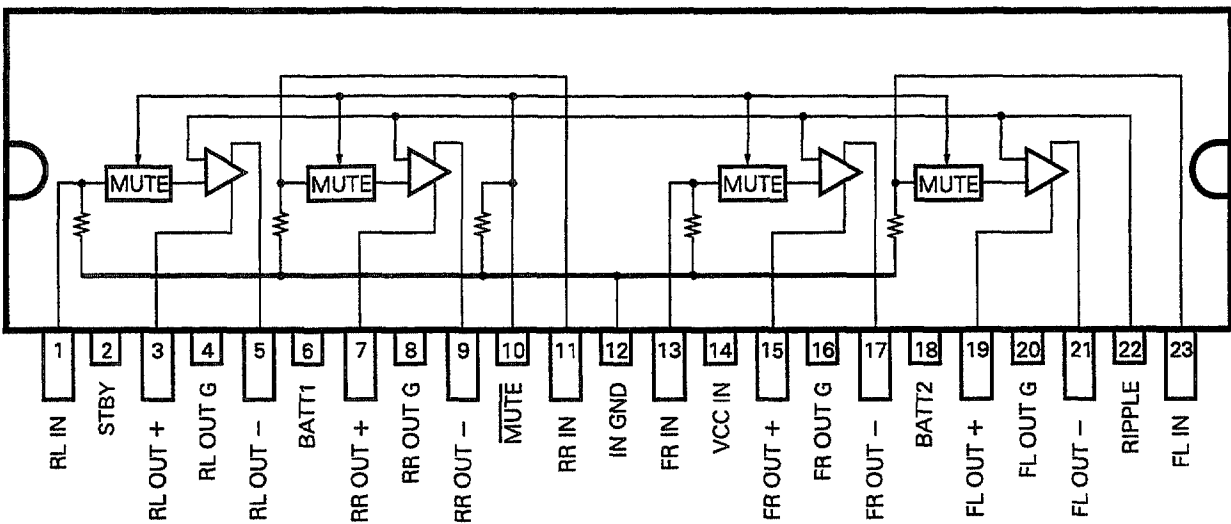

ELECTRICAL PARTS LIST

● Tuner Amp Unit(Page 14)

Circuit Symbol & No	KEH-1300/X1M/EW	KEH-1530/X1M/EW KEH-1530/X1N/EW KEH-1530/X1IN/EW
	Part No.	Part No.
IC 301	HA12134AF	
IC 401	AN6263N	
IC 451	SN761025DL	SN761027DL
IC 551	HA13150A	HA13151
Q 301 302	DTC114TS	
Q 401	DTC114ES	
Q 851 852	DTC143TS	
Q 853	DTA124ES	
VR 301 302	CCP1209	
R 301 302	RD1/4PU272J	
R 303 304	RD1/4PU332J	
R 305 306 309	RD1/4PU104J	
R 307	RD1/4PU223J	
R 308	RD1/4PU183J	
R 401 402	RD1/4PU822J	
R 403	RD1/4PU100J	
R 404	RD1/4PU684J	
R 457 458	RD1/4PU103J	
R 459 460 461	RD1/4PU472J	RD1/4PU0R0J
R 465 466	RD1/4PU223J	RD1/4PU333J
R 602		RD1/4PU472J
R 851 852	RS1/10S223J	
R 853 854	RD1/4PU821J	
C 301 302 304	CEJA1R0M50	
C 305 306	CKSQYF224Z25	
C 307 308	CKSQYB104K16	
C 309	CEAL4R7M16	
C 310	CEJA4R7M35	
C 311 312	CKSQYB223K25	
C 401	CKSQYB562K50	
C 402	CCSQCH330J50	
C 403	CEAL101M10	
C 404	CKSYB823K50	
C 483	CEJA100M16	CEJA220M6R3
C 851	CEJA100M16	
C 852	CEL100M16	

EXPLODED VIEW AND PARTS LIST

● CHASSIS

● Parts List(Page 32)

Mark	No.	Description	KEH-1300/X1M/EW	KEH-1530/X1M/EW KEH-1530/X1N/EW KEH-1530/X1IN/EW
			Part No.	Part No.
	3	Cord Assy	CDE4950	CDE5285
	7	Tuner Amp Assy	CWM4577	CWM5139
	8	Detach Grille Assy	CXA8538	CXA9981
	9	Cassette Mechanism Assy	EXK3436	EXK3416
	25	Panel Unit	CXA8837	CXB1062
	26	Door	CAT1762	CAT1846
	40	Grille	CNS3830	CNS4372
	41	Key Board Unit	CWM4579	CWM5157
	48	Screw	BPZ26P060FMC	
	51	Pin Jack(CN851)	CKB1028	
	53	Panel	CNB2014	CNB2027
	56	Holder	CNC6531	

● CASSETTE MECHANISM ASSY

● Parts List(Page 35)

Mark	No.	Description	EXK3436	EXK3416
			Part No.	Part No.
	75	Diode(D1)	1SR-35-100A	
	76	Solenoid(SO1)	EXP1012	
	77	Arm	ENV1491	
	78	Spring	EBH1582	

PACKING METHOD

● Parts List(Page 36)

Mark	No.	Description	KEH-1300/X1M/EW	KEH-1530/X1M/EW	KEH-1530/X1N/EW	KEH-1530/X1IN/EW
			Part No.	Part No.	Part No.	Part No.
	1	Carton	CHG2895	CHG3161	CHG3163	CHL3162
	2-1	Owner's Manual	CRD1965	CRD2182	CRD2182	CRD2182
	2-2	Owner's Manual	CRD1966			
	7	Cord Assy	CDE4950	CDE5285	CDE5285	CDE5285
	9	Contain Box	CHL2895	CHL3161	CHL3163	CHL3162


● Owner's Manual

Part No.	Language
CRD2182	English, French, Spanish, German, Italian, Dutch

Service Manual

PIONEER
The Art of Entertainment

KEH-1400/X1M/UC

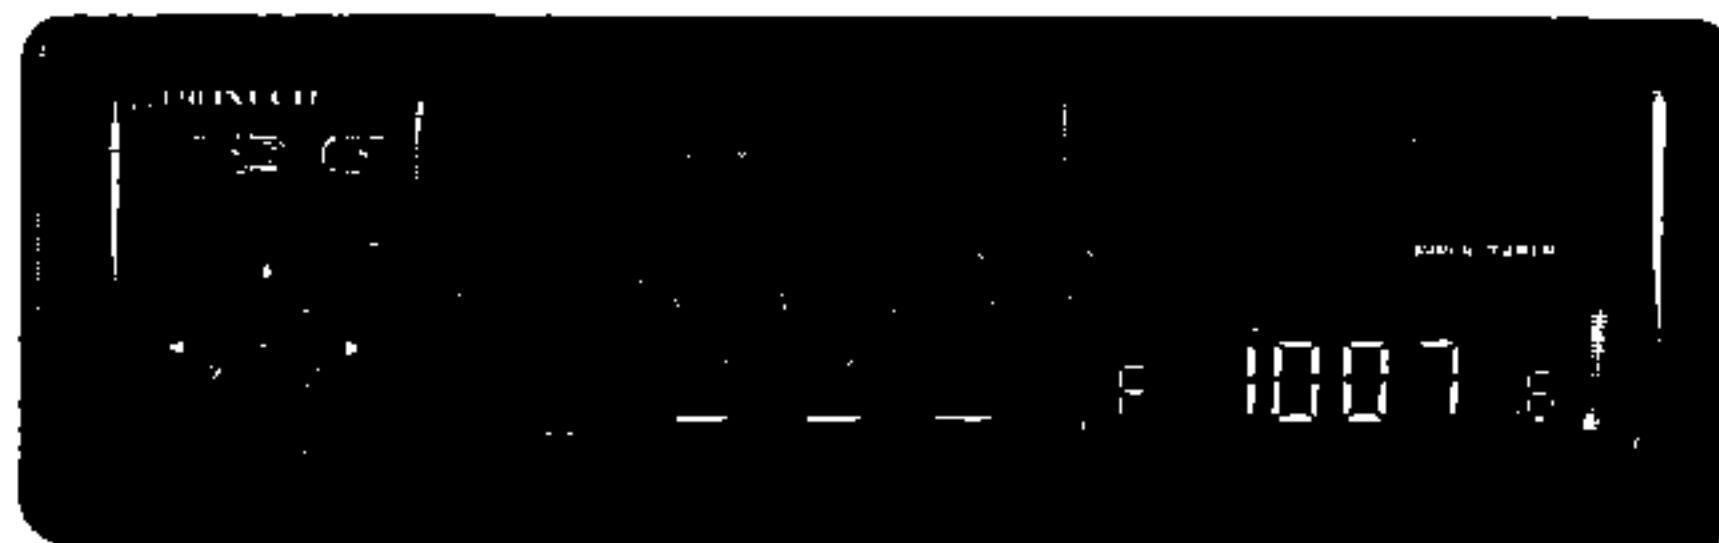

ORDER NO.
CRT1798

HIGH POWER CASSETTE PLAYER WITH FM/AM TUNER

KEH-1400

X1M/UC

KEH-1450

X1M/ES

KEH-1311

X1M/UC

KEH-1100

X1M/UC

KEH-1150

X1M/ES

HIGH POWER CASSETTE PLAYER WITH FM/MW/LW TUNER

KEH-1300

X1M/EW

KEH-1300SDK

X1M/GR

KEH-1400

X1M/IT

NOTE:

- See the separate manual CX-644(CRT1800) for the cassette mechanism description.
- The cassette mechanism assy employed in this model is one of X-2M series.
- Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"Dolby" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.
- For the service mentioned in this manual, the special tools GGD1056 and GGD1100 have to be used.
See the sections "Adjustment" on how to use these tools.

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE INC. P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.
PIONEER ELECTRONIC (EUROPE) N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE.LTD. 501 Orchard Road, #10-00, Lane Crawford Place, Singapore 0923

© PIONEER ELECTRONIC CORPORATION 1996

K-FFM. JAN. 1996 Printed in Japan

CONTENTS

1. SAFETY INFORMATION	2	9. BLOCK DIAGRAM	19
2. SPECIFICATIONS.....	3	10. CONNECTION DIAGRAM	20
3. OPERATIONS AND CONNECTION	4	11. SCHEMATIC CIRCUIT DIAGRAM	23
4. DISASSEMBLY	7	12. CIRCUIT DIAGRAM AND PATTERN	26
5. ADJUSTMENT.....	8	13. EXPLODED VIEW AND PARTS LIST	31
6. IC INFORMATION.....	10	14. PACKING METHOD.....	36
7. LCD.....	13		
8. ELECTRICAL PARTS LIST	14		

1. SAFETY INFORMATION

● KEH-1400/X1M/UC,1311/X1M/UC,1100/X1M/UC

CAUTION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely; you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

Lead in solder used in this product is listed by the California Health and Welfare agency as a known reproductive toxicant which may cause birth defects or other reproductive harm (California Health & Safety Code, Section 25249.5). When servicing or handling circuit boards and other components which contain lead in solder, avoid unprotected skin contact with the solder. Also, when soldering do not inhale any smoke or fumes produced.

2. SPECIFICATIONS

General	
Power source	14.4 V DC (10.8 — 15.1 V allowable)
Grounding system	Negative type
Max. current consumption	
KEH-1400, 1450, 1311, 1300, 1300SDK	7.5 A
KEH-1100, 1150	6.0 A
Dimensions (DIN) (mounting size)	
(nose)	178 (W) × 50 (H) × 150 (D) mm [7 (W) × 2 (H) × 5-7/8 (D) in.]
(D) (mounting size)	188 (W) × 58 (H) × 19 (D) mm [7-3/8 (W) × 2-1/4 (H) × 3/4 (D) in.]
(nose)	178 (W) × 50 (H) × 155 (D) mm [7 (W) × 2 (H) × 6-1/8 (D) in.]
(D) (mounting size)	170 (W) × 48 (H) × 14 (D) mm [6-3/4 (W) × 1-7/8 (H) × 1/2 (D) in.]
Weight	1.1 kg (2.4 lbs.)
Amplifier	
Continuous power output is 14 W (10 W for KEH-1100) per channel min. into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5 % THD.	
Maximum power output	
KEH-1400, 1450, 1311, 1300, 1300SDK	30 W × 4
KEH-1100, 1150	22 W × 4
Load impedance	4 Ω (4 — 8 Ω allowable)
Preout output level/output impedance	500 mV/1 kΩ
Tone controls (bass) KEH-1400, 1311, 1100, 1300, 1300SDK	±12 dB (100 Hz)
(bass) KEH-1450, 1150	+8 dB — -16 dB (100 Hz)
(treble)	±12 dB (10 kHz)
Loudness contour	+10 dB (100 Hz), +7 dB (10 kHz) (Volume: -30 dB)
Tape player	
Tape	Compact cassette tape (C-30 — C-90)
Tape speed	4.76 cm/sec. (+0.14 cm/sec., -0.05 cm/sec.)(1-7/8 ips.)
Fast forward/rewind time	Approx. 90 sec. for C-60
Wow & flutter	0.13 % (WRMS)
Frequency response	
KEH-1400, 1450, 1300, 1300SDK	40 — 17,000 Hz (±3 dB)
KEH-1311, 1100, 1150	40 — 14,000 Hz (±3 dB)
Stereo separation	45 dB
Signal-to-noise ratio	
KEH-1400, 1450, 1300, 1300SDK	Metal: Dolby B NR IN: 63 dB (IHF-A network) Dolby NR OUT: 55 dB (IHF-A network)
KEH-1311, 1100, 1150	52 dB (IHF-A network)
FM tuner (KEH-1400/UC, 1311, 1100)	
Frequency range	87.9 — 107.9 MHz
Usable sensitivity	11 dBf (1.0 μV/75 Ω, mono, S/N: 30 dB)
50 dB quieting sensitivity	16 dBf (1.7 μV/75 Ω, mono)
Signal-to-noise ratio	70 dB (IHF-A network)
Distortion	0.3 % (at 65 dBf, 1 kHz, stereo)
Frequency response	30 — 15,000 Hz (±3 dB)
Stereo separation	40 dB (at 65 dBf, 1 kHz)
Selectivity	50 dB (two undesire signal level: 110 dBf)
Three-signal intermodulation (desire signal level)	50 dBf (two undesire signal level: 110 dBf)


FM tuner (KEH-1450, 1150)	
Frequency range	87.5 — 108 MHz
Usable sensitivity	11 dBf (1.0 μV/75 Ω, mono, S/N: 30 dB)
50 dB quieting sensitivity	16 dBf (1.7 μV/75 Ω, mono)
Signal-to-noise ratio	70 dB (IEC-A network)
Distortion	0.3 % (at 65 dBf, 1 kHz, stereo)
Frequency response	30 — 15,000 Hz (±3 dB)
Stereo separation	40 dB (at 65 dBf, 1 kHz)
FM tuner (KEH-1300, 1300SDK, 1400/IT)	
Frequency range	87.5 — 108 MHz
Usable sensitivity	11 dBf (1.0 μV/75 Ω, mono, S/N: 30 dB)
50 dB quieting sensitivity	16 dBf (1.7 μV/75 Ω, mono)
Signal-to-noise ratio	70 dB (IEC-A network)
Distortion	0.3 % (at 65 dBf, 1 kHz, stereo)
Frequency response	30 — 15,000 Hz (±3 dB)
Stereo separation	40 dB (at 65 dBf, 1 kHz)
MW tuner (KEH-1300, 1300SDK, 1400/IT)	
Frequency range	531 — 1,602 kHz
Usable sensitivity	18 μV (25 dB) (S/N: 20 dB)
Selectivity	50 dB (±9 kHz)
LW tuner (KEH-1300, 1300SDK, 1400/IT)	
Frequency range	153 — 281 kHz
Usable sensitivity	30 μV (30 dB) (S/N: 20 dB)
Selectivity	50 dB (±9 kHz)
AM tuner (KEH-1450, 1150)	
Frequency range	531 — 1,602 kHz (9 kHz)
Usable sensitivity	530 — 1,710 kHz (10 kHz)
Selectivity	18 μV (25 dB) (S/N: 20 dB)
AM tuner (KEH-1400/UC, 1311, 1100)	
Frequency range	530 — 1,710 kHz
Usable sensitivity	18 μV (25 dB) (S/N: 20 dB)
Selectivity	50 dB (±10 kHz)

Note:
Specifications and design are subject to possible modification without notice due to improvements.

3. OPERATIONS AND CONNECTION


Adjusting Volume and Tone

Mode Selection

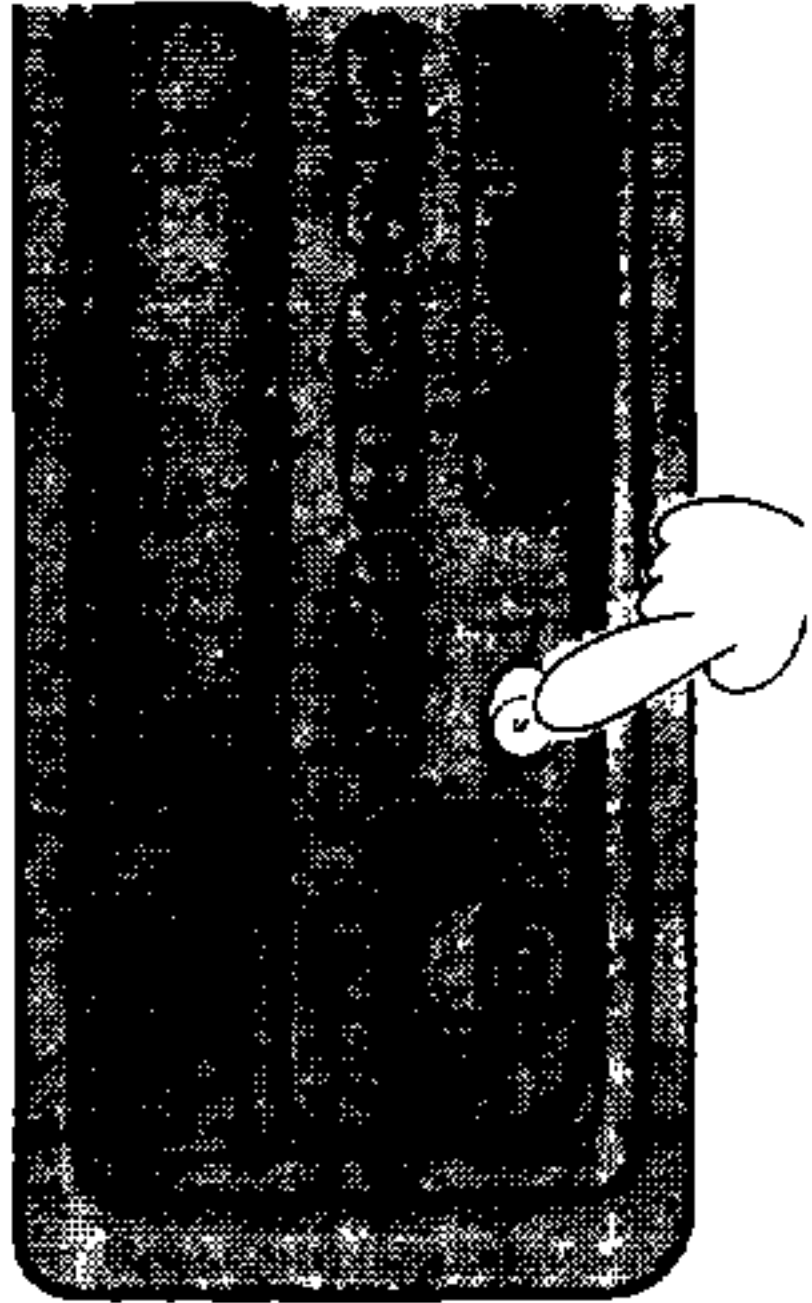

Each press of the [S] button changes the mode as follows:
Fader adjustment (F:) → Tone adjustment (T:) → Volume adjustment (V:)
• Fader, Balance, Treble and Bass settings stop temporarily at the center position.
• If no operations are performed within 8 seconds, adjustment modes are cancelled. Make adjustments within 8 seconds.

Fader/Balance

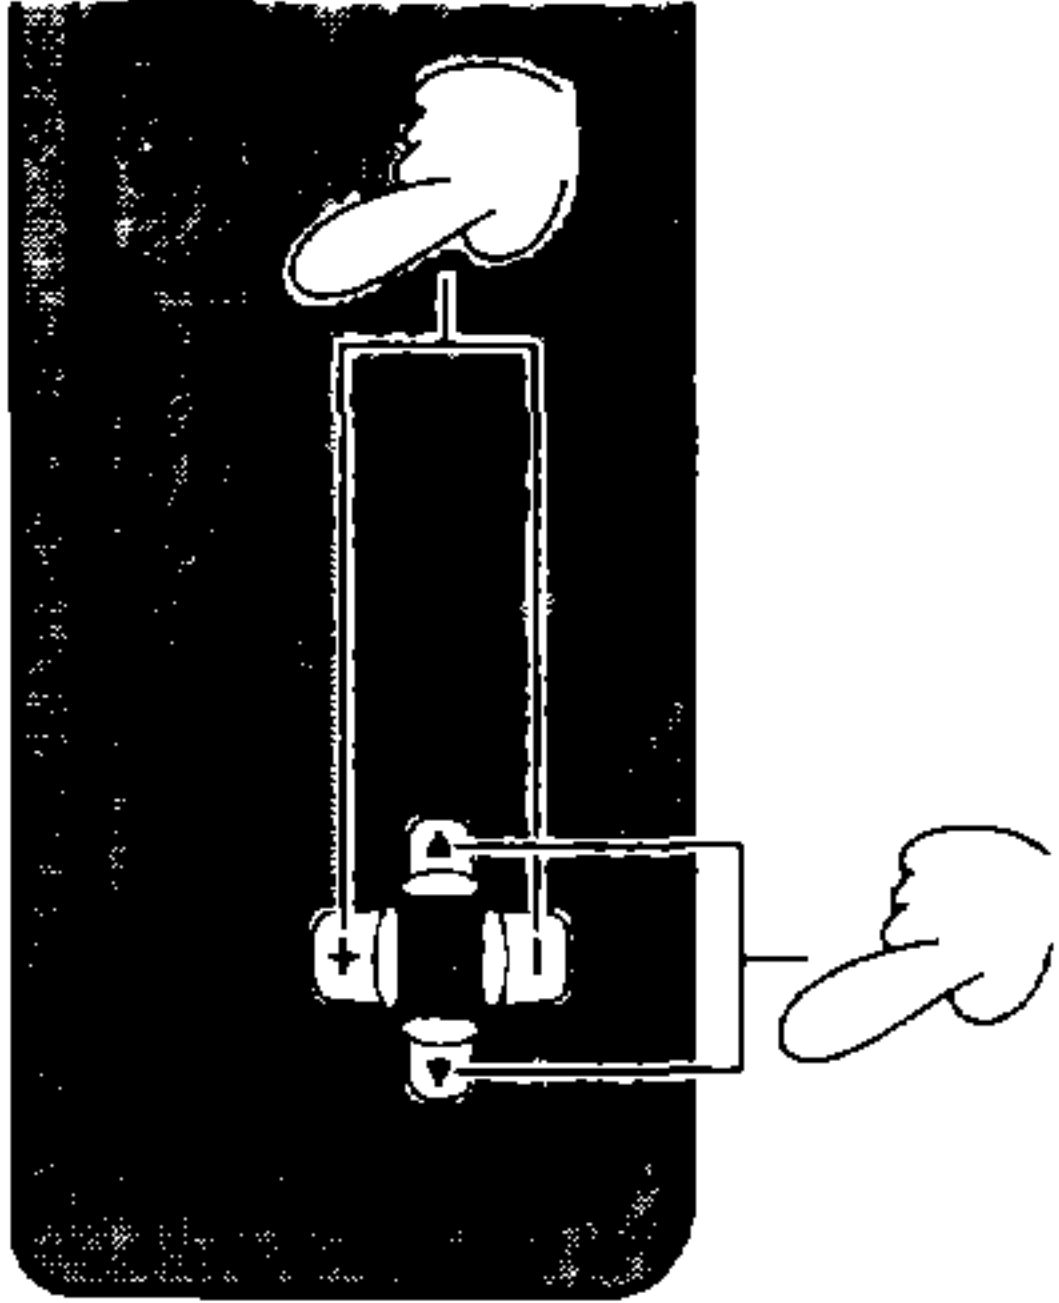


Press the [◀] or [▶] button when in the Fader mode, and the Balance mode "B:" is indicated in the display. Press the [+] or [-] button when in the Balance mode, and the display changes to "F:", indicating that you have switched to the Fader mode.

Fader




[+]: Shifts the sound toward the front speakers.
[-]: Shifts the sound toward the rear speakers.
(Display shows "F:F9" ~ "F:R9".)
• Please set to "F:0" when using a 2 speaker system.

Balance

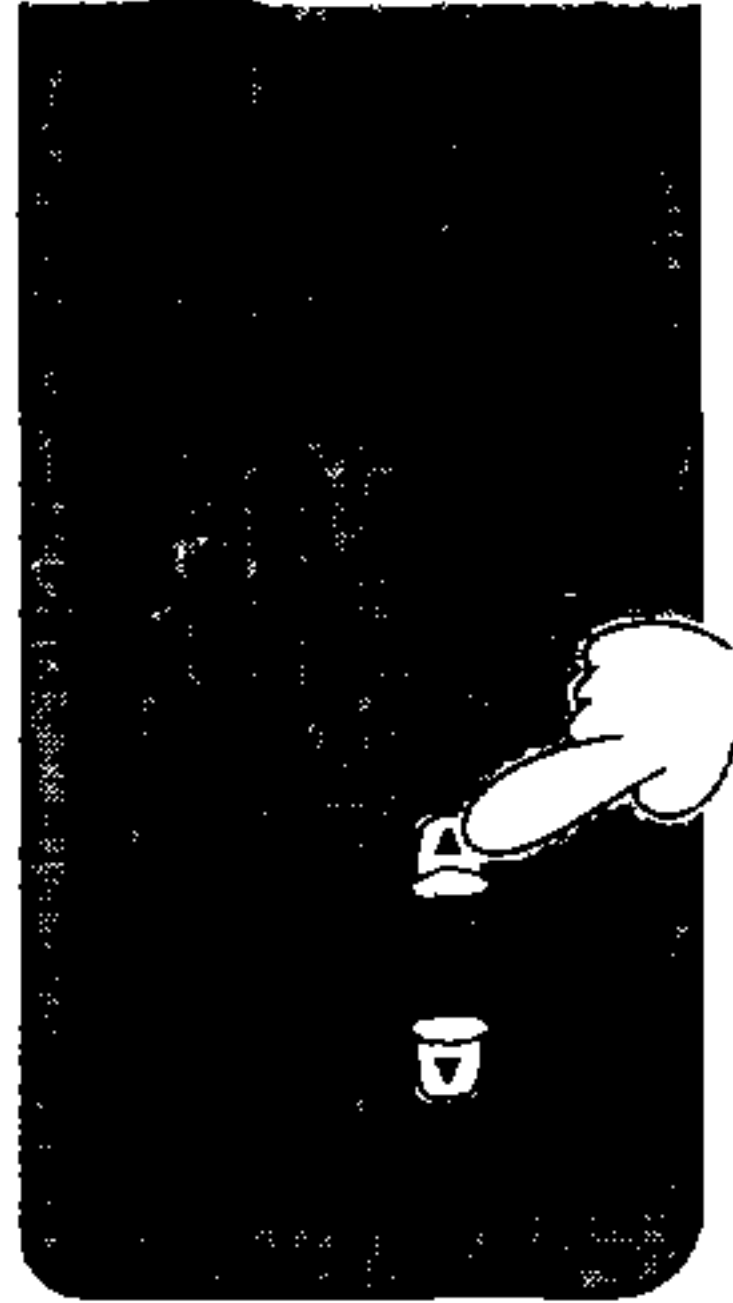

[▶]: Shifts the sound toward the right speakers.
[◀]: Shifts the sound toward the left speakers.
(Display shows "B:L9" ~ "B:R9".)


Connection Diagram

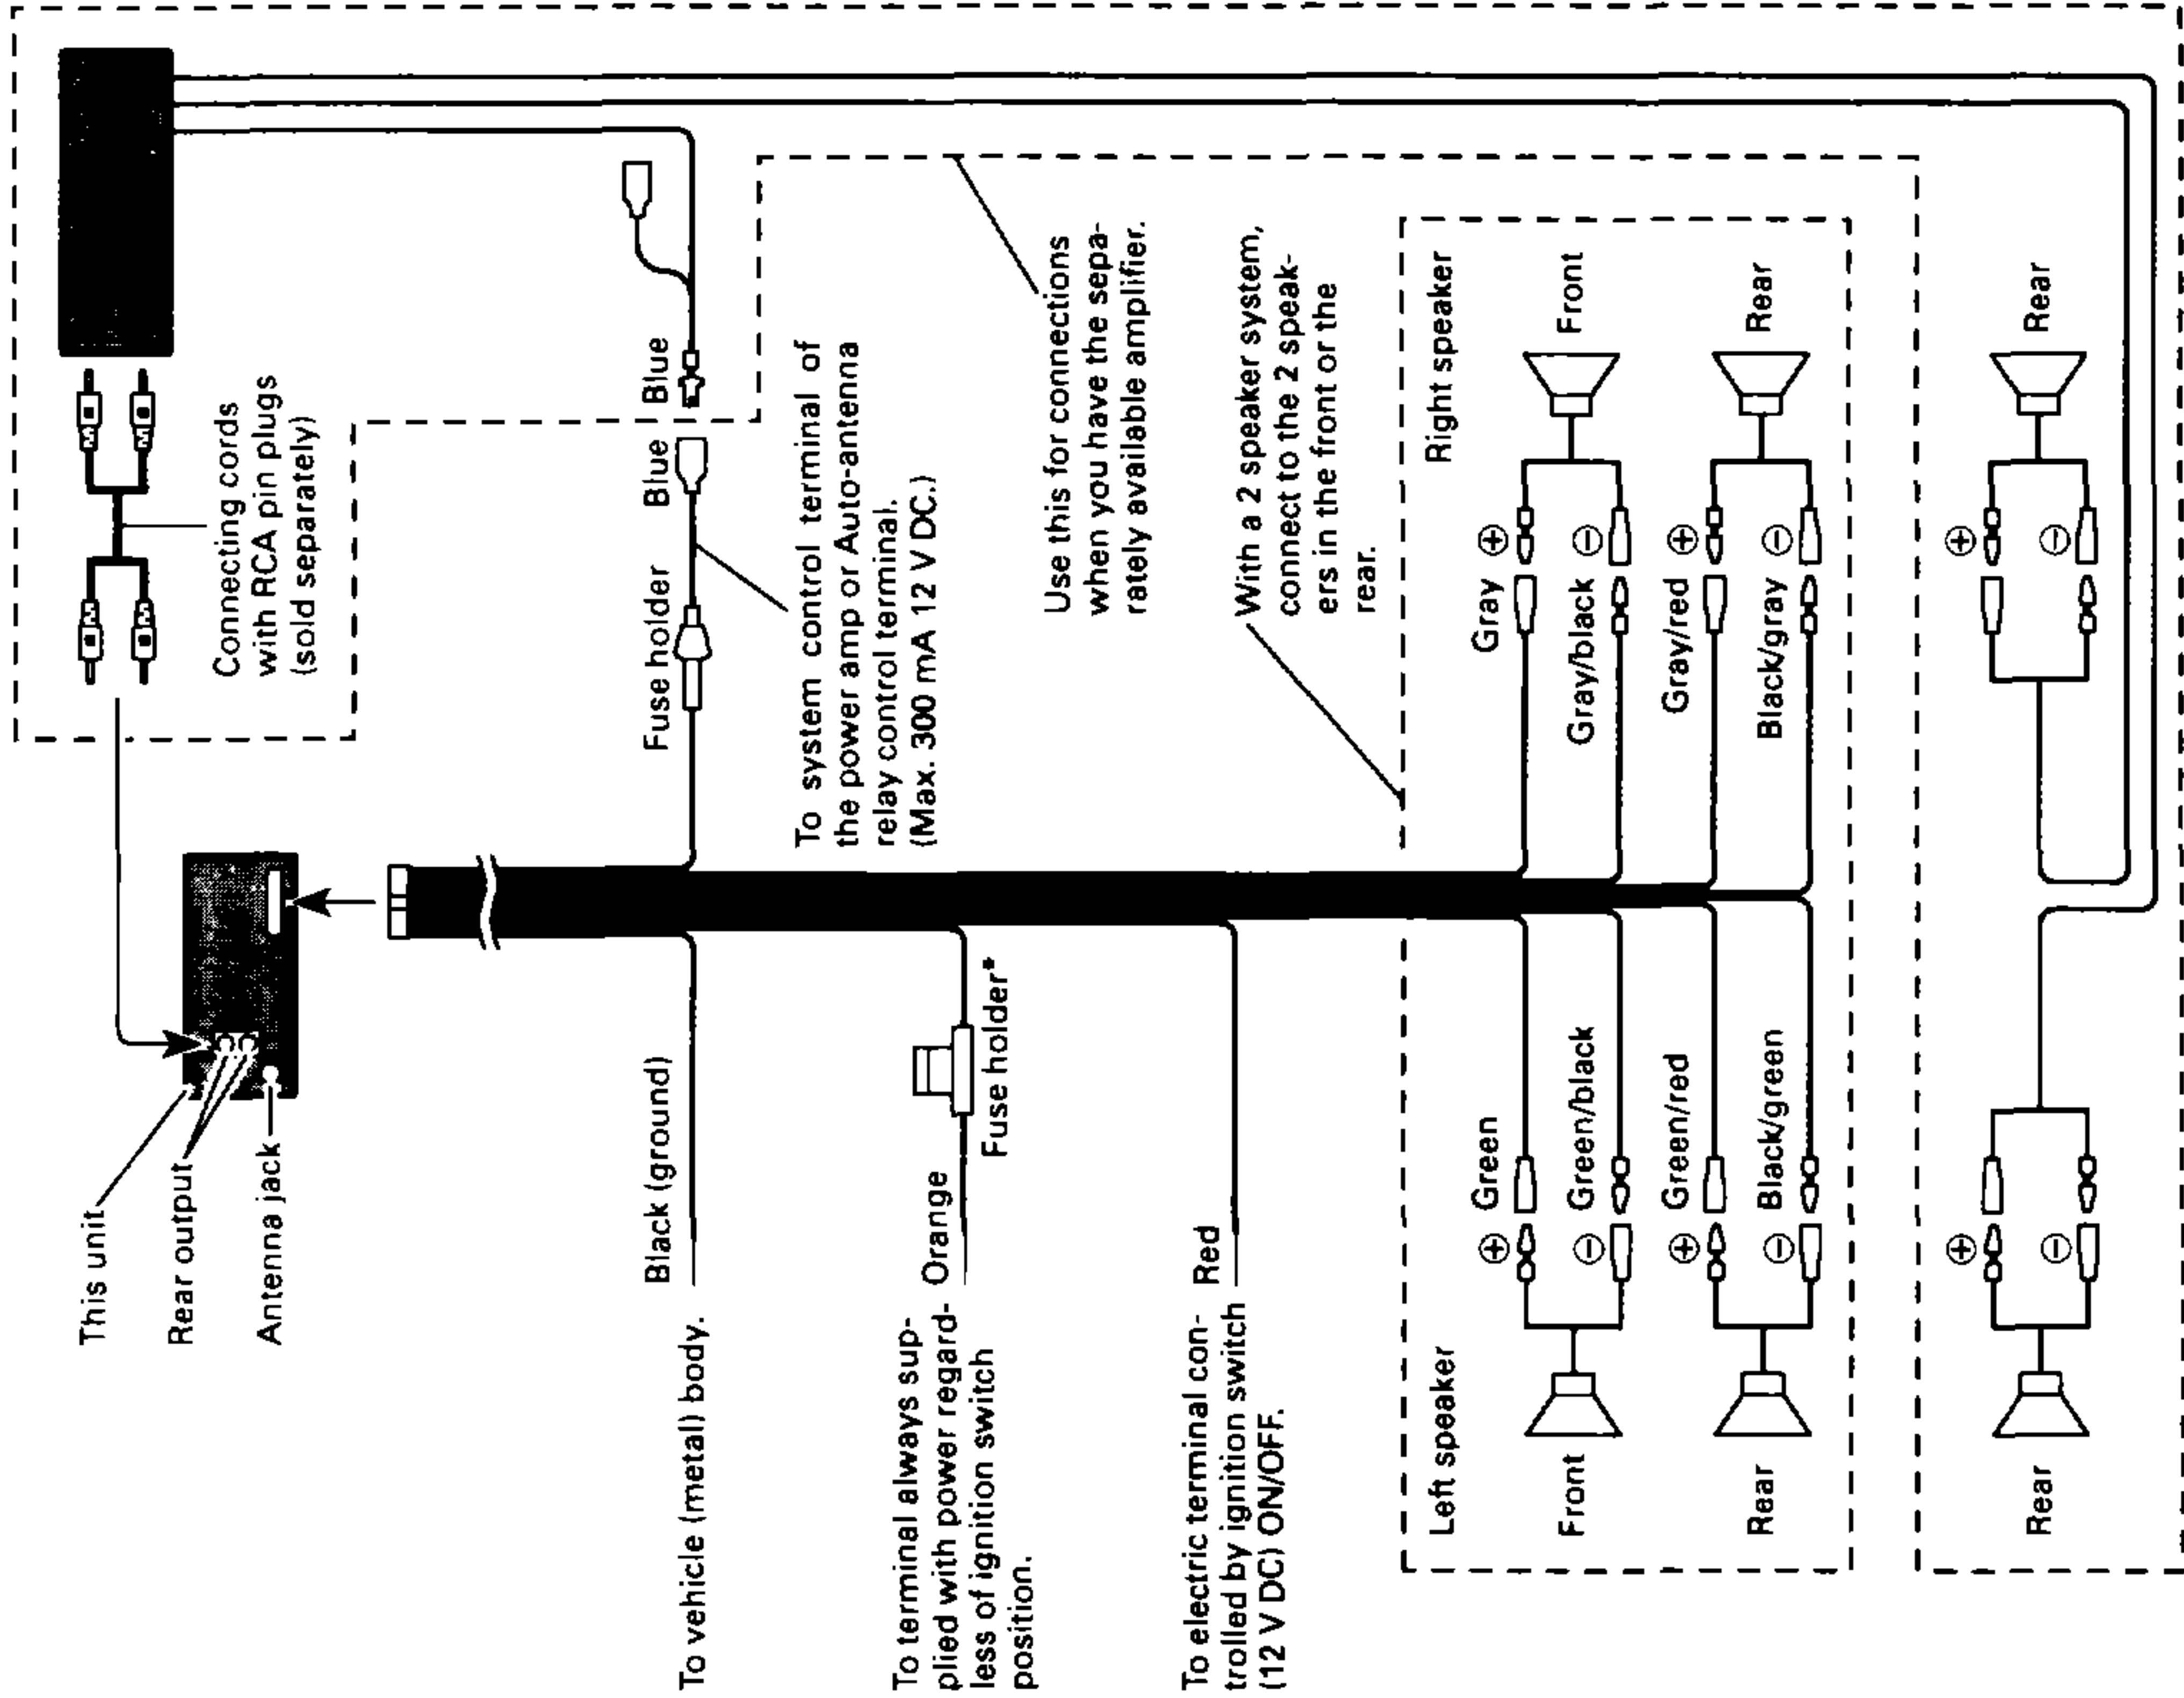

* The orange lead fuse holder for the KEH-1100 has a different shape.

Using the Tape Deck


To Change Sides

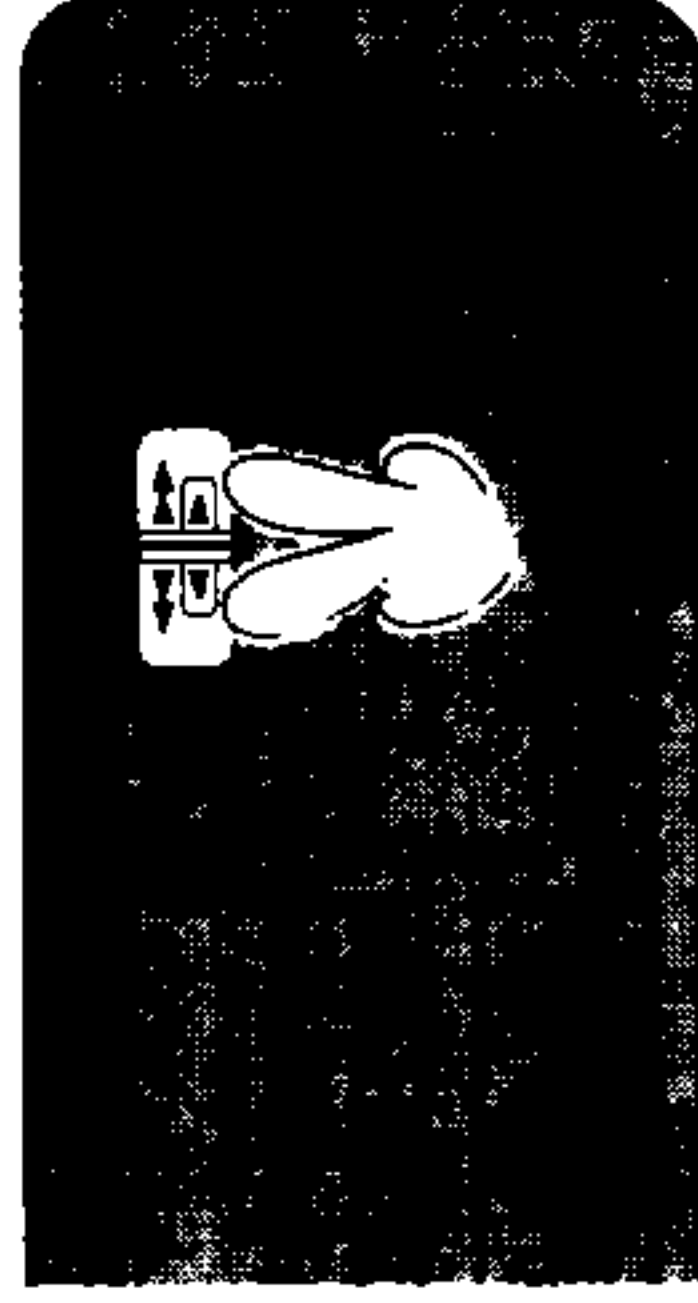


Press the [◀◀] and [▶▶] buttons at the same time.

Fast Forward/Rewind


Fast forward

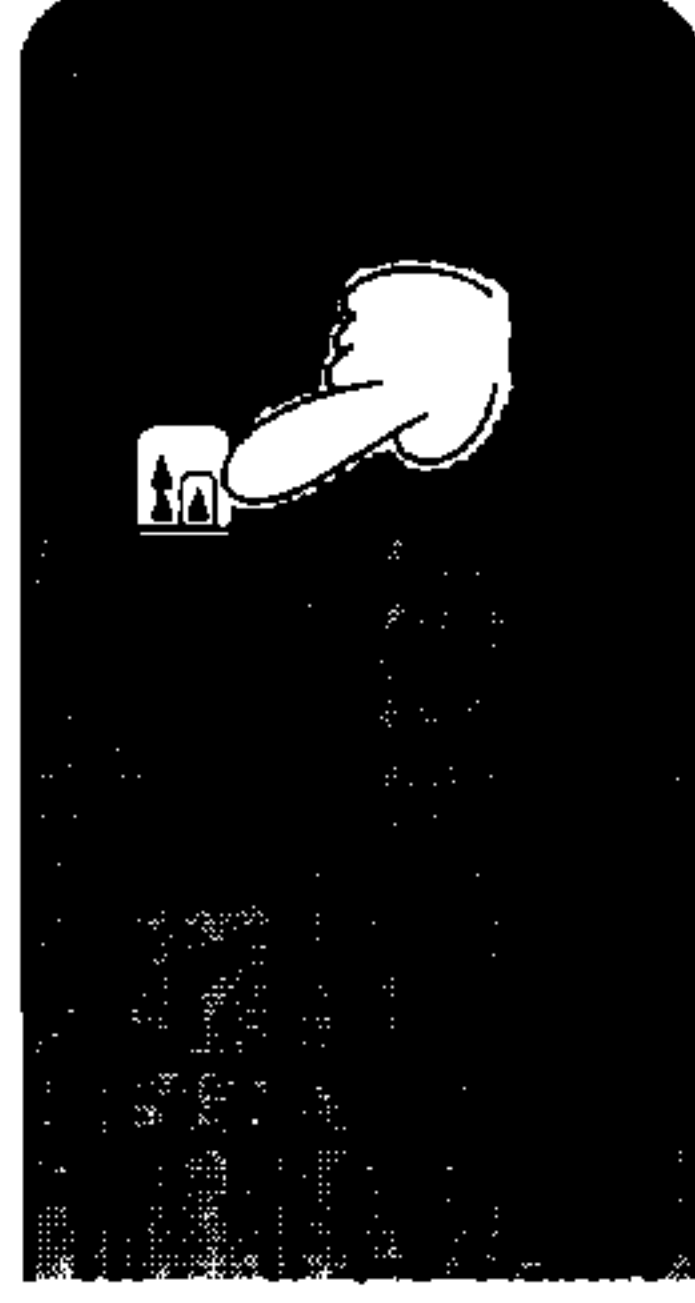

Press the button for the same direction as the tape play indicator.

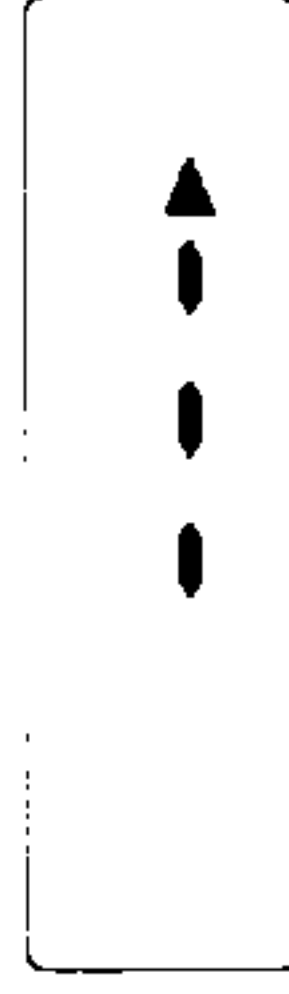

Rewind

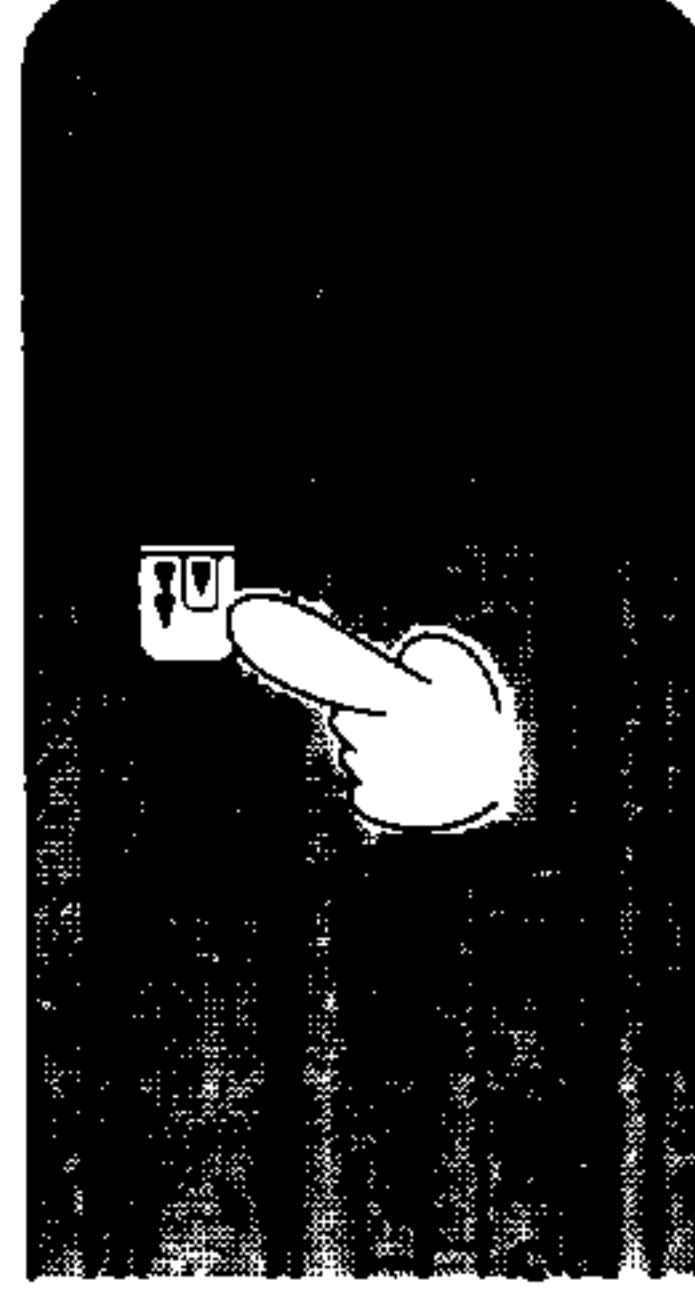

Press the button for the opposite direction as the tape play indicator.




- To release fast forward/rewind, lightly press the [◀◀] or [▶▶] button located on the opposite side of the one you pressed to fast forward or rewind.
- "◀◀ — — — ▶▶" flashes when the tape is fast forwarding or rewinding.

Bass/Treble




Press the [◀] button when in the Treble mode, and the Bass mode "B:" is indicated in the display. Press the [▶] button when in the Bass mode, and the display changes to "T:" indicating that you have switched to the Treble mode.

Adjusting Bass/Treble

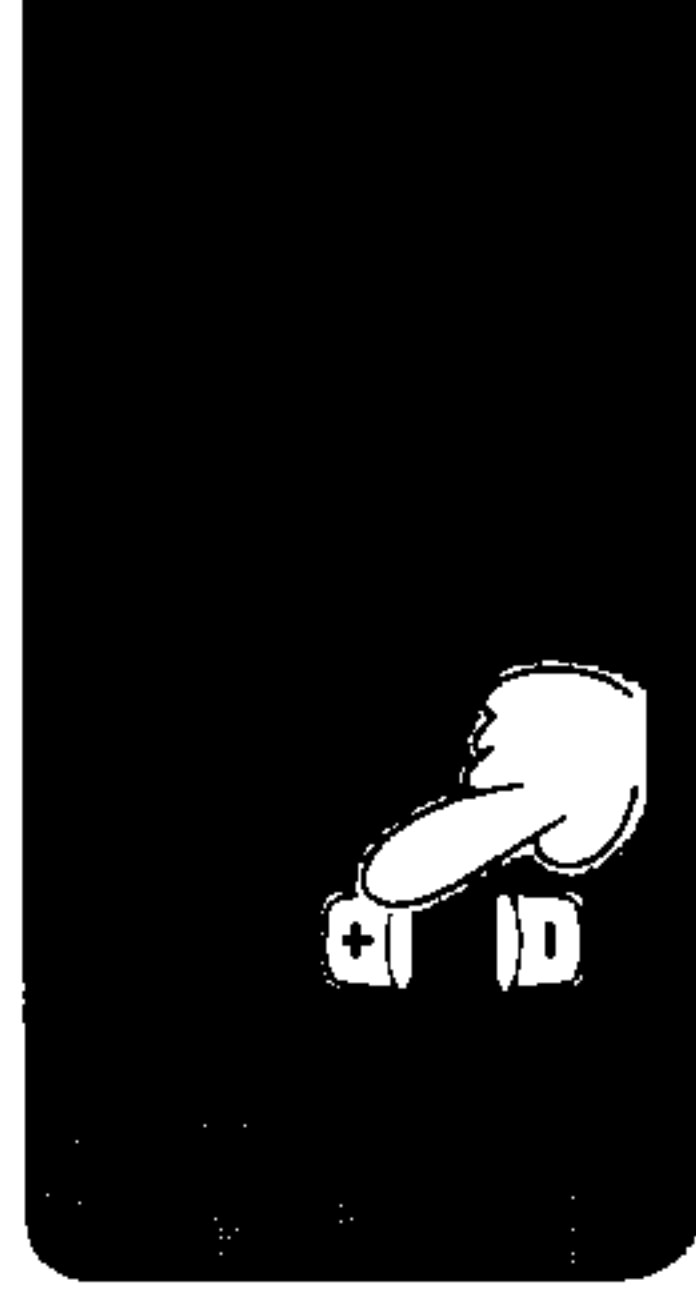

[+]: Boosts
[-]: Attenuates
(When in the Treble mode, the display shows "T:-6" ~ "T: 6". When in the Bass mode, it shows "B:-6" ~ "B: 6".)


Volume

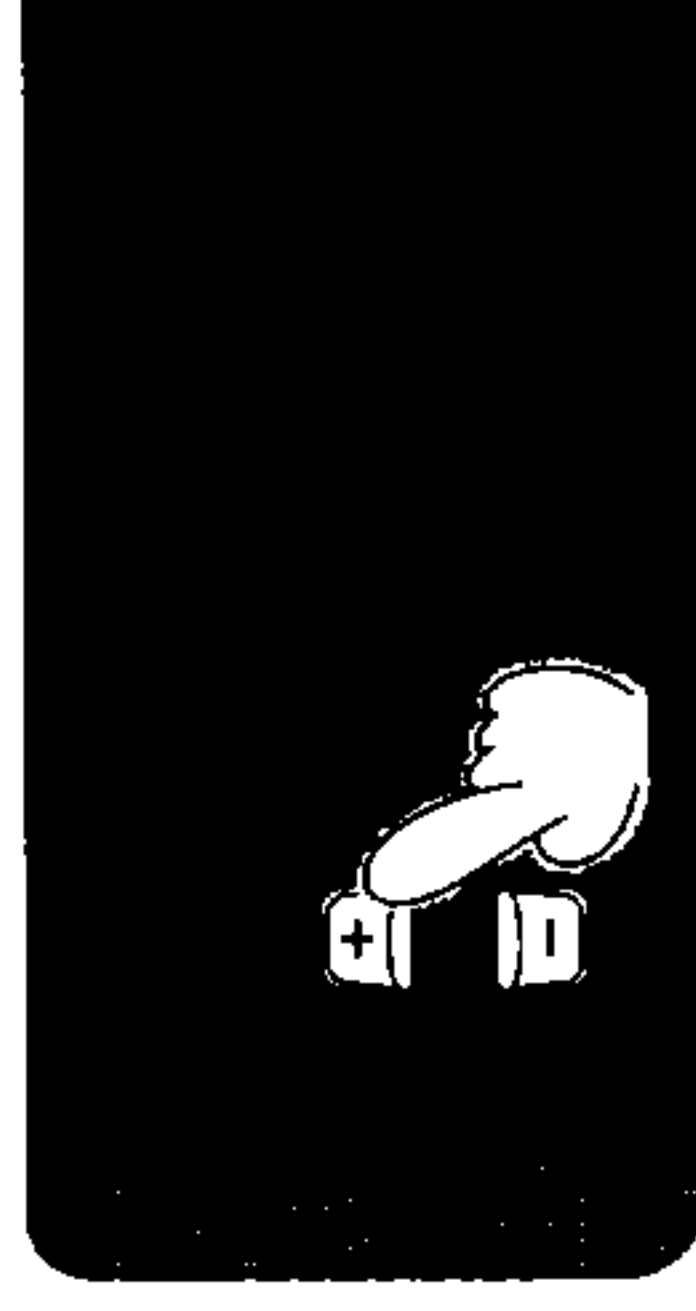

Pressing the [V+] button increases the volume, while the [-] button decreases it.
(Display shows "V: 0" ~ "V: 31".)
• When driving your vehicle, be sure to keep the volume of the unit set low enough to allow you to hear sounds coming from outside.

Loudness

This function enhances both the high and low ranges of sound to give even more power to output at low volume.


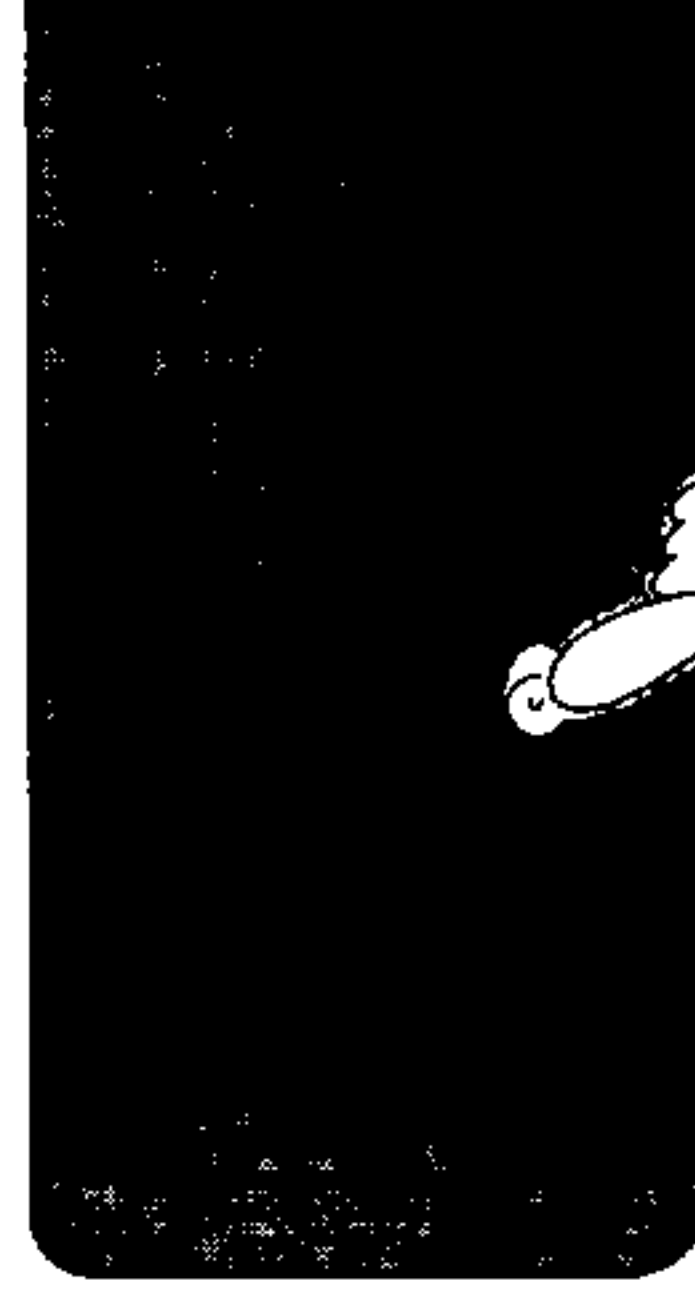


Press the [S] button for 2 seconds to turn Loudness ON/OFF.
"LOUD" appears in the display when the Loudness function is turned ON.
"LOUD" goes out when the Loudness function is turned OFF.

Using the Radio

Selecting a Band

Press the [BAND] button to select a band.

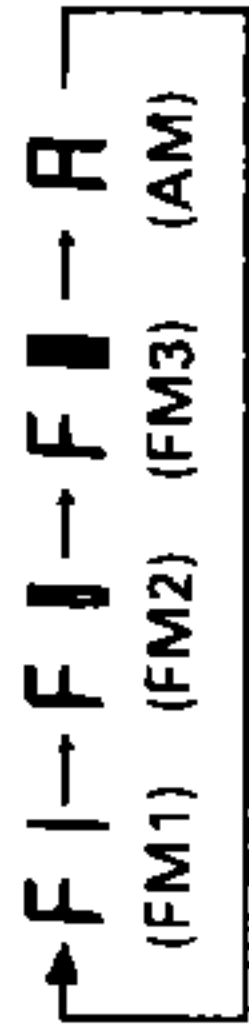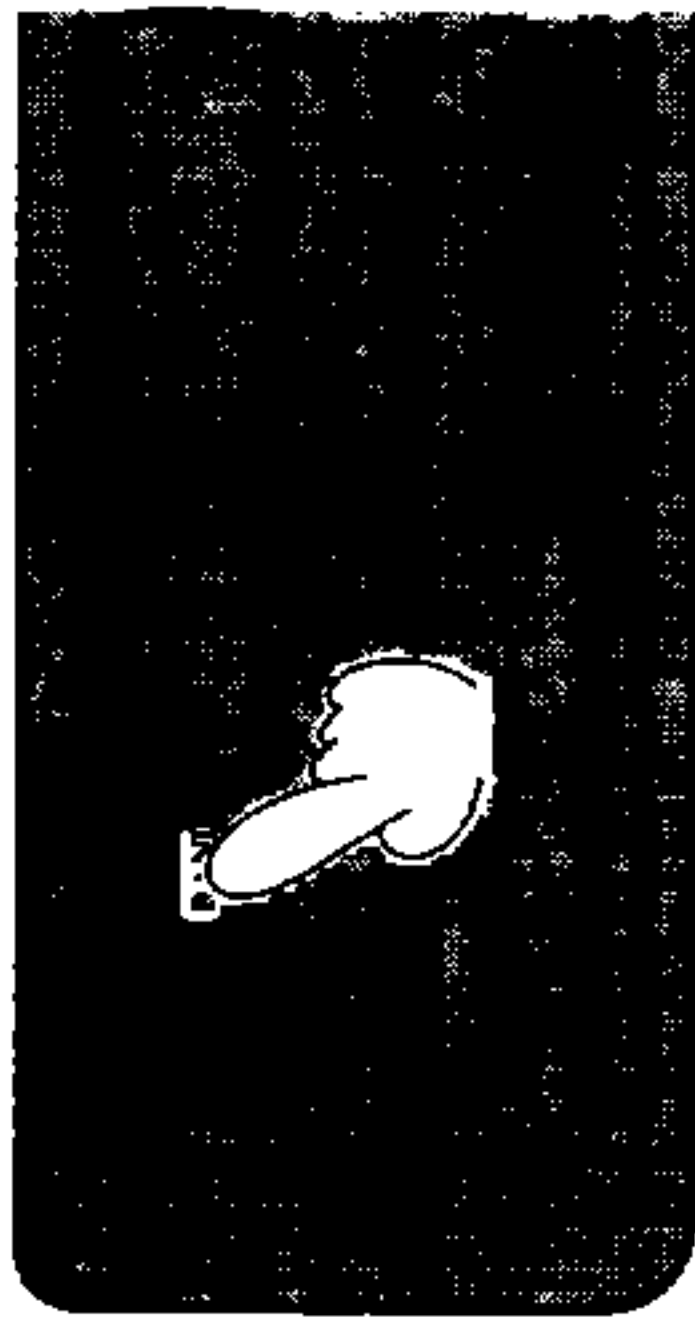

Seek Tuning



- [◀]: Automatically selects a lower frequency station.
- [▶]: Automatically selects a higher frequency station.
- (“SEEK” lights in the display.)


Manual Tuning

1.



- Press both [◀] and [▶] buttons at same time.
- (“SEEK” goes out from the display.)
 - Each time you repeat this operation, “SEEK” either lights or goes out.

2.

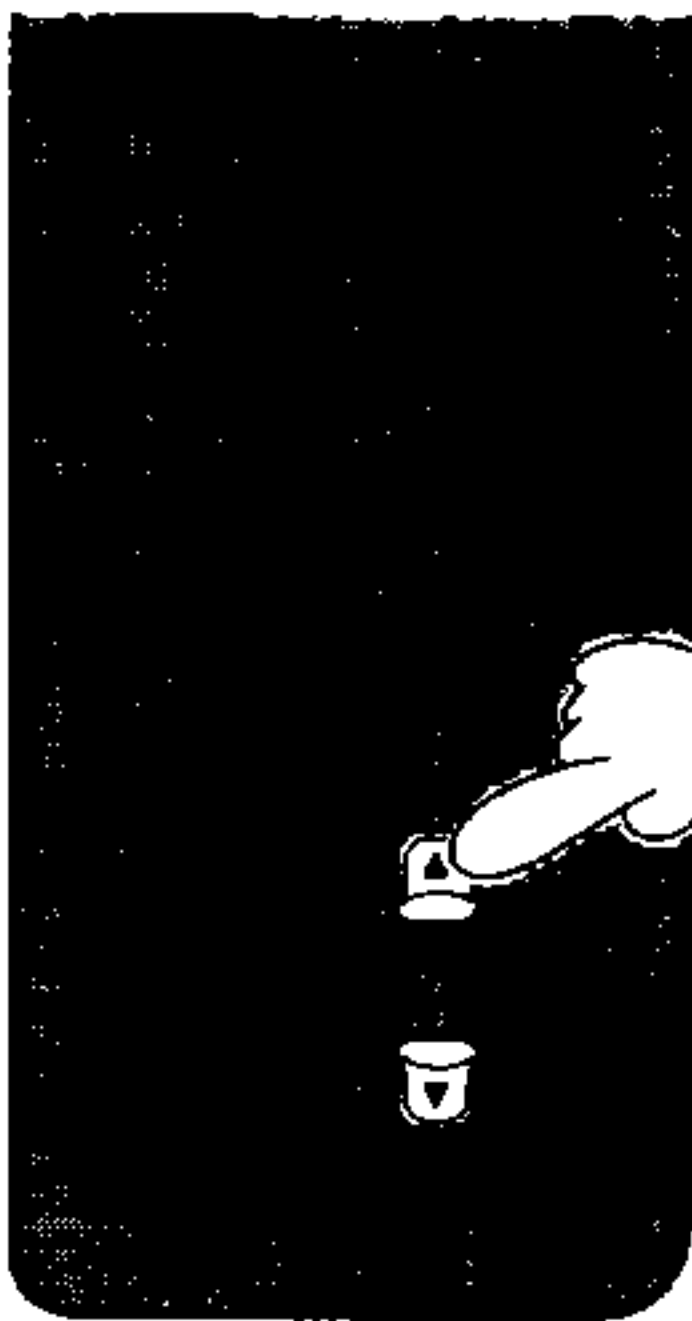

- [◀]: Use to select lower frequencies.
 - [▶]: Use to select higher frequencies.
- Continue pressing the button to move up or down continuously through frequencies.
- Tuning moves up or down in 0.2 MHz steps for FM, 10 kHz steps for AM.

4. DISASSEMBLY

● Removing the Case (not shown)

1. Insert and turn a flat screwdriver at locations indicated by arrows to remove the case.

● Removing the Cassette Mechanism Unit (not shown)

1. Remove the four screws.
2. Disconnect the connector.
3. Remove the cassette mechanism unit.

● Removing the Detach Grille Assy (Fig. 1)

1. Disconnect the three stoppers indicated by arrows.
2. Remove the detach grille assy.

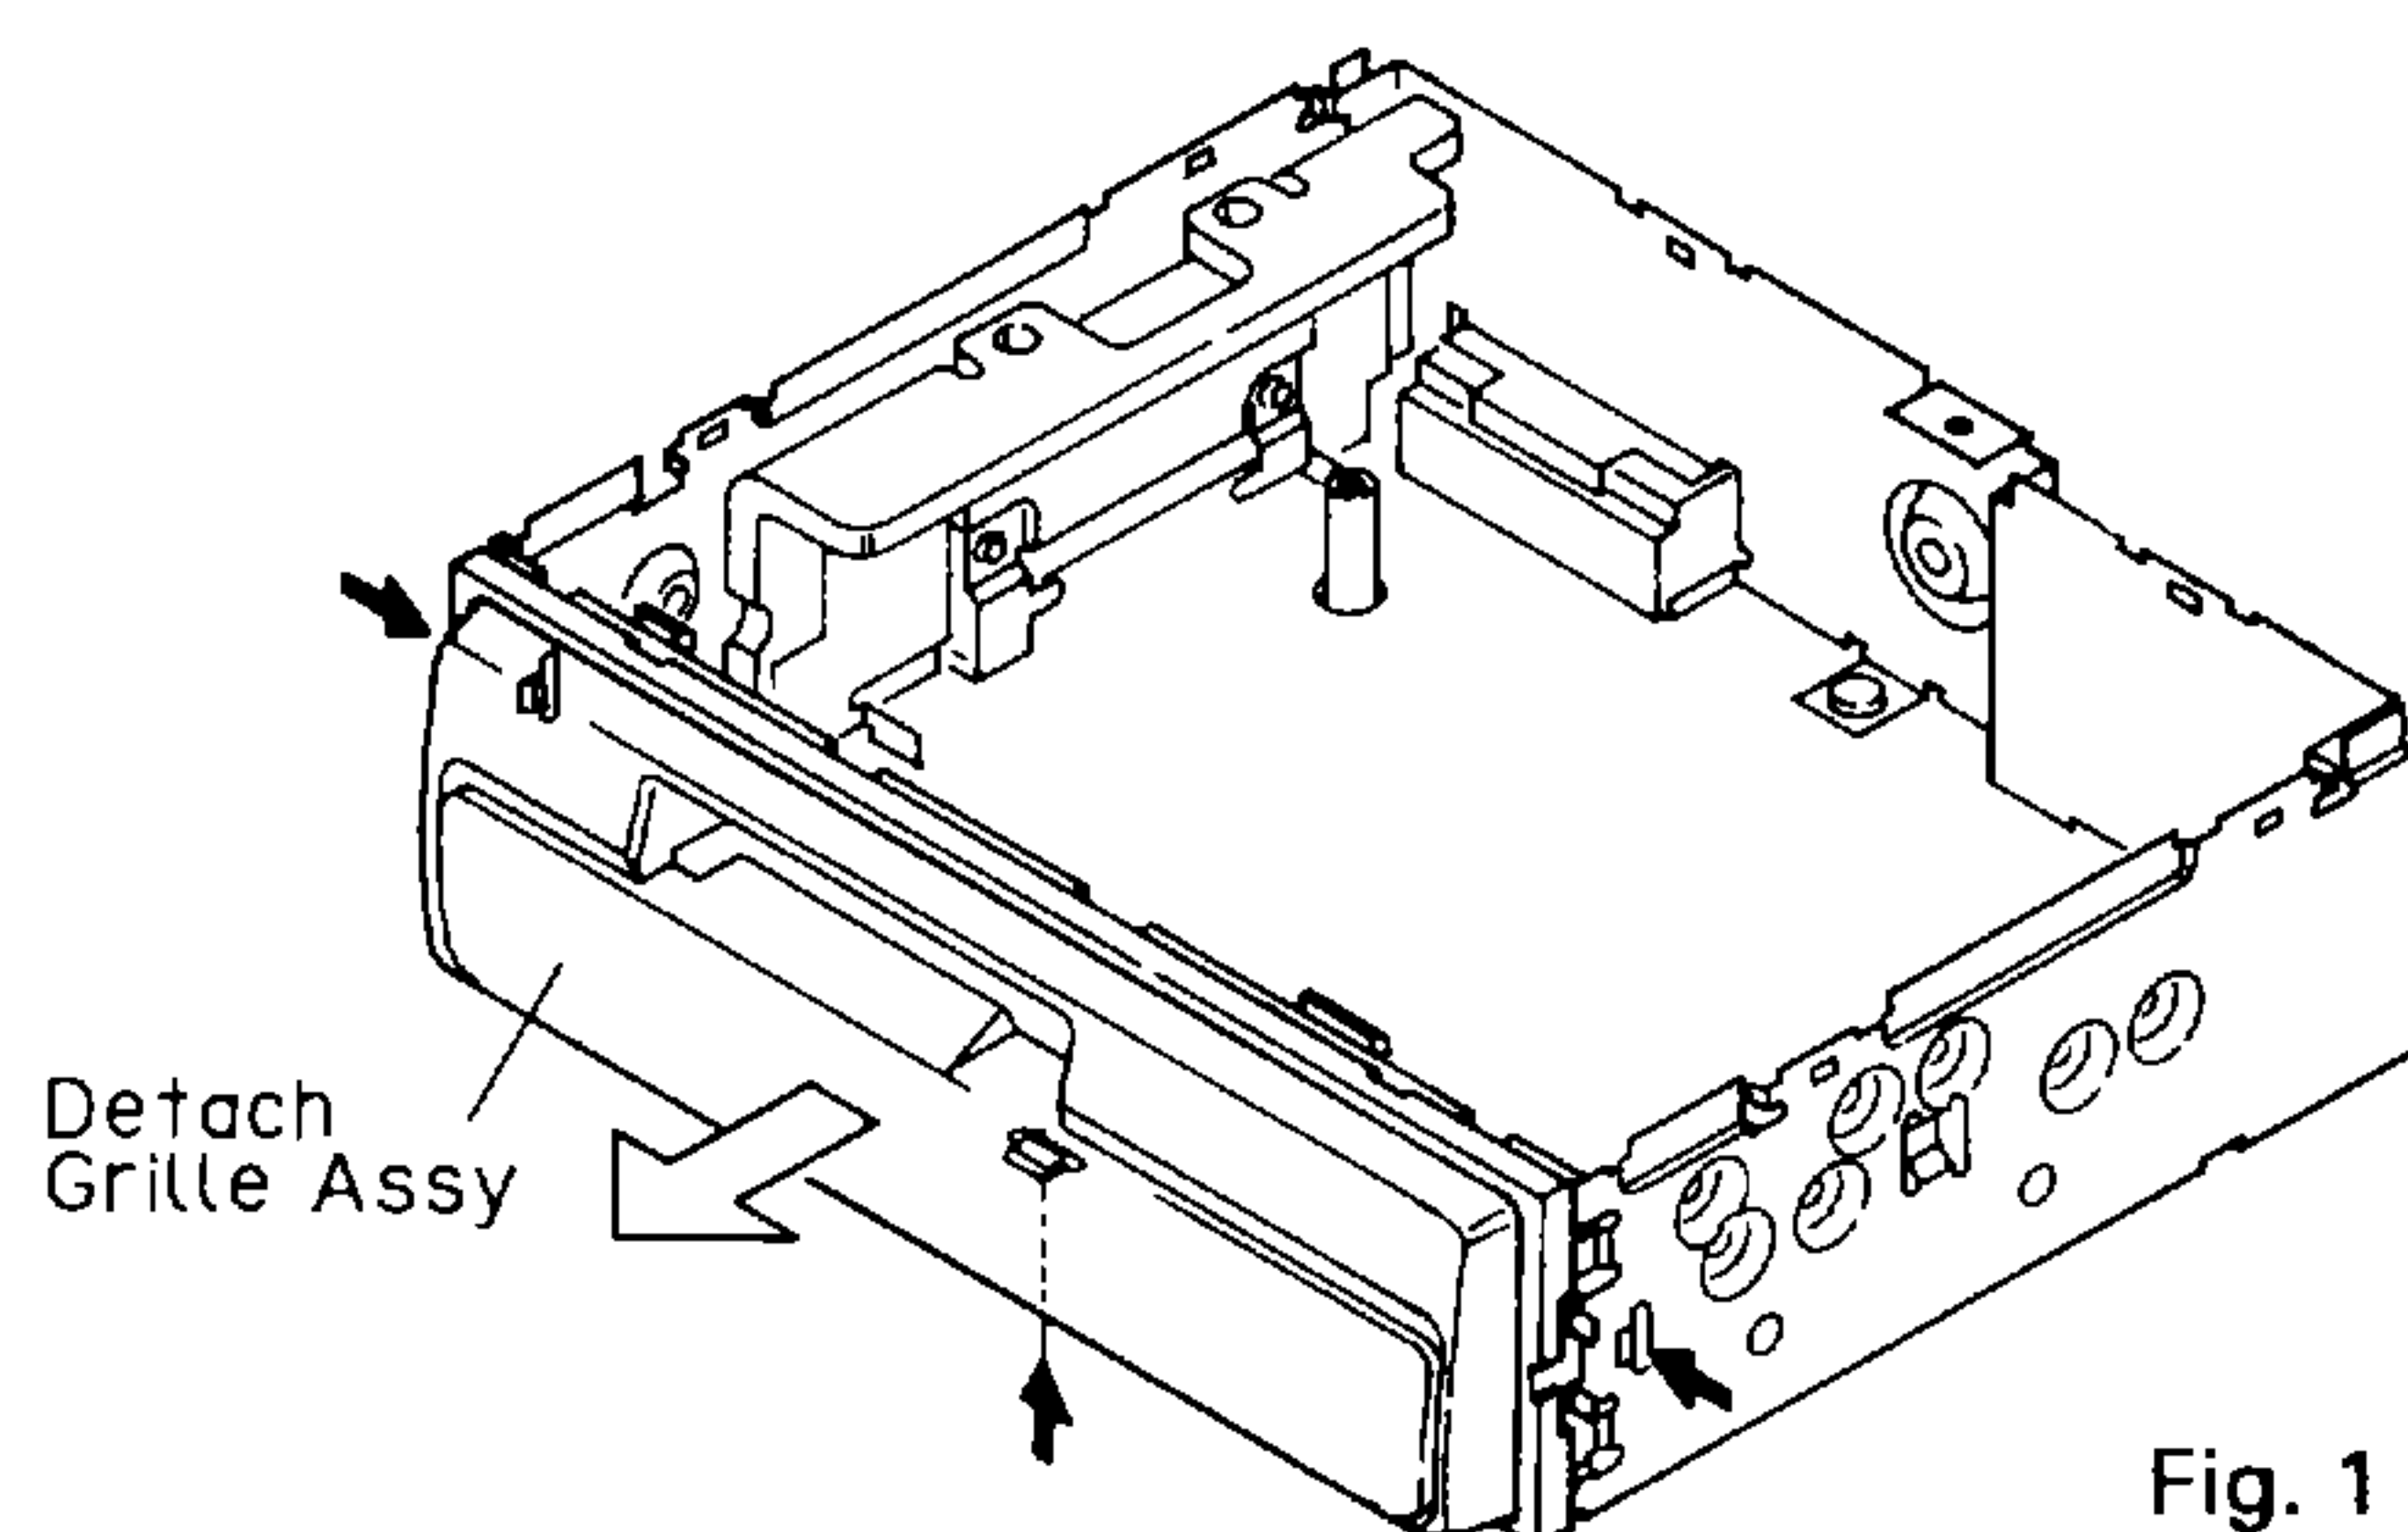


Fig. 1

● Removing the Chassis Unit (Fig. 2)

1. Remove the two screws A, two screws B and one screw C.
2. Unbend the tabs at three locations indicated by arrows.
3. Remove the chassis unit.

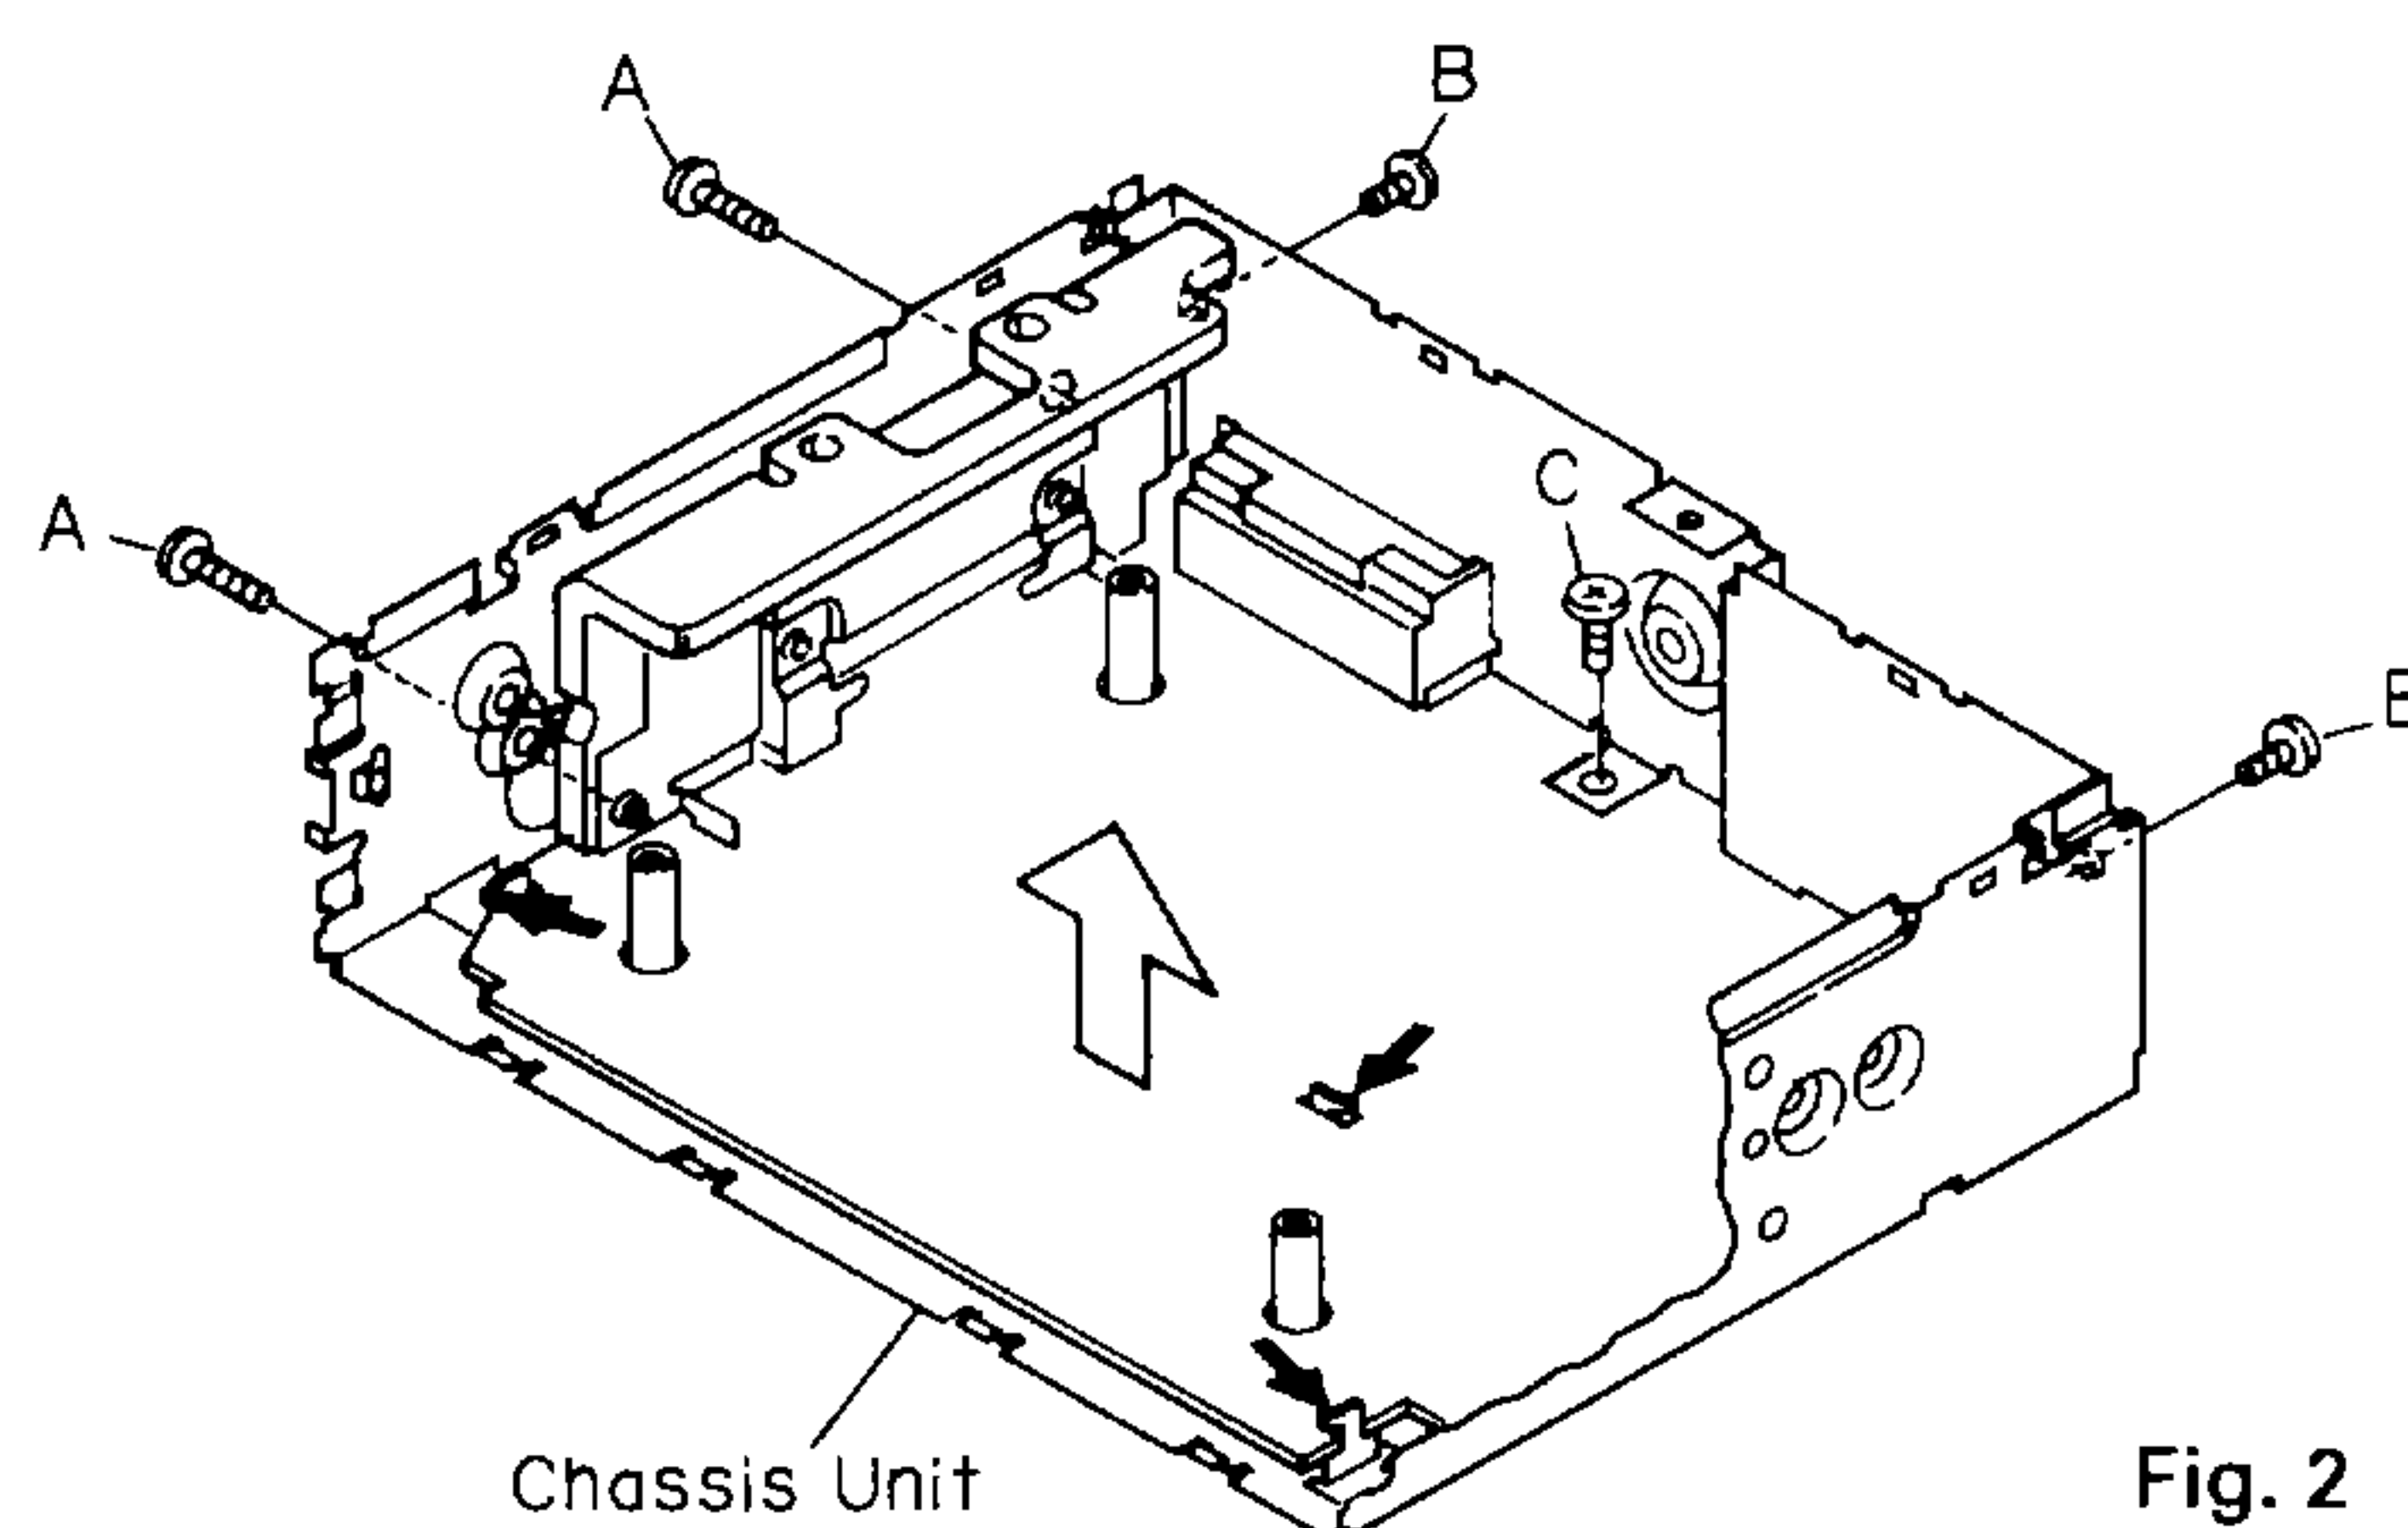


Fig. 2

5. ADJUSTMENT

● Connection Diagram

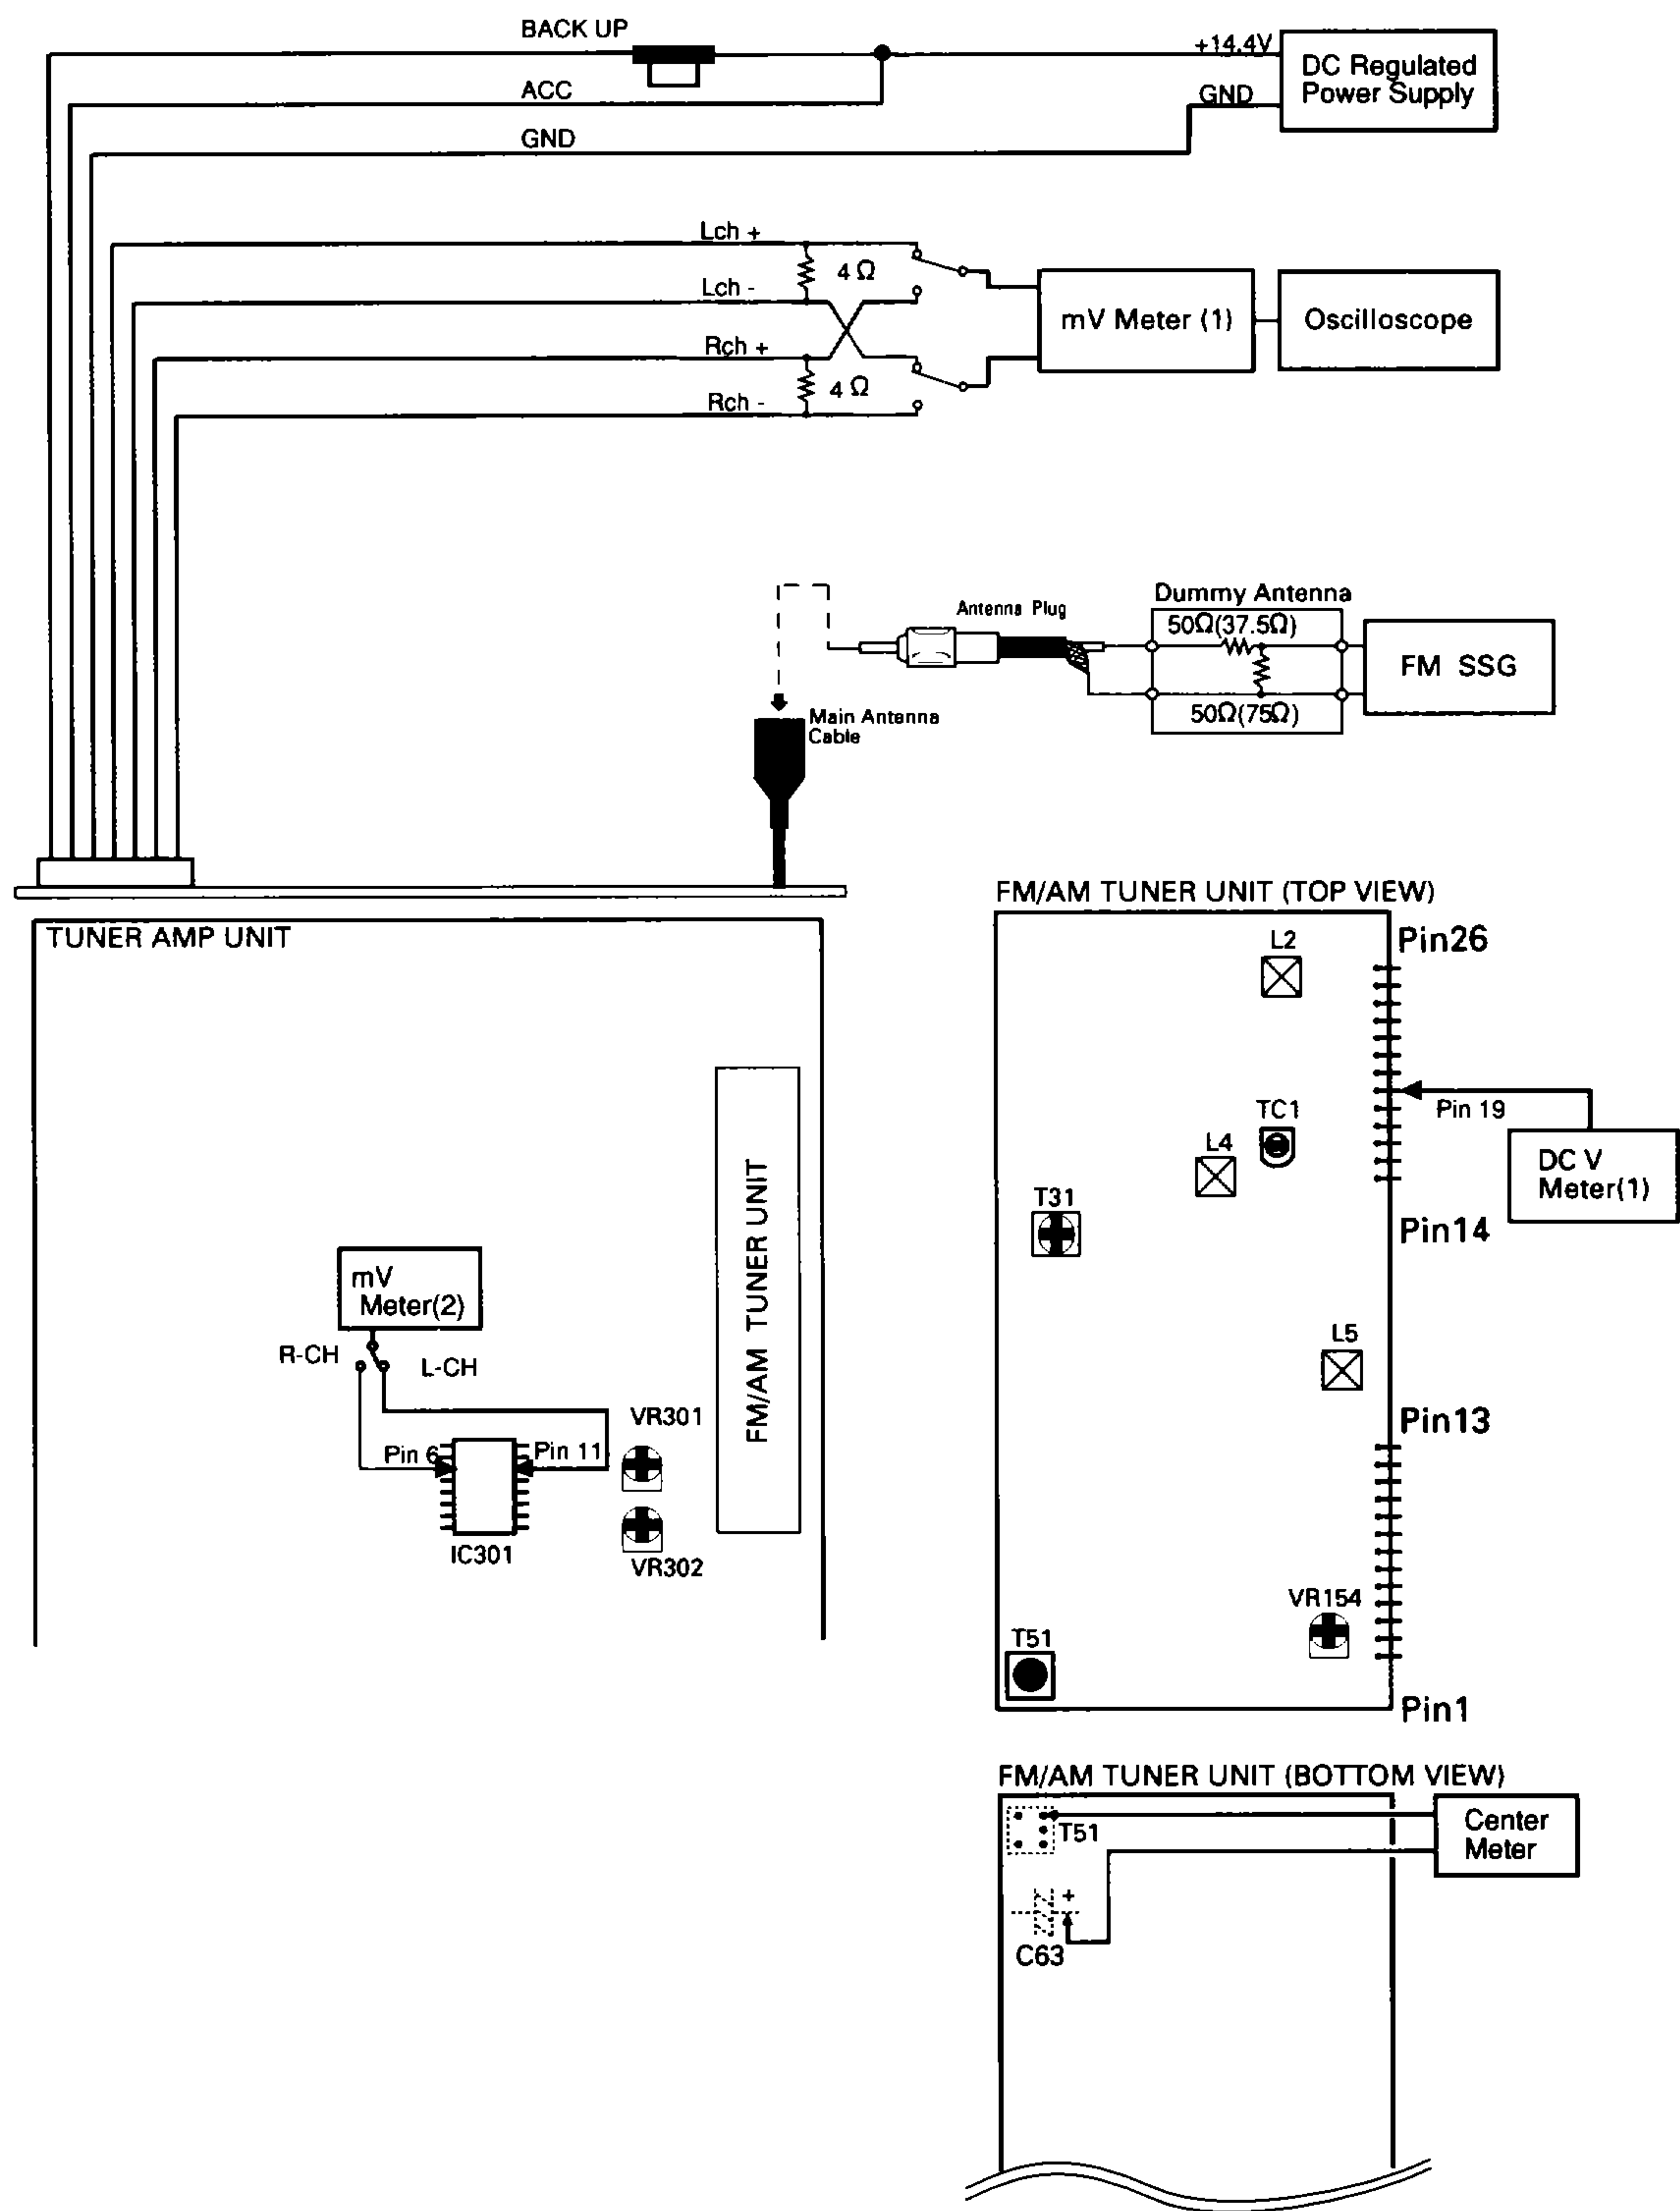


Fig. 3

- For Repair of the Key Board Unit, Use the Extension-Cord Tool GGD1056.
- For Repair of the Cassette Mechanism Unit, Use the Extension-Cord Tool GGD1100.

FM ADJUSTMENT

Modulation M:MONO MOD., 400Hz 30%(22.5kHz Dev.)
S:STEREO MOD., 1kHz, L or R=30%(20.25kHz+7.5kHz Dev.)

NOTE:Before proceeding to further adjustments after switching power ON, let the tuner run for ten minutes to allow the circuits to stabilize.

(KEH-1400/X1M/UC, 1311/X1M/UC, 1100/X1M/UC)

	No.	FM SSG		Displayed Frequency(MHz)	Adjustment Point	Adjustment Method (Switch Position)
		Frequency(MHz)	Level(dBf)			
TUN Volt	1			107.9	L5	DC V Meter(1) : 6V
IF	1	98.1 M	60	98.1	T51	Center Meter : 0
ANT Coil	1	98.1 M	5	98.1	L2	mV Meter(1) : Maximum
RF Coil	1	98.1 M	5	98.1	L4	mV Meter(1) : Maximum
IFT	1	98.1 M	5	98.1	T31	mV Meter(1) : Maximum (STEREO MODE)
ARC	1	98.1 S	39	98.1	VR154	mV Meter(1) : Separation 5dB (STEREO MODE)

(KEH-1300/X1M/EW, 1300SDK/X1M/GR, 1400/X1M/IT)

	No.	FM SSG		Displayed Frequency(MHz)	Adjustment Point	Adjustment Method (Switch Position)
		Frequency(MHz)	Level(dBf)			
TUN Volt	1			108.0	L5	DC V Meter(1) : 6V
IF	1	98.1 M	60	98.1	T51	Center Meter : 0
ANT Coil	1	98.1 M	5	98.1	L2	mV Meter(1) : Maximum
RF Coil	1	98.1 M	5	98.1	L4	mV Meter(1) : Maximum
Image	1	129.3 M	60—80	107.9	TC1	mV Meter(1) : Minimum
IFT	1	98.1 M	5	98.1	T31	mV Meter(1) : Maximum (STEREO MODE)
ARC	1	98.1 S	39	98.1	VR154	mV Meter(1) : Separation 5dB (STEREO MODE)

(KEH-1450/X1M/ES, 1150/X1M/ES)


	No.	FM SSG		Displayed Frequency(MHz)	Adjustment Point	Adjustment Method (Switch Position)
		Frequency(MHz)	Level(dBf)			
TUN Volt	1			108.0	L5	DC V Meter(1) : 6V
IF	1	98.1 M	60	98.1	T51	Center Meter : 0
ANT Coil	1	98.1 M	5	98.1	L2	mV Meter(1) : Maximum
RF Coil	1	98.1 M	5	98.1	L4	mV Meter(1) : Maximum
IFT	1	98.1 M	5	98.1	T31	mV Meter(1) : Maximum (STEREO MODE)
ARC	1	98.1 S	39	98.1	VR154	mV Meter(1) : Separation 5dB (STEREO MODE)

DOLBY NR ADJUSTMENT


(KEH-1400/X1M/UC, 1450/X1M/ES, 1300/X1M/EW, 1400/X1M/IT ,1300SDK/X1M/GR)

Test Tape	Adjustment Point	Adjustment Method (Switch Position)
NCT-150 (400Hz,200nwb/m)	VR301(Lch),VR302(Rch)	mV Meter(2) : -8.2dBs ± 1dB (DOLBY NR Switch : OFF)


PA4023A

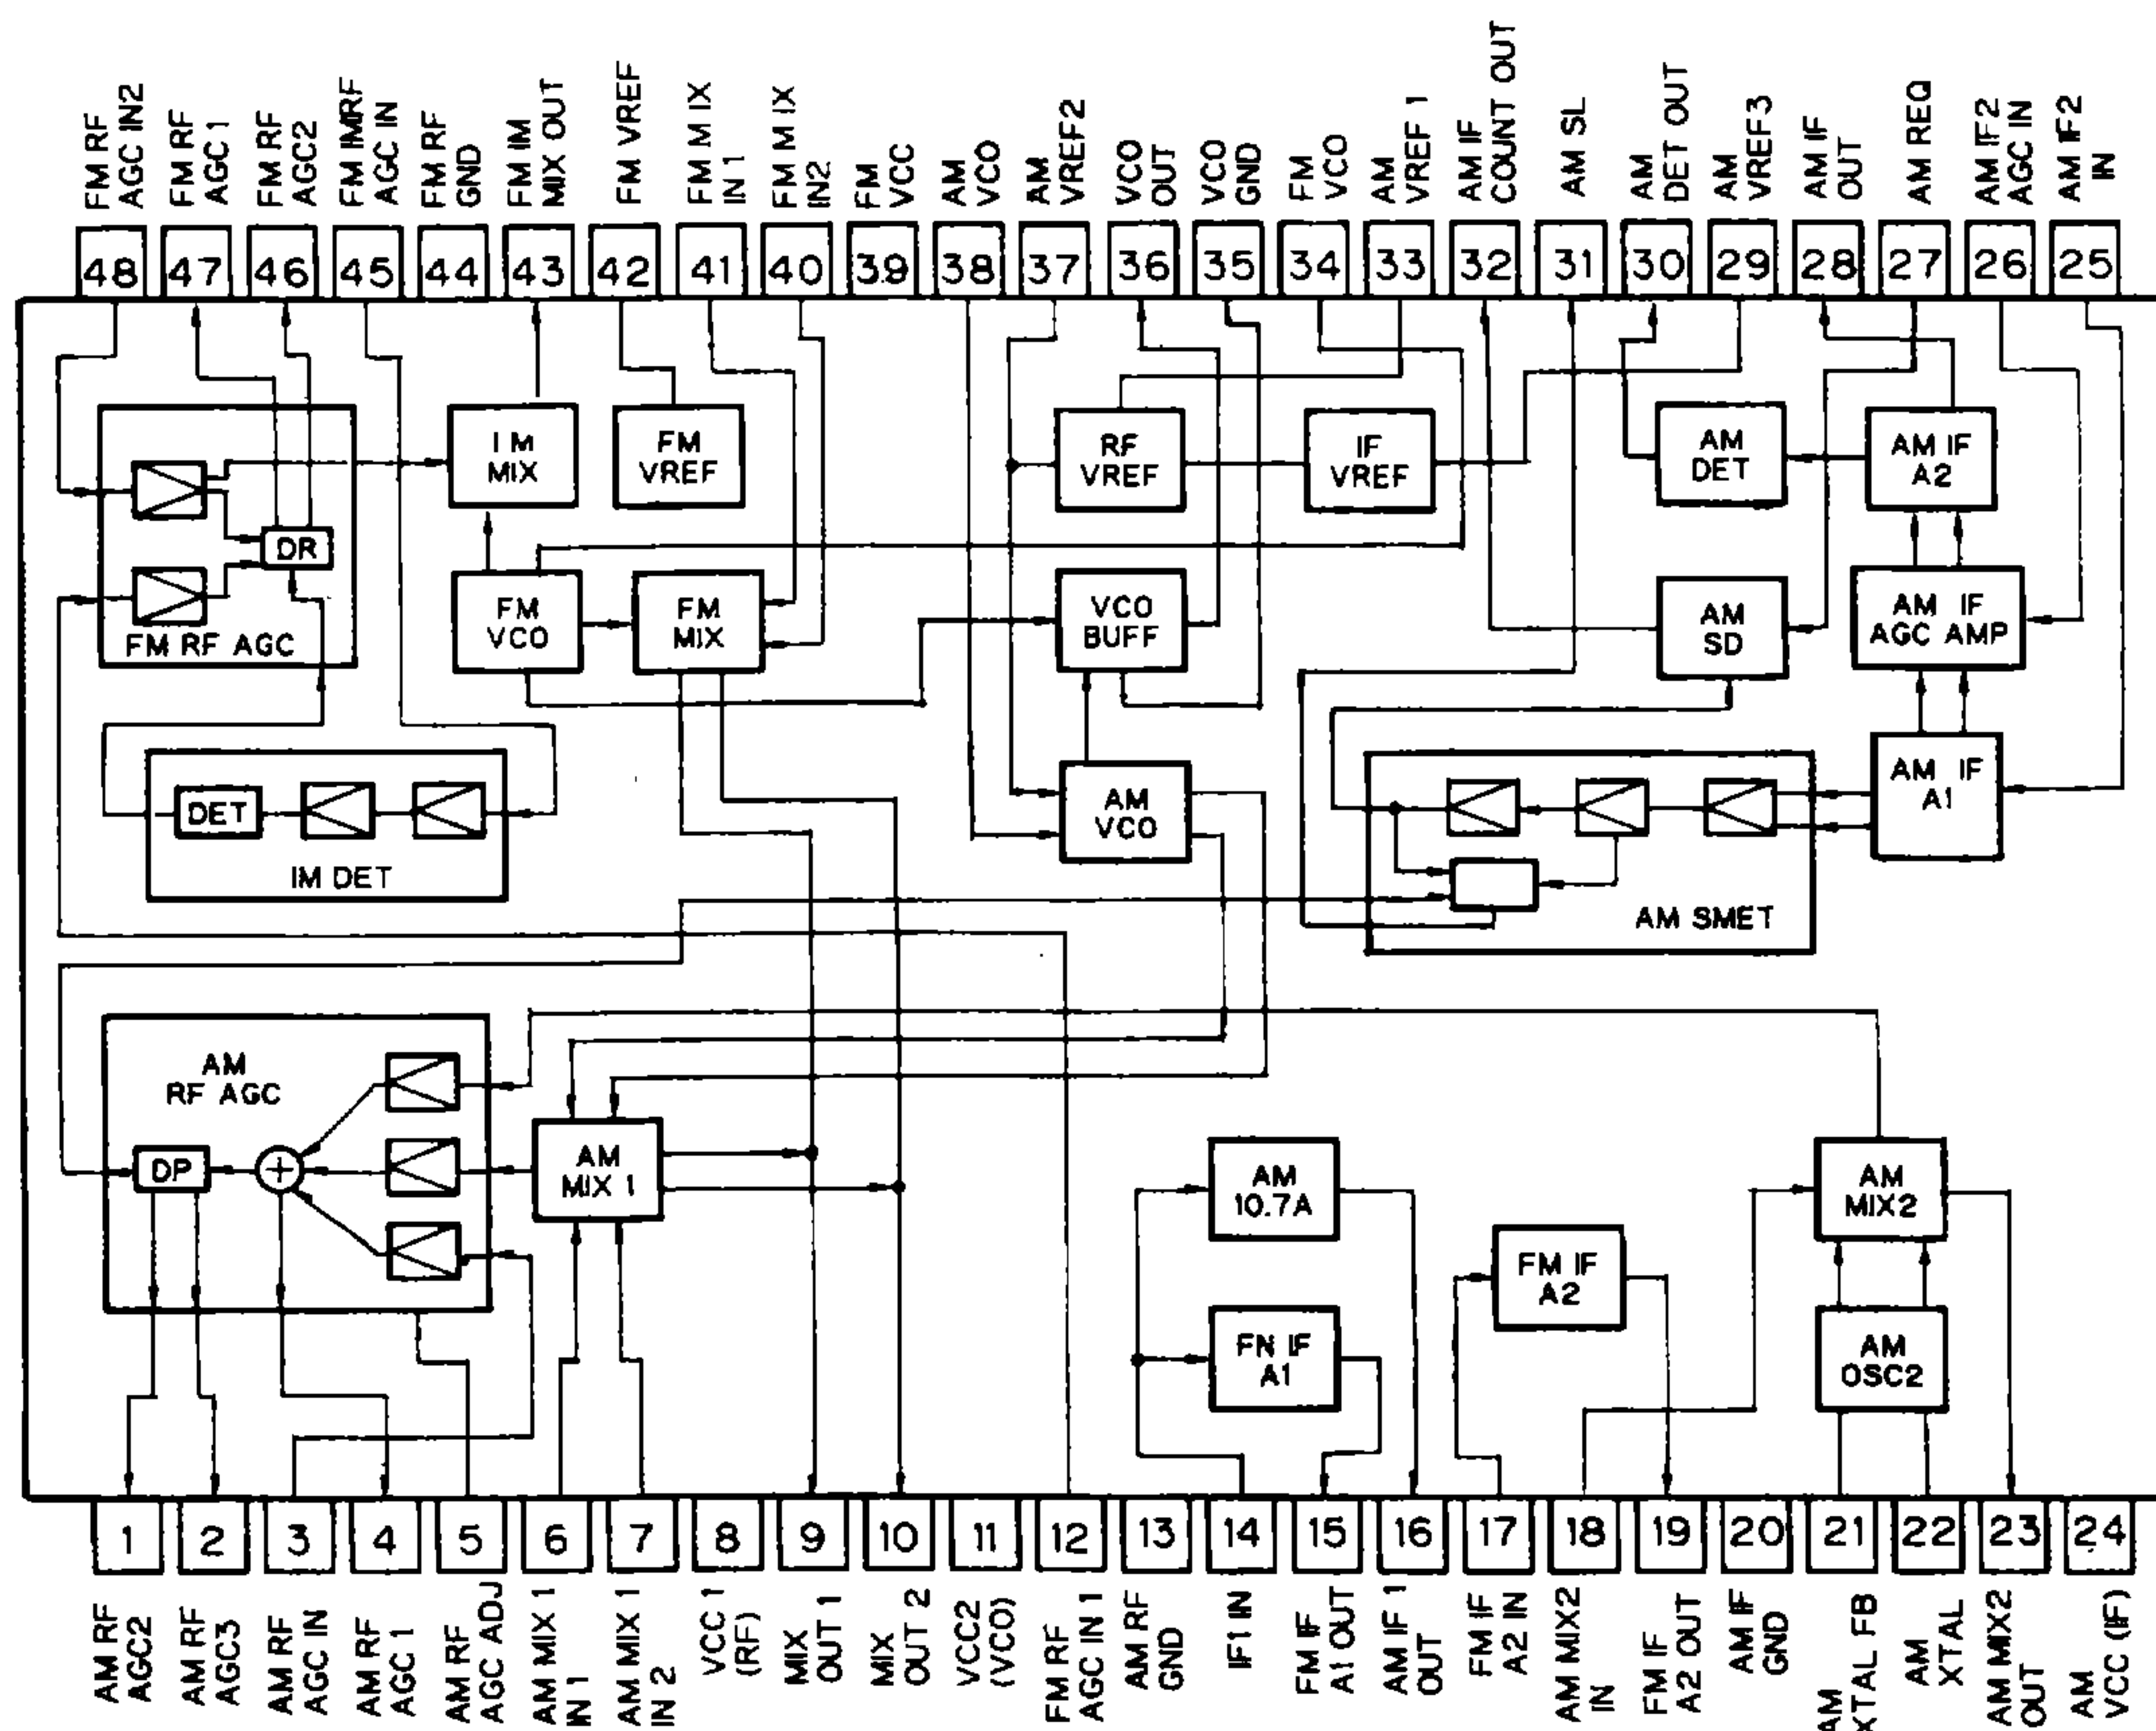

PA4024A

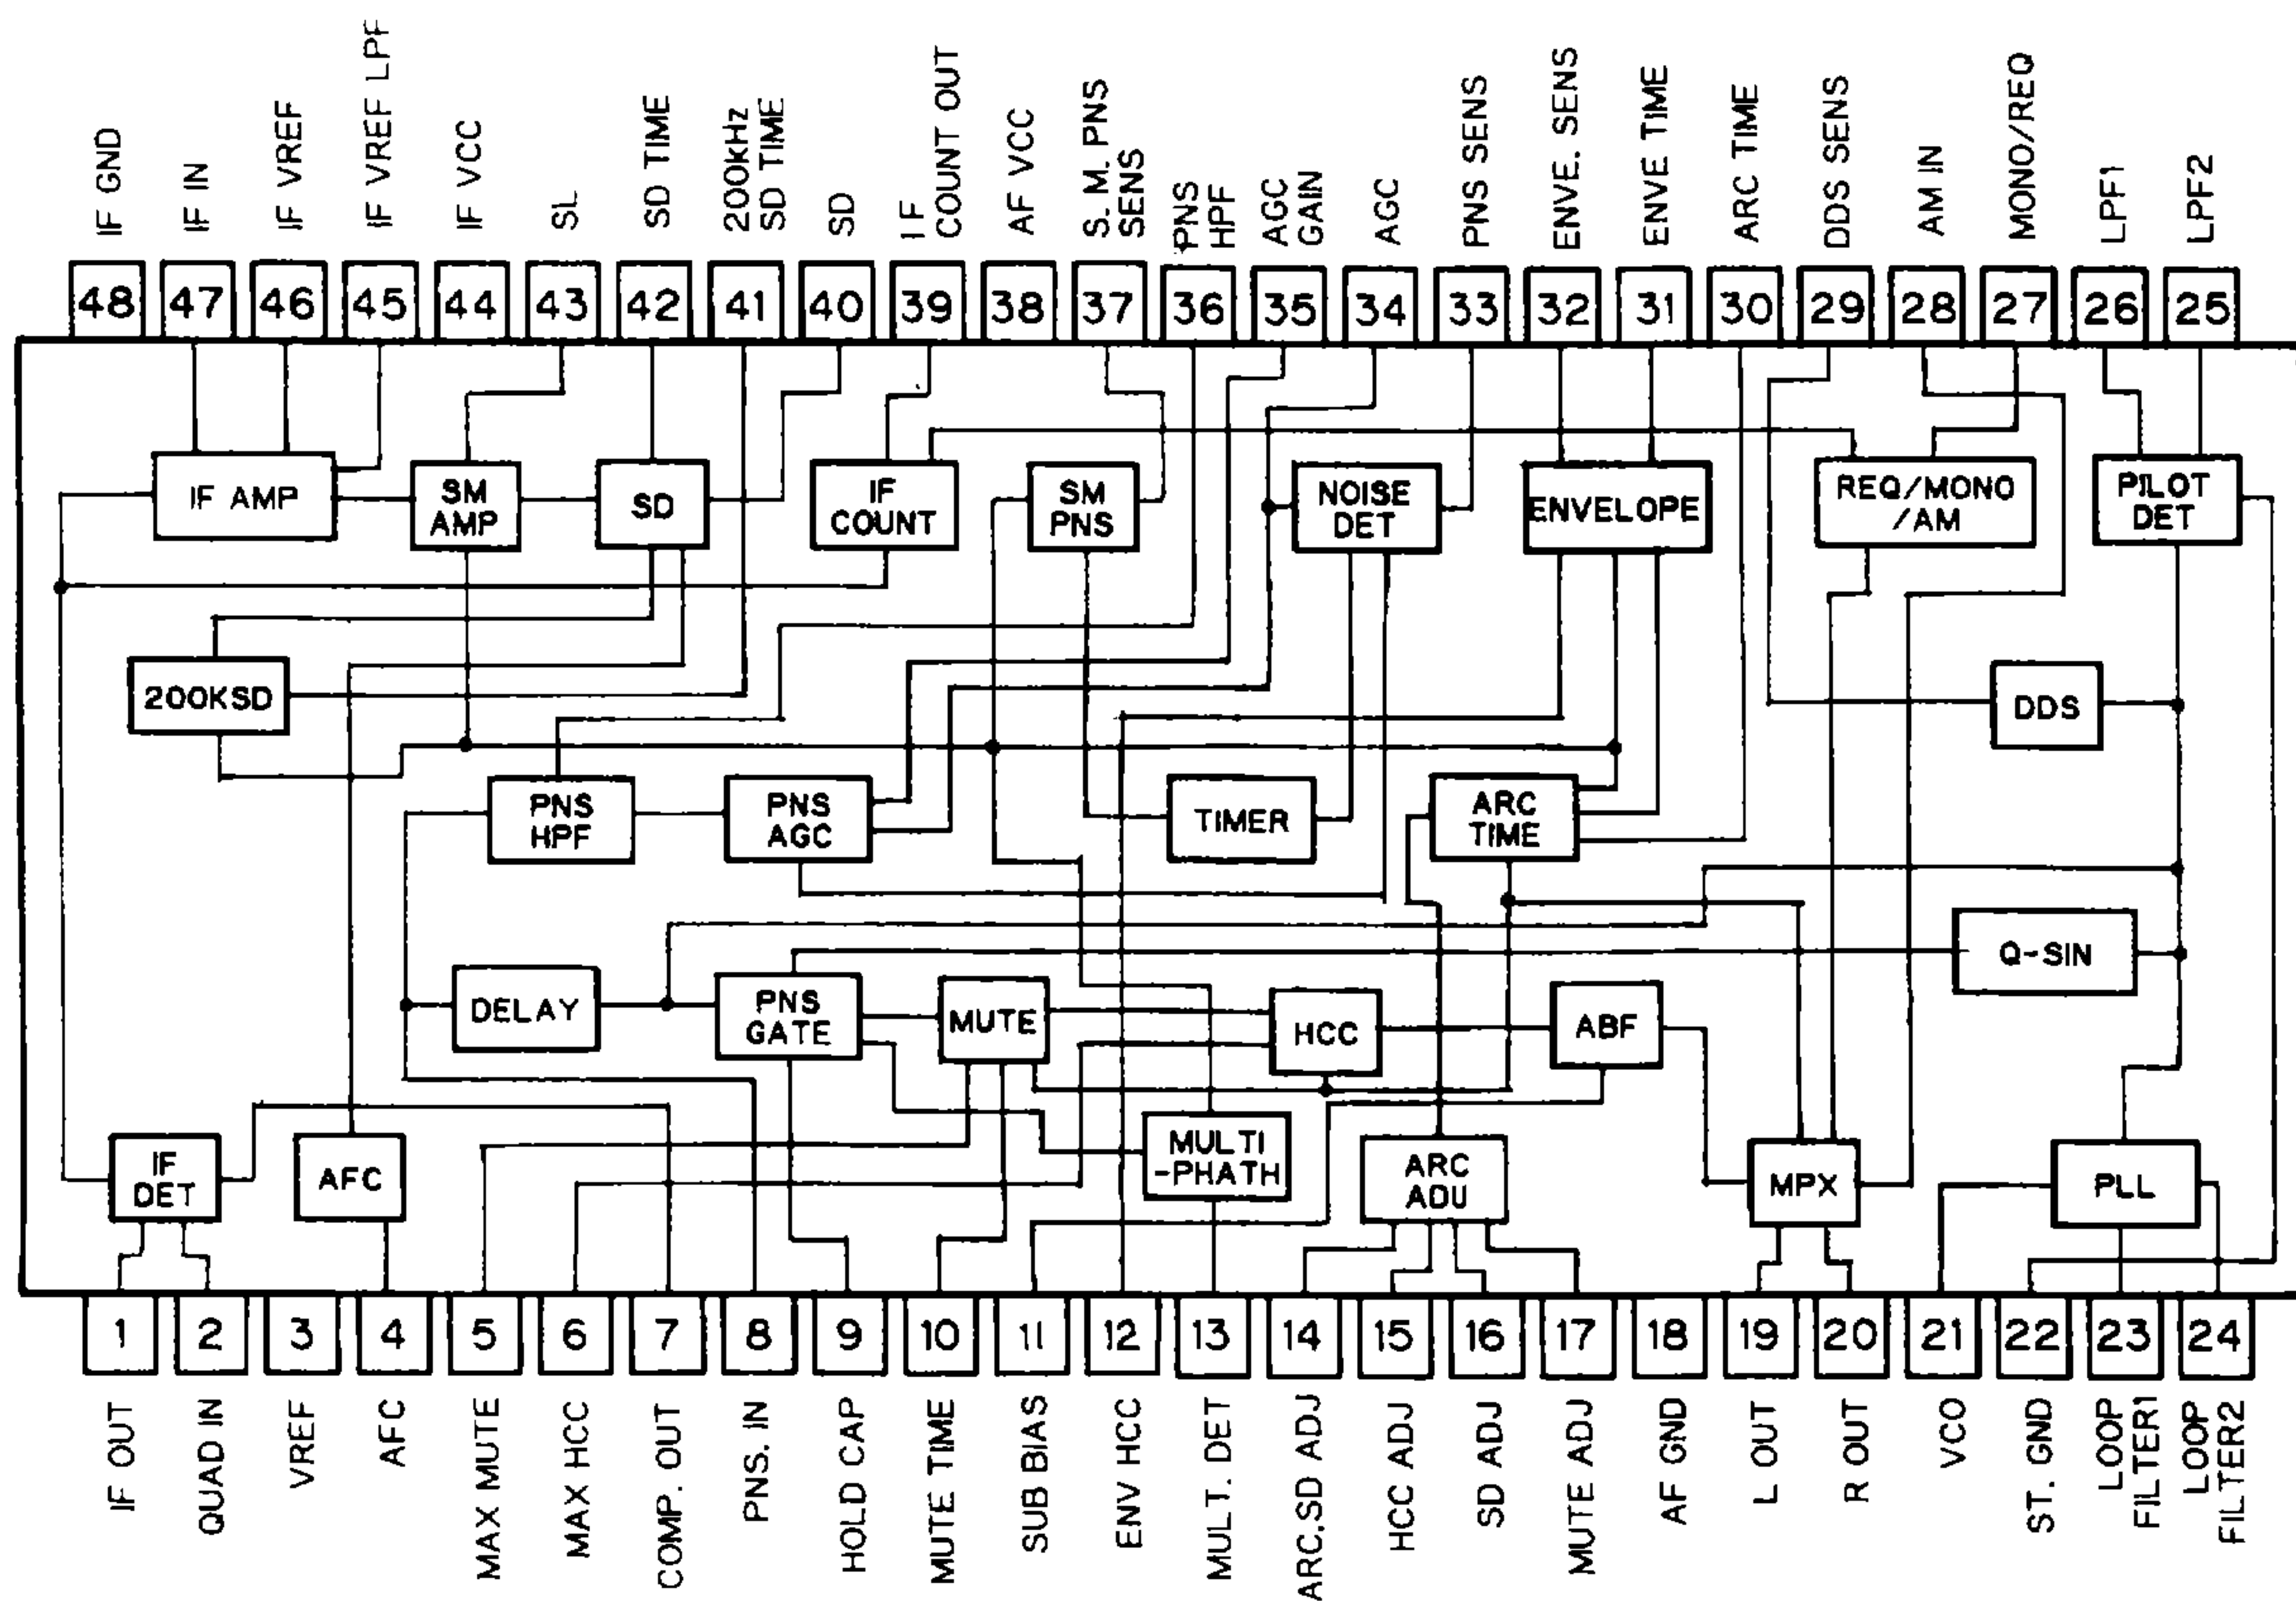

HA13150A

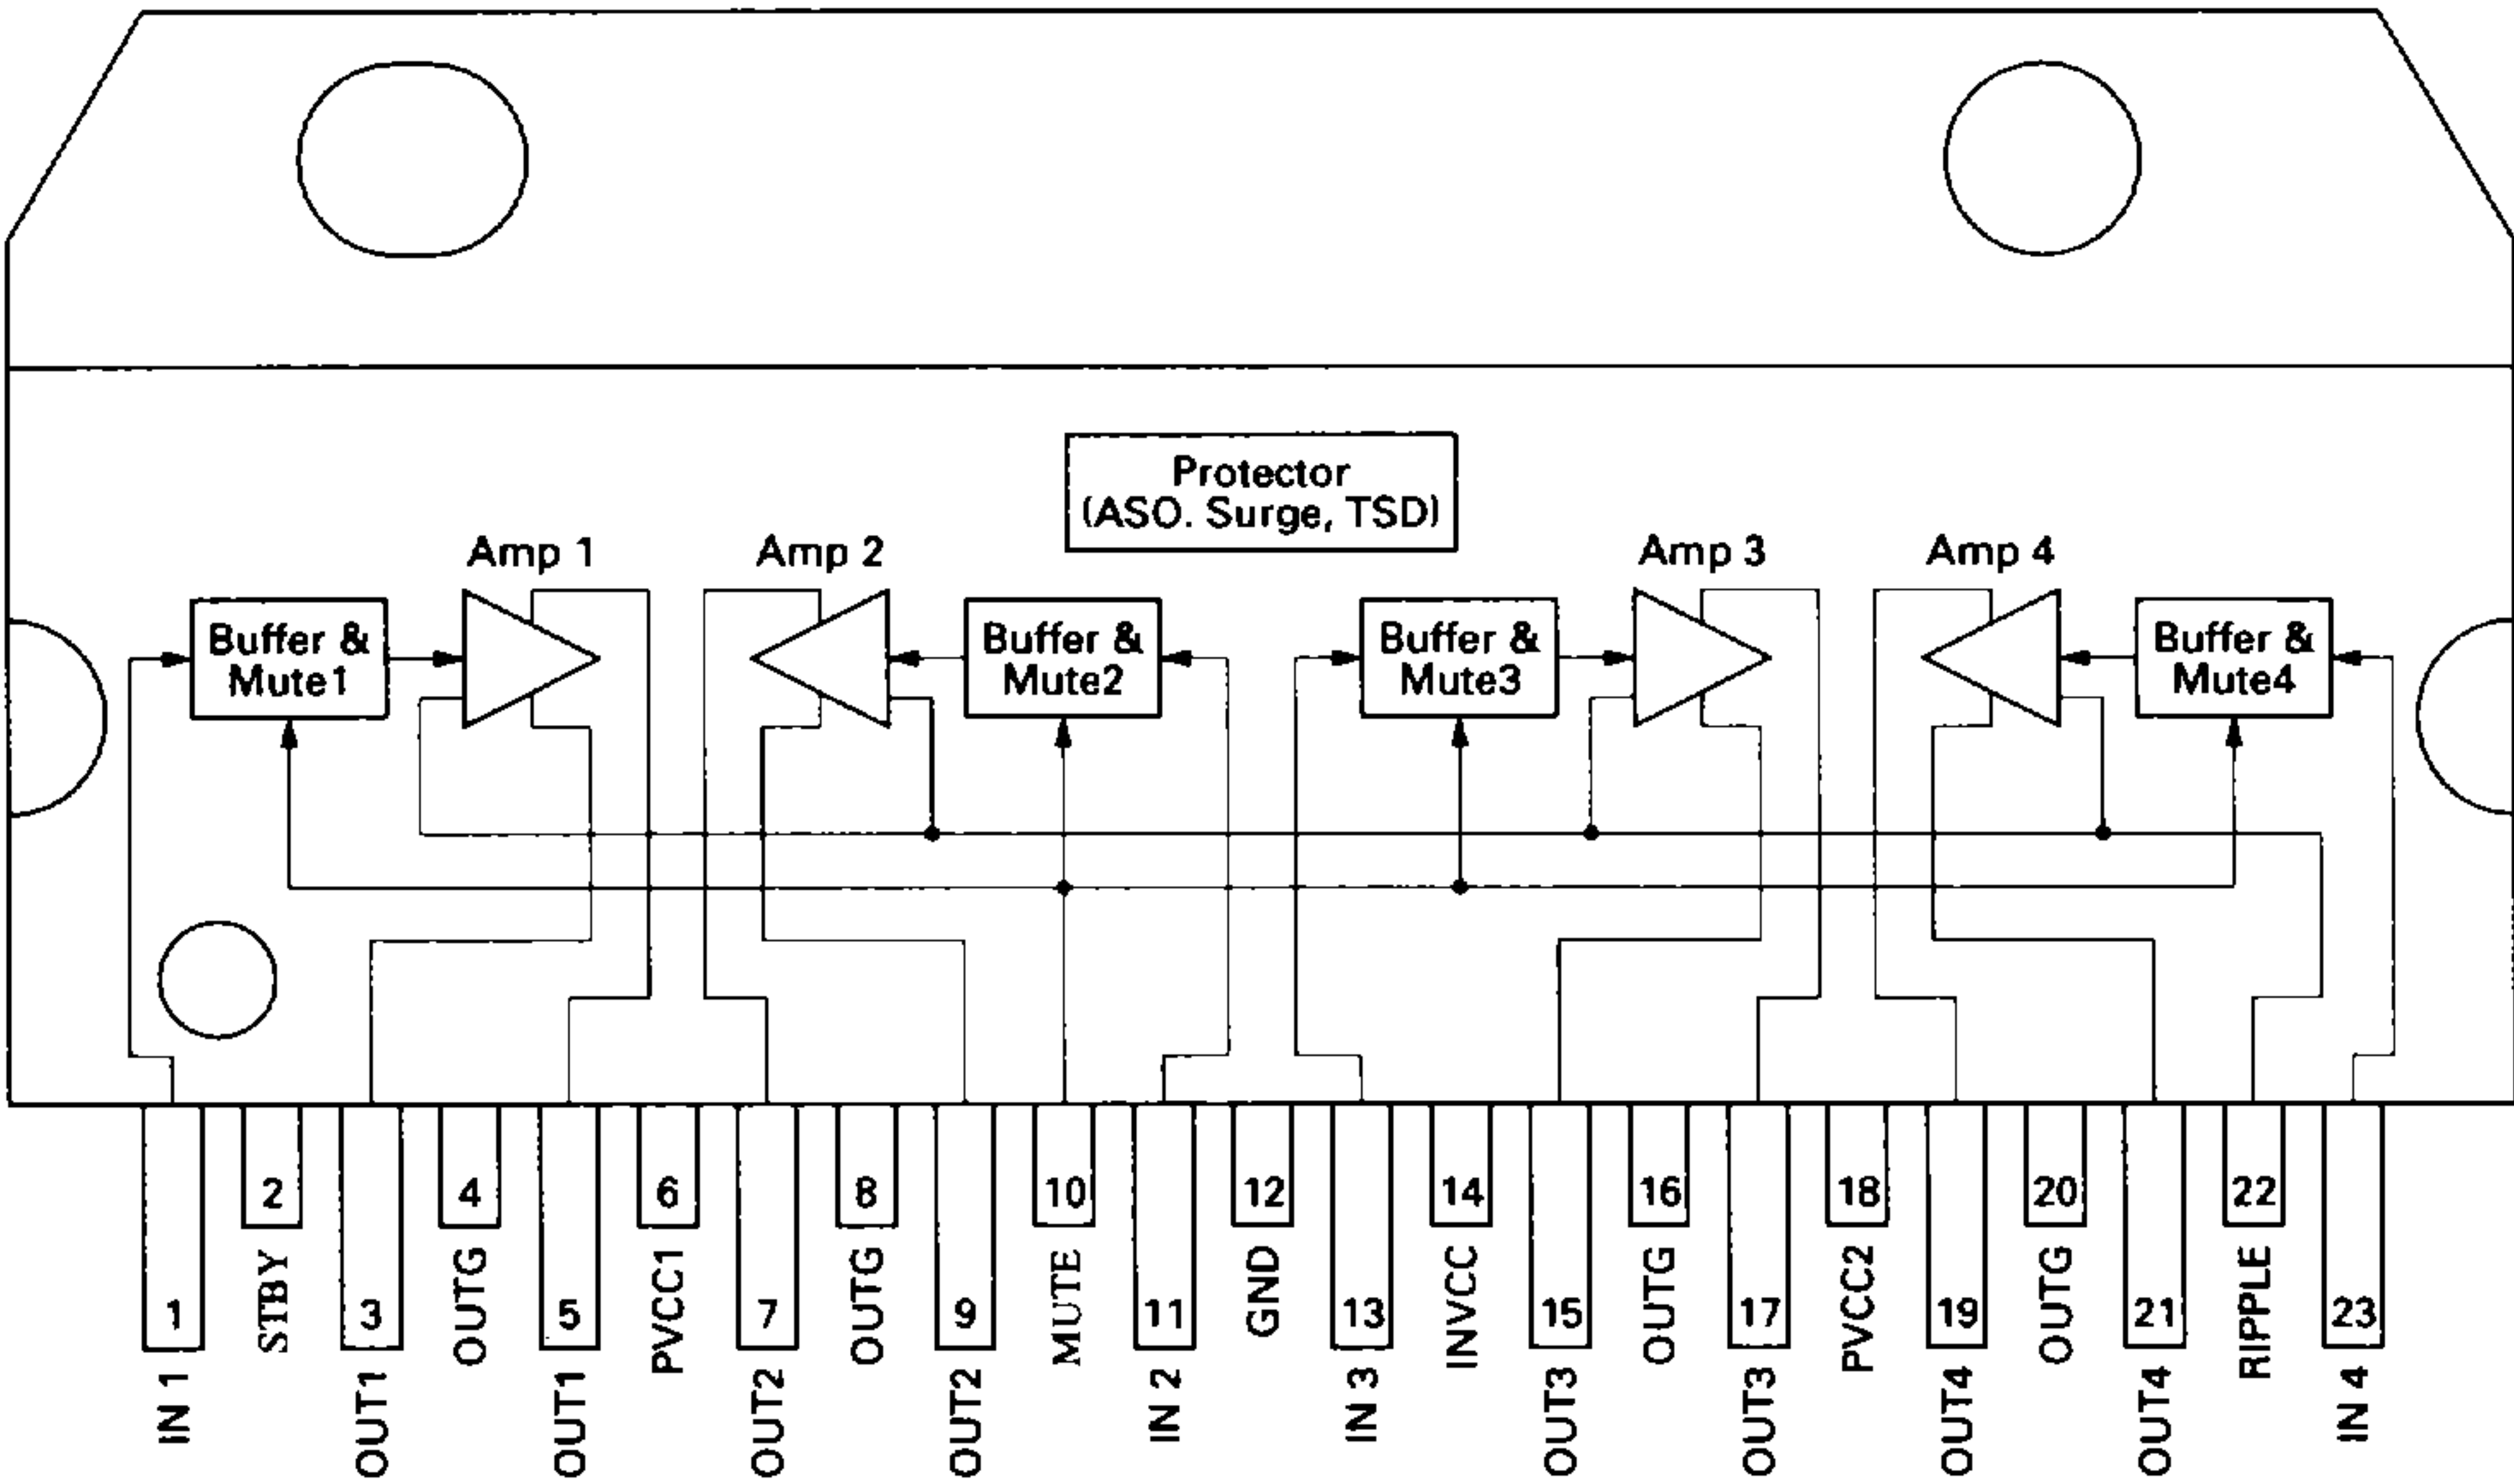


● Pin Functions (PDC015C)


Pin No.	Pin Name	I/O	Function and Operation
1-4	NC		Not used
5-8	KST4-KST1	O	Key strobe 4-1
9-12	KD4-KD1	I	Matrix key return 4-1
13	NC		Not used
14	SCK	I/O	Clock input terminal for serial data input and output
15	SO	I/O	Key data output
16	SI	I	Display data input
17	RES	I	Reset input
18	TEST	I	Test input
19	OSC-IN	I	System clock input
20	OSC-OUT	O	System clock output
21	VSS		GND
22,23	VDD2,VDD1		LCD power supply 2,1
24	VDD		Power supply
25-28	COM1-4	O	LCD common signal 1-4
29-42	SEG1-14	O	LCD segment signal 1-14
43-48	NC		Not used

IC's marked by* are MOS type.
Be careful in handling them because they are very liable to be damaged by electrostatic induction.

*PDC015C

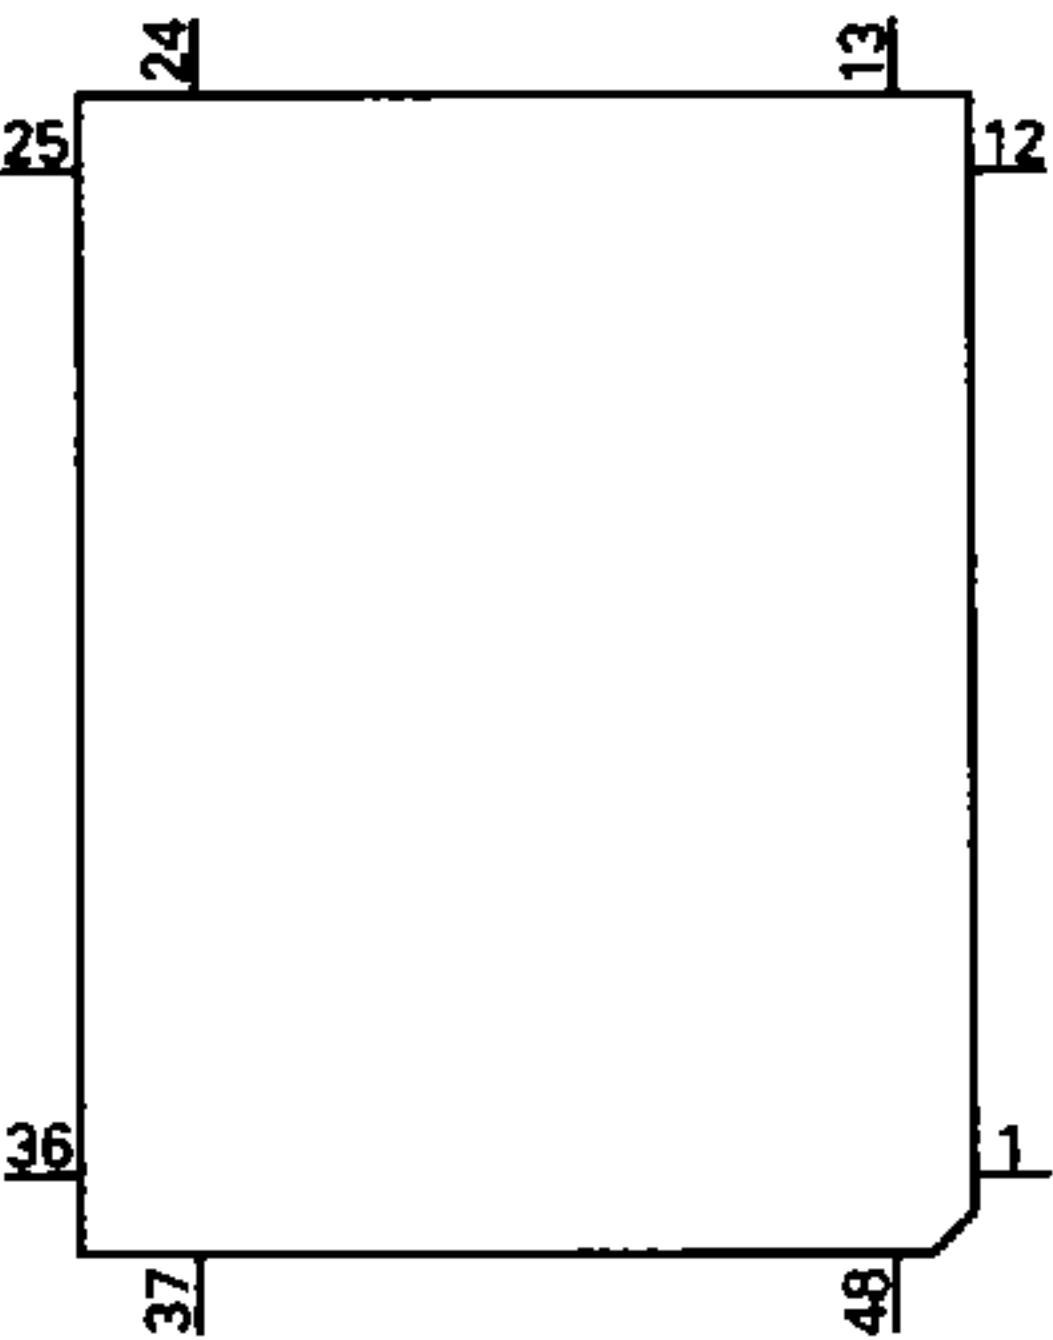

*PDR025A

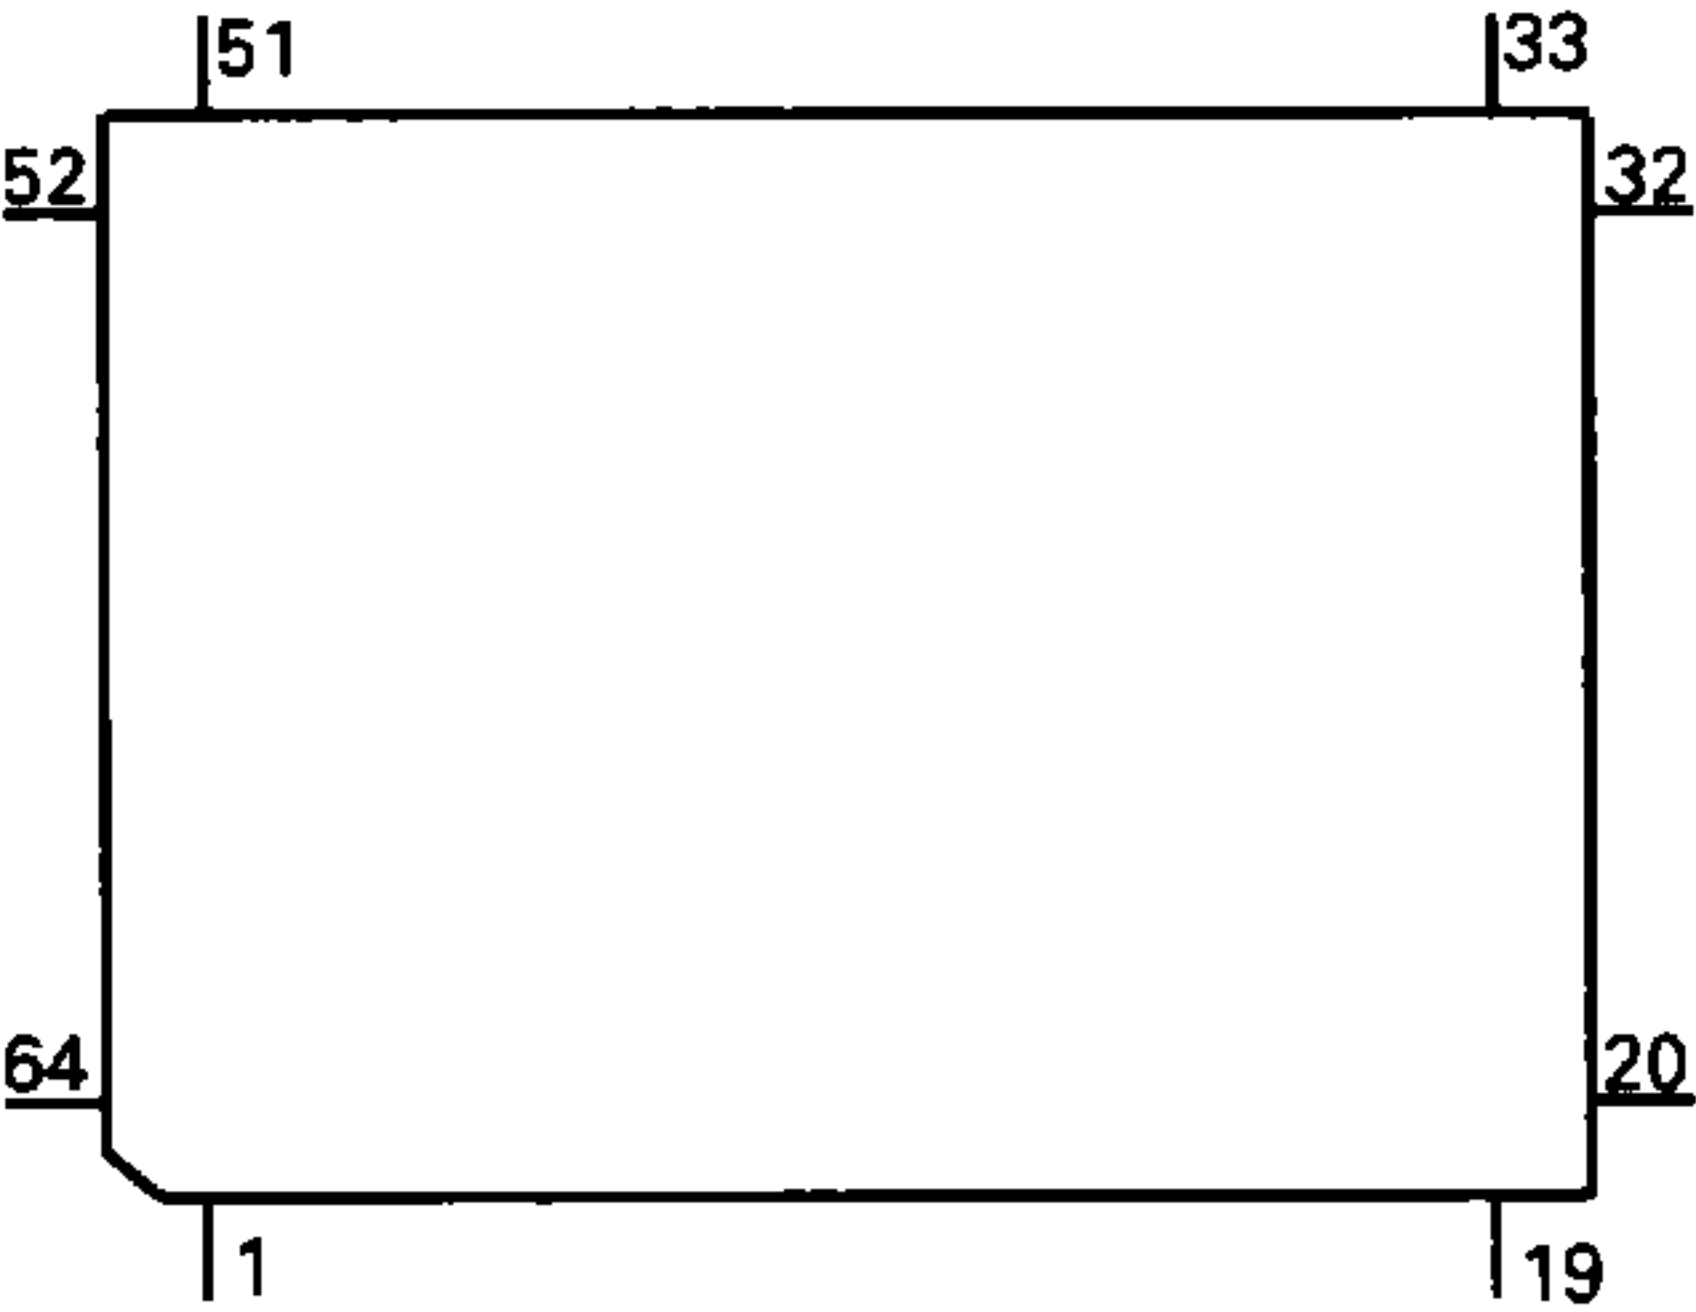

● Pin Functions (PDR025A)

Pin No.	Pin Name	I/O	Format	Function and Operation
1	MCMUT	I	C	Mechanism mute request
2	TAPLD	I	C	Tape loading input
3	EO	O	C	Error output
4	VDD1			Power supply
5	GND			GND
6	VCOIN	I		AM/FM VCO IN
7	ASENS	I		ACC power sense input
8	VDD2			Power supply
9	LCK	O	C	Clock output(Key & display microcomputer)
10	LDT	O	C	Data output(Key & display microcomputer)
11	LDI	I	C	Data input(Key & display microcomputer)
12	FMSD	I		FM SD input
13	AMIF	I		AM IF signal input
14	SL	I		Signal level input
15	ST	I		Stereo input
16	SK	I	C	SK signal input
17	DK	I	C	DK signal input
18	SWVDD	I	C	Grille power supply control
19	PEE	O	C	Beep tone output
20	VST	O	C	Strobe pulse output for electronic volume
21	VCK	O	C	Clock output for electronic volume
22	VDI	O	C	Data output for electronic volume
23	NC			Not used
24	XOUT	O	C	Crystal oscillating element connection pin
25	XIN	I		Crystal oscillating element connection pin
26	GND			GND
27-30	NC			Not used
31	TESTIN	I	C	Test program mode input
32	DSENS	I	C	Grille detach sense input
33,34	GND			GND
35-38	NC			Not used
39	MUTE	O	C	System mute output
40	DKOUT	O	C	DK interrupt output
41	ILLPW	O	C	Not used
42	AUTANT	O	C	Not used
43	SYSPW	O	C	System power supply control output
44-46	NC			Not used
47	NR	O	C	NR output
48	MTL	O	C	METAL output
49	MS	O	C	Cassette mechanism MS sense output
50	MECPW	O	C	Cassette mechanism power
51	AMPW	O	C	AM power control output
52	LOCL	O	C	LOC "L" set up
53	LOCH	O	C	LOC "H" set up
54	FMPW	O	C	FM power control output
55	SEEK	O	C	Seek output
56	MONO	O	C	Forced mono output
57	LW	O	C	LW output
58	GND			GND
59-62	DM3-DM0	I		Destination • function input
63	NOR/REV	I	C	Tape running input
64	DM4	I		Not used

Format	Meaning
C	C MOS

7. LCD

● CAW1377

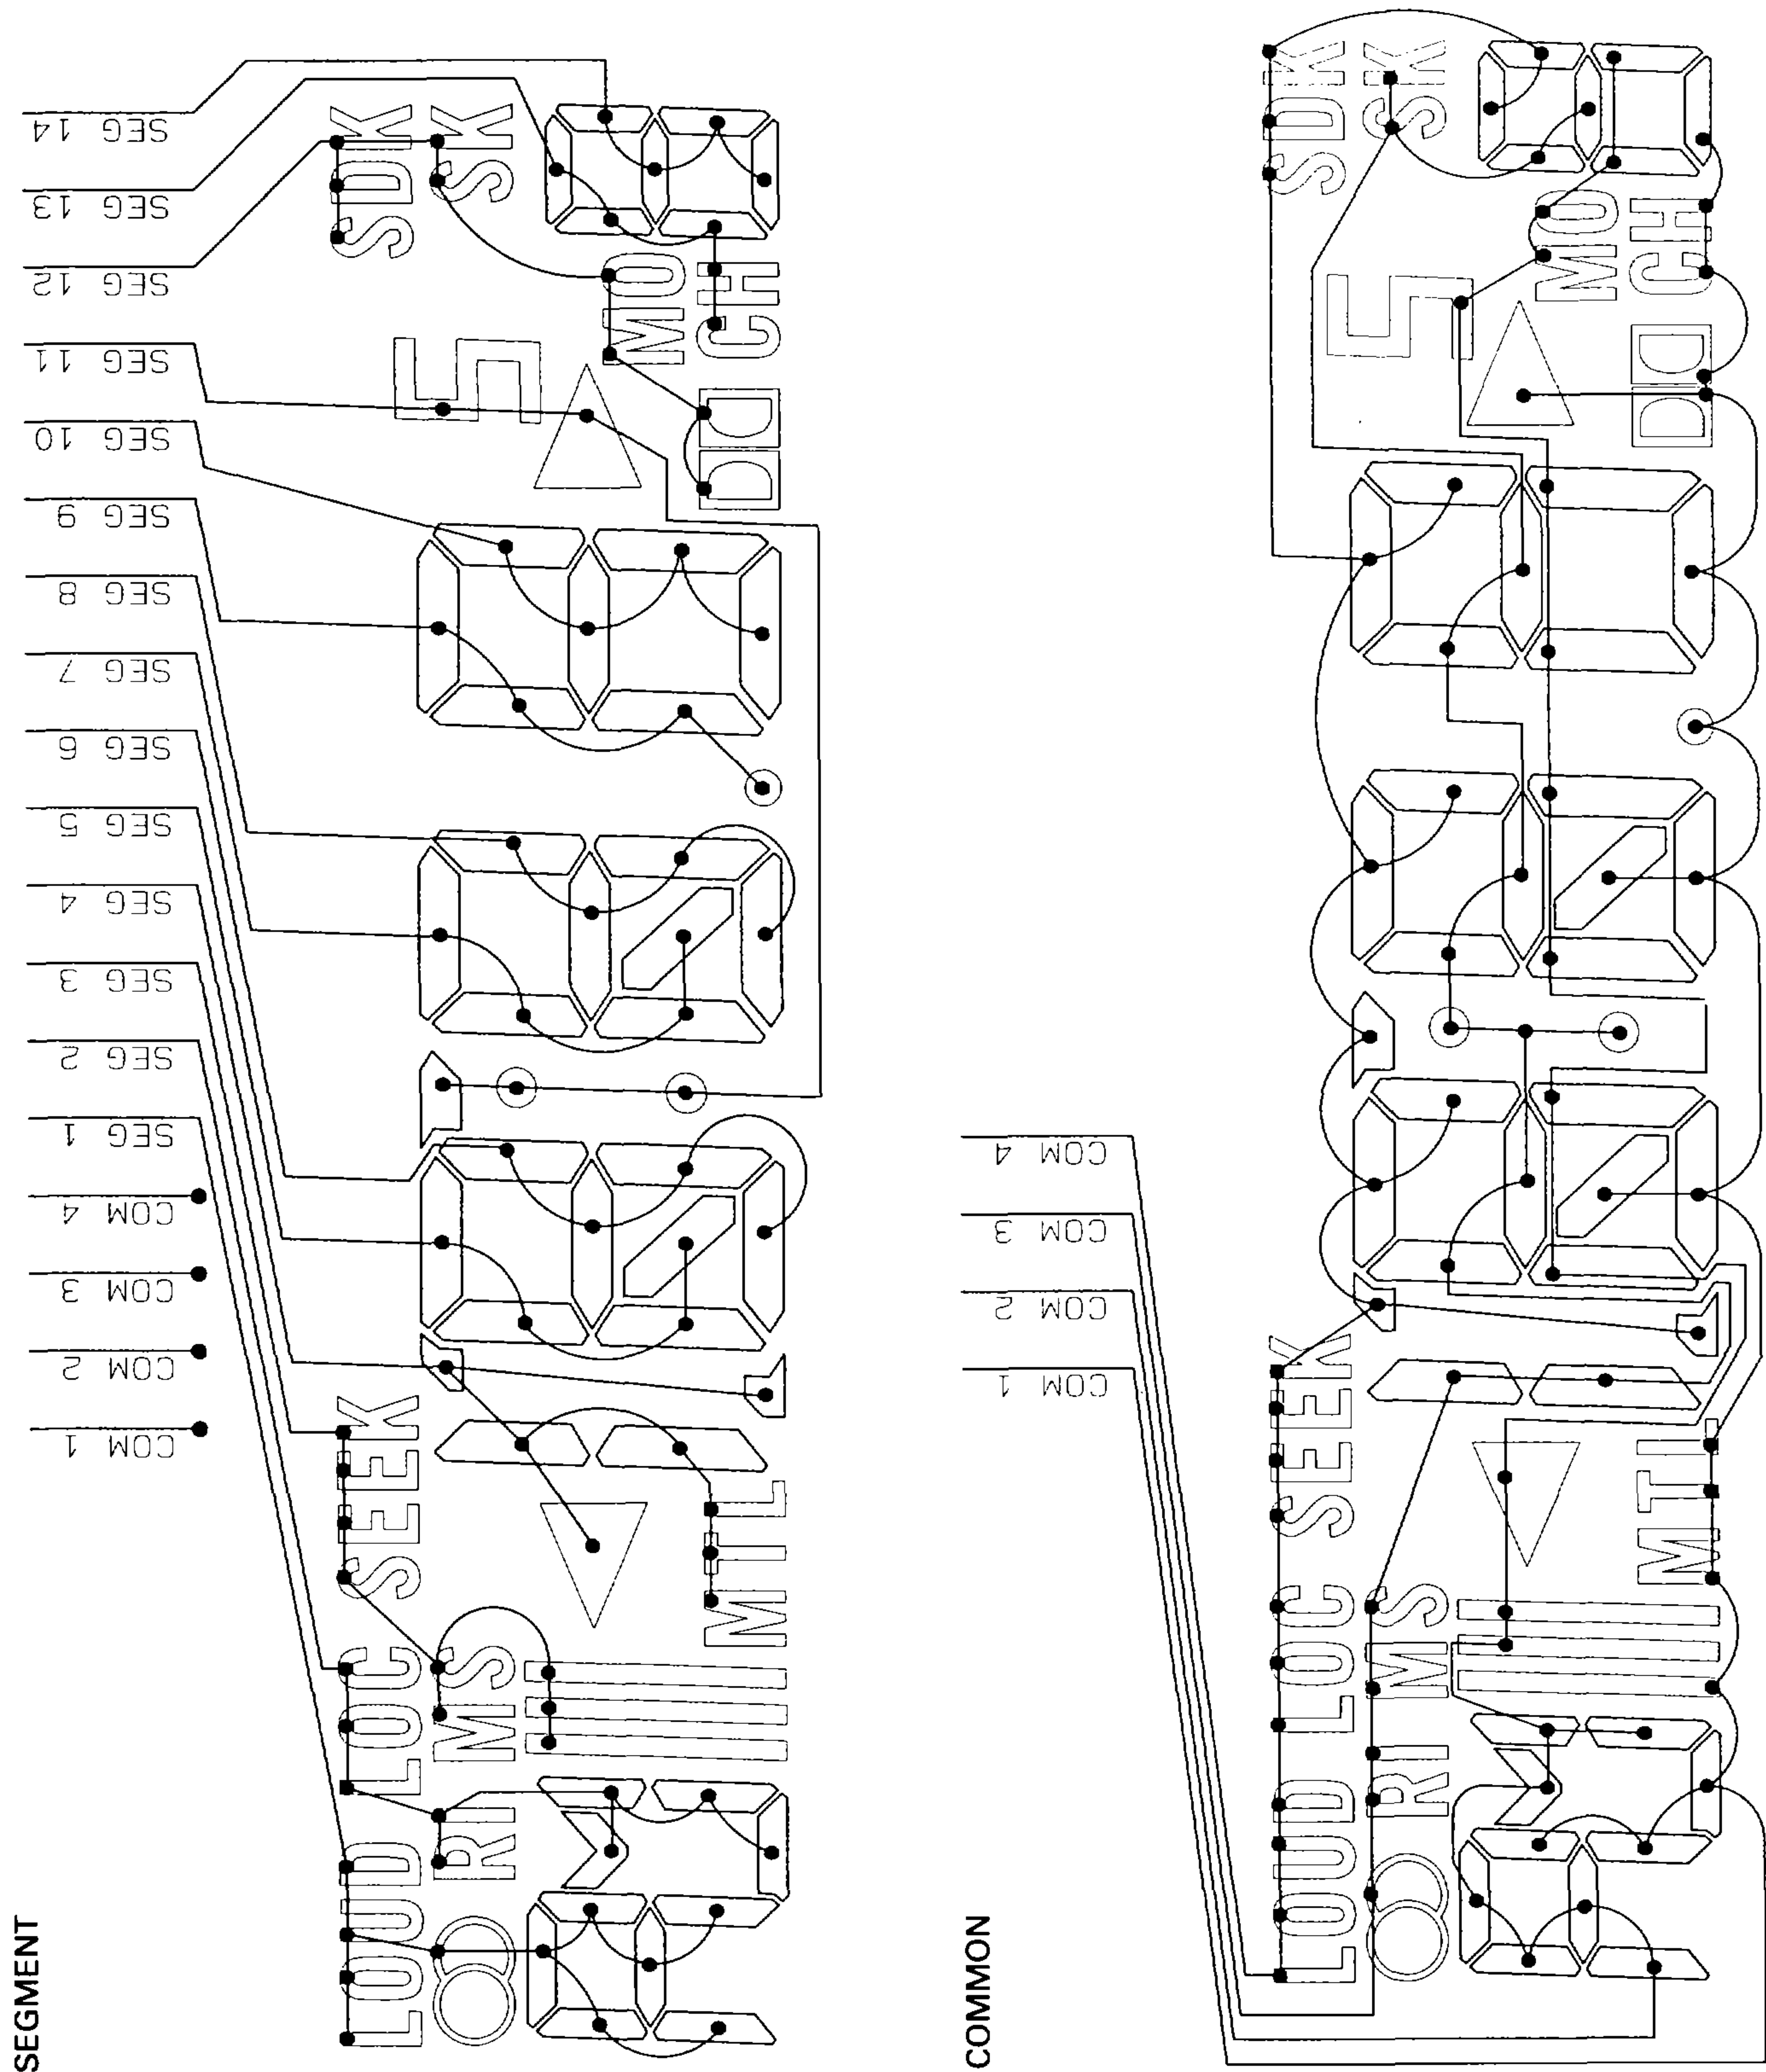


Fig. 4

8. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/OSOOOJ,RS1/OOSOOOJ

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol & No. Part Name=====	Part No.	====Circuit Symbol & No. Part Name=====	Part No.
Unit Number :		R 303 304 512 628	RD1/4PU332J
Unit Name : Tuner Amp Unit(1400/X1M/UC)		R 305 306 309 608 609	RD1/4PU104J
MISCELLANEOUS		R 307 501 618 620 622 959 981	RD1/4PU223J
IC 251	LA3161P	R 308	RD1/4PU183J
IC 301	HA12134AF	R 401 402	RD1/4PU822J
IC 401	AN6263N	R 403	RD1/4PU100J
IC 451	SN761025DL	R 404	RD1/4PU684J
IC 551	HA13150A	R 452	RS1/10S272J
IC 601	PDR025A	R 453	RD1/4PU151J
Q 301 302	DTC114TS	R 454	RS1/10S151J
Q 401 605 961 963	DTC114ES	R 455 456 570 952	RS1/10S101J
Q 501 506 602 603 606	2SC1740S	R 457 458 502 567 571 617 621 623	RD1/4PU103J
Q 502	2SK330	R 459 460 461 503 507 616 631 951 958 964	RD1/4PU472J
Q 504	2SC2498	R 465 466	RD1/4PU223J
Q 551 552 958	DTC124ES	R 467 468	RD1/4PU151J
Q 601 851 852 966	DTC143TS	R 504 615	RD1/4PU152J
Q 604	DTA114ES	R 505 506 516 518 956 962 965 970	RD1/4PU102J
Q 607	DTC124TS	R 508 522 523 575 576	RD1/4PU222J
Q 853	DTA124ES	R 509 573 574	RD1/4PU222J
Q 951	2SD1859	R 511	RD1/4PU101J
Q 956 962	2SA933S	R 513 853 854	RD1/4PU821J
Q 957	2SB1243	R 514 960 973	RD1/4PU331J
Q 959	2SD2395	R 515	RD1/4PU680J
Q 960	2SA1674	R 527 528	RD1/4PU162J
Q 965	2SB1242	R 529	RD1/4PU330J
Q 967	2SC1740S	R 530	RD1/4PU393J
D 251 502 503 601 602 604 608 609 610 611	1SS270	R 531 982	RS1/10S103J
D 501	MTZJ3R0B	R 551 552 553 554 555 556 557 558	RD1/4PU2R2J
D 551	CWW1352	R 568	RS1/10S153J
D 603	HZS7LB1	R 569	RS1/10S221J
D 605 615	HZS7LA1	R 577 578 579 580 606	RS1/10S222J
D 606	HZS7LC3	R 605	RS1/10S473J
D 612 613 614	1SS270	R 607 610 630 957	RD1/4PU473J
D 621 962	1SS270	R 611	RD1/4PU473J
D 951 952 954 955 958	1SR139-200	R 612 613 614 625	RD1/4PU222J
D 953	HZS6LB2	R 619 980	RD1/4PU392J
D 956	HZS9LB3	R 624	RS1/8S104J
D 961	HZS9LA2	R 626	RD1/4PU104J
L 501	Ferri-Inductor	R 851 852	RS1/10S223J
L 601 602	Ferri-Inductor	R 961	RD1/4PU511J
L 951	Choke Coil 600H	R 963	RD1/4PU471J
X 601	Crystal Resonator 4.500MHz	R 969	RD1/4PU472J
VR 301 302	Semi-fixed 33kΩ(B)	R 971 972	RD1/4PU1R5J
FM/AM Tuner Unit	CWE1417	CAPACITORS	
RESISTORS		C 251 252 507	CKSQYB681K50
R 251 252	RD1/4PU273J	C 253 254	CEA2R2M50LS2
R 253 254	RS1/10S470J	C 255 256 263 403	CEA101M10LS
R 255 256 983	RS1/10S472J	C 257 258 475 476	CKSQYB333K25
R 257 258	RS1/10S104J	C 301 302 304 451 452 453 454 463 464	CEA010M50LL
R 301 302 451	RD1/4PU272J	C 305 306	CKSQYF224Z25
		C 307 555 556 557 558 559 560 561 562 604	CKSQYB104K16
		C 308 517 518 606	CKSQYB104K16
		C 309	CEA4R7M35LS2
		C 310 551 552 553 554 603	CEA4R7M35LL

KEH-1400,1450,1311,1100,1150,1300,1300SDK

====Circuit Symbol & No. Part Name=====	Part No.	====Circuit Symbol & No. Part Name=====	Part No.
C 311 312 513 515 520 521	CKSQYB223K25	D 231	SVC253
C 401	CKSQYB562K50	L 2 4	CTC1108
C 402	CCSQCH330J50	L 3	LCTB2R2K2125
C 404	CKSYB823K50	L 5	CTC1107
C 459 460 465 466 483 851 852	CEA100M16LL	L 51	LAU150K
C 461 462	CKSQYB822K50	L 201	Ferri-Inductor LAU4R7K
C 467 468	CKSQYB152K50	L 202	Ferri-Inductor LAU330K
C 469 470	CKSQYB183K25	L 203	Inductor CTF1287
C 471 472 501 510 589 590 591 592 609 953	CKSQYB102K50	L 208	Inductor LAU121K
C 473 474 484	CEA2R2M50LL	L 231	Inductor LAU3R3J3225
C 477 478 508 509 512 963 964	CCSQCH101J50	T 31	Coil CTE1116
C 485	CKSQYB332K50	T 51	Coil CTC1136
C 487	CKSYB104K16	CF 51 52 53	Ceramic Filter CTF1290
C 489 504 506 511 958	CKSQYB103K25	CF 232	Ceramic Filter CTF1348
C 502 525	CKSYB473K16	X 151	Ceramic Resonator 920.5kHz CSS1365
C 503	CCH1005	X 231	Crystal Resonator 10.26MHz CSS1111
C 516 526 607	CKSQYB473K16	VR 154	Semi-fixed 68kΩ(B) CCP1211
C 541	CCSQCH100D50		
C 570	CEAS100M16		
C 571	CEAS330M10		
C 572 573	CKSQYB104K25		
C 601	CCSQCH110J50		
C 602	CCSQCH100D50		
C 611	CKSYB103K25		
C 951	CCH1018		
C 952	CEAS331M16		
C 957 959	CCH1181		
C 960	CEA101M16LL		
Unit Number : CWM4585			
Unit Name : Key Board Unit(KEH-1400/X1M/UC, 1400/X1M/IT, 1450/X1M/ES,1150/X1M/ES)			
MISCELLANEOUS			
IC 901	PDC015C		
D 901	MA151WK		
D 902	MA151WA		
D 903	MA110		
L 901	LAU150K		
S 901 902 903 904 905 906 907 908 909 910	CSG1055		
S 911 912 913 914 915 916	CSG1055		
IL 901 902 903	Lamp 14V 65mA		
LCD 901	LCD		
RESISTORS			
R 901 902	RS1/10S222J		
R 903 904 905 906 907 908 909 910 911 912	RS1/10S471J		
R 913	RS1/10S682J		
R 917	RS1/10S472J		
R 946	RS1/10S473J		
CAPACITORS			
C 901	CEA100M16LL		
C 902 903	CKSQYB103K25		
C 904	CCSQCH181J50		
C 905	CKSQYB104K16		
Unit Number : CWE1417			
Unit Name : FM/AM Tuner Unit(KEH-1400/X1M/UC,1450/X1M/ES, 1311/X1M/UC,1100/X1M/UC,1150/X1M/ES)			
MISCELLANEOUS			
IC 1	PA4023A		
IC 2	PA4024A		
Q 1 31 202	2SC2412KLN		
Q 2 203	DTC124EU		
Q 3	3SK263		
Q 201	2SK932		
D 1 2	RD39JS		
D 4	1SV251		
D 5 7 8	KV1410		
D 6 201 202	MA157		

KEH-1400,1450,1311,1100,1150,1300,1300SDK

====Circuit Symbol & No. Part	Name=====	Part No.
R 240		RS1/16S332J
R 241		RS1/16S202J
R 243		RS1/16S183J
R 244		RS1/16S472J
CAPACITORS		
C 1		CCSQCH060D50
C 2		CCSRCH020C50
C 4		CCSRCH820J50
C 6		CCSRCH820J50
C 8	18 25 31 52 59 62 105 107 213	CKSRYB103K25
C 9	34 56 152 160 241	CKSQYB104K16
C 10		CCSRCH0R5C50
C 11		CEA010M50LL
C 12	13 17 19 20	CKSRYB222K50
C 14		CCSRCH220J50
C 15		CCSRCH060D50
C 16		CCSRCH080D50
C 21		CEA100M16LL
C 22		CCSRTH090D50
C 23		CCSRTH120J50
C 24		CCSRCH471J50
C 26		CCSRCH101J50
C 32		CKSQYB472K50
C 33		CCSRCH050C50
C 36		CCSRRH201J50
C 51		CKSRYB223K25
C 54		CCSRCH470J50
C 55		CKSQYB223K25
C 57		CKSRYB472K50
C 58	234	CEA330M10LL
C 60		CKSRYB102K50
C 61		CKSRYB102K50
C 63		CEAR22M50LL
C 101		CEA100M10NPLL
C 102		CKSRYB182K50
C 103		CKSRYB682K25
C 104		CEA2R2M50LL
C 106		CCSRCH151J50
C 151		CKSRYB472K50
C 153	157	CEA3R3M50LL
C 154		CKSQYB104K16
C 158		CKSYB474K16
C 159		CEA220M6R3LL
C 161	209	CKSQYB104K16
C 162		CEA3R3M50LL
C 163		CKSRYB102K50
C 170	202	CCSRCH100D50
C 201	250	CCSRCH471J50
C 203	235	CKSRYB332K50
C 204	205 236 244	CKSQYB473K16
C 206	233	CKSQYB104K16
C 207		CCSRCH560J50
C 211		CCSRCH101J50
C 212		CEA470M6R3LL
C 216		CCSRCH101J50
C 217		CEA1R5M50LL
C 219		CCSRCH471J50
C 220	230	CKSRYB103K25
C 231		CCSRCH330J50
C 232		CCSRCH150J50
C 237		CCSRCH180J50
C 239		CKSRYB472K50
C 240	242	CEAR47M50LL
C 243		CEAR33M50LL
C 245		CKSRYB183K25
C 246		CKSQYB473K16

====Circuit Symbol & No. Part	Name=====	Part No.
Unit Number :		
Unit Name : Cassette P.C.Board(KEH-1400/X1M/UC,1450/X1M/ES,1300/X1M/EW,1300SDK/X1M/GR,1400/X1M/IT,1311/X1M/UC)		
D 1		1SR-35-100A
S 1	Switch(Load)	ESN1016
S 2	Switch(Mute)	ESN1017
S 3	Switch(FWD/REV)	ESH1006
Miscellaneous Parts List		
M 1	Motor Unit	EXA1444
HD 1	Head Assy	EXA1443
SO 1	Solenoid	EXP1012
Unit Number :		
Unit Name : Cassette P.C.Board(KEH-1100/X1M/UC,1150/X1M/ES)		
S 1	Switch(Load)	ESN1016
S 2	Switch(Mute)	ESN1017
S 3	Switch(FWD/REV)	ESH1006
Miscellaneous Parts List		
M 1	Motor Unit	EXA1444
HD 1	Head Assy	EXA1443

- The KEH-1300/X1M/EW, KEH-1300SDK/X1M/GR, KEH-1400/X1M/IT, KEH-1450/X1M/ES, KEH-1311/X1M/UC, KEH-1100/X1M/UC and KEH-1150/X1M/ES Tuner Amp Unit Parts Lists enumerate the parts which differ from those enumerated in the KEH-1400/X1M/UC Parts List only. The parts other than those enumerated in the former are identical with those in the latter, to which you are requested to refer, accordingly. The KEH-1400/X1M/UC Tuner Amp Unit Parts List is given on page 14.

Tuner Amp Unit

Circuit Symbol & No.	1400/X1M/UC Part No.	1450/X1M/ES Part No.	1311/X1M/UC Part No.	1100/X1M/UC Part No.	1150/X1M/ES Part No.
IC301	HA12134AF	HA12134AF			
IC401	AN6263N	AN6263N	AN6263N		
IC551	HA13150A	HA13150A	HA13150A	PA3029B	PA3029B
VR301,302	CCP1209	CCP1209			
Q301,302	DTC114TS	DTC114TS			
Q401	DTC114ES	DTC114ES	DTC114ES		
R301,302	RD1/4PU272J	RD1/4PU272J			
R303,304	RD1/4PU332J	RD1/4PU332J			
R305,306,309	RD1/4PU104J	RD1/4PU104J			
R307	RD1/4PU223J	RD1/4PU223J			
R308	RD1/4PU183J	RD1/4PU183J			
R401,402	RD1/4PU822J	RD1/4PU822J	RD1/4PU822J		
R403	RD1/4PU100J	RD1/4PU100J	RD1/4PU100J		
R404	RD1/4PU684J	RD1/4PU684J	RD1/4PU684J		
R465,466	RD1/4PU223J	RD1/4PU223J	RD1/4PU333J	RD1/4PU333J	RD1/4PU333J
R601			RD1/4PU472J		
R602				RD1/4PU472J	RD1/4PU472J
R604		RD1/4PU472J			RD1/4PU472J
R631	RD1/4PU472J		RD1/4PU472J	RD1/4PU472J	
C301,302,304	CEA010M50LL	CEA010M50LL			
C305,306	CKSQYF224Z25	CKSQYF224Z25			
C307,308	CKSQYB104K16	CKSQYB104K16			
C309	CEA4R7M16LS2	CEA4R7M16LS2			
C310	CEA4R7M35LL	CEA4R7M35LL			
C311,312	CKSQYB223K25	CKSQYB223K25			
C401	CKSQYB562K50	CKSQYB562K50	CKSQYB562K50		
C402	CCSQCH330J50	CCSQCH330J50	CCSQCH330J50		
C403	CEA101M10LS	CEA101M10LS	CEA101M10LS		
C404	CKSQYB823K25	CKSQYB823K25	CKSQYB823K25		

Tuner Amp Unit(1/2)

Circuit Symbol & No.	1400/X1M/UC Part No.	1300/X1M/EW 1400/X1M/IT Part No.	1300SDK/X1M/GR Part No.
IC601	PDR025A	PDR026A	PDR026A
IC701			LA2220
IC702			NJM4558M
X701			CSS1022
Q701			2SC1740S
Q702			DTC124TS
EF951		CCG1003	CCG1003
FM/AM Tuner Unit	CWE1417	CWE1416	CWE1416
R527,528	RD1/4PU162J	RD1/4PU272J	RD1/4PU272J
R604,712			RD1/4PU472J
R631	RD1/4PU472J	RD1/4PU472J	
R701			RN1/10SE182D
R702			RN1/10SE473D
R703,714			RD1/4PU473J
R704			RD1/4PU222J
R705,715			RD1/4PU103J
R706			RD1/4PU123J
R707			RD1/4PU684J
R708,719			RD1/4PU153J

Tuner Amp Unit(2/2)

	1400/X1M/UC	1300/X1M/EW 1400/X1M/IT	1300SDK/X1M/GR
Circuit Symbol & No.	Part No.	Part No.	Part No.
R709			RS1/10S682J
R710			RD1/4PU152J
R711			RS1/10S564J
R713			RS1/10S823J
R717,718			RD1/4PU104J
R720			RN1/4PC1600D
C525	CKSYB473K16	CKSYB223K25	CKSYB223K25
C526	CKSQYB473K16	CKSQYB223K25	CKSQYB223K25
C701			CEAS470M10
C702			CEA100M16LL
C703,704			CQMA102J50
C705			CKSQYB222K50
C706,712,715,716			CKSQYB473K16
C707			CKSYB223K25
C708			CEA470M10LL
C709			CEAR33M50LL
C710			CQMA683J50
C711			CEA010M50LL
C713,714			CFTLA473J50
C717,718			CKSQYB102K50

- The KEH-1300/X1M/EW, KEH-1300SDK/X1M/GR, KEH-1311/X1M/UC and KEH-1100/X1M/UC Key Board Unit Parts Lists enumerate the parts which differ from those enumerated in the KEH-1400/X1M/UC, KEH-1400/X1M/IT, KEH-1450/X1M/ES and KEH-1150/X1M/ES Parts List only. The parts other than those enumerated in the former are identical with those in the latter, to which you are requested to refer, accordingly. The KEH-1400/X1M/UC, KEH-1400/X1M/IT, KEH-1450/X1M/ES and KEH-1150/X1M/ES Key Board Unit Parts List is given on page 14.

Key Board Unit

	1400/X1M/UC(CWM4585) 1400/X1M/IT(CWM4711) 1450/X1M/ES(CWM4594) 1150/X1M/ES(CWM4597)	1300/X1M/EW(CWM4579) 1300SDK/X1M/GR(CWM4582) 1311/X1M/UC(CWM4588) 1100/X1M/UC(CWM4591)
Circuit Symbol & No.	Part No.	Part No.
IL 901,902,903	CEL1470	CEL1469

- The KEH-1300/X1M/EW, KEH-1300SDK/X1M/GR and KEH-1400/X1M/IT FM/AM Tuner Unit Parts Lists enumerate the parts which differ from those enumerated in the KEH-1400/X1M/UC, KEH-1450/X1M/ES, KEH-1311/X1M/UC, KEH-1100/X1M/UC and KEH-1150/X1M/ES Parts List only. The parts other than those enumerated in the former are identical with those in the latter, to which you are requested to refer, accordingly. The KEH-1400/X1M/UC, KEH-1450/X1M/ES, KEH-1311/X1M/UC, KEH-1100/X1M/UC and KEH-1150/X1M/ES FM/AM Tuner Unit Parts List is given on page 14.

FM/AM Tuner Unit

	1400/X1M/UC, 1100/X1M/UC, 1450/X1M/ES, 1150/X1M/ES, 1311/X1M/UC	1300/X1MEW, 1300SDK/X1M/GR 1400/X1M/IT
	CWE1417	CWE1416
Circuit Symbol & No.	Part No.	Part No.
AR 1		DSP-201M
CF 51,52,53	CTF1290	CTF1292
D 1,2	RD39JS	
L 6		LCTBR15K608
Q 154		DTC124EU
Q 165		2SC2412KLN
TC 1		CCL1042
R 1	RS1/16S225J	RS1/16S0R0J
R 2	RS1/16S225J	
R 62	RS1/16S273J	RS1/16S393J
R 154		RS1/16S104J
R 163	RS1/16S223J	RS1/16S222J
R 243	RS1/16S183J	RS1/16S123J
R 244	RS1/16S472J	RS1/16S103J
C 15	CCSRCH060D50	
C 26	CCSRCH101J50	
C 60	CKSRYB102K50	
C 63	CEAR22M50LL	CEAR15M50LL
C 245	CKSRYB183K25	CKSRYB123K25

9. BLOCK DIAGRAM



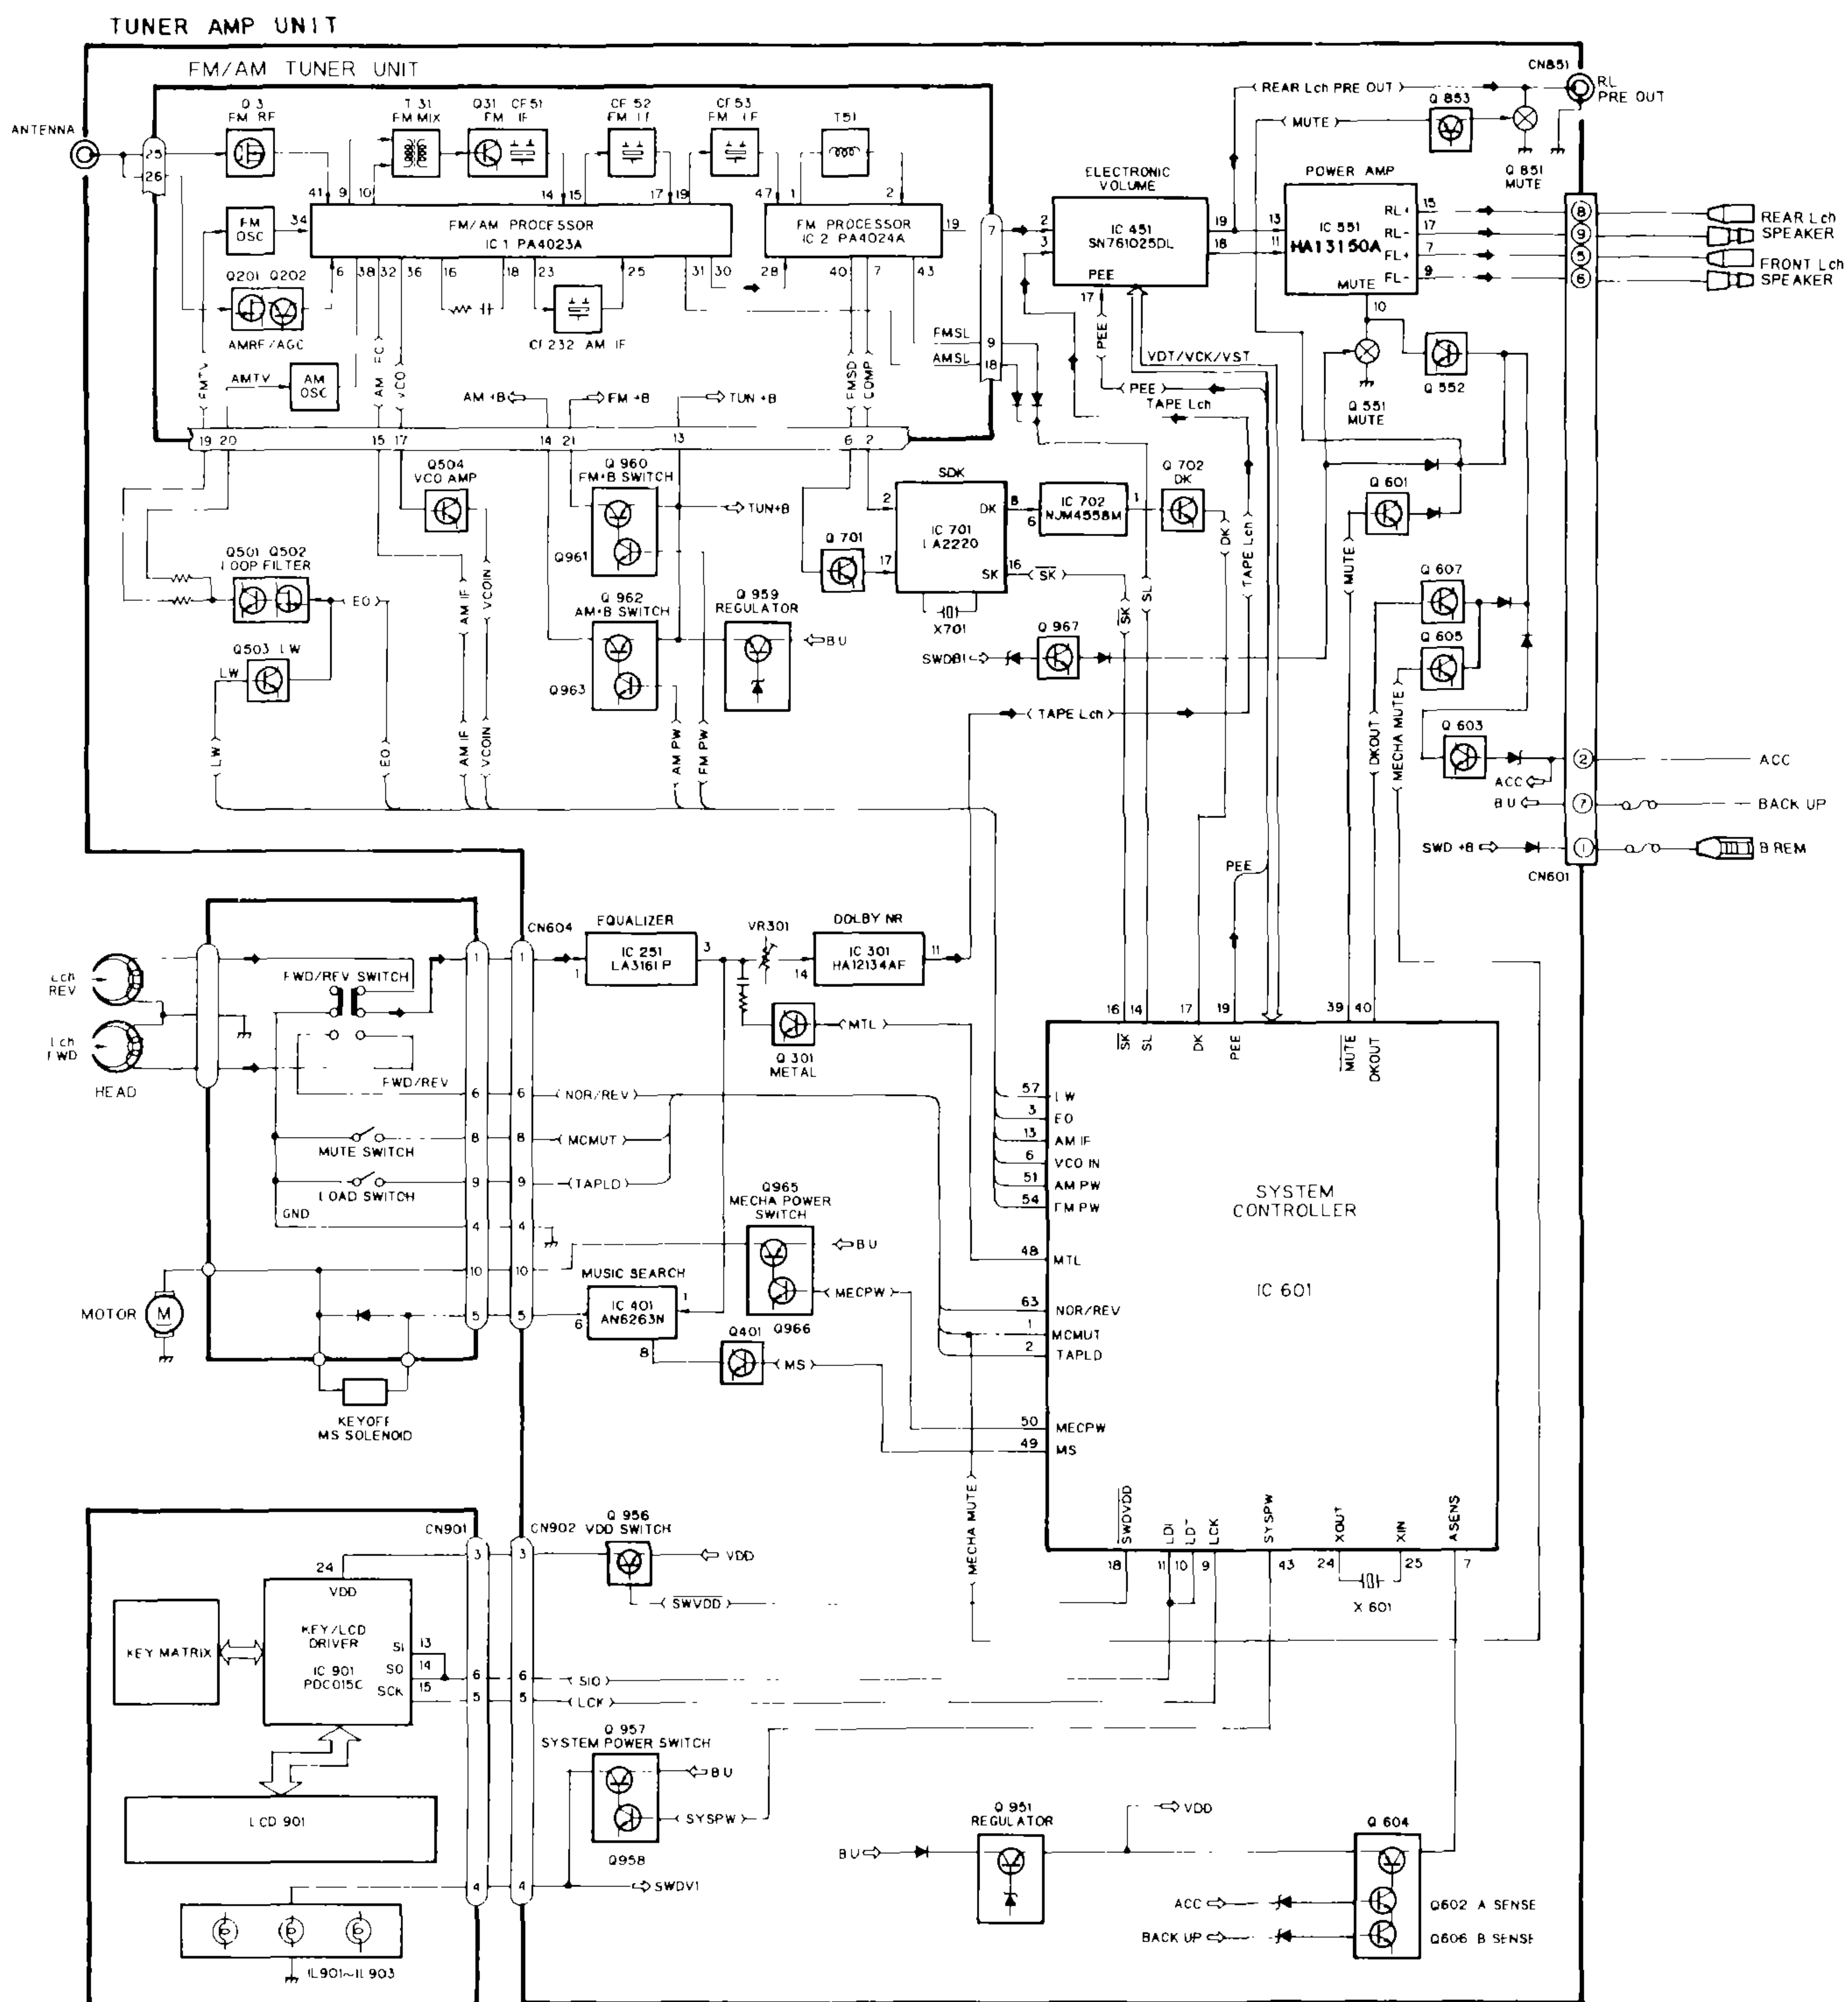


Fig. 5

10. CONNECTION DIAGRAM

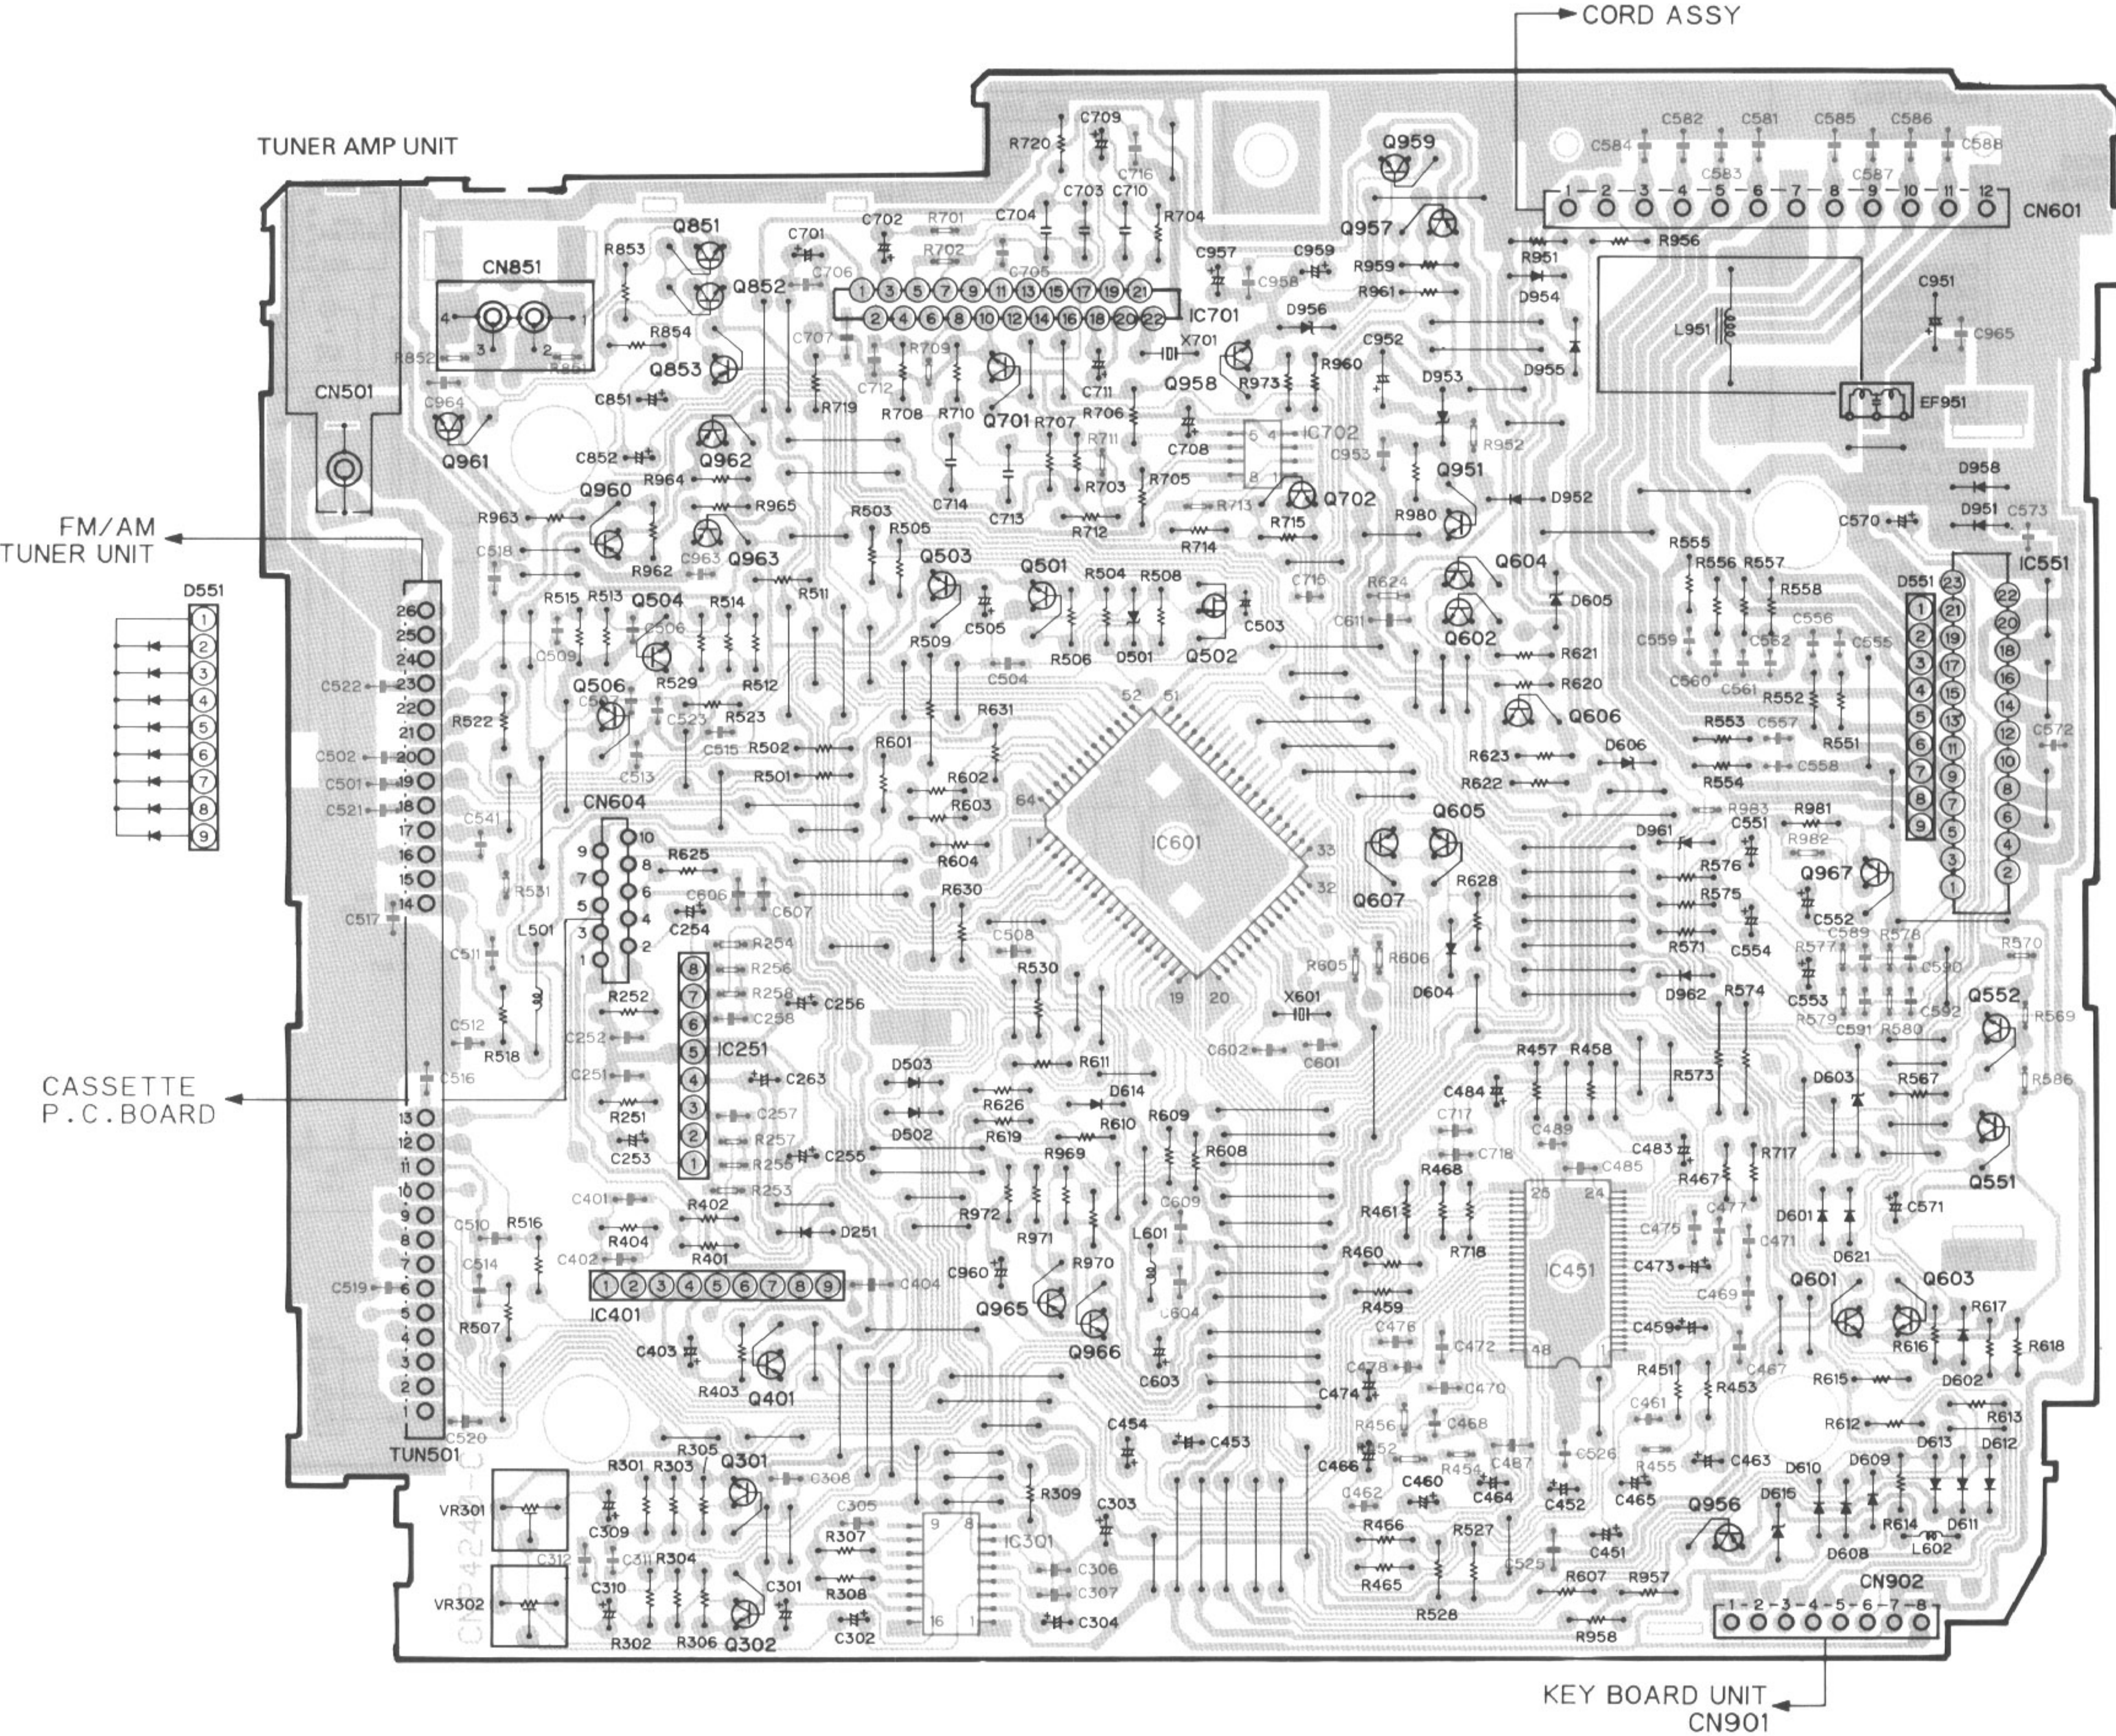

ADJ	IC, Q
Q959	
Q851 Q957	
Q852 IC701	
Q853 Q701 Q958	
Q961 Q962 IC702	
Q702 Q951	
Q960 Q963	
Q503 Q501 Q604	
Q502 Q602	
Q504	
Q506 Q606 IC551	
IC601 Q607 Q605	
Q967	
IC251 Q552	
Q551	
IC401 Q965 IC451	
Q966 Q601 Q603	
Q401	
VR301	Q301
IC301	Q956
VR302	Q302

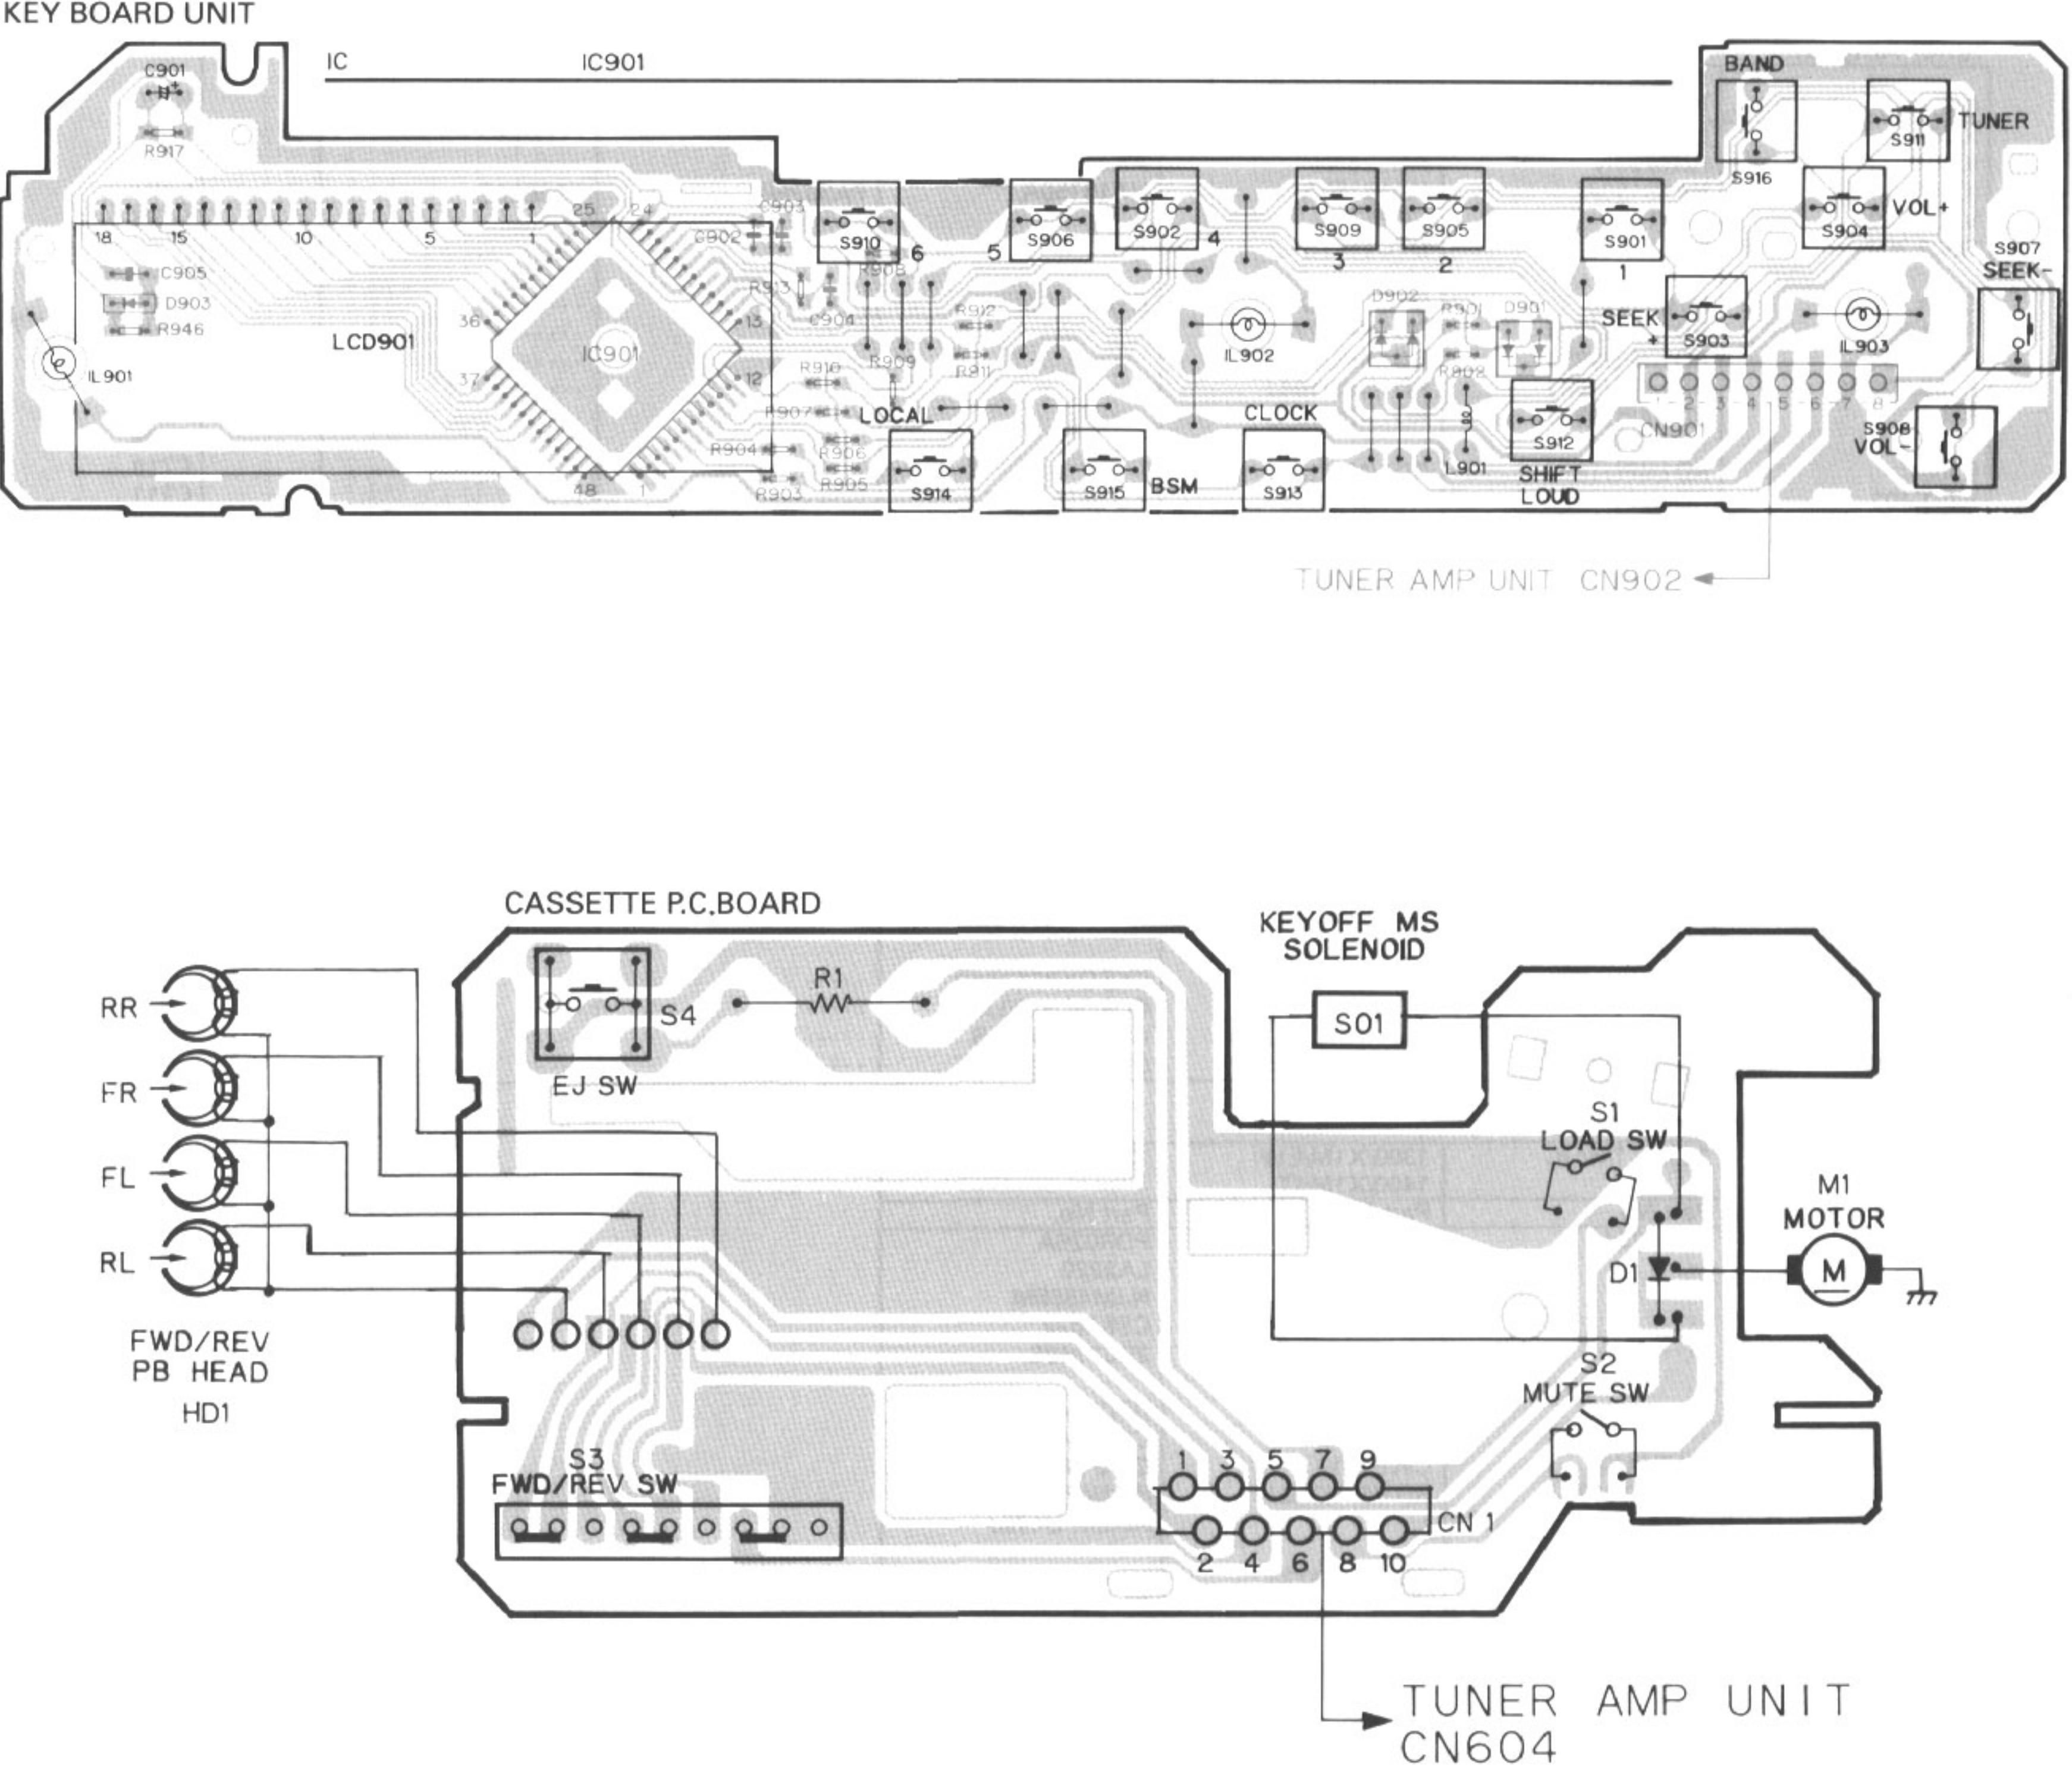

NOTE:
The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.

Fig. 6

11. SCHEMATIC CIRCUIT DIAGRAM


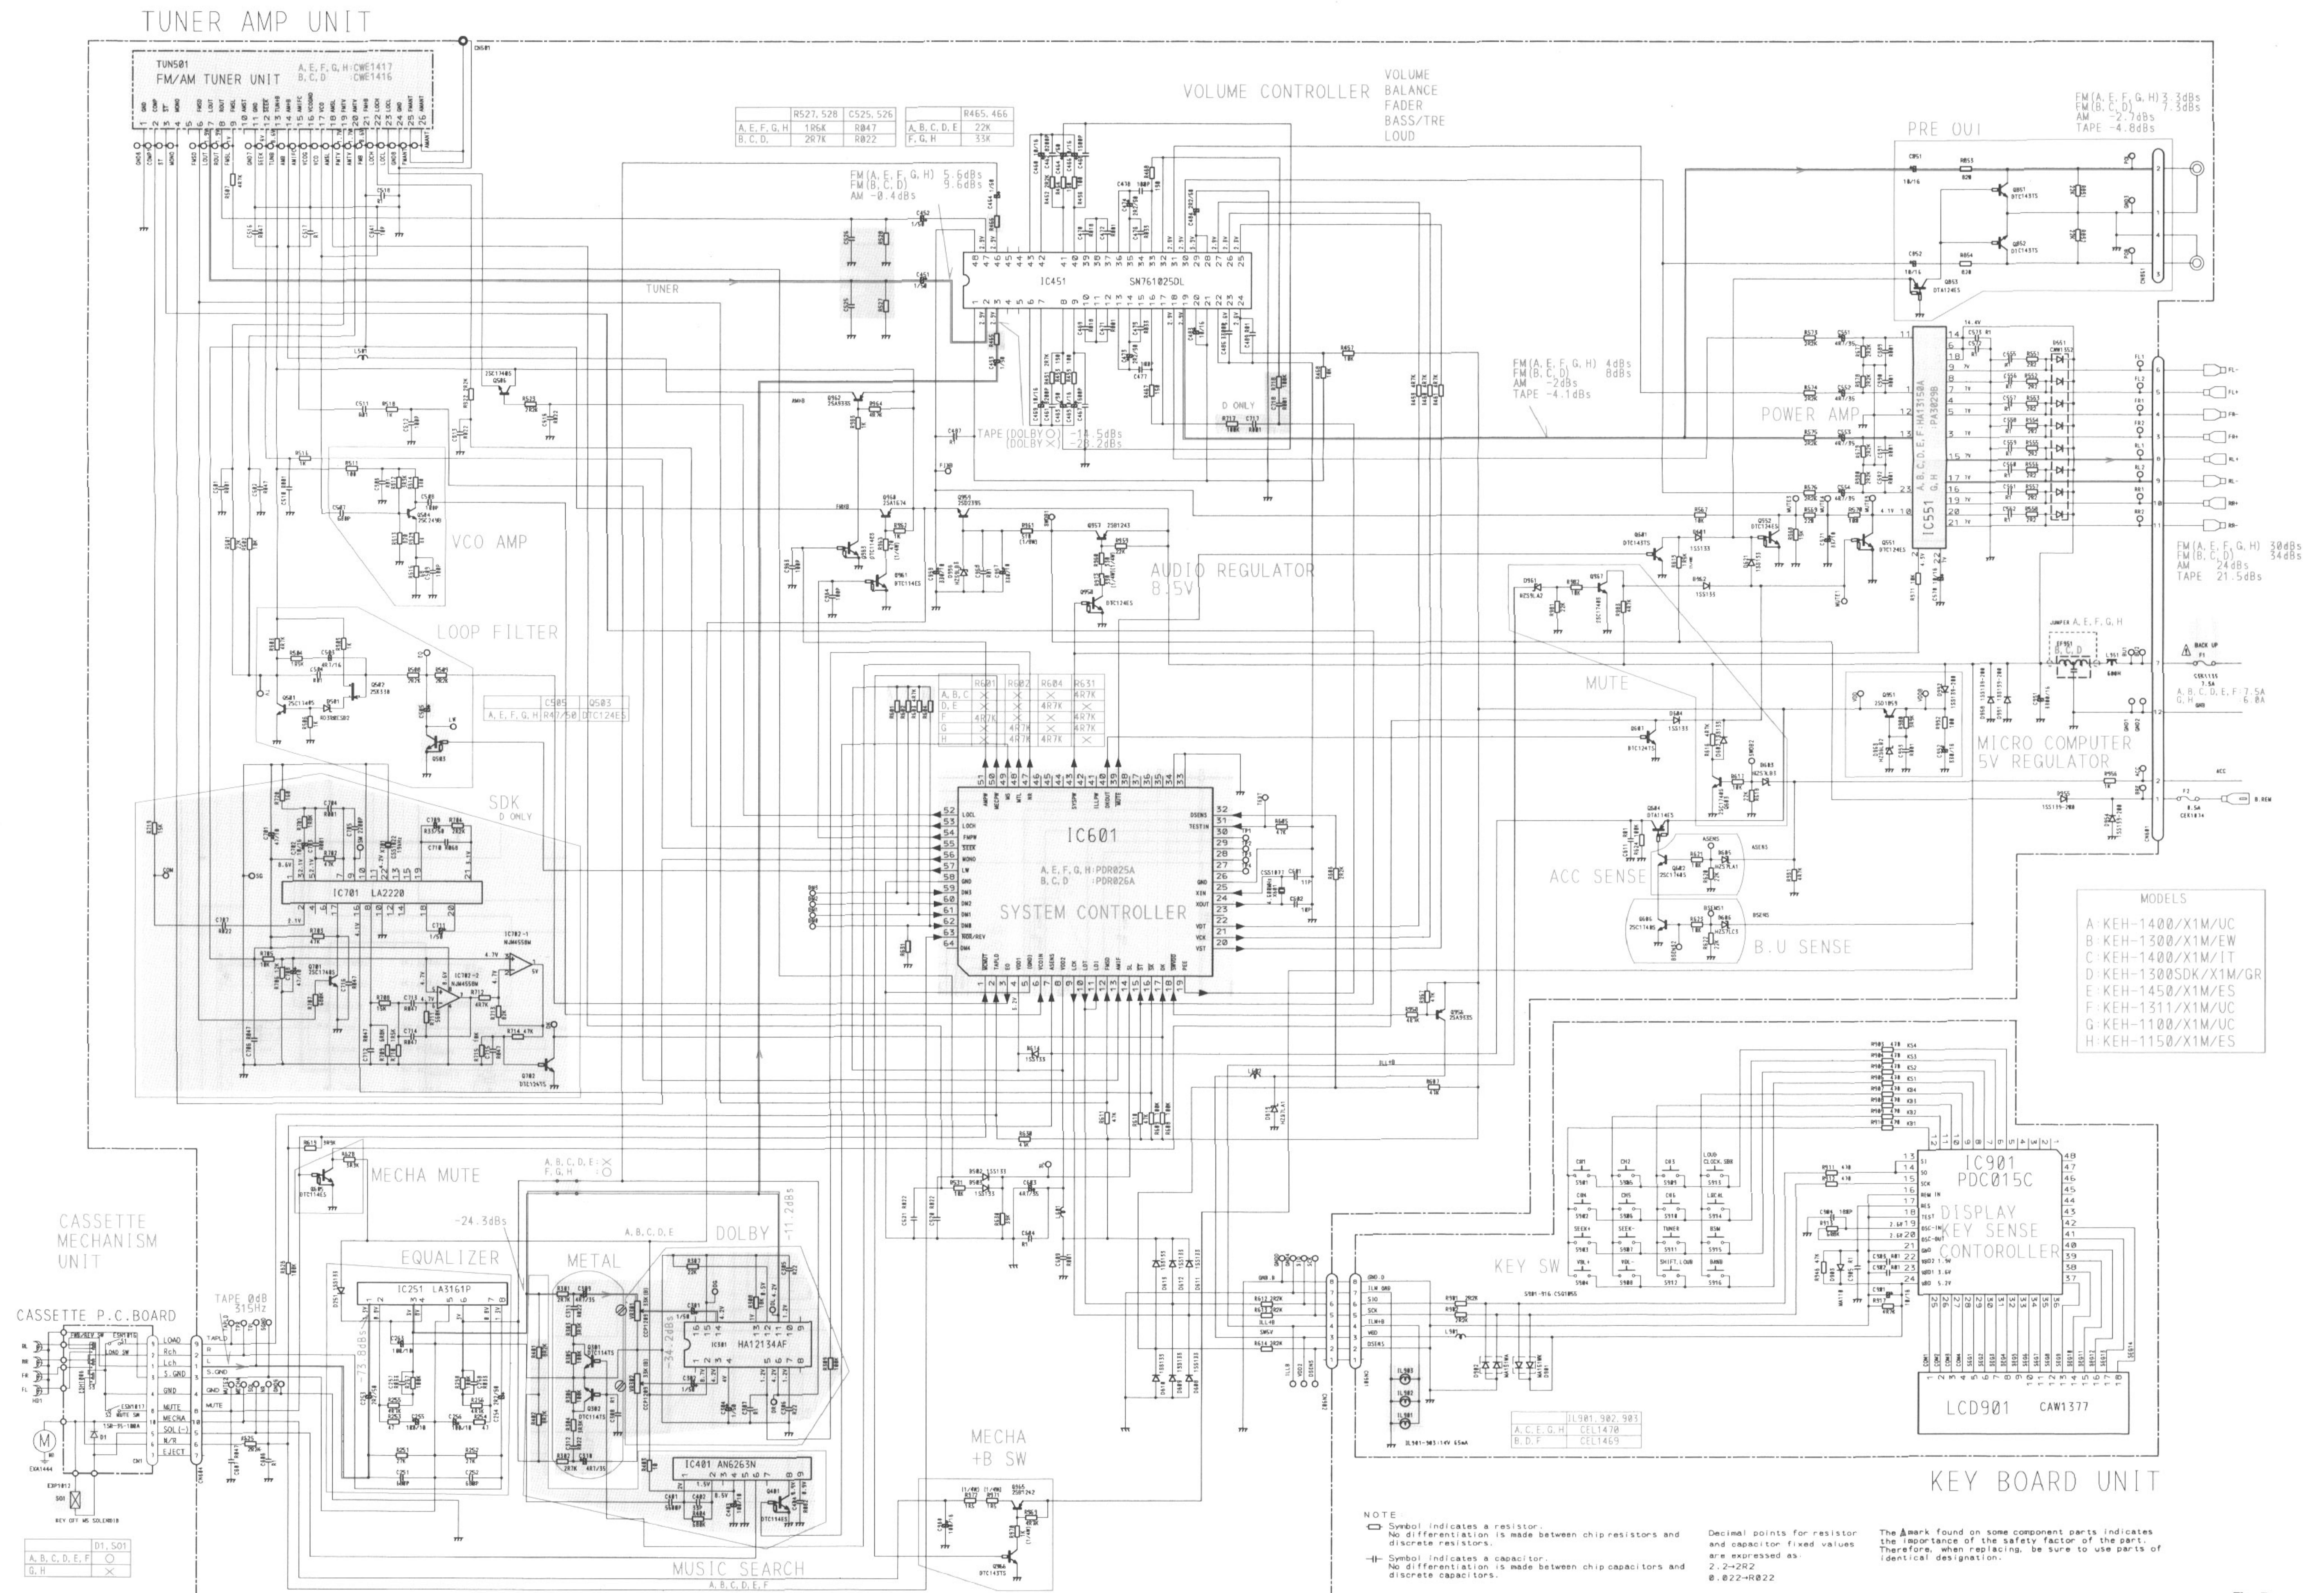


Fig. 7

12. CIRCUIT DIAGRAM AND PATTERN


12.1 FM/AM TUNER UNIT

● Connection diagram

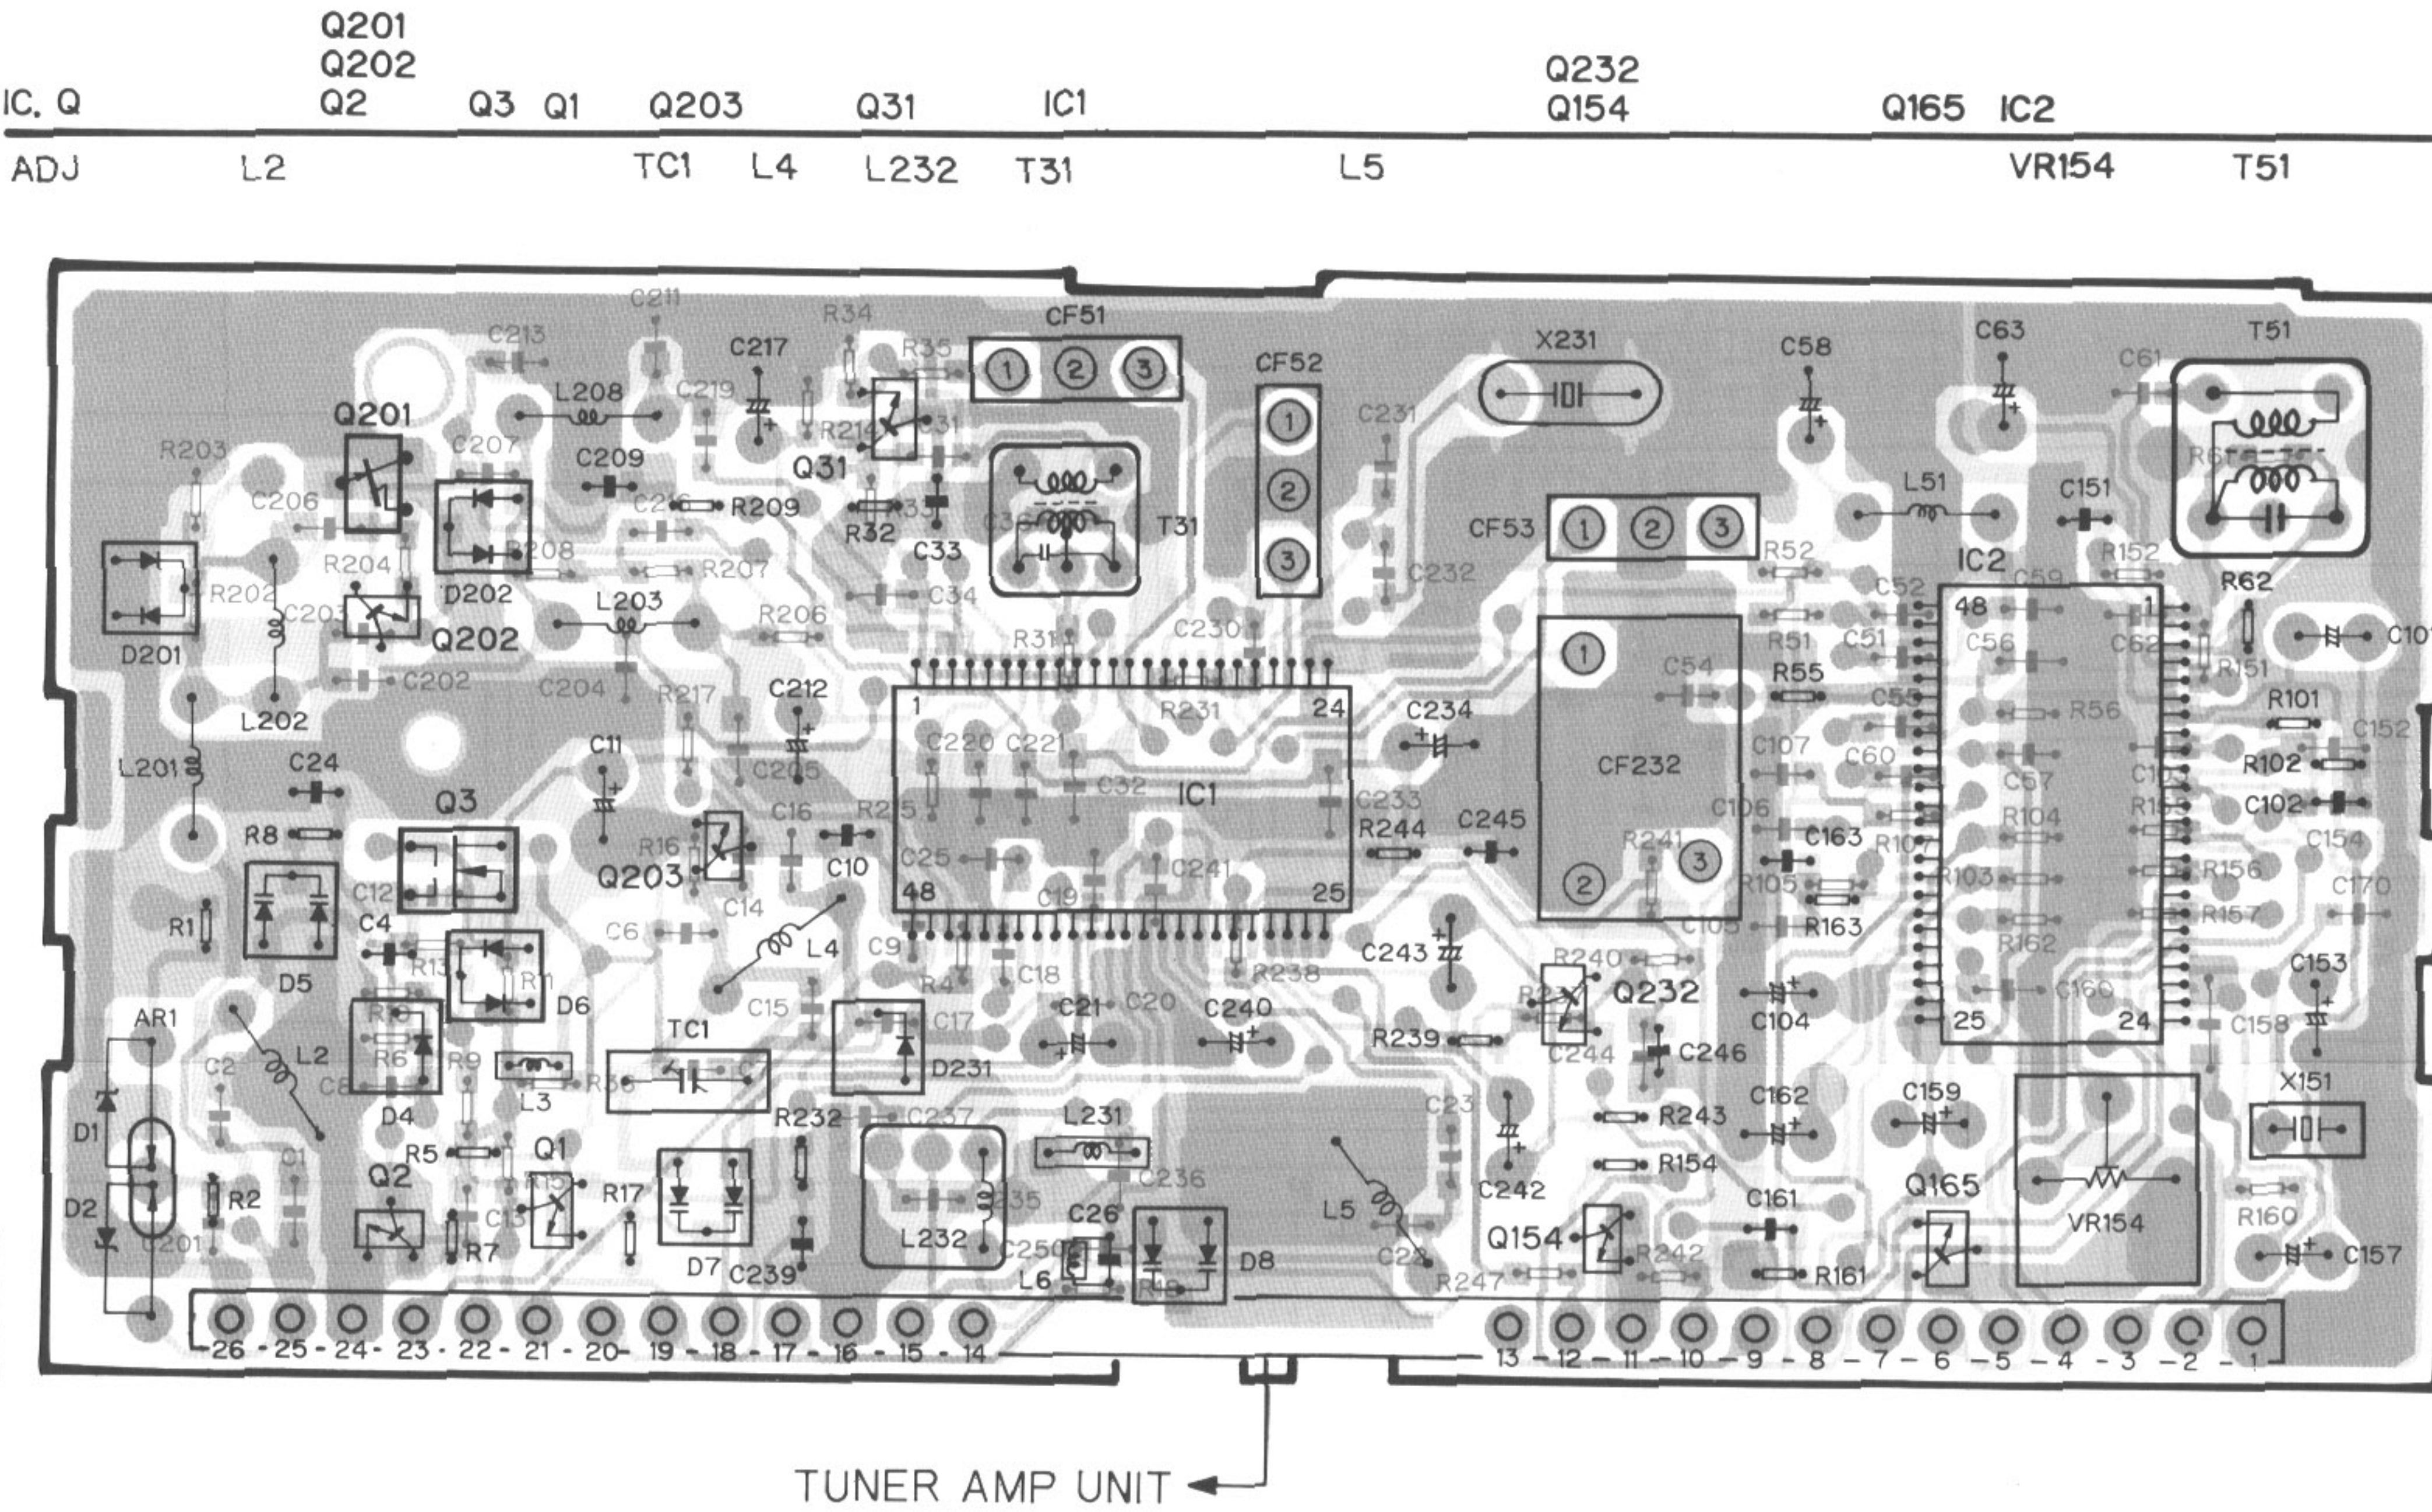

NOTE:
The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.

● Circuit diagram
(KEH-1400/X1M/UC, 1450/X1M/ES, 1311/X1M/UC, 1100/X1M/UC, 1150/X1M/ES)

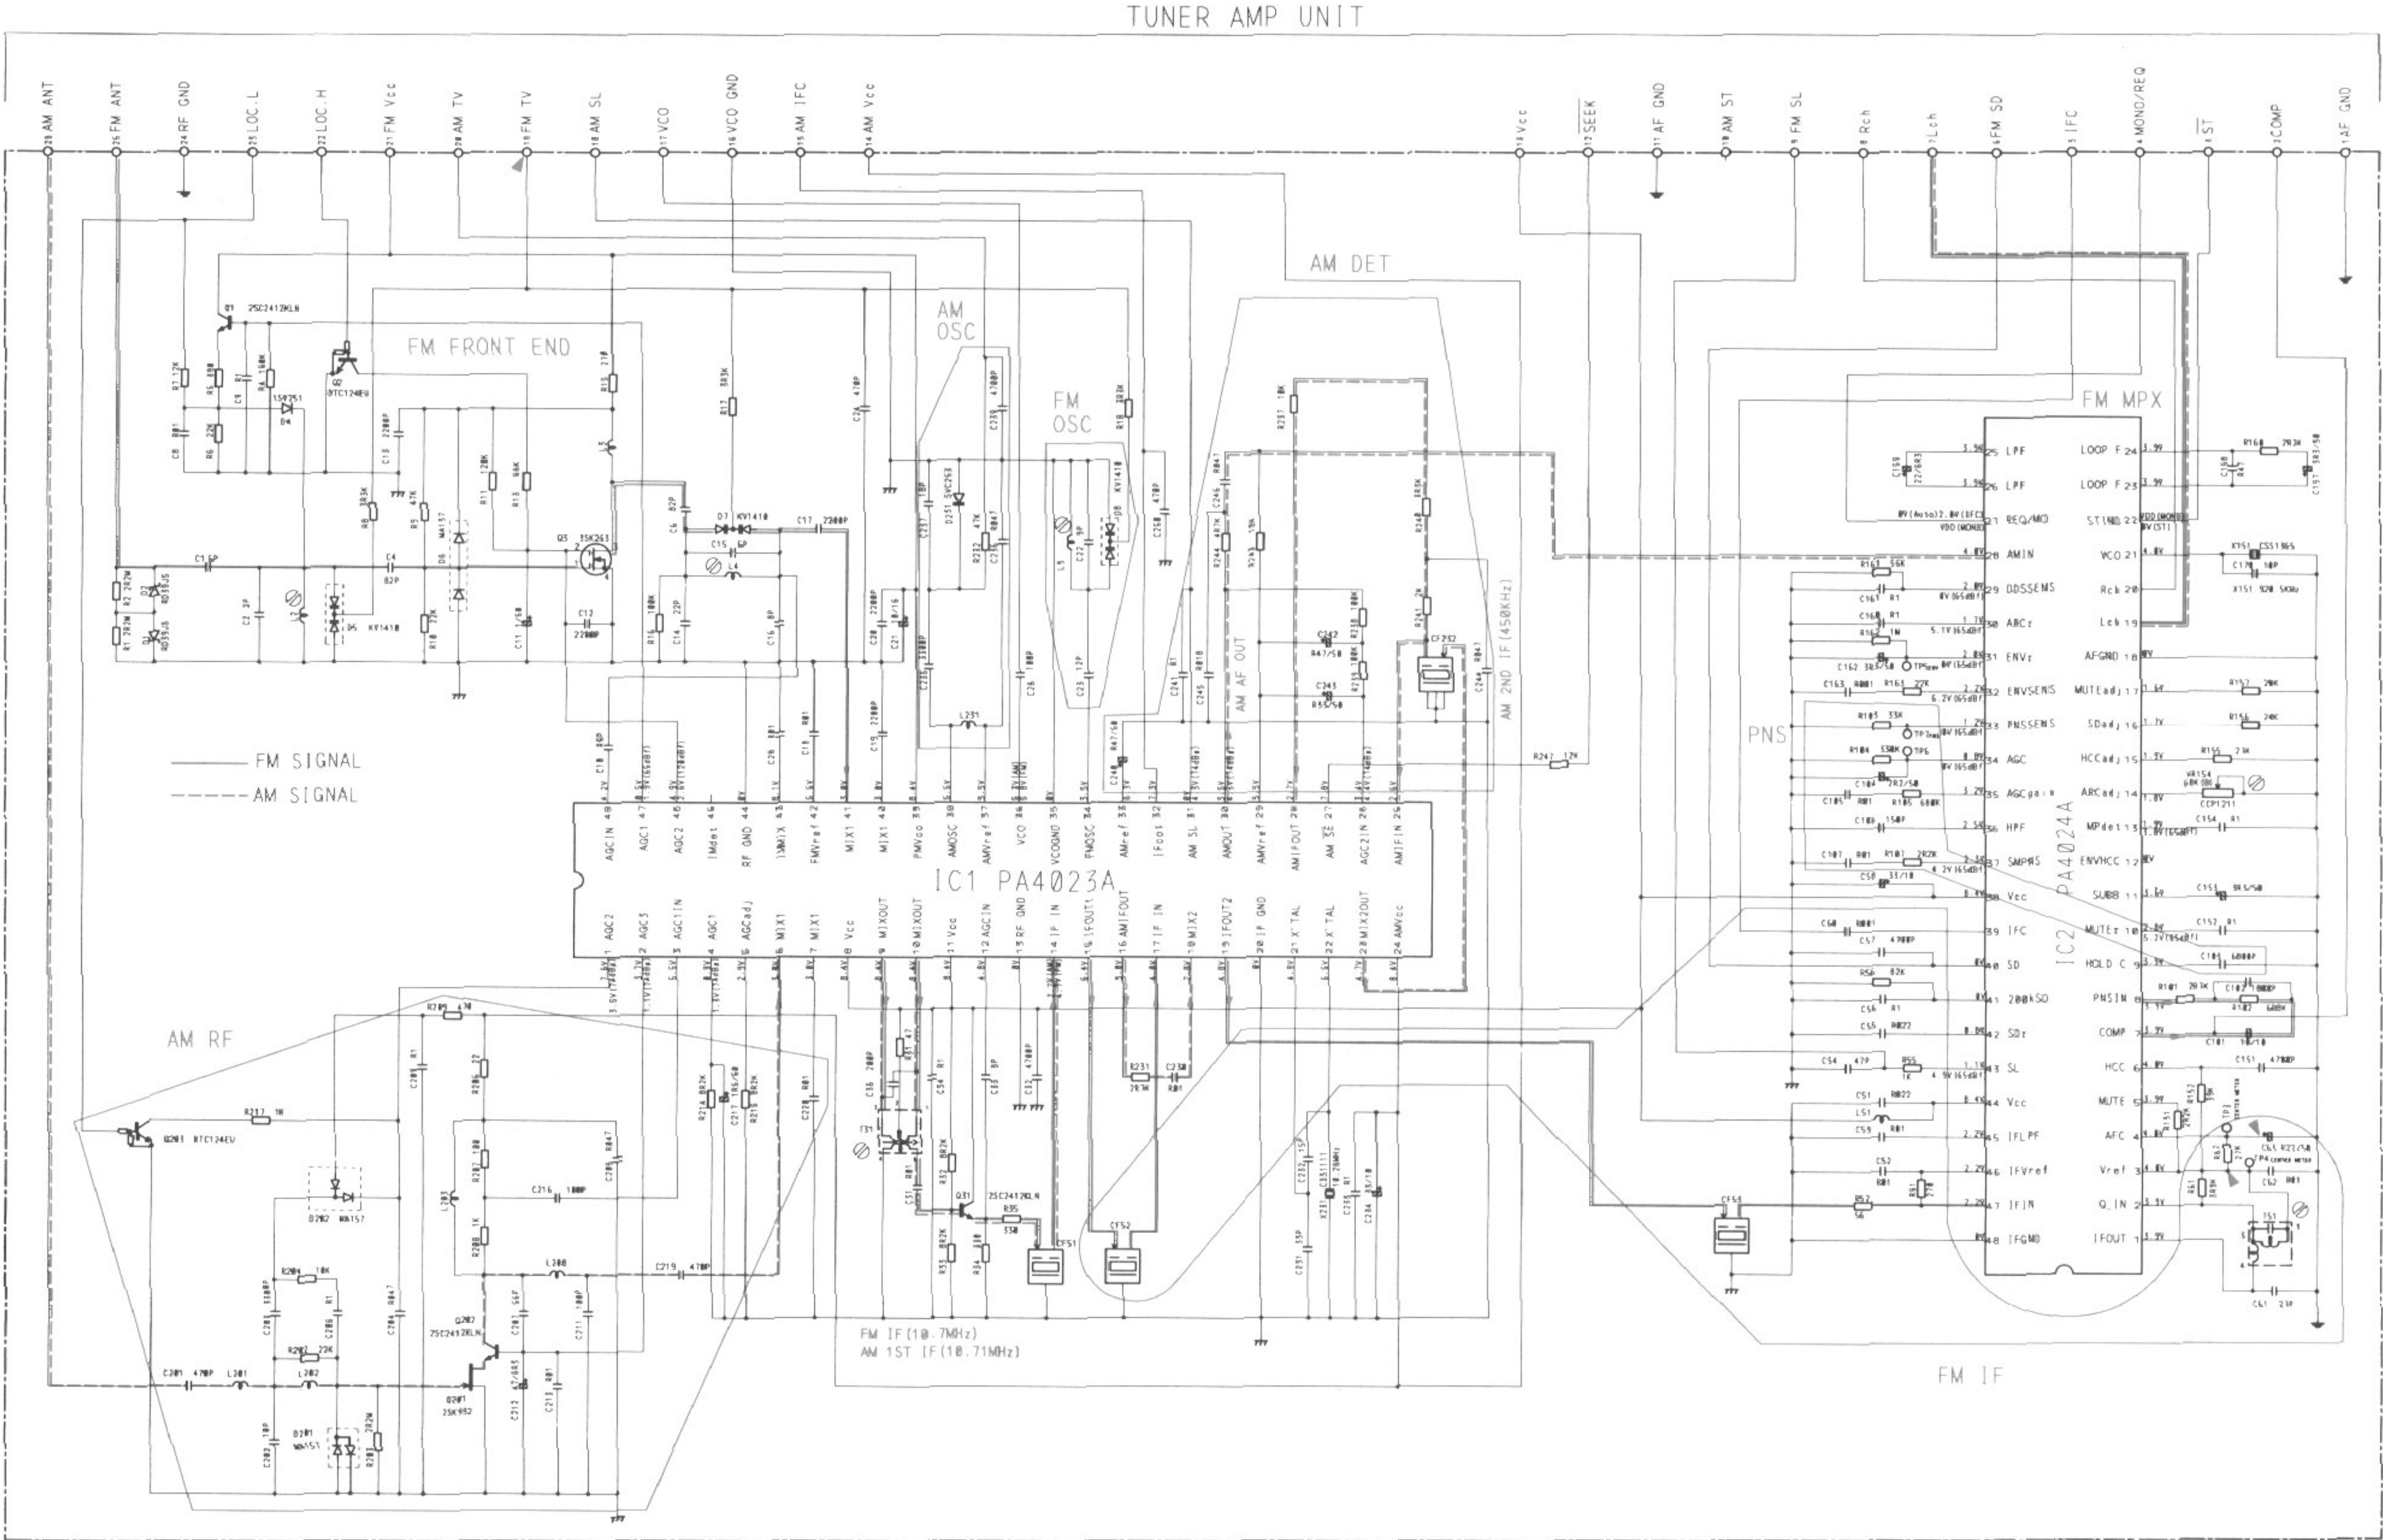

● Circuit diagram

(KEH-1300/X1M/EW, 1300SDK/X1M/GR, 1400/X1M/IT)

TUNER AMP UNIT

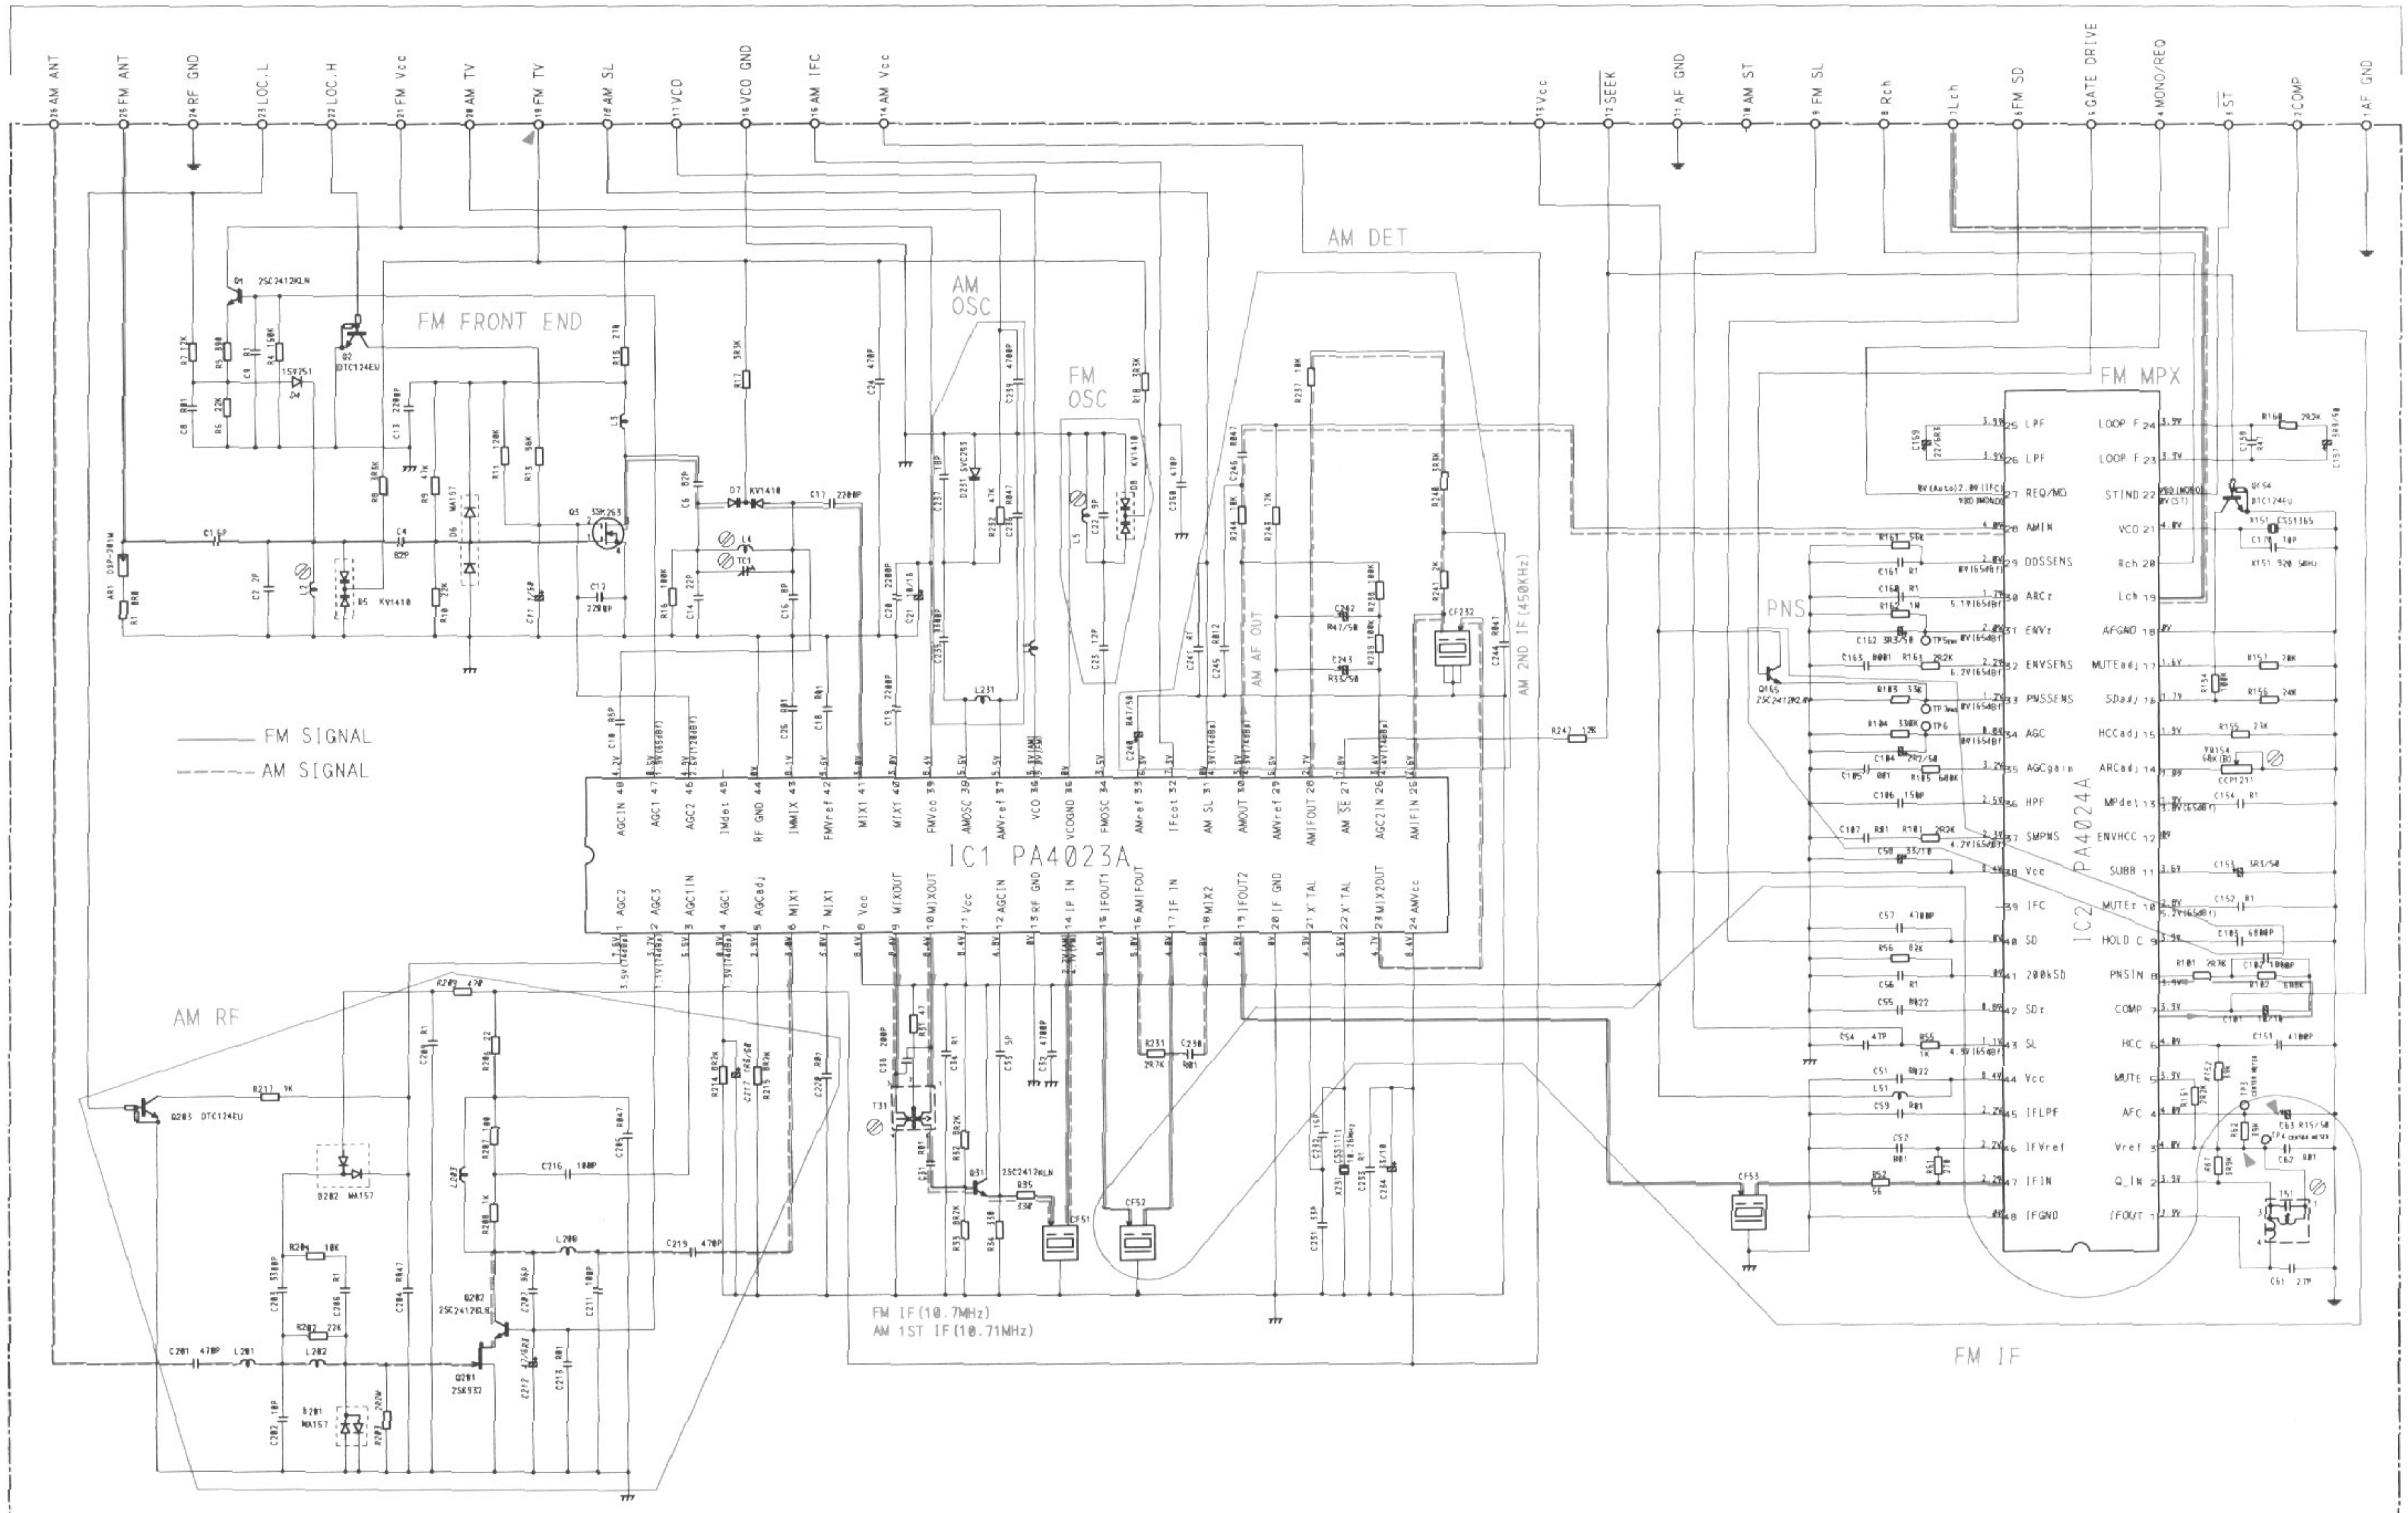


Fig. 10

13. EXPLODED VIEW AND PARTS LIST

13.1 CHASSIS

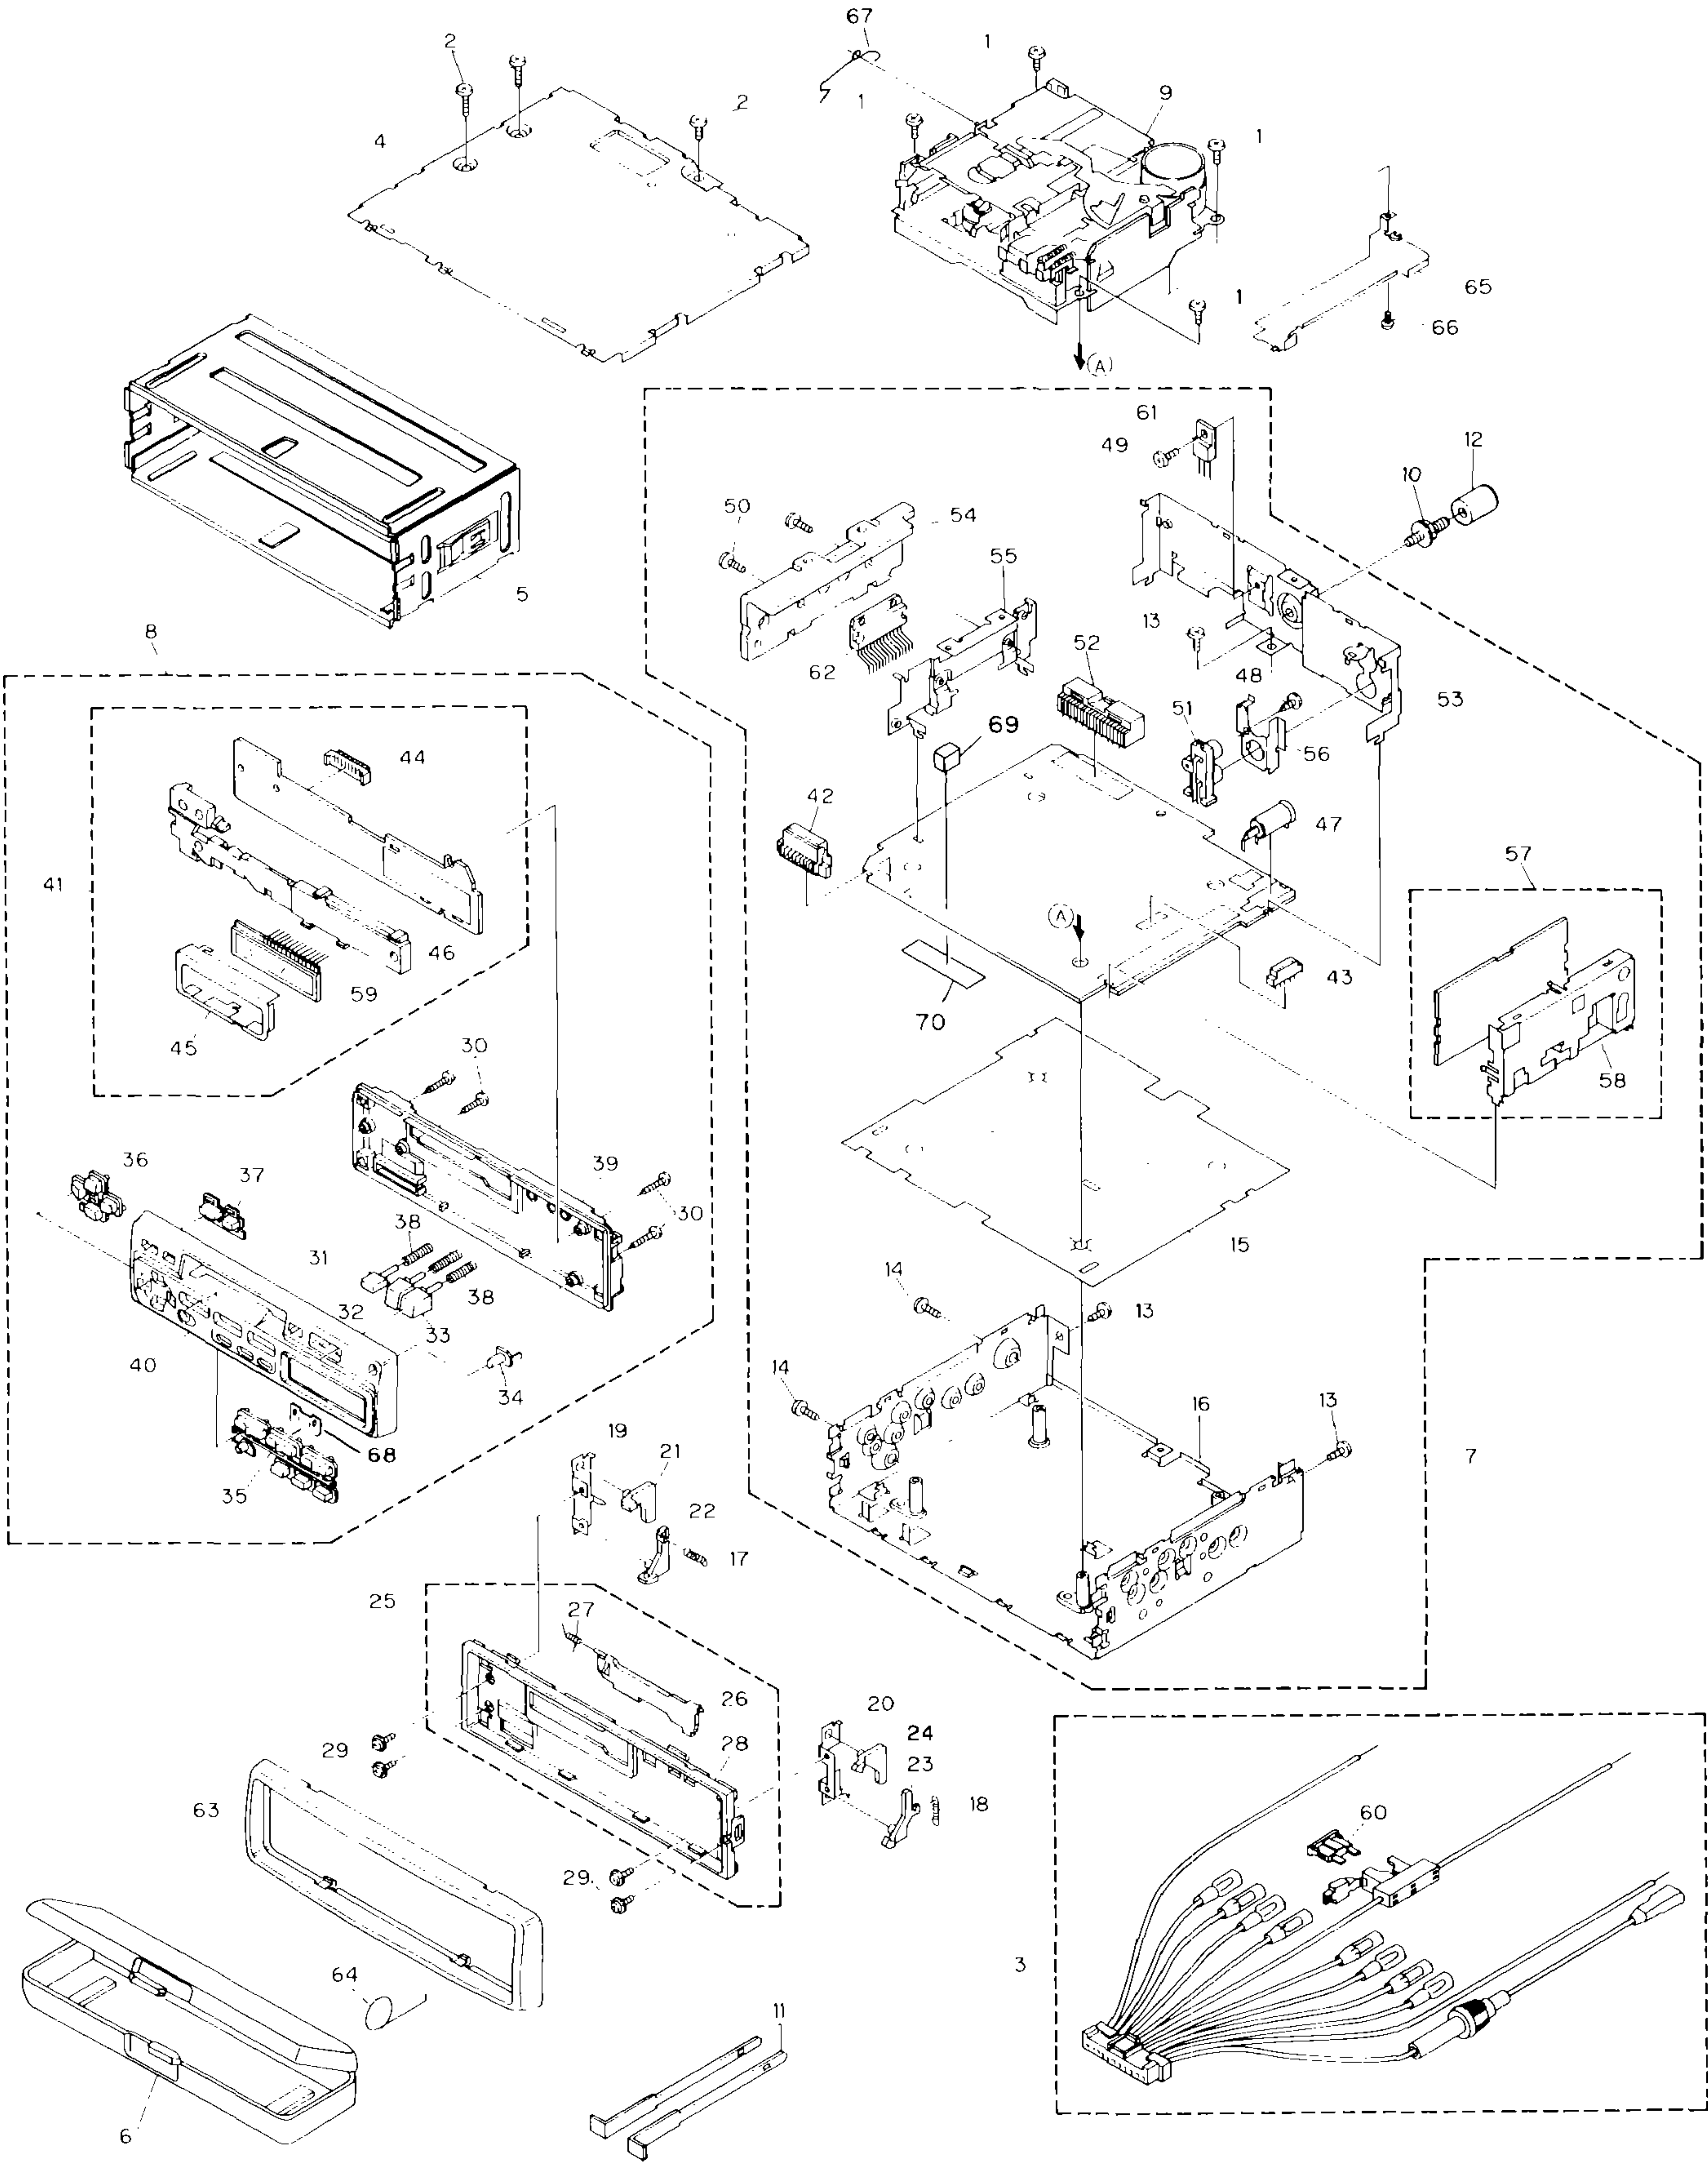


Fig. 11

NOTE:

● Parts marked by “*” are generally unavailable because they are not in our Master Spare Parts List.

● **Parts List(KEH-1400/X1M/UC)**

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BSZ26P050FMC	46	Conductor	CNV4442
2	Screw	BSZ30P100FMC	47	Antenna Jack(CN501)	CKX1006
3	Cord Assy	CDE4951	48	Screw	BPZ26P060FMC
4	Case	CNB2010	49	Screw	BSZ26P060FMC
5	Holder	CNC5394	50	Screw	BSZ26P080FMC
6	Detach Case	CNS3860	51	Pin Jack(CN851)	CKB1028
7	Tuner Amp Assy	CWM4583	52	Plug(CN601)	CKM1226
8	Detach Grille Assy	CXA8545	53	Panel	CNB2014
9	Cassette Mechanism Unit	EXK3435	54	Heat Sink	CNC6217
10	Screw	CBA1304	55	Holder	CNC6372
11	Handle	CNC5395	56	Holder	CNC6531
12	Bush	CNV3930	57	FM/AM Tuner Unit	CWE1417
13	Screw	BSZ30P060FMC	58	Holder	CNC6555
14	Screw	BSZ30P100FMC	59	LCD	CAW1377
15	Insulator	CNM4625	60	Auto Fuse(7.5A)	CEK1135
16	Chassis Unit	CXA8558	61	Transistor(Q959)	2SD2395
17	Spring	CBH1834	62	IC(IC551)	HA13150A
18	Spring	CBH1835	63	Panel	CNS3862
19	Bracket	CNC6135	64	Spring	CBH1650
20	Bracket	CNC6136	65	Cover	ENC1452
21	Arm	CNV4358	66	Screw	BSZ23P050FMC
22	Arm	CNV4359	67	Spring	EBH1585
23	Arm	CNV4437	68		
24	Arm	CNV4676	69	Spacer	CNM4919
25	Panel Unit	CXA8605	70	Spacer	CNM4921
26	Door	CAT1762			
27	Spring	CBH1838			
* 28	Panel	CNS3768			
29	Screw	PMS20P030FZK			
30	Screw	BPZ20P120FZK			
31	Button(≡)	CAC4613			
32	Button(◀)	CAC4614			
33	Button(▶)	CAC4615			
34	Button(⏏)	CAC4612			
35	Button(1,2,3,4,5,6,S)	CAC4616			
36	Button(◀,▶,+, -)	CAC4617			
37	Button(TUNER,BAND)	CAC4714			
38	Spring	CBH1836			
39	Cover	CNS3822			
40	Grille	CNS3832			
41	Key Board Unit	CWM4585			
42	Connector(CN902)	CKS2884			
43	Connector(CN604)	CKS3362			
44	Connector(CN901)	CKS2883			
45	Holder	CNC6314			

- The KEH-1300/X1M/EW, KEH-1300SDK/X1M/GR, KEH-1400/X1M/IT, KEH-1450/X1M/ES, KEH-1311/X1M/UC, KEH-1100/X1M/UC and KEH-1150/X1M/ES Parts Lists enumerate the parts which differ from those enumerated in the KEH-1400/X1M/UC Parts List only. The parts other than those enumerated in the former are identical with those in the latter, to which you are requested to refer, accordingly. The KEH-1400/X1M/UC Parts List is given on page 31.

Mark No.	Description	1400/X1M/UC	1450/X1M/ES	1311/X1M/UC	1100/X1M/UC	1150/X1M/ES
		Part No.	Part No.	Part No.	Part No.	Part No.
3	Cord Assy	CDE4951	CDE4951	CDE4951	CDE4908	CDE4908
7	Tuner Amp Assy	CWM4583	CWM4592	CWM4586	CWM4589	CWM4595
8	Detach Grille Assy	CXA8545	CXA8551	CXA8547	CXA8549	CXA8553
9	Cassette Mechanism Unit	EXK3435	EXK3435	EXK3435	EXK3415	EXK3415
25	Panel Unit	CXA8605	CXA8605	CXA8605	CXA8845	CXA8845
40	Grille	CNS3832	CNS3834	CNS3833	CNS3835	CNS3836
41	Key Board Unit	CWM4585	CWM4594	CWM4588	CWM4591	CWM4597
60	Auto Fuse(7.5A)	CEK1135	CEK1135	CEK1135		
62	IC(IC551)	HA13150A	HA13150A	HA13150A	PA3029B	PA3029B

Mark No.	Description	1400/X1M/UC	1300/X1M/EW	1400/X1M/IT	1300SDK/X1M/GR
		Part No.	Part No.	Part No.	Part No.
3	Cord Assy	CDE4951	CDE4950	CDE4950	CDE4950
7	Tuner Amp Assy	CWM4583	CWM4577	CWM4577	CWM4580
8	Detach Grille Assy	CXA8545	CXA8538	CXA8540	CXA8542
16	Chassis Unit	CXA8558	CXA8558	CXA8558	CXA8662
25	Panel Unit	CXA8605	CXA8837	CXA8838	CXA8837
31	Button(△)	CAC4613	CAC4531	CAC4613	CAC4531
32	Button(◀)	CAC4614	CAC4532	CAC4614	CAC4532
33	Button(▶)	CAC4615	CAC4533	CAC4615	CAC4533
34	Button(⬆)	CAC4612	CAC4539	CAC4612	CAC4539
35	Button(1,2,3,4,5,6,S)	CAC4616	CAC4591	CAC4616	CAC4591
36	Button(◀,▶,+, -)	CAC4617	CAC4592	CAC4617	CAC459
37	Button(TUNER,BAND)	CAC4714	CAC4593	CAC4714	CAC4593
39	Cover	CNS3822	CNS3767	CNS3822	CNS3767
40	Grille	CNS3832	CNS3830	CNS3831	CNS3821
41	Key Board Unit	CWM4585	CWM4579	CWM4711	CWM4582
57	FM/AM Tuner Unit	CWE1417	CWE1416	CWE1416	CWE1416
63	Panel	CNS3862			
64	Spring	CBH1650			

13.2 CASSETTE MECHANISM UNIT

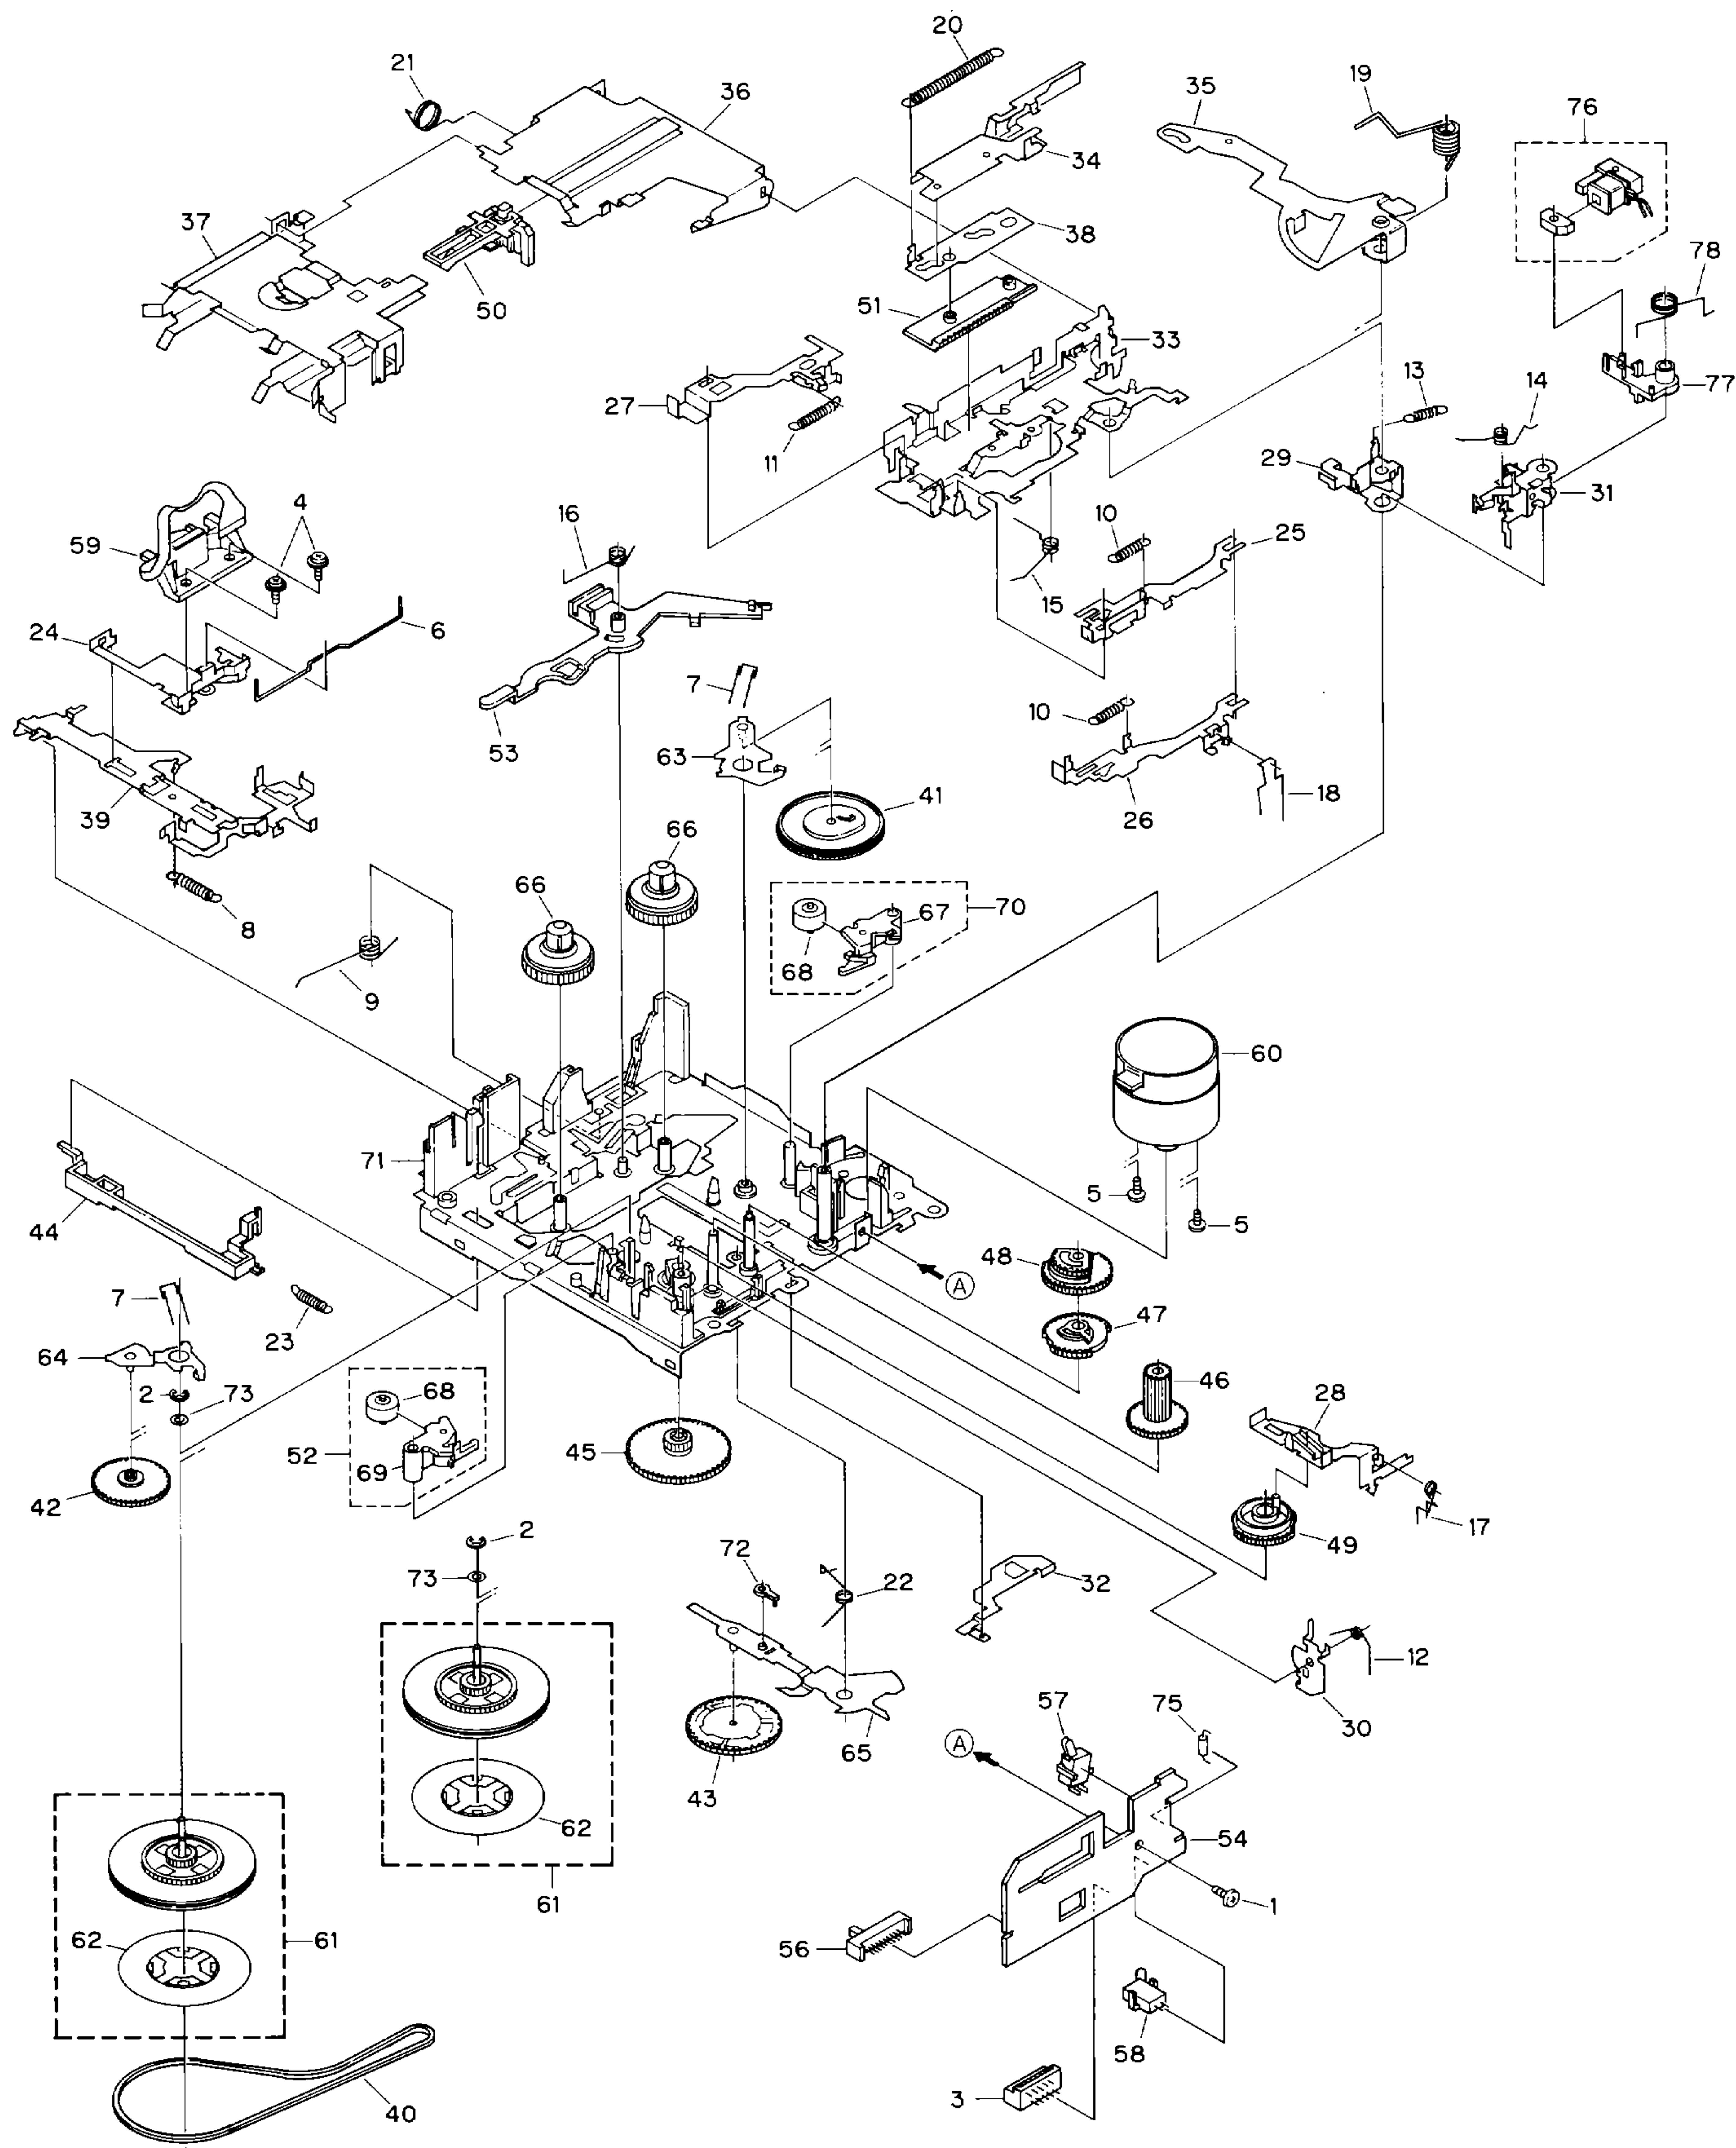


Fig. 12

● Parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BSZ23P050FMC	46	Gear	ENV1475
2	Washer	CBG1003	47	Gear	ENV1493
3	Connector(CN1)	CKS2829	48	Gear	ENV1477
4	Screw(M2x5)	EBA1028	49	Gear	ENV1478
5	Screw(M2x2.5)	EBA1037	50	Lever	ENV1480
6	Spring	EBH1554	51	Lever	ENV1487
7	Spring	EBH1555	52	Roller Unit	EXA1461
8	Spring	EBH1556	53	Arm	ENV1489
9	Spring	EBH1557	54	P.C.Board	ENP1148
10	Spring	EBH1558	55		
11	Spring	EBH1559	56	Switch(FWD/REV)(S3)	ESH1006
12	Spring	EBH1560	57	Switch(Load)(S1)	ESN1016
13	Spring	EBH1561	58	Switch(Mute)(S2)	ESN1017
14	Spring	EBH1562	59	Head Assy(HD1)	EXA1443
15	Spring	EBH1563	60	Motor Unit(M1)	EXA1444
16	Spring	EBH1564	61	Flywheel Unit	EXA1468
17	Spring	EBH1565	62	Plate	ENC1423
18	Spring	EBH1566	63	Arm Unit	EXA1447
19	Spring	EBH1567	64	Arm Unit	EXA1448
20	Spring	EBH1568	65	Arm Unit	EXA1449
21	Spring	EBH1569	66	Reel Unit	EXA1450
22	Spring	EBH1571	67	Pinch Holder	ENV1466
23	Spring	EBH1579	68	Pinch Roller	ENV1488
24	Head Base	ENC1428	69	Pinch Holder	ENV1467
25	Lever	ENC1429	70	Roller Unit	EXA1460
26	Lever	ENC1430	71	Chassis Unit	EXA1465
27	Lever	ENC1431	72	Service Arm	EXX1048
28	Lever	ENC1432	73	Washer	HBF-179
29	Arm	ENC1433	74		
30	Arm	ENC1434	75	Diode(D1)	1SR-35-100A (Except for KEH-1100/X1M/UC, 1150/X1M/ES)
31	Arm	ENC1435	76	Solenoid(SO1)	EXP1012 (Except for KEH-1100/X1M/UC, 1150/X1M/ES)
32	Arm	ENC1451	77	Arm	ENV1491 (Except for KEH-1100/X1M/UC, 1150/X1M/ES)
33	Bracket	ENC1437	78	Spring	EBH1582 (Except for KEH-1100/X1M/UC, 1150/X1M/ES)
34	Lever	ENC1438			
35	Arm	ENC1439			
36	Frame	ENC1440			
37	Holder	ENC1441			
38	Lever	ENC1446			
39	Lever	ENC1454			
40	Belt	ENT1027			
41	Gear	ENV1469			
42	Gear	ENV1470			
43	Gear	ENV1471			
44	Lever	ENV1472			
45	Gear	ENV1474			

14. PACKING METHOD

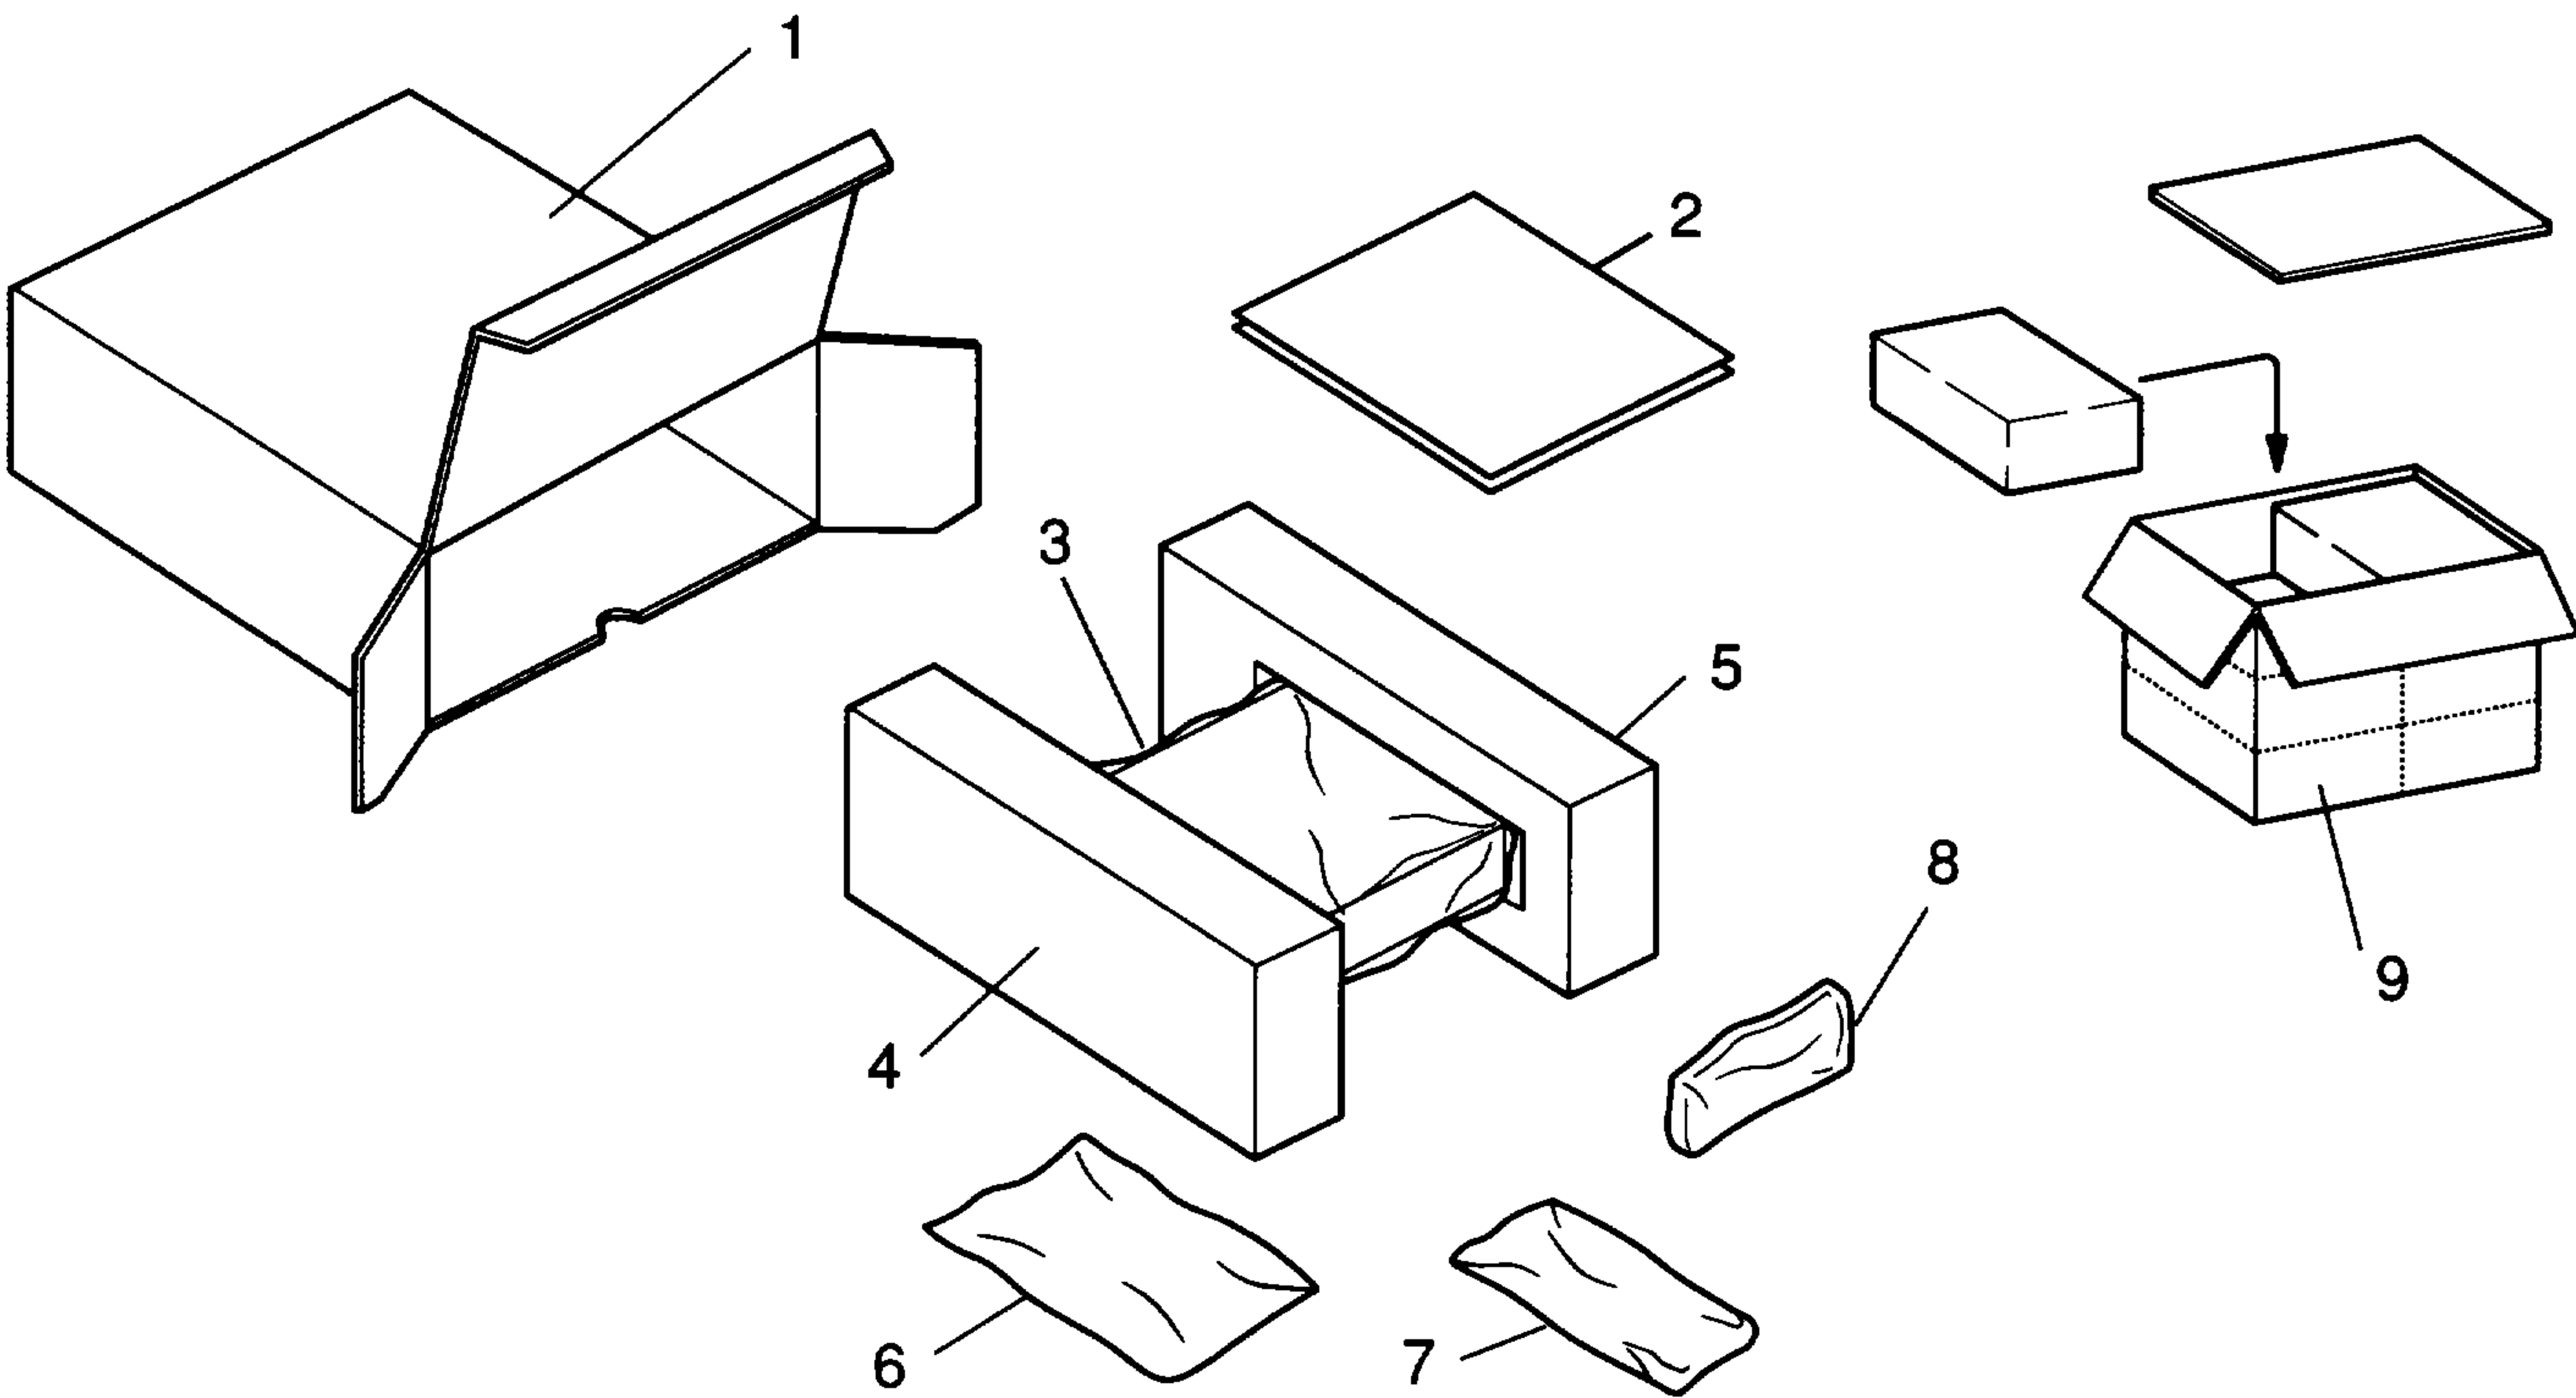


Fig. 13

● Parts List

Mark No.	Description	KEH-1400/X1M/UC	KEH-1450/X1M/ES	KEH-1311/X1M/UC	KEH-1100/X1M/UC	KEH-1150/X1M/ES
		Part No.	Part No.	Part No.	Part No.	Part No.
1	Carton	CHG2907	CHG2911	CHG2915	CHG2927	CHG2931
2	Owner's Manual	CRD1968	CRD1969	CRD1968	CRD1968	CRD1969
3	Polyethylene Bag	CEG1173	CEG-162	CEG1173	CEG1173	CEG-162
4	Protector(L)	CHP1607	CHP1607	CHP1607	CHP1607	CHP1607
5	Protector(R)	CHP1606	CHP1606	CHP1606	CHP1606	CHP1606
6	Accessory Assy	CEA2002	CEA2002	CEA2002	CEA2002	CEA2002
7	Cord Assy	CDE4951	CDE4951	CDE4951	CDE4908	CDE4908
8	Detach Case	CNS3860	CNS3860	CNS3860	CNS3860	CNS3860
9	Contain Box	CHL2907	CHL2911	CHL2915	CHL2927	CHL2931

Mark No.	Description	KEH-1300/X1M/EW	KEH-1400/X1M/IT	KEH-1300SDK/X1M/GR
		Part No.	Part No.	Part No.
1	Carton	CHG2895	CHG2903	CHG2899
2-1	Owner's Manual	CRD1965		CRD1967
2-2	Owner's Manual	CRD1966	CRD1966	
2-3	Warranty Card	CRY1087	CRY1087	CRY1087
* 2-4	Passport			CRY1013
3	Polyethylene Bag	CEG-162	CEG-162	CEG-162
4	Protector(L)	CHP1607	CHP1607	CHP1607
5	Protector(R)	CHP1606	CHP1606	CHP1606
6	Accessory Assy	CEA1917	CEA1917	CEA1917
7	Cord Assy	CDE4950	CDE4950	CDE4950
8	Detach Case	CNS3860	CNS3860	CNS3860
9	Contain Box	CHL2895	CHL2903	CHL2899

