

SERVICE MANUAL

MODEL
DVD1560

CAUTION : Before servicing this chassis, read the "PRODUCT SAFETY SERVICE FOR VIDEO PRODUCTS" section on page 2 of this manual.

DVD and CD
PLAYER

CONTENTS

SERVICE PRECAUTIONS.....	2,3
BLOCK DIAGRAMS.....	4
TROUBLE SHOOTING.....	5,6
BOARD DIAGRAM.....	7
REPLACEMENT PARTS LIST.....	8

LASER BEAM CAUTION LABEL

- レンズには絶対に触れないでください。
- DO NOT TOUCH THE LENS.
- LINSE NICHT BRÜHREN.
- NE PAS TOUCHER LA LENTILLE.


When the power supply is being turned on, you may not remove this laser cautions label. If it removes, radiation of laser may be received.

PREPARATION OF SERVICING

Pickup Head consists of a laser diode that is very susceptible to external static electricity.

Although it operates properly after replacement, if it was subject to electrostatic discharge during replacement, its life might be shortened. When replacing, use a conductive mat, soldering iron with ground wire, etc. to protect the laser diode from damage by static electricity.

And also, the LSI and IC are same as above.

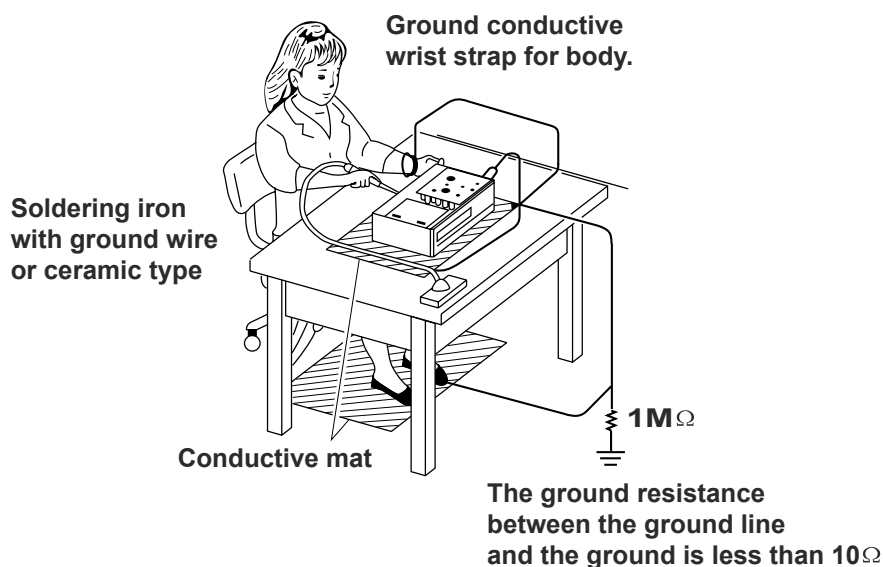



SAFTY NOTICE

SAFTY PRECAUTIONS

LEAKAGE CURRENT CHECK

Plug the AC line cord directly into a 120V AC outlet (do not use an isolation transformer for this check). Use an AC voltmeter, having 5000Ω per volt or more sensitivity. Connect a 1500Ω 10W resistor,paralleled by a 0.15uF 150V AC capacitor between a knomn good earth ground (water pipe, conduit, etc.) and all exposed metal parts of cabinet (antennas, handle bracket, metal cabinet screwheads, metal overlays, control shafts, etc.).

 Measure the AC voltage across the 1500Ω resistor. The test must be conducted with the AC switch on and then repeated with the AC switch off. The AC voltage indicated by the meter may not exceed 0.3V.A reading exceeding 0.3V indicates that a dangerous potential exists, the fault must be located and corrected. Repeat the above test with the DVD VIDEO PLAYER power plug reversed. NEVER RETURN A DVD VIDEO PLAYER TO THE CUSTOMER WITHOUT TAKING NECESSARY CORRECTIVE ACTION.

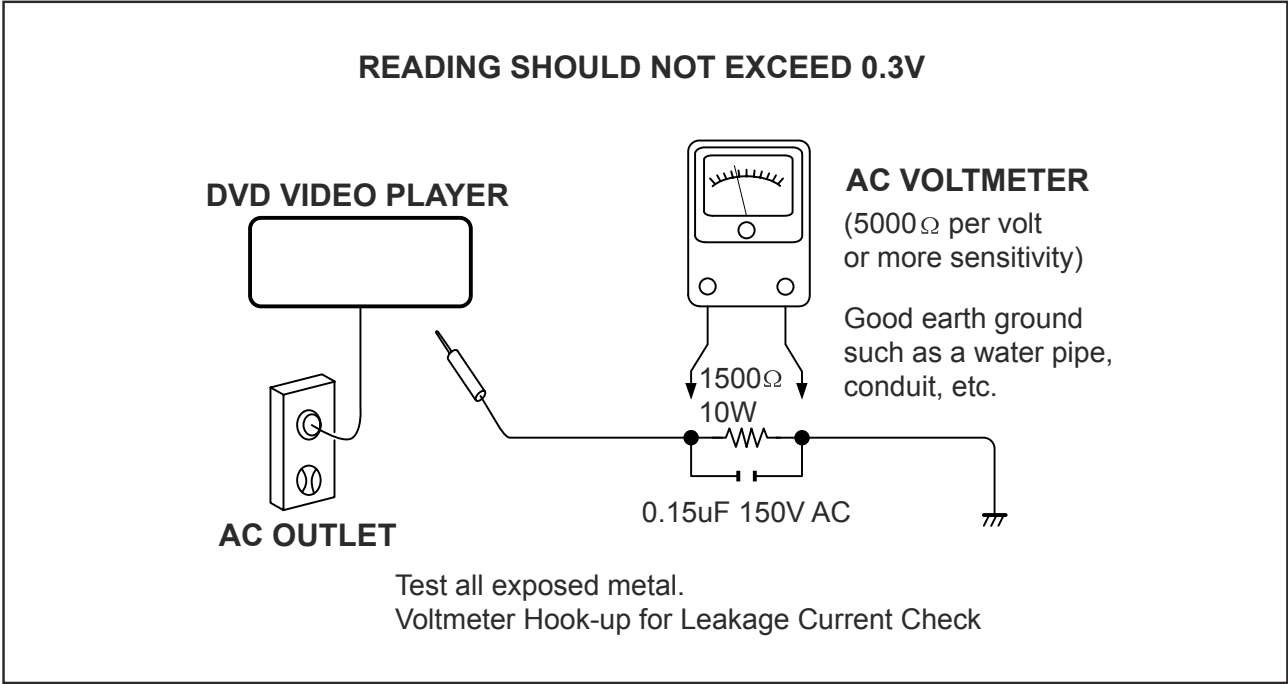


The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

OVERALL BLOCK DIAGRAM

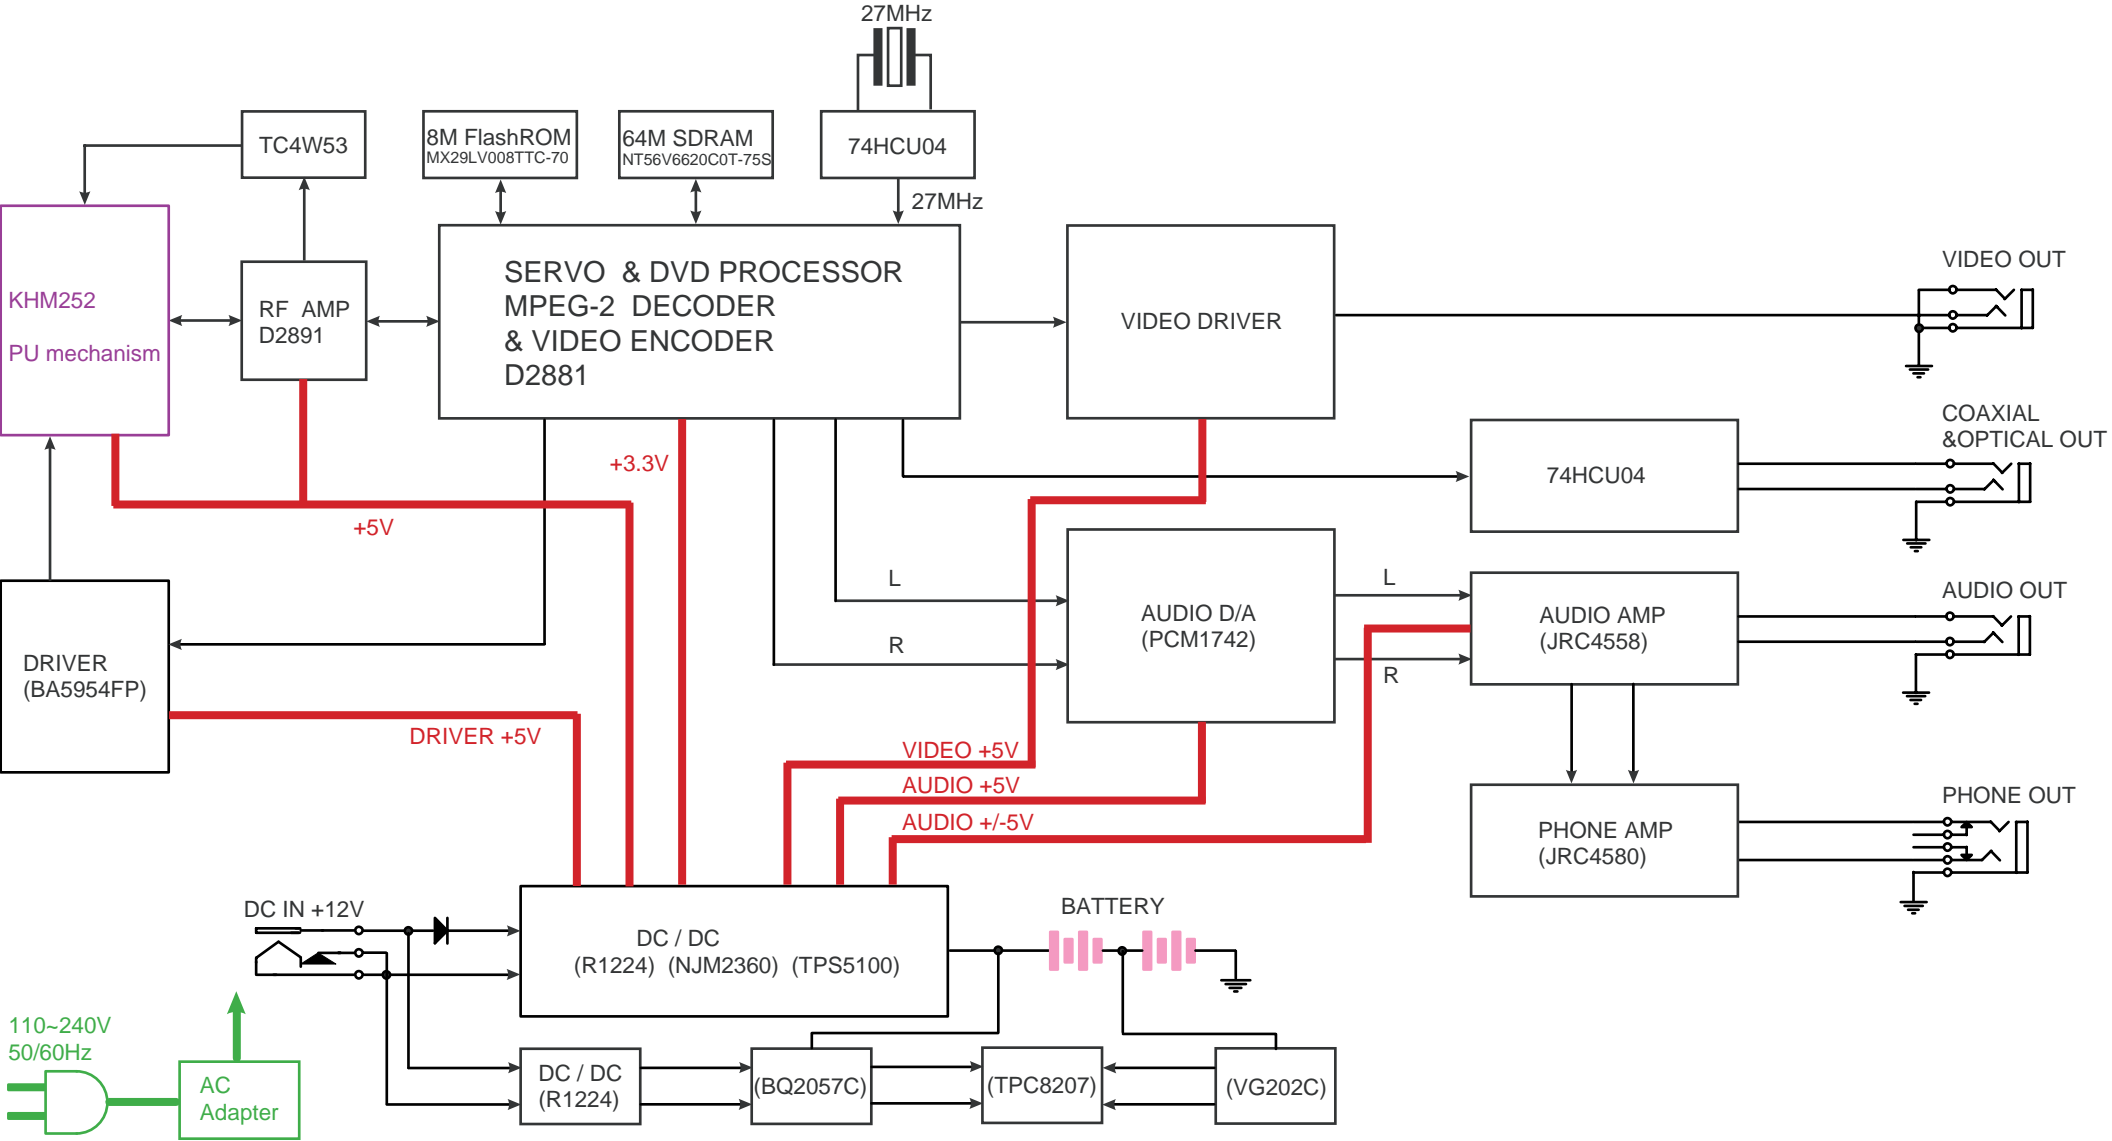

1. Troubleshooting

1. No power when turned on.
2. The DVD drive does not work.
3. No sound comes out from the external output.
4. No sound comes out from the headphones.
5. The DVD drive does not operate with the battery.

1.1 No power when turned on.

When the power is turned on, and if the LED on the front panel does not light green, check the following items and repair the defective parts.

(1) Check the power supply cable

If the cable is not the supplied one, replace it with the supplied cable and turn on the power again.

If the power supply cable is good, the AC adapter may be defective.

If the LED does not light after replacing, check the following items.

(2) Check the AC adapter

If the AC adapter is not the supplied one, replace it with the supplied AC adapter and turn on the power.

If the AC adapter is good, the power supply boards may be defective.

If the LED does not light after replacing, check the following items.

(3) Check the Power and Play buttons

Press the POWER button or the PLAY button on the DVD player. If the power does not turn on, check the following:

- Check the connector of the switch unit in the DVD player.
(If the connection is loose, repair the connection.)
- Replace the switch unit and turn on the power again.
If the LED does not light after replacing, check the following items.

(4) Replace the main board

1.2 The DVD drive does not work.

When the DVD drive does not work after the power is turned on, check the following items and repair or replace the defective parts.

(1) Press the DISC cover switch at the center of the DVD player and turn on the power. Then check whether or not the optical pick-up lens of the DVD drive lights.

CAUTION: Visible laser radiation when open and interlock defeated. Do not stare into Laser beam.

The optical pick-up lens lights dim:

It is caused by deterioration of the optical pick-up lens. Replace the DVD drive.

The optical pick-up lens does not light:

Check the connectors of the DVD-FFC. Also check the connection to the main board and to the DVD drive.

- Loose connection is found.
Repair the connection, and then check the operation of the DVD drive again.
- The DVD-FFC is broken.
Replace the DVD-FFC.
- Other than the above.
Replace the DVD drive or the main board.

(2) Insert a DVD disk and turn on the power

The DVD drive does not work:

The motor of the DVD drive or the main board is defective. Replace the DVD drive or the main board.

The DVD drive works but the initializing operation of the optical pick-up lens does not start (the optical pick-up lens operates twice), or abnormal noise sound:

The DVD drive is defective. Replace the DVD drive.

1.3 No or sound comes out from the external output

If any sound is output from the TV connected by the external cable, replace the main board or the connector.

NOTE: Before this test, make sure the drive works.

1.4 No sound comes out from the headphones.

If no sound comes out from the headphones, replace the main board or the connector.

1.5 The DVD drive does not operate with the battery.

(1) Check the operation with a good battery.

Install a good battery and make sure the LED lights up orange while the AC adapter is connected. When the LED does not light up or blinks, check the connection of the battery harness inside the DVD player. If the connection is loose, repair connection. If the harness has been connected firmly, replace the main board.

(2) Other than the above, replace the battery.

NOTE:

- For this check, use a battery which is not fully charged (because the LED does not light when the battery is fully charged.)
- Before this check, make sure other function work correctly.

ELECTRICAL PARTS LIST

PART No.	PART NAME	Q'TY
SDP1560		
11077p	RB-LI21 LITHIUM BATTERY	1
21220	CDQ-5A ASS'Y	1
21234	DVD1560 MAIN ASS'Y	1
21276	DVD1560 KEY ASS'Y	1
S0535	CAR CIGARETTE ADAPTER	1
S0578e	ADPV18A AC POWER ADAPTER	1
S06024	RC-1730 REMOTE	1
S1638b	OWNER MANUAL	1
S3153	RCA CORD VIDEO	1
S3154	RCA CORD AUDIO	1
S3501	FFC 0.5-24-130	1
S3643	DVD1560 CONNECT WIRE	1
S4353	EARPHONE	1
S7401	DVD5860 KEY ASS'Y B	1
S8064	KHM-252 LOADING ASS'Y	1