


D. REPAIR PROCEDURE


- [1] TROUBLESHOOTING GUIDED-2
 - POWER LOSS INOPERATIVED-2
 - TAKING INOPERATIVED-2
- [2] RENEWAL OF A FIRMWARED-3

[1] TROUBLESHOOTING GUIDE

POWER LOSS INOPERATIVE

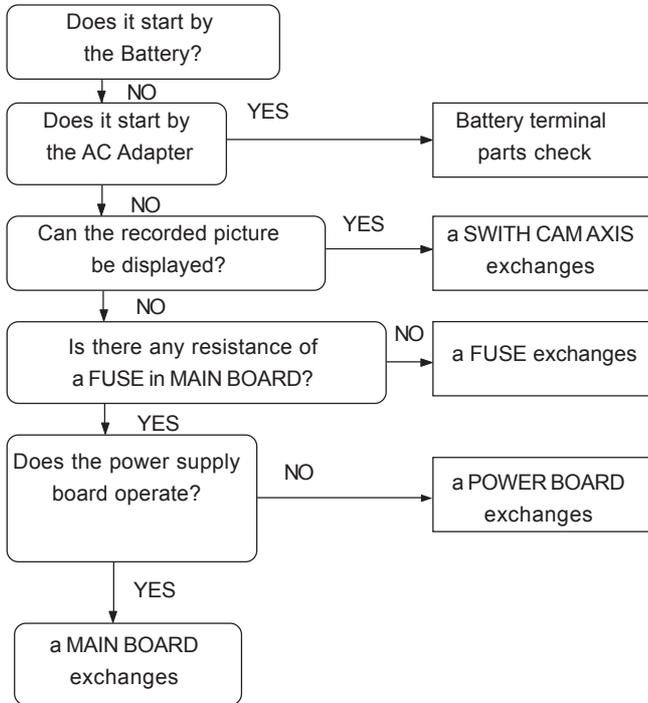

TAKING INOPERATIVE

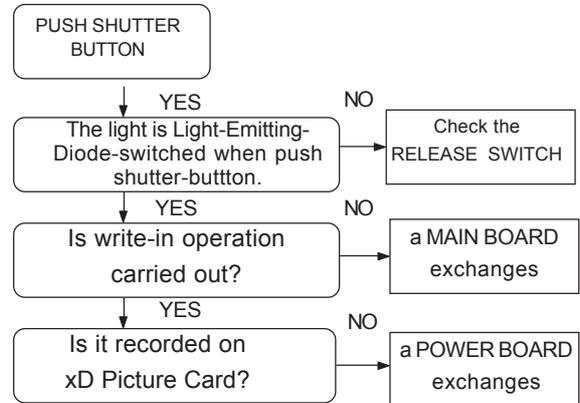

[2] RENEWAL OF A FIRMWARE**1. Firmware Card Creation**

1. Format the xD-picture card to the C-150/D-390.
2. Copy the file "ALGO.bin" to the xD-Picture Card.

2. How to confirm firmware

1. Insert a firmware xD-Picture Card to the camera and connect AC adapter.
2. Press the LCD monitor button in the state of close the lens barrier.
3. The monitor shows as "fig.1".
The top number (example : v3.4.21.0) is the version of firmware.

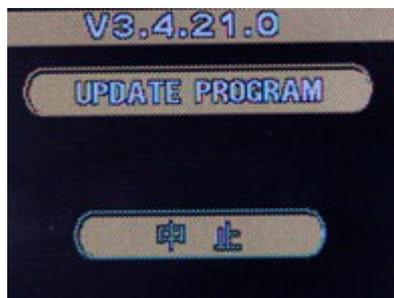


fig.1

3. The Updating Method

1. Insert the xD-Picture Card to the camera and connect AC power supply.
2. Press the LCD monitor button in the state of close the lens barrier.
3. The monitor shows as "fig.1".
4. Select "UPDATE PROGRAM" and press OK button.
5. It will end when LED and LCD monitor turn off.
6. Remove the xD-Picture Card from the camera.