


## **B. DISASSEMBLY AND ASSEMBLY PROCEDURE**

<b>[1]</b>	<b>REMOVAL OF FRONT COVER ASS'Y, INSIDE ASS'Y, AND BACK COVER ASS'Y .....</b>	<b>B-2</b>
<b>[2]</b>	<b>REMOVAL OF MAIN MODUEL AND LCD ASS'Y .....</b>	<b>B-3</b>
<b>[3]</b>	<b>REMOVAL OF OVF AND LENS ASSEMBLY .....</b>	<b>B-4</b>
<b>[4]</b>	<b>BOARD LOCATION .....</b>	<b>B-5</b>

**[1] REMOVAL OF FRONT COVER ASS'Y, INSIDE ASS'Y, AND BACKCOVER ASS'Y**


Disassembly perform as follows (1, 2...14) and assembly perform by reversing the disassembly steps (14, 13...1). Be sure to discharge the main capacitor in procedure 14, then continue to disassembling.

<b>! Beware of electric shock</b>	
	Danger of electric shock. Use a discharging tool to remove the electrical charge before working.

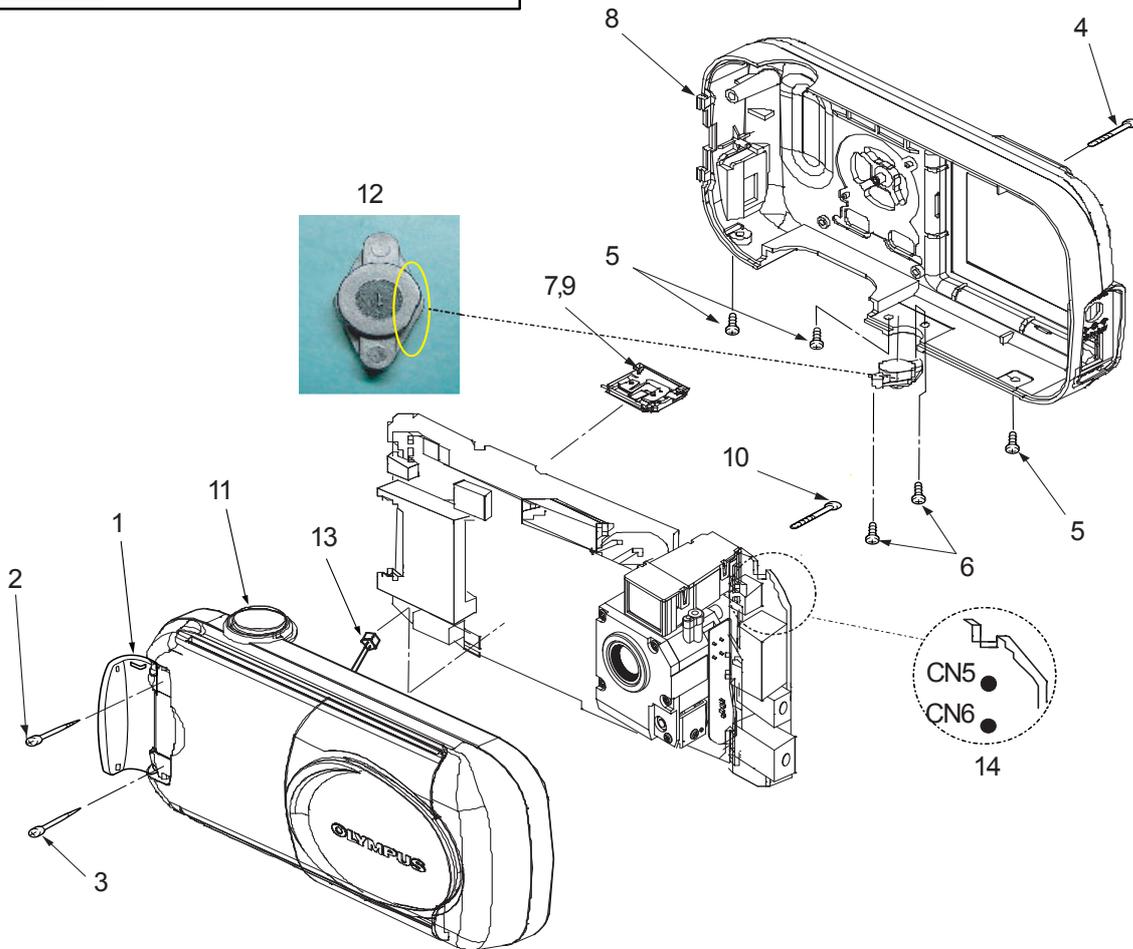

1. Open the Card Cover
2. Screw 1.7X21
3. Screw 1.7X13
4. Screw 1.6X13
5. Three Screws 1.7X5.5
6. Two Screws 1.7X4
7. Open the Battery Cover
8. Back Cover
9. Battery Cover
10. Screw 1.7X13
11. Front Cover
12. Spider Seat
13. Connector
14. Discharge

[2] REMOVAL OF MAIN BOARD ,POWER BOARD ,AND LCD ASS'Y

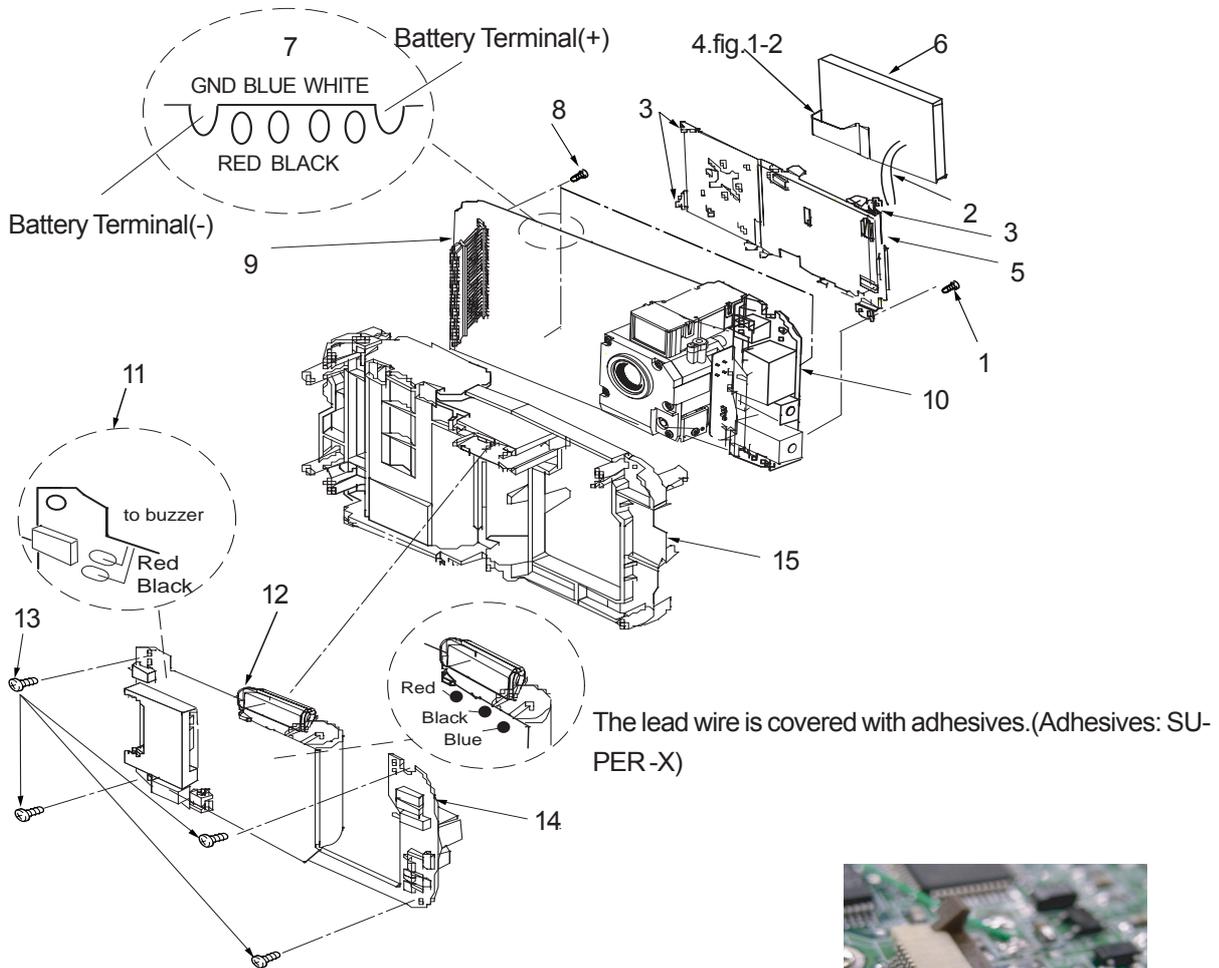

- 1.Screw 1.7X4
- 2.Two Wires
- 3.Unsolder
- 4.LCD-FPC
- 5.LCD Holder
- 6.LCD
- 7.Unsolder (TERMNAL,GND,RED,BLUE,BLACK,WHITE)
- 8.Three Screws 1.7X4
- 9.Connector
- 10.Main Board
- 11.Unsolder
- 12.Remove Reflector
- 13.Four Screws 1.7X4
- 14.Power Board
- 15.Frame

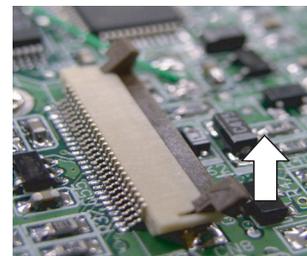


fig.1


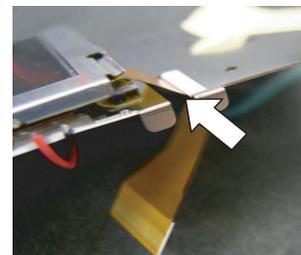


fig.2

[3] REMOVAL OF OVF AND LENS ASSEMBLY

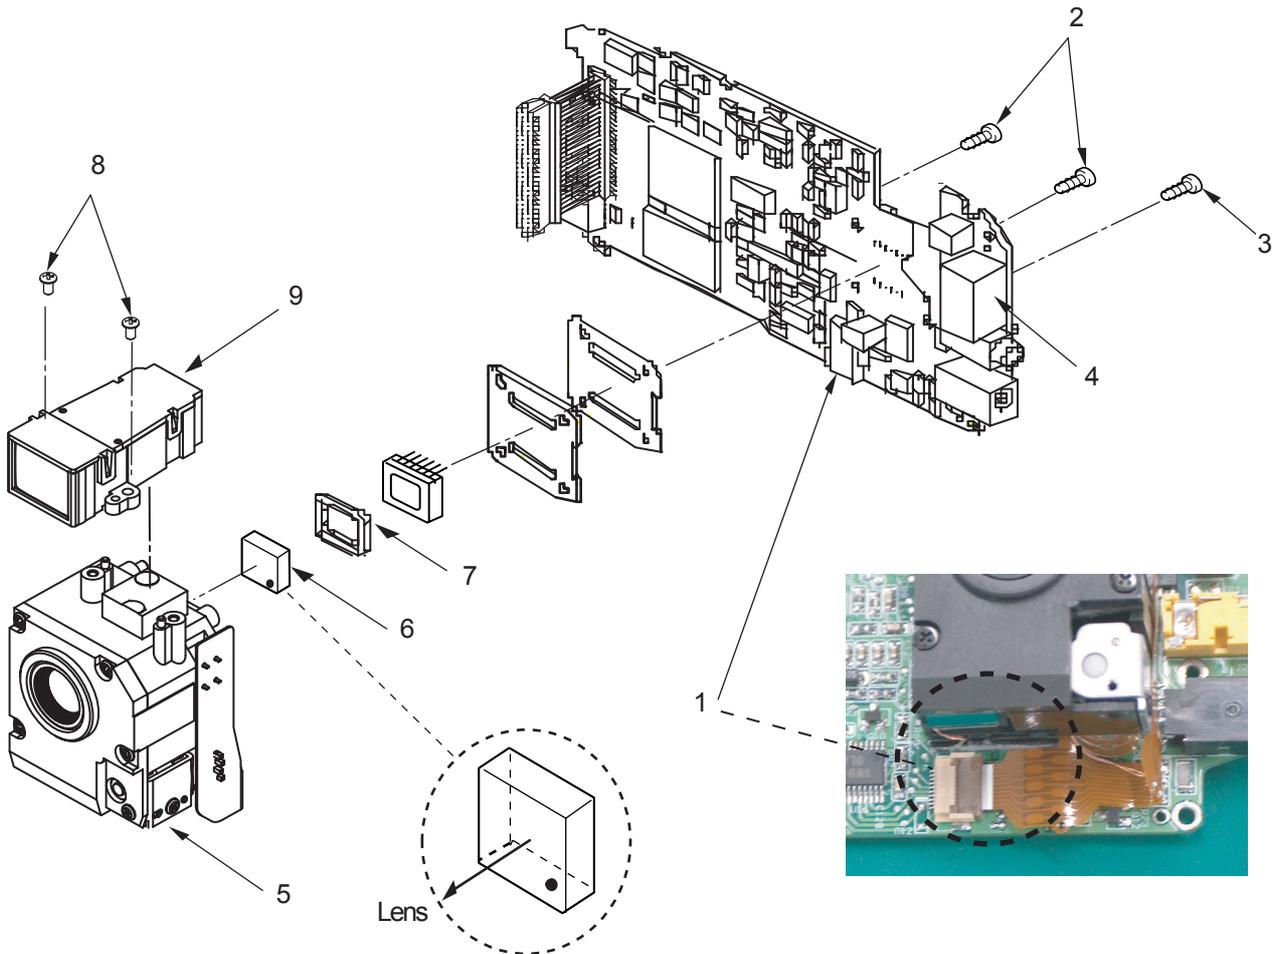

The direction which inserts LP.  
The mark is the lower left.

- 1.FPC
- 2.Two Screws 1.7X4.5
- 3.Screw 1.7X2.5
- 4.Main Board
- 5.Lens
- 6.LP
- 7.Spacer Rubber
- 8.Two Screws 1.4X4
- 9.View Finder

[4] BOARD LOCATION

