

Service Guide Specification

1. Model Description

MODEL	F730BL	BRAND	LG	Part No.	3828TSL110E
SUFFIX	KLEUED	Product Name	FLATRON F730B		

답 당
FAN.Y.Y
2005.02.22

관 리 자
YEO.H.M
2005.02.22

2. Printing Specification

1. Trim Size (Format) : 215mm x 280 mm

2. Printing Colors

- Cover : LG COLOR
- Inside : Black

3. Stock (Paper)

- Cover : Snow white paper 150 g/㎡
- Inside : Snow white paper 100 g/㎡

4. Printing Method :

5. Bindery : Saddle stitch

6. Language : English

7. Number of pages : 45

3. Special Instructions

4. Changes

△8				
△7				
△6				
△5				
△4				
△3				
△2				
△1				
REV. NO.	MM/DD/YY	SIGNATURE	CHANGE NO.	CHANGE CONTENTS



Website: <http://biz.LGservice.com>
E-mail: <http://www.LGService.com/techsup.html>

COLOR MONITOR SERVICE MANUAL

CHASSIS NO. : CA-136

MODEL: FLATRON F730B (F730BL-AL**QE)

() **Same model for SVC

CAUTION

BEFORE SERVICING THE UNIT,
READ THE **SAFETY PRECAUTIONS** IN THIS MANUAL.



*Same looking with new chassis.

CONTENTS

SPECIFICATIONS	2	BLOCK DIAGRAM	16
SAFETY PRECAUTIONS	3	DESCRIPTION OF BLOCK DIAGRA	17
SERVICING PRECAUTIONS	4	TROUBLESHOOTING GUIDE	19
TIMING CHART	7	EXPLODED VIEW.....	35
DISASSEMBLY	8	REPLACEMENT PARTS LIST	37
ADJUSTMENT	9	SCHEMATIC DIAGRAM.....	42
WIRING DIAGRAM.....	15	PRINT CIRCUIT BOARD	44

SPECIFICATIONS

1. PICTURE TUBE

Size	: 17 inch
Deflection Angle	: 90°
Neck Diameter	: 29.1 mm
Stripe Pitch	: 0.24 mm
Face Treatment	: W-ARASC (Anti-Reflection and Anti-Static Coating)
Internal	: Anti-Glare

2. SIGNAL

2-1. Horizontal & Vertical Sync

- 1) Input Voltage Level: Low=0~1.2V, High=2.5~5.5V
- 2) Sync Polarity : Positive or Negative

2-2. Video Input Signal

- 1) Voltage Level : 0 ~ 0.7 Vp-p
 - a) Color 0, 0 : 0 Vp-p
 - b) Color 7, 0 : 0.467 Vp-p
 - c) Color 15, 0 : 0.7 Vp-p
- 2) Input Impedance : 75 Ω
- 3) Video Color : R, G, B Analog
- 4) Signal Format : Refer to the Timing Chart

2-3. Signal Connector

3 row 15-pin Connector (Attached)

2-4. Scanning Frequency

Horizontal	: 30 ~ 71 kHz
Vertical	: 50 ~ 160 Hz

3. POWER SUPPLY

3-1. Power Range

AC 100~240V~ 50/60Hz, 1.0A Max.

3-2. Power Consumption

MODE	POWER CONSUMPTION	LED COLOR
NORMAL (ON)	less than 68 W	GREEN
DPM OFF	less than 4 W	FLASH
OFF	less than 2 W	OFF

4. DISPLAY AREA

4-1. Active Video Area :

- Max Image Size - 325.4 x 244.1 mm (12.81" x 9.61")
- Preset Image Size - 310 x 230 mm (12.20" x 9.06")

4-2. Display Color : Full Colors

4-3. Display Resolution : 1280 x 1024 / 60Hz(Max) (Non-Interlace)

4-4. Video Bandwidth : 110 MHz

5. ENVIRONMENT

5-1. Operating Temperature: 0°C ~ 40°C (Ambient)

5-2. Relative Humidity : 10%~ 90% (Non-condensing)

5-3. Altitude : 5,000 m

6. DIMENSIONS (with TILT/SWIVEL)

Width	: 415 mm (16.34 inch)
Depth	: 432 mm (17.00 inch)
Height	: 413 mm (16.25 inch)

7. WEIGHT (with TILT/SWIVEL)

Net Weight	: 16.5 kg (36.38 lbs.)
Gross Weight	: 19 kg (41.89 lbs.)

SAFETY PRECAUTIONS

SAFETY-RELATED COMPONENT WARNING!

There are special components used in this color monitor which are important for safety. **These parts are marked on the schematic diagram and the replacement parts list.** It is essential that these critical parts should be replaced with the manufacturer's specified parts to prevent X-radiation, shock, fire, or other hazards. Do not modify the original design without obtaining written permission from manufacturer or you will void the original parts and labor guarantee.

CAUTION: No modification of any circuit should be attempted.
Service work should be performed only after you are thoroughly familiar with all of the following safety checks and servicing guidelines.

SAFETY CHECK

Care should be taken while servicing this color monitor because of the high voltage used in the deflection circuits. These voltages are exposed in such areas as the associated flyback and yoke circuits.

FIRE & SHOCK HAZARD

An isolation transformer must be inserted between the color monitor and AC power line before servicing the chassis.

- In servicing, attention must be paid to the original lead dress specially in the high voltage circuit. If a short circuit is found, replace all parts which have been overheated as a result of the short circuit.
- All the protective devices must be reinstalled per the original design.
- Soldering must be inspected for the cold solder joints, frayed leads, damaged insulation, solder splashes, or the sharp points. Be sure to remove all foreign materials.

IMPLOSION PROTECTION

All used display tubes are equipped with an integral implosion protection system, but care should be taken to avoid damage and scratching during installation. Use only same type display tubes.

X-RADIATION

The only potential source of X-radiation is the picture tube. However, when the high voltage circuitry is operating properly there is no possibility of an X-radiation problem. The basic precaution which must be exercised is keep the high voltage at the factory recommended level; the normal high voltage is about 25.0kV. The following steps describe how to measure the high voltage and how to prevent X-radiation.


Note : It is important to use an accurate high voltage meter calibrated periodically.

- To measure the high voltage, use a high impedance high voltage meter, connect (–) to chassis and (+) to the CDT anode cap.
- Set the brightness control to maximum point at full white pattern.
- Measure the high voltage. The high voltage meter should be indicated at the factory recommended level.
- If the meter indication exceeds the maximum level, immediate service is required to prevent the possibility of premature component failure.
- To prevent X-radiation possibility, it is essential to use the specified picture tube.

CAUTION:

Please use only a plastic screwdriver to protect yourself from shock hazard during service operation.

Leakage Current Hot Check Circuit

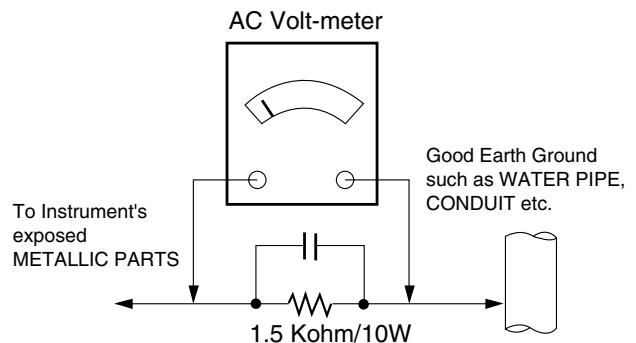

SERVICING PRECAUTIONS

CAUTION: Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the **SAFETY PRECAUTIONS** on page 3 of this publication.

NOTE: If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

General Servicing Precautions

1. Always unplug the receiver AC power cord from the AC power source before;
 - a. Removing or reinstalling any component, circuit board module or any other receiver assembly.
 - b. Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
 - c. Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.

CAUTION: A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.

- d. Discharging the picture tube anode.
2. Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe.
Do not test high voltage by "drawing an arc".
 3. Discharge the picture tube anode only by (a) first connecting one end of an insulated clip lead to the degaussing or kine aquadag grounding system shield at the point where the picture tube socket ground lead is connected, and then (b) touch the other end of the insulated clip lead to the picture tube anode button, using an insulating handle to avoid personal contact with high voltage.
 4. Do not spray chemicals on or near this receiver or any of its assemblies.
 5. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10% (by volume) Acetone and 90% (by volume) isopropyl alcohol (90%-99% strength)
CAUTION: This is a flammable mixture.
Unless specified otherwise in this service manual, lubrication of contacts is not required.
 6. Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
 7. Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
 8. Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.
Always remove the test receiver ground lead last.

9. Use with this receiver only the test fixtures specified in this service manual.

CAUTION: Do not connect the test fixture ground strap to any heat sink in this receiver.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called *Electrostatically Sensitive (ES) Devices*. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

General Soldering Guidelines

1. Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range of 500°F to 600°F.
2. Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
3. Keep the soldering iron tip clean and well tinned.
4. Thoroughly clean the surfaces to be soldered. Use a small wire-bristle (0.5 inch, or 1.25cm) brush with a metal handle.
Do not use freon-propelled spray-on cleaners.
5. Use the following unsoldering technique
 - a. Allow the soldering iron tip to reach normal temperature.
(500°F to 600°F)
 - b. Heat the component lead until the solder melts.
 - c. Quickly draw the melted solder with an anti-static, suction-type solder removal device or with solder braid.
CAUTION: Work quickly to avoid overheating the circuitboard printed foil.
6. Use the following soldering technique.
 - a. Allow the soldering iron tip to reach a normal temperature (500°F to 600°F)
 - b. First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.
 - c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.
CAUTION: Work quickly to avoid overheating the circuit board printed foil.
 - d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

IC Remove/Replacement

Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

Removal

1. Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts.
2. Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

Replacement

1. Carefully insert the replacement IC in the circuit board.
2. Carefully bend each IC lead against the circuit foil pad and solder it.
3. Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas).

"Small-Signal" Discrete Transistor

Removal/Replacement

1. Remove the defective transistor by clipping its leads as close as possible to the component body.
2. Bend into a "U" shape the end of each of three leads remaining on the circuit board.
3. Bend into a "U" shape the replacement transistor leads.
4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

Power Output, Transistor Device

Removal/Replacement

1. Heat and remove all solder from around the transistor leads.
2. Remove the heat sink mounting screw (if so equipped).
3. Carefully remove the transistor from the heat sink of the circuit board.
4. Insert new transistor in the circuit board.
5. Solder each transistor lead, and clip off excess lead.
6. Replace heat sink.

Diode Removal/Replacement

1. Remove defective diode by clipping its leads as close as possible to diode body.
2. Bend the two remaining leads perpendicular y to the circuit board.
3. Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
4. Securely crimp each connection and solder it.
5. Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

Fuse and Conventional Resistor

Removal/Replacement

1. Clip each fuse or resistor lead at top of the circuit board hollow stake.
2. Securely crimp the leads of replacement component around notch at stake top.
3. Solder the connections.
CAUTION: Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

Circuit Board Foil Repair

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

At IC Connections

To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
2. Carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
3. Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

At Other Connections

Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

1. Remove the defective copper pattern with a sharp knife.


Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.

2. Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
3. Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side.

Carefully crimp and solder the connections.

CAUTION: Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

TIMING CHART

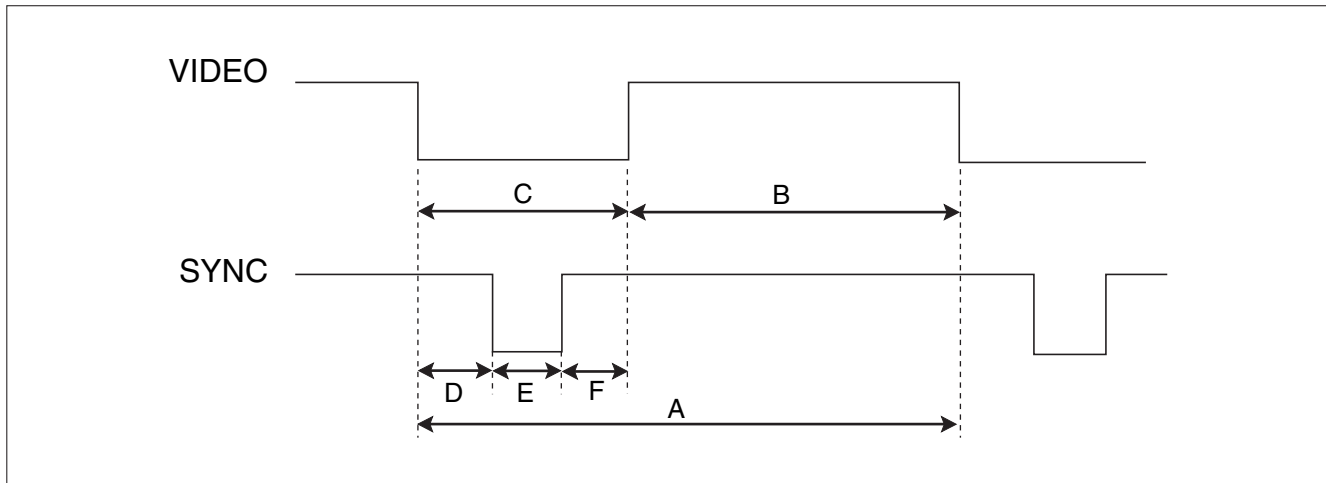

<< Dot Clock (**MHz**), Horizontal Frequency (**kHz**), Vertical Frequency (**Hz**), Horizontal etc... (**μs**), Vertical etc... (**ms**) >>

Mode	H/V Sort	Sync Polarity	Frequency	Total Period (A)	Video Active Time (B)	Blanking Time (C)	Sync Duration (E)	Back Porch (F)	Front Porch (D)	Resolution
1	H	—	37.50	26.67	20.32	6.35	2.03	3.81	0.51	640x480
	V	—	74.99	13.335	12.802	0.533	0.080	0.427	0.026	
2	H	+	46.88	21.33	16.16	5.17	1.62	3.23	0.32	800x600
	V	+	75.01	13.331	12.798	0.533	0.064	0.448	0.021	
3	H	+	53.68	18.63	14.22	4.41	1.14	2.70	0.57	800x600
	V	+	85.07	11.755	11.178	0.577	0.056	0.503	0.018	
4	H	+	68.677	14.561	10.836	3.725	1.016	2.201	0.508	1024x768
	V	+	85.00	11.764	11.182	0.582	0.044	0.524	0.014	
5	H	+	60.289	16.587	12.518	4.068	1.252	2.034	0.782	1280x768
	V	+	74.893	13.352	12.739	0.641	0.116	0.448	0.050	


*MODE 5 is the mode of checking the power

*No Composite Mode.

DISASSEMBLY



1. Carefully place the monitor on a soft cushion and stand it upright with the cabinet facing downward.
2. Remove the two screws from the back cover.

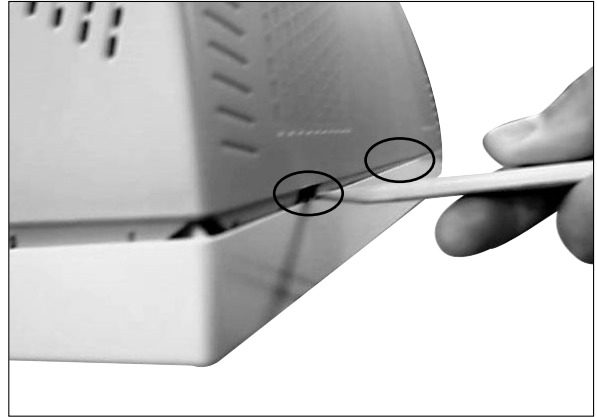

4. Separate the back cover from the latch at the bottom of the cabinet using the jig as shown in the figure.
(Insert the jig into the latch and lift slightly.)



3. Separate the back cover from the latch on top of the cabinet using a screwdriver as shown in the figure.
(Insert the screwdriver and gently press the latch.)



5. Lift up the back cover to separate from cabinet assembly.

ADJUSTMENT

1. Preparation for Service Adjustment

GENERAL INFORMATION

All adjustment are thoroughly checked and corrected when the monitor leaves the factory, but sometimes several adjustments may be required. Adjustment should be following procedure and after warming up for a minimum of 30 minutes.

- Alignment appliances and tools.
 - IBM compatible PC.
 - Programmable Signal Generator.
(eg. VG-819 made by Astrodesign Co.)
 - EPROM or EEPROM with saved each mode data.
 - Alignment Adaptor and Software.
 - Digital Voltmeter.
 - White Balance Meter.
 - Luminance Meter.
 - High-voltage Meter.

AUTOMATIC AND MANUAL DEGAUSSING

The degaussing coil is mounted around the CDT so that automatic degaussing when turn on the monitor. But a monitor is moved or faced in a different direction, become poor color purity cause of CDT magnetized, then press DEGAUSSING on the OSD menu.

ADJUSTMENT PROCEDURE & METHOD

- Install the cable for adjustment such as Figure 1 and run the alignment program on the DOS for IBM compatible PC.
- Set external Brightness and Contrast volume to max position.

1. Adjustment for B⁺ Voltage.

- 1) Display cross hatch pattern at Mode 4.
- 2) Check D961 cathode voltage within $50V \pm 1V$.

2. Adjustment for High-Voltage.

- 1) Display cross hatch pattern at Mode 4.
- 2) Enter the SVC SUB menu as the following instruction.
- 3) Adjust H/Voltage to $25.0kV \pm 0.1 kV$ by adjust 1-P value.


2. Adjustment by Service Hot key

How to enter SVC HOT KEY

1. Press Menu and OSD window will appear.
2. While OSD window is displayed, ★★ is seen on the left bottom of OSD window.
3. Press $\triangleleft$ + select switch simultaneously and the screen will immediately refresh.
4. Press Menu and make sure that ★★ is changed to 1 2.
5. Follow the menu on the left of OSD window to find 12 and OSD will change as shown in the figure.
6. Select Degauss in the above figure and then press Select and $\triangleright$ to enter the screen of the SUB menu. (Back Raster for Pattern)


FOS SPEC

1. Size
H : $310 \pm 4mm$
V : $230 \pm 4mm$
Scanning frequency : All Mode (Mode 1~4)
Display image : Cross hatch pattern
2. Centering
Scanning frequency : All Mode (Mode 1~4)
Display image : Crosshatch pattern
Horizontal : 10 Row
Vertical : 8 Row

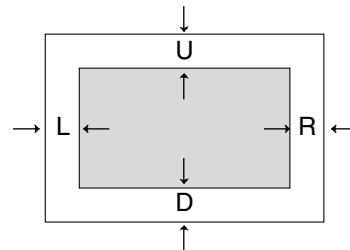

$$H : |L-R| \leq 4mm, V : |U-D| \leq 4mm$$

3. Tilt
Scanning frequency : All Mode (Mode 1~4)
Display image : Crosshatch pattern
Horizontal : 10 Row
Vertical : 8 Row

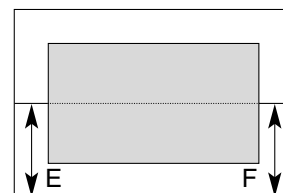

$$\text{Tilt} : |E-F| \leq 2.0mm$$


4. Distortion

Scanning frequency : All Mode (Mode 1~4)

Display image : Crosshatch pattern

Horizontal : 10 Row

Vertical : 8 Row

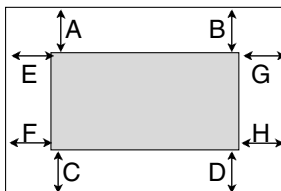

$$\begin{array}{|l|} \hline | A-B | \leq 2.0\text{mm}, \quad | C-D | \leq 2.0\text{mm} \\ \hline | E-F | \leq 2.0\text{mm}, \quad | G-H | \leq 2.0\text{mm} \\ \hline \end{array}$$

5. Displa Size drift

- $\pm 4\text{mm}$: 25°C Standard, 10°C , 35°C
- $\pm 0.5\text{mm}$: $180\text{V} \sim 264\text{V}$

6. Linearity

				Y1
				Y2
				Y3
				Y4
X1	X2	X3	X4	

Formula : $\{(\text{Max} - \text{Min}) / \text{Max}\} \times 100(\%)$

Criteria : H - 10% Max. (Upper 40kHz)

14% Max. (Less 40kHz)

V - 8% Max.


7. Regulation

Luminance $\leq 2\text{mm}$


Dynamic(lode) $\leq 2\text{mm}$

Scanning frequency : All Mode (Mode 1~4)


8. Trapezoid

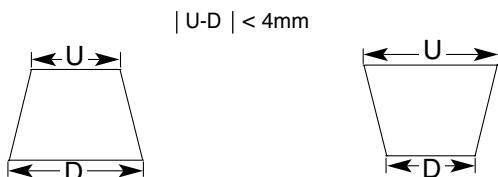

9. Pin Balance

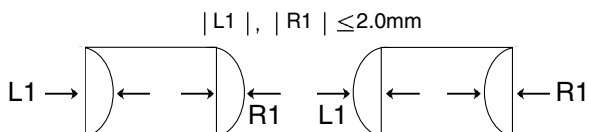

10. Parallelogram

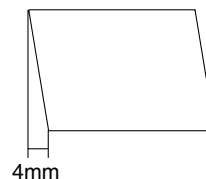

11. Adjustment of white balance (Adjustment of chromaticity diagram)

*(Adjustment of white balance must be made after entering Hot Key Mode and DEGAUSS.)

CONDITIONS

Signal: 69 kHz / 85 Hz
 Display image: Back raster (Color 0,0)
 Contrast: Maximum
 Brightness: Maximum
 Color temperature: 9300K

11-1. Adjustment of cut off (Adjustment of back raster)

11-1(a). Before adjustment, press Menu and Degauss to remove.

=> Enter hot key mode.

Adjust Brightness and Contrast to Max in OSD window.

(1) Adjust cut off (back raster) first. Enter DEGAUSS in the Menu and modify the following data.

Modify RCUT to Min ,

Modify GCUT To Min ,

Adjust to BCUT Data = 127 (7F (h)) ,

Adjust to SBRT Data = 205 (CD (h)).

(2) Turn FBT screen volume on "CRT COLOR ANALYZER CA-100" equipment to adjust Brightness to $0.4 \pm 0.05\text{FL}$.

(3) Adjust RCUT, GCUT, and SBRT to set chromaticity diagram at :

x: 0.283 ± 0.005

y: 0.298 ± 0.005

Y: $0.40 \pm 0.05\text{FL}$

* If color values would not be matched desirable values, repeat sequence 1 and 2 after readjusting "GREEN CUTOFF" control a little different.

11-2. Adjustment of White Balance

After finishing adjustment of cut off (back raster), approve "Color(15.0) Full white pattern".

Adjust BDRV Data = 90, SCON=127.

Adjust RDRV and GDRV to set chromaticity diagram at :

x: 0.283 ± 0.005

y: 0.298 ± 0.005

Approve "Window pattern (70x70mm)" to adjust

S-CON to Y : $45 \pm 1\text{FL}$.

Approve "Color (15.0) Full white pattern" again and adjust ABL Data to Y : $32 \pm 1\text{FL}$

12. Focus Adjustment

CONDITIONS

Scanning frequency : All Mode (Mode 1~4)

Display image: "H" character pattern

Brightness: Cut off point

Contrast: Maximum

PROCEDURE

1. Adjust the Focus VR on the FBT to display the sharpest image possible.

2. Use Locktite to seal the Focus VR in position.

13. Color Purity Adjustment

Color purity is the absence of undesired color.

Conspicuous mislanding (unexpected color in a uniform field) within the display area shall not be visible at a distance of 50 cm from the CRT surface.

CONDITIONS

Orientation: Monitor facing east

Scanning Frequency: 1024 x 768@85Hz(69kHz/85Hz)

Display image: White flat field

Luminance: Cut off point at the center of the display area

Note: Color purity adjustments should only be attempted by qualified personnel.

PROCEDURE

For trained and experienced service technicians only.

Use the following procedure to correct minor color purity problems:

1. Make sure the display is not affected by external magnetic fields.
2. Very carefully break the glue seal between the 2-pole purity convergence magnets (PCM), the band and the spacer.
3. Make sure the spacing between the PCM assembly and the CRT stem is $29 \text{ mm} \pm 1 \text{ mm}$.
4. Display a green pattern over the entire display area.
5. Adjust the purity magnet rings on the PCM assembly to display a pure green pattern.
(Optimum setting: $x = 0.295 \pm 0.015$,
 $y = 0.594 \pm 0.015$)
6. Repeat steps 4 and 5 using a red pattern and then again, using a blue pattern.

Table 4-6. Color Purity Tolerances

Red:	$x=0.620 \pm 0.015$	$y=0.334 \pm 0.015$
Green:	$x=0.620 \pm 0.015$	$y=0.334 \pm 0.015$
Blue:	$x=0.620 \pm 0.015$	$y=0.334 \pm 0.015$

(For 9300K color adjustment: $x = 0.283 \pm 0.02$,
 $y = 0.298 \pm 0.02$)

7. When you have the PCMs properly adjusted, carefully glue them together to prevent their movement during shipping.

3. Adjustment Using Service software Program (Adjustment Program)

1. Adjustment for Factory Mode (Preset Mode).

- 1) Display cross hatch pattern at Mode All.
- 2) Run alignment program for F730BL on the IBM compatible PC.
- 3) EEPROM → ALL CLEAR → Y(Yes) command.
<Caution> Do not run this procedure unless the EEPROM is changed. All data in EEPROM (mode data and color data) will be erased.
- 4) COMMAND → PRESET START → Y(Yes) command.
- 5) DIST. ADJ. → FOS. ADJ command.
- 6) Adjust H-POSITION as arrow keys to center of the screen.
- 7) Adjust H-SIZE as arrow keys to $310 \pm 2\text{mm}$.
- 8) Adjust V-POSITION as arrow keys to center of the screen.
- 9) Adjust V-SIZE as arrow keys to $230 \pm 2\text{mm}$.
- 10) Adjust TRAPEZOID as arrow keys to be the best condition.
- 11) Adjust SIDE PINCUSHON as arrow keys to be the best condition.
- 12) Adjust TILT as arrow keys to be the best condition.
- 13) Display cross hatch pattern at Mode 4.
- 14) DIST. ADJ. → BALANCE DATA command.
- 15) Adjust balance of Pin-Balance as arrow keys to be the best condition.
- 16) Adjust parallelogram as arrow keys to be the best condition.
- 17) Save of the Mode.
- 18) Save of the System.
- 19) Display from Mode 4 and repeat above from number 6) to 16).
- 20) COMMAND → PRESET EXIT → Y (Yes) command.

2. Adjustment for White Balance and Luminance.

- 1) Set the White Balance Meter.
- 2) Press the DEGAUSSING on the OSD menu for demagnetization of the CDT.
- 3) Display color 0,0 pattern at Mode 4.
- 4) COMMAND → PRESET START → Y(Yes) command.
- 5) Set Bightness and Contrast to max position.
- 6) COLOR ADJ. → LUMINANCE command of the alignment program.
- 7) COLOR ADJ. → BIAS ADJ. command of the alignment program.
- 8) Check whether blue color or not at R-BIAS and G-BIAS to min position, Sub-Brightness to 205 (CD(h))position, B-Bias to 127(7F(h))position. If it's not blue color, the monitor must repair.
- 9) Adjust Screen control on the FBT to $0.4 \pm 0.05\text{FL}$ of the raster luminance.
- 10) Adjust R-BIAS and G-BIAS command to $x=0.283 \pm 0.006$ and $y=0.298 \pm 0.006$ on the White Balance Meter with PC arrow keys.
- 11) Display color 15,0 Full White(70x70mm) at mode 4.
- 12) DRIVE ADJ command.
- 13) Set B-DRIVE to 90(5A(h)) at DRIVE of the alignment program.
- 14) Adjust R-DRIVE and G-DRIVE command to white balance $x=0.283 \pm 0.003$ and $y=0.298 \pm 0.003$ on the White Balance Meter with PC arrow keys.
- 15) Adjust SUB-CONTRAST command to $45 \pm 1\text{FL}$ of the raster luminance.
- 15) Display color 15,0 full white patten at Mode 4.
- 16) COLOR ADJ. → LUMINANCE → ABL command.
- 17) Adjust ABL to $32 \pm 1\text{FL}$ of the luminance.
- 18) Exit from the program.

- Adjustment and EDID Data Down in GCSC

Windows EDID V1.0 User Manual

Operating System: MS Windows 98, 2000, XP


Port Setup: Windows 98 => Don't need setup

Windows 2000, XP => Need to Port Setup.


This program is available to LCD Monitor only.

1. Port Setup

- Copy "UserPort.sys" file to
"c:\WINNT\system32\drivers" folder
- Run Userport.exe

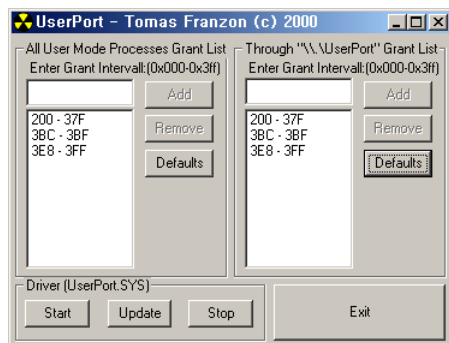


- Remove all default number
- Add 300-3FF

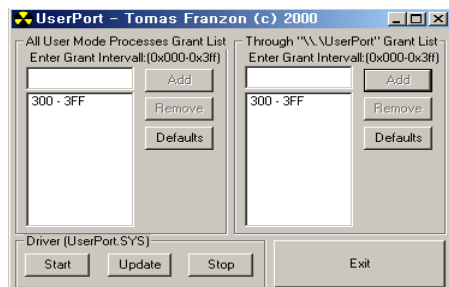

- Click Start button.
- Click Exit button.


2. EDID Read & Write

1) Run WinEDID.exe

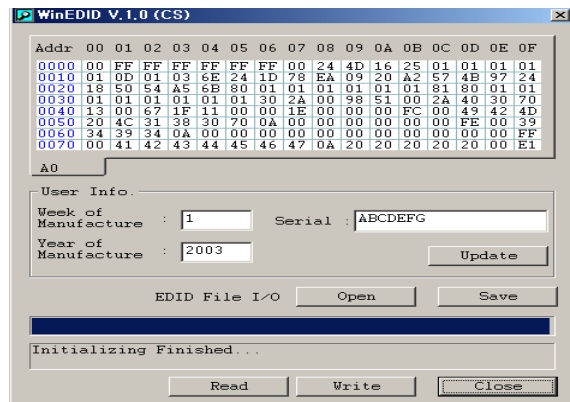

2) Edit Week of Manufacture, Year of Manufacture, Serial Number

- Input User Info Data
- Click "Update" button
- Click "Write" button

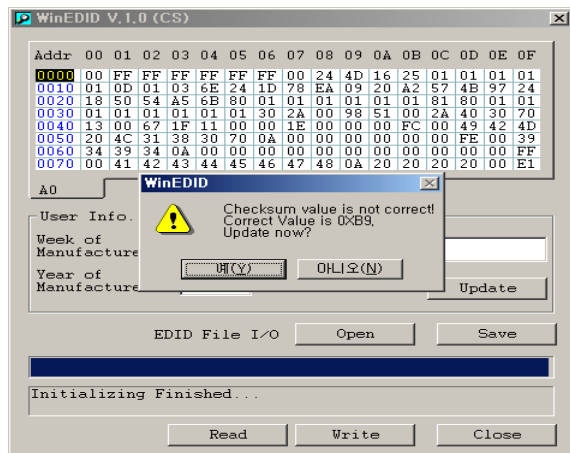

EDID DATA EDIT

No	Item	Content	Hexadecimal
1	Manufacturer ID	GSM	1E6D
2	Product ID	173 47	4344
3	Year	2004	0E
4	Version	1	01
5	Revision	3	03
6	Model name	F730B	4637303042
7	Special		

	0x00	0x01	0x02	0x03	0x04	0x05	0x06	0x07	0x08	0x09	0x0A	0x0B	0x0C	0x0D	0x0E	0x0F
0x01	00	FF	FF	FF	FF	FF	FF	00	1E	6D	# 44	# 43	* 01	* 01	* 01	* 01
0x01	**	***														
0x01	01	0E	01	03	18	21	19	B9	EA	9A	D9	A1	54	4B	99	24
0x02	12	48	4C	FF	FE	80	31	59	71	4F	45	59	61	59	81	80
0x03	81	4A	01	01	01	01	EA	24	00	60	41	00	28	30	30	60
0x04	13	00	36	E6	10	00	00	1E	30	2A	00	98	51	00	2A	40
0x05	30	70	13	00	36	E6	10	00	00	1E	00	00	00	FD	00	32
0x06	A0	1E	47	0B	00	0A	20	20	20	20	20	20	00	00	00	FC
0x07	00	46	37	30	30	42	0A	20	20	20	20	20	20	20	00	****

EDID Data Edit Using Service software Program

1 Read and Modify EDID Data

- 1) Connector the monitor and adjust device as Figure1
- 2) Display color 15,0 cross hatch pattern at Mode 4.
- 3) Use EDIT – MODEL SEL. command to select the right model info file.
- 4) Use EDIT – EDID INFO command and return to read the EDID Data.
- 5) Modify the EDID Data if needed and using F10 to save the change and exit.

2 Write EDID Data.

- 1) Display color 15,0 cross hatch pattern at Mode 4.
- 2) Use EEPROM – Write EDID command and confirm “EDID Write OK!!” message of monitor.
- 3) Exit from the alignment program.
- 4) Power switch OFF/ON for EDID data save.



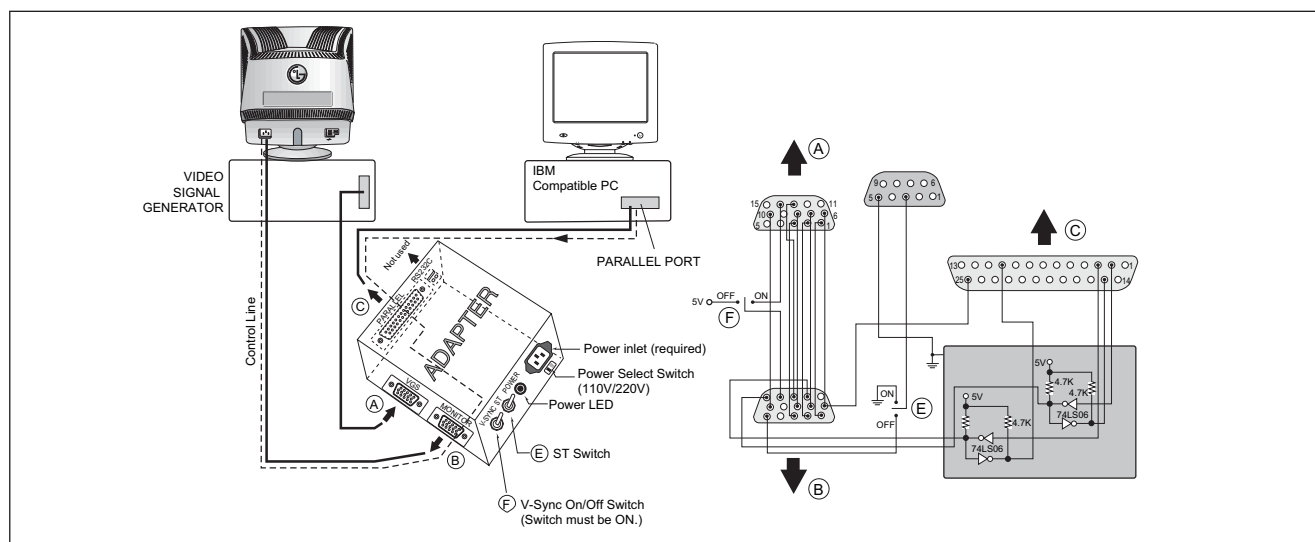


Figure 1. Cable Connection

WIRING DIAGRAM

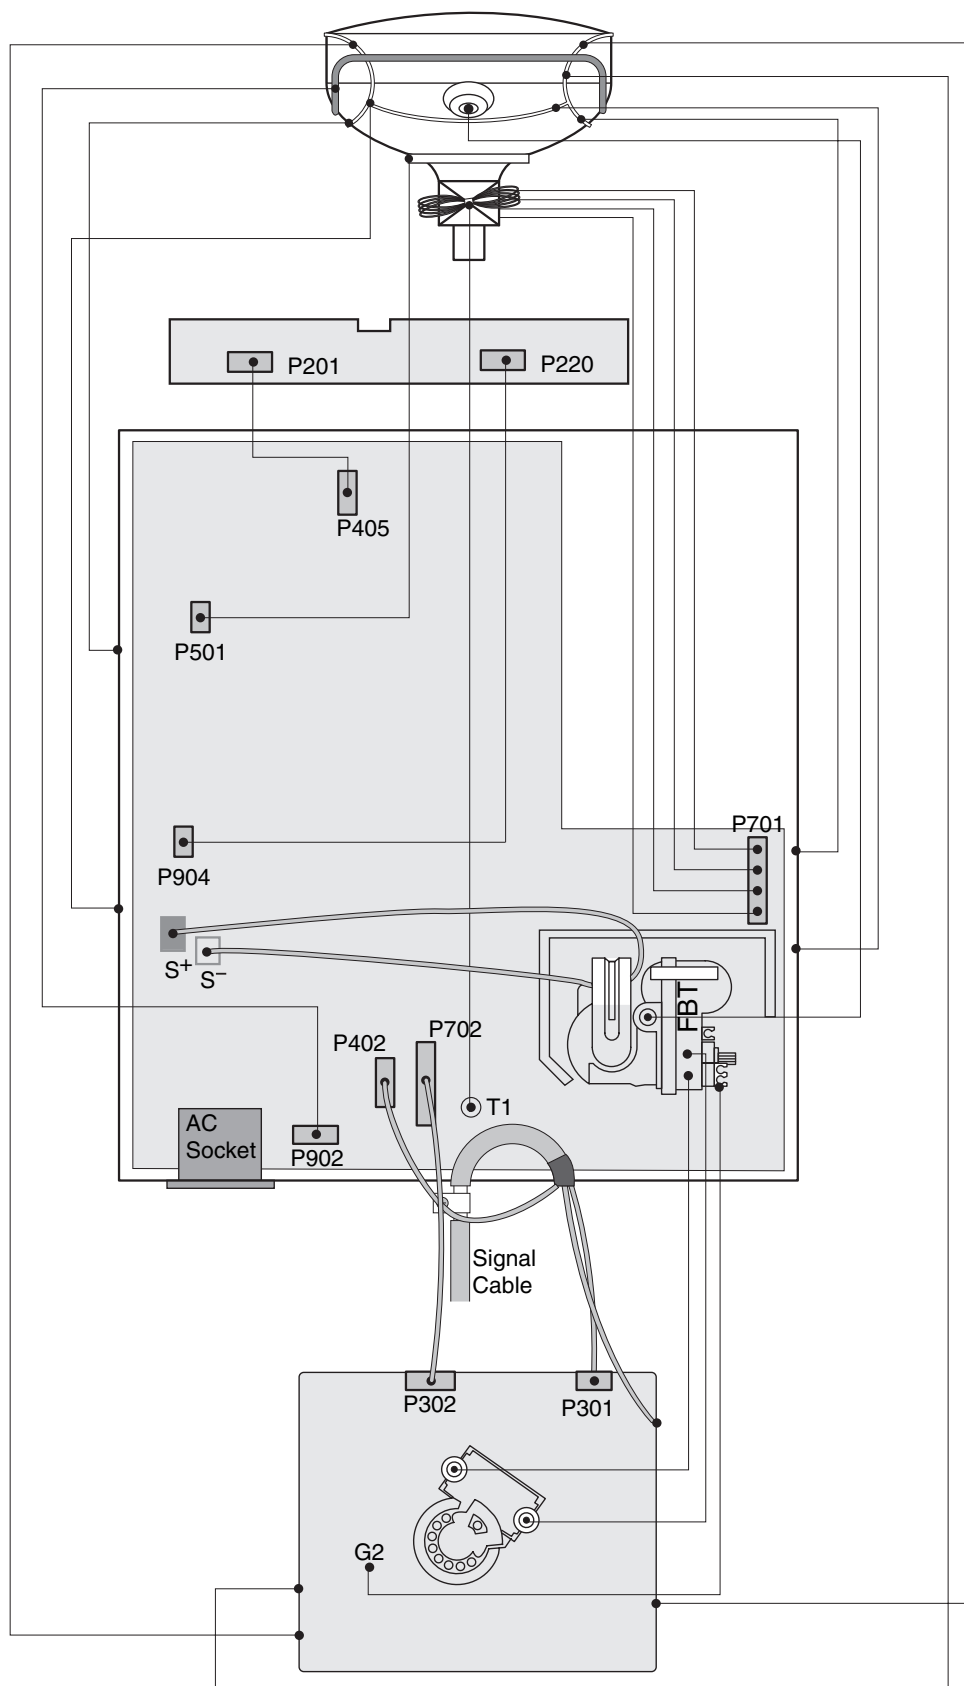

BLOCK DIAGRAM

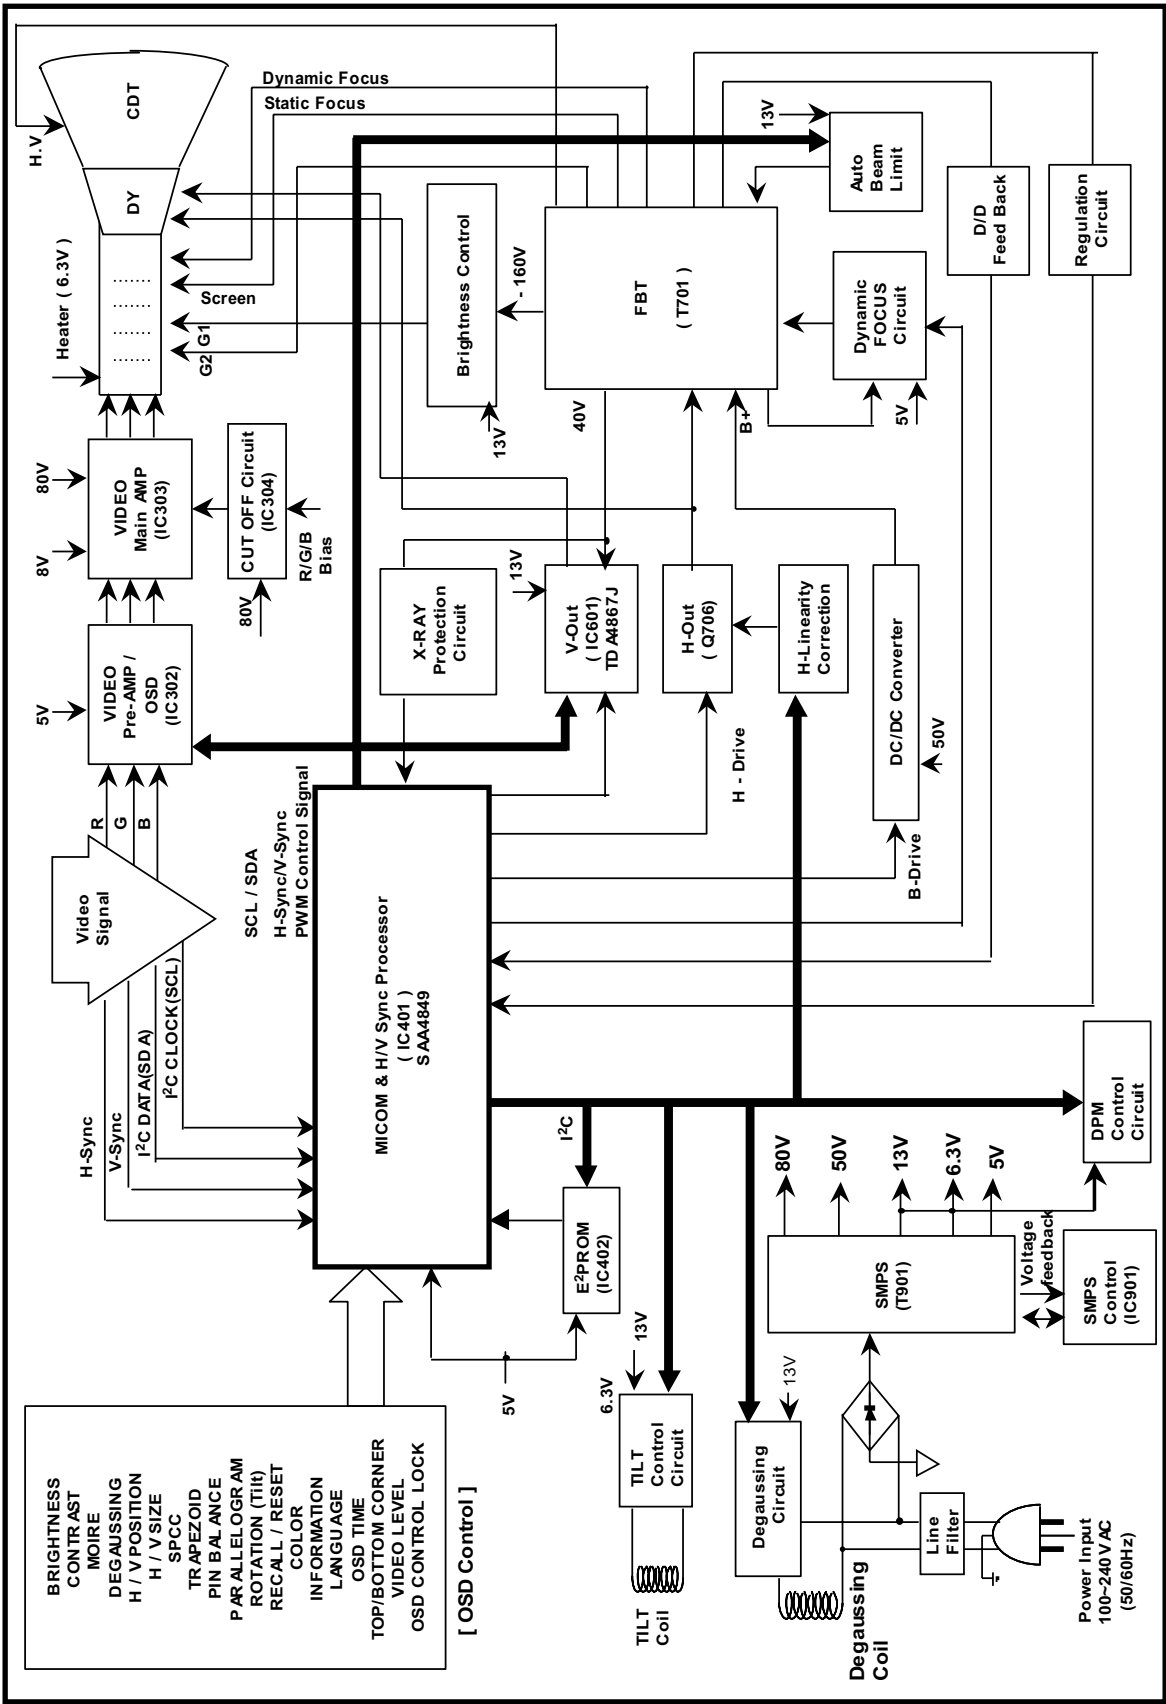

DESCRIPTION OF BLOCK DIAGRAM

1. SMPS(Switching Mode Power Supply)

When you turn on the power switch, the operating procedure is as follows:

- 1) The AC line voltage is rectified by the bridge diode D900.
- 2) The control IC(IC901) starts switching and generates switch pulse in the primary turn of the SMPS transformer(T901)
- 3) The switching pulses of the primary turns are induced to the secondary turns of the transformer by the turn ratio. This pulses are rectified by each diode(D971, D961(D962),D951,D942,D941)
- 4) Each rectified DC voltage(80V, 50V, 13V, 6.3V and 5V)

2. Over Voltage Protection Circuit

When the input of IC901 Vin (pin 4) is more than 22V, all the secondary voltages of the SMPS transformer (T901) down to low value

3. Display Power Management Circuit(DPM)

- 1) STAND -BY & SUSPEND Mode

When no input of horizontal or vertical sync Q951, Q941 are turned off .

Then input power consumption is below 4 watts.

4. Microprocessor Control & Horizontal and Vertical Sync Processor Circuit

The operating procedure is as follows ;

- 1) There is Horizontal & Vertical process function in Microprocessor.(IC401)
- 2) Microprocessor (IC401) discriminates the operating mode from the sync polarity and resolution.
- 3) After microprocessor reads these adjusted mode data stored at EEPROM, it controls operating mode data through IIC
- 4) Users can control screen condition by the OSD Select, Up, Down, Left, Right, Exit.

5. D/D Converter Circuit.

To obtain constant high voltage, this circuit supplies controlled DC voltage for FBT and horizontal deflection circuit according to the horizontal sync frequency.

6. X-RAY Protection Circuit

When the high Voltage reaches to 29kV in an abnormal case, the high voltage detector circuit, R818,D721,C739-1 R416, C409 start operation to shut down high voltage circuit.

7. Horizontal S -correction Circuit.

This circuit corrects the horizontal linearity for each horizontal sync frequency.

8. Horizontal drive and Output Circuit.

This circuit is a horizontal deflection amplifier for raster scan.

9. ABL Circuit

This circuit limits the beam -current for the reliability of CDT

10. Vertical Output Circuit

This circuit takes the vertical ramp wave from the TDA4867J (IC601) and perform the vertical deflection by supplying the saw -tooth wave current to the vertical deflection yoke.

11. Blanking and Brightness Control Circuit.

Blanking circuit eliminates the retrace line by supplying a negative pulse wave to the G1 of the CDT. Brightness control circuit is used for control of the screen brightness by changing the DC level G1.

12. Image Rotation (Tilt) Circuit.

This circuit corrects the tilt of the screen by supplying the image rotation signal to the tilt coil which is attached near the deflection yoke of the CDT

13. OSD (On Screen Display) Circuit.

This circuit displays information of the monitor's status on the screen.

14. Video Processor Circuit.

Video processor circuit consists of the video drive output block. The video drive IC(IC302) receives the video signal from PC. The gain of each channel is controlled by MICOM through IIC.

The cut-off circuit compensate different voltage of each channel between the cathode and the G1 of the CDT

15. Video Pre -Amp Circuit.


This circuit amplifies the analog video signal from 0~0.7 V to 0~4 V. It is operated by taking the clamp, R,G,B drive and contrast signal from the MICOM (IC401)

16. Video Output Amp Circuit.


This circuit amplifies the video signal which comes from the video preamp circuit and amplified it to applied the CDT cathode

TROUBLESHOOTING GUIDE








1. NO POWER

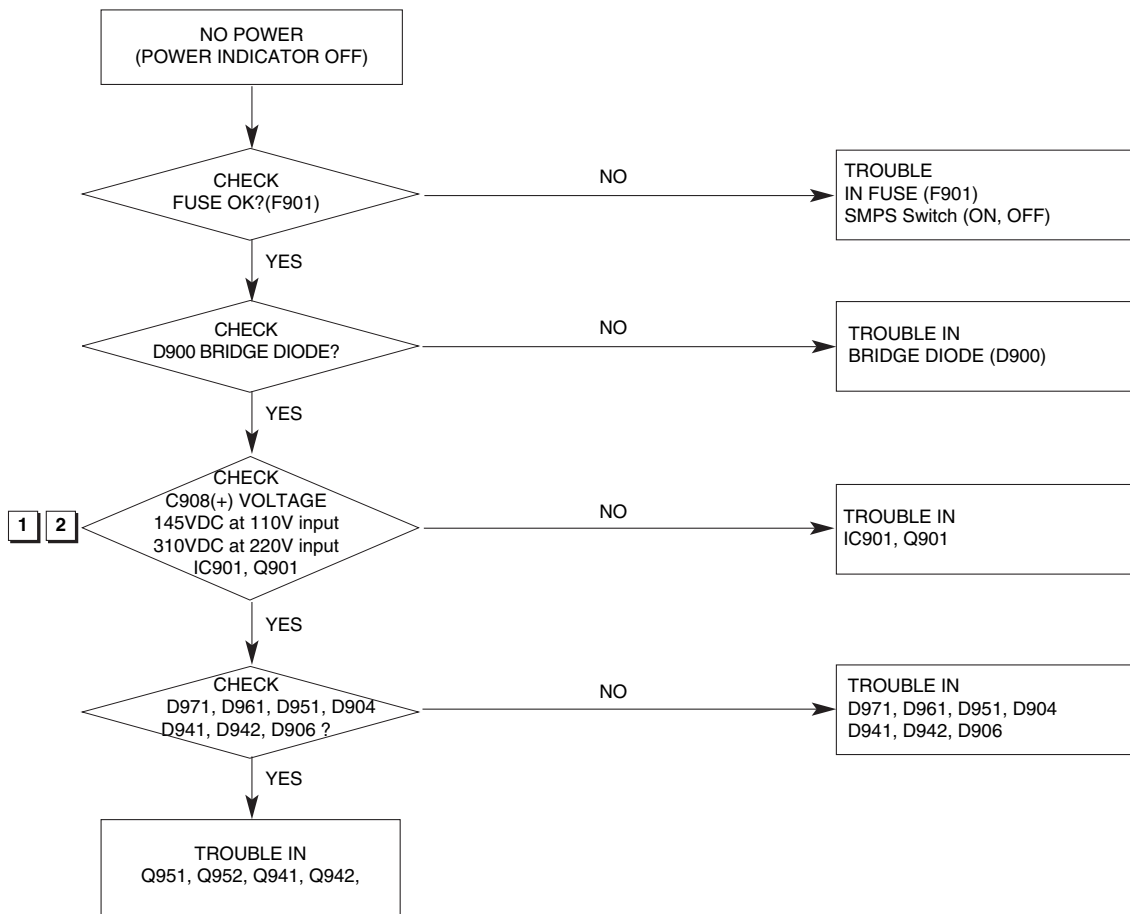


Waveforms

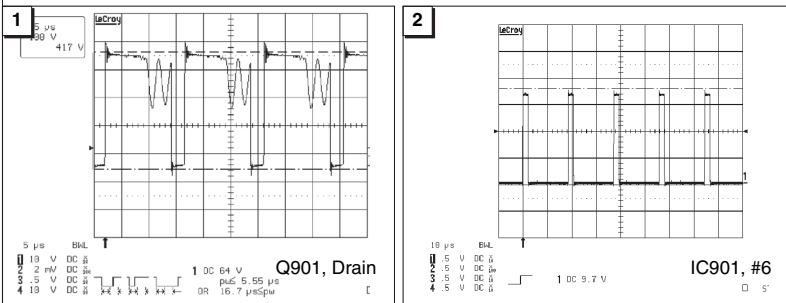




2. NO CHARACTER

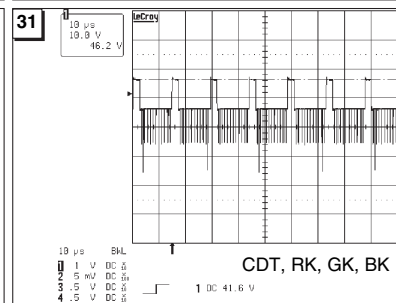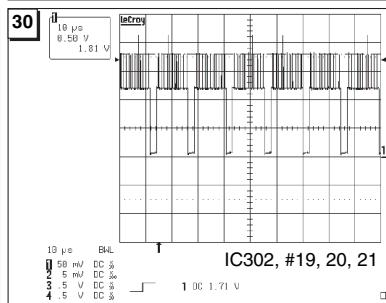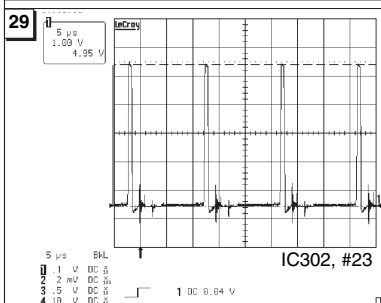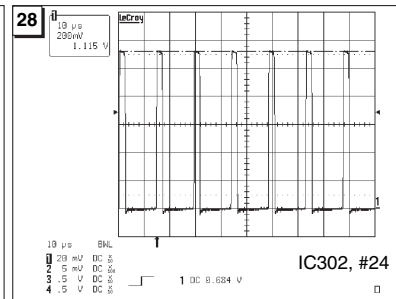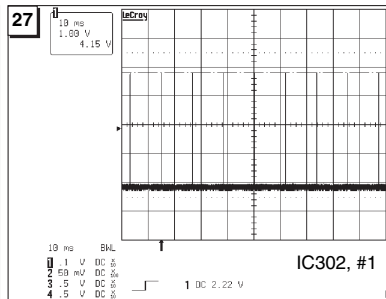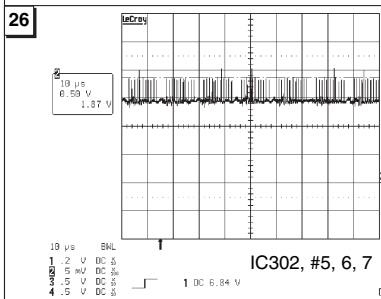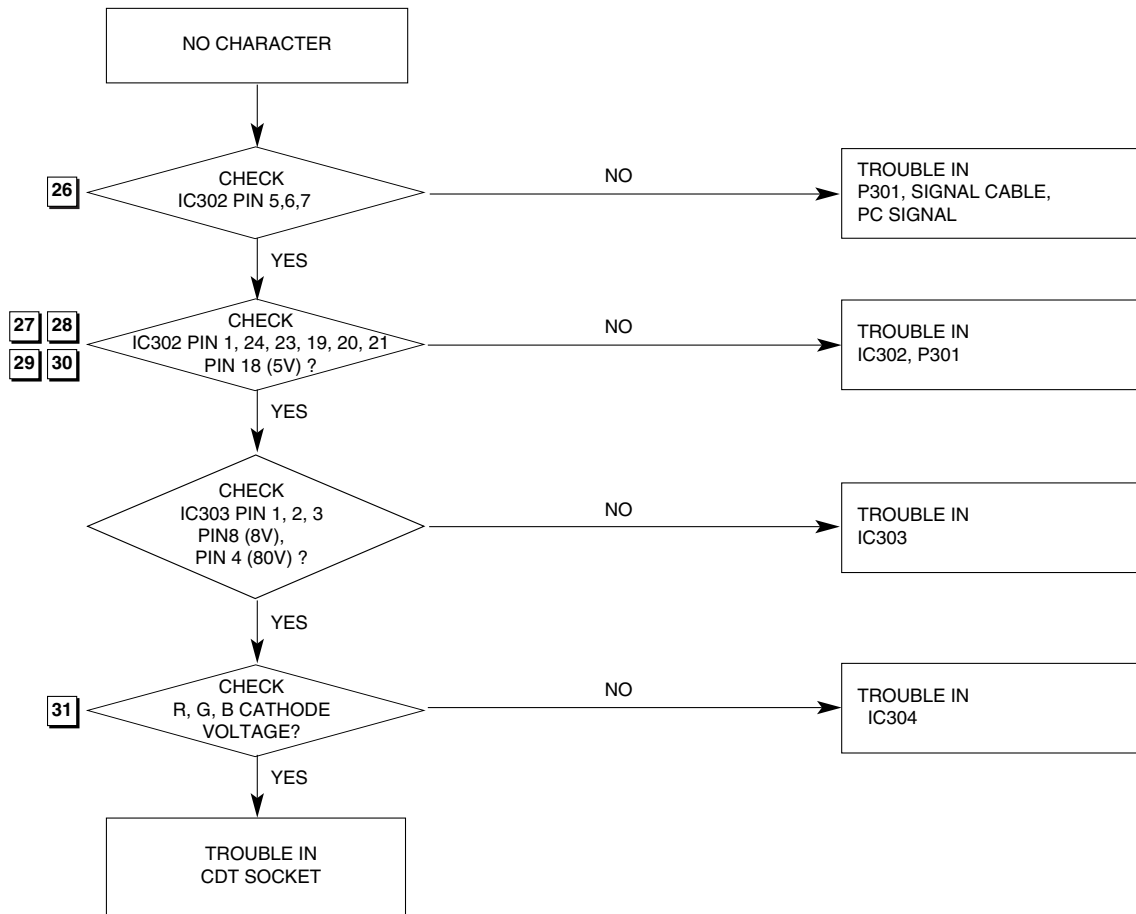


3. NO RASTER

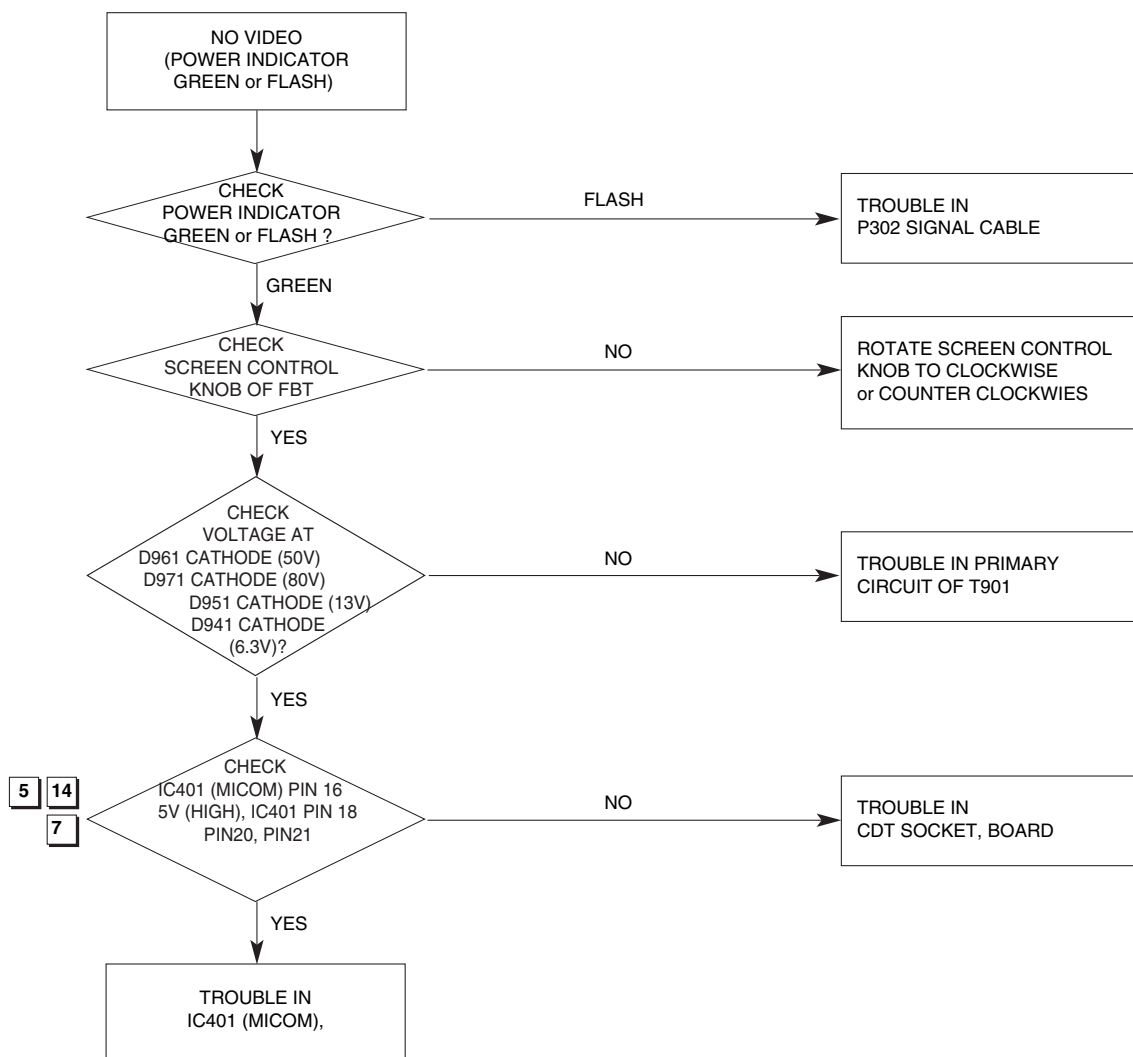


Waveforms

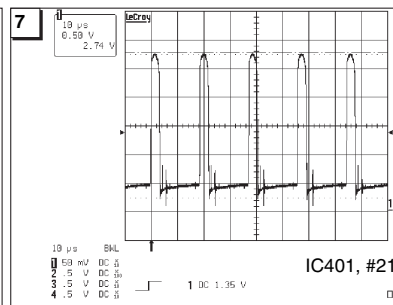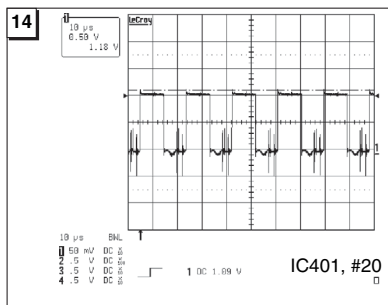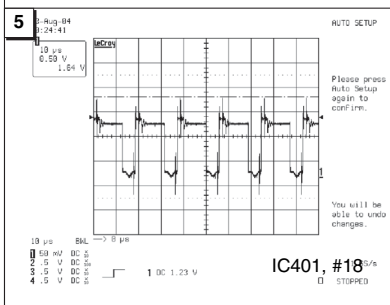


4. NO VERTICAL DEFLECTION

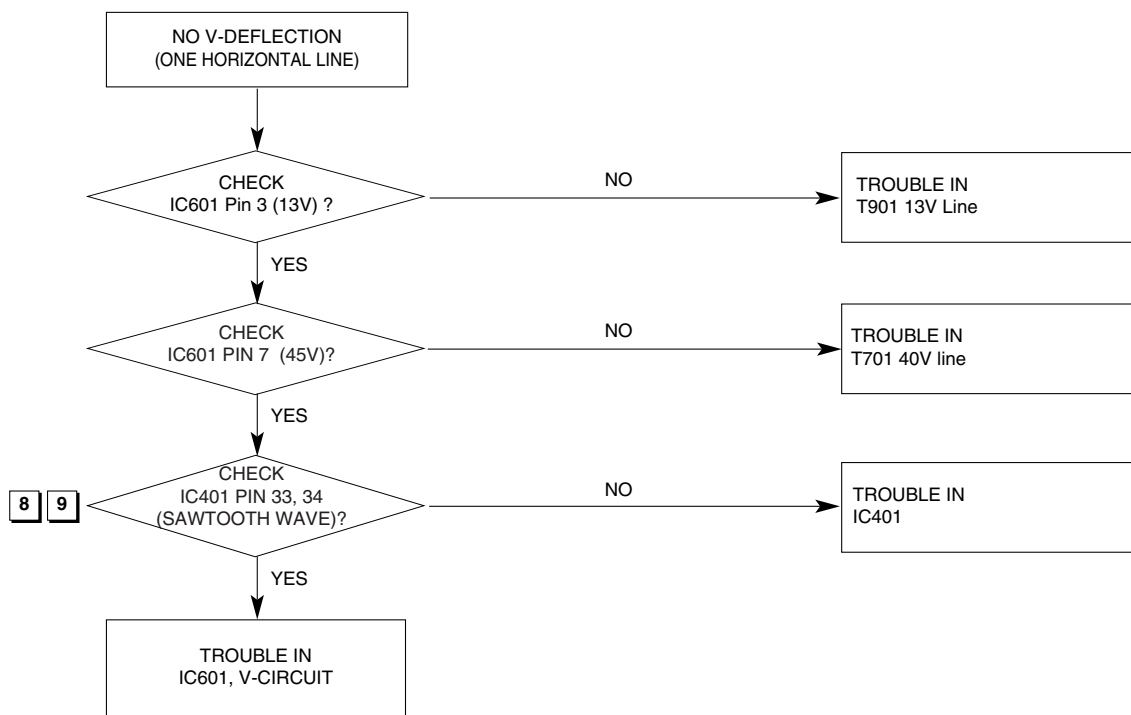


Waveforms

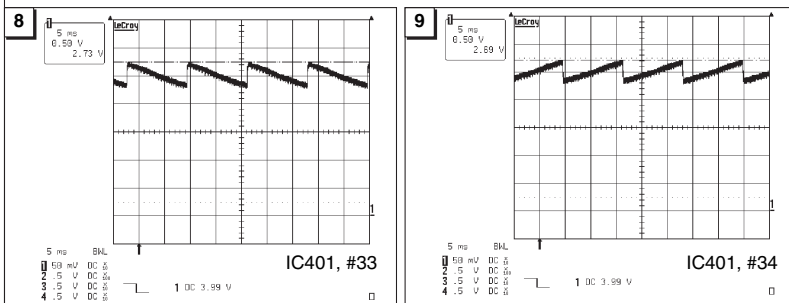

5. TROUBLE IN DPM

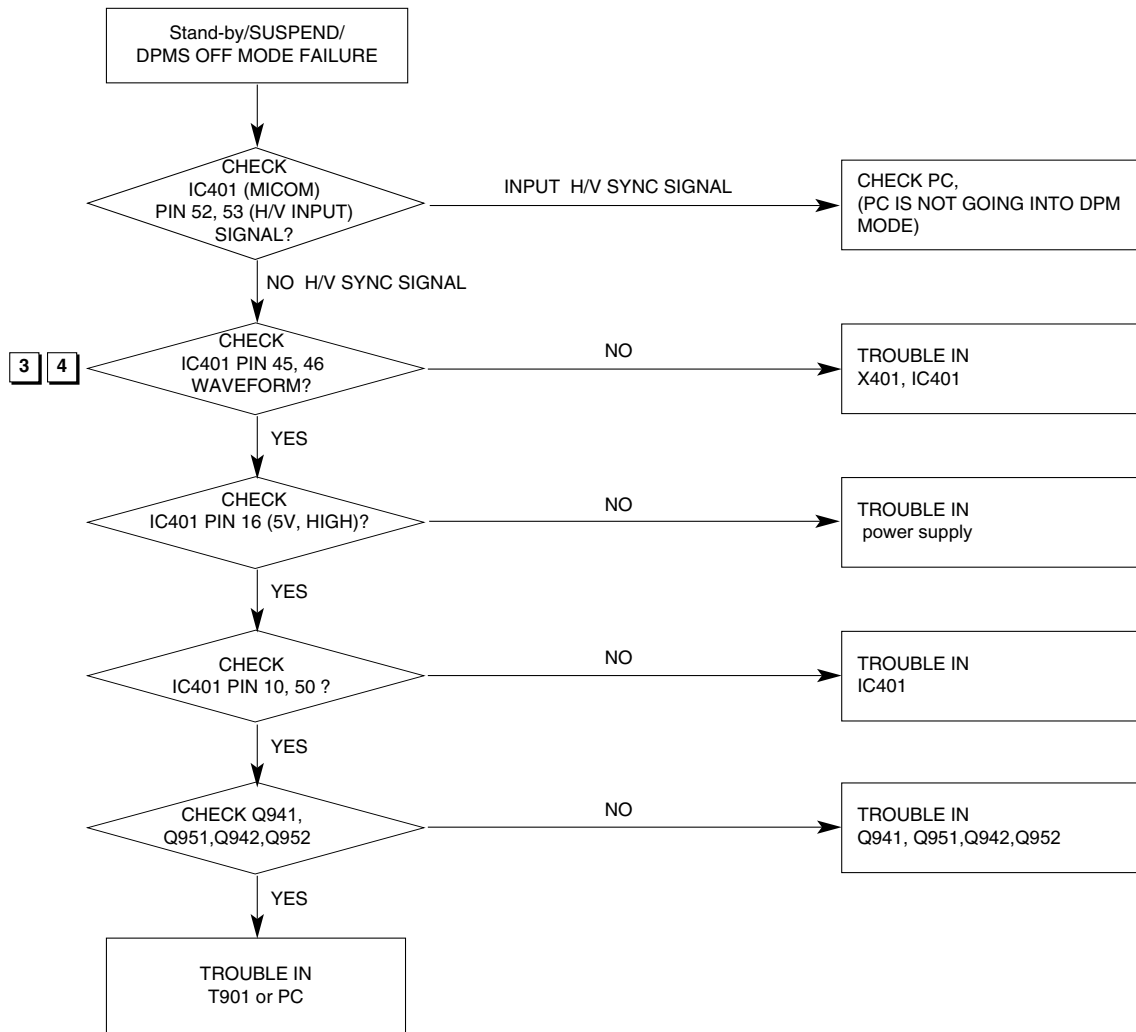


Waveforms

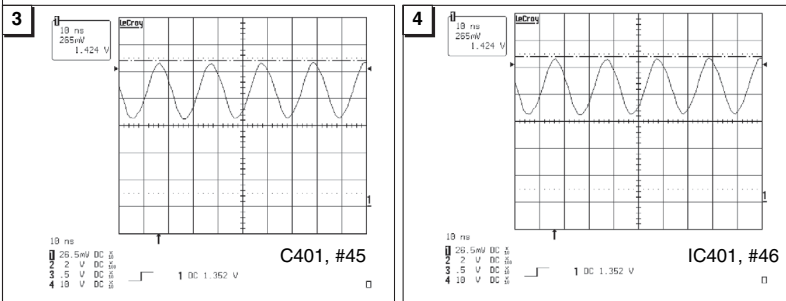


DPMS TABLE

ITEM MODE	H/V SYNC	VIDEO	LED
NORMAR	ON/ON	NORMAL	GREEN
SLEEP	OFF ONE	OFF(0V)	FLASH
OFF	OFF/OFF	OFF(0V)	FLASH


6. NO DEGAUSSING

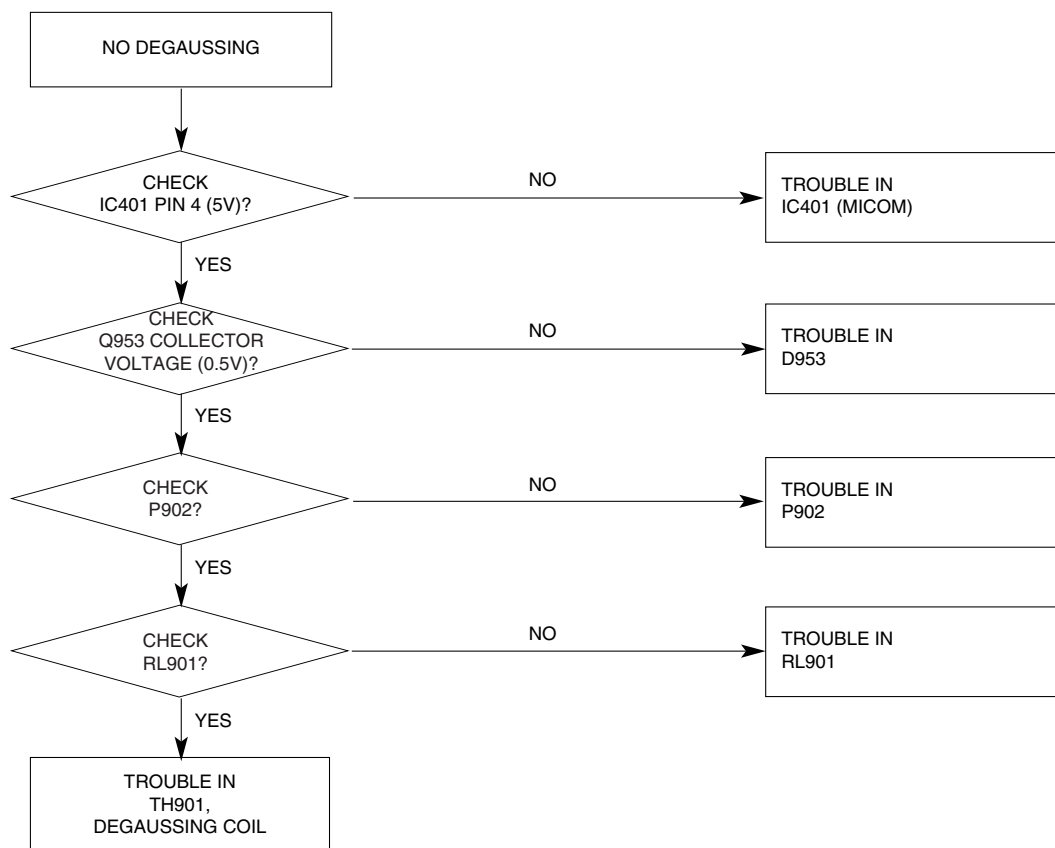


7. H_Deflection Failure

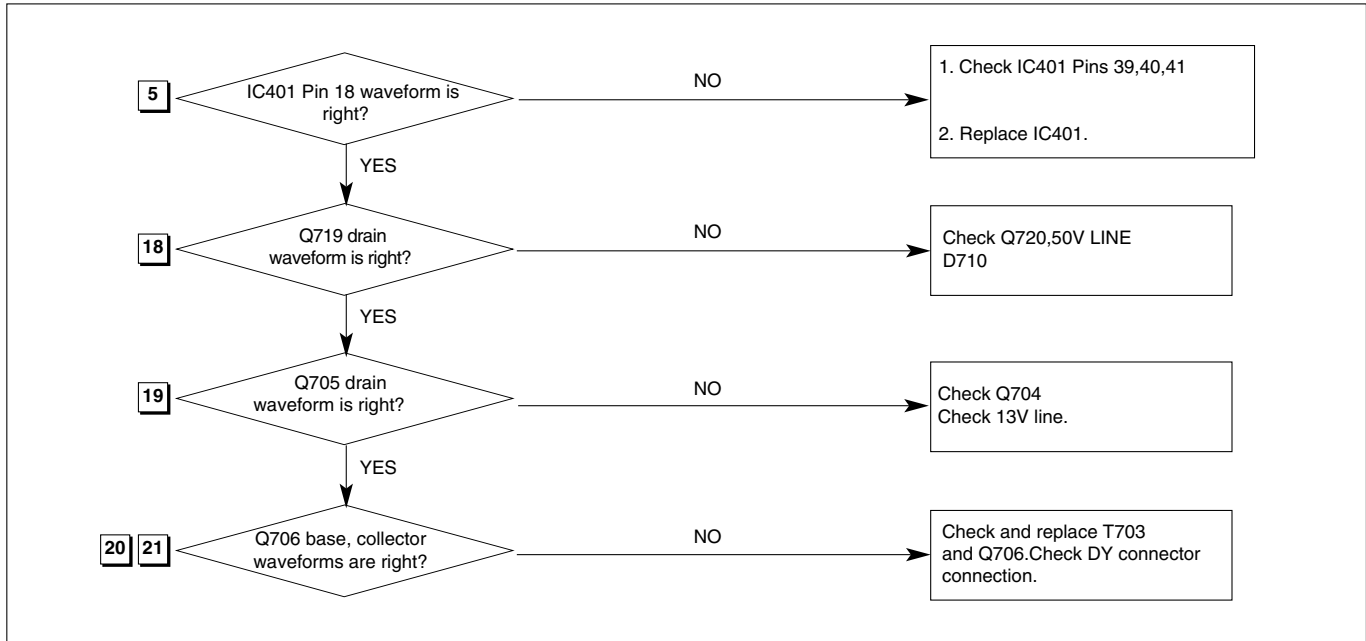


8. Invariable H_Size

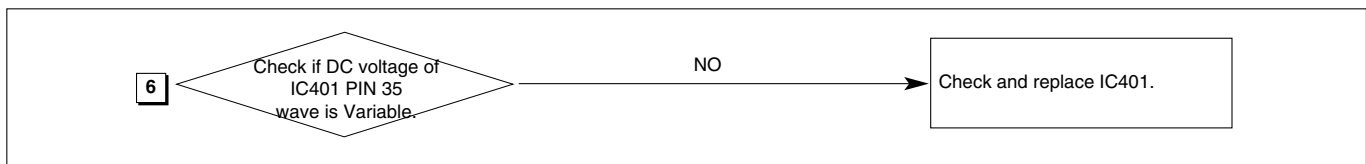

Waveforms

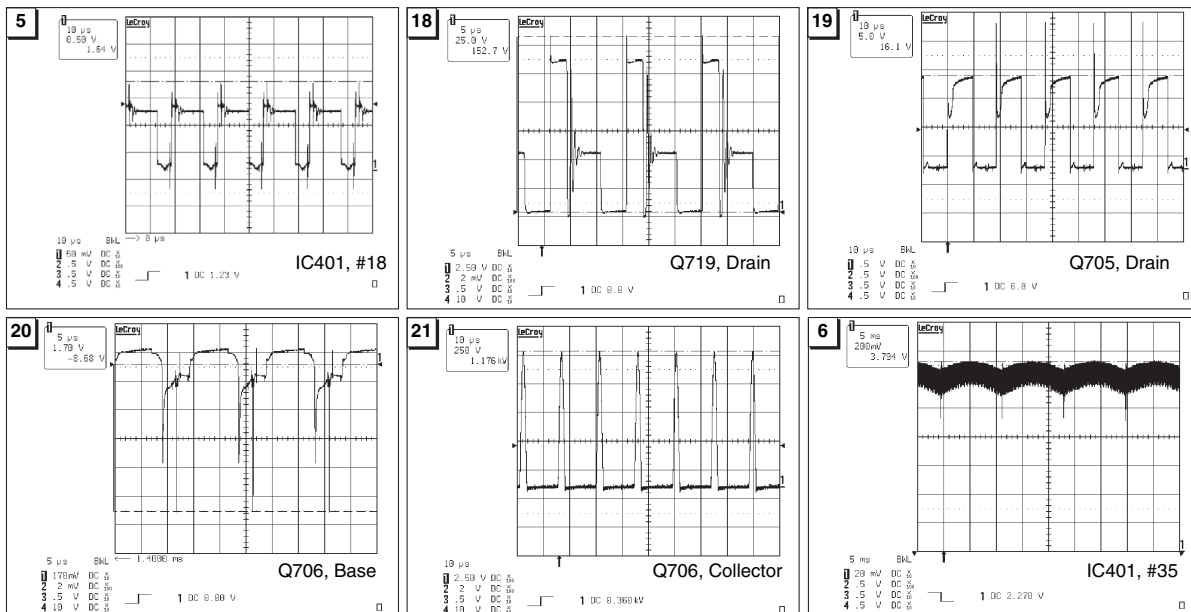


9. TROUBLE IN H-LINEARITY

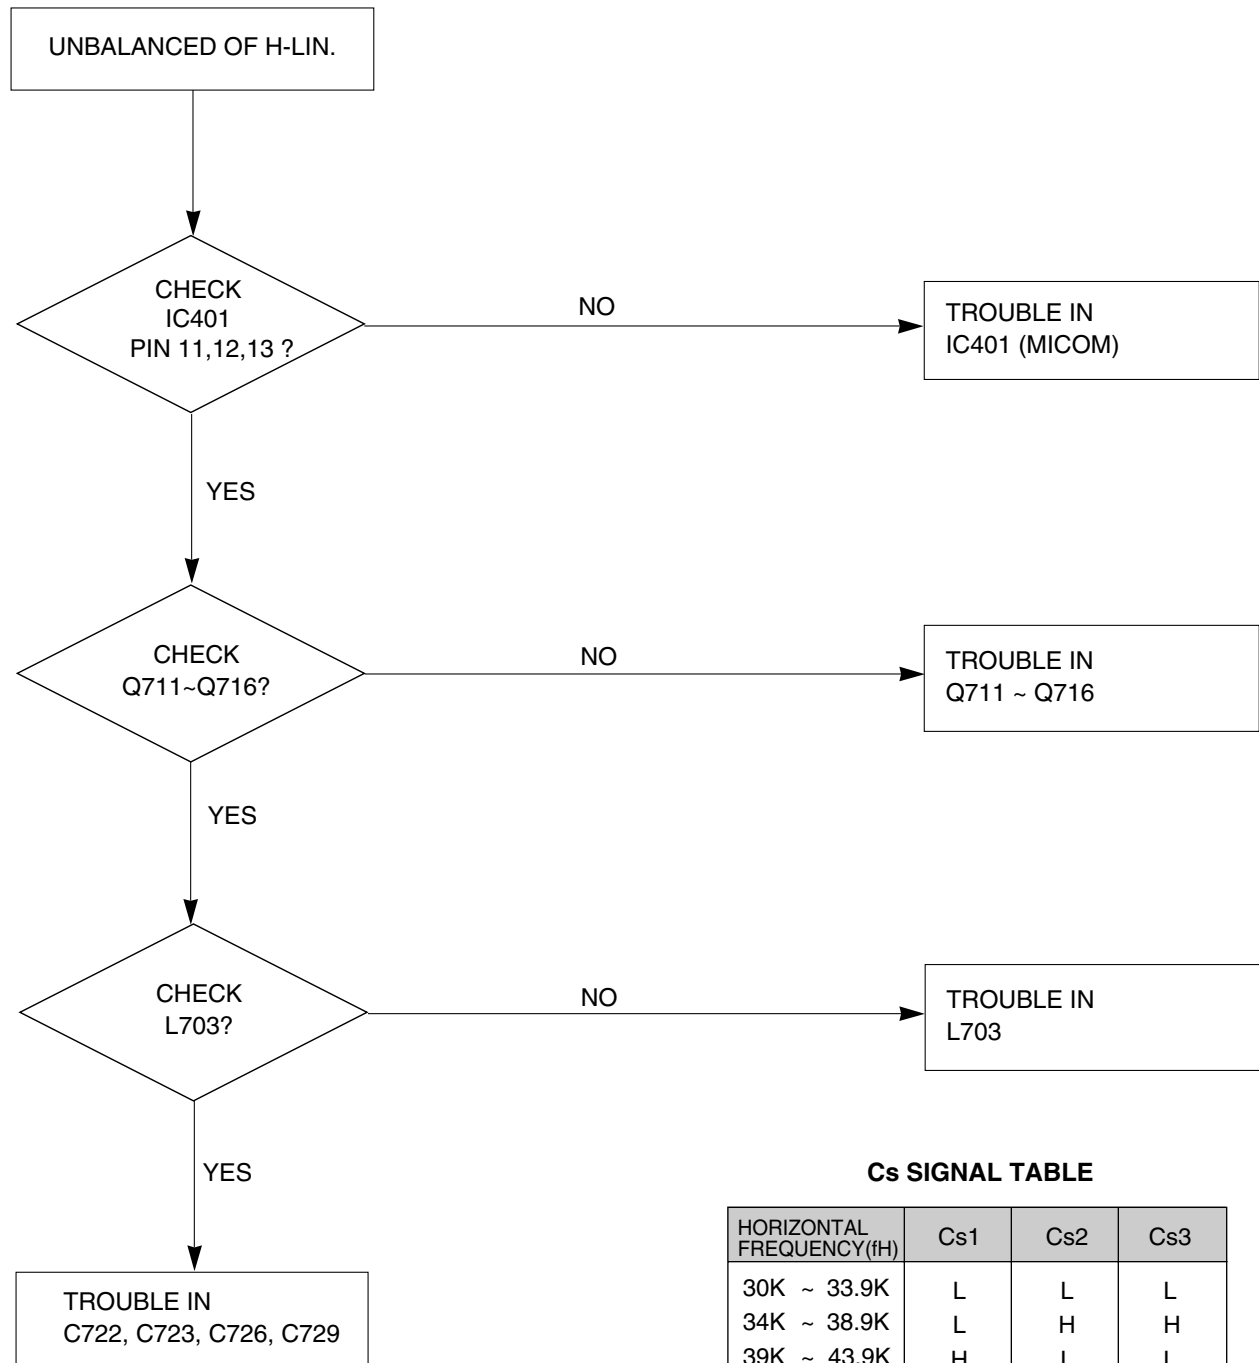


Cs SIGNAL TABLE

HORIZONTAL FREQUENCY(fH)	Cs1	Cs2	Cs3
30K ~ 33.9K	L	L	L
34K ~ 38.9K	L	H	H
39K ~ 43.9K	H	L	L
44K ~ 48.9K	H	L	L
49K ~ 51.9K	H	L	H
52K ~ 57.9K	H	L	H
58K ~ 61.9K	H	H	L
62K ~ 65.9K	H	H	H
66K ~ 71K	H	H	H

10. Abnormal H_Size

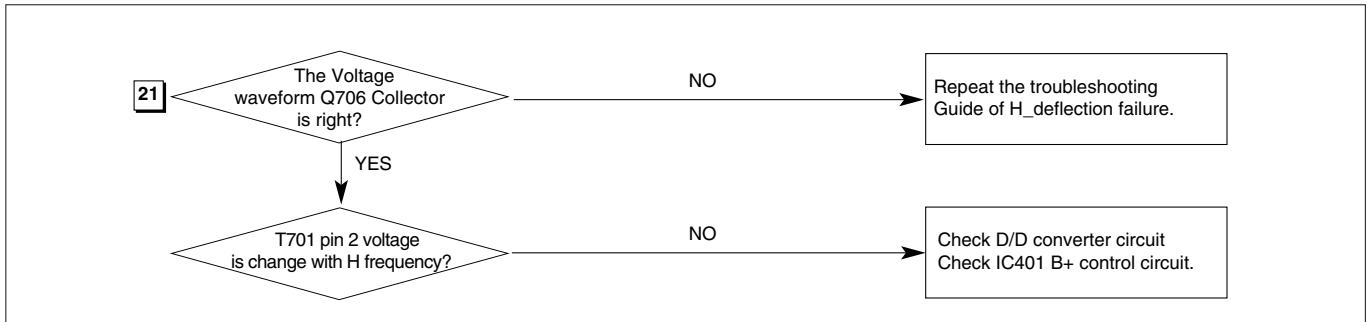


11. Side Pin or Trap Failure

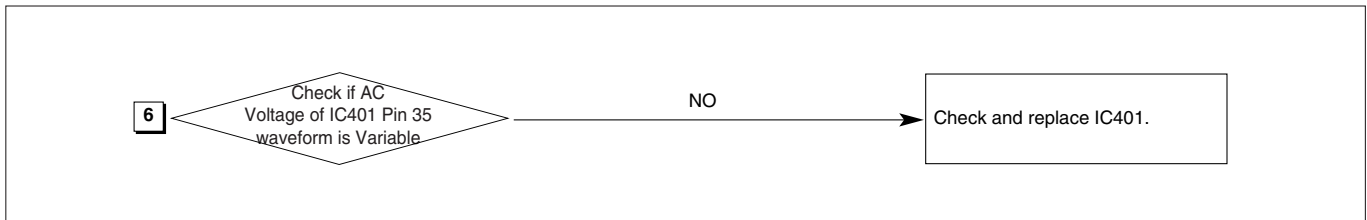


12. Para. or Pin Balance Failure




Waveforms

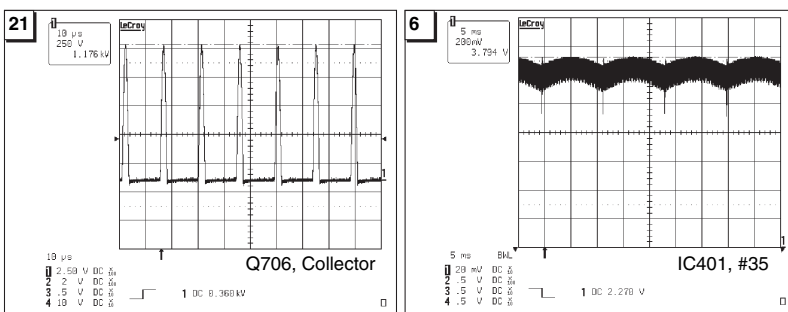


13. Tilt Failure

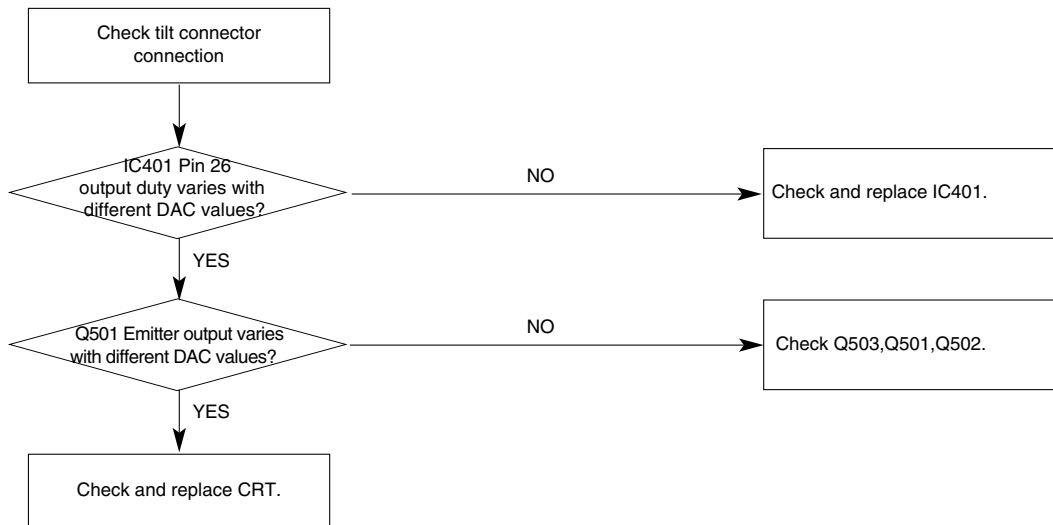


14. V Size or Pos. Variation Failure

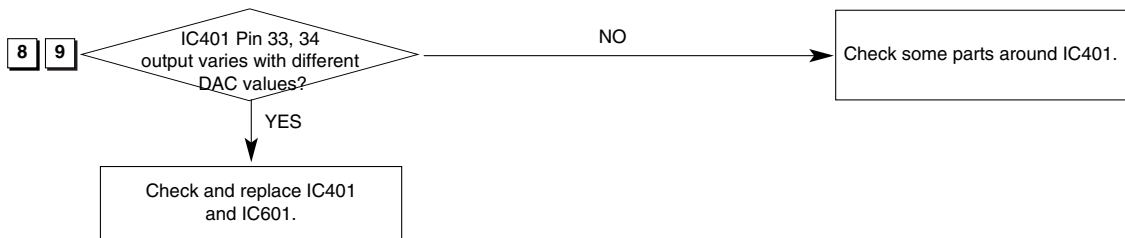


Waveforms

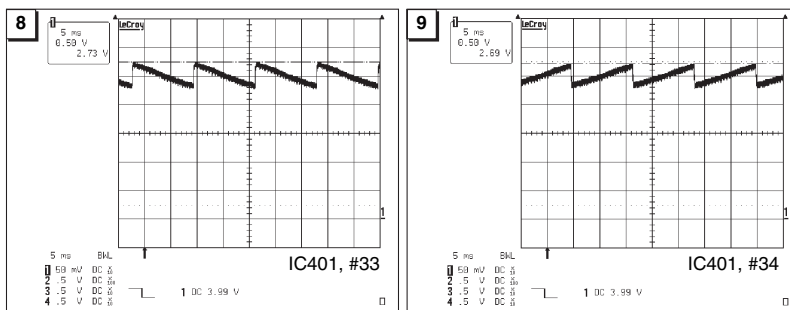


15. High Voltage Failure

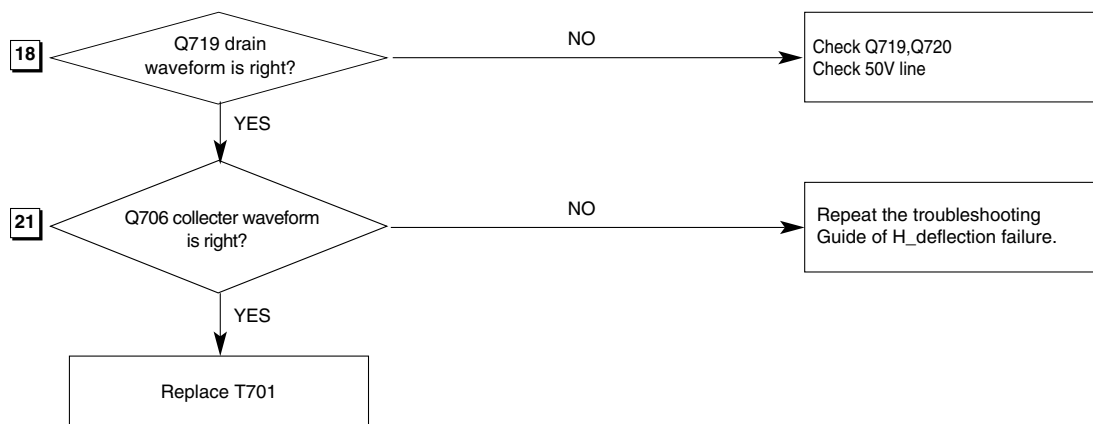


Waveforms

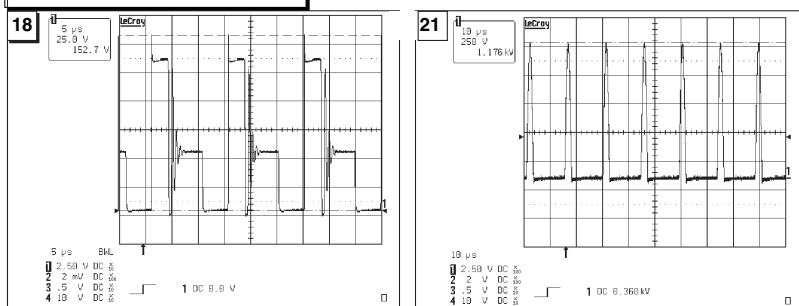


16. ABL Failure

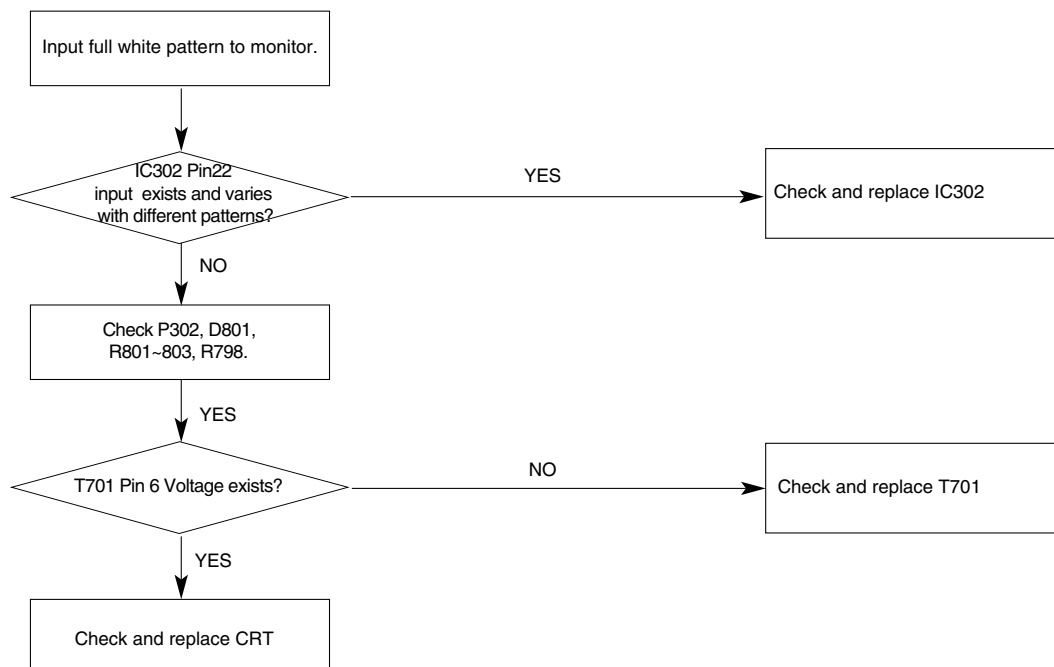


17. Focus Failure

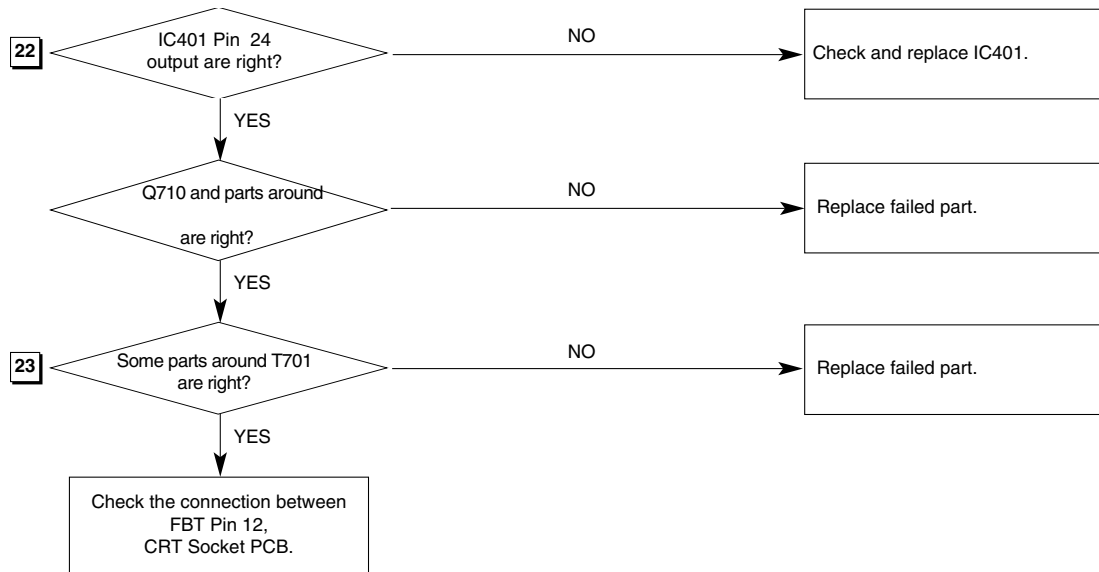


Waveforms

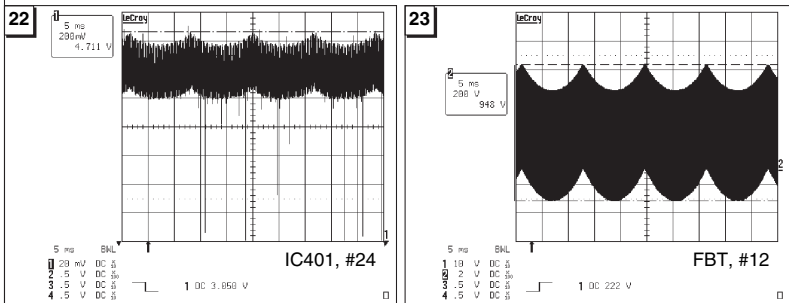

18. Micom Failure

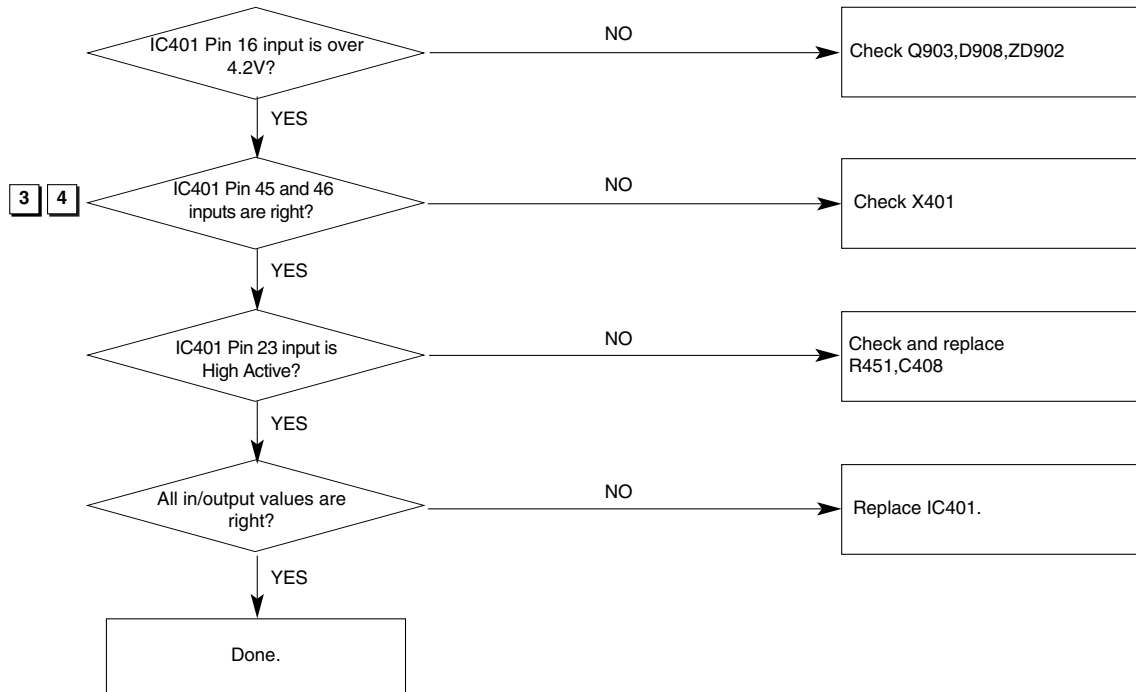


Waveforms

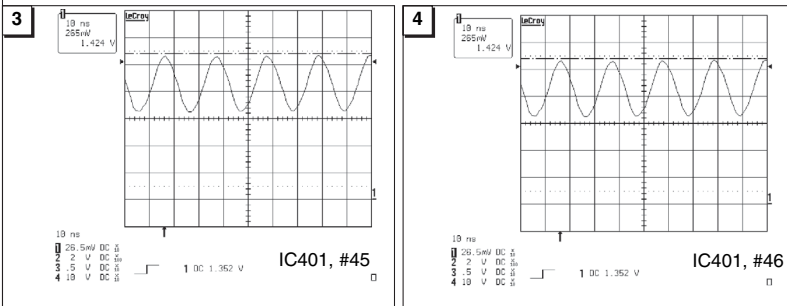


19. OSD Failure

Change IC302


20. User Control Failure

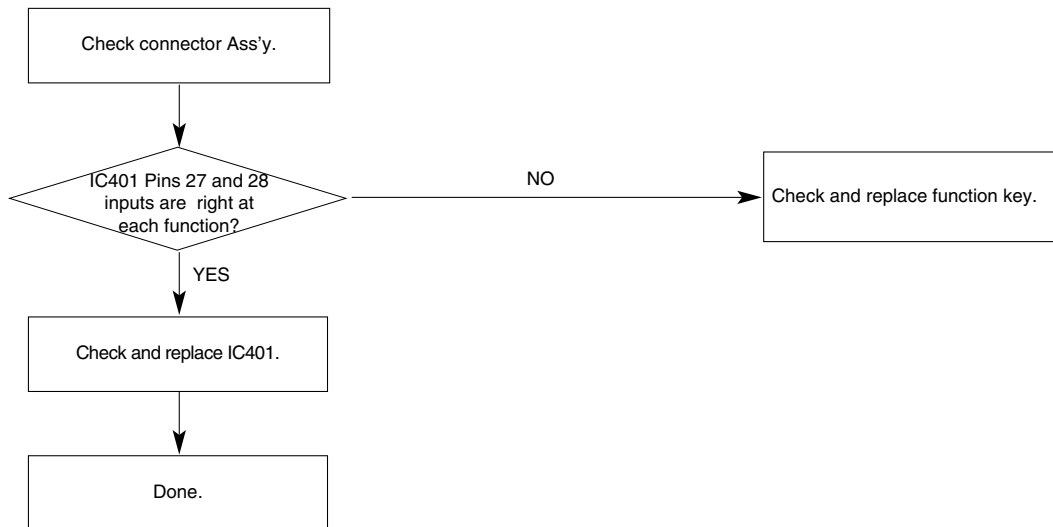


21. Missing Color

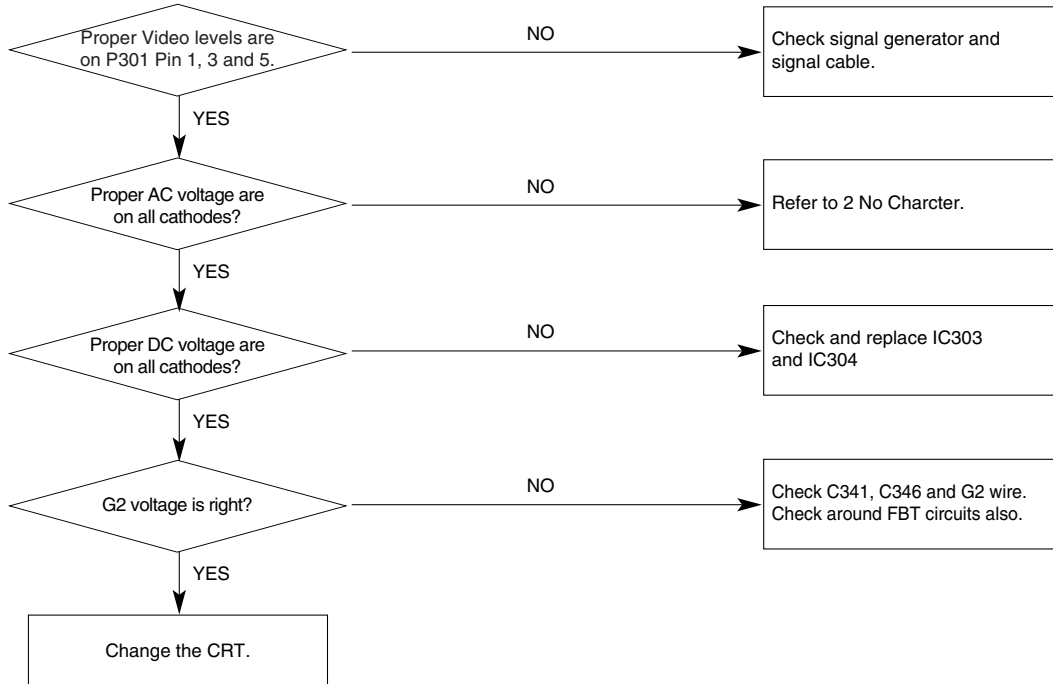


22. Visible Retrace

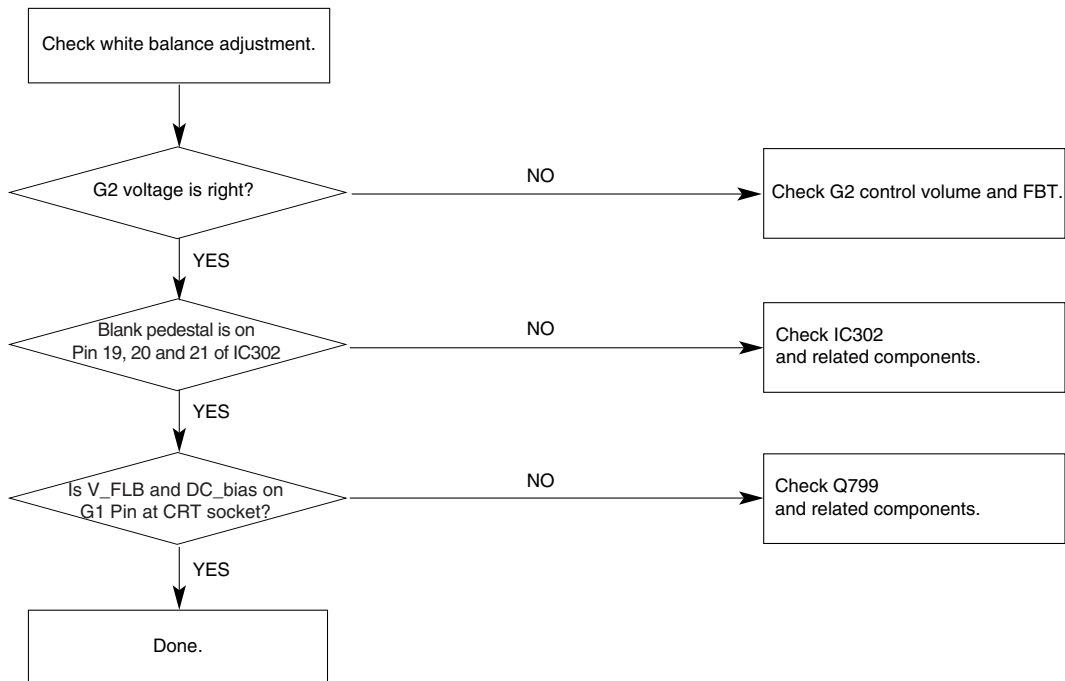


23. Purity Failure

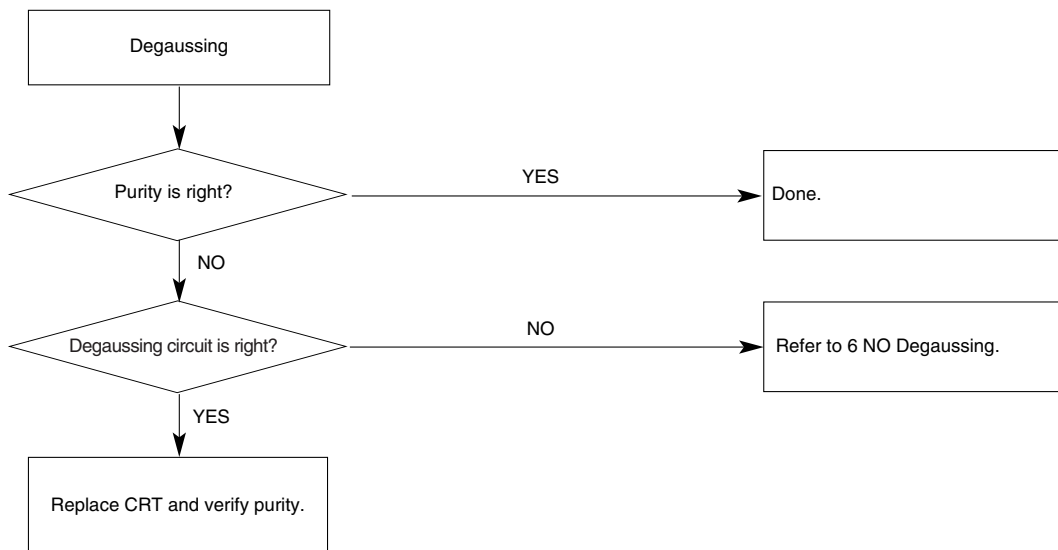


24. Misconvergence

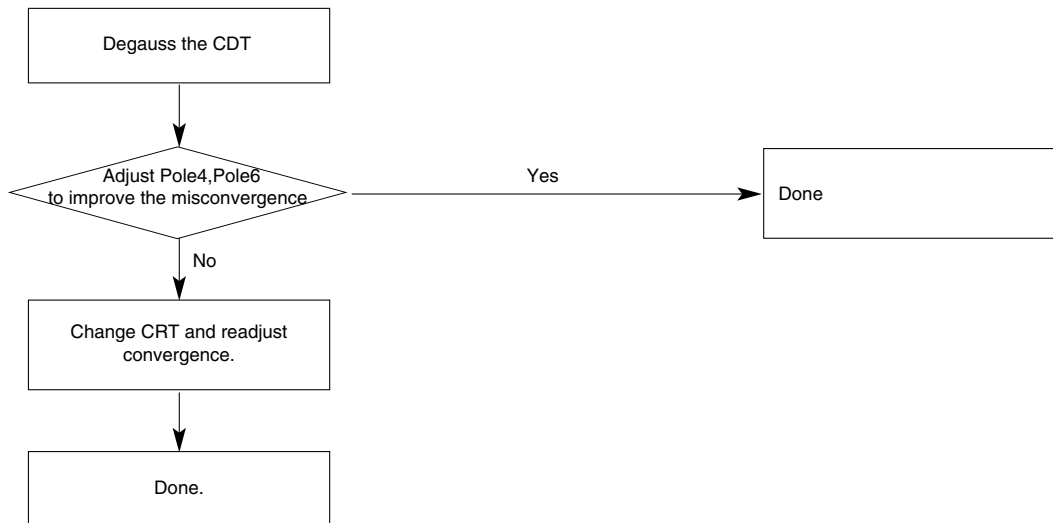

25. Poor Focus

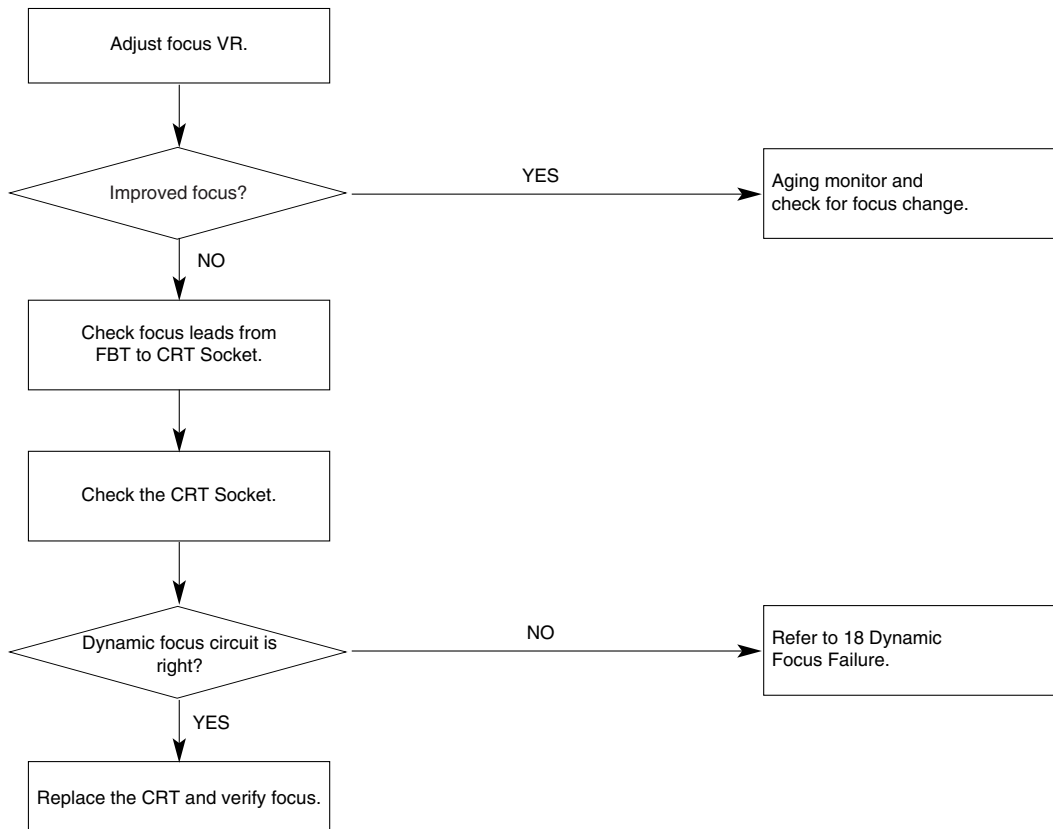

EXPLODED VIEW

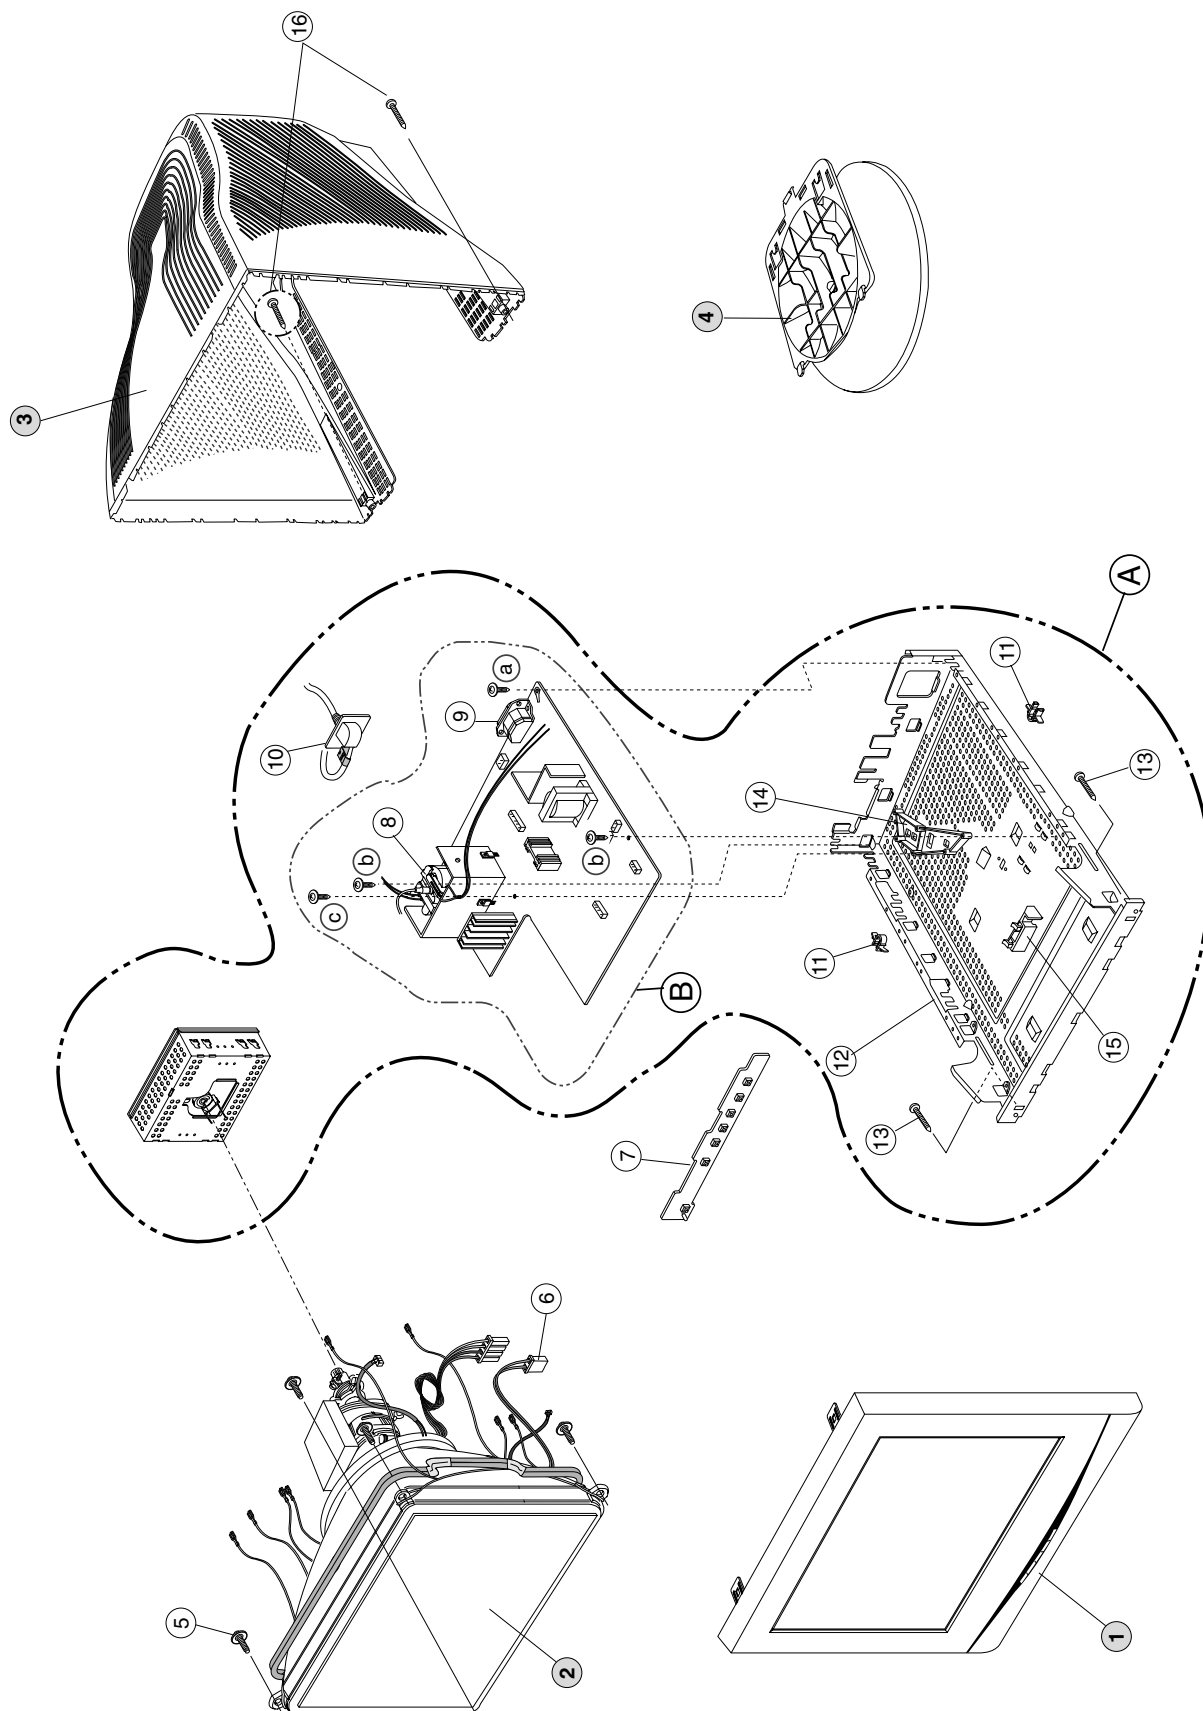

EXPLODED VIEW PARTS LIST

Ref.No	P/NO	Description
1	3091TKC131A	CABINET ASSEMBLY F730B BRAND C098 NT
	3091TKC131D	CABINET ASSEMBLY F730B BRAND C098 TCO03
	3091TKC131C	CABINET ASSEMBLY F730BY BRAND C098 NANO SILVER,TCO03
2	6318L17021A	M41QEU423X51NDDH LG-PHILIPS DISPLAYS 70KHZ 29.1MM FLATRON TCO RTC
3	3809TKC042A	BACK COVER ASSEMBLY 2ND FLATRON 3808TKC041A (17")
4	3043TKK103A	TILT SWIVEL ASSEMBLY FB770H T060 B058
	3043TKK103D	TILT SWIVEL ASSEMBLY TILT SWIVEL ASSEMBLY
5	339-002H	SCREW ASSY PHP+5*20(FZMY)+GW18 NEW TYPE
6	6140TC2014H	COIL,DEGAUSSING 14OHM 0.5MM 110T 17" F700BL WITH EARTH
7	6871TST585E	PWB(PCB) ASSEMBLY,SUB F730BL CONTROL TOTAL BRAND KLCNST
8	6174T11006C	FBT (FLY BACK TRANSFORMER) C93 BSC25-1458 FUJIAN FURI(HITACHI) 17"/70KHZ FLAT
9	6620TKB002B	SOCKET(CIRC),POWER SA-4S HUA JIE AC UNIVERSAL 3PIN BLACK
10	6850TA9012A	CABLE,D-SUB UL20276-9C(5.8MM) AT 1560MM GRAY(85964) T710BJ DM
11	4930TKK031C	HOLDER PCB FIX , PC+ABS
12	4950TKK368A	METAL
13	332-102E	SCREW,DRAWING D4.0 L16.0 MSWR/FZMY -
14	4810TKK204H	BRACKET 700BK HOLDER FBT
15	4930TKK036A	HOLDER PCB FIX FB770G 2ND FLATRON
16	332-102E	SCREW,DRAWING D4.0 L16.0 MSWR/FZMY -
A	3313T17351L	MAIN TOTAL ASSEMBLY F730BL BRAND CA-136 KLRUEET
B	6871TMT611J	PWB(PCB) ASSEMBLY,MAIN F700BL KLRUEET BRAND CA-136 TOTAL
a	332-112F	SCREW,DRAWING D3.5 L10.0 MSWR/FZMY +SW3.5+RW3.5
b	4001TKK004E	SCREW ASSEMBLY TAPTITE P TYPE D3.0 L10.0 MSWR/FZMY SW3+RW10
c	332-095B	SCREW,DRAWING PZP+3*10(MSWR/FZMY)

REPLACEMENT PARTS LIST

CAUTION: BEFORE REPLACING ANY OF THESE COMPONENTS,
READ CAREFULLY THE **SAFETY PRECAUTIONS** IN THIS MANUAL.

* NOTE : **S** SAFETY Mark
AL ALTERNATIVE PARTS

MODEL : F730BL.KLRUQET				2005.02.23
*S	*AL	LOC NO.	PART NO.	DESCRIPTION/SPECIFICATON
CAPACITORS				
		C301	0CQ1021N409	0.001UF D 100V 5% PE TP5
		C302	0CE106CF638	"10UF SHL,SD 16V M FM5 TP 5"
		C303	0CC5600K415	56P 50V J NP0 TP
		C304	0CC5600K415	56P 50V J NP0 TP
		C305	0CE476CF638	"47UF SHL,SD 16V M FM5 TP 5"
		C306	0CZZTFT001M	ECQB1H103JF3 MATSUSHITA 50V 10000PF 5% TAPING 103J
		C307	0CC5600K415	56P 50V J NP0 TP
		C308	0CK1020K515	1000PF 50V K B TR
		C309	0CK1040K945	0.1UF 50V Z F TR
		C311	0CK1040K945	0.1UF 50V Z F TR
		C312	0CK1040K945	0.1UF 50V Z F TR
		C313	0CK1040K945	0.1UF 50V Z F TR
		C314	0CC4700W405	47PF 500V J SL TP
		C315	0CE476EF638	47UF KMG 16V M FM5 TP 5
		C316	0CK10301945	"10000PF D 1KV 80%,-20% F(Y5V) TR"
		C317	0CK1040K945	0.1UF 50V Z F TR
		C318	0CK1040K945	0.1UF 50V Z F TR
		C319	0CK1040K945	0.1UF 50V Z F TR
		C320	0CK10202515	1000PF D 2KV 10% TR B(Y5P)
		C321	0CE225CK638	"2.2UF SHL,SD 50V M FM5 TP 5"
		C323	0CE476CF638	"47UF SHL,SD 16V M FM5 TP 5"
		C324	0CK1040K945	0.1UF 50V Z F TR
		C325	181-288B	MKT 100V 104JTR PHS26104
		C326	0CC2200W415	22PF 500V J NP0 TR
		C327	181-288B	MKT 100V 104JTR PHS26104
		C328	0CE226EN638	22UF KMG 100V M FM5 TP 5
		C329	181-288B	MKT 100V 104JTR PHS26104
		C330	181-288B	MKT 100V 104JTR PHS26104
		C331	181-288G	MKT 100V 334JTR PHS26334
		C332	181-288G	MKT 100V 334JTR PHS26334
		C333	181-288G	MKT 100V 334JTR PHS26334
		C334	181-288B	MKT 100V 104JTR PHS26104
		C335	181-288B	MKT 100V 104JTR PHS26104
		C339	0CK1520W515	1500P 500V K B TS
		C340	181-288B	MKT 100V 104JTR PHS26104
		C341	0CK10202515	1000PF D 2KV 10% TR B(Y5P)
		C344	181-288B	MKT 100V 104JTR PHS26104
		C346	0CK10302940	0.01M 2KV Z F S
		C372	0CK1040K945	0.1UF 50V Z F TR
		C401	0CK1040K945	0.1UF 50V Z F TR
		C404	0CK1040K945	0.1UF 50V Z F TR
		C405	0CE477CF638	470UF SHL TYPE 16V M FM5 TP 5
		C406	0CK10102515	100PF D 2KV 10% B(Y5P) TR
		C407	0CQ4721N409	0.0047UF D 100V 5% PE TP5
		C408	0CK1040K945	0.1UF 50V Z F TR
		C409	0CE106CF638	"10UF SHL,SD 16V M FM5 TP 5"
		C410	0CK1010K515	100PF 50V K B TR
		C411	0CK1010K515	100PF 50V K B TR
		C412	0CK1020K515	1000PF 50V K B TR
		C413	0CK1010K515	100PF 50V K B TR
		C414	0CE106CF638	"10UF SHL,SD 16V M FM5 TP 5"
		C415	0CK2220K515	2200P 50V K B TS
		C416	0CQ1031N409	0.01U 100V J POLY TP
		C417	0CK1040K945	0.1UF 50V Z F TR

*S	*AL	LOC NO.	PART NO.	DESCRIPTION/SPECIFICATON
		C419	0CQ2221N409	2200PF 100V J PE TP
		C420	0CQ6831N509	0.068U 100V K POLY TP
		C421	0CK1020K515	1000PF 50V K B TR
		C422	0CK2220K515	2200P 50V K B TS
		C423	0CK2220K515	2200P 50V K B TS
		C424	0CE475CK638	"4.7UF SHL,SD 50V M FM5 TP 5"
		C426	0CK4710K515	470PF 50V K B TR
		C427	0CK4710K515	470PF 50V K B TR
		C501	0CE106CF638	"10UF SHL,SD 16V M FM5 TP 5"
		C601	0CE227EF638	"220UF KMG,RD 16V 20% TP 5 FM5"
		C602	181-288K	MKT 100V 683JTR PHS26683
		C603	0CE107EK638	100UF KMG 50V M FM5 TP 5
		C604	0CZZTFT001V	ECQB1H473JM3 473J 50V TP5.0 MATSUSHITA
		C605	0CK1020W515	1000PF D 500V 10% B(Y5P) TR
		C701	0CK1040K945	0.1UF 50V Z F TR
		C712	0CK1040K945	0.1UF 50V Z F TR
		C713	0CK2210K515	220P 50V K B TS
		C714	0CE107CH638	"100UF SHL,SD 25V M FM5 TP 5"
		C715	181-288N	MKT 100V 103JTR PHS86103
		C719	0CZZTAB001F	SHL-BP SYE / SWE 50V 3.3UF 20% BULK EB770H
		C722	181-303C	154J 30.0*17.5*10.5*20.0 250V J PU FM20
		C723	181-305A	MPP 250V 104J S=10.0
		C724	0CK1040K945	0.1UF 50V Z F TR
		C725	0CK6810W515	680P 500V K B TS
		C726	181-305Y	MPP 250 204J S=10.0
		C727	0CK1040K945	0.1UF 50V Z F TR
		C729	181-305L	684J 26.0*19.0*12.5*15.0 250V J MPP FM15
		C730	0CK1040K945	0.1UF 50V Z F TR
		△ C731	0CBZTBU004B	472J 29.0*20.0*9.0*20.0 2.5KV J BUP FM20
		C733	0CBZTBU003H	362J 20.0*12.0*7.0*10.0 800V J BUP FM10
		C738	181-302Z	823J 20.0*17.5*10.0*10.0 250V J PU FM10
		C739-1	0CE106CN638	"10UF SHL,SD 100V M FM5 TP 5"
		C740	0CE227EL630	220UF KMG 63V 20% FM5 BULK
		C741	0CZZTFT002B	ECQV1H154JZ3 154J 50V TP5.0 MATSUSHITA
		C744	181-305L	684J 26.0*19.0*12.5*15.0 250V J MPP FM15
		C745	0CK2710W515	270P 500V K B TS
		C748	0CK1510W515	150PF 500V K B TR
		C749	0CE4756Q638	4.7000UF SMS 200V M FM5 TP5
		C750	0CK1040K945	0.1UF 50V Z F TR
		C756	0CK4700K515	47PF D 50V 10% B(Y5P) TR
		C767	0CK10301945	"10000PF D 1KV 80%,-20% F(Y5V) TR"
		C801	181-288B	MKT 100V 104JTR PHS26104
		C822	0CK1040K945	0.1UF 50V Z F TR
		C830	0CK10102515	100PF D 2KV 10% B(Y5P) TR
		△ C901	0CZZTFB001B	"BULK MPX 474K2YL (X2) ETR 275V 474 10%,-10% BULK 22.5 EUROPTRONIC ELECTRONI(SHENZHEN)"
		△ C902	0CZZTFB001C	"MPX104K2YL ETR 275V 0.1UF 10%,-10% BULK X2"
		△ C903	0CZZTCB003D	BULK 7.5 CS E 102M 8.0 250V TDK
		△ C904	0CZZTCB003A	BULK 7.5 CS E 222M 10.5 250V TDK
		△ C905	0CZZTCB003A	BULK 7.5 CS E 222M 10.5 250V TDK
		△ C906	0CZZTCB003D	BULK 7.5 CS E 102M 8.0 250V TDK
		△ C907	0CZZTCB003C	BULK 7.5 CS E 472M 14.5 250V TDK

*S	*AL	LOC NO.	PART NO.	DESCRIPTION/SPECIFICATON
		C908	0CEZTBU002D	180UF 25.4*35 SMH/HC 400V M VNSN BULK
		C909	0CK10301945	"10000PF D 1KV 80%,-20% F(Y5V) TR"
		C910	0CKZTTA002A	220PF K 1KV R TP5.0
		C911	0CE475CK638	"4.7UF SHL,SD 50V M FM5 TP 5"
		C912	0CK3310K515	330P 50V K B TS
		C913	0CE476CK638	"47UF SHL,SD 50V M FM5 TP 5"
		C914	0CZZTFT001P	ECQB1H153JM3 153J 50V TP5.0 MATSUSHITA
		C915	0CK6810K515	680P 50V K B TS
		C917	0CK1020K515	1000PF 50V K B TR
		C918	0CK1040K945	0.1UF 50V Z F TR
		C921	0CZZTCB003A	BULK 7.5 CS E 222M 10.5 250V TDK
		C941	0CE108CD618	1000UF SHL 10V M FL TP5
		C942	0CE107CF638	"100UF SHL,SD 16V M FM5 TP 5"
		C943	0CKZTTA002P	R/DCH TDK 1KV 560PF 15%/ -30% TAPING 125DEG.
		C951	0CE108CF630	1000UF SHL 16V M FM5 BULK
		C952	0CE107CF638	"100UF SHL,SD 16V M FM5 TP 5"
		C953	0CE477CF638	470UF SHL TYPE 16V M FM5 TP 5
		C954	0CE108ED618	1000UF KMG 10V M FL TP 5
		C971	0CE476EK638	47UF KMG 50V M FM5 TP 5
		C998	0CE227EL630	220UF KMG 63V 20% FM5 BULK
DIODEs				
		D201	0DLGP0060BA	XIAMEN G&P GP34272C/S044-ZY-45-HB BK BLUE-YELLOW 200/20
		D301	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D302	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D303	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D304	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D305	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D306	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D307	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D308	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D309	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D310	0DSPT00019A	PSS244 PCTRONIX TP DO34 280V 625MA 1000MA 50NSSEC 10UA
		D311	0DSPT00019A	PSS244 PCTRONIX TP DO34 280V 625MA 1000MA 50NSSEC 10UA
		D312	0DSPT00019A	PSS244 PCTRONIX TP DO34 280V 625MA 1000MA 50NSSEC 10UA
		D313	0DSPT00019A	PSS244 PCTRONIX TP DO34 280V 625MA 1000MA 50NSSEC 10UA
		D314	0DSPT00019A	PSS244 PCTRONIX TP DO34 280V 625MA 1000MA 50NSSEC 10UA
		D315	0DSPT00019A	PSS244 PCTRONIX TP DO34 280V 625MA 1000MA 50NSSEC 10UA
		D316	0DRTW00119A	1N4005-1021 TIWAN SEMI TP DO41 600V 1A 30A 2USSEC 5.0UA
		D401	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D402	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA

*S	*AL	LOC NO.	PART NO.	DESCRIPTION/SPECIFICATON
		D403	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D406	0DSPT00019A	PSS244 PCTRONIX TP DO34 280V 625MA 1000MA 50NSSEC 10UA
		D501	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D702	0DRGF00120A	MUR460(15MM) GULF BK DO201AD 600V 4A 150A 45NSSEC 10UA
		D703	0DRGF00120A	MUR460(15MM) GULF BK DO201AD 600V 4A 150A 45NSSEC 10UA
		D704	0DRFC00300A	"FFPF04U150STU,LF FAIR CHILD BK TO220F 1500V 4A 40A 150NSSEC 7UA"
		D705	0DRTW00089A	SRT14(1021) TIWAN SEMI TP NON 40V 1A 25A .SEC 0.5MA
		D706	0DRFC00300A	"FFPF04U150STU,LF FAIR CHILD BK TO220F 1500V 4A 40A 150NSSEC 7UA"
		D710	0DR400409AC	UF4004 GULF TP DO41 400V 1A 30A 50NSEC 10UA
		D712	0DR100009CD	RGP10G-1021 TIWAN SEMI TP DO41 400V 1A 30A 150NSEC 5UA
		D714	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D715	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D716	0DRTW00119A	1N4005-1021 TIWAN SEMI TP DO41 600V 1A 30A 2USSEC 5.0UA
		D717	0DRTW00119A	1N4005-1021 TIWAN SEMI TP DO41 600V 1A 30A 2USSEC 5.0UA
		D718	0DRTW00119A	1N4005-1021 TIWAN SEMI TP DO41 600V 1A 30A 2USSEC 5.0UA
		D719	0DR100009DC	RGP10J-1021 TIWAN SEMI TP DO41 600V 1A 30A 250NSEC 5UA
		D721	0DR100009CD	RGP10G-1021 TIWAN SEMI TP DO41 400V 1A 30A 150NSEC 5UA
		D723	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D724	0DRTW00119A	1N4005-1021 TIWAN SEMI TP DO41 600V 1A 30A 2USSEC 5.0UA
		D768	0DD400709CC	UF4007-1021 TIWAN SEMI TP DO204AL 1000V 1A 30A 75NSEC 10UA
		D801	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D821	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D900	0DRTW00121A	D2SB60-1121 TIWAN SEMI ST GBL 600V 2A 80A _SEC 10UA
		D902	0DRGF00139A	GPP20J GULF TP DO15 600V 2.0A 70A 2.0USSEC 5.0UA
		D904	0DR100009CD	RGP10G-1021 TIWAN SEMI TP DO41 400V 1A 30A 150NSEC 5UA
		D905	0DD400709CC	UF4007-1021 TIWAN SEMI TP DO204AL 1000V 1A 30A 75NSEC 10UA
		D906	0DR100009CD	RGP10G-1021 TIWAN SEMI TP DO41 400V 1A 30A 150NSEC 5UA
		D908	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D910	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D911	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D941	0DR400409AC	UF4004 GULF TP DO41 400V 1A 30A 50NSEC 10UA
		D942	0DR400409AC	UF4004 GULF TP DO41 400V 1A 30A 50NSEC 10UA

*S	*AL	LOC NO.	PART NO.	DESCRIPTION/SPECIFICATON
		D951	0DRGF00150A	UF5404 GULF BK DO201AD 400V 3.0A 150A 50NSSEC 10.0UA
		D952	0DSPT00029A	1N4148M PCTRONIX TP DO34 100V 75VA 2000MA 4NSEC 0.025UA
		D961	0DRGS00090A	31GF6L-5701 GENERAL SEMICONDUCTOR BK NON 600V 3A 60A 30NSEC 20UA
		D971	0DD400709CC	UF4007-1021 TIWAN SEMI TP DO204AL 1000V 1A 30A 75NSEC 10UA
		ZD301	0DZPT43009A	UZ-4.3BSB PCTRONIX TP DO34 500MW 4.3BV 5MA (52MMTP)PF
		ZD402	0DZPT56009A	UZ-5.6BSB PCTRONIX TP52 DO34 500MW 5.6BV 5MA PF
		ZD403	0DZPT56009A	UZ-5.6BSB PCTRONIX TP52 DO34 500MW 5.6BV 5MA PF
		ZD404	0DZPT56009A	UZ-5.6BSB PCTRONIX TP52 DO34 500MW 5.6BV 5MA PF
		ZD405	0DZPT56009A	UZ-5.6BSB PCTRONIX TP52 DO34 500MW 5.6BV 5MA PF
		ZD406	0DZPT56009A	UZ-5.6BSB PCTRONIX TP52 DO34 500MW 5.6BV 5MA PF
		ZD902	0DZPT51009A 5.1BV 5MA PF	UZ-5.1BSB PCTRONIX TP DO34 500MW
Ics				
		IC302	0IPRPNS025C	"LM1246DDC/NA,NOPB NATIONAL SEMICONDUCTOR 24,DIP ST LF,ONE CHIP (VIDEO+OSD)"
		IC303	0IPRPNS050A	"LM2470TA,NOPB NATIONAL SEMICONDUCTOR 9PIN TA09A ST LF,MONOLITHIC TRIPLE 7.0NS CRT DRIVER"
		IC304	0IPRPNS005A	"LM2480NA,NOPB NATIONAL SEMICONDUCTOR 8P,DIP ST LF,80V TRIPLE BIAS CLAMP"
		IC401	0IMCRPH033C	LGM41B-030/CJH PHILIPS 56 SDIP ST DEFLECTION & MICOM(L6-CDT)
		IC402	0IMMRSG044A	"M24C08-WBN6(P),LF STM 8PIN PDIP ST SERIAL IIC EEPROM"
		IC601	0IPRPPH018A	"TDA4867J PHILIPS 9PIN,ST DIP VERTICAL OUTPUT IC"
		IC901	0ISS384200A	KA3842B (PWM)
COILS & COREs				
		L702	6140TBZ025A	DR14*20 120UH 0.12*25MM 47.5T FB775B
		L703	6140TYZ011G	"- GET DR14*25,4.0UH,EB770H"
		L705	6140TBZ026C	DR15*18-C9.8 100UH 0.1*30MM 40.5T D/D CHOKE
		L901	6200TZZ004A	"SQE2626 NAMYANG BK L/FILTER 15MH,EB770H"
		L903	6210TCE003K	BAS3550T BO SUNG 3550MM AXIAL52MM
		FB301	6210TCZ001J	BAS3550T0(125-022J) BO SUNG RH3.5*5.0*0.8TMM AXIAL52MM
		FB302	6210TCE003L	BAS3580T BO SUNG 3580MM AXIAL52MM
		FB303	6210TCZ001J	BAS3550T0(125-022J) BO SUNG RH3.5*5.0*0.8TMM AXIAL52MM
		FB304	6210TCZ001J	BAS3550T0(125-022J) BO SUNG RH3.5*5.0*0.8TMM AXIAL52MM
		FB305	6210TCE003P	BRS2550B BO SUNG 2550MM RADIAL
		FB306	6210TCE003L	BAS3580T BO SUNG 3580MM AXIAL52MM

*S	*AL	LOC NO.	PART NO.	DESCRIPTION/SPECIFICATON
		FB307	6210TCE003B	BRS3580B BO SUNG 3580MM RADIAL
		FB308	6210TCE003J	BAS2550T BO SUNG 2550MM AXIAL52MM
		FB309	6210TCE003J	BAS2550T BO SUNG 2550MM AXIAL52MM
		FB310	6210TCE003A	BRD3510B BO SUNG 3510MM RADIAL
		FB313	6210TCE003J	BAS2550T BO SUNG 2550MM AXIAL52MM
		FB701	6210TCE003L	BAS3580T BO SUNG 3580MM AXIAL52MM
		FB903	6210TCE003P	BRS2550B BO SUNG 2550MM RADIAL
		FB905	6210TCE003J	BAS2550T BO SUNG 2550MM AXIAL52MM
		FB906	6210TCE003P	BRS2550B BO SUNG 2550MM RADIAL
		FB921	6210TCE003A	BRD3510B BO SUNG 3510MM RADIAL
		FB922	6210TCE003A	BRD3510B BO SUNG 3510MM RADIAL
TRANSISTORS				
		Q501	0TR320209AA	KTC3202-Y(KTC1959) TP KEC TO92 NPN
		Q502	0TR127009AA	KTA1270-Y(KTA562TM) TP KEC TO92 PNP
		Q503	0TR319809AA	KTC3198-Y(KTC1815) TP KEC TO92 NPN
		Q703	0TFFC10012A	FQPF10N20C FAIRCHILD ST TO220F 200V 9.5A
		Q704	0TR390409CA	FAIRCHILD 2N3904(TA) TP TO-92 60V 0.2A
		Q705	0TR200009AB	KTC200-Y TP KEC TO92 NPN
		Q706	0TRFC10008A	FJAF5804(TU) FAIRCHILD ST TO3PF 1500V 12A
		Q710	0TRKE90020A	MPSA44 KEC TP TO92 500V 300MA
		Q711	0TFFC10012A	FQPF10N20C FAIRCHILD ST TO220F 200V 9.5A
		Q712	0TFFC10012A	FQPF10N20C FAIRCHILD ST TO220F 200V 9.5A
		Q713	0TFFC10012A	FQPF10N20C FAIRCHILD ST TO220F 200V 9.5A
		Q714	0TR319809AA	KTC3198-Y(KTC1815) TP KEC TO92 NPN
		Q715	0TR319809AA	KTC3198-Y(KTC1815) TP KEC TO92 NPN
		Q716	0TR319809AA	KTC3198-Y(KTC1815) TP KEC TO92 NPN
		Q719	0TFFC10012A	FQPF10N20C FAIRCHILD ST TO220F 200V 9.5A
		Q720	0TR390409CA	FAIRCHILD 2N3904(TA) TP TO-92 60V 0.2A
		Q799	0TRKE90019A	MPSA92 KEC TP TO92 -300V -500MA
		Q821	0TR320509AB	KTC3205-Y(KTC2236A) TP KEC TO92L NPN
		Q901	0TF760000AD	SSS7N60B FAIRCHILD ST TO220F 650V 7A
		Q903	0TR100809AA	KSC1008C-Y TP SAMSUNG TO92 NPN
		Q941	0TR319809AA	KTC3198-Y(KTC1815) TP KEC TO92 NPN
		Q942	0TR127309AA	KTA1273-Y(KTA966A) TP KEC TO92L PNP
		Q951	0TR319809AA	KTC3198-Y(KTC1815) TP KEC TO92 NPN
		Q952	0TR127309AA	KTA1273-Y(KTA966A) TP KEC TO92L PNP
		Q953	0TR319809AA	KTC3198-Y(KTC1815) TP KEC TO92 NPN
RESISTORS				
		R201	0RD1001Q609	1K 1/4W(3 5% TA52
		R202	0RD0912Q609	91 OHM 1/4 W (3.4) 5% TA52
		R203	0RD2200Q609	220 1/4W(3 5% TA52
		R204	0RD4300Q609	430 OHM 1/4 W(3.4) 5.00% TA52
		R205	0RD1001Q609	1K 1/4W(3 5% TA52
		R206	0RD0912Q609	91 OHM 1/4 W (3.4) 5% TA52
		R207	0RD4300Q609	430 OHM 1/4 W(3.4) 5.00% TA52
		R208	0RD2200Q609	220 1/4W(3 5% TA52
		R209	0RD9100Q609	910 1/4W(3 5% TA52
		R211	0RD2200Q609	220 1/4W(3 5% TA52
		R220	0RD3901Q609	3.90K 1/4W(3 5% TA52
		R301	0RD0752Q609	75 1/4W(3 5% TA52
		R302	0RD0752Q609	75 1/4W(3 5% TA52
		R303	0RD0752Q609	75 1/4W(3 5% TA52


*S	*AL	LOC NO.	PART NO.	DESCRIPTION/SPECIFICATON
		R305	0RN6201F409	6.20K 1/6W 1% TA52
		R314	ORD1000Q609	100 1/4W(3 5% TA52
		R315	ORD1000Q609	100 1/4W(3 5% TA52
		R319	ORD4701Q609	4.70K 1/4W(3 5% TA52
		R320	ORD4701Q609	4.70K 1/4W(3 5% TA52
		R326	ORD2201Q609	2.20K 1/4W(3 5% TA52
		R327	ORD1001Q609	1K 1/4W(3 5% TA52
		R328	ORD1001Q609	1K 1/4W(3 5% TA52
		R329	ORD1001Q609	1K 1/4W(3 5% TA52
		R330	ORD1001Q609	1K 1/4W(3 5% TA52
		R331	ORD1600Q609	160 1/4W(3 5% TA52
		R332	ORD1600Q609	160 1/4W(3 5% TA52
		R333	ORD1300Q609	130 1/4W(3 5% TA52
		R334	ORD3303Q609	330K 1/4W(3 5% TA52
		R335	ORD3303Q609	330K 1/4W(3 5% TA52
		R336	ORD3303Q609	330K 1/4W(3 5% TA52
		R337	ORD1000Q609	100 1/4W(3 5% TA52
		R338	ORD0102Q609	10 1/4W(3 5% TA52
		R340	0RN1002F409	10K 1/6W 1 TA52
		R341	ORD0332A609	33 OHM 1/2 W (7.0) 5% TA52
		R342	ORD0332A609	33 OHM 1/2 W (7.0) 5% TA52
		R343	ORD0332A609	33 OHM 1/2 W (7.0) 5% TA52
		R344	ORD0332Q609	33 1/4W(3 5% TA52
		R345	ORD0332Q609	33 1/4W(3 5% TA52
		R346	ORD0332Q609	33 1/4W(3 5% TA52
		R347	ORD0202Q609	20 1/4W(3 5% TA52
		R401	ORD2200Q609	220 1/4W(3 5% TA52
		R402	ORD1000Q609	100 1/4W(3 5% TA52
		R403	ORD1000Q609	100 1/4W(3 5% TA52
		R404	ORD1000Q609	100 1/4W(3 5% TA52
		R405	ORD2201Q609	2.20K 1/4W(3 5% TA52
		R406	ORD2201Q609	2.20K 1/4W(3 5% TA52
		R407	ORD4701Q609	4.70K 1/4W(3 5% TA52
		R408	ORD1000Q609	100 1/4W(3 5% TA52
		R409	ORD1000Q609	100 1/4W(3 5% TA52
		R410	ORD3001Q609	3K 1/4W(3 5% TA52
		R411	ORD1000Q609	100 1/4W(3 5% TA52
		R412	ORD1000Q609	100 1/4W(3 5% TA52
		R413	ORD1000Q609	100 1/4W(3 5% TA52
		R414	ORD1602Q609	16K 1/4W(3 5% TA52
		R415	ORD1000Q609	100 1/4W(3 5% TA52
		R416	0RN1501F409	1.5K 1/6W 1 TA52
		R417	ORD1000Q609	100 1/4W(3 5% TA52
		R419	0RN4702F409	47K 1/6W 1% TA52
		R420	ORD2001Q609	2K 1/4W(3 5% TA52
		R421	ORD1501Q609	1.50K 1/4W(3 5% TA52
		R422	ORD2001Q609	2K 1/4W(3 5% TA52
		R423	ORD1000Q609	100 1/4W(3 5% TA52
		R424	ORD1000Q609	100 1/4W(3 5% TA52
		R425	ORD1000Q609	100 1/4W(3 5% TA52
		R426	ORD1000Q609	100 1/4W(3 5% TA52
		R428	ORD1002Q609	10K 1/4W(3 5% TA52
		R429	ORD1002Q609	10K 1/4W(3 5% TA52
		R430	ORD1000Q609	100 1/4W(3 5% TA52
		R431	ORD1802Q609	18K 1/4W(3 5% TA52
		R432	ORD2001Q609	2K 1/4W(3 5% TA52
		R433	ORD2001Q609	2K 1/4W(3 5% TA52
		R434	ORD4702Q609	47K 1/4W(3 5% TA52
		R436	ORD3601Q609	3.60K 1/4W(3 5% TA52
⚠		R437	0RN2702F409	27K 1/6W 1% TA52
⚠		R438	ORD1303Q609	130K 1/4W(3 5% TA52
⚠		R439	0RN4700F409	470 1/6W 1 TA52
⚠		R440	0RN1001F409	1K 1/6W 1% TA52
		R441	ORD3302Q609	33K 1/4W(3 5% TA52

*S	*AL	LOC NO.	PART NO.	DESCRIPTION/SPECIFICATON
		R442	0RN3901F409	3.90K 1/6W 1% TA52
		R443	ORD2200Q609	220 1/4W(3 5% TA52
		R444	ORD4700Q609	470 OHM 1/4 W (3.4) 5% TA52
		R445	ORD4700Q609	470 OHM 1/4 W (3.4) 5% TA52
		R446	ORD1000Q609	100 1/4W(3 5% TA52
		R447	ORD1000Q609	100 1/4W(3 5% TA52
		R449	0RN7501F409	7.50K 1/6W 1% TA52
		R450	ORD1203Q509	120K OHM 1/4 W (3.4) 2% TA52
		R451	ORD1001Q609	1K 1/4W(3 5% TA52
		R452	ORD1501Q609	1.50K 1/4W(3 5% TA52
		R453	ORD2001Q609	2K 1/4W(3 5% TA52
		R454	ORD2001Q609	2K 1/4W(3 5% TA52
		R455	ORD1002Q609	10K 1/4W(3 5% TA52
		R456	ORD1000Q609	100 1/4W(3 5% TA52
		R461	ORD3900Q609	390 1/4W(3 5% TA52
		R462	ORD2001Q609	2K 1/4W(3 5% TA52
		R463	ORD4701Q609	4.70K 1/4W(3 5% TA52
		R501	ORD0102A609	10 OHM 1/2 W (7.0) 5% TA52
		R502	ORD8202Q609	82K 1/4W(3 5% TA52
		R503	ORD1502Q609	15K 1/4W(3 5% TA52
		R598	ORD2001Q609	2K 1/4W(3 5% TA52
		R601	ORD1000Q609	100 1/4W(3 5% TA52
		R602	ORD1000Q609	100 1/4W(3 5% TA52
		R603	0RN0220H609	0.22 1/2W 5% TA52
		R604	ORD0101A609	1 OHM 1/2 W (7.0) 5% TA52
		R605	ORD0102A609	10 OHM 1/2 W (7.0) 5% TA52
		R606	ORD4700Q609	470 OHM 1/4 W (3.4) 5% TA52
		R607	0RN5101F409	5.10K 1/6W 1% TA52
		R608	ORD5600A609	560 OHM 1/2 W (7.0) 5% TA52
		R701	ORD4700Q609	470 OHM 1/4 W (3.4) 5% TA52
		R702	ORD6200Q609	620 1/4W(3 5% TA52
		R703	ORD5601Q609	5.60K 1/4W(3 5% TA52
		R704	ORD1002Q609	10K 1/4W(3 5% TA52
		R705	ORD0102Q609	10 1/4W(3 5% TA52
		R706	ORD3302A609	33K OHM 1/2 W (7.0) 5% TA52
		R727	0RX0332K665	33 OHM 2 W 5% SF
		R728	ORD1001Q609	1K 1/4W(3 5% TA52
		R729	ORD1002Q609	10K 1/4W(3 5% TA52
		R736	0RX2201J609	2.2KOHM 1 W 5% TA52
		R737	0RN0560H609	0.56 1/2W 5 TA52
		R738	0RN0560H609	0.56 1/2W 5 TA52
		R739	ORD2701Q609	2.70K 1/4W(3 5% TA52
		R740	ORD0271A609	2.7 OHM 1/2 W (7.0) 5% TA52
		R744	0RX2200K607	220 OHM 2 W 5% TA62
		R745	ORD4702Q609	47K 1/4W(3 5% TA52
		R746	ORD2201Q609	2.20K 1/4W(3 5% TA52
		R747	ORD3001Q609	3K 1/4W(3 5% TA52
		R748	ORD4702Q609	47K 1/4W(3 5% TA52
		R749	ORD2201Q609	2.20K 1/4W(3 5% TA52
		R750	ORD3001Q609	3K 1/4W(3 5% TA52
		R751	ORD0222A609	22 OHM 1/2 W (7.0) 5% TA52
		R752	ORD2201Q609	2.20K 1/4W(3 5% TA52
		R753	ORD3001Q609	3K 1/4W(3 5% TA52
		R754	ORD6800A609	680 OHM 1/2 W (7.0) 5% TA52
		R756	ORD2202A609	22K OHM 1/2 W (7.0) 5% TA52
		R761	ORD3001Q609	3K 1/4W(3 5% TA52
		R762	ORD3001Q609	3K 1/4W(3 5% TA52
		R763	ORD3001Q609	3K 1/4W(3 5% TA52
		R765	ORD3000A609	300 OHM 1/2 W (7.0) 5% TA52
		R768	ORD4703A609	470K OHM 1/2 W (7.0) 5% TA52
		R771	ORD3001Q609	3K 1/4W(3 5% TA52
		R772	ORD1502Q509	15K OHM 1/4 W (3.4) 2% TA52
		R773	ORD5602A609	56K OHM 1/2 W (7.0) 5% TA52
		R774	0RX1003J609	100KOHM 1 W 5% TA52

*S	*AL	LOC NO.	PART NO.	DESCRIPTION/SPECIFICATON
		R775	0RX3902J609	39K OHM 1 W 5% TA52
		R782	0RD3301A609	3.3K OHM 1/2 W(7.0) 5.00% TA52
		R793	0RD4702Q609	47K 1/4W(3 5% TA52
		R797	0RD1501Q609	1.50K 1/4W(3 5% TA52
		R798	0RD2001Q609	2K 1/4W(3 5% TA52
		R799	0RD1502Q609	15K 1/4W(3 5% TA52
		R801	0RD1502Q609	15K 1/4W(3 5% TA52
		R802	0RD1502Q609	15K 1/4W(3 5% TA52
		R803	0RD1001Q609	1K 1/4W(3 5% TA52
		R809	0RX0101K665	1 OHM 2 W 5% SF
		R818	0RN6202F409	62KOHM 1/6 W 1% TA52
		R822	0RX0152J609	15 OHM 1 W 5% TA52
		R823	0RX0562K665	56 OHM 2 W 5.00% SF
		R901	0RD4703A609	470K OHM 1/2 W (7.0) 5% TA52
		R902	0RD0332Q609	33 1/4W(3 5% TA52
		R903	0RN0562F409	56 OHM 1/6 W 1% TA52
		R904	0RX3902K665	39K OHM 2 W 5% SF
		R906	0RD6200Q609	620 1/4W(3 5% TA52
		R907	0RD3902Q609	39K 1/4W(3 5% TA52
		R910	0RX4702J609	47K OHM 1 W 5% TA52
		R911	0RD0202Q609	20 1/4W(3 5% TA52
⚠		R912	0RN1802F409	18K 1/6W 1% TA52
⚠		R913	0RN2701F409	2.7K OHM 1/6 W 1.00% TA52
		R915	0RD2000Q609	200 1/4W(3 5% TA52
		R916	0RD1002Q609	10K 1/4W(3 5% TA52
		R918	0RD1001Q609	1K 1/4W(3 5% TA52
		R923	0RD1003Q609	100K 1/4W(3 5% TA52
		R924	0RN0390H609	0.39 1/2W 5 TA52
		R925	0RN0390H609	0.39 1/2W 5 TA52
		R926	0RD4301Q609	4.30K 1/4W(3 5% TA52
		R927	0RD2002Q609	20K 1/4W(3 5% TA52
		R928	0RD1800Q609	180 1/4W(3 5% TA52
		R929	0RD0332Q609	33 1/4W(3 5% TA52
		R941	0RN0220H609	0.22 1/2W 5% TA52
		R944	0RD4700A609	470 OHM 1/2 W (7.0) 5% TA52
		R945-1	0RD4701Q609	4.70K 1/4W(3 5% TA52
		R952	0RD1202A609	12K OHM 1/2 W(7.0) 5.00% TA52
		R953	0RD1001A609	1K OHM 1/2 W (7.0) 5% TA52
		R954	0RD4701Q609	4.70K 1/4W(3 5% TA52
		R955	0RD4701Q609	4.70K 1/4W(3 5% TA52
		R956	0RD6802A609	68K OHM 1/2 W (7.0) 5% TA52
		R957	0RD0472A609	47 OHM 1/2 W (7.0) 5% TA52
		R960	0RD6200A609	620 OHM 1/2 W(7.0) 5.00% TA52
OTHERS				
		F1	430-858C	AFC-520 BAE EUN TA
		F2	430-858C	AFC-520 BAE EUN TA
⚠		F901	0FZZTTH001B	"TIME LAG HBC 5A/250V,215 005,LITTELFUSE"
		FB201	0RD0101Q609	1 1/4W(3 5% TA52
		L311	0LA0560K119	0.56UH K 2.3*3.4 TP
		L312	0LA0560K119	0.56UH K 2.3*3.4 TP
		L313	0LA0560K119	0.56UH K 2.3*3.4 TP
⚠		RL901	6920TBB007A	JZC-42012-2HS HONGMEI 250VAC 5A 12V 2A NO VENTING
		SC301	6620TBD003A	PCS701E PARK ELEC. 10PIN 14/360 STRAIGHT
⚠		SC901	6620TKB002B	SA-4S HUA JIE AC UNIVERSAL 3PIN BLACK
		SG305	6918TRT005A	"SSG-102-A0,1KV SMART RADIAL TAPING"
		SG701	6918TRT005A	"SSG-102-A0,1KV SMART RADIAL TAPING"
		SW201	6600R00001A	"JTP1280F6 JEIL 12V DC 1MA VERTICAL,7MM"


*S	*AL	LOC NO.	PART NO.	DESCRIPTION/SPECIFICATON
		SW202	6600R00001A	"JTP1280F6 JEIL 12V DC 1MA VERTICAL,7MM"
		SW203	6600R00001A	"JTP1280F6 JEIL 12V DC 1MA VERTICAL,7MM"
		SW204	6600R00001A	"JTP1280F6 JEIL 12V DC 1MA VERTICAL,7MM"
		SW205	6600R00001A	"JTP1280F6 JEIL 12V DC 1MA VERTICAL,7MM"
		SW206	6600R00001A	"JTP1280F6 JEIL 12V DC 1MA VERTICAL,7MM"
		SW250	6600M000037	JPS2225A NAMAEE 30VDC 0.1A BLUE ANGEL
		T1	6631T11005D	1 W-T 480MM UL 1015 AWG 22 CB775C
⚠		T701	6174T11006C	"C93 BSC25-1458 FUJIAN FURI(HITACHI) 17"/70KHZ FLAT"
		T702	6170TCZ013A	"EI2218 26UH D/FOCUS,FB775G"
		T703	6170TCZ015A	"EI-19 4.45MH H-DRIVE,700BJ"
⚠		T901	6170TMZ153A	EER3435 300UH V-16PIN T710BL SI/SC/NY/JS /TC 71-85KHZ
⚠		TH901	6322B00002D	MZ72-4.5RN290V GAOLI 4.5OHM +30% - 20% 2PIN BOX
⚠		TH902	6322A00003C	8 D2 10 SEMITEC 8OHM 15% D(11.5)
		X401	6212AA2003E	HC-49U SOUTH STAR 48MHZ +/- 20 PPM 22PF BULK

SCHEMATIC DIAGRAM

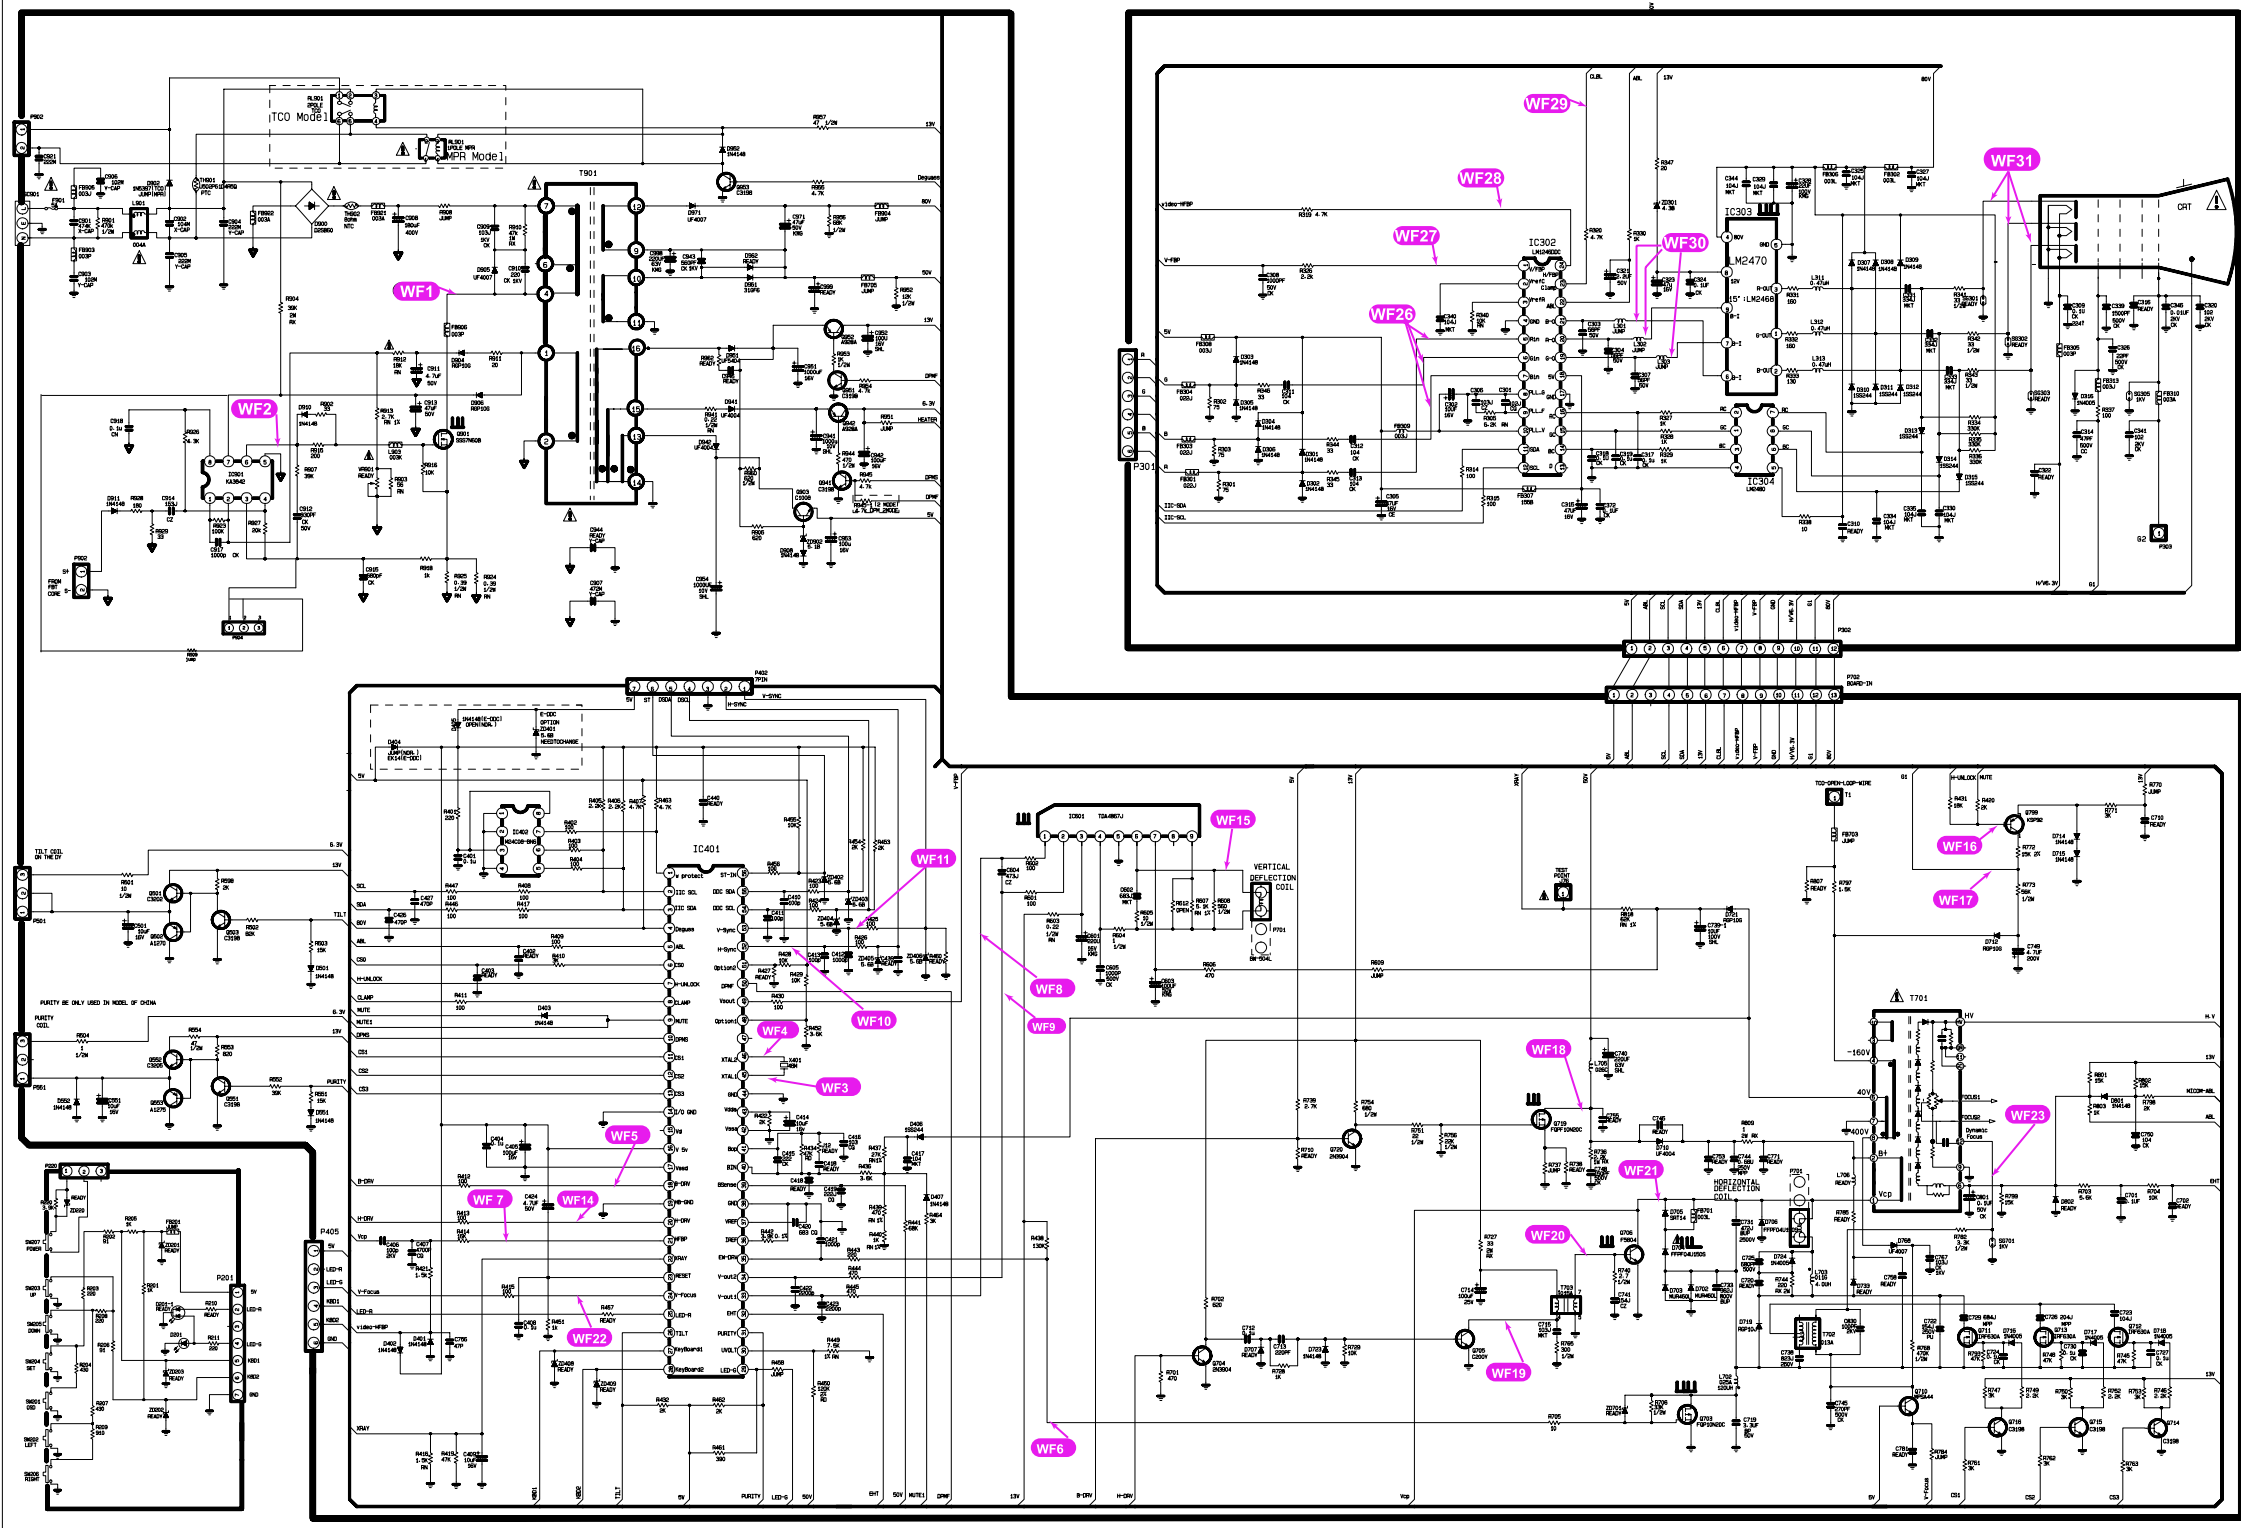


THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION FILTRE AND ELECTRICAL SHOCK HAZARDS. WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

COMPANY CONFIDENTIAL DO NOT COPY!			
DATE	2004. 12. 03	REV	01
MODEL	F700BL (MOU 4.0)	Sheet	1 / 1 Page

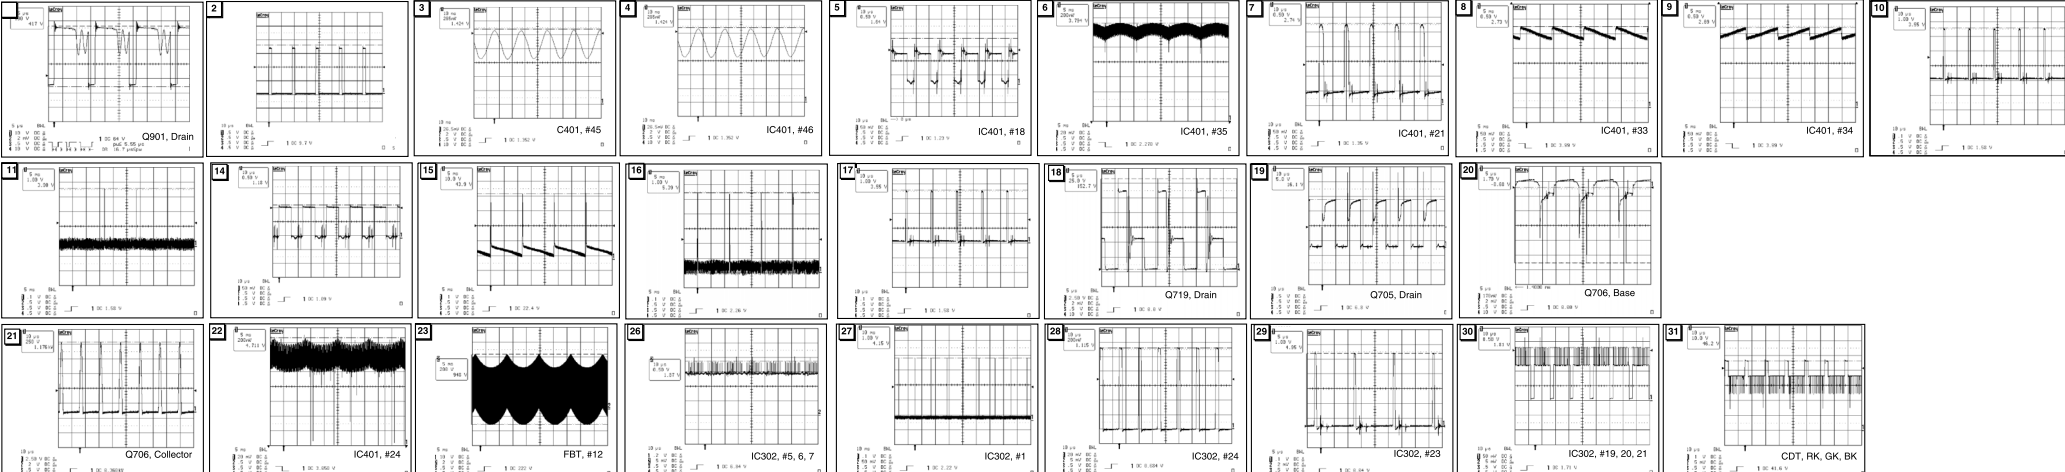


PRINTED CIRCUIT BOARD


1. CONTROL BOARD (Component Side)

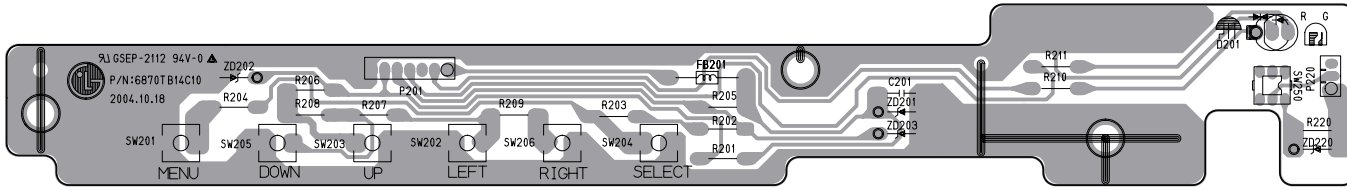


2. CONTROL BOARD (Solder Side)

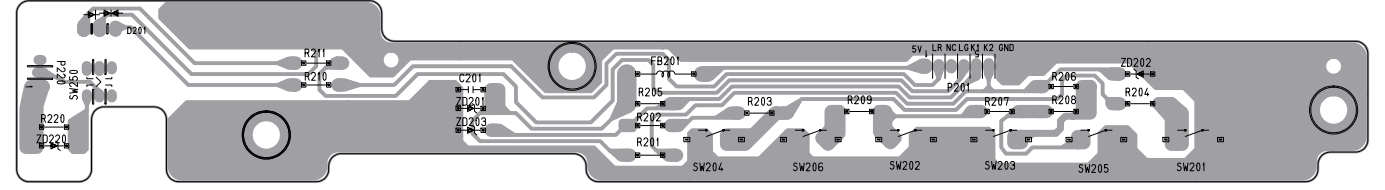

3. MAIN BOARD (Component Side)

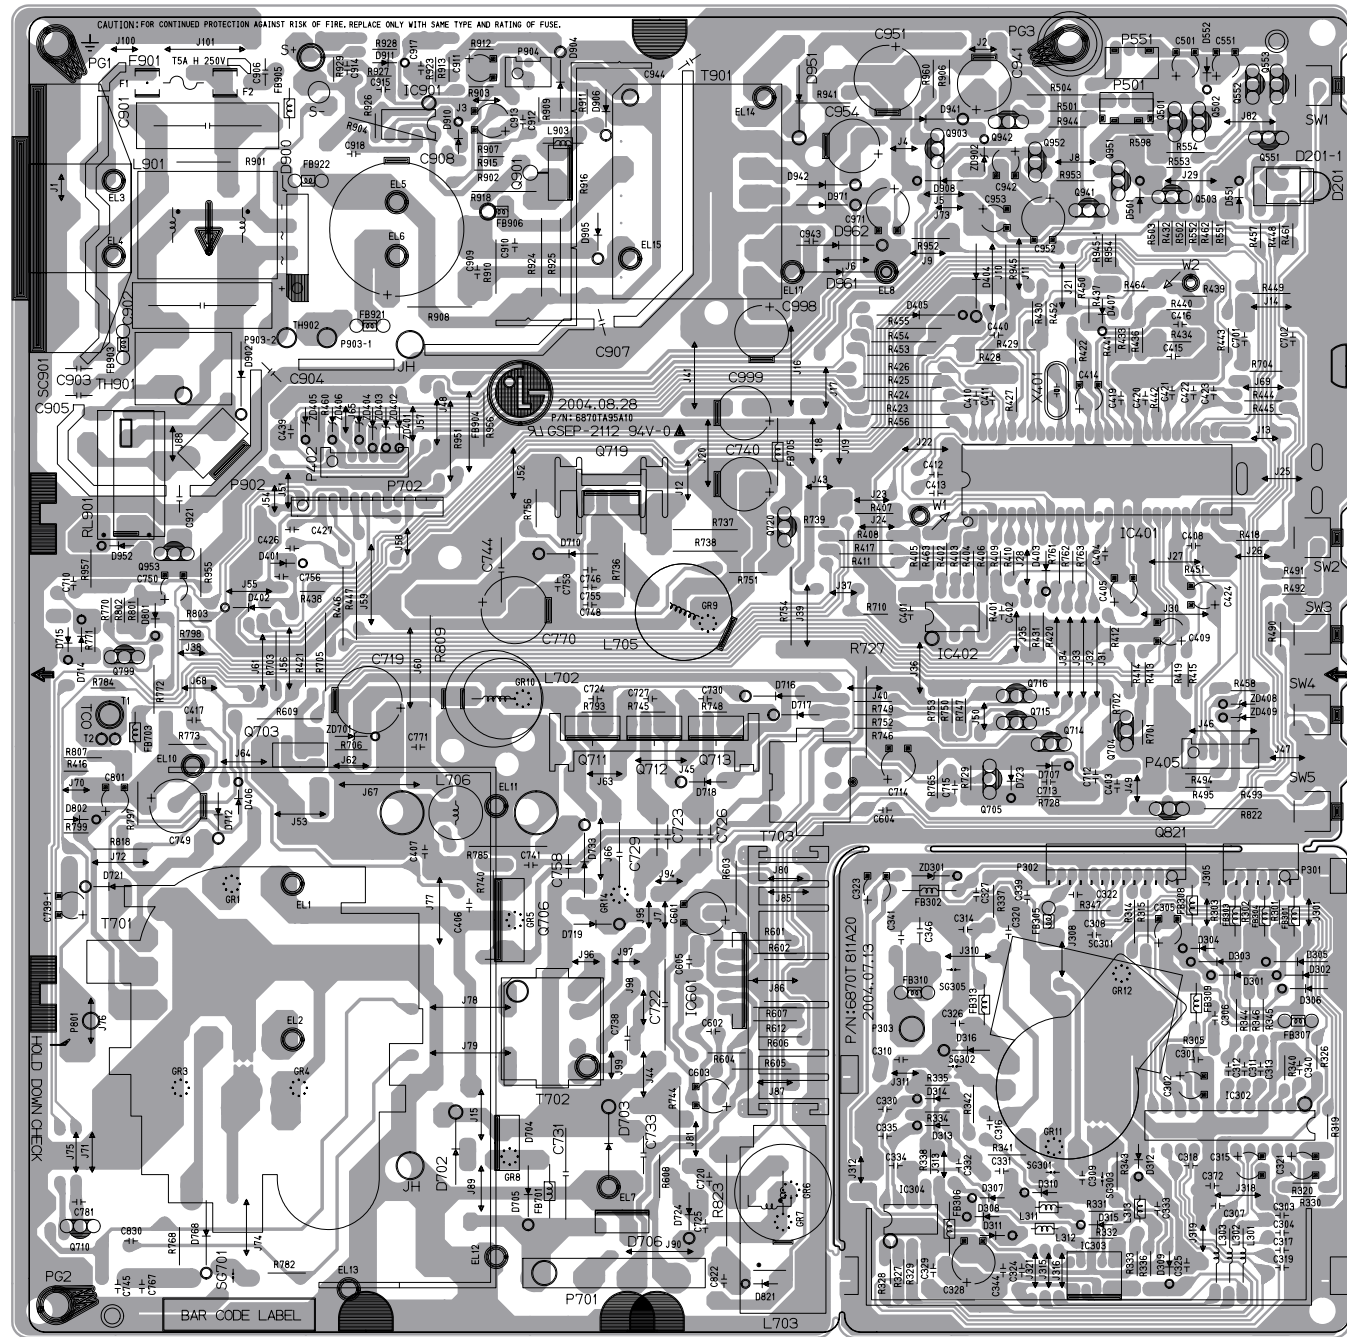

4. MAIN BOARD (Solder Side)

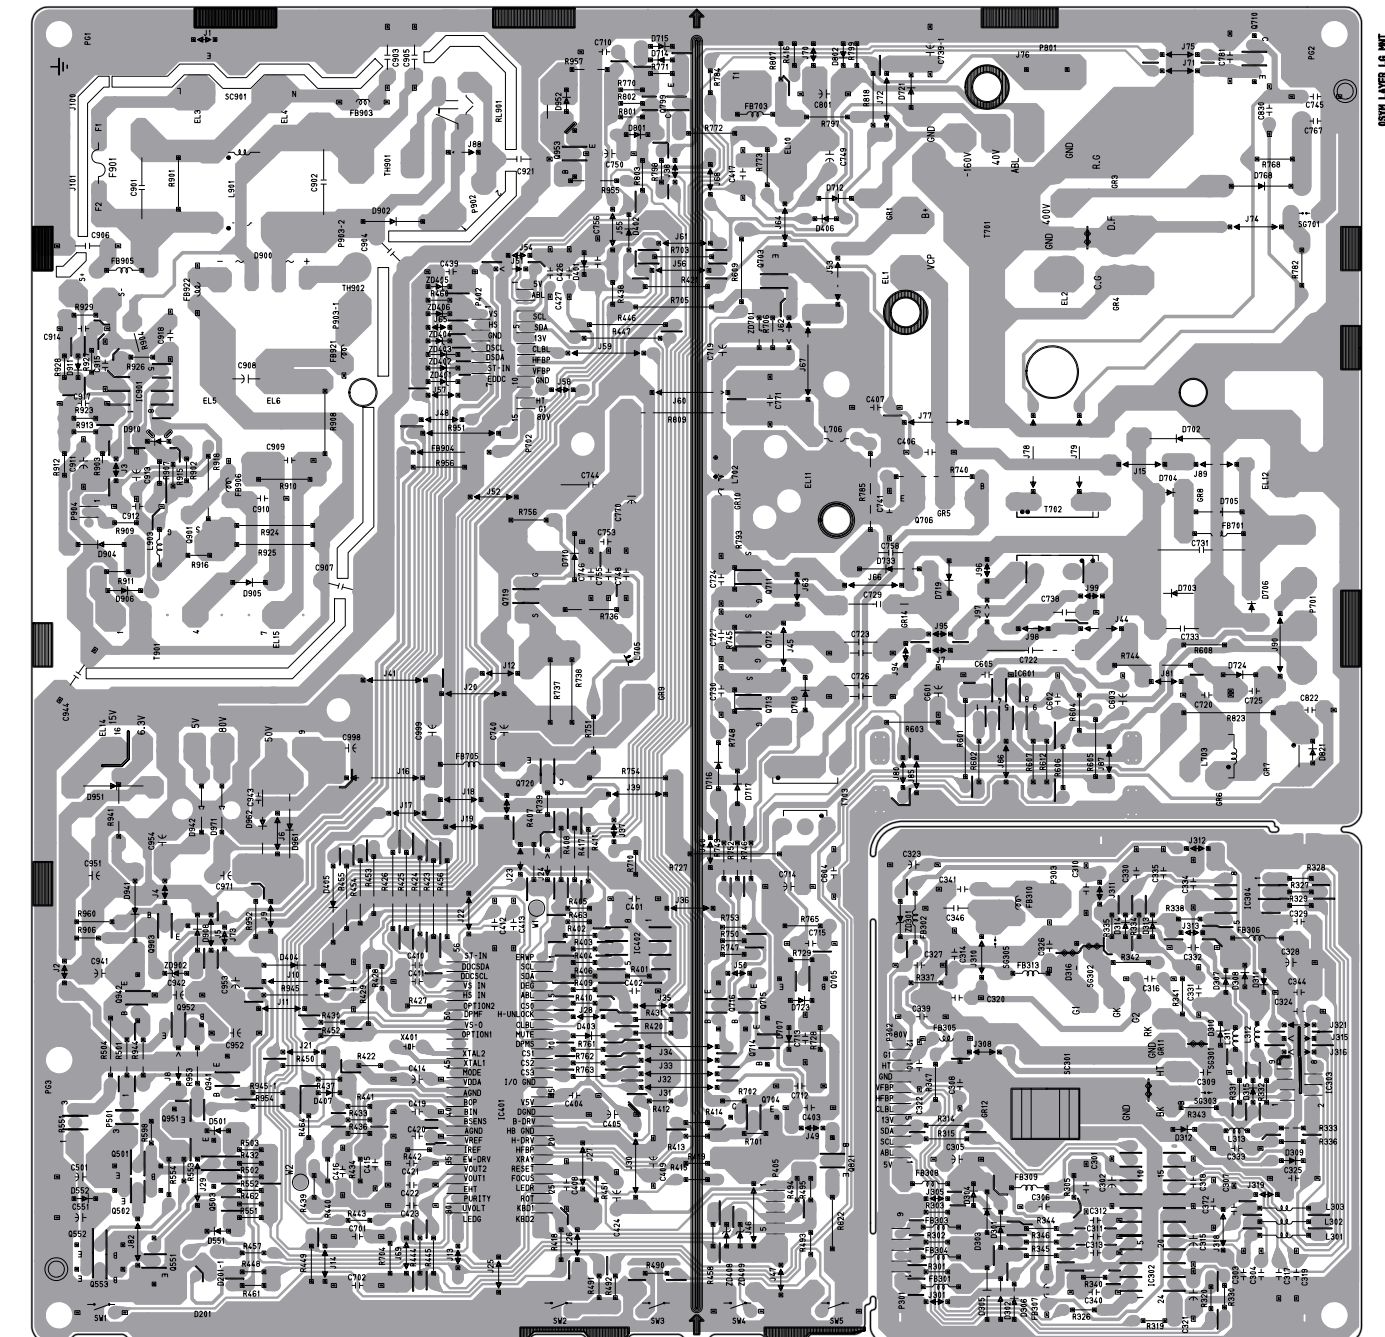



P/NO : 3828TSL110E

Feb. 2005
Printed in China