

QUICK GUIDE AND APPLIANCES LIST

© ELECTROLUX ITALIA S.p.A. Spares Operations Italy Corso Lino Zanussi, 30 I - 33080 PORCIA /PN (ITALY)	Publication no. 599 72 40-80	EN	WM-WD Front loader Platform EWM1000 EWM1000plus EWM2000evo EWM3000new ENV06 11xx21xx 25xx/35xx
Fax +39 0434 394096			Edition: 12-2009



Content

1	EWM1000	5
1.1	Access to the diagnostic cycle	5
1.2	Rapid reading of alarms	5
1.3	Cancelling the last alarm.....	5
1.4	Phases of the diagnostics test.....	6
1.5	Reading the alarms.....	7
1.5.1	Displaying the alarm.....	7
1.5.2	Examples of alarm display.....	7
1.5.3	Status of alarms during the diagnostics cycle.....	7
1.6	Table of alarms codes EWM1000	8
1.6.1	Notes concerning certain alarm codes	9
1.7	Elementary diagram.....	10
1.7.1	With instantaneous door locking device	10
1.8	With PTC door locking device	11
1.8.1	Key to circuit diagram	12
1.9	Connectors on circuit board EWM1000	13
1.10	Burning on the circuit board EWM1000	14
1.10.1	EWM1000	14
1.10.2	Components side (common).....	14
1.10.3	Pushbutton – led side (horizontal buttons)	15
1.10.4	Pushbutton – led side (vertical buttons)	15
2	EWM1000plus 2000evo 3000new.....	16
2.1	Control panel	16
2.2	Sigma/Alpha/Ellipse//Multipanel Built-In/Sigma-ZK/Jewel with or without selector.....	17
2.2.1	Access to diagnostics system.....	17
2.2.2	Rapid reading of alarm codes	17
2.2.3	Cancelling the last alarm	17
2.3	AEG NexXxt Version with selector and incorporated ON/OFF switch.....	18
2.3.1	Access to diagnostics system.....	18
2.3.2	Rapid reading of alarm codes	18
2.3.3	Cancelling the last alarm	18
2.4	AEG New Version with right selector and incorporated ON/OFF switch	19
2.4.1	Access to diagnostics system.....	19
2.4.2	Rapid reading of alarm codes	19
2.4.3	Cancelling the last alarm	19
2.5	DELTA Version without selector and button ON/OFF switch.....	20
2.5.1	Access to diagnostics system	20
2.5.2	Rapid reading of alarm codes	20
2.5.3	Cancelling the last alarm	20
2.6	CLUB DISPLAY Version with selector and incorporated ON/OFF switch	21
2.6.1	Access to diagnostics system	21
2.6.2	Rapid reading of alarm codes	21
2.6.3	Cancelling the last alarm	21
2.7	LCD Version without selector and button ON/OFF switch	22
2.7.1	Access to diagnostics system	22
2.7.2	Rapid reading of alarm codes	22
2.7.3	Cancelling the last alarm	22
2.8	LCD Version with selector and button ON/OFF switch	23
2.8.1	Access to diagnostics system	23
2.8.2	Rapid reading of alarm codes	23
2.8.3	Cancelling the last alarm	23
2.9	Phases of the diagnostics test.....	24
2.10	Reading the alarm codes	26
2.10.1	Displaying the alarm.....	26
2.10.2	Examples of alarm displays	26
2.11	Table of alarms codes EWM 1000plus EWM2000EVO EWM3000NEW.....	27
2.12	Basic circuit diagram EWM1000PLUS.....	31
2.12.1	Diagram (without aqua control).....	31
2.12.2	Key to circuit diagram	32
2.12.3	Diagram (with aqua control).....	33
2.12.4	Key to circuit diagram	34
2.13	Basic circuit diagram with sensor EWM2000EVO.....	35

2.13.1	Key for circuit diagram	36
2.14	Basic circuit diagram with sensor EWM3000NEW	37
2.14.1	Key for circuit diagram	38
2.15	Connectors on circuit board EWM1000plus	39
2.16	Burning on the circuit board EWM1000plus	40
3	ENV 06	41
3.1	Access to the diagnostic cycle	41
3.1.1	All version	41
3.1.2	INPUT version	41
3.1.3	Rapid reading of alarm codes	41
3.2	Cancelling the last alarm	42
3.3	Phases of the diagnostic cycle	43
3.4	Alarm displaying	44
3.4.1	AEG Version:	44
3.4.2	Other versions:	44
3.4.3	Examples of alarm display	44
3.4.4	Operation of alarms during diagnostics	44
3.5	Table of alarms codes ENV06	44
3.5.1	Notes concerning certain alarm codes	44
3.6	Basic circuit diagram EWM1100	44
3.6.1	Key to circuit diagram EWM1100	44
3.7	Connectors on circuit board EWM1100	44
3.8	Burning on the circuit board EWM1100	44
3.9	Basic circuit diagram WM EWM2100	44
3.9.1	Key to circuit diagram WM EWM2100	44
3.10	Basic circuit diagram WM with aqua control EWM2100	44
3.10.1	Key to circuit diagram WM with Aqua Control EWM2100	44
3.11	Basic circuit diagram WD EWM2100	44
3.11.1	Key to circuit diagram WD EWM2100	44
3.12	Basic circuit diagram WD with aqua control EWM2100	44
3.12.1	Key to circuit diagram WD with aqua control EWM2100	44
3.13	Connectors on circuit board WM/WD EWM2100	44
3.14	Burning on the circuit board EWM2100 WM/WD	44
3.15	Basic circuit diagram EWM25xx without aqua control	44
3.15.1	Key to circuit diagram EWM25xx with Aqua Control	44
3.16	Basic circuit diagram EWM25xx without aqua control	44
3.16.1	Key to circuit diagram EWM25xx without Aqua Control	44
3.17	Basic circuit diagram EWM25xx WD without aqua control	44
3.17.1	Key to circuit diagram EWM25xx WD with Aqua Control	44
3.18	Basic circuit diagram EWM25xx WD without aqua control	44
3.18.1	Key to circuit diagram EWM25xx WD without aqua control	44
3.19	Basic circuit diagram EWM35xx with aqua control	44
3.19.1	Key to circuit diagram EWM35xx with Aqua Control	44
3.20	Basic circuit diagram EWM35xx without aqua control	44
3.20.1	Key to circuit diagram EWM35xx without Aqua Control	44
3.21	Connectors on circuit board WM/WD EWM25xx/35xx	44
3.22	Burning on the circuit boards EWM25xx/35xx WM/WD	44
3.23	Burning on the circuit board WD	44
4	Appliances list	44

1 EWM1000

1.1 Access to the diagnostic cycle

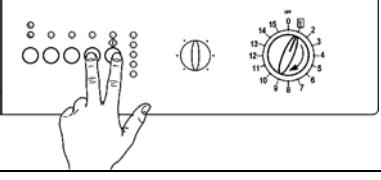
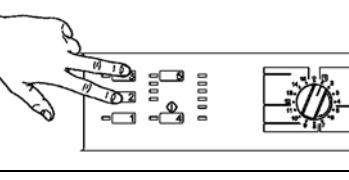
version with horizontal pushbuttons	version with vertical pushbuttons
	

1. Switch off the appliance.
 2. Press and hold down the **START/PAUSE** button and **any one of the OPTION buttons** simultaneously. horizontal version, while for vertical version pushbuttons are **2** and **3**.
 3. Holding down both buttons, switch the appliance on by turning the programme selector **one position clockwise**.
 4. Continue to hold down the START/PAUSE button and the OPTION button horizontal version, while for vertical version pushbuttons are **2** and **3**, until the LEDs begin to flash (at least 2 seconds).
 5. To exit the diagnostics system switch the appliance off, on and then off again.

IMPORTANT: The position of the START/PAUSE button varies according to the model, and is therefore not always the same.



1.2 Rapid reading of alarms

The last alarm can be displayed even if the programme selector is not in the tenth position (diagnostics) or if the appliance is in normal operating mode (e.g. while the washing programme is in operation):

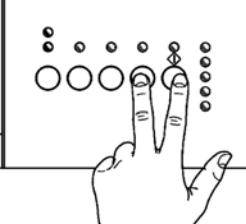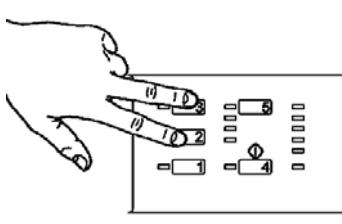version with horizontal pushbuttons	version with vertical pushbuttons
	

1. Press **START/PAUSE** and **any one of the option buttons** simultaneously for horizontal version, while for vertical version pushbuttons are **2** and **3**, for at least two seconds: the LEDs first switch off, and then display the flashing sequence corresponding to the alarm condition.
 2. The alarm sequence continues as long as the two buttons are held down.
 3. While the alarms are displayed, the current cycle being performed continues or, if the appliance is in the programme selection phase, the options previously selected remain in memory.

1.3 Cancelling the last alarm







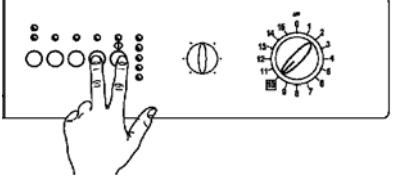
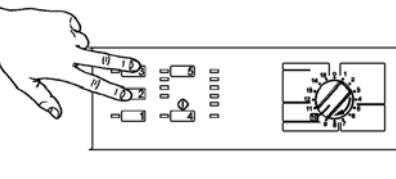
version with horizontal pushbuttons	version with vertical pushbuttons
	

1. Access alarm reading mode (tenth selector position)
 2. Press and hold down **START/PAUSE** and **any one of the option keys** simultaneously for horizontal version, while for vertical version pushbuttons are **2** and **3**.
 3. Hold the START/PAUSE and OPTION button down until the LEDs begin to flash (about 5 seconds)

1.4 Phases of the diagnostics test

After accessing the diagnostics cycle, and irrespective of the type of control board fitted to the appliance (i.e. vertical or horizontal buttons) and the configuration of the selector, turn the programme selector **clockwise** to perform the diagnostics cycle for the various components and to read the alarms.

All the alarms are enabled during the diagnostics cycle.

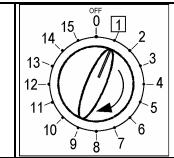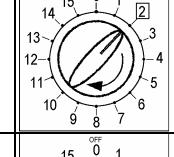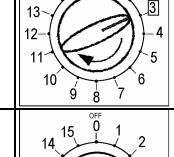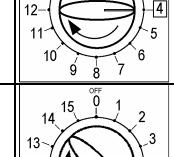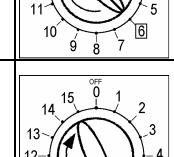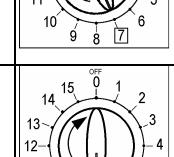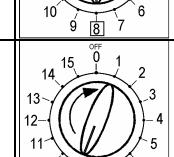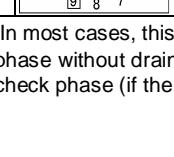
Position of selector	Components activated	Conditions of operation	Function tested
1 	- All the LEDs light in sequence - When a button is pressed, the corresponding LED lights (and the buzzer may sound)	Always enabled	Operation of the user interface
2 	- Door safety interlock - Washing solenoid valve	Door locked Water level lower than anti-overflow level Maximum time 5 minutes	Water ducted through washing compartment
3 	- Door safety interlock - Pre-wash solenoid valve	Door locked Water level lower than anti-overflow level Maximum time 5 minutes	Water ducted through pre-wash (bleach) compartment
4 	- Door safety interlock - Washing and pre-wash solenoid valves	Door locked Water level lower than anti-overflow level Maximum time 5 minutes	Water ducted through conditioner compartment
6 	- Door safety interlock - Wash solenoid (if the water in the tub is below 1st level) - Heating element	Door locked Water level > 1st level Maximum time 10 minutes or up to 90°C (*)	Heating
7 	- Door safety interlock - Wash solenoid (if the water in the tub is below 1st level) - Motor (55 rpm clockwise, 55 rpm anti-clockwise, impulse at 250 rpm)	Door locked Water level > 1st level	Check for leaks from the tub
8 	- Door safety interlock - Drain pump - Motor up to 650 rpm then at maximum spin speed	Door locked Water level lower than anti-boiling level for spinning	Drain and spin, check for congruence in closure of pressure switch levels
9 	Only for top-loaders with drum positioning system: - Door safety interlock - Motor (25 rpm) - Drain pump	Door locked Water level lower than anti-boiling level Maximum time 2 minutes	Test for positioning of drum

(*) In most cases, this time is sufficient to check the heating function. However, the time can be increased by repeating the heating phase without draining the water: pass for a moment to a different phase of the diagnostics cycle and then back to the heating check phase (if the temperature is higher than 80°C, heating does not take place).

1.5 Reading the alarms

Proceed as follows to read the last alarm condition stored in the EEPROM on the control board:

- Access diagnostics mode.
- Irrespective of the type of control board and configuration, turn the programme selector **clockwise** to the **tenth position**.

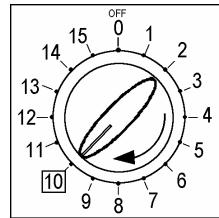


1.5.1 Displaying the alarm

The alarm is displayed by a repeated flashing sequence of the two LEDs (0.4 seconds ON, 0.4 seconds OFF, with a pause of 2.5 seconds between each sequence). The buzzer (if featured) sounds a series of "beeps" in synchronization with the flashing of the LEDs.

- END OF CYCLE** indicator → indicates the first digit of the alarm code (family)
- START/PAUSE** → indicates the second digit of the alarm code (number within the family).

These two LEDs are present on all models (though configured in **different positions**) and flash simultaneously.

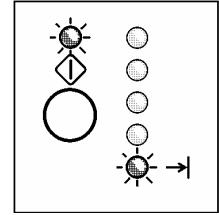

Notes:

- The first letter of the alarm code "**E**" (Error) is not displayed since it is the same for all alarm codes.
- The alarm code families are expressed in hexadecimal form. In other words:
 - **A** is represented by **10** flashes
 - **B** is represented by **11** flashes
 - ...
 - **F** is represented by **15** flashes
- Configuration errors are displayed by the flashing of all the LEDs (user interface not configured).

1.5.2 Examples of alarm display

Example: Alarm **E43** (problems with the door safety interlock triac) will be displayed as follows:

- four flashes of the END OF CYCLE LED indicate the first digit E43;
- three flashes of the START/PAUSE LED indicate the second digit E43;

END OF CYCLE LED →			START/PAUSE LED ↳		
ON/OFF	Time (seconds)	Value	ON/OFF	Time (seconds)	Value
●	0.4	1	●	0.4	1
○	0.4		○	0.4	
●	0.4	2	●	0.4	2
○	0.4		○	0.4	
●	0.4	3	●	0.4	3
○	0.4		○	0.4	
●	0.4	4	●	0.4	Pause
○	0.4		○	3,3	
○	2.5	Pause			

1.5.3 Status of alarms during the diagnostics cycle

All the alarms are enabled during the components diagnostics test.

1.6 Table of alarms codes EWM1000

Alarm	Description	Possible fault	Action/Machine status	Reset
E00		No alarm		
E11	Difficulty in filling during wash phase	Tap closed or water pressure insufficient; Drain hose incorrectly positioned; Water fill solenoid faulty; Leaks from pressure switch hydraulic circuit; Pressure switch faulty; Wiring faulty; Circuit board faulty.	Cycle paused, door closed	Start
E13	Water leakage	Drain hose incorrectly positioned; Water pressure insufficient; Water fill solenoid faulty; Leaks or blockage in pressure switch hydraulic circuit; Pressure switch faulty; Circuit board faulty.	Cycle paused, door closed	Start
E21	Difficulties in draining	Drain hose kinked/blocked/incorrectly positioned; Drain filter clogged or dirty; Drain pump faulty; Pressure switch faulty; Wiring faulty; Circuit board faulty; Current leakage from heating element to ground.	Cycle paused	Start
E23	Drain pump triac faulty	Drain pump faulty; Wiring faulty; Circuit board faulty.	Safety drain - Cycle stopped, door open	Selector on "0"
E24	Problems with «sensing» of drain pump triac	Circuit board faulty.	Safety drain – Cycle stopped, door released	Selector on "0"
E33	Incongruence between contact closure of anti-boiling and 1st level of pressure switch	Pressure switch faulty; Current leakage from heating element to ground; Heating element; Wiring faulty; Circuit board faulty.	Safety drain - Cycle stopped, door open	Selector on "0"
E35	Water overflow	Water fill solenoid faulty; Leaks from pressure switch hydraulic circuit; Pressure switch faulty; Wiring faulty; Circuit board faulty.	Cycle blocked, door closed. Safety drain. Drain pump (sequence 5 min. ON - 5 min. OFF)	Selector on "0"
E36	«sensing» circuit of anti-boiling pressure switch faulty	Circuit board faulty.	Cycle blocked, door closed	Selector on "0"
E37	«sensing» circuit of 1st level faulty	Circuit board faulty.	Cycle blocked, door closed	Selector on "0"
E39	HV «sensing» circuit of anti-flooding pressure switch faulty	Circuit board faulty.	Cycle blocked, door closed	Selector on "0"
E41	Door open	Door safety interlock faulty; Wiring faulty; Circuit board faulty.	Cycle paused	Start
E42	Problems with aperture of door	Door safety interlock faulty; Wiring faulty; Circuit board faulty	Cycle paused	Start or Selector on "0"
E43	Power triac on door interlock faulty	Door safety interlock faulty; Wiring faulty; Circuit board faulty.	Safety drain, door released	Selector on "0"
E44	Door interlock «sensing» faulty	Circuit board faulty.	Safety drain, door released	Selector on "0"
E45	«sensing» on door interlock triac faulty	Circuit board faulty.	Safety drain, door released	Selector on "0"
E51	Motor power triac short-circuited	Circuit board faulty; Current leakage from motor or wiring.	Cycle blocked, door closed (after 5 attempts in diagnostics or immediate during selection)	Selector on "0"
E52	No signal from motor tachimetric generator	Motor faulty; Wiring faulty; Circuit board faulty.	Cycle blocked, door closed (after 5 attempts in diagnostics or immediate during selection)	Selector on "0"
E53	«sensing» circuit on motor triac faulty	Circuit board faulty.	Cycle blocked	Selector on "0"


Alarm	Description	Possible fault	Action/Machine status	Reset
E54	Motor relay contacts sticking	Circuit board faulty; Current leakage from motor or wiring.	Cycle blocked, door closed (after 5 attempts in diagnostics or immediate during selection)	Selector on "0"
E61	Insufficient heating during washing	NTC sensor faulty; Heating element faulty; Wiring faulty; Circuit board faulty.	Heating phase skipped	---
E62	Overheating during washing	NTC sensor faulty; Heating element faulty; Wiring faulty; Circuit board faulty.	Safety drain (with cooling water fill) - Stop with door open	Selector on "0"
E66	Power relay for heating element faulty	Circuit board faulty; Current leakage from heating element or wiring to ground.	Safety drain (with cooling water fill) - Stop with door open	Selector on "0"
E71	NTC washing sensor faulty	NTC sensor faulty; Wiring faulty; Circuit board faulty.	Heating phase skipped	---
E82	Error in reset position of selector	Circuit board faulty.	Cycle cancelled	Selector on "0"
E83	Error in reading selector position	Configuration data incorrect; Circuit board faulty.	During the cycle continues normally, switches off completely during selection	---
E93	Incorrect machine configuration	Configuration data incorrect; Circuit board faulty.	Appliance blocked	Selector on "0"
E94	Incorrect washing cycle configuration	Configuration data incorrect; Circuit board faulty.	Appliance blocked	Selector on "0"
E95	Communications error between microprocessor and EEPROM	Circuit board faulty.	Appliance blocked	Selector on "0"
E96	Incongruence between hardware version and configuration.	Configuration data incorrect; Circuit board faulty.	Appliance blocked	Selector on "0"
E97	Incongruence between programme selector and cycle configuration	Configuration data incorrect; Circuit board faulty.	Appliance blocked	Selector on "0"
EB1	Power supply frequency of appliance incorrect	Mains power supply problems (incorrect / interference); Circuit board faulty.	Cycle blocked until normal power supply conditions are restored	Selector on "0"
EB2	Voltage too high	Mains power supply problems (incorrect / interference); Circuit board faulty.	Cycle blocked until normal power supply conditions are restored	Selector on "0"
EB3	Voltage too low	Mains power supply problems (incorrect / interference); Circuit board faulty.	Cycle blocked until normal power supply conditions are restored	Selector on "0"

1.6.1 Notes concerning certain alarm codes


- Configuration alarms E93-E96:** If these alarms are generated (when the appliance is switched on), operation of the appliance is blocked and all the LEDs light. The diagnostics procedure cannot be accessed; the only option is to switch the appliance OFF (by turning the selector to position "0").
- Configuration alarm E94:** For this alarm code, only the family for alarm "9" is displayed; the diagnostics procedure cannot be accessed, and the "rapid alarm display" function cannot be used.
- Alarms EB1-EB2-EB3:** In the event of problems with the mains power supply, the appliance remains in alarm mode until the mains frequency or voltage are restored to the correct value or the appliance is switched off (by turning the programme selector to "0"). The family of alarm "B" is displayed; the diagnostics procedure cannot be accessed, and the "rapid alarm display" function cannot be used. The complete alarm code can be read only when the abnormal situation has ceased.
- Alarms E51- E52:** During the diagnostics test, all the alarms are displayed. Normally, when the programme selector is turned from one test phase to another, the appliance exits the alarm condition and performs the phase selected. This does not take place in the case of alarms E51 (power triac on motor short-circuited) and E52 (no signal from the tachymetric generator on the motor): in these cases, the only option to exit the alarm condition is to switch the appliance OFF by turning the selector to position "0" (reset).

1.7 Elementary diagram

1.7.1 With instantaneous door locking device

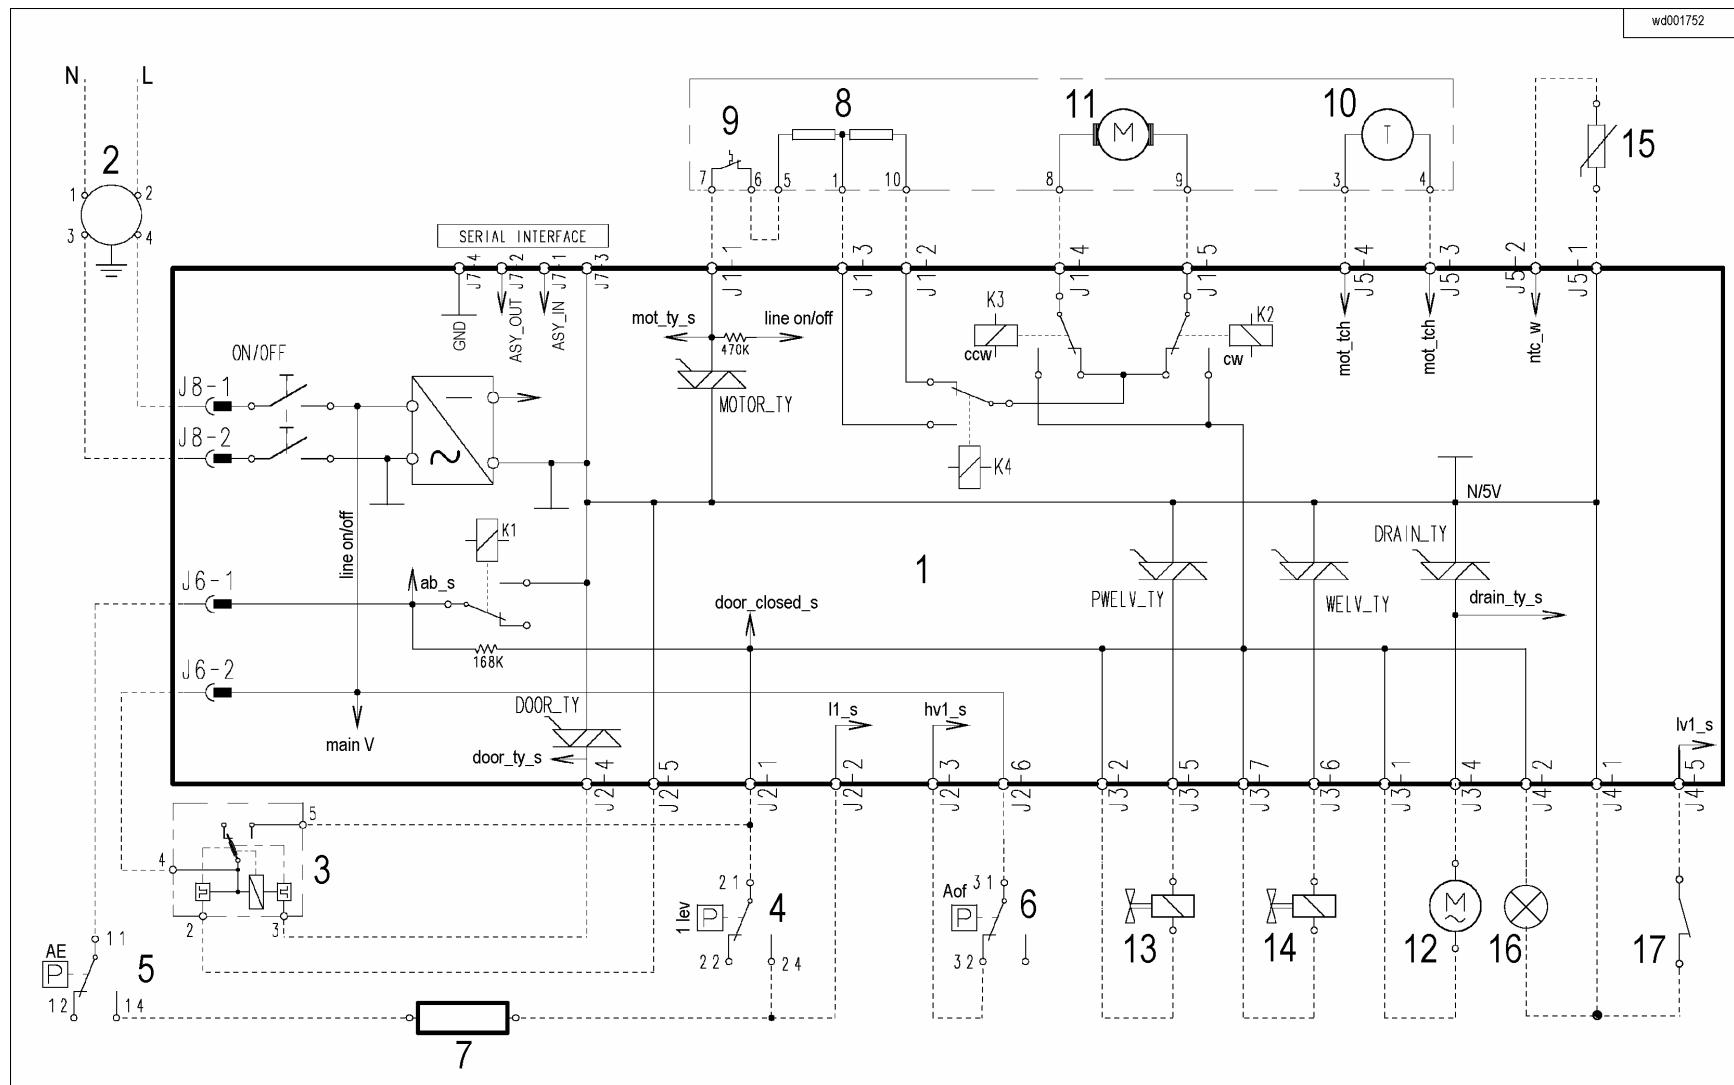

1.8 With PTC door locking device



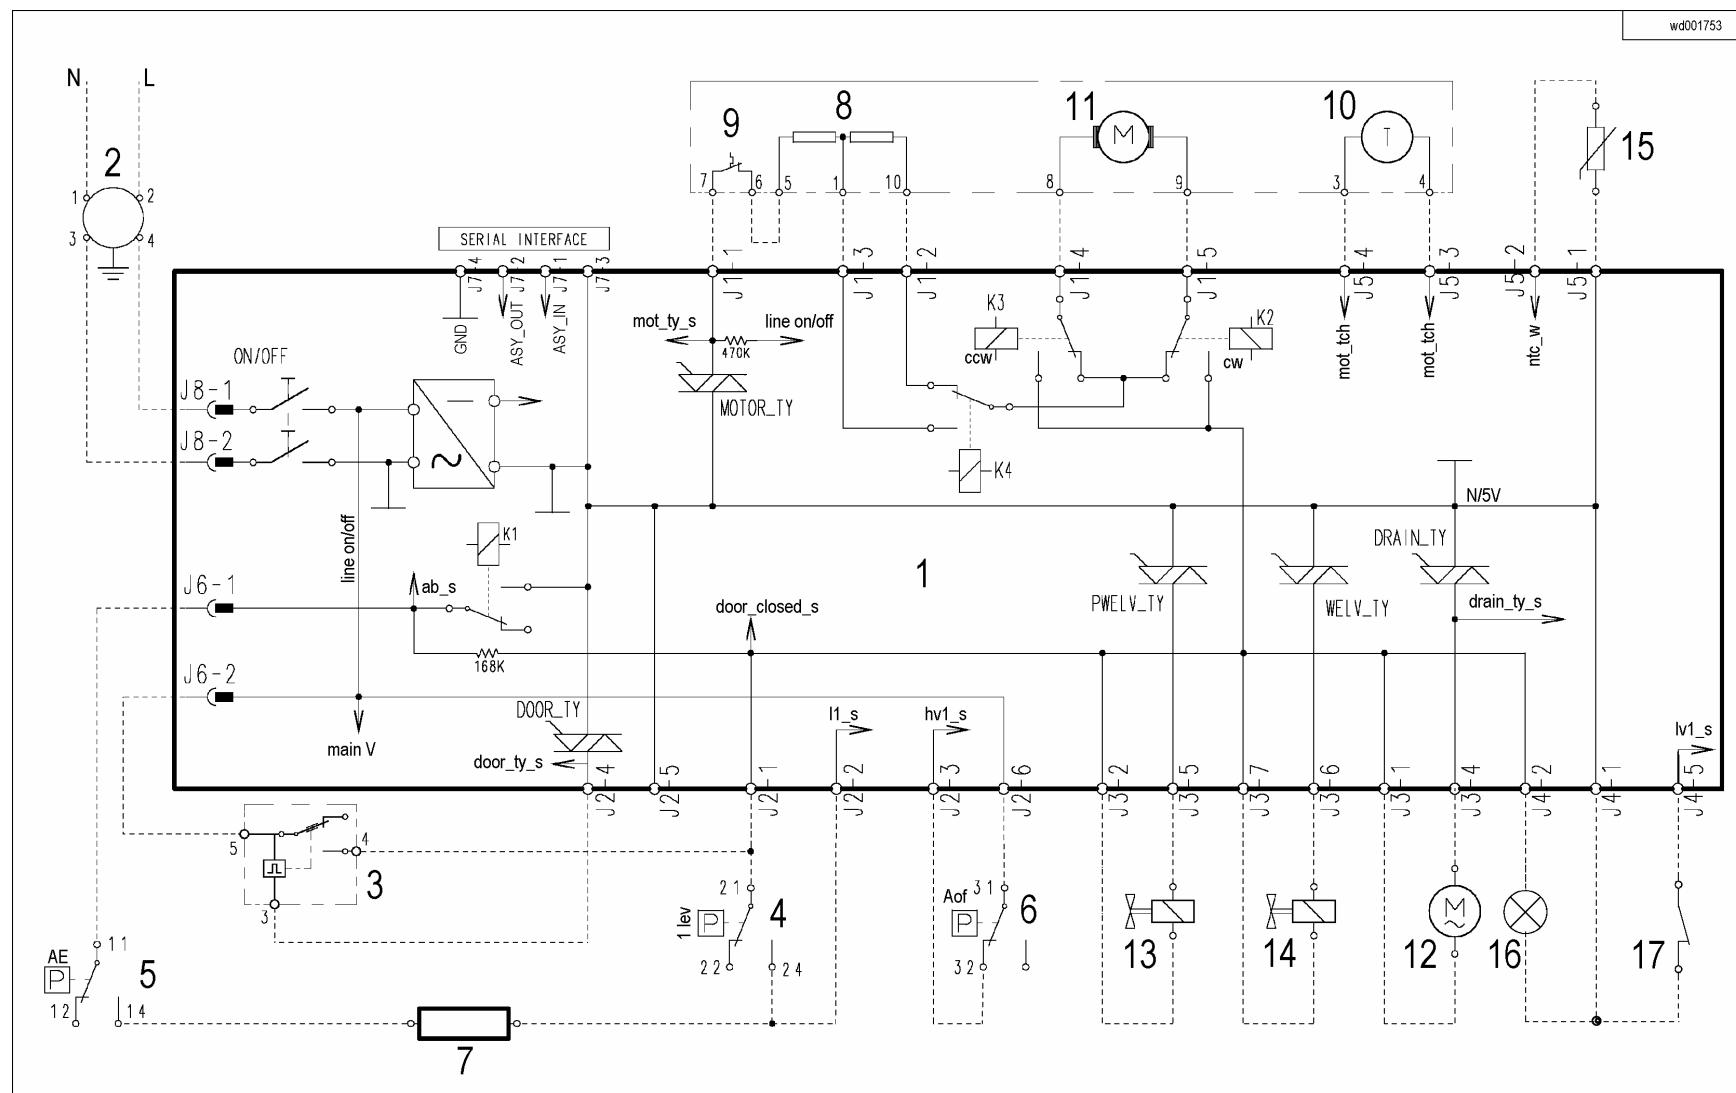


1.8.1 Key to circuit diagram

Electrical components – appliance	Components of electronic circuit board
1. Circuit board	DOOR_TY Triac for door safety interlock
2. Suppressor	DRAIN_TY Triac for drain pump
3. Main switch (on programme selector)	K1 Heating element relay
4. Door safety interlock	K2 Motor relay: clockwise rotation
5. 1st level pressure switch	K3 Motor relay: anti-clockwise rotation
6. Anti-boiling pressure switch	K4 Motor relay: half-range power (certain models only)
7. Anti-overflow pressure switch (certain models only)	MOTOR_TY Motor triac
8. Heating element	ON/OFF Main switch (programme selector)
9. Stator (motor)	PWELW_TY Triac for pre-wash solenoid valve
10. Overload circuit-breaker (motor)	Serial interface Asynchronous serial interface
11. Tachymetric generator (motor)	WELV_TY Triac for washing solenoid valve
12. Rotor (motor)	
13. Drain pump	
14. Pre-wash solenoid valve	
15. Washing solenoid valve	
16. "Door closed" lamp (certain models only)	
17. Drum positioning system (DSP) (top-loaders – certain models only)	

1.9 Connectors on circuit board EWM1000

J6	J2	J1	J3	J4	J5	J7
J6-1: Heating element (relay) J6-2: Door safety interlock (line)	J2-1 Door safety interlock (line-sensing) J2-2 1st level(sensing) J2-3 (Anti-overflow pressure switch)	J1-1 Motor (triac) J1-2 Motor (stator – full range) J1-3 Motor (stator - 1/2 range)	J3-1 Drain pump (line) J3-2 Solenoids (line) J3-3 (line) J3-4 Drain pump (triac) J3-5 Pre-wash solenoid (triac) J3-6 Washing solenoid (triac) J3-7 Solenoids (line) J3-8 (Not used)	J4-1 "Door closed" pilot lamp J4-2 "Door closed" pilot lamp	J5-1 NTC temperature sensor J5-2 NTC temperature sensor J5-3 Motor (tachymetric generator) J5-4 Motor (tachymetric generator) J5-5 (DSP drum positioning system)	Serial interface: J7-1 ASY_IN J7-2 ASY_OUT J7-3 5V J7-4 GND
J8 J8-1 line J8-2 line (neutral)	J2-4 Door safety interlock (triac) J2-5 (Door safety interlock) J2-6 (Anti-overflow pressure switch)	J1-4 Motor (rotor) J1-5 Motor (rotor)				

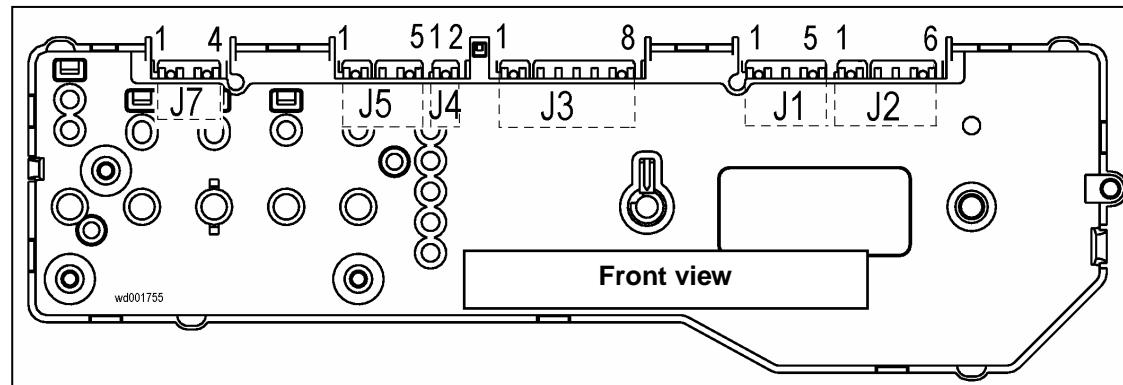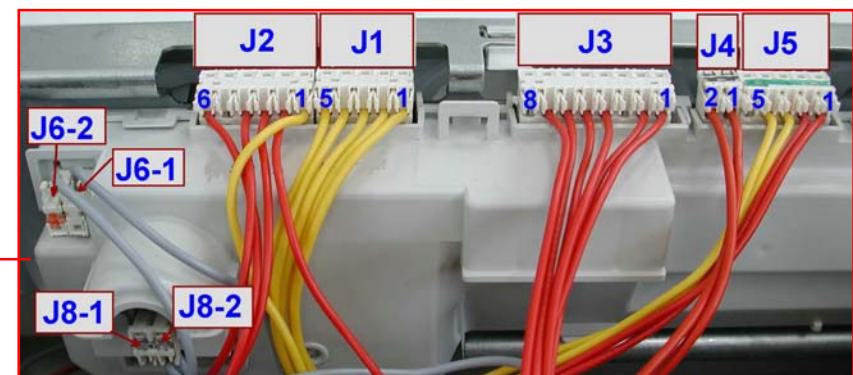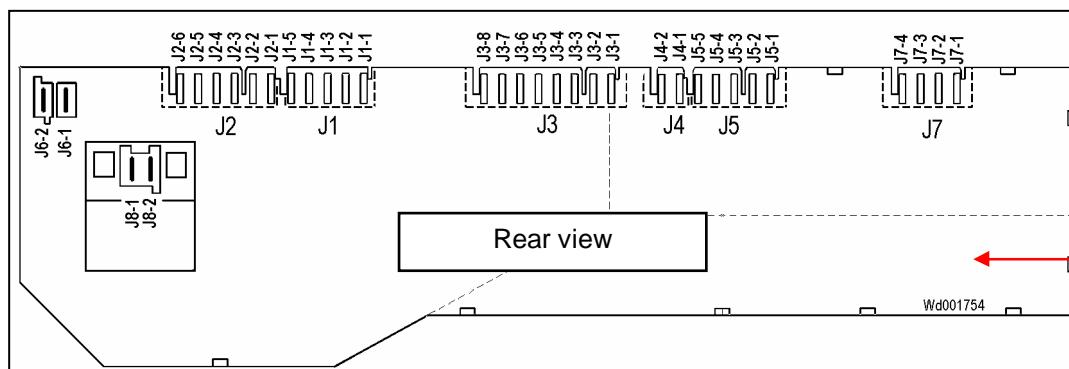


1.10 Burning on the circuit board EWM1000

1.10.1 EWM1000


In case of burning on the main circuit board, check that the problem is not caused by another electrical component (short-circuits, poor insulation, water leakage). Refer to the figures below in order to identify the component that might have caused the burning according to the position of the burned area.
The circuit board shown below is the version with the greatest number of components: other boards may not feature all these components (relay K4 and buzzer).

1.10.2 Components side (common)

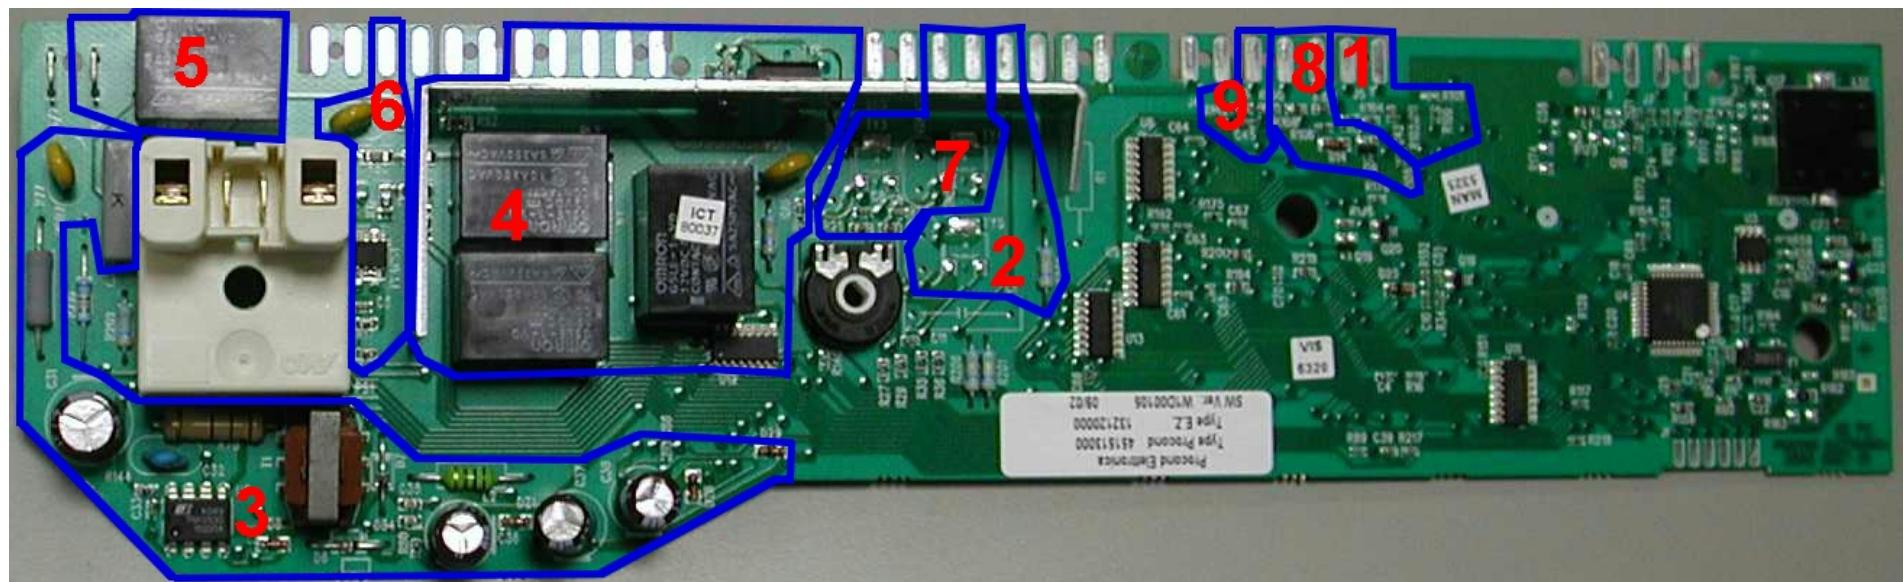


- | | |
|-----------------------------------|------------------------------------------|
| 1. NTC washing temperature sensor | 5. Heating element |
| 2. Drain pump | 6. Door safety interlock |
| 3. Power supply | 7. Water fill solenoids |
| 4. Motor | 8. Tachymetric generator (motor) |
| | 9. Drum positioning system (top-loaders) |

1.10.3 Pushbutton – led side (horizontal buttons)

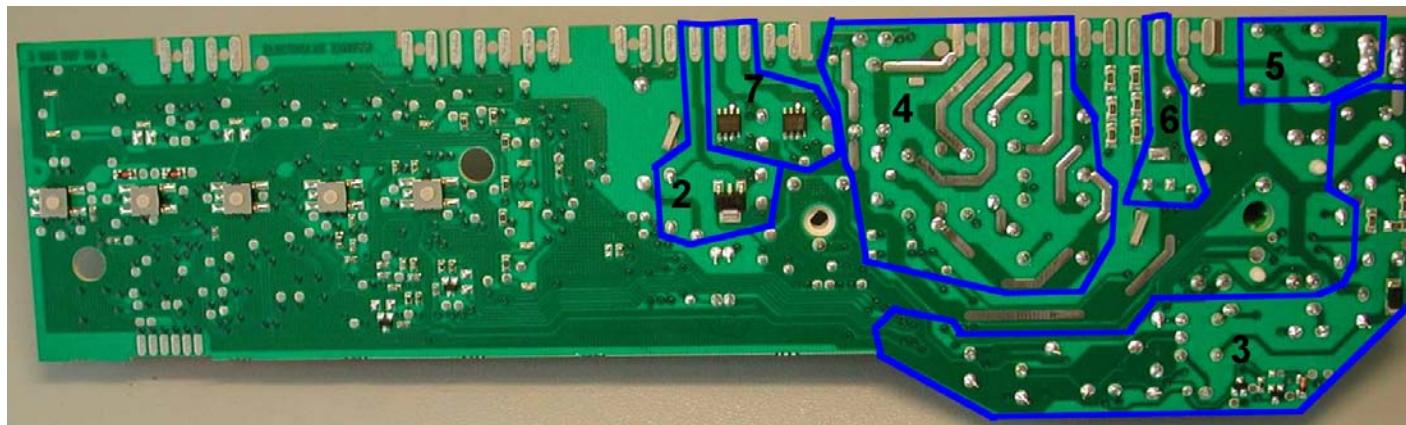

1.10.4 Pushbutton – led side (vertical buttons)

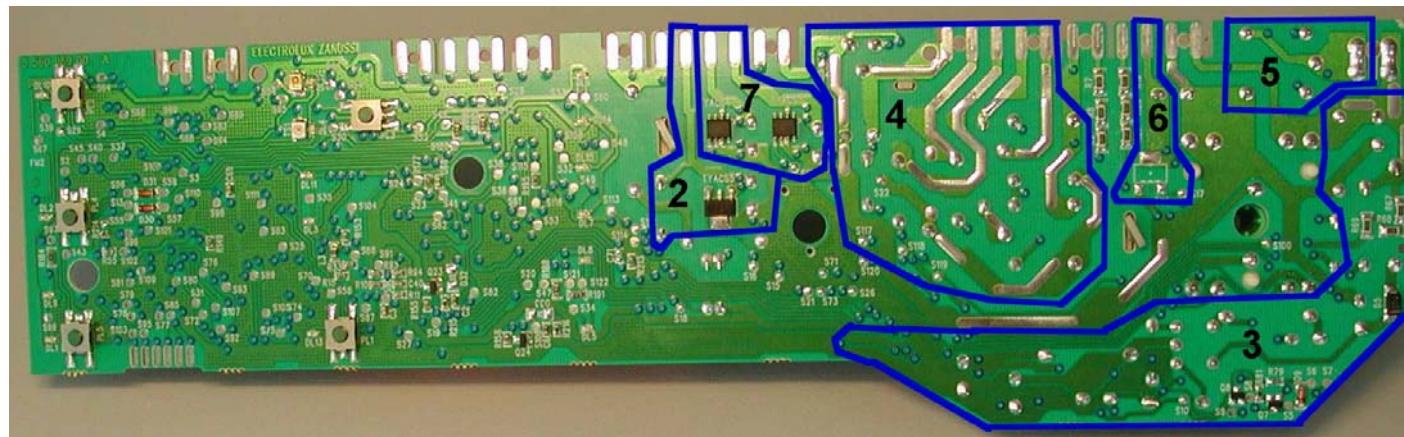

- 1. ---
- 2. Drain pump
- 3. Power supply
- 4. Motor

- 5. Heating element
- 6. Door safety interlock
- 7. Water fill solenoids
- 8. Tachymetric generator (motor)
- 9. Drum positioning system (top-loaders)

2 EWM1000plus 2000evo 3000new

2.1 Control panel

The configuration of the control panel depends on the following:



- ↳ Type of control/display board (with or without display)
- ↳ Design of the control panel and position of the programme selector (right or left of the buttons)
- ↳ Number and configuration of the buttons (max. 8)
- ↳ ON/OFF switch: incorporated in the programme selector or with separated button

Version with left selector and incorporated ON/OFF button				
Alpha-Rim		Sigma		
Club Display				
Delta				
Version with left selector and button ON/OFF switch				
Alpha	Ellipse			
Version with right selector and button ON/OFF switch				
Multipanel Built-in				
Version with right selector and incorporated ON/OFF switch				
Sigma/ZK	AEG NexXxt	AEG NEW		
Club Display				
Delta Version without selector and button ON/OFF switch				
LCD Version without selector and button ON/OFF switch				
LCD Version with left selector and incorporated ON/OFF button				

2.2 Sigma/Alpha/Ellipse//Multipanel Built-In/Sigma-ZK/Jewel with or without selector

2.2.1 Access to diagnostics system

Attention: the programme selector is not always in the position indicated in the picture; it can be on the right or on the left of the display board!

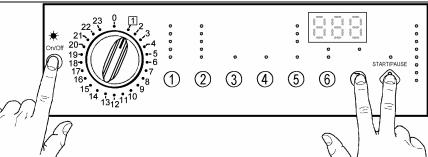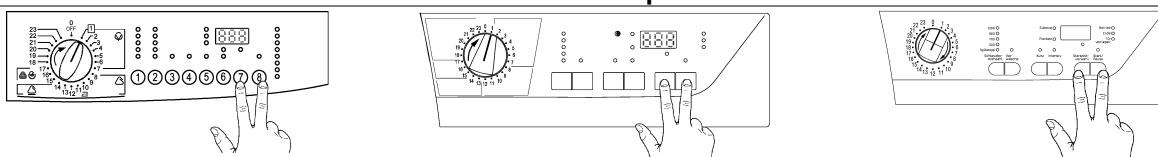Version with selector and button ON/OFF switch

<ol style="list-style-type: none"> 1. Cancel the set programme and switch the appliance off. 2. Rotate the programme selector of one positions clockwise. 3. Press the start/pause (8) button and any of the option button simultaneously and then, keeping them pressed, switch the appliance on through the ON/OFF button (on/off). 4. Hold the start/pause and option buttons down till the LEDs start flashing (about 5 seconds). 5. To exit the diagnostics system switch the appliance off, on and then off again.
Version with selector and incorporated ON/OFF switch

<ol style="list-style-type: none"> 1. Cancel the set programme switching the appliance off. 2. Press the start/pause (8) button and any of the option buttons simultaneously and then, keeping them pressed, switch the appliance on rotating the programme selector of one position clockwise. 3. Hold the start/pause and option buttons down till the LEDs start flashing (about 5 seconds). 4. To exit the diagnostics system switch the appliance off, on and then off again.


2.2.2 Rapid reading of alarm codes

The last alarm code can be displayed even if the programme selector is not in the tenth position (diagnostics) or if the appliance is in normal operating mode (e.g. during the execution of the washing programme):

- ↳ Press and hold down **START/PAUSE** and the option button nearest to the **START/PAUSE** button for at least two seconds: the LEDs initially switch off, and then display the flashing sequence corresponding to the alarm; if the display is featured, it will display the alarm code
- ↳ The alarm sequence is displayed for the time in which the buttons are hold down
- ↳ During the time the alarm is displayed, the appliance continues to perform the cycle or, if it is in the selection phase, it keeps in memory the options previously chosen.

2.2.3 Cancelling the last alarm


It is good practice to cancel the last alarm, after reading the alarm code to check whether the alarm re-occurs during the diagnostics control after the reparation of the appliance.

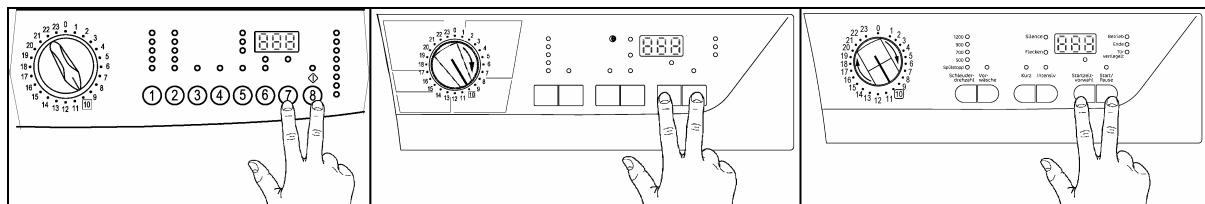

1. Select diagnostics mode and turn the programme selector to the **tenth** position (reading of alarm)
2. Press and hold down **START/PAUSE** and **any of the option buttons** at the same time for five seconds.

2.3 AEG NexXxt Version with selector and incorporated ON/OFF switch

2.3.1 Access to diagnostics system

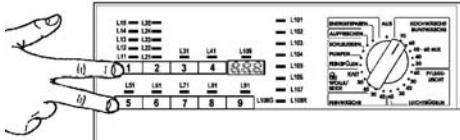

1. Cancel the set programme and switch the appliance off.
2. Press buttons **1** and **5** (or button **2** and **6**) simultaneously and then, holding them down, switch the appliance on by rotating the programme selector of **one position clockwise**.
3. To exit the diagnostics system switch the appliance **off**, **on** and then **off** again.


2.3.2 Rapid reading of alarm codes

The last alarm code can be displayed even if the programme selector is not in the tenth position (diagnostics) or if the appliance is in normal operating mode (e.g. during the execution of the washing programme):

- ☛ Press buttons **1** and **5** simultaneously for at least 2 seconds: the LED switch off and then display the sequence of flashes indicating the alarm.
- ☛ The alarm sequence is displayed for the time in which the buttons are hold down
- ☛ During the time the alarm is displayed, the appliance continues to perform the cycle or, if it is in the selection phase, it keeps in memory the options previously chosen.

2.3.3 Cancelling the last alarm


It is good practice to cancel the last alarm, after reading the alarm code to check whether the alarm reoccurs during the diagnostics control after the reparation of the appliance

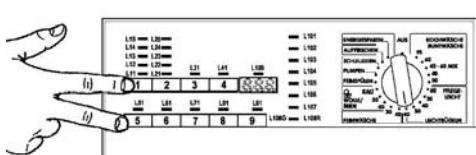

1. Select diagnostics mode and turn the programme selector to the **tenth** position (reading of alarm)
2. Press buttons **1** and **5** simultaneously.
3. Hold buttons **1** and **5** down (about 2 seconds).

2.4 AEG New Version with right selector and incorporated ON/OFF switch

2.4.1 Access to diagnostics system

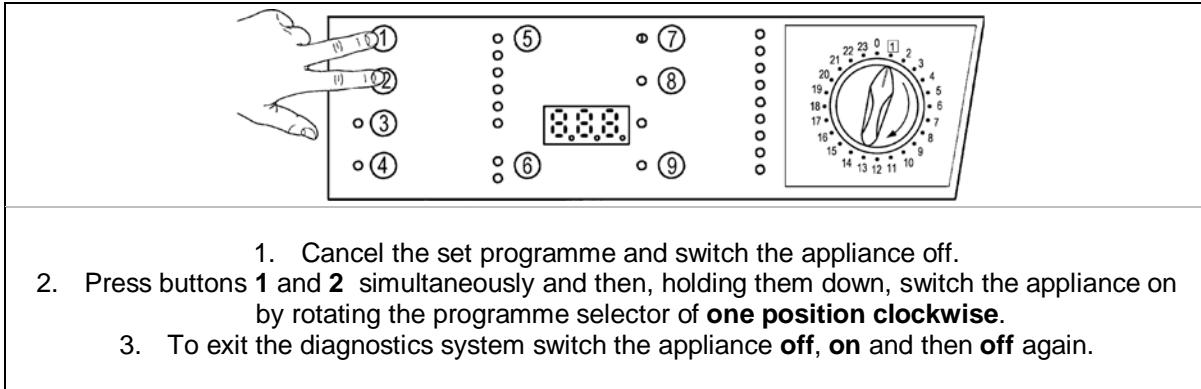


2.4.2 Rapid reading of alarm codes

The last alarm code can be displayed even if the programme selector is not in the tenth position (diagnostics) or if the appliance is in normal operating mode (e.g. during the execution of the washing programme):

- ☛ Press buttons **1** and **2** simultaneously for at least 2 seconds: the LED switch off and then display the sequence of flashes indicating the alarm.
- ☛ The alarm sequence is displayed for the time in which the buttons are hold down
- ☛ During the time the alarm is displayed, the appliance continues to perform the cycle or, if it is in the selection phase, it keeps in memory the options previously chosen.


2.4.3 Cancelling the last alarm

It is good practice to cancel the last alarm, after reading the alarm code to check whether the alarm reoccurs during the diagnostics control after the reparation of the appliance

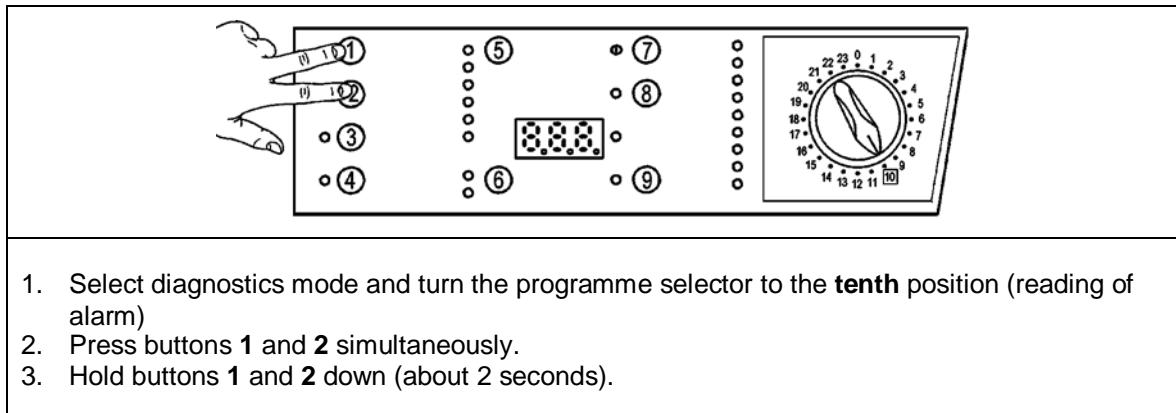

2.5 DELTA Version without selector and button ON/OFF switch

2.5.1 Access to diagnostics system

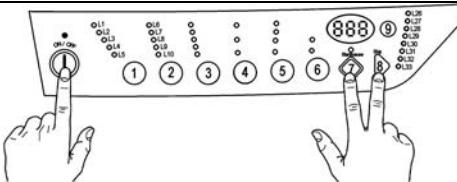

1. Reset the set programme with the **SKIP/RESET** button and then switch the appliance off.
2. Press the **START/PAUSE** and **SKIP/RESET** buttons simultaneously and then, holding the buttons down, switch the appliance on using the **ON/OFF** button.
3. Hold the buttons down until the buzzer sounds and the LEDs start flashing (about 4 seconds).
4. To exit the diagnostics system switch the appliance off, on and then off again.


2.5.2 Rapid reading of alarm codes

The last alarm code can be displayed even if the programme selector is not in the tenth position (diagnostics) or if the appliance is in normal operating mode (e.g. during the execution of the washing programme):

- ↳ Press **START/PAUSE** and **SKIP/RESET** buttons simultaneously for at least 2 seconds: the LEDs switch off and then display the sequence of flashes indicating the alarm.
- ↳ The alarm sequence is displayed for the time in which the buttons are held down
- ↳ During the time the alarm is displayed, the appliance continues to perform the cycle or, if it is in the selection phase, it keeps the options previously chosen in memory.

2.5.3 Cancelling the last alarm


It is good practice to cancel the last alarm, after reading the alarm code to check whether the alarm reoccurs during the diagnostics control after the reparation of the appliance

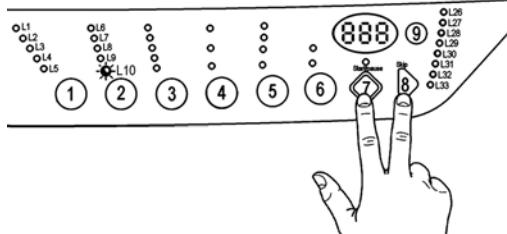

1. Select diagnostics mode and Press the Fabrics (1) or Temperature (2) button until LED L10 lights (reading of alarm).
2. Press and hold down **START/PAUSE** and **START/RESET**.

2.6 CLUB DISPLAY Version with selector and incorporated ON/OFF switch

2.6.1 Access to diagnostics system

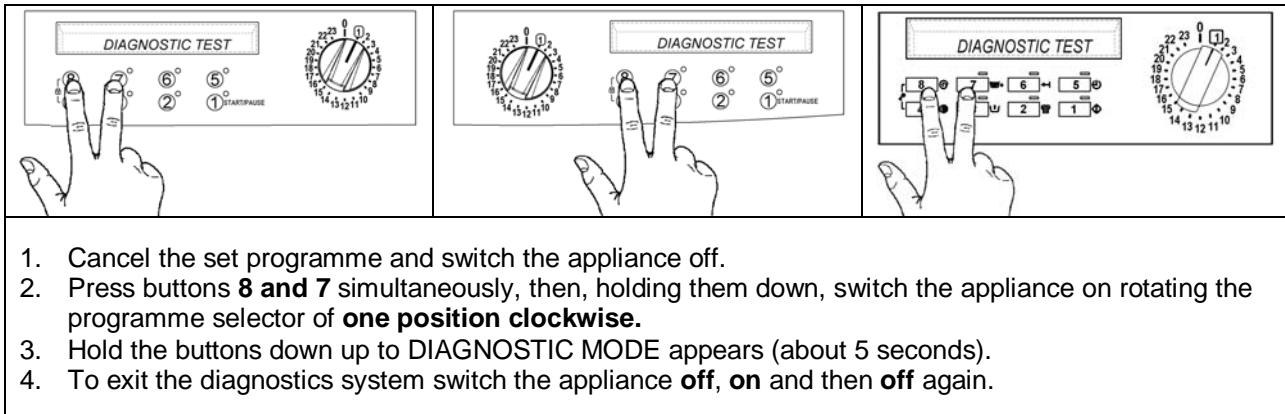


2.6.2 Rapid reading of alarm codes

The last alarm code can be displayed even if the programme selector is not in the tenth position (diagnostics) or if the appliance is in normal operating mode (e.g. during the execution of the washing programme):

- ↳ Five minutes after the switching on, press and hold down the **8** and **7** buttons simultaneously for 2 seconds, the LCD display shows the last alarm codes (of the main board and display board). The displaying of the alarms depends on the time in which the buttons are hold down.
- ↳ During the time the alarm is displayed, the appliance continues to perform the cycle or, if it is in the selection phase, it keeps in memory the options previously chosen.


2.6.3 Cancelling the last alarm

It is good practice to cancel the last alarm, after reading the alarm code to check whether the alarm reoccurs during the diagnostics control after the reparation of the appliance

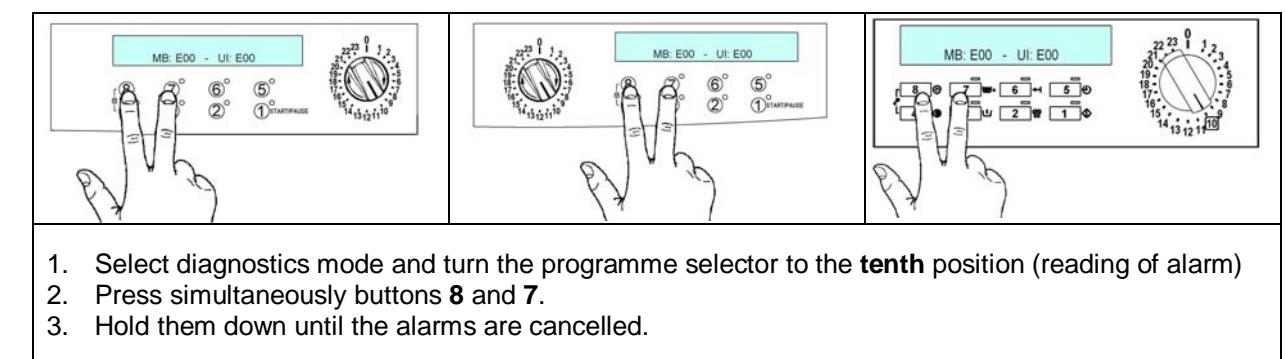

2.7 LCD Version without selector and button ON/OFF switch

2.7.1 Access to diagnostics system

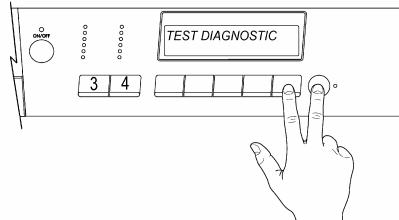

1. Reset the set programme and switch the appliance off.
2. Press the **10** and **11** buttons, simultaneously, then, holding them down, switch the appliance on with ON/OFF button.
3. Hold the buttons down till DIAGNOSTIC MODE appears (about 5 seconds).
4. To exit the diagnostic system switch the appliance **off**, **on** and then **off** again.


2.7.2 Rapid reading of alarm codes

The last alarm code can be displayed even if the programme selector is not in the tenth position (diagnostics) or if the appliance is in normal operating mode (e.g. during the execution of the washing programme):

- ☛ Five minutes after the switching on, press and hold down the **10** and **11** buttons simultaneously for 2 seconds, the LCD display shows the last alarm codes (of the main board and display board). The displaying of the alarms depends on the time in which the buttons are hold down.
- ☛ During the time the alarm is displayed, the appliance continues to perform the cycle or, if it is in the selection phase, it keeps in memory the options previously chosen.

2.7.3 Cancelling the last alarm


It is good practice to cancel the last alarm, after reading the alarm code to check whether the alarm reoccurs during the diagnostics control after the reparation of the appliance

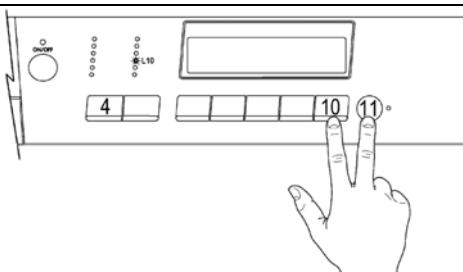

1. Select diagnostic mode and with button **4** go to **tenth** position (alarm reading)
2. Press simultaneously buttons **10** and **11**.
3. Hold them down until the alarms are cancelled.

2.8 LCD Version with selector and button ON/OFF switch

2.8.1 Access to diagnostics system

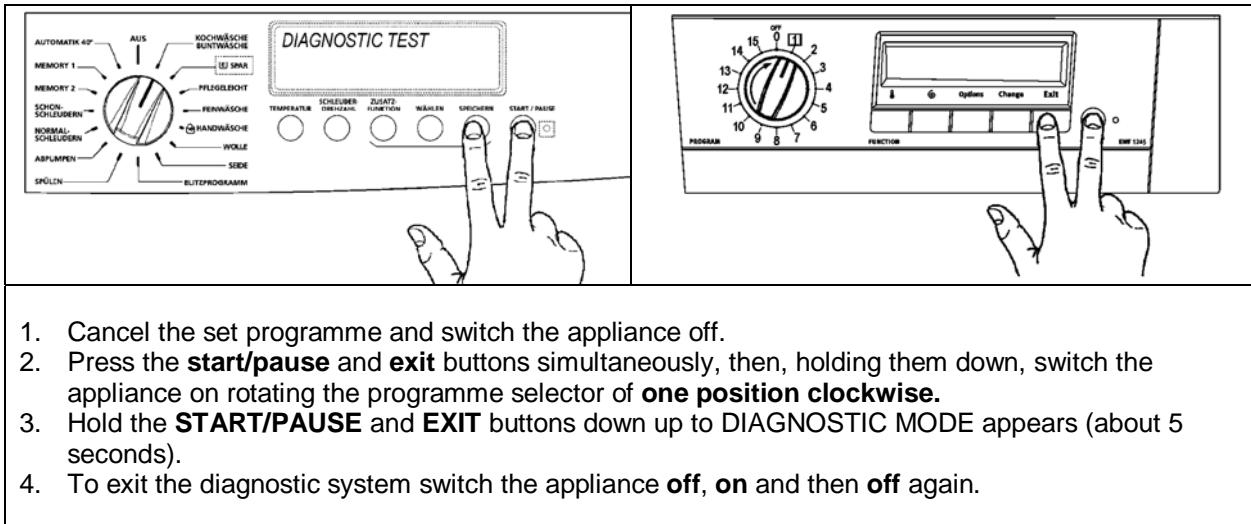

1. Cancel the set programme and switch the appliance off.
2. Press the **start/pause** and **exit** buttons simultaneously, then, holding them down, switch the appliance on rotating the programme selector of **one position clockwise**.
3. Hold the **START/PAUSE** and **EXIT** buttons down up to DIAGNOSTIC MODE appears (about 5 seconds).
4. To exit the diagnostic system switch the appliance **off**, **on** and then **off** again.


2.8.2 Rapid reading of alarm codes

The last alarm code can be displayed even if the programme selector is not in the tenth position (diagnostics) or if the appliance is in normal operating mode (e.g. during the execution of the washing programme):

- ☞ Five minutes after the switching on, press and hold down the **START/PAUSE** and **EXIT** buttons for 2 seconds, the LCD displaying shows the last alarm codes (of the main board and display board). The displaying of the alarms depends on the time in which the buttons are hold down.
- ☞ During the time the alarm is displayed, the appliance continues to perform the cycle or, if it is in the selection phase, it keeps in memory the options previously chosen.

2.8.3 Cancelling the last alarm

It is good practice to cancel the last alarm, after reading the alarm code to check whether the alarm reoccurs during the diagnostics control after the reparation of the appliance

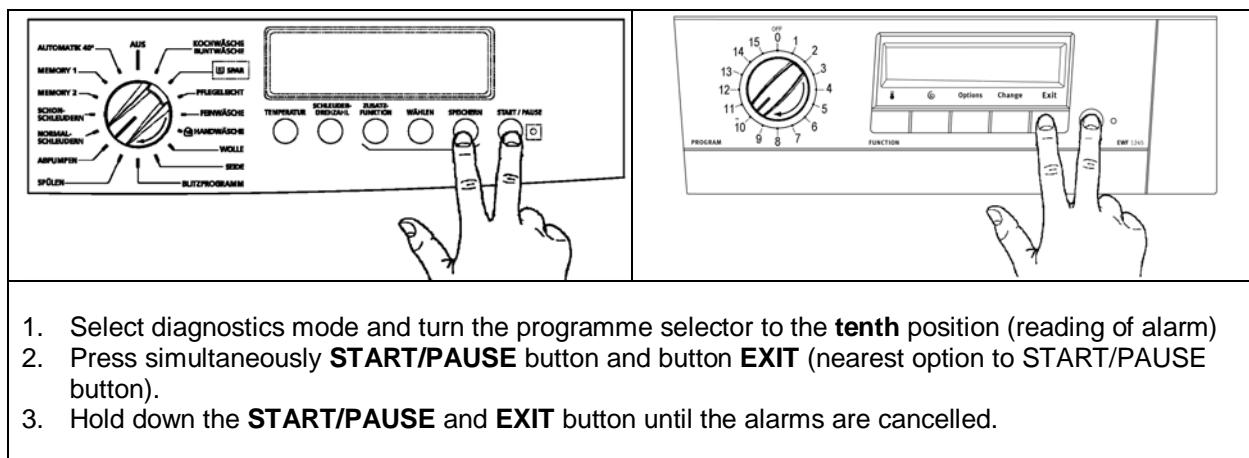

1. Select diagnostics mode and turn the programme selector to the **tenth** position (reading of alarm)
2. Press simultaneously **START/PAUSE** button and button **EXIT** (nearest option to START/PAUSE button).
3. Hold down the **START/PAUSE** and **EXIT** button until the alarms are cancelled.



2.9 Phases of the diagnostics test

Independently of the type of selector, after activating the diagnostics system, the operation diagnostics of the different components and the reading of the alarms can be performed, by rotating the selector **clockwise**.

In models with digit the code of the selector position is displayed for a second.

In the diagnostics cycle all alarms are activated. If during the cycle operation an alarm occurs, the appliance blocks and the LEDs (and the display) flash indicating the relative code.

Diagnostics phases						
	Selector	Only pushbutton	Components actioned	Operating conditions	Function checked	Displayed parameters (1)
1			All the LEDs light in sequence. When a button is pressed, the corresponding LED lights (and the buzzer, if featured, sounds)	Always activated	Operation of the user interface	Button codification
2			Door interlock Washing solenoid	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through washing compartment	(**)Selection position code
3			Door interlock Pre-wash solenoid	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through pre-wash compartment (bleach)	(**)Selection position code
4			Door interlock Pre-wash and wash solenoids	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through conditioner compartment	(**)Selection position code
5			Door interlock. Bleach/stains solenoid.	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through bleach/stains compartment	(**)Selection position code
6			Door interlock. Washing solenoid if the level of water in the tub is below 1st level Heating element.	Door locked. Water at 1st level. Maximum time 10 min. or up to 90°C. (*)	Heating	(**)Selection position code
7			Door interlock. (Washing solenoid if the level of water in the tub is below 1st level). Motor (55 rpm clockwise, 55 rpm counter-clockwise, 250 rpm impulse)	Door locked Water level at 1st level.	Check for leaks from the tub	(**)Selection position code
8			Door interlock Drain pump Motor up to 650 rpm then at maximum spin speed	Door locked Water level lower than anti-boiling level for spinning	Drain and spin; control of congruence in closure of level pressure switches	(**)Selection position code
9			Drying heater Fan Condensation solenoid Drain pump Motor	Door closed	Drying	(**) selector position code

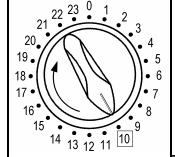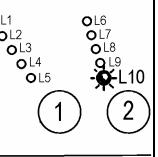10			Reading/cancelling last alarm	Alarm code
11, 12 ...24	All LEDs light in sequence. Pressing a button the corresponding LED lights (and the Buzzer sounds, if featured)			

(*) In most cases, this time is sufficient to check the heating. However, the time can be increased by repeating the phase without draining the water: for a moment to a different phase of the diagnostics cycle and then back to the heating control phase (if the temperature is higher than 80°C, heating does not take place).

(**) See tables of following pages.


(1) Models with Display.

2.10 Reading the alarm codes

In order to read the last alarm code memorized in the EEPROM on the PCB:

with knob

- Enter diagnostics mode
- Irrespective of the type of PCB and configuration, turn the programme selector **clockwise** to the **tenth position**.

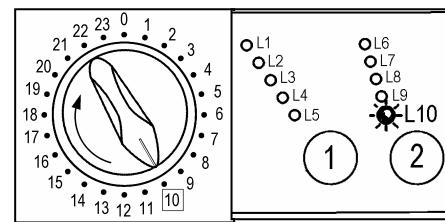

without knob

- Press the Fabrics (1) or Temperature (2) button until LED L10 lights.

2.10.1 Displaying the alarm


The alarm is displayed by a repeated flashing sequence of the two LEDs (0.4 seconds lit, 0.4 seconds off, with an interval of 2.5 seconds between sequences).
The buzzer (if featured) will sound "bips" in synchronization with the flashing of the LEDs.

- **END OF CYCLE LED** → indicates the first digit of the alarm code (family)
- **START/PAUSE** → indicates the second digit of the alarm code (number within the family)

These two LEDs are featured on all models (though they are **configured differently**), and flash simultaneously.

Notes:

- The first letter of the alarm code “E” (Error) is not displayed, since this letter is common to all alarm codes.
- The alarm code “families” are shown in hexadecimal; in other words:
→ **A** is represented by 10 flashes
→ **B** is represented by 11 flashes
→ ...
→ **F** is represented by 15 flashes
- Configuration errors are shown by the flashing of a series of LEDs.

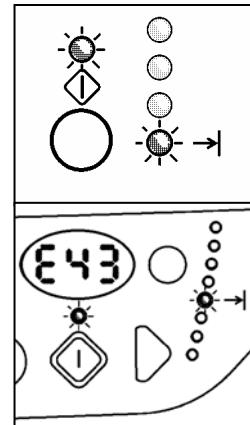

2.10.2 Examples of alarm displays

Example: Alarm E43 will display the following:

- On the display, if featured, **E43**
- The sequence of **four** flashes of the **End-of-cycle LED** indicates the first number **E4**;
- The sequence of **three** flashes of the **Start/Pause** LED indicates the second number **3**;

END-OF-CYCLE LED		→	START/PAUSE LED ◇		
On/Off	Time (Sec.)	Value	On/Off	Time (Sec.)	Value
●	0.4	1	●	0.4	1
○	0.4		○	0.4	
●	0.4	2	●	0.4	2
○	0.4		○	0.4	
●	0.4	3	●	0.4	3
○	0.4		○	0.4	
●	0.4	4	○	3,3	Pause
○	0.4		○	3,3	
○	2.5	Pause			

2.11 Table of alarms codes EWM 1000plus EWM2000EVO EWM3000NEW

Alarm	Description	Possible malfunction	Action/status of machine	Reset
E00		No alarm		---
E11	Poor water fill before wash cycle	Tap closed or water pressure too low; Drain tube improperly positioned; Water fill solenoid valve is defective; Leaks from water circuit on pressure switch; Pressure switch defective; Wiring defective; Main board defective.	Cycle is paused with door locked	Start
E12	Difficulty in water fill during drying (maximum time 3 min. water fill in drying during the wash load unrolling phase)	Tap closed or water pressure too low; solenoid valve; pressure switch water circuit; pressure switches; wiring; main board.	Cycle is paused	Start
E13	Water leaks	Drain tube improperly positioned; Water pressure too low; Water fill solenoid valve is defective; Water circuit on pressure switch is leaking/clogged; Pressure switch defective.	Cycle is paused with door locked	Start
E21	Poor draining	Drain tube kinked/clogged/improperly positioned; Drain filter clogged/dirty; Drain pump defective; Pressure switch defective; Wiring defective; Main board defective; Electrical current leak between heating element and ground.	Cycle is paused	Start
E22	Difficulty in water fill during drying or drying condenser clogged (anti-boiling pressure switch closed on "FULL")	Drain hose kinked; filter clogged: drying condenser clogged; drain pump faulty; pressure switches faulty; wiring; main circuit board defective; current leakage between heater and ground.	Cycle is paused	Start
E23	Defective triac for drain pump	Drain pump defective; Wiring defective; Main board defective.	Emergency drain procedure - Cycle stops with door unlocked	OFF/reset
E24	Malfunction in sensing circuit on triac for drain pump	Main board defective.	Emergency drain procedure - Cycle stops with door unlocked	OFF/reset
E31	Malfunction in pressure switch circuit (frequency of signal from pressure switch out of limits)	Pressure switch; Wiring; Main board;	Cycle stops with door locked	OFF/reset
E32	Electronic pressure switch improperly calibrated (level on electronic pressure switch differs from 0-66 mm after initial calibration drain and when antiboiling pressure switch is on "empty").	Tap is closed or water pressure is too low; Solenoid valve; Water circuit on pressure switches; pressure switches; Wiring; main board;	Cycle is paused	Start
E33	Inconsistency between level on electronic pressure switch and level on antiboiling pressure switch 1-2 (fault persists for at least 60 sec.).	Pressure switch defective; Electrical current leak between heating element and ground; Heating element; Wiring defective; Main board defective. Water circuit;	Emergency drain procedure - Cycle stops with door unlocked	OFF/reset
E34	Inconsistency between level on electronic pressure switch and level on antiboiling pressure switch 2 (fault persists for at least 60 sec.).	Pressure switch defective; Electrical current leak between heating element and ground; Heating element; Wiring defective; Main board defective. Water circuit;	Emergency drain procedure - Cycle stops with door unlocked	OFF/reset

EWM1000plus EWM2000evo EWM3000new

Alarm	Description	Possible malfunction	Action/status of machine	Reset
E35	Overflow	Water fill solenoid valve is defective; Leaks from water circuit on pressure switch; Pressure switch defective; Wiring defective; Main board defective.	Cycle stops. Emergency drain procedure. Drain pump continues to operate (5 min. on, then 5 min. off, etc.).	OFF/reset
E36	Sensing circuit on antiboiling pressure switch 1 defective	Main board defective. Electrical current leak between drying heating element and ground	Cycle stops with door locked	OFF/reset
E37	1st level sensing circuit faulty	PCB faulty.	Cycle blocked, door locked.	OFF/reset
E38	Pressure chamber blocked (water level does not vary for at least 30 sec. during drum rotation)	Pressure switch hydraulic circuit; Pressure switches; Motor drive belt broken;	Heating phase skipped.	---
E39	"HV" sensor of anti-overflow level faulty	PCB faulty.	Cycle blocked, door locked.	OFF/reset
E3A	Heating elem. relay sensing faulty	PCB faulty.	Cycle blocked, door locked	OFF/reset
E41	Door open	Door interlock faulty; wiring faulty; PCB faulty.	Cycle paused	Start
E42	Problems of door closure	Door interlock faulty; wiring faulty; PCB faulty.	Cycle paused	Start
E43	Interlock power supply triac faulty	Door interlock faulty; wiring faulty; PCB faulty.	(Safety drain cycle) Cycle blocked	OFF
E44	Door interlock sensor faulty	PCB faulty.	(Safety drain cycle) Cycle blocked	OFF
E45	Door interlock sensing circuit triac faulty	PCB faulty	(Safety drain cycle) Cycle blocked	OFF
E51	Motor power supply triac short-circuited	PCB faulty; current leakage from motor or from wiring.	Cycle blocked, door locked (after 5 attempts)	OFF/reset
E52	No signal from motor tachometric generator	Motor faulty; wiring faulty; PCB faulty	Cycle blocked, door locked (after 5 attempts)	OFF/reset
E53	Motor triac sensing circuit faulty	PCB faulty.	Cycle blocked, door locked	OFF/reset
E54	Motor relay contacts sticking	PCB faulty; current leakage from motor or from wiring	Cycle blocked, door locked (after 5 attempts)	OFF/reset
E57	Inverter is drawing too much current (>15A)	Motor defective; Wiring defective on inverter for motor, inverter board defective.	Cycle stops with door locked (after 5 attempts).	OFF/reset
E58	Motor is drawing too much current (>4.5A)	Motor defective; Wiring defective on inverter for motor, inverter board defective, abnormal motor operation (motor overloaded).	Cycle stops with door locked (after 5 attempts).	OFF/reset
E59	No signal from tachometric generator for more than 3 seconds	Motor defective; Wiring defective on inverter for motor; Inverter board defective.	Cycle stops with door locked (after 5 attempts).	OFF/reset
E5A	Overheating on heat dissipater for inverter	Inverter board defective. NTC open (on the inverter board). Overheating caused by continuous operation or ambient conditions (let appliance cool down)	Cycle stops with door locked (after 5 attempts).	OFF/reset
E5B	Input voltage is lower than 175V	Wiring defective, Inverter board defective	Cycle stops with door locked (after 5 attempts).	OFF/reset
E5C	Input voltage is too high	Inverter board defective, the mains voltage is too high (measure the mains voltage)	Cycle stops with door locked (after 5 attempts).	OFF/reset
E5D	Data transfer error between inverter and main board	Line interference, Wiring defective, defective main board or inverter board	Cycle stops with door locked (after 5 attempts).	OFF/reset

EWM1000plus EWM2000evo EWM3000new


Alarm	Description	Possible malfunction	Action/status of machine	Reset
E5E	Communication error between inverter and main board	Defective wiring between main board and inverter board, Defective inverter board, defective main board	Cycle stops	OFF
E5F	Inverter board fails to start the motor	Defective inverter board, Defective wiring, defective main board	Cycle stops with door locked (after 5 attempts).	OFF/reset
E61	Insufficient heating during wash cycle	Defective NTC sensor for wash cycle; Heating element defective; Wiring defective; Main board defective.	Heating phase is skipped	Start
E62	Overheating during wash cycle	Defective NTC sensor for wash cycle; Heating element defective; Wiring defective; Main board defective.	Safety drain cycle - Cycle stops with door unlocked	OFF/reset
E66	Relay supplying power to heating element defective	Main board defective; Electrical current leak from heating element to ground.	Safety drain cycle - Cycle stops with door unlocked	OFF/reset
E71	NTC sensor for wash cycle defective	Defective NTC sensor; Wiring defective; Main board defective.	Heating is skipped	Start
E72	Fault in NTC sensor on drying condenser (voltage out of range = short-circuit, open circuit)	Drying NTC sensor (condenser) defective; wiring defective; main circuit board defective.	Heating is skipped	Start
E73	Fault in NTC sensor on drying duct (voltage out of range = short-circuit, open circuit)	Drying NTC sensor (duct) defective; wiring defective; main circuit board defective.	Heating is skipped	Start
E74	NTC sensor for wash cycle improperly positioned	NTC sensor improperly positioned; Defective NTC sensor; Wiring defective; Main board defective.	Heating is skipped	Start
E82	Error in selector reset position	PCB faulty (Wrong configuration data). Selector, wiring	---	OFF/reset
E83	Error in reading selector	PCB faulty (Wrong configuration data). Selector, wiring	Cycle cancelled	---
E84	Recirculation pump defective (inconsistency between the state of the sensing circuit for the recirculation pump and the state of the triac)	Recirculation pump; Wiring; Main board;	Machine drains and cycle stops (with door unlocked)	OFF/reset
E85	Defective sensing circuit on triac for recirculation pump (input voltage on microprocessor remains at 0 or 5 V).	Main board	Machine drains and cycle stops (with door unlocked)	OFF/reset
E91	Communication error between main board and display board	Wiring defective; Control/display board defective Main board defective.	Cycle stops	---
E92	Inconsistency in communication between main board and display board (versions not compatible)	Wrong control/display board; Wrong main board (not right for model).	Cycle stops	---
E93	Configuration error on appliance	Main board defective (Improper programming).	Cycle stops	OFF/reset
E94	Configuration error on wash cycle	Main board defective (Improper programming).	Cycle stops	OFF/reset
E95	Communication error between microprocessor and EEPROM	Main board defective.	Cycle stops	OFF/reset
E97	Inconsistency between list of programmes and configuration of cycle	Main board defective (Improper programming).	Cycle stops	OFF/reset
E98	Communication error between microprocessor and clock	Display board faulty	The cycle continues	-----
EB1	Frequency of power supplied to appliance out of limits	Problems with the power mains (wrong power/interference); Main board defective.	Cycle stops	---

EWM1000plus EWM2000evo EWM3000new

Alarm	Description	Possible malfunction	Action/status of machine	Reset
EB2	Input voltage too high	Problems with the power mains (wrong power/interference); Main board defective.	Cycle stops	---
EB3	Input voltage too low	Problems with the power mains (wrong power/interference); Main board defective.	Cycle stops	---
EBE	Inconsistency between safety relay and sensing circuit	Main board defective, defective wiring	Machine drains and cycle stops (with door unlocked)	OFF/reset
EBF	Sensing circuit on safety system defective (input voltage on microprocessor remains at 0 or 5 V).	Main board defective	Machine drains and cycle stops (with door unlocked)	OFF/reset
EC1	Solenoid valve inoperative but flow meter operating	Main board defective, Solenoid valve defective	Cycle stops with door locked (after 5 attempts).	OFF/reset
EC2	Signal from turbidity sensor out of limits	Turbidity sensor defective, Main board defective, Wiring defective	-----	Start/reset
EC3	Signal from weight sensor out of limits	Weight sensor defective, Main board defective, Wiring defective	---	Start/reset
EF1	Drain filter clogged (drain cycle too long)	Drain tube clogged/kinked/placed too high; Drain filter dirty/clogged.	Warning is displayed at end of cycle (relative LED is lit)	---
EF2	Too much detergent (too much foam during drain cycles)	Too much detergent used; Drain tube clogged/kinked; Drain filter dirty/clogged.	Warning is displayed at end of cycle (relative LED is lit)	---
EF3	"Water Control" system tripped	Water leaks onto base frame; water control system defective.	Machine drains and cycle stops	OFF/reset
EF4	Water fill pressure too low, no signal from flow meter and solenoid valve is open	Tap closed, water pressure too low	-----	Reset

2.12 Basic circuit diagram EWM1000PLUS


2.12.1 Diagram (without aqua control)

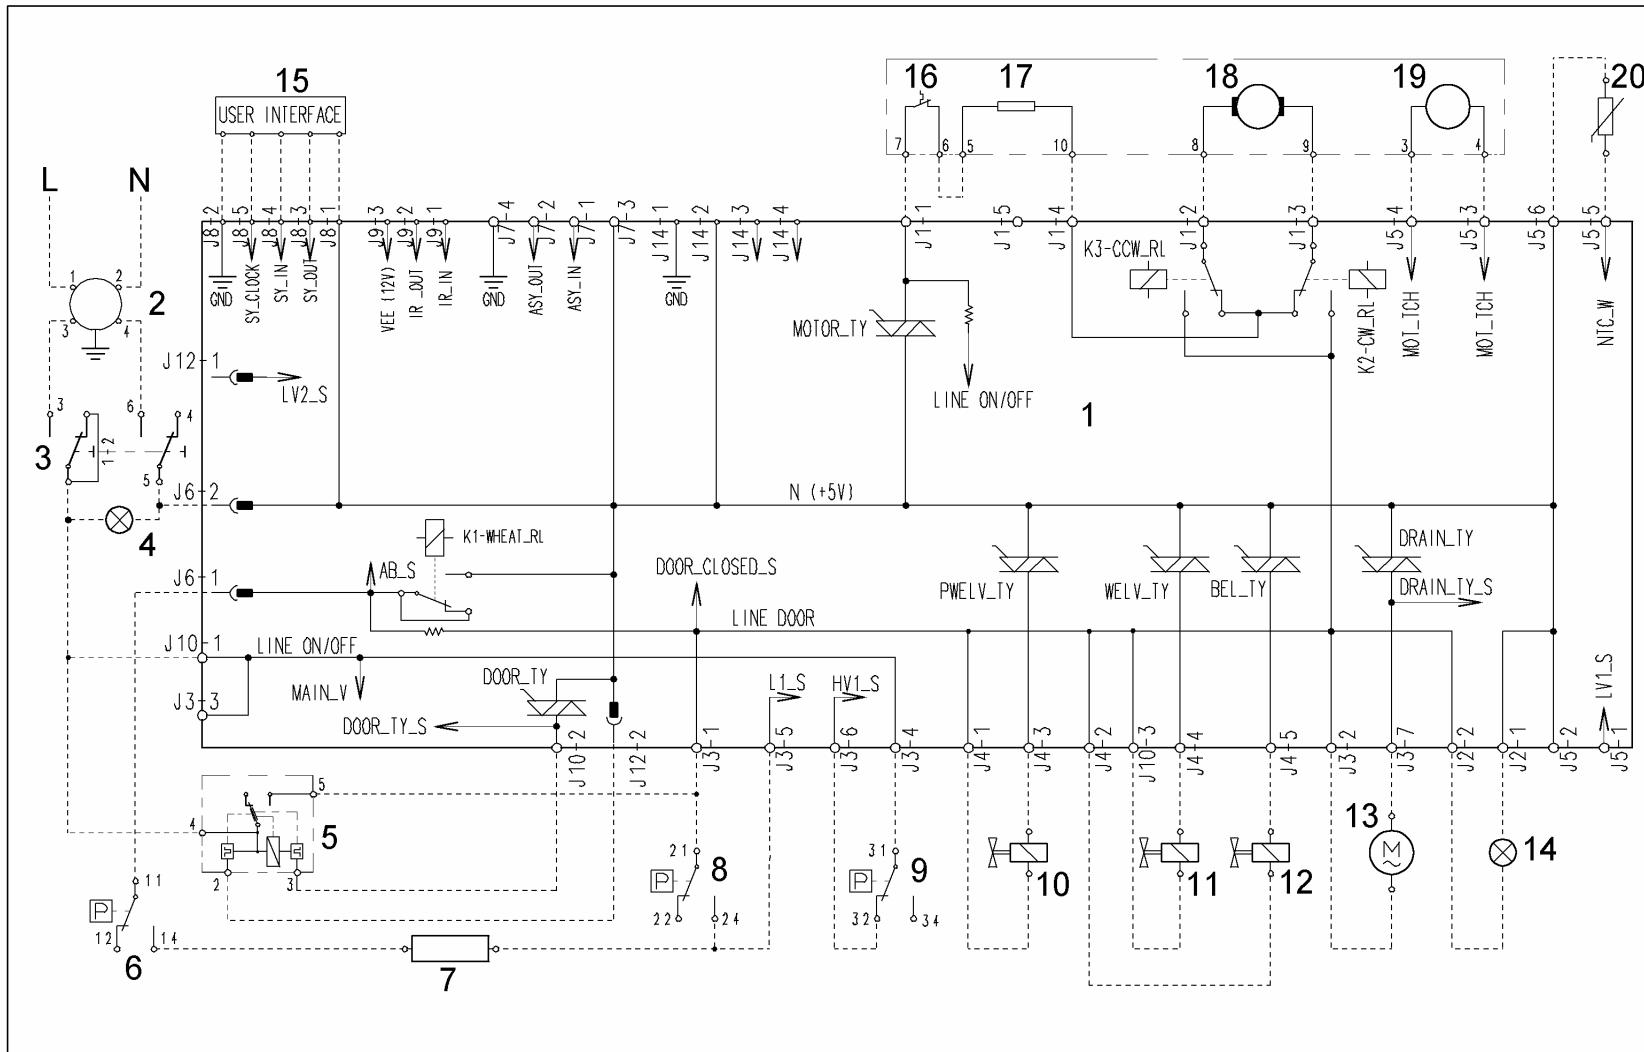

2.12.2 Key to circuit diagram

Components in the appliance	Components of the PCB
1. Electronic board	BELV_TY
2. Suppressor	BLEACH_TY
3. ON/OFF switch	DOOR_TY
4. ON/OFF pilot lamp	DRAIN_TY
5. Door interlock	K1
6. Anti-boiling pressure switch	K2
7. Heating element	K3
8. 1st level pressure switch	K4
9. Anti-overflow pressure switch (<i>not all models</i>)	MOTOR_TY
10. Pre-wash solenoid valve	PWELW_TY
11. Wash solenoid valve	Serial interface
12. Bleach solenoid valve (<i>not all models</i>)	WELV_TY
13. Drain pump	Bleach solenoid Triac
14. Closed door lamp (<i>not all models</i>)	Door interlock Triac
15. Control/display board	Drain pump Triac
16. Thermal cut-out (motor)	Heating element relay
17. Stator (motor)	Motor relay: clockwise rotation
18. Rotor (motor)	Motor relay: anti-clockwise rotation
19. Tachometric generator (motor)	Motor relay: half field power supply (<i>models with higher spin at 1200 rpm</i>)
20. NTC temperature sensor	Motor Triac
	Pre-wash solenoid Triac
	Asynchronous serial interface
	Wash solenoid Triac


2.12.3 Diagram (with aqua control)

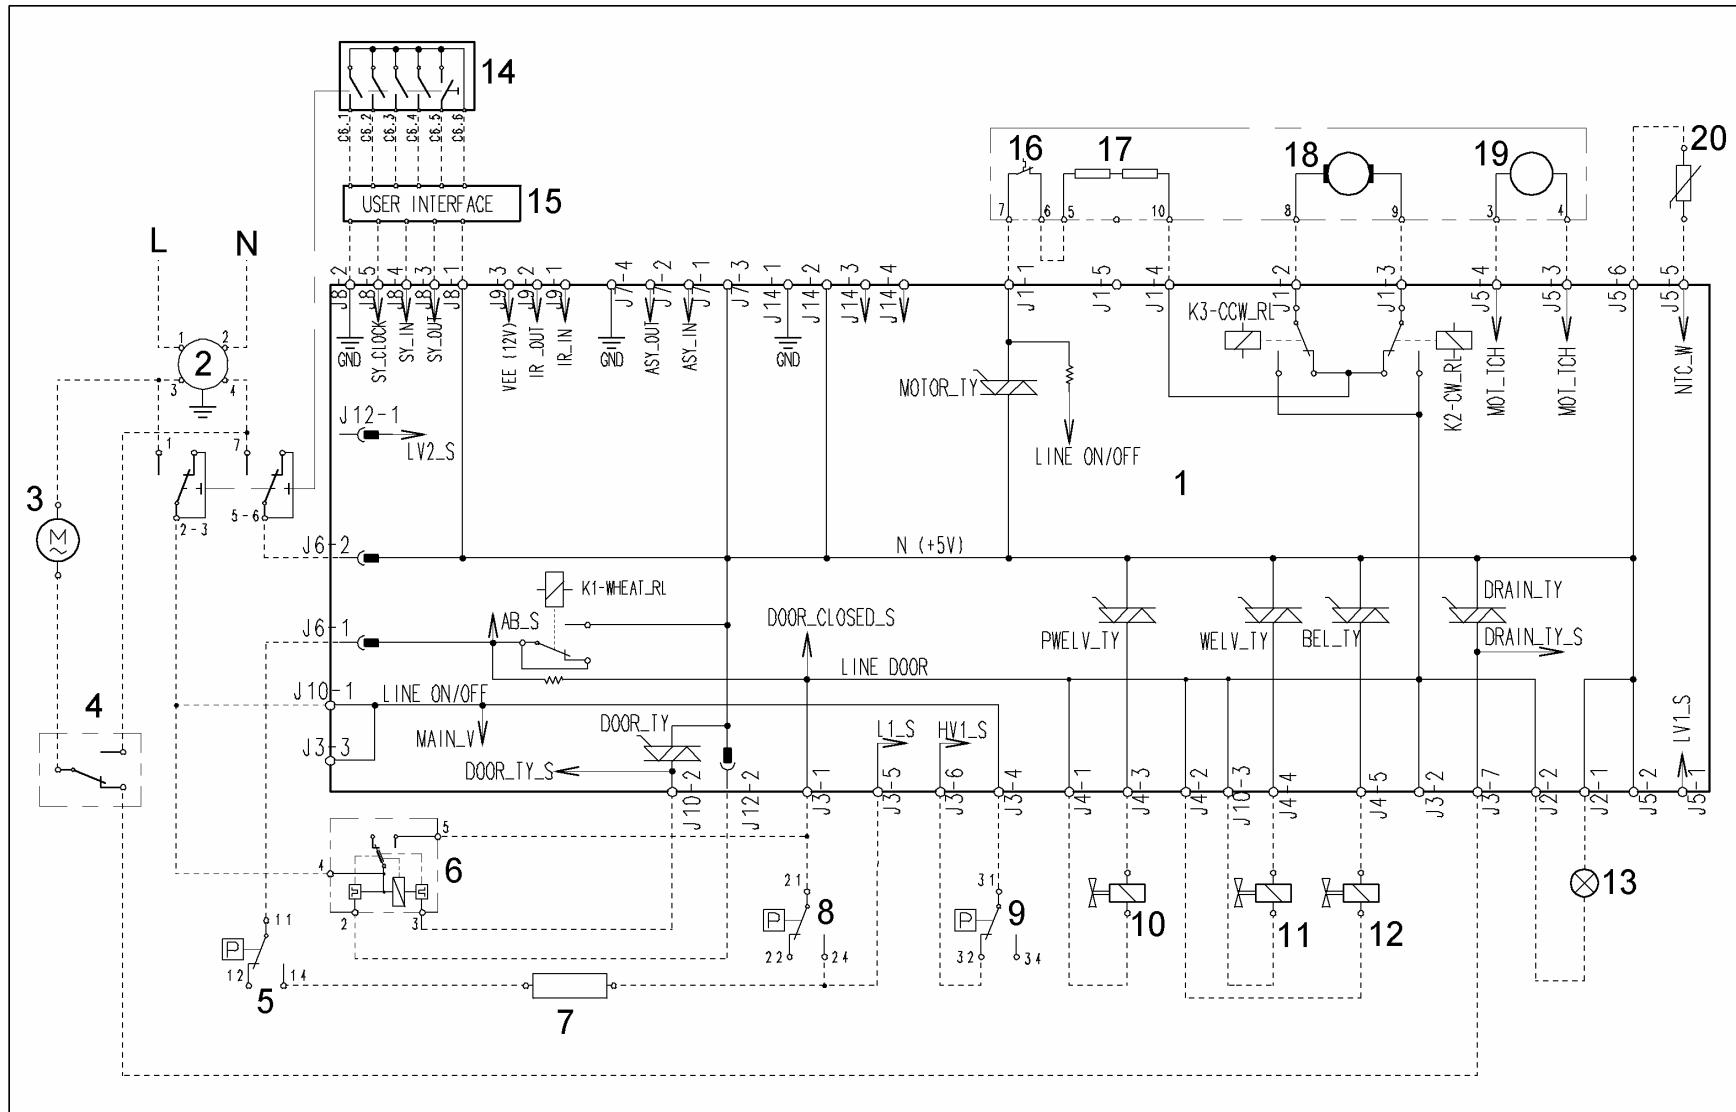

2.12.4 Key to circuit diagram

Components in the appliance	Components of the PCB
1. Electronic board	BELV_TY Bleach solenoid Triac
2. Suppressor	DOOR_TY Door interlock Triac
3. Drain pump	DRAIN_TY Drain pump Triac
4. Aqua control	K1 Heating element relay
5. Anti-boiling pressure switch	K2 Motor relay: clockwise rotation
6. Door interlock	K3 Motor relay: anti-clockwise rotation
7. Heating element	K4 Motor relay: half field power supply (<i>models with higher spin at 1200 rpm</i>)
8. 1st level pressure switch	MOTOR_TY Motor Triac
9. Anti-overflow pressure switch (<i>not all models</i>)	PWELW_TY Pre-wash solenoid Triac
10. Pre-wash solenoid valve	Serial interface Asynchronous serial interface
11. Wash solenoid valve	WELV_TY Wash solenoid Triac
12. Bleach solenoid valve (<i>not all models</i>)	
13. Closed door lamp (<i>not all models</i>)	
14. Selector	
15. Control/display board	
16. Thermal cut-out (motor)	
17. Stator (motor)	
18. Rotor (motor)	
19. Tachometric generator (motor)	
20. NTC temperature sensor	


2.13 Basic circuit diagram with sensor EWM2000EVO

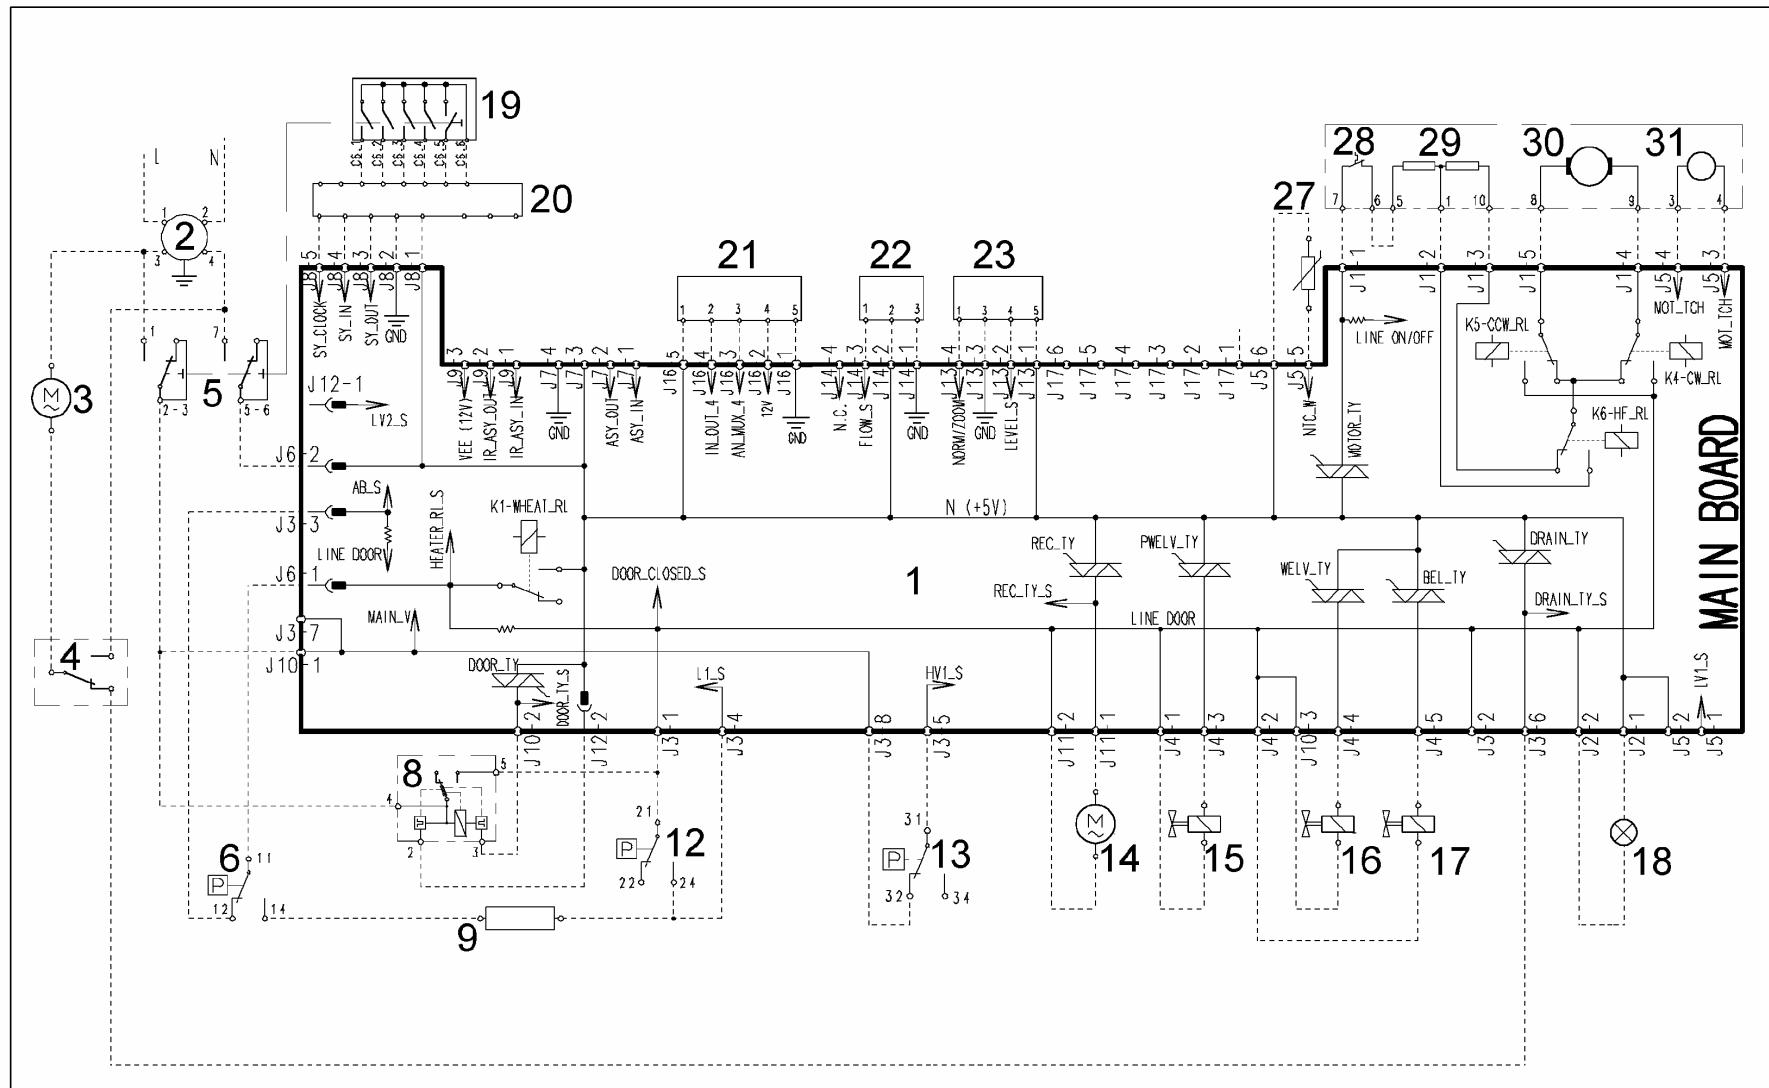

2.13.1 Key for circuit diagram

Electric components	Components on main board
1. Main board	BEL_TY
2. Interference filter	DOOR_TY
3. Drain pump	DRAIN_TY
4. Aqua control	REC_TY
5. ON/OFF switch (built into selector)	K1
6. Anti-boiling pressure switch AE2	K4
7. Door lock unit	K3
8. Heating element	K4
9. Anti-boiling pressure switch AE1	MOTOR_TY
10. Anti-overflow pressure switch	PWELW_TY
11. Recirculation pump	WELV_TY
12. Pre-wash solenoid valve	Bleach solenoid Triac
13. Wash solenoid valve	Door interlock Triac
14. Bleach solenoid valve	Drain pump Triac
15. Pilot lamp	Recirculation pump Triac
16. Selector	Heating element relay
17. Control/display board	Motor relay: clockwise rotation
18. Turbidity sensor	Motor relay: anti-clockwise rotation
19. Flow meter	Motor relay: half field power supply (<i>models with higher spin than 1200 rpm</i>)
20. Analogic pressure switch	Motor Triac
21. NTC temperature sensor	Pre-wash solenoid Triac
22. Thermal cut-out (motor)	Wash solenoid Triac
23. Stator (motor)	
24. Rotor (motor)	
25. Tachometric generator (motor)	

2.14 Basic circuit diagram with sensor EWM3000NEW

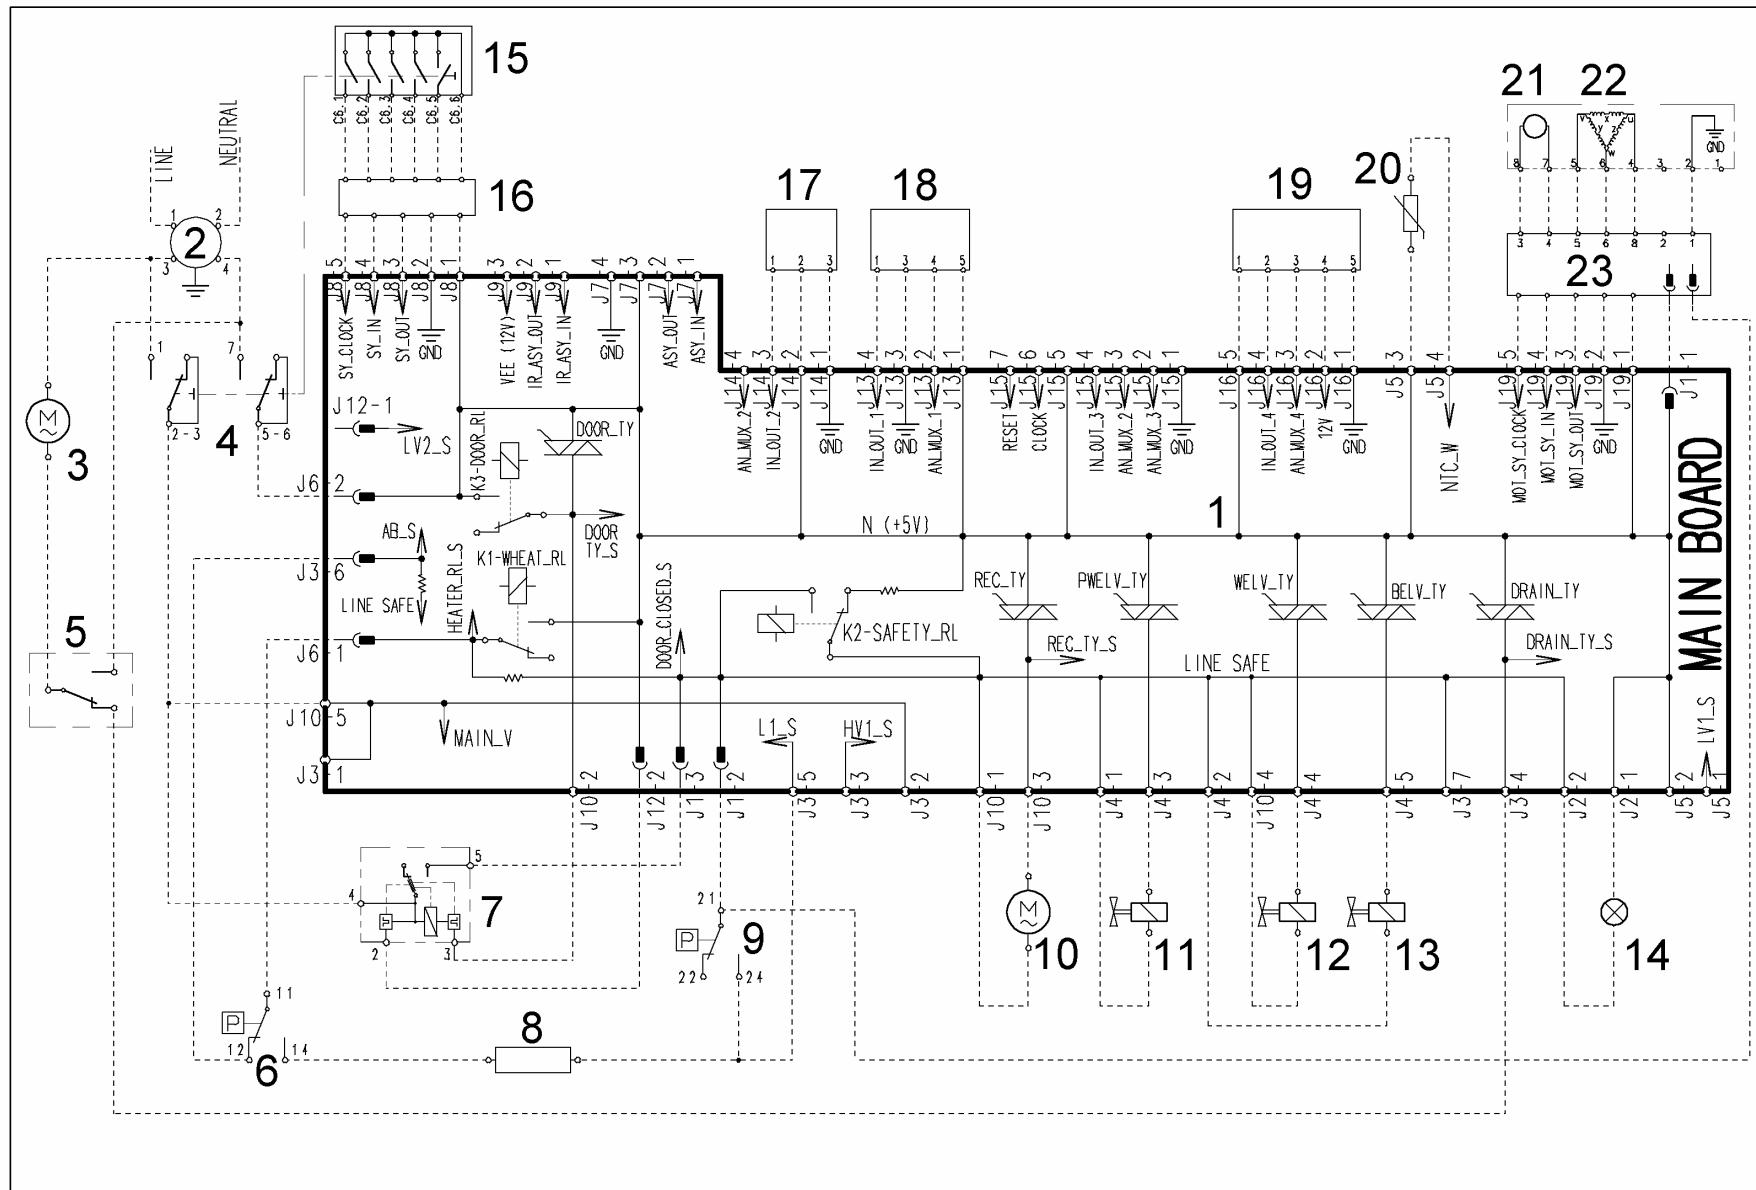


2.14.1 Key for circuit diagram

Electrical components on appliance	Components on main board
1. Main board	BELV_TY
2. Interference filter	DOOR_TY
3. Drain pump	DRAIN_TY
4. ON/OFF switch (built into selector)	K1
5. Aqua Control	K2
6. Antibooiling pressure switch AE2	PWELV_TY
7. Door lock unit	REC_TY
8. Heating element	WELV_TY
9. Antibooiling pressure switch AE1	Triac for solenoid valve for bleach dispenser
10. Recirculation pump	Triac for door lock unit
11. Solenoid valve for prewash	Triac for drain pump
12. Solenoid valve for wash	Relay controlling heating element
13. Solenoid valve for bleach	Safety relay
14. Door opening lamp	Triac for solenoid valve for prewash
15. Selector	Triac for recirculation pump
16. Control/display board	Triac for solenoid valve for wash
17. Flow meter	
18. Analog pressure switch	
19. Turbidity sensor	
20. NTC temperature sensor	
21. Tachometric generator (on motor)	
22. Windings (on motor)	
23. Inverter (for motor speed control)	

2.15 Connectors on circuit board EWM1000plus


J1	J2	J3	J4
Motor J1-1 Motor (triac) J1-2 Motor (rotor) J1-3 Motor (rotor) J1-4 Motor (stator - full range) J1-5 Motor (stator - 1/2 range)	Door lamp J2-1 Door lamp J2-2 Door lamp	J3-1 Door safety interlock (line-sensing) J3-2 Drain pump (line) J3-3 Aqua Control (line) J3-4 Anti-overflow pressure switch (line) J3-5 1st level (sensing) J3-6 Anti-overflow (sensing) J3-7 Drain pump (triac)	Solenoid valves J4-1 Prewash solenoid (line) J4-2 Bleach solenoid (line) J4-3 Prewash solenoid (triac) J4-4 Wash solenoid (triac) J4-5 Bleach solenoid (triac)
J5	J6	J7	J8
J5-1 Drum positioning (DSP) (sensing) J5-2 Drum positioning (DSP) (+5v) J5-3 Tachometric generator motor J5-4 Tachometric generator motor J5-5 NTC temperature sensor washing (sensing) J5-6 NTC temperature sensor washing (+5v)	Heating element: J6-1 Relay J6-2 Line	DAAS Interface: J7-1 ASY_IN J7-2 ASY_OUT J7-3 Vcc (+5v) J7-4 GND	Display board J8-1 Vcc (+5v) J8-2 GND J8-3 SY OUT J8-4 SY IN J8-5 SY CLK
J10	J12	J14	
J10-1 Line ON/OFF J10-2 Door safety interlock (triac) J10-3 Washing solenoid (line)	J12-1 LV2 (sensing) J12-2 Door safety interlock	Flowmeter J14-1 GND J14-2 Vcc (5v) J14-3 Flowmeter_dgt_in J14-4 Flowmeter_anl_in	

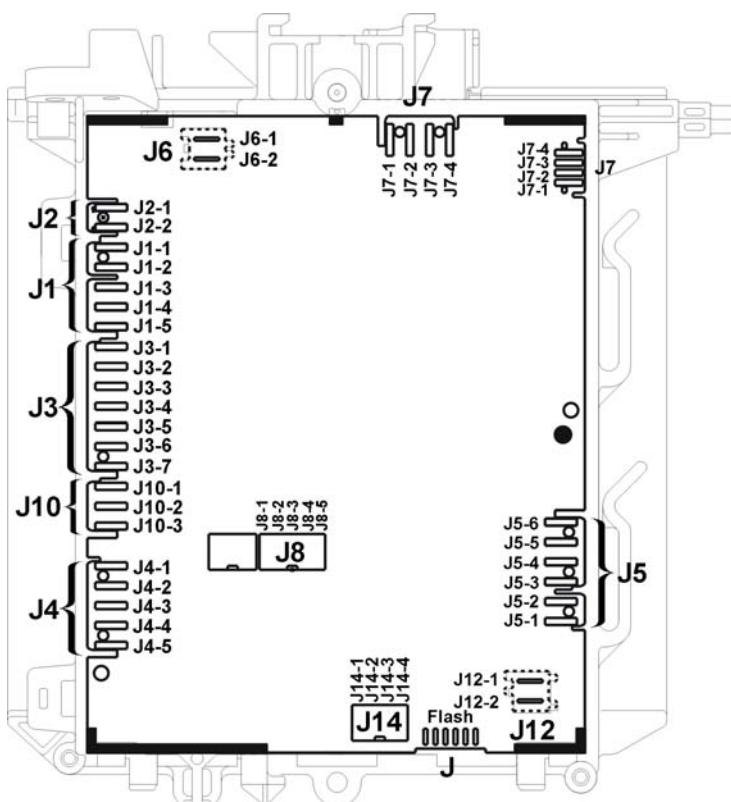

2.16 Burning on the circuit board EWM1000plus

In case of burning on the main circuit board, check that the problem is not caused by another electrical component (short-circuits, poor insulation, water leakage). Refer to the figures below in order to identify the component that might have caused the burning according to the position of the burned area.


The circuit board shown below is the version with the greatest number of components: other boards may not feature all these components.

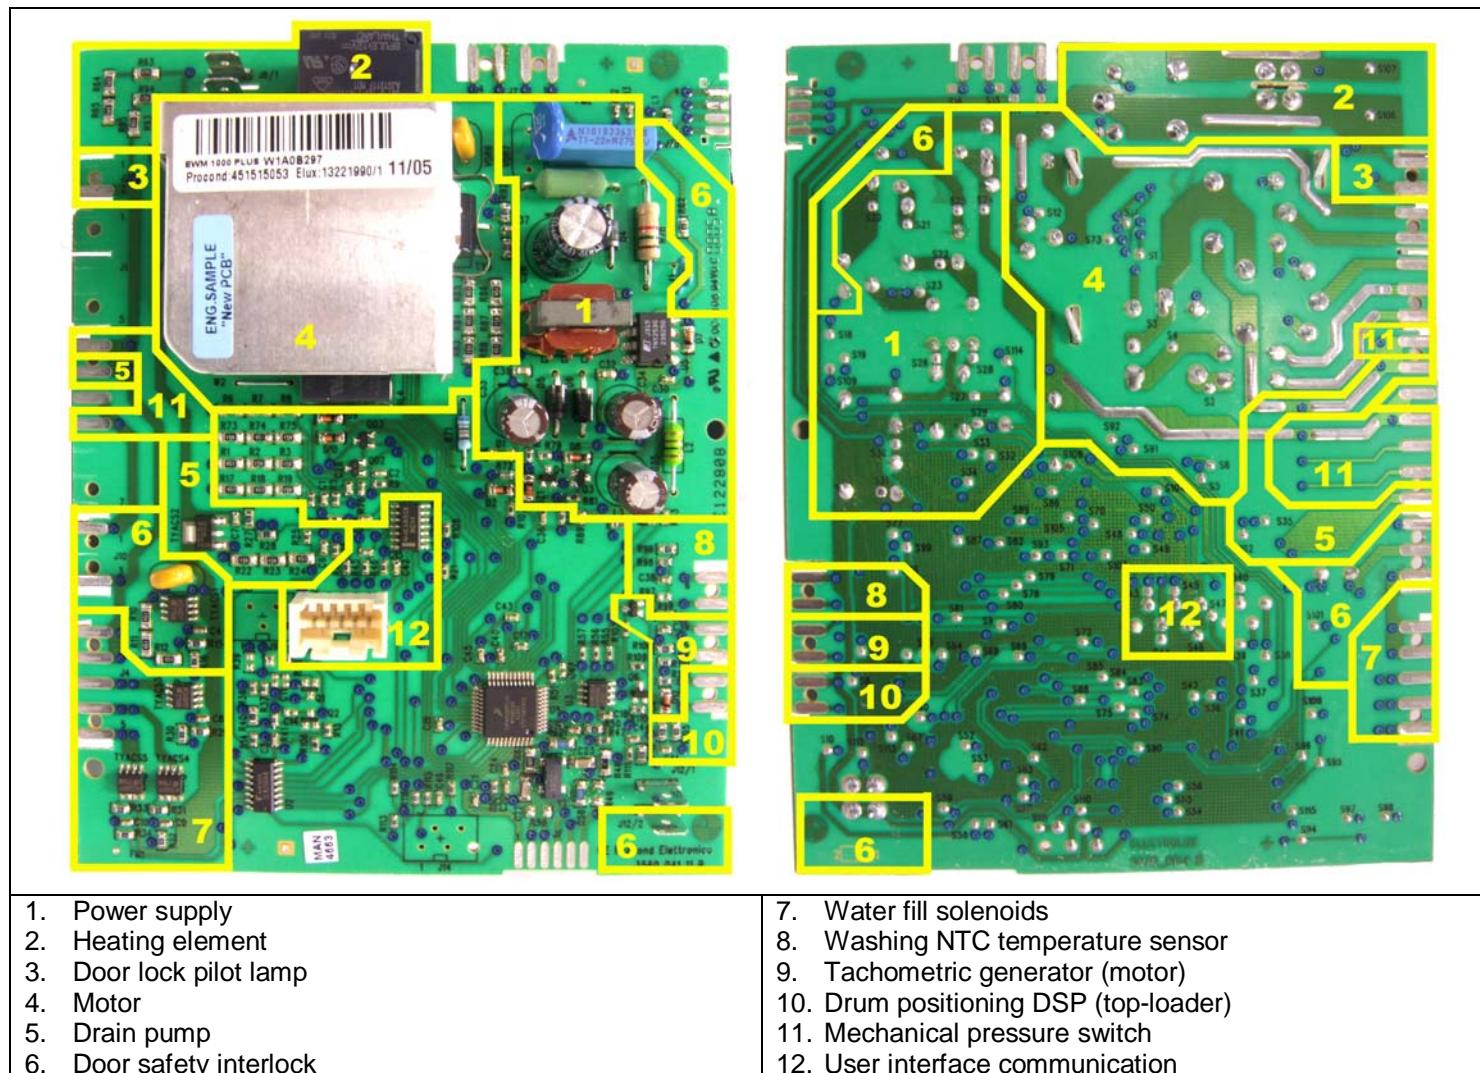

3 ENV 06


3.1 Access to the diagnostic cycle

3.1.1 All version

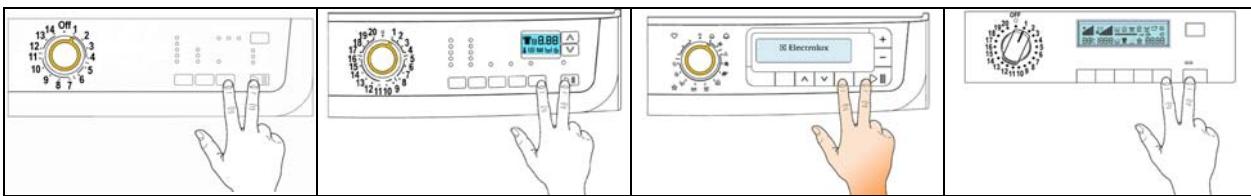

1. Switch off the appliance.
2. Press and hold down the **START/PAUSE** button and the nearest **OPTION button** simultaneously (as represented in figure).
3. Holding down both buttons, switch the appliance on by turning the programme selector **one position clockwise**.
4. Continue to hold down the buttons until the LEDs begin to flash (at least 2 seconds).
5. To exit the diagnostic system, switch **off**, switch **on** and switch **off** again the appliance.

3.1.2 INPUT version

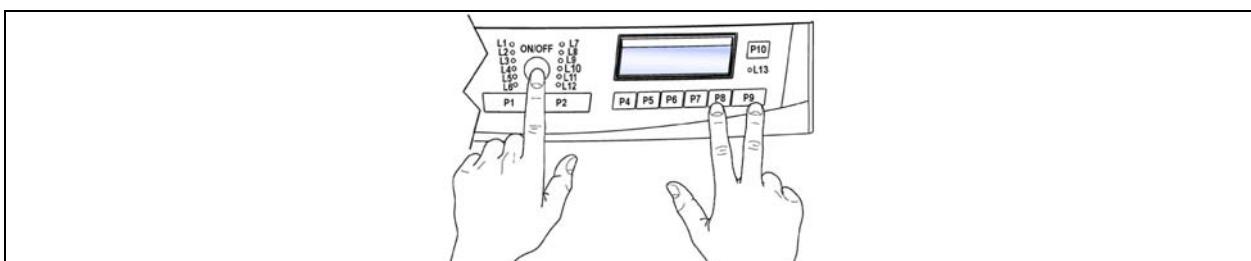

1. Switch off the appliance.
2. Press and hold down **START/PAUSE** button and the nearest **option button** (as represented in figure).
3. Holding down both buttons, switch the appliance on pushing button **ON/OFF**.
4. The test of the display board starts immediately.
5. To exit the diagnostic system, switch **off**, switch **on** and switch **off** again the appliance.

3.1.3 Rapid reading of alarm codes


The last three alarm codes can be displayed even if the programme selector is not in the tenth position (diagnostics) or if the appliance is in normal operating mode (e.g. during the execution of the washing programme):

- Press and hold down **START/PAUSE** and the nearest **option button** (as to enter the **DIAGNOSTICS**), for at least two seconds: the LEDs initially switch off, and then display the flashing sequence indicating the last alarm.
- To display the previous alarms press the left button of the **START/PAUSE** button sequentially.
- To return to the last alarm, press the **START/PAUSE** button.
- The alarm sequence continues as long as the two buttons are held down.
- While the alarms are displayed, the appliance continues to perform the cycle or, if in the programme selection phase, maintains the previously-selected options in memory.

3.2 Cancelling the last alarm


It is good practice to cancel the last alarm:

- after reading the alarm code, to check whether the alarm re-occurs during diagnostics;
- after repairing the appliance, to check whether it re-occurs during testing.

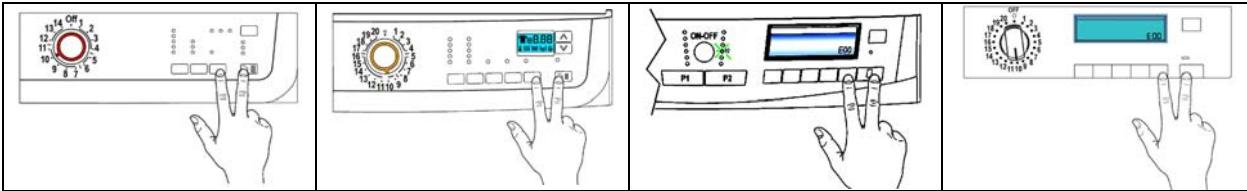

1. Select diagnostics mode.
2. Turn the programme selector (version with knob) to the **tenth** position or push button P2 till to switch on the LED N°10 (alarm reading).
3. Push simultaneously the **START/PAUSE** button and the nearest **option button** (as represented in figure).
4. Hold down the buttons till the LEDs stop to flash the LCD display shows “E00” (at least 5 seconds).


















With this operation all the memorised alarms are deleted

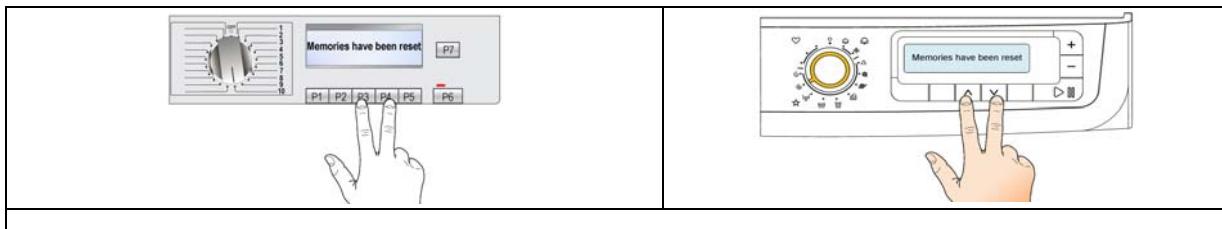


1. Select diagnostic mode, turn the selector to the **tenth** position.
2. Press the buttons simultaneously (as represented in figure).
3. Hold down the buttons till the LCD display shows “Deleted memories” (at least 5 seconds).

3.3 Phases of the diagnostic cycle

Irrespective of the type of PCB and the configuration of the programme selector it is possible, after entering diagnostic mode, turning the programme selector **clockwise or pushing the buttons P1 or P2 (INPUT version)**, to perform diagnostics on the operation of the various components and to read the alarms. All the alarms are enabled during the diagnostic cycle.

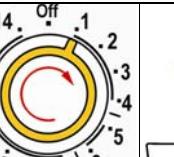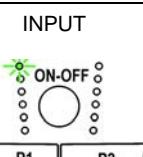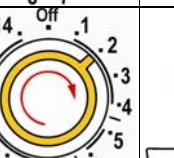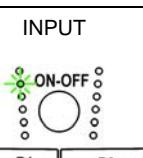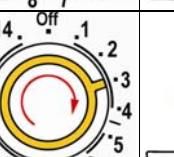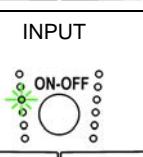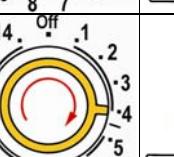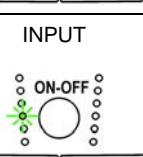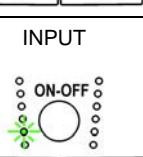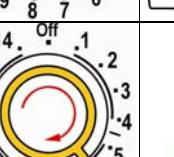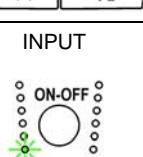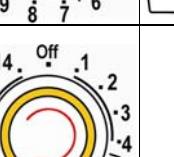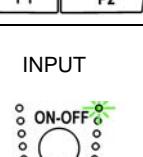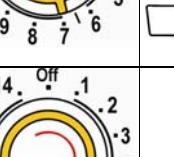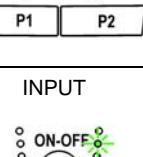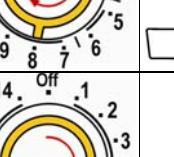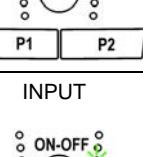Selector position		Components actioned	Operating conditions	Function checked	LCD	
1		<p>INPUT</p> 	<ul style="list-style-type: none"> - All the LEDs and symbols light in sequence. - When a button is pressed, the corresponding LED or symbol light. 	Always activated	Operation of the user interface	All symbols are activated in sequence, the backlight lights up and then switches off.
2		<p>INPUT</p> 	<ul style="list-style-type: none"> - Door interlock - Wash solenoid 	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through washing compartment	Displays the water level in tub
3		<p>INPUT</p> 	<ul style="list-style-type: none"> - Door interlock - Pre-wash solenoid 	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through pre-wash compartment (bleach)	Displays the water level in tub
4		<p>INPUT</p> 	<ul style="list-style-type: none"> - Door interlock - Pre-wash and wash solenoids 	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through conditioner compartment	Displays the water level in tub
5		<p>INPUT</p> 	<ul style="list-style-type: none"> - Door interlock - Bleach/stains solenoids 	Door locked Water level below anti-flooding level Maximum time 5 minutes	Water ducted through conditioner/stains compartments	Displays the water level in tub
6		<p>INPUT</p> 	<ul style="list-style-type: none"> - Door interlock - Wash solenoid if the level of water in the tub does not cover the heater - Heating element - Recirculation pump 	Door locked Water level above the heater Maximum time 10 minutes or up to 90°C (*)	Heating Recirculation	Wash water temperature
7		<p>INPUT</p> 	<ul style="list-style-type: none"> - Door interlock - Wash solenoid if the level of water in the tub does not cover the heater - Motor (55 rpm clockwise, 55 rpm counter-clockwise, 250 rpm impulse) 	Door locked Water level above the heater	Check for leaks from the tub	Displays the drum speed (the real value divided by ten)
8		<p>INPUT</p> 	<ul style="list-style-type: none"> - Door interlock - Drain pump - Motor up to 650 rpm then at maximum spin speed (**) 	Door locked Water level lower than anti-boiling level for spinning	Drain and spin; control of congruence in closure of level pressure switches	Displays the drum speed (the real value divided by ten)
9		<p>INPUT</p> 	<ul style="list-style-type: none"> - Door interlock - Drain pump - Motor fan - Condensation solenoid valve - Drying heating element 	Door locked Water level lower than anti-boiling level	Drying	Displays the air temperature

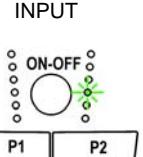10		INPUT 	- Reading/Cancellation of the last alarm	-----	-----	
----	-----------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------	------------------------------------------	-------	-------	--

(*) In most cases, this time is sufficient to check the heating. However, the time can be increased by repeating the phase without draining the water: pass for a moment to a different phase of the diagnostic cycle and then back to the heating control phase (if the temperature is higher than 80°C, heating does not take place).

(**) The check at the maximum speed occurs without control of the FUCS and no clothes have to be inserted inside the appliance.


3.4 Alarm displaying

3.4.1 AEG Version:

The alarm is displayed by a repeated flashing sequence of the LED placed above the button START / PAUSE with yellow and red light (0,5 seconds on, 0,5 seconds off with a 2,5 second pause between the sequences).

- LED indicator START / PAUSE with yellow light → indicates the first digit of the alarm code (family).
- LED indicator START / PAUS with red light → indicates the second digit of the alarm code (internal number of the family).

These two LEDs are featured in all models.

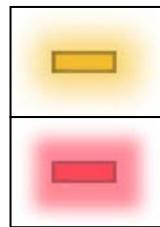


3.4.2 Other versions:

The alarm is displayed by a repeated flashing sequence of the START / PAUSE button with red and green light (0,5 seconds on, 0,5 seconds off with a 2,5 second pause between the sequences).

- LED indicator START / PAUSE with red light → indicates the first digit of the alarm code (family)
- LED indicator START / PAUSE with green light → indicates the second digit of the alarm code (internal number of the family)

These two LEDs are featured in all models.

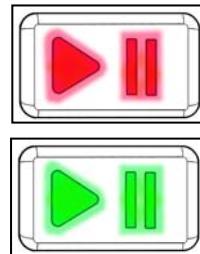

Notes:

- The first letter of the alarm code “E” (Error) is not displayed, since this letter is common to all alarm codes.
- The alarm code “families” are shown in hexadecimal; in other words:
→ **A** is represented by **10** flashes
→ **B** is represented by **11** flashes
→ ...
→ **F** is represented by **15** flashes
- Configuration errors are shown by the flashing of all the LEDs, placed inside or above the button START/PAUSE.

3.4.3 Examples of alarm display

Example: Alarm E43 (problems with the door interlock Triac) will display the following:

- the sequence of four flashes of the START / PAUSE button with red light (version AEG LED yellow light), indicates the first number **E43**;
- the sequence of three flashes of the START / PAUSE button with green light (version AEG LED red light), indicates the second number **E43**;

Button/LED - START / PAUSE red/yellow light				Button/LED - START / PAUSE red/green light			
ON/OFF	On/Off (Ver. AEG)	Time (Sec.)	Value	ON/OFF	On/Off (Ver. AEG)	Time (Sec.)	Value
		0.5	1			0.5	1
		0.5				0.5	
		0.5	2			0.5	2
		0.5				0.5	
		0.5	3			0.5	3
		0.5				0.5	
		0.5	4			2.5	Pause
		0.5					
		1.5	Pause				

3.4.4 Operation of alarms during diagnostics

All alarms are enabled during the components diagnostic phase.

3.5 Table of alarms codes ENV06

Alarm	Possible fault	Action/machine status	Reset	Alarm
E00	No alarm			
E11	Difficulties in water fill for washing	Tap closed or water pressure too low; Drain tube improperly positioned; Water fill solenoid valve is faulty; Leaks from water circuit on pressure switch; Pressure switch faulty; Wiring faulty; PCB faulty.	Cycle is paused with door locked.	START/RESET
E12	Difficulties in water fill for drying	Tap closed or water pressure too low; Drain tube improperly positioned; Water fill solenoid valve is faulty; Leaks from water circuit on pressure switch; Pressure switch faulty; Wiring faulty; PCB faulty.	Cycle is paused with door locked.	START/RESET
E13	Water leakage	Drain hose incorrectly positioned; mains pressure insufficient; water fill solenoid faulty; leakage/blockage of pressure switch hydraulic circuit; pressure switch faulty.	Cycle is paused with door locked.	START/RESET
E21	Difficulties in draining for washing	Drain tube kinked/clogged/improperly positioned; Drain filter clogged/dirty; Drain pump faulty; Pressure switch faulty; Wiring faulty; PCB faulty.	Cycle is paused (after 2 attempts).	START/RESET
E22	Difficulties in draining for drying	Drain tube kinked/clogged/improperly positioned; Drain filter clogged/dirty; Drain pump faulty; Pressure switch faulty; Wiring faulty; PCB faulty.	Cycle is paused.	START/RESET
E23	Drain pump triac faulty	Drain pump faulty; Wiring faulty; PCB faulty.	Safety drain cycle - Cycle stops with door unlocked.	RESET
E24	Fault in "sensing" circuit of drain pump triac (wrong input signal to microprocessor)	PCB faulty.	Safety drain cycle - Cycle stops with door unlocked.	RESET
E31	Electronic pressure switch circuit faulty (frequency of pressure switch signal out of limits)	Electronic pressure switch; Wiring; PCB faulty.	Cycle blocked with door closed.	RESET
E32	Incorrect calibration of electronic pressure switch (The electronic pressure switch generates a signal with unstable frequency during the drain phase)	Drain tube kinked/clogged/improperly positioned; Drain filter clogged/dirty; Drain pump faulty; Leaks from water circuit on pressure switch; Pressure switch; Wiring faulty; PCB faulty.	Cycle is paused.	START/RESET
E35	Water overflow	Water fill solenoid faulty; Leaks from water circuit on pressure switch; pressure switch faulty; wiring faulty; PCB faulty.	Cycle blocked. Safety drain cycle. Drain pump always in operation (5 minutes on, 5 minutes off etc.).	RESET
E38	Pressure chamber blocked (water level does not vary for at least 30 sec. during drum rotation)	Motor drive belt broken; Hydraulic circuit pressure switch clogged.	Heating phase skipped.	ON/OFF RESET
E3A	Heating elem. relay sensing faulty (input signal to microprocessor always 0V or 5V)	PCB faulty.	Cycle blocked with door closed.	RESET
E41	Door open (after 15 sec.)	Door interlock faulty; wiring faulty; PCB faulty.	Cycle paused.	START/RESET
E42	Problems of door closure	Door interlock faulty; wiring faulty; PCB faulty.	Cycle paused.	START/RESET
E43	Interlock power supply triac faulty	Door interlock faulty; wiring faulty; PCB faulty.	(Safety drain cycle) Cycle blocked.	ON/OFF RESET

ENV06 EWM11xx EWM21xx EWM25xx/35xx

Alarm	Possible fault	Action/machine status	Reset	Alarm
E44	Door interlock sensing circuit triac faulty	PCB faulty.	(Safety drain cycle) Cycle blocked.	ON/OFF RESET
E45	Door interlock sensing circuit triac faulty (wrong input signal to microprocessor)	PCB faulty.	(Safety drain cycle) Cycle blocked.	ON/OFF RESET
E52	No signal from motor tachometric generator	Motor faulty; wiring faulty; PCB faulty.	Cycle blocked, door locked (after 5 attempts).	RESET
E57	Inverter is drawing too much current (>15A)	Motor-Inverter wiring faulty; Inverter board faulty, Motor faulty.	Cycle blocked, door locked (after 5 attempts).	RESET
E58	Inverter is drawing too much current (>4,5A)	Motor abnormal operation (overloaded); Motor-Inverter wiring faulty; Motor faulty; Inverter board faulty.	Cycle blocked, door locked (after 5 attempts).	RESET
E59	No signal from tachometric generator for three seconds	Motor-Inverter wiring faulty; Inverter board faulty, Motor faulty.	Cycle blocked, door locked (after 5 attempts).	RESET
E5A	Overheating for heat dissipator for Inverter	Overheating caused by continuous operation or ambient conditions (let appliance cool down); Inverter board faulty. NTC open (on the Inverter board).	Cycle blocked, door locked (after 5 attempts).	RESET
E5H	Input voltage is lower than 175V	Wiring faulty; Inverter board faulty.	Cycle blocked, door locked (after 5 attempts).	RESET
E5C	Input voltage is too high	Input voltage is too high (measure the masters voltage); Inverter board faulty.	Cycle blocked, door locked (after 5 attempts).	RESET
E5d	Data transfer error between Inverter and main board	Line interference; Wiring faulty; Main board or Inverter faulty.	-----	RESET
E5E	Wrong communication between main board and Inverter	Main board-Inverter wiring faulty; Inverter board faulty; Main board faulty.	Cycle blocked (after 5 attempts).	ON/OFF
E5F	Inverter board does not start the motor	Wiring faulty; Inverter board faulty; Main board faulty.	Cycle blocked, door locked (after 5 attempts).	RESET
E61	Insufficient heating during washing	NTC sensor faulty; heating element faulty; wiring faulty; PCB faulty.	The heating phase is skipped.	START/RESET
E62	Overheating during washing (temperature higher than 88°C for a time higher than 5 min.)	NTC sensor faulty; heating element faulty; wiring faulty; PCB faulty.	Safety drain cycle – Cycle stopped with door open.	RESET
E66	Heating element power relay faulty (incongruence between sensing and relay)	PCB faulty.	Safety drain cycle – Cycle stopped with door open.	RESET
E68	Current dispersion to earth (value of mains voltage different from main value)	Current dispersion between between heating element and earth.	Cycle blocked with door open.	RESET
E69	Heating element interrupted	Wiring faulty; Heating element for washing interrupted (thermofuse open).	-----	START/RESET
E71	Washing NTC sensor faulty (short-circuited or open)	Wiring faulty; Washing NTC sensor faulty; PCB faulty.	The heating phase is skipped.	START/RESET
E72	Drying condenser NTC sensor faulty (voltage value out of limits, sensor short-circuited or open)	Wiring faulty; Drying NTC sensor (condenser) badly positioned or faulty; WD board faulty.	The drying heating phase is skipped.	START/RESET
E73	Drying duct NTC sensor faulty (voltage value out of limits, sensor short-circuited or open)	Wiring faulty; Drying NTC sensor (duct) badly positioned or faulty; WD board faulty.	The drying heating phase is skipped.	START/RESET
E74	Washing NTC sensor badly positioned	Wiring faulty; Washing NTC sensor badly positioned; NTC sensor faulty; PCB faulty.	The heating phase is skipped.	START/RESET

ENV06 EWM11xx EWM21xx EWM25xx/35xx

Alarm	Possible fault	Action/machine status	Reset	Alarm
E82	Error in selector reset position	PCB faulty (Wrong configuration data).	-----	RESET
E83	Error in selector reading	PCB faulty (Wrong configuration data).	Cycle cancelled.	START/RESET
E91	Communication error between PCB and display board	Wiring faulty; Control/display board faulty: PCB faulty.	-----	RESET
E92	Communication incongruence between main PCB- display board (versions not compatible)	Wrong control/display board; Wrong PCB (do not correspond to the model).	Cycle interrupted.	OFF/ON
E93	Incorrect configuration of appliance	PCB faulty; (Incorrect configuration data).	Cycle interrupted.	OFF/ON
E94	Incorrect configuration of washing cycle	PCB faulty; (Incorrect configuration data).	Cycle interrupted.	OFF/ON
E95	Communication error between microprocessor and EEPROM	PCB faulty.	Cycle interrupted.	RESET
E97	Incongruence between programme selector and cycle configuration	Faulty PCB (Wrong configuration data).	Cycle interrupted.	RESET
E98	Communication error between main board - Inverter	Incompatibility between main board and Inverter.	Cycle interrupted.	OFF/ON
E9H	Communication error between microprocessor and FLASH memory	Display board.	-----	OFF/ON RESET
E9C	Machine configuration error	Display board.	-----	OFF/ON RESET
E9d	Clock faulty	Display board.	-----	OFF/ON RESET
E9F	Communication error between PCB and remote devices	Wiring between PCB and Inverter faulty; PCB faulty; Inverter faulty.	Cycle interrupted.	OFF/ON
EA1	Drum positioning (DSP) faulty	Motor belt broken; Wiring faulty; PCB faulty; DSP sensor faulty.	Positioning phase skipped.	ON/OFF RESET
EA6	DSP door opening faulty	Motor belt broken; Wiring faulty; Drum cover open. Motor faulty; PCB faulty.	Cycle paused.	ON/OFF RESET
EC1	Solenoid valve blocked with flowmeter working	Wiring faulty; Solenoid valve faulty/blocked, PCB faulty.	Cycle blocked with door closed. Drain pump always works (5 min., then it stops for 5 min. ecc.).	RESET
EC3	Problems with Weight sensor (no signal or out of limits)	Wiring faulty; Weight sensor faulty; PCB faulty.	-----	START/RESET
Ed1	Data communication error between WD board and PCB	Wiring faulty between PCB and WD board; WD board faulty; PCB faulty.	Cycle interrupted.	OFF/ON
Ed2	Drying heating element relay 1 faulty	Wiring faulty between WD board and thermostats; thermostats faulty; WD board faulty, PCB faulty.	Cycle blocked with door open.	RESET
Ed3	Drying heating element relay 2 faulty	Wiring faulty between WD board and thermostats; thermostats faulty; WD board faulty, PCB faulty.	Cycle blocked with door open.	RESET
Ed4	Relay which commutes power between washing heating element and drying (in the WD board)	Wiring faulty; WD board faulty; PCB faulty.	Cycle blocked with door open.	RESET
Ed6	No communication between PCB and display board (INPUT)	Wiring faulty between PCB and programme display board; PCB faulty.	-----	OFF/ON


ENV06 EWM11xx EWM21xx EWM25xx/35xx

Alarm	Possible fault	Action/machine status	Reset	Alarm
EF1 Drain filter blocked (drain phase too long)	Drain tube blocked/kinked/too high; Drain filter dirty/blocked.		Warning displayed at the end of cycle (specific LED).	START/RESET
EF2 Excessive detergent dosing (excessive foam during draining)	Excessive detergent dosing; drain tube kinked/blocked; Drain filter dirty/blocked.		Warning displayed after 5 attempts or by the specific LED.	RESET
EF3 Aqua control intervention	Water leaks onto base frame; water control system defective.		Water drain.	ON/OFF RESET
EF4 Water fill pressure low, no signal of flowmeter and solenoid valve open	Tap closed; water fill pressure low.		-----	RESET
EF5 Unbalanced load	Final spin phases skipped.		-----	RESET
EF6 Reset	-----		No action to be performed, if continues replace the PCB.	-----
EH1 Frequency power of appliance out of limits	Power supply problems (incorrect / disturbance); PCB faulty.		Wait for frequency nominal conditions.	OFF/ON
EH2 Voltage too high	Power supply problems (incorrect / disturbance); PCB faulty.		Wait for frequency nominal conditions.	OFF/ON
EH3 Voltage too low	Power supply problems (incorrect / disturbance); PCB faulty.		Wait for frequency nominal conditions.	OFF/ON
EHE Incongruence between safety relay (in the PCB) and the safety “sensing” circuit	Wiring faulty; PCB faulty.		Safety drain cycle – Cycle stopped with door open.	RESET
EHF Safety “sensing” circuit faulty (input voltage to microprocessor wrong)	PCB faulty.		Safety drain cycle – Cycle stopped with door open.	RESET

3.5.1 Notes concerning certain alarm codes

- **Configuration alarms E93:** If this alarm is generated (when the appliance is switched on), operation of the appliance is blocked, the LEDs placed above or inside the START/PAUSE button start to flash displaying the complete codification (family plus alarm), the display shows the alarm code on condition that the configuration part of the display is ok.
The diagnostic procedure cannot be accessed; the only option is to switch the appliance OFF.
- **Configuration alarm E94:** all LEDs placed above or inside the START/PAUSE button start to flash displaying the complete codification (family plus alarm) and the code is displayed.
It is not possible to enter the diagnostics or to use the mode “rapid displaying of the alarm”.
- **Alarms EH1(Eb1)-EH2(Eb2)-EH3(Eb3):** In the event of problems with the mains power supply, the appliance remains in alarm mode until the mains frequency or voltage are restored to the correct value or the appliance is switched off (programme selector on “0”). The family of alarm “**b** or **H**” only is displayed if the problem occurs during the normal operation of the appliance, while the family plus the alarm are displayed if the problem occurs at the switching on, through the flashing of the LEDs placed above or inside the START/PAUSE button. At the same time the code is represented also in the display.
It is not possible to enter the diagnostics or to use the mode “rapid displaying of the alarm”: the complete alarm can be read only when the abnormal situation has terminated.
- **Alarms E51- E52:** During the diagnostic test, all the alarms are displayed. Normally, when the programme selector is turned from one test phase to another, the appliance exits the alarm condition and performs the phase selected. This does not take place in the case of alarms E51 (power triac on motor short-circuited) and E52 (no signal from the tachometric generator on the motor): in these cases, the only option to exit the alarm condition is to switch the appliance OFF by turning the selector to position “0” (reset) or pushing the ON/OFF button (INPUT styling).

3.6 Basic circuit diagram EWM1100

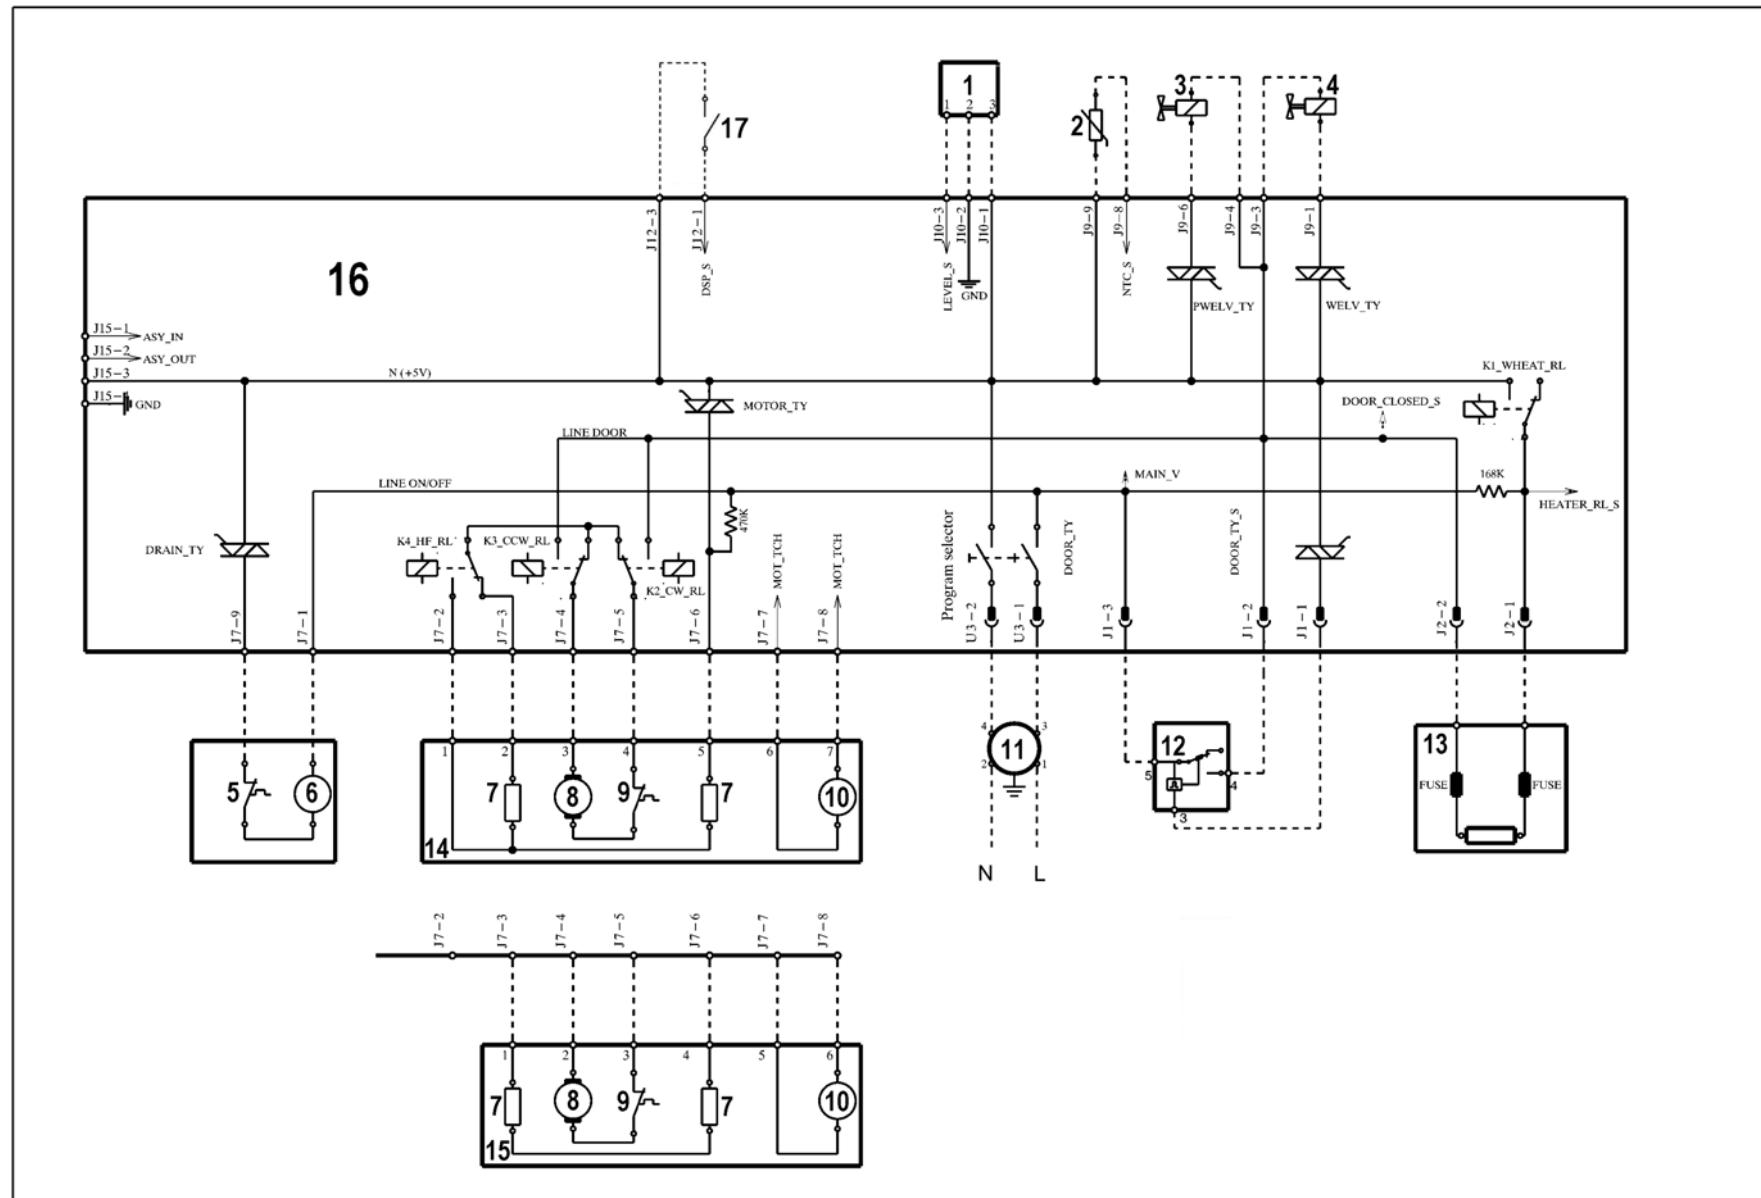


ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.6.1 Key to circuit diagram EWM1100

Electrical components on appliance	Components on main board	
1. Analogue pressure switch	DOOR_TY	Door interlock Triac
2. NTC temperature sensor	DRAIN_TY	Drain pump Triac
3. Solenoid valve for prewash	K1	Heating element relay
4. Solenoid valve for wash	K2	Motor relay: clockwise rotation
5. Thermal cut-out (drain pump)	K3	Motor relay: anti-clockwise rotation
6. Drain pump	K4	Motor relay: half field power supply (some models)
7. Stator (motor)	MOTOR_TY	Motor Triac
8. Rotor (motor)	ON/OFF	Main switch (programme selector)
9. Thermal cut-out (motor)	PWELW_TY	Pre-wash solenoid Triac
10. Tachometric generator (motor)	WELV_TY	Wash solenoid Triac
11. Interference filter		
12. Door lock unit		
13. Heating element (with thermal fuses)		
14. Motor with half field		
15. Motor without half field		
16. Circuit board		
17. Drum sensor position (DSP)		


3.7 Connectors on circuit board EWM1100

J15/J15B	J12	J10	J9	J7	J2	J1
Serial interface: J15-1 ASY_IN J15-2 ASY_OUT J15-3 +5V J15-4 GND U3 U3-1 line U3-2 line (neutral)	J12-1 Drum position sensor (sensing) J12-2 not used J12-3 Drum position sensor DSP (+5V)	J10-1 Analogic pressure switch (+5V) J10-2 Analogic pressure switch (GND) J10-3 Analogic pressure switch (signal)	J9-1 Washing solenoid (triac) J9-3 Solenoids (line) J9-4 Solenoids (line) J9-6 Pre-wash solenoid (triac) J9-8 NTC temperature sensor J9-9 NTC temperature sensor	J7-1 Drain pump (line) J7-2 Motor (stator - ½ field) J7-3 Motor (stator full field) J7-4 Motor (rotor) J7-5 Motor (rotor) J7-6 Motor (triac) J7-7 Motor (tachometric generator) J7-8 Motor (tachometric generator) J7-9 Drain pump (triac)	J2-1 Heating element (Relay) J2-2 Heating element (Line)	J1-1 Door safety interlock (triac) J1-2 Door safety interlock (line-sensing) J1-3 Door safety interlock (Line)

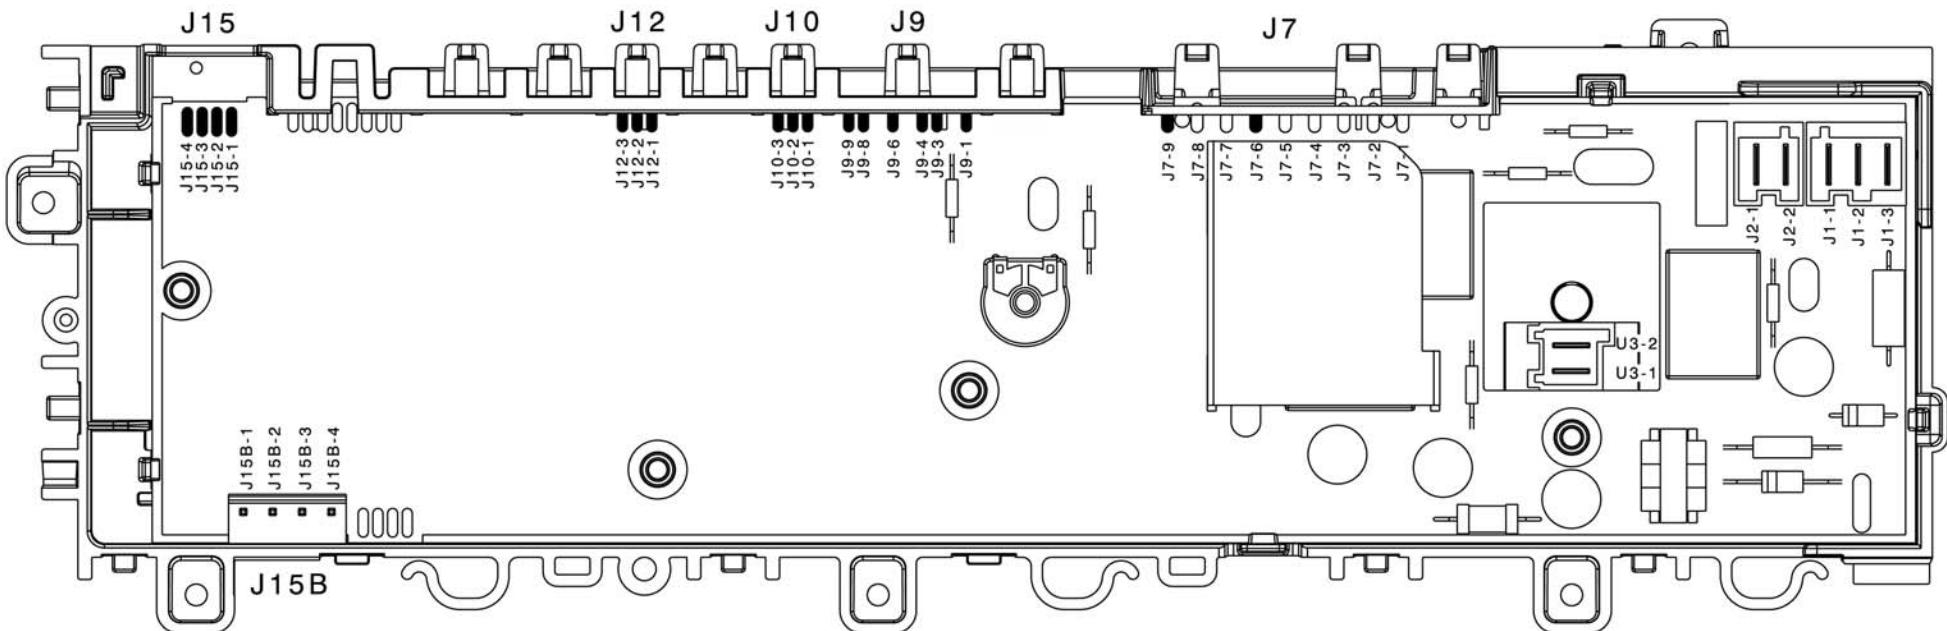


3.8 Burning on the circuit board EWM1100

In case of burning on the main circuit board, check that the problem is not caused by another electrical component (short-circuits, poor insulation, water leakage). Refer to the figures below in order to identify the component that might have caused the burning according to the position of the burned area.
The circuit board shown below is the version with the greatest number of components: other boards may not feature all these components.

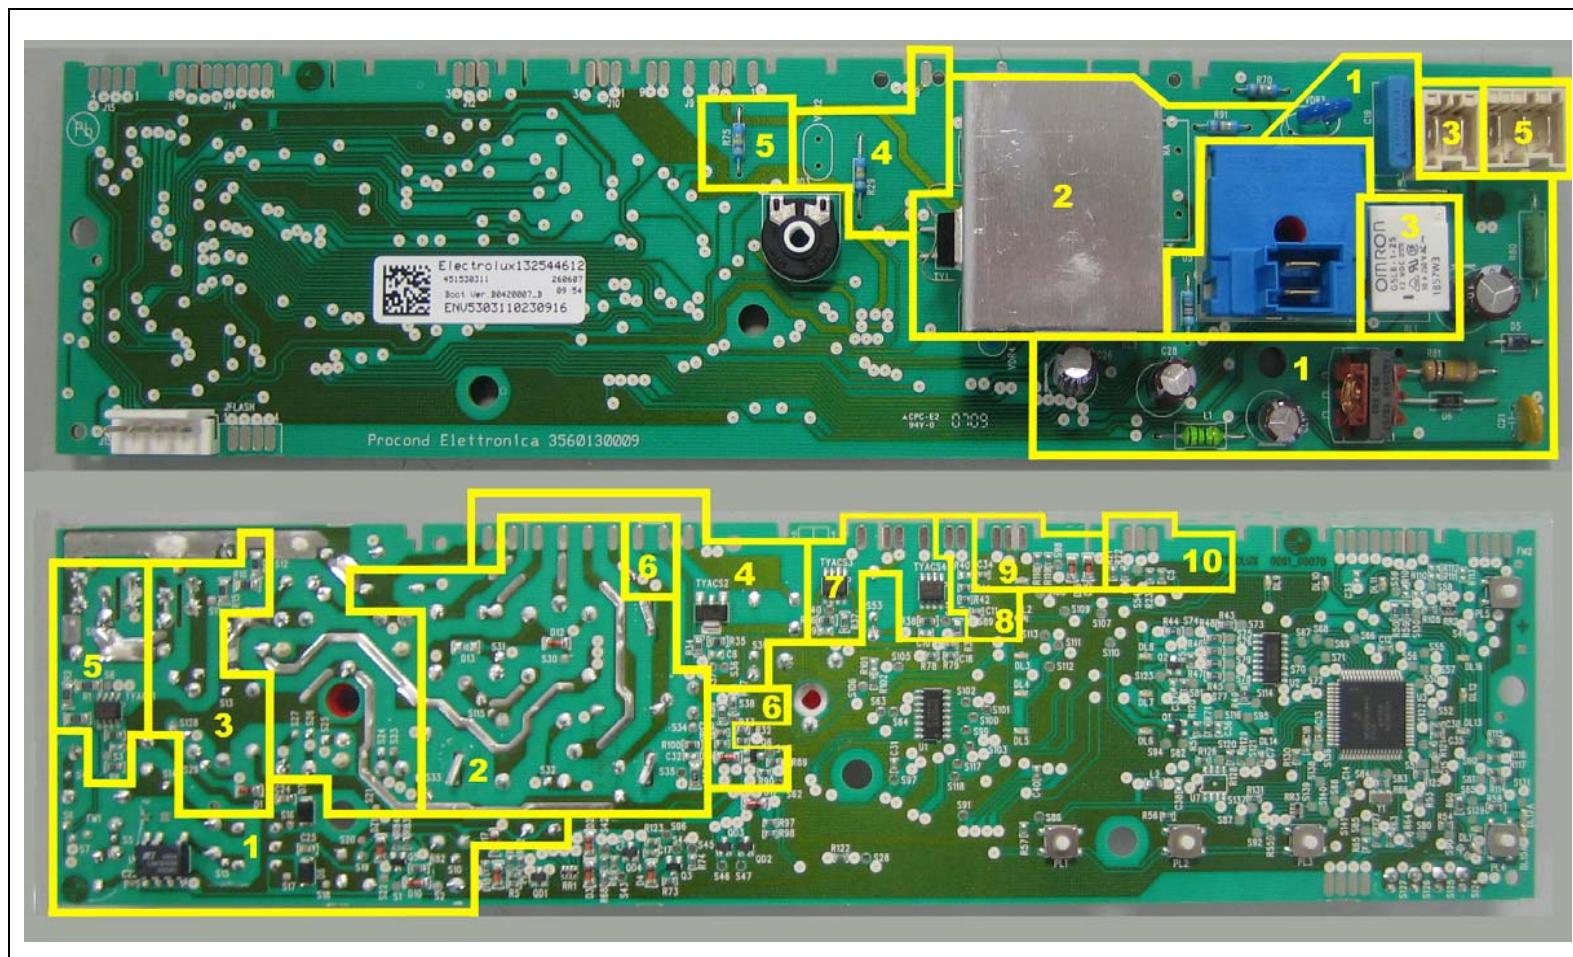

- | | |
|--------------------------|-----------------------------------|
| 1. Power supply | 6. Tachometric generator (motor) |
| 2. Motor | 7. Water fill solenoids |
| 3. Heating element | 8. NTC temperature sensor washing |
| 4. Drain pump | 9. Analogic sensor |
| 5. Door safety interlock | 10. Drum positioning (top-loader) |

3.9 Basic circuit diagram WM EWM2100

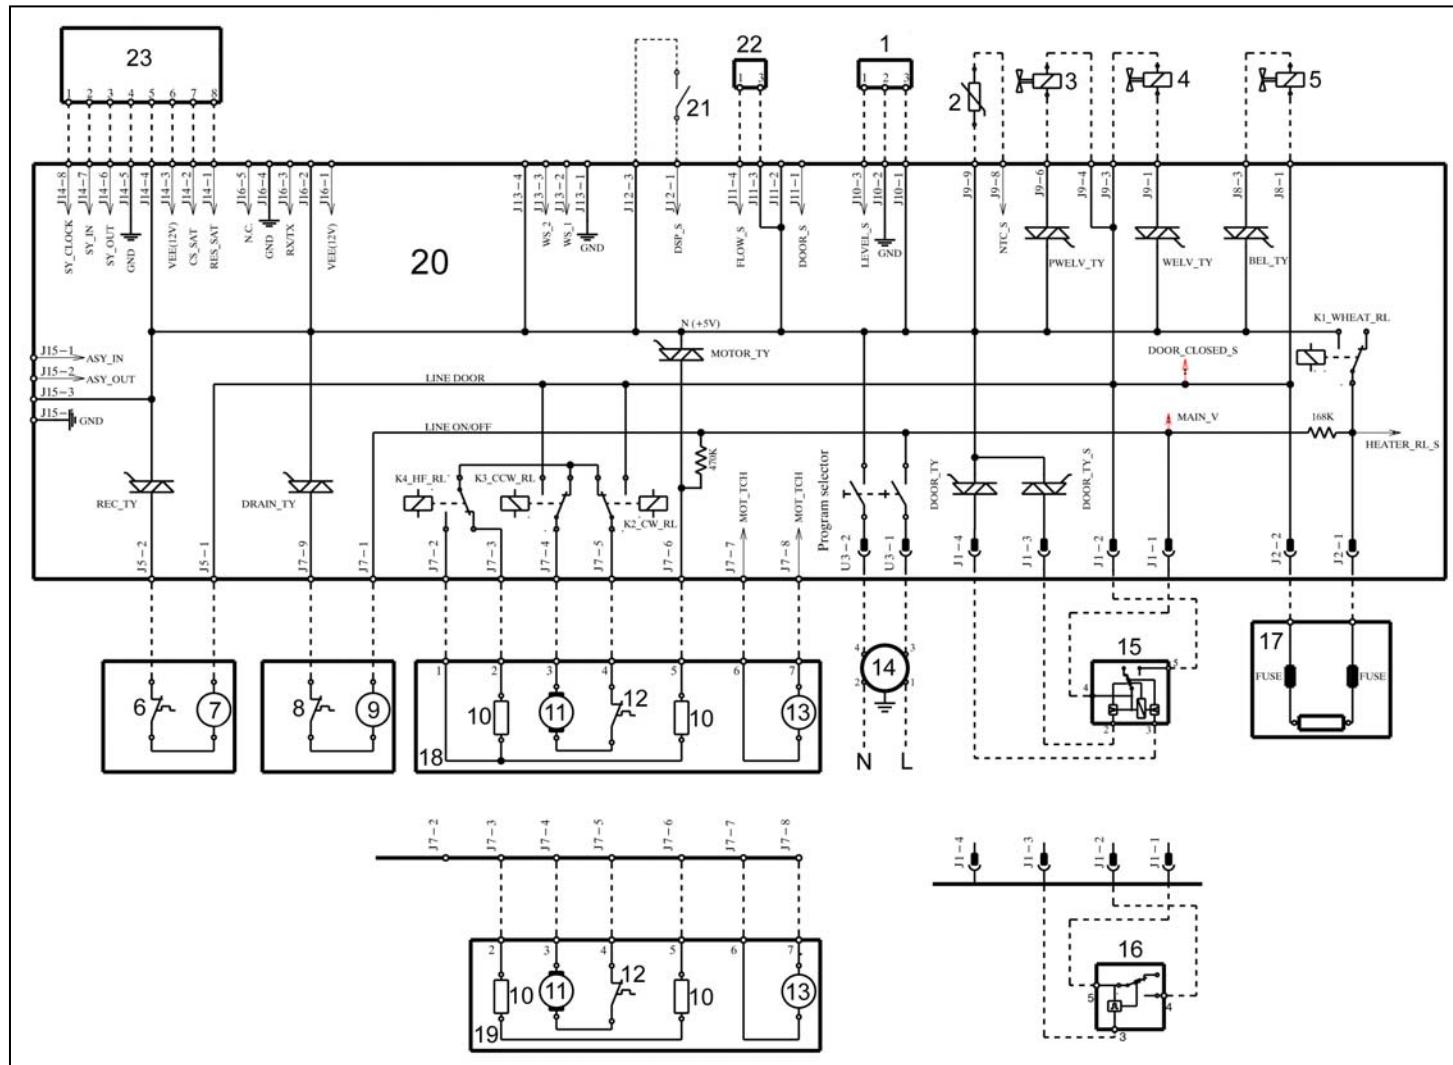


ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.9.1 Key to circuit diagram WM EWM2100

Electrical components on appliance	Components on main board
1. Analogue pressure switch	DOOR_TY
2. NTC temperature sensor	DRAIN_TY
3. Solenoid valve for prewash	REC_TY
4. Solenoid valve for wash	K1
5. Solenoid valve for bleach	K2
6. Thermal cut-out (circulation pump)	K3
7. Pump circulation	K4
8. Thermal cut-out (drain pump)	MOTOR_TY
9. Drain pump	ON/OFF
10. Stator (motor)	PWELW_TY
11. Rotor (motor)	WELV_TY
12. Thermal cut-out (motor)	BEL_TY
13. Tachometric generator (motor)	
14. Interference filter	
15. Instantaneous door interlock	
16. Traditional door interlock	
17. Heating element (with thermal fuses)	
18. Motor with half field	
19. Motor without half field	
20. Circuit board	
21. Drum sensor position (DSP)	
22. Flowmeter	
23. LCD module	

ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.10 Basic circuit diagram WM with aqua control EWM2100

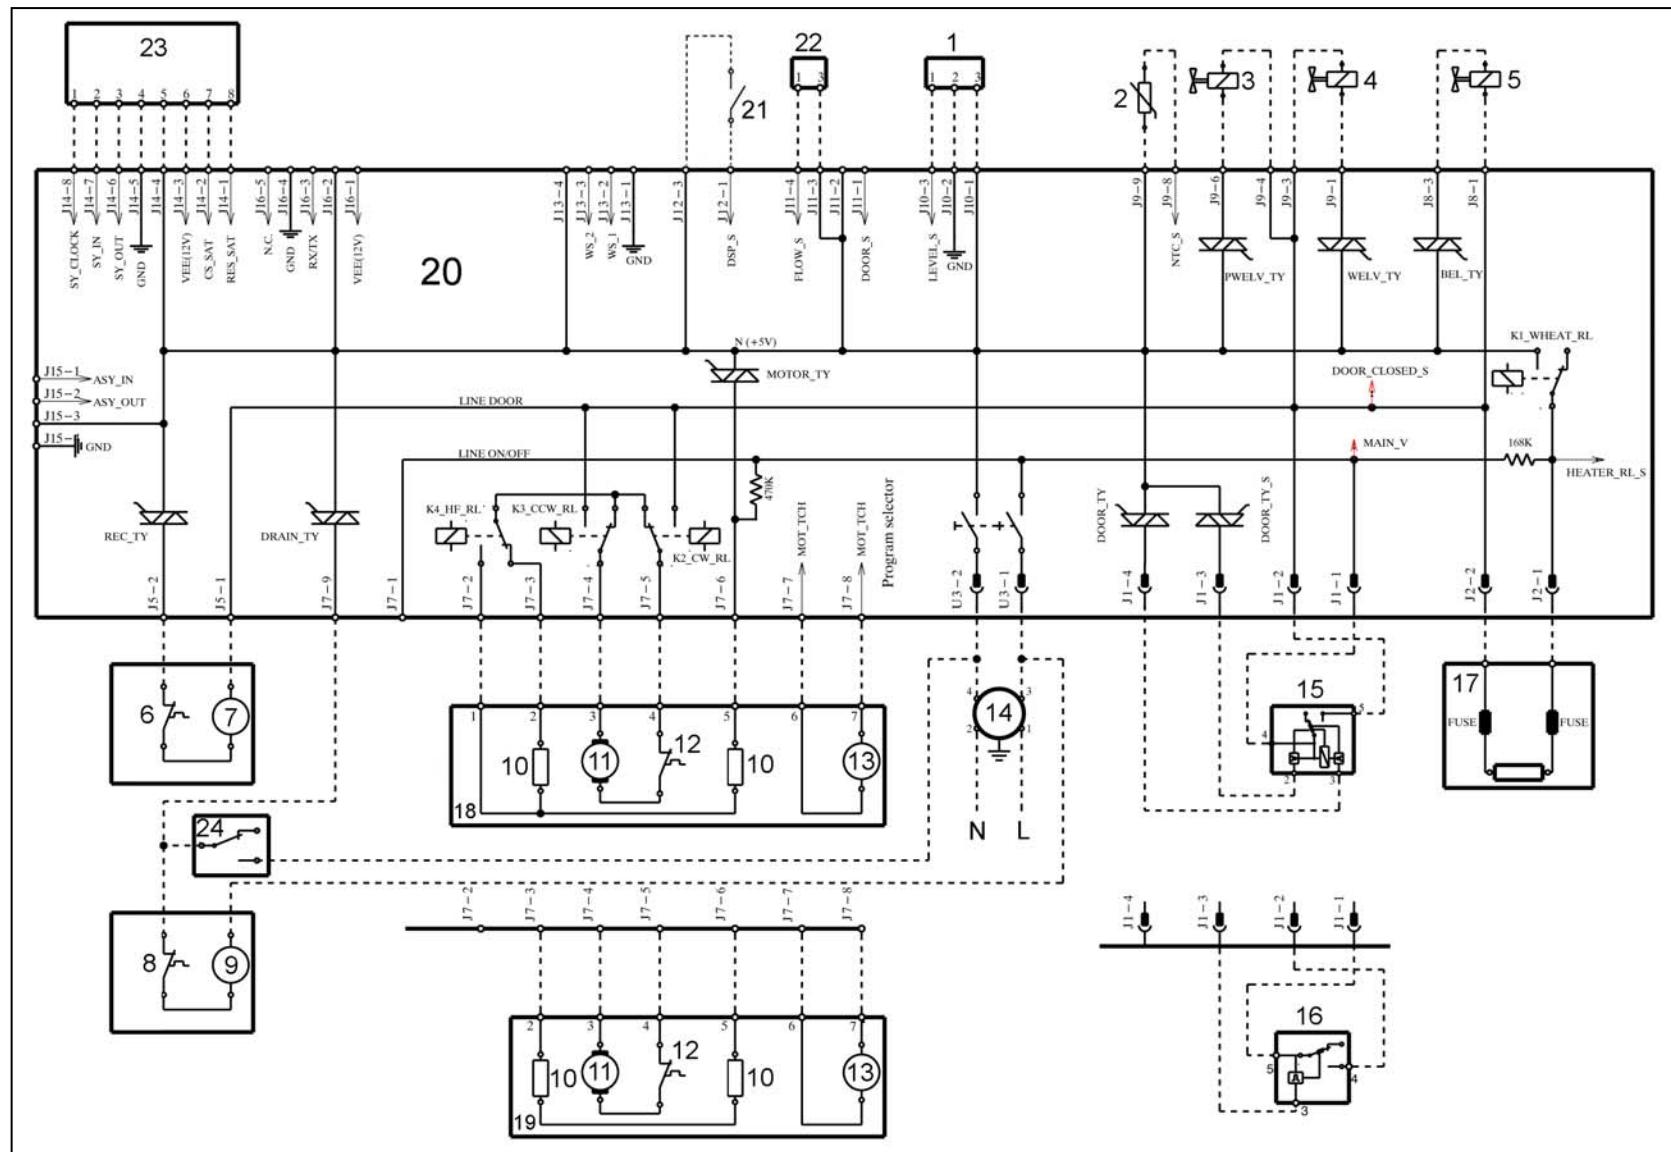


ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.10.1 Key to circuit diagram WM with Aqua Control EWM2100

Electrical components on appliance	Components on main board
1. Analogue pressure switch	DOOR_TY
2. NTC temperature sensor	DRAIN_TY
3. Solenoid valve for prewash	REC_TY
4. Solenoid valve for wash	K1
5. Solenoid valve for bleach	K2
6. Thermal cut-out (circulation pump)	K3
7. Pump circulation	K4
8. Thermal cut-out (drain pump)	MOTOR_TY
9. Drain pump	ON/OFF
10. Stator (motor)	PWELW_TY
11. Rotor (motor)	WELV_TY
12. Thermal cut-out (motor)	BEL_TY
13. Tachometric generator (motor)	
14. Interference filter	
15. Instantaneous door interlock	
16. Traditional door interlock	
17. Heating element (with thermal fuses)	
18. Motor with half field	
19. Motor without half field	
20. Circuit board	
21. Drum sensor position (DSP)	
22. Flowmeter	
23. LCD module	
24. Aqua Control (water leaks device)	

3.11 Basic circuit diagram WD EWM2100

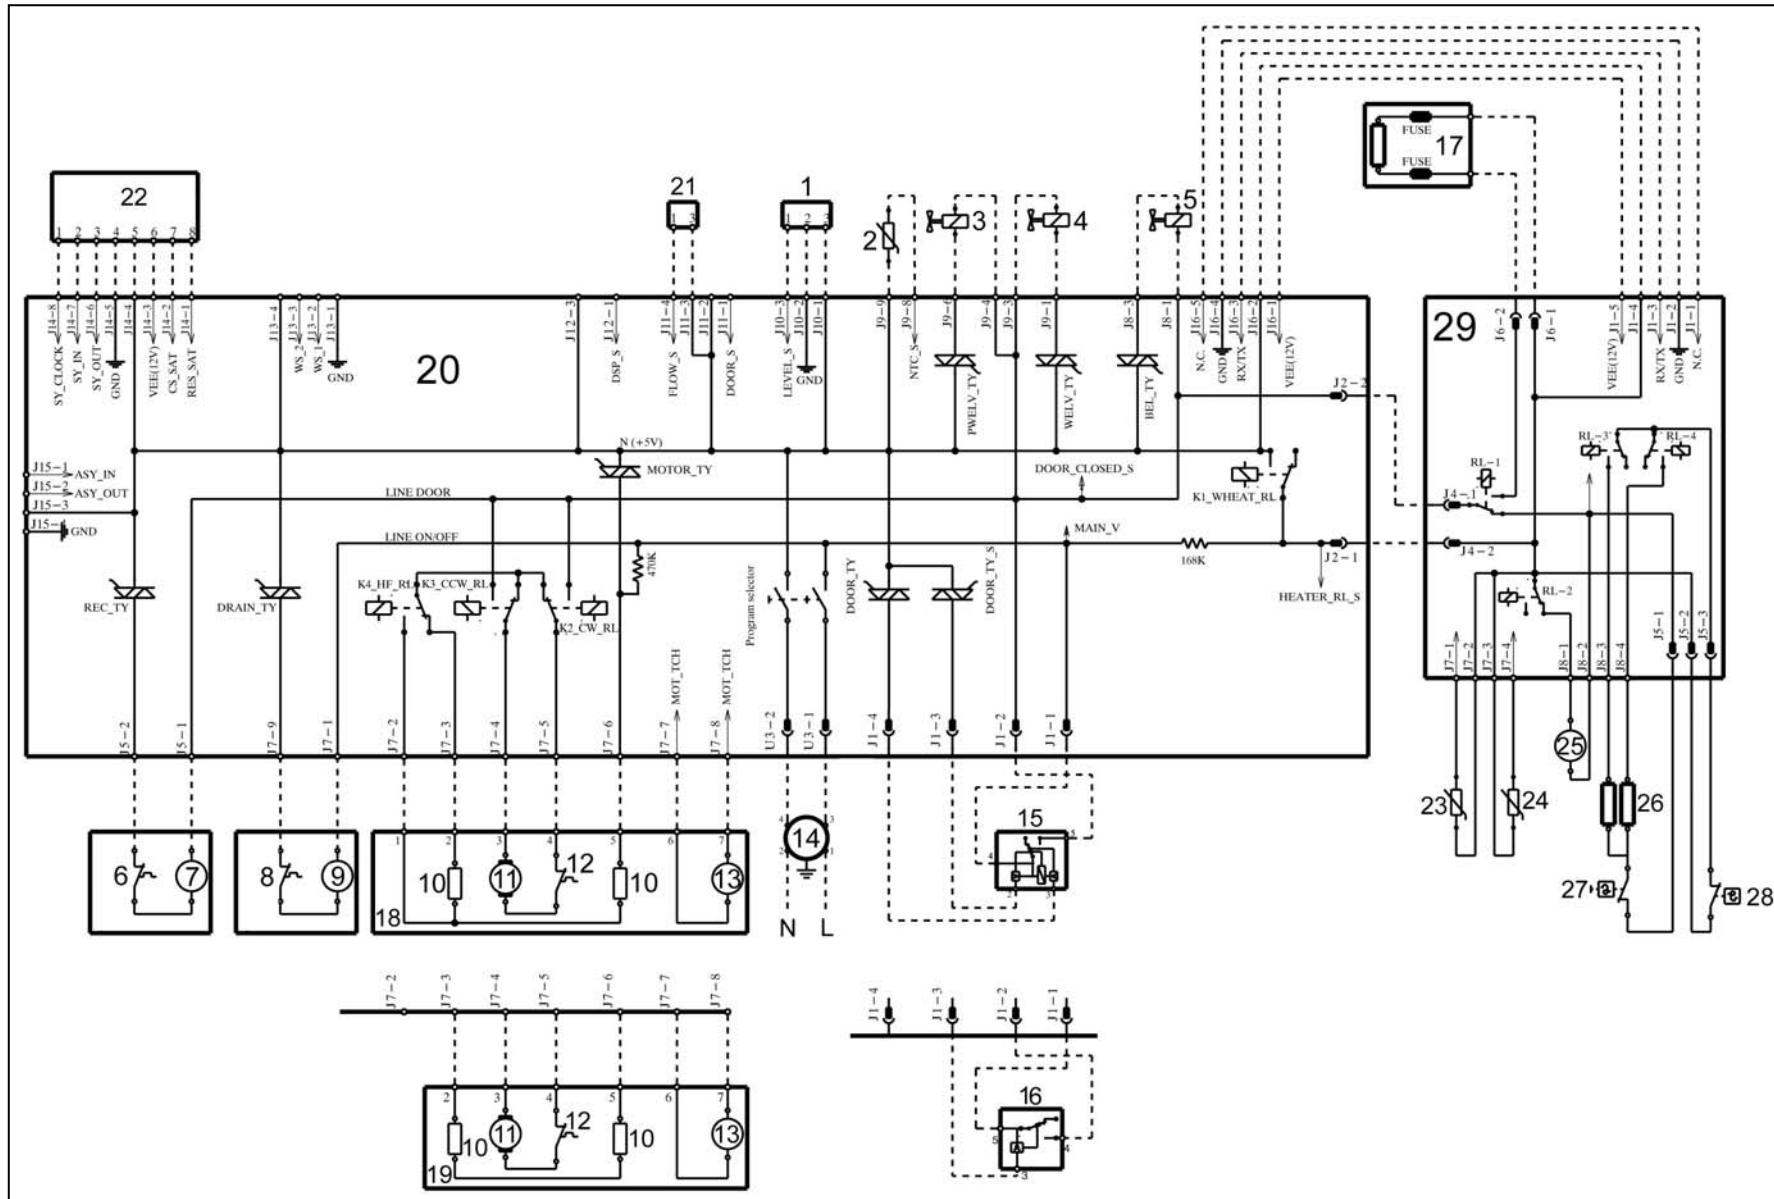


ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.11.1 Key to circuit diagram WD EWM2100

Electrical components on appliance	Components on main board
1. Analogue pressure switch	DOOR_TY
2. NTC temperature sensor	DRAIN_TY
3. Solenoid valve for prewash	REC_TY
4. Solenoid valve for wash	K1
5. Condensation solenoid valve	K2
6. Thermal cut-out (circulation pump)	K3
7. Pump circulation	K4
8. Thermal cut-out (drain pump)	MOTOR_TY
9. Drain pump	ON/OFF
10. Stator (motor)	PWELW_TY
11. Rotor (motor)	WELV_TY
12. Thermal cut-out (motor)	BEL_TY
13. Tachometric generator (motor)	
14. Interference filter	
15. Instantaneous door interlock	
16. Traditional door interlock	
17. Heating element (with thermal fuses)	
18. Motor with half field	
19. Motor without half field	
20. Circuit board	
21. Flowmeter	
22. LCD Module	
23. Humidity temperature sensor	
24. Drying temperature sensor	
25. Motor fan	
26. Drying heating elements	
27. Manually reset thermostat	
28. Automatically reset thermostat	
29. WD board	

ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.12 Basic circuit diagram WD with aqua control EWM2100

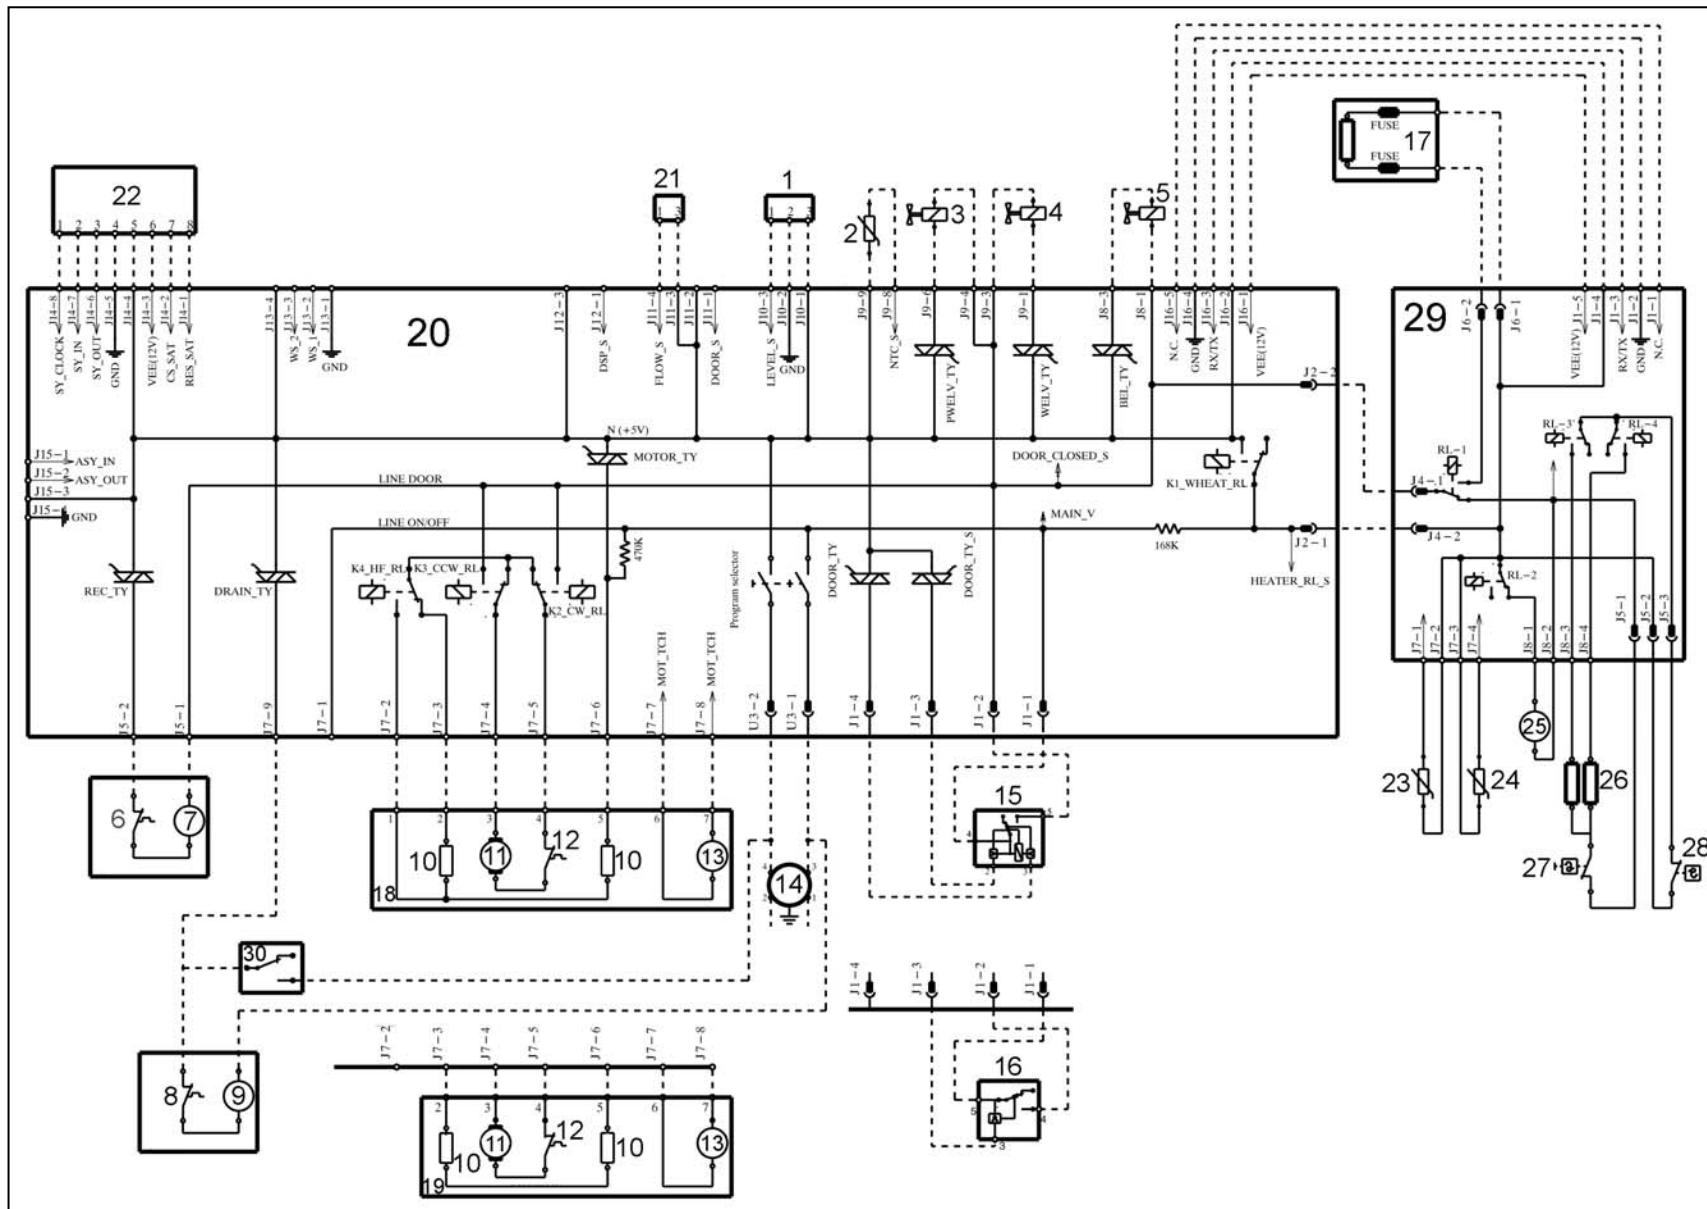

ENV06 EWM11xx EWM21xx EWM25xx/35xx


3.12.1 Key to circuit diagram WD with aqua control EWM2100

Electrical components on appliance	Components on main board
1. Analogue pressure switch	DOOR_TY
2. NTC temperature sensor	DRAIN_TY
1. Solenoid valve for prewash	REC_TY
2. Solenoid valve for wash	K1
3. Condensation solenoid valve	K2
4. Thermal cut-out (circulation pump)	K3
5. Pump circulation	K4
6. Thermal cut-out (drain pump)	MOTOR_TY
7. Drain pump	ON/OFF
8. Stator (motor)	PWELW_TY
9. Rotor (motor)	WELV_TY
10. Thermal cut-out (motor)	BEL_TY
11. Tachometric generator (motor)	
12. Interference filter	
13. Instantaneous door interlock	
14. Traditional door interlock	
15. Heating element (with thermal fuses)	
16. Motor with half field	
17. Motor without half field	
18. Circuit board	
19. Flowmeter	
20. LCD Module	
21. Humidity temperature sensor	
22. Drying temperature sensor	
23. Motor fan	
24. Drying heating elements	
25. Manually reset thermostat	
26. Automatically reset thermostat	
27. WD board	
28. Aqua Control (water leaks device)	

ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.13 Connectors on circuit board WM/WD EWM2100


J15/J15B	J16	J11	J9	J7	J1
Serial interface: J15-1 ASY_IN J15-2 ASY_OUT J15-3 +5V J15-4 GND	Communication with WD external board: J16-1 Vee 12V J16-2 5V J16-3 Rx/Tx J16-4 GND J16-5 N.C.	J11-3 Flowmeter (GND) J11-4 Flowmeter (signal)	J9-1 Washing solenoid (triac) J9-3 Solenoids (line) J9-4 Solenoids (line) J9-6 Pre-wash solenoid (triac) J9-8 NTC temperature sensor J9-9 NTC temperature sensor	J7-1 Drain pump (line) J7-2 Motor (stator - ½ field) J7-3 Motor (stator full field) J7-4 Motor (rotor) J7-5 Motor (rotor) J7-6 Motor (triac) J7-7 Motor (tachometric generator) J7-8 Motor (tachometric generator) J7-9 Drain pump (triac)	J1-1 Door safety interlock (triac) J1-2 Door safety interlock (line-sensing) J1-3 Door safety interlock (line)
J14	J12	J10	J8	J5	U3
LCD Module: J14-1 RES_SAT J14-2 CS_SAT J14-3 Vee (12V) J14-4 GND J14-5 5V J14-6 SY_OUT J14-7 SY_IN J14-8 SY_CLOCK	J12-1 Drum position sensor DSP (sensing) J12-2 not used J12-3 Drum position sensor DSP (+5V)	J10-1 Analogic pressure switch (+5V) J10-2 Analogic pressure switch (GND) J10-3 Analogic pressure switch (signal)	J8-1 Bleach/condensation solenoid J8-3 Bleach/condensation solenoid (triac)	J5-1 Circulation pump (line) J5-2 Circulation pump (triac)	U3-1 Line U3-2 Line (neutral)
				J2	
				J2-1 Heating element (relay) J2-2 Heating element (line)	

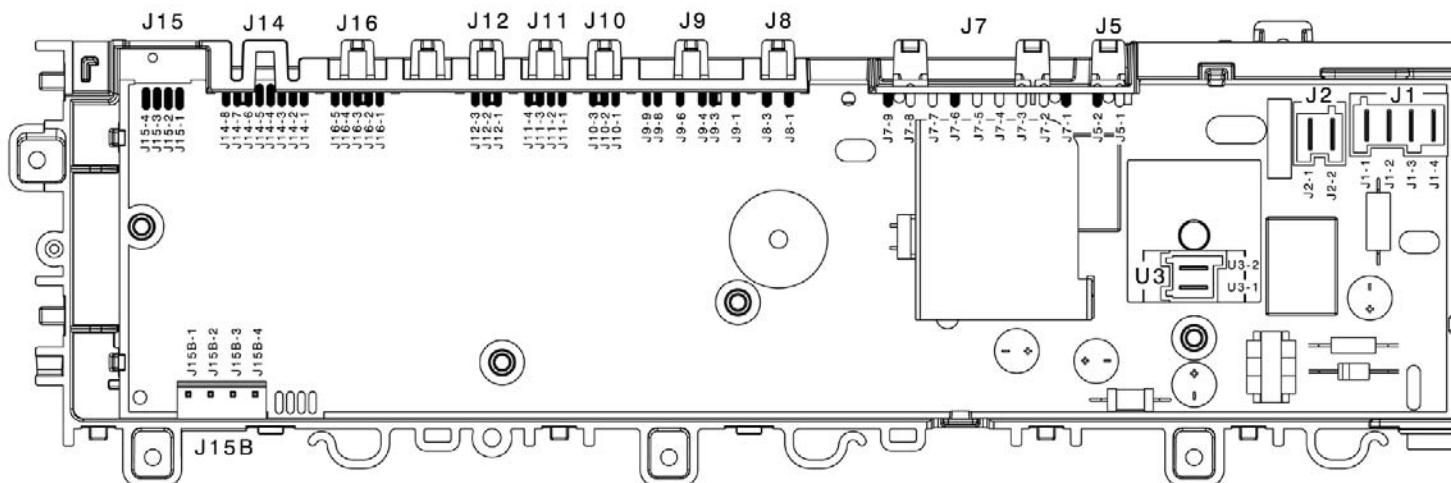


3.14 Burning on the circuit board EWM2100 WM/WD

In case of burning on the main circuit board, check that the problem is not caused by another electrical component (short-circuits, poor insulation, water leakage). Refer to the figures below in order to identify the component that might have caused the burning according to the position of the burned area.

The circuit board shown below is the version with the greatest number of components: other boards may not feature all these components.

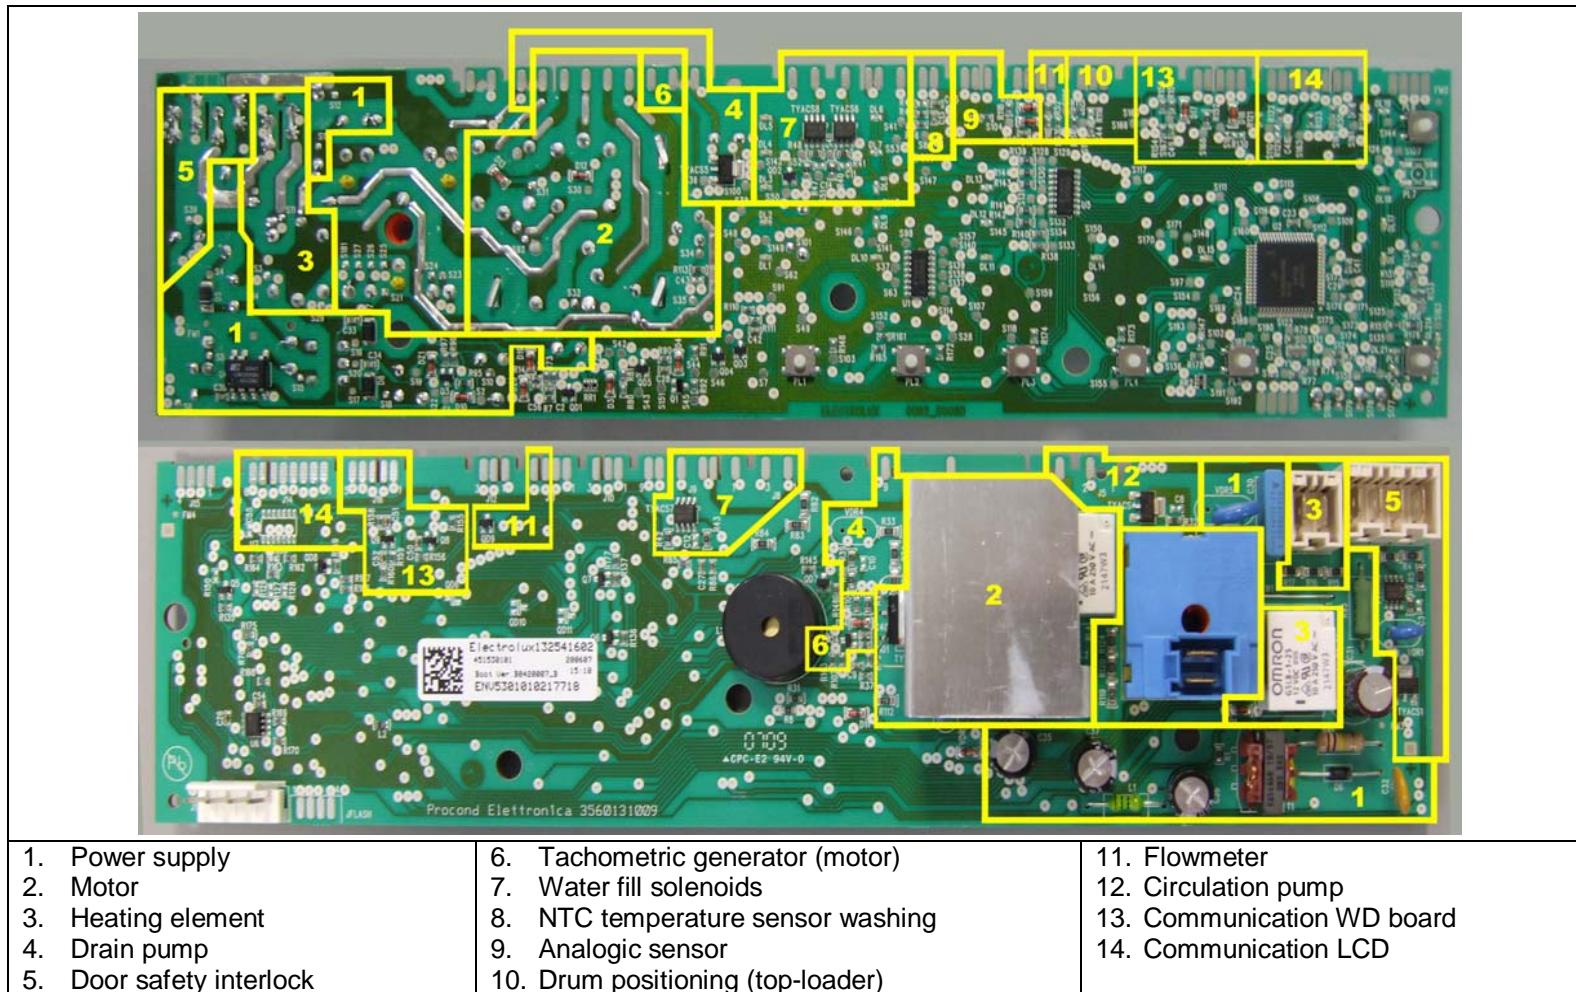

3.15 Basic circuit diagram EWM25xx without aqua control

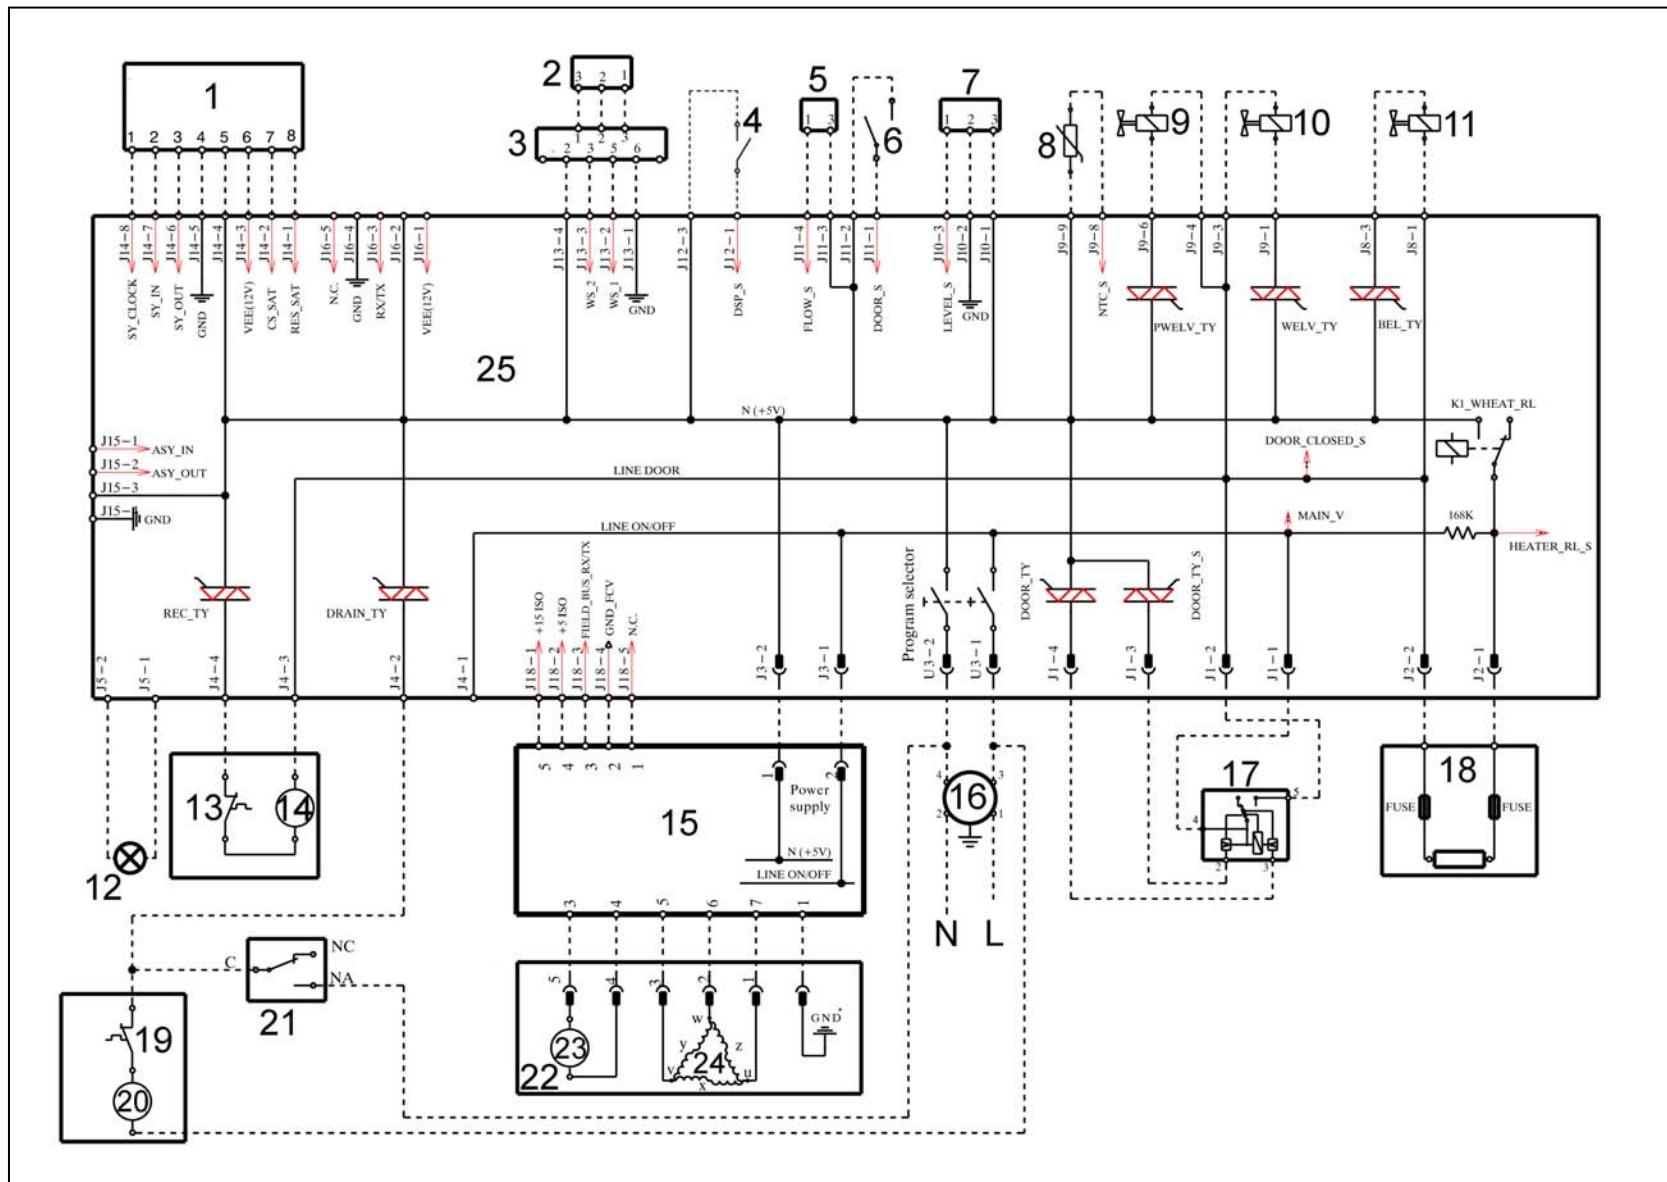


ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.15.1 Key to circuit diagram EWM25xx with Aqua Control

Electrical components on appliance	Components on main board	
1. LCD Module	DOOR_TY	Door interlock Triac
2. Damper with weight sensor	DRAIN_TY	Drain pump Triac
3. Circuit board for weight sensor	REC_TY	Triac circulation pump
4. Drum positioning sensor (DSP)	K1	Heating element relay
5. Flowmeter	ON/OFF	Main switch (programme selector)
6. Microswitch on door lock for drum light	PWELW_TY	Pre-wash solenoid Triac
7. Analogic pressure switch	WELV_TY	Wash solenoid Triac
8. Washing NTC temperature sensor	BEL_TY	Bleach solenoid Triac
9. Solenoid valve for prewash		
10. Solenoid valve for wash		
11. Solenoid valve for bleach		
12. Drum light		
13. Thermal cut-out (circulation pump)		
14. Pump circulation		
15. Motor control board (FCV)		
16. Interference filter		
17. Instantaneous door interlock		
18. Heating element (with thermal fuses)		
19. Thermal cut-out (drain pump)		
20. Drain pump		
21. Aqua control (water leaks device)		
22. Three-phase motor (induction)		
23. Tachometric generator (motor)		
24. Stator (motor)		
25. Main circuit board		

3.16 Basic circuit diagram EWM25xx without aqua control

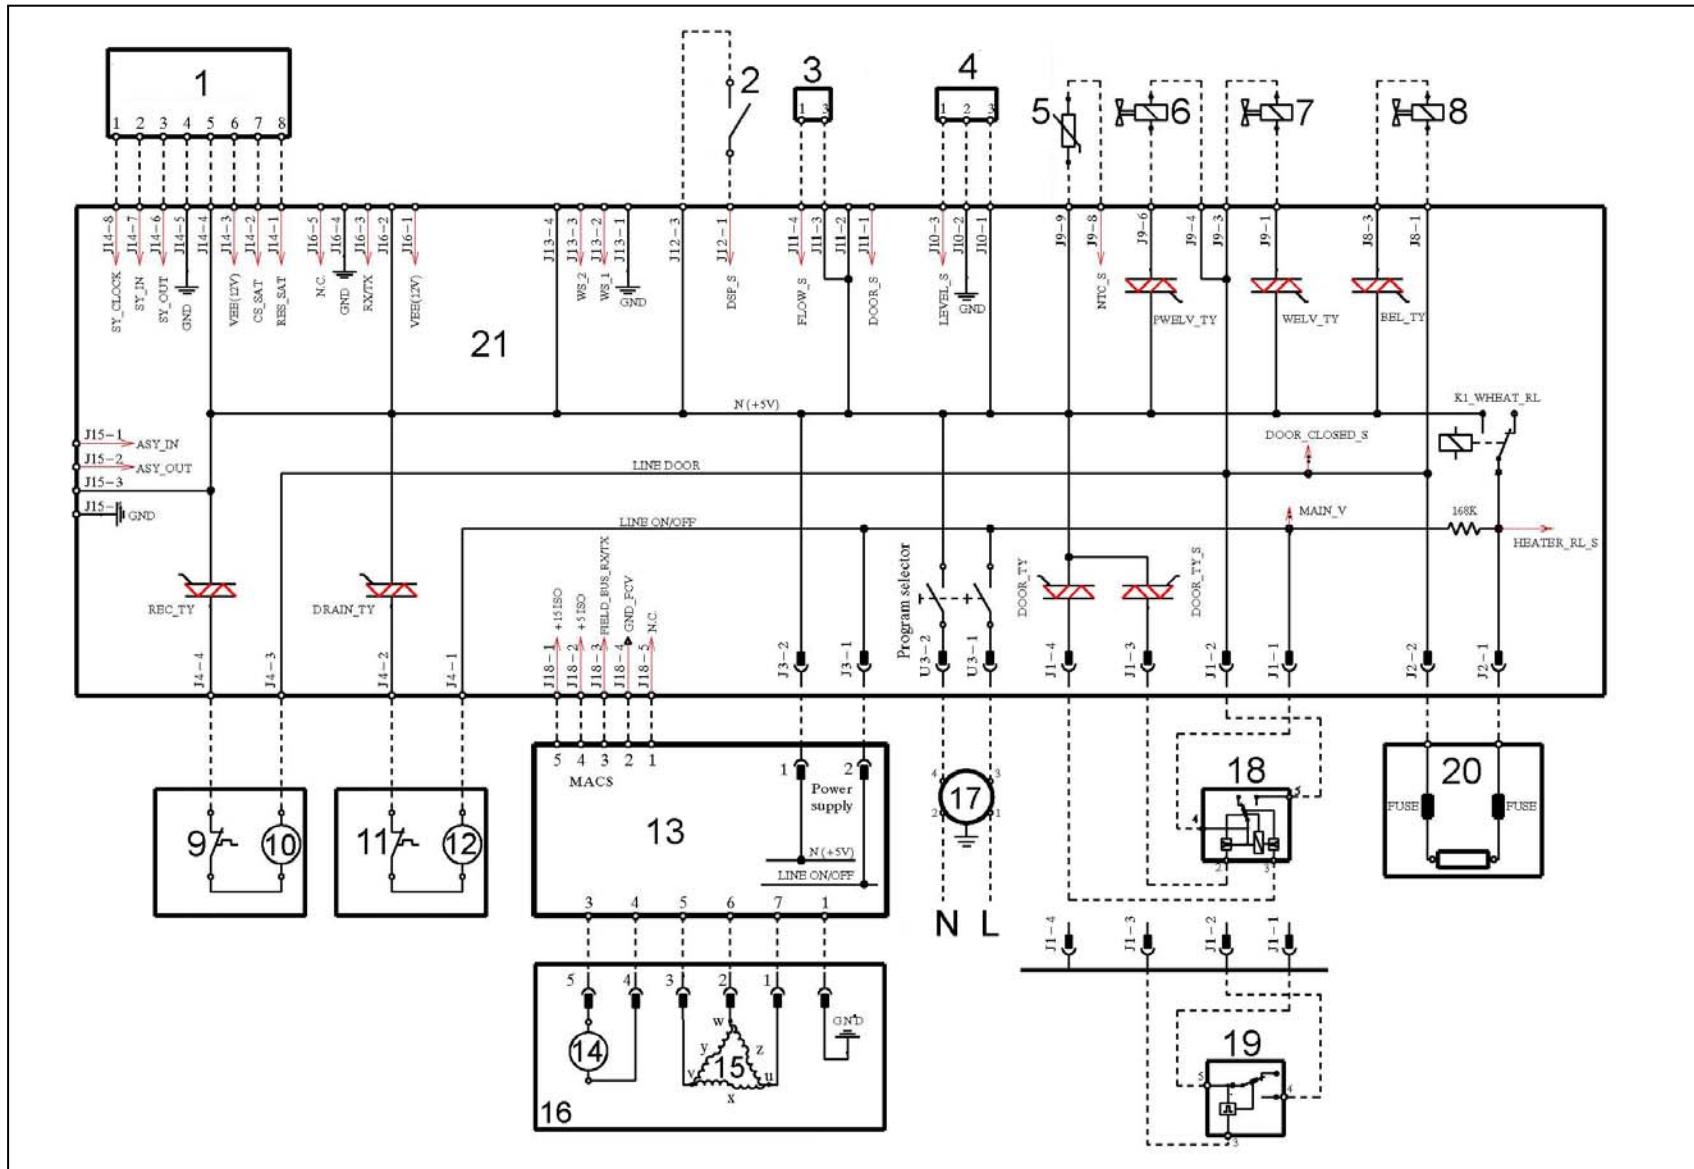


ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.16.1 Key to circuit diagram EWM25xx without Aqua Control

Electrical components on appliance	Components on main board	
1. LCD Module	DOOR_TY	Door interlock Triac
2. Damper with weight sensor	DRAIN_TY	Drain pump Triac
3. Flowmeter	REC_TY	Triac circulation pump
4. Analogic pressure switch	K1	Heating element relay
5. Washing NTC temperature sensor	ON/OFF	Main switch (programme selector)
6. Solenoid valve for prewash	PWELW_TY	Pre-wash solenoid Triac
7. Solenoid valve for wash	WELV_TY	Wash solenoid Triac
8. Solenoid valve for bleach	BEL_TY	Bleach solenoid Triac
9. Thermal cut-out (circulation pump)		
10. Pump circulation		
11. Thermal cut-out (drain pump)		
12. Drain pump		
13. Motor control board (FCV)		
14. Tachometric generator (motor)		
15. Stator (motor)		
16. Three-phase motor (induction)		
17. Interference filter		
18. Instantaneous door interlock		
19. Traditional door interlock		
20. Washing heating element (with thermal fuses)		
21. Main circuit board		

ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.17 Basic circuit diagram EWM25xx WD without aqua control

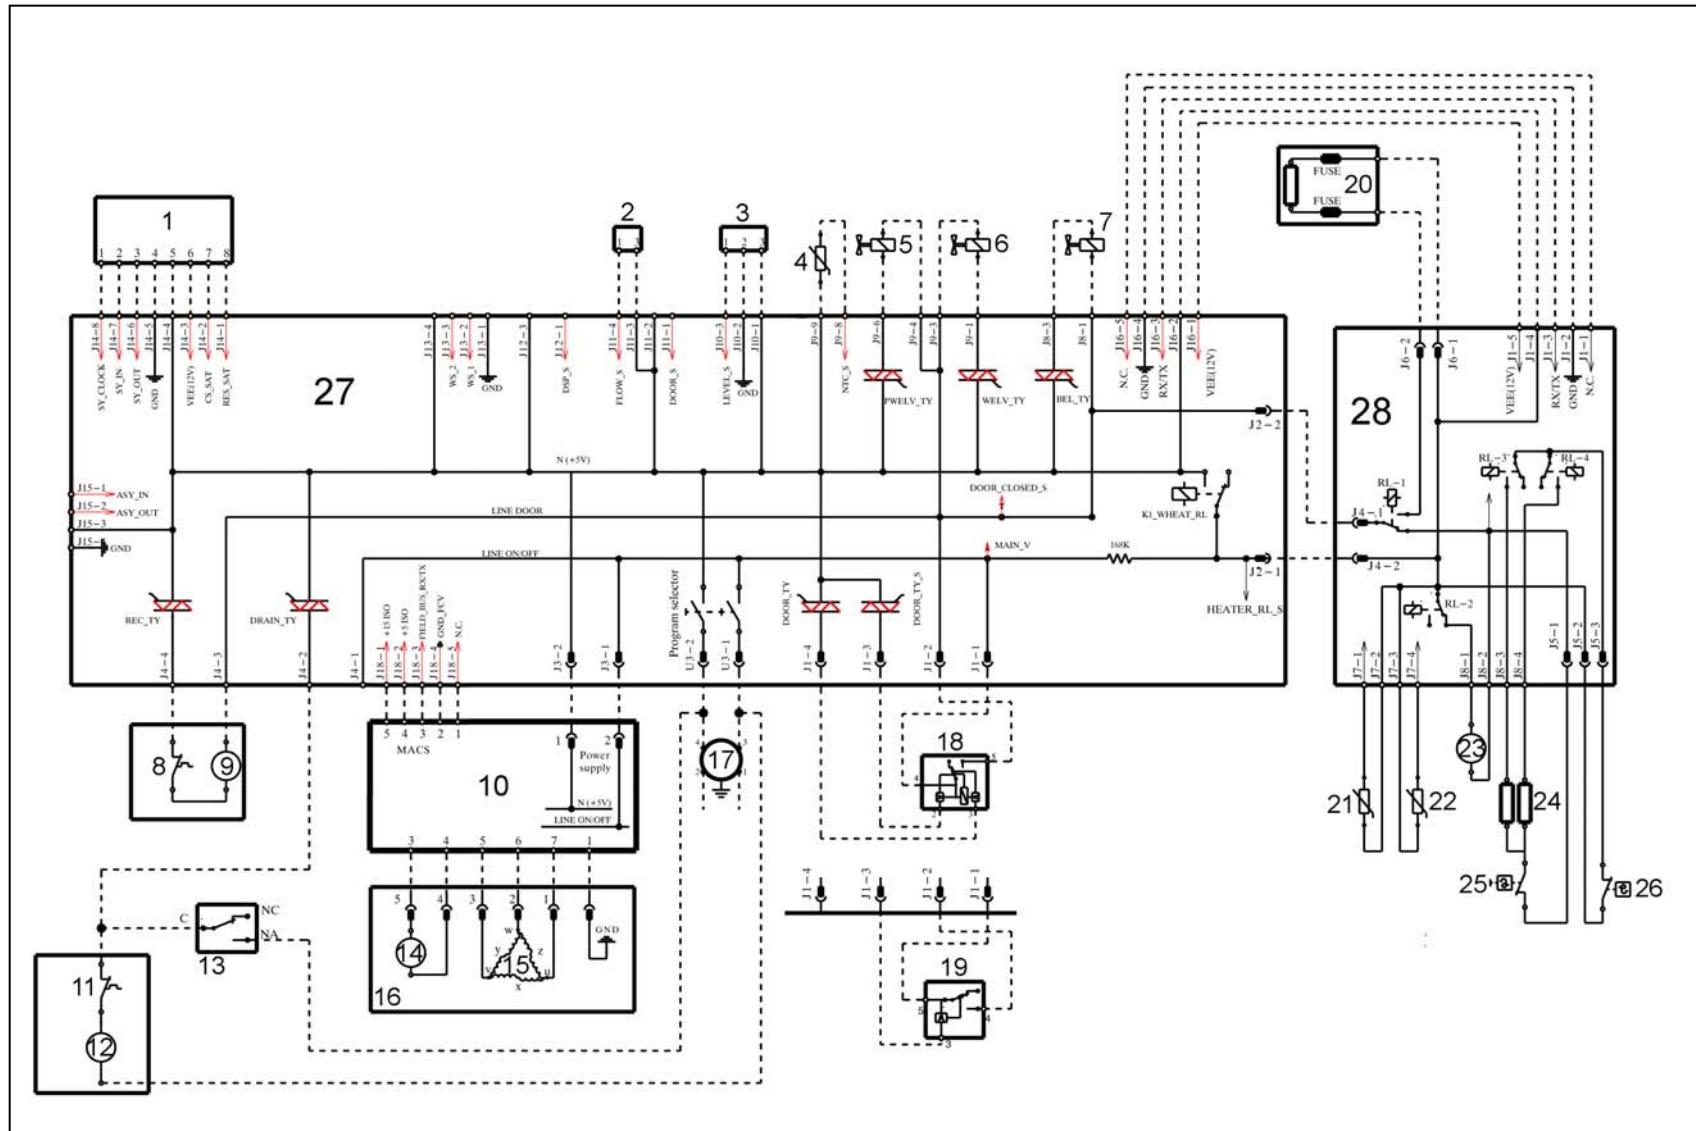


ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.17.1 Key to circuit diagram EWM25xx WD with Aqua Control

Electrical components on appliance	Components on main board	
1. LCD Module	DOOR_TY	Door interlock Triac
2. Flowmeter	DRAIN_TY	Drain pump Triac
3. Analogue pressure switch	REC_TY	Circulation pump Triac
4. NTC temperature sensor	K1	WD board supply relay
29. Solenoid valve for prewash	ON/OFF	Main switch (programme selector)
30. Solenoid valve for wash	PWELW_TY	Pre-wash solenoid Triac
31. Condensation solenoid valve	WELV_TY	Wash solenoid Triac
32. Thermal cut-out (circulation pump)	BEL_TY	Condensation solenoid Triac
33. Pump circulation		
34. Motor control board (FCV)		
35. Thermal cut-out (drain pump)		
36. Drain pump		
37. Aqua Control (water leaks device)		
38. Tachometric generator (motor)		
39. Stator (motor)		
40. Induction motor		
41. Interference filter		
42. Instantaneous door interlock		
43. Traditional door interlock		
44. Heating element (with thermal fuses)		
45. Humidity temperature sensor		
46. Drying temperature sensor		
47. Fan motor		
48. Drying heaters		
49. Thermostat with manual reset		
50. Thermostat with automatic reset		
51. Main circuit board		
52. WD circuit board		

3.18 Basic circuit diagram EWM25xx WD without aqua control

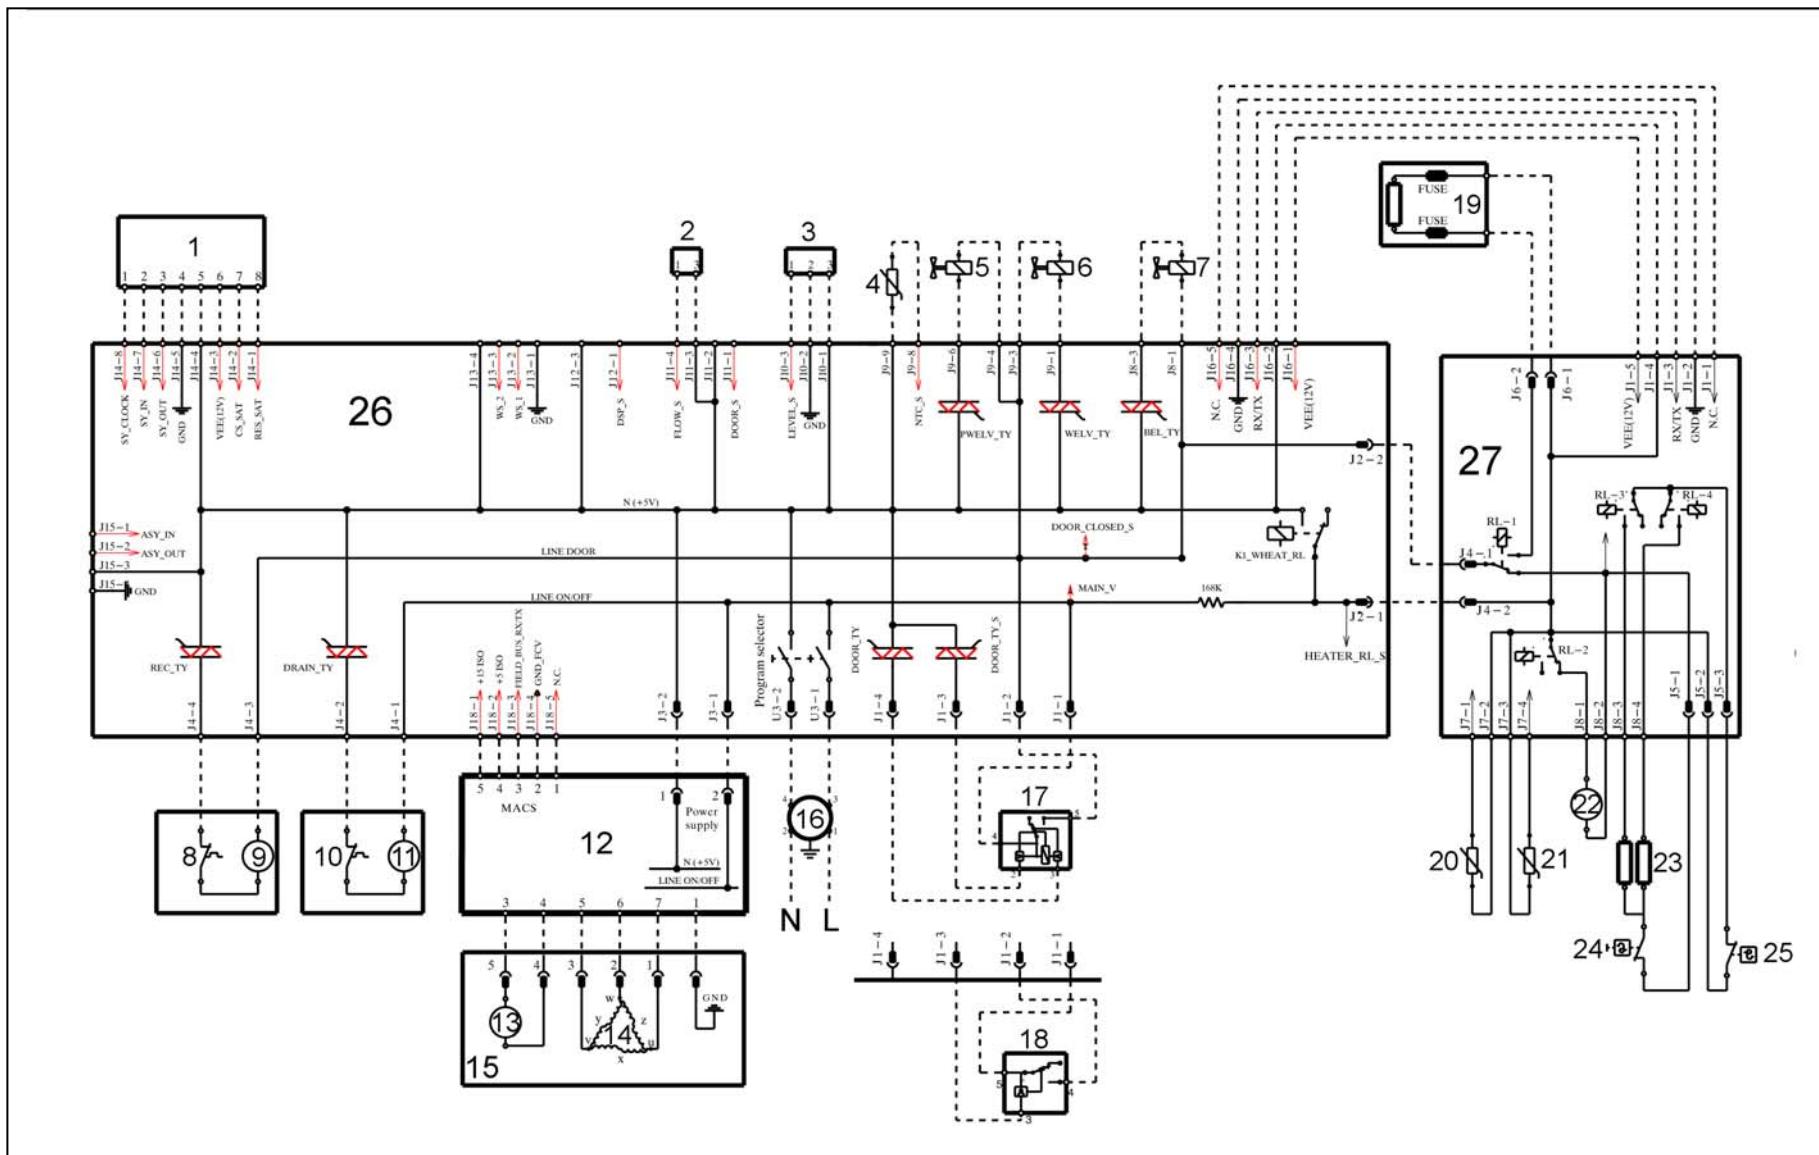


ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.18.1 Key to circuit diagram EWM25xx WD without aqua control

Electrical components on appliance	Components on main board	
1. LCD Module	DOOR_TY	Door interlock Triac
2. Flowmeter	DRAIN_TY	Drain pump Triac
3. Analogue pressure switch	REC_TY	Circulation pump Triac
4. NTC temperature sensor	K1	WD board supply relay
5. Solenoid valve for prewash	ON/OFF	Main switch (programme selector)
6. Solenoid valve for wash	PWELW_TY	Pre-wash solenoid Triac
7. Condensation solenoid valve	WELV_TY	Wash solenoid Triac
8. Thermal cut-out (circulation pump)	BEL_TY	Condensation solenoid Triac
9. Pump circulation		
10. Thermal cut-out (drain pump)		
11. Drain pump		
12. Aqua Control (water leaks device)		
13. Tachometric generator (motor)		
14. Stator (motor)		
15. Induction motor		
16. Interference filter		
17. Instantaneous door interlock		
18. Traditional door interlock		
19. Heating element (with thermal fuses)		
20. Humidity temperature sensor		
21. Drying temperature sensor		
22. Fan motor		
23. Drying heaters		
24. Thermostat with manual reset		
25. Thermostat with automatic reset		
26. Main circuit board		
27. WD circuit board		

3.19 Basic circuit diagram EWM35xx with aqua control

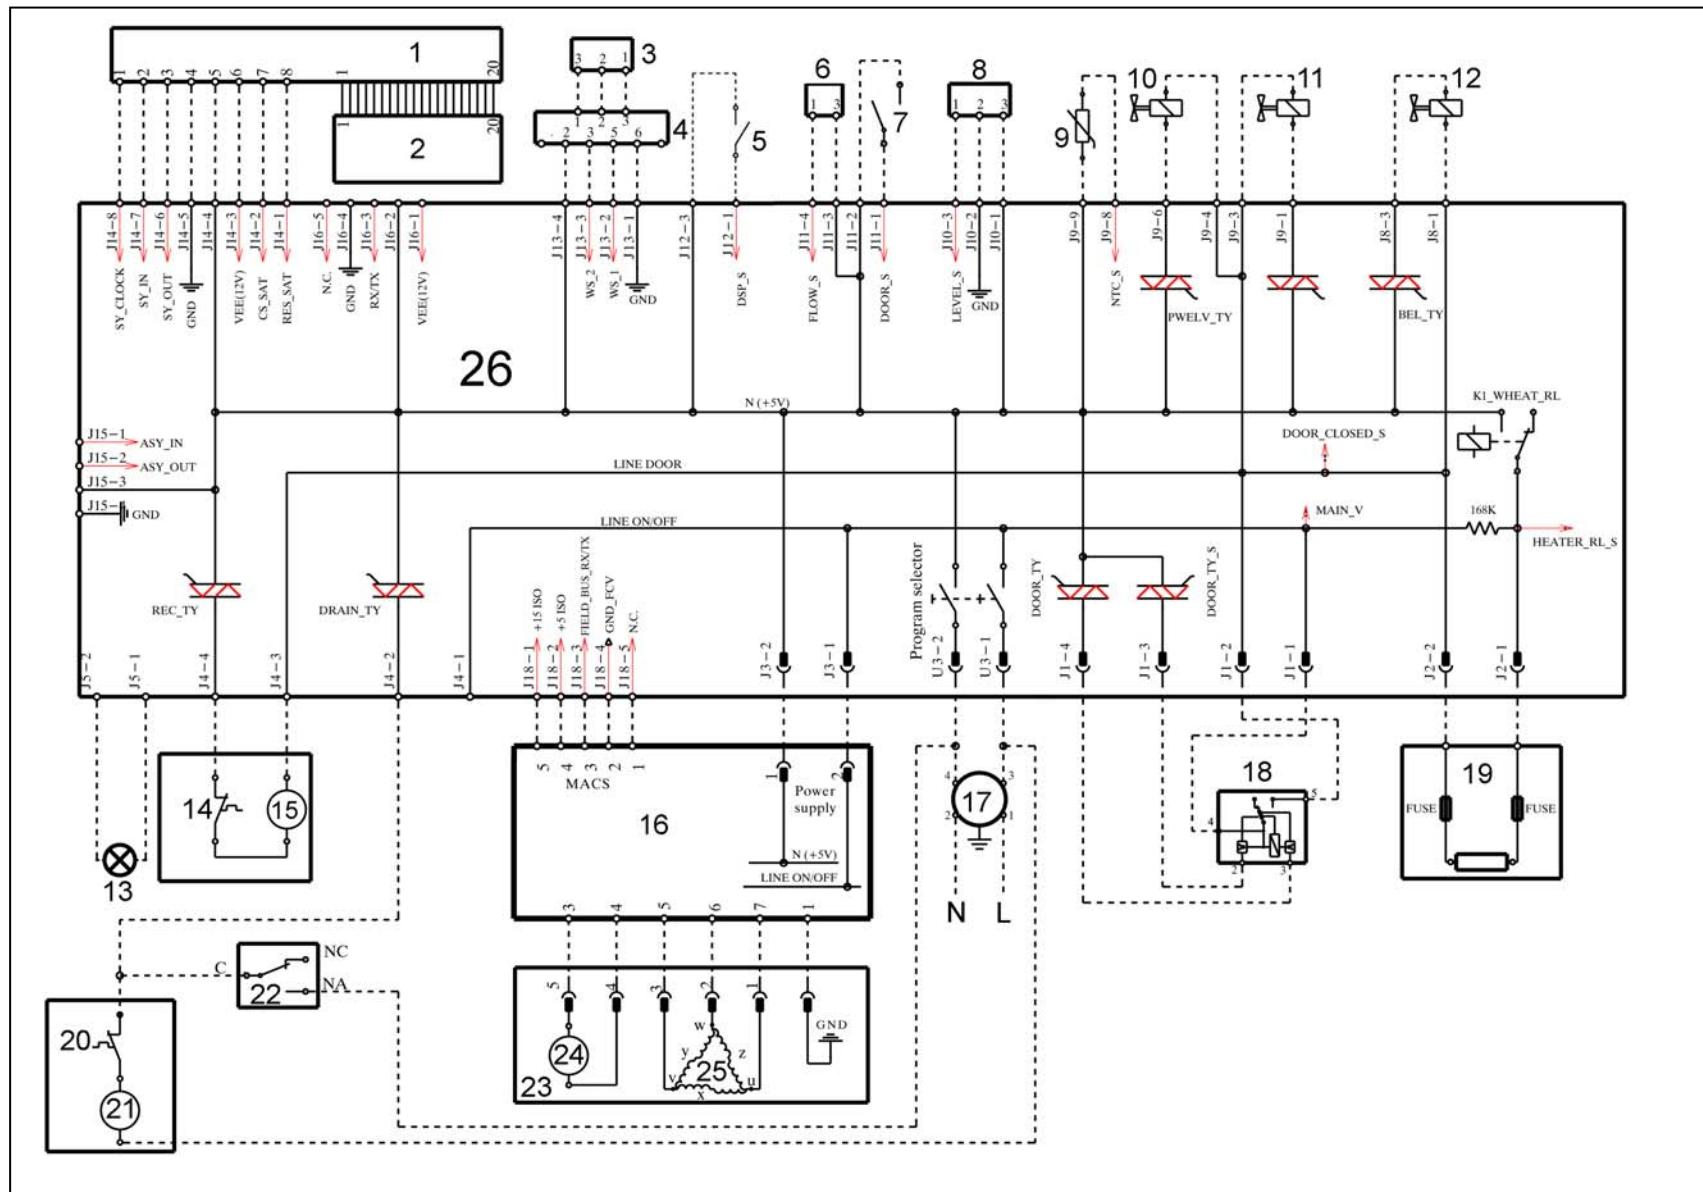


ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.19.1 Key to circuit diagram EWM35xx with Aqua Control

Electrical components on appliance	Components on main board
1. Circuit board for LCD (TC1)	DOOR_TY
2. LCD Module	DRAIN_TY
3. Damper with weight sensor	REC_TY
4. Circuit board for weight sensor	K1
5. Drum positioning sensor (DSP)	ON/OFF
6. Flowmeter	PWELW_TY
7. Microswitch on door lock for drum light	WELV_TY
8. Analogic pressure switch	BEL_TY
9. Washing NTC temperature sensor	
10. Solenoid valve for prewash	
11. Solenoid valve for wash	
12. Solenoid valve for bleach	
13. Drum light	
14. Thermal cut-out (circulation pump)	
15. Pump circulation	
16. Motor control board (FCV)	
17. Interference filter	
18. Instantaneous door interlock	
19. Heating element (with thermal fuses)	
20. Thermal cut-out (drain pump)	
21. Drain pump	
22. Aqua control (water leaks device)	
23. Three-phase motor (induction)	
24. Tachometric generator (motor)	
25. Stator (motor)	
26. Main circuit board	

ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.20 Basic circuit diagram EWM35xx without aqua control

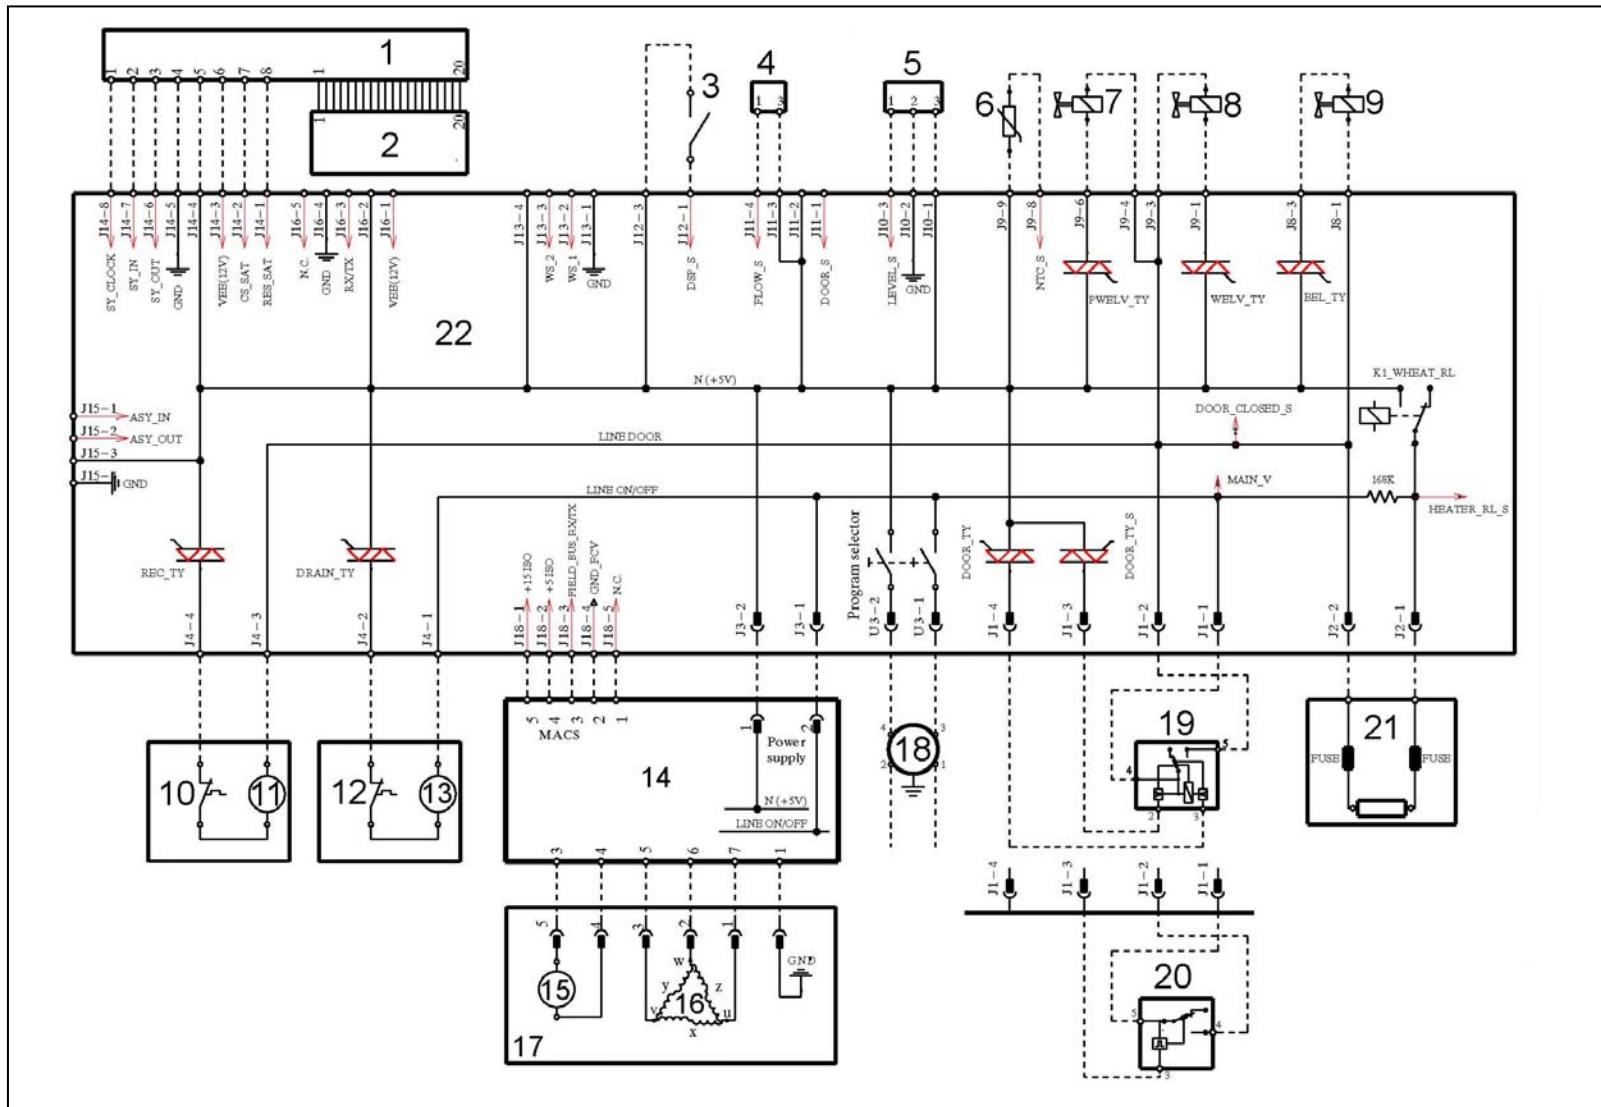

ENV06 EWM11xx EWM21xx EWM25xx/35xx


3.20.1 Key to circuit diagram EWM35xx without Aqua Control

Electrical components on appliance	Components on main board	
1. Circuit board for LCD (TC1)	DOOR_TY	Door interlock Triac
2. LCD Module	DRAIN_TY	Drain pump Triac
3. Damper with weight sensor	REC_TY	Triac circulation pump
4. Flowmeter	K1	Heating element relay
5. Analogic pressure switch	ON/OFF	Main switch (programme selector)
6. Washing NTC temperature sensor	PWELW_TY	Pre-wash solenoid Triac
7. Solenoid valve for prewash	WELV_TY	Wash solenoid Triac
8. Solenoid valve for wash	BEL_TY	Bleach solenoid Triac
9. Solenoid valve for bleach		
10. Thermal cut-out (circulation pump)		
11. Pump circulation		
12. Thermal cut-out (drain pump)		
13. Drain pump		
14. Motor control board (FCV)		
15. Tachometric generator (motor)		
16. Stator (motor)		
17. Three-phase motor (induction)		
18. Interference filter		
19. Instantaneous door interlock		
20. Traditional door interlock		
21. Washing heating element (with thermal fuses)		
22. Main circuit board		

ENV06 EWM11xx EWM21xx EWM25xx/35xx

3.21 Connectors on circuit board WM/WD EWM25xx/35xx


J15/J15B	J16	J12	J9	J18	J2
Serial interface: J15-1 ASY_IN J15-2 ASY_OUT J15-3 +5V J15-4 GND	Communication with WD external board: J16-1 Vee +12V J16-2 +5V J16-3 Rx/Tx J16-4 GND J16-5 N.C.	Drum positioning system DSP: J12-1 signal J12-2 N.C. J12-3 +5V J11 J11-3 Flowmeter (GND) J11-4 Flowmeter (signal)	JJ9-1 Washing solenoid (triac) JJ9-3 Solenoids (line) JJ9-4 Solenoids (line) JJ9-6 Pre-wash solenoid (triac) JJ9-8 NTC temperature sensor JJ9-9 NTC temperature sensor	Communication with FCV board: J18-1 VEE +12 J18-2 +5V J18-3 Signal J18-4 GND J18-5 N.C.	Heating element: J2-1 Relay J2-2 Line
J14	J13	J10	J8	J4	J1
LCD Module: J14-1 RES_SAT J14-2 CS_SAT J14-3 Vee (12V) J14-4 GND J14-5 +5V J14-6 SY_OUT J14-7 SY_IN J14-8 SY_CLOCK	Weight sensor: J13-1 (GND) J13-2 (WS-1) J13-3 (WS-2) J13-4 (+5V)	Analogic pressure switch: J10-1 +5V J10-2 GND J10-3 signal	Beach/condensation solenoid: J8-1 Line J8-3 Tiac	J4-1 N.C. J4-2 Drain pump (triac) J4-3 Drain pump (line) J4-4 Circulation pump (triac) J5 Drum light: J5-1 +5V' J5-2 GND	Door lock device: J1-1 Line (ON/OFF) J1-2 Line (door) J1-3 Line (sensing) J1-4 Triac U3 U3-1 line U3-2 line (neutral)

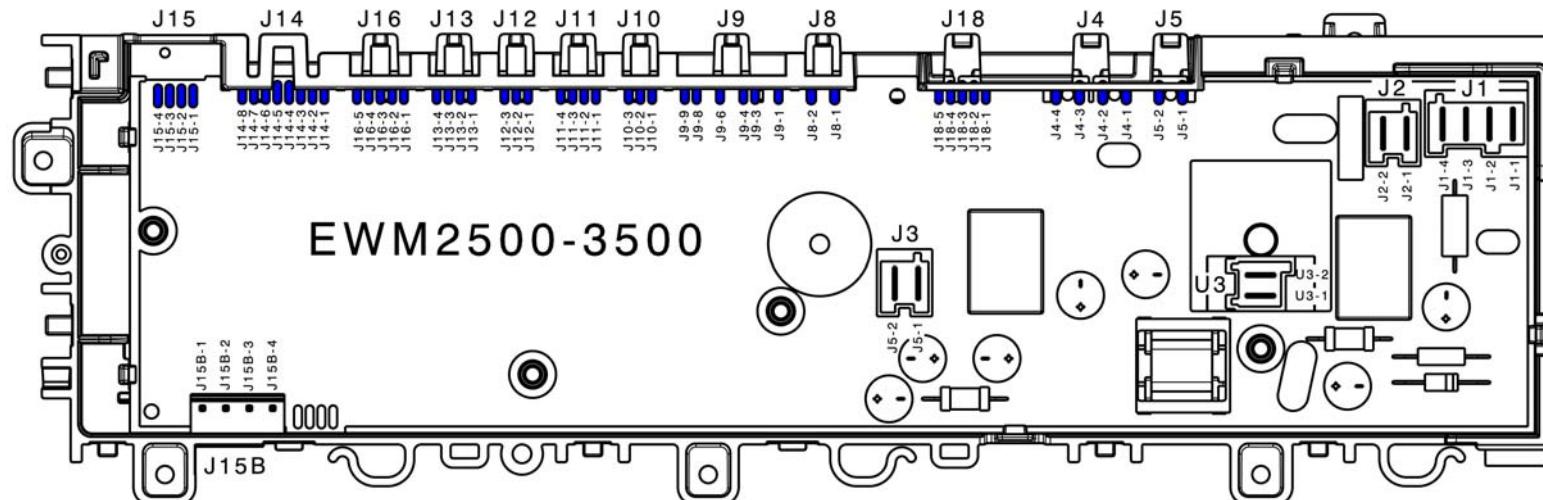

3.22 Burning on the circuit boards EWM25xx/35xx WM/WD


In case of burning on the main circuit board, check that the problem is not caused by another electrical component (short-circuits, poor insulation, water leakage). Refer to the figures below in order to identify the component that might have caused the burning according to the position of the burned area.

The circuit board shown below is the version with the greatest number of components: other boards may not feature all these components.

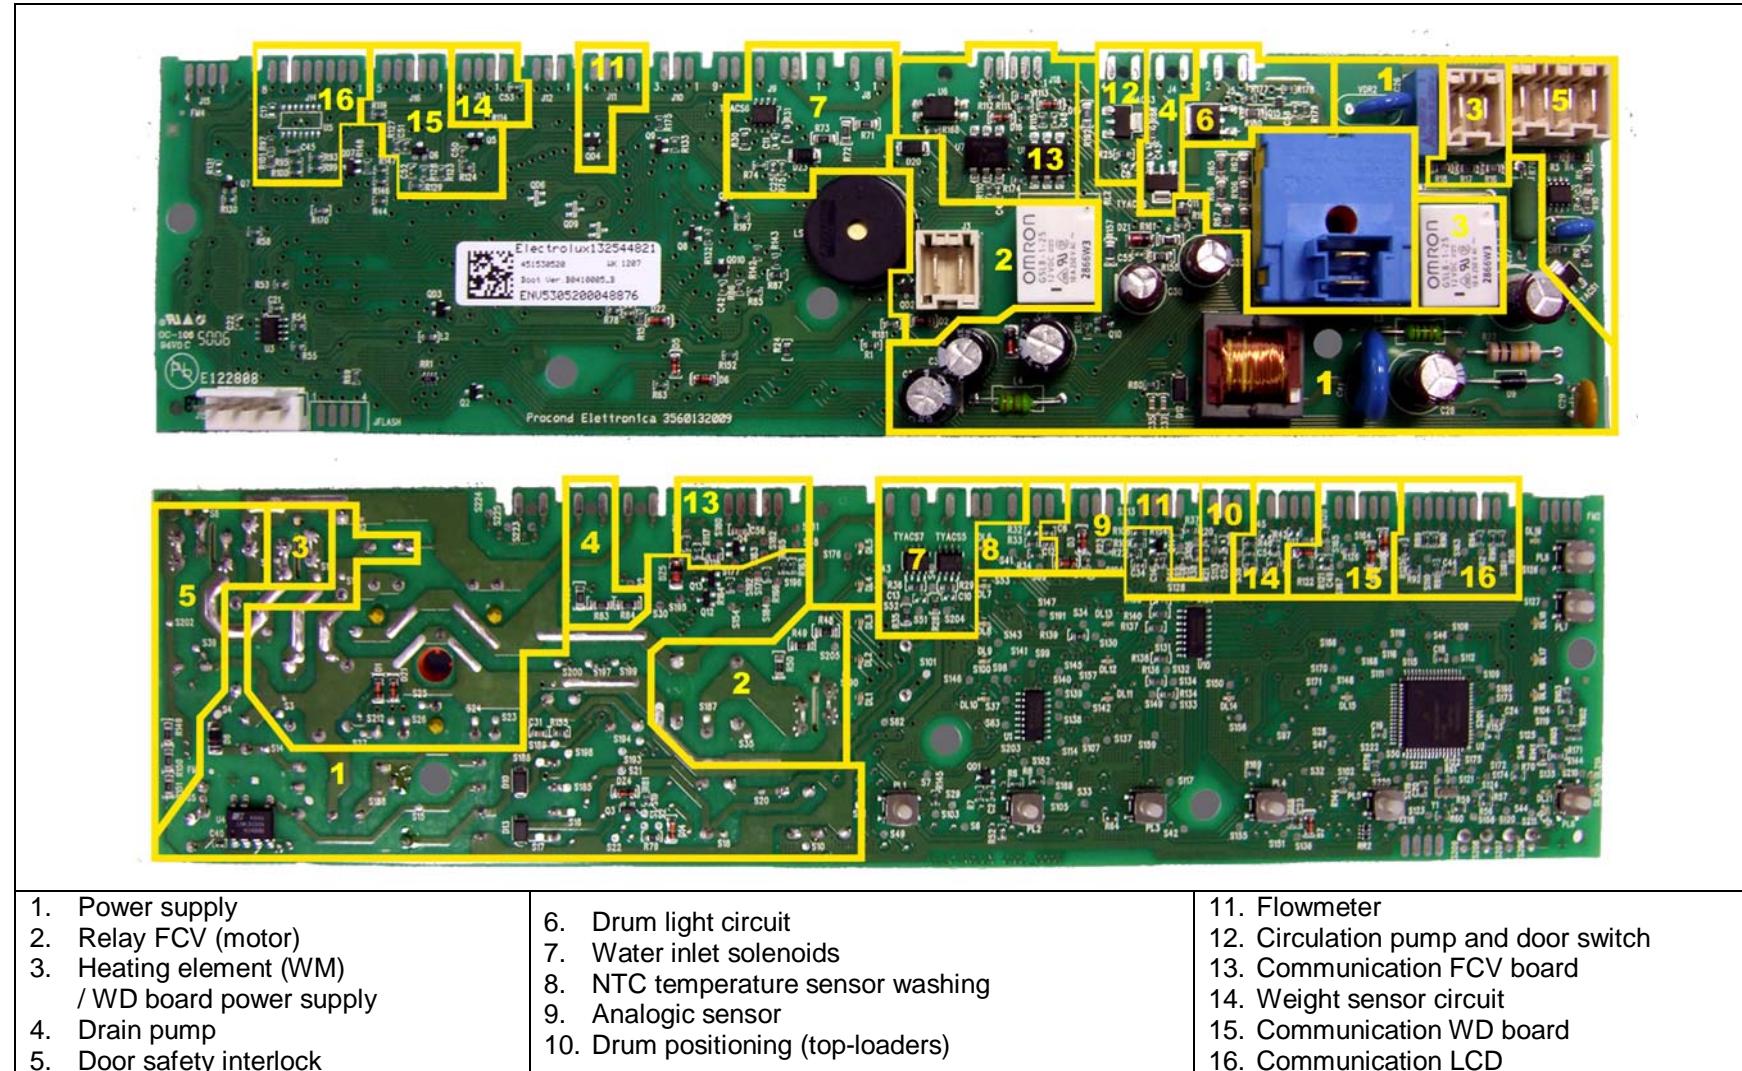

3.23 Burning on the circuit board WD

In case of burning on the main circuit board, check that the problem is not caused by another electrical component (short-circuits, poor insulation, water leakage). Refer to the figures below in order to identify the component that might have caused the burning according to the position of the burned area.
The circuit board shown below is the version with the greatest number of components: other boards may not feature all these components.

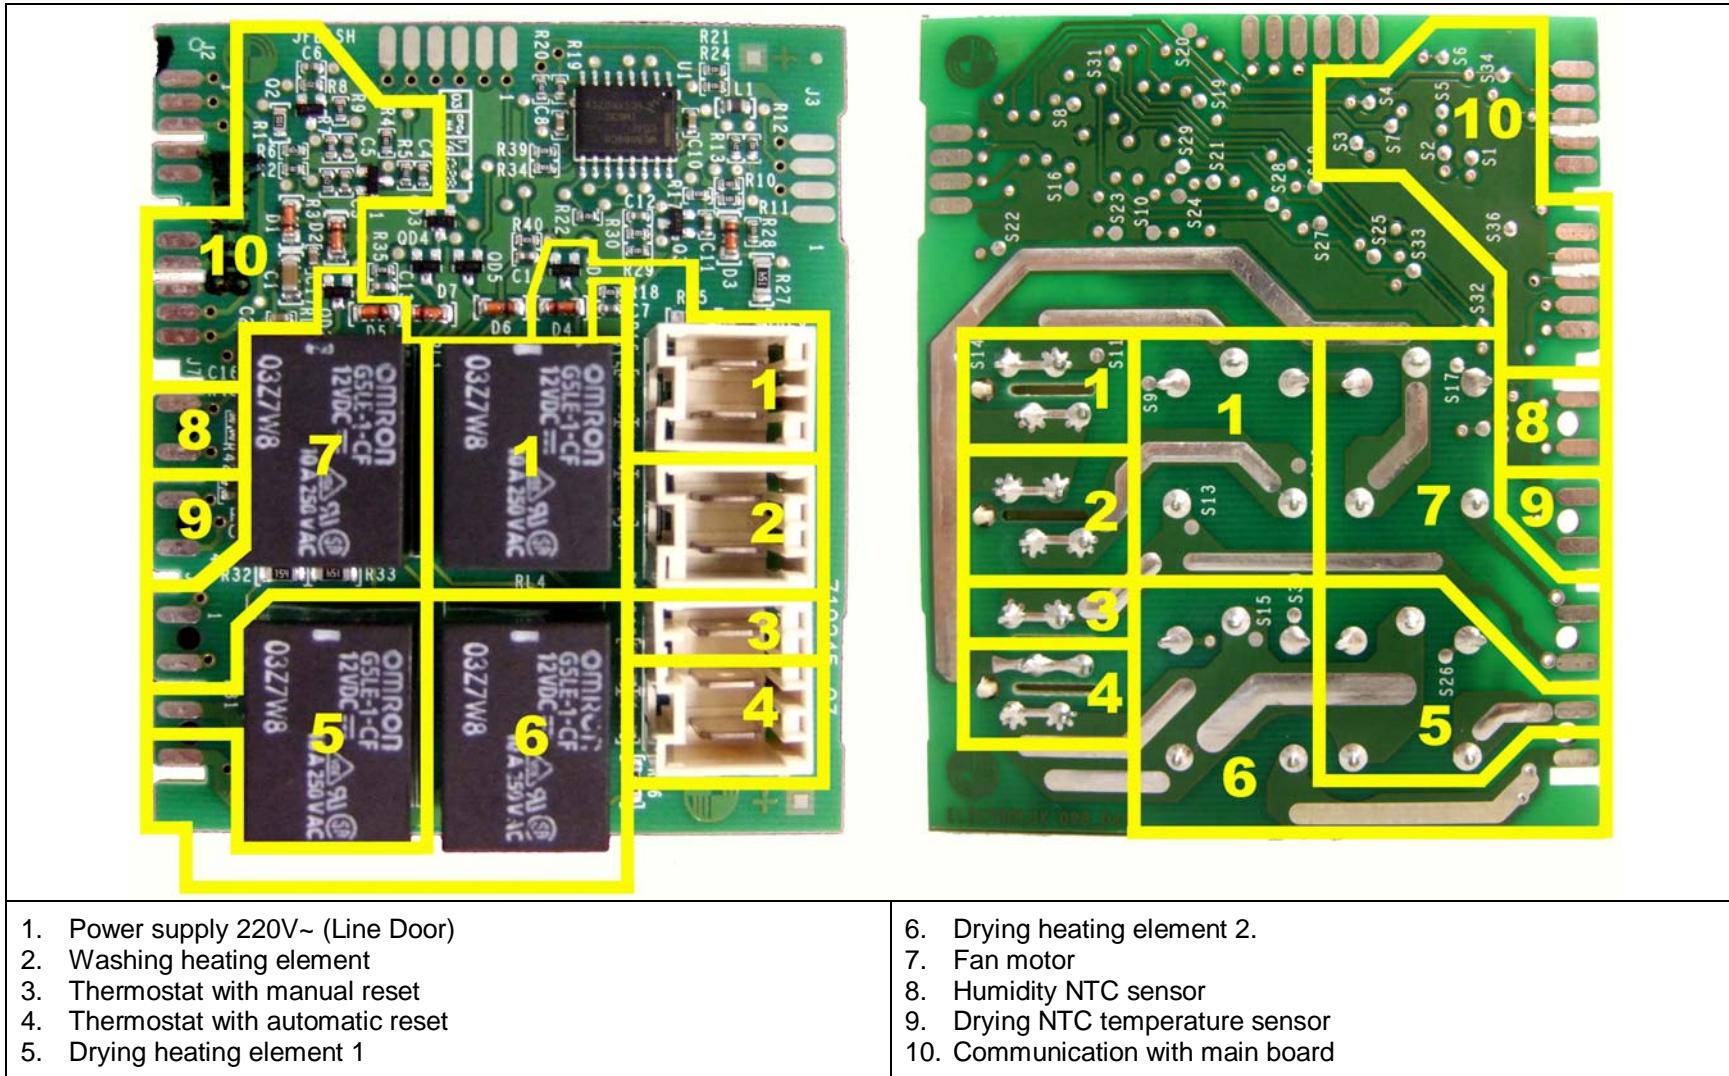

APPLIANCES LIST

4 APPLIANCE LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91420510100	EWM1000	599371313	ZWG3105	Zanussi	20050617
91420510101	EWM1000	599384113	ZWG3105	Zanussi	20051128
91420510200	EWM1000	599371315	P106M	Zoppas	20050617
91420510201	EWM1000	599375751	P106M	Zoppas	20060106
91420510300	EWM1000	599371316	ZWF1021W	Zanussi-Electrolux	20050617
91420510301	EWM1000	599374386	ZWF1021W	Zanussi-Electrolux	20051216
91420510400	EWM1000	599372225	ZWG3101	Zanussi	20050708
91420510401	EWM1000	599374467	ZWG3101	Zanussi	20051216
91420510500	EWM1000	599373853	ZWG3103	Zanussi	20051104
91420510600	EWM1000	599371318	ZWG3102	Zanussi	20050617
91420510601	EWM1000	599374385	ZWG3102	Zanussi	20051216
91420510800	EWM1000	599373906	ZWG3104	Zanussi	20051111
91420510801	EWM1000	599384114	ZWG3104	Zanussi	20051128
91420511000	EWM1000	599373246	FAE1026V	Zanussi-Electrolux	20051007
91420511001	EWM1000	599704117	FAE1026V	Zanussi-Electrolux	20060127
91420511100	EWM1000	599373389	ZWG3106	Zanussi	20051014
91420511101	EWM1000	599384115	ZWG3106	Zanussi	20051128
91420520000	EWM1000	599375752	ZWF1021W	Zanussi-Electrolux	20060210
91420520001	EWM1000	599377585	ZWF1021W	Zanussi-Electrolux	20060301
91420520002	EWM1000	599380277	ZWF1021W	Zanussi-Electrolux	20060505
91420520003	EWM1000	599381682	ZWF1021W	Zanussi-Electrolux	20060526
91420520004	EWM1000	599384198	ZWF1021W	Zanussi-Electrolux	20061110
91420520100	EWM1000	599375754	FAE1026V	Zanussi-Electrolux	20060217
91420520101	EWM1000	599377577	FAE1026V	Zanussi-Electrolux	20060301
91420520102	EWM1000	599381687	FAE1026V	Zanussi-Electrolux	20060324
91420520103	EWM1000	599381689	FAE1026V	Zanussi-Electrolux	20060526
91420520104	EWM1000	599384205	FAE1026V	Zanussi-Electrolux	20061110
91420520200	EWM1000	599375755	P106M	Zoppas	20060210
91420520201	EWM1000	599378008	P106M	Zoppas	20060217
91420520202	EWM1000	599381693	P106M	Zoppas	20060526
91420520203	EWM1000	599384207	P106M	Zoppas	20061110
91420520300	EWM1000	599375756	ZWG3105	Zanussi	20060210
91420520301	EWM1000	599378013	ZWG3105	Zanussi	20060217
91420520302	EWM1000	599381697	ZWG3105	Zanussi	20060526
91420520303	EWM1000	599384208	ZWG3105	Zanussi	20061110
91420520400	EWM1000	599375765	ZWG3101	Zanussi	20060210
91420520401	EWM1000	599378016	ZWG3101	Zanussi	20060217
91420520402	EWM1000	599381704	ZWG3101	Zanussi	20060512
91420520403	EWM1000	599381705	ZWG3101	Zanussi	20060526
91420520404	EWM1000	599384217	ZWG3101	Zanussi	20061110
91420520500	EWM1000	599375770	ZWG3102	Zanussi	20060210
91420520501	EWM1000	599378017	ZWG3102	Zanussi	20060217
91420520502	EWM1000	599381707	ZWG3102	Zanussi	20060512
91420520503	EWM1000	599381710	ZWG3102	Zanussi	20060526
91420520504	EWM1000	599384741	ZWG3102	Zanussi	20060915
91420520600	EWM1000	599375774	ZWG3104	Zanussi	20060210
91420520601	EWM1000	599378029	ZWG3104	Zanussi	20060217
91420520602	EWM1000	599381720	ZWG3104	Zanussi	20060512
91420520603	EWM1000	599381728	ZWG3104	Zanussi	20060526
91420520604	EWM1000	599384736	ZWG3104	Zanussi	20061201
91420520700	EWM1000	599375776	ZWG3106	Zanussi	20060210
91420520701	EWM1000	599378031	ZWG3106	Zanussi	20060217
91420520702	EWM1000	599381617	ZWG3106	Zanussi	20060512

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91420520703	EWM1000	599381712	ZWG3106	Zanussi	20060526
91420520704	EWM1000	599384740	ZWG3106	Zanussi	20060922
91420520800	EWM1000	599375779	ZWG3106	Zanussi	20060213
91420520801	EWM1000	599378035	ZWG3106	Zanussi	20060217
91420520802	EWM1000	599381735	ZWG3106	Zanussi	20060526
91420520803	EWM1000	599384737	ZWG3106	Zanussi	20060908
91420520900	EWM1000	599375781	ZWG3103	Zanussi	20060210
91420520901	EWM1000	599378037	ZWG3103	Zanussi	20060217
91420520902	EWM1000	599381746	ZWG3103	Zanussi	20060512
91420520903	EWM1000	599381765	ZWG3103	Zanussi	20060526
91420521000	EWM1000	599381357	Z620	Zoppas	20060505
91420521001	EWM1000	599381367	Z620	Zoppas	20060508
91420521002	EWM1000	599384738	Z620	Zoppas	20061020
91420521100	EWM1000	599700108	LV5100	AEG Electrolux	20070525
91420521200	EWM1000	599700109	ZWG3107	Zanussi	20070518
91420610202	EWM1100	599718611	EWF10160W	Electrolux	20090424
91420610401	EWM1100	599719315	AWF10160W	ArthurMartinElux	20090515
91420615100	EWM2100	599702252	ZWG6100	Zanussi	20070824
91420615101	EWM2100	599712196	ZWG6100	Zanussi	20081010
91420615102	EWM2100	599718587	ZWG6100	Zanussi	20090417
91420615200	EWM2100	599702241	ZWG3100	Zanussi	20070824
91420615201	EWM1100	599711610	ZWG3100	Zanussi	20080926
91420615202	EWM1100	599718525	ZWG3100	Zanussi	20090417
91420615400	EWM2100	599710039	ZWGH7105	Zanussi	20080704
91420615401	EWM2100	599711761	ZWGH7105	Zanussi	20080926
91420615402	EWM2100	599719958	ZWGH7105	Zanussi	20090619
91420615500	EWM1100	599707655	ZWG6102	Zanussi	20080418
91420615501	EWM1100	599711738	ZWG6102	Zanussi	20080926
91420615502	EWM1100	599719269	ZWG6102	Zanussi	20090515
91420615600	EWM1100	599709105	ZWG6105C	Zanussi	20080606
91420615601	EWM1100	599711889	ZWG6105C	Zanussi	20081003
91420615602	EWM1100	599719959	ZWG6105C	Zanussi	20090619
91420615700	EWM1100	599709782	ZWG6105	Zanussi	20080627
91420615701	EWM1100	599711790	ZWG6105	Zanussi	20080926
91420615702	EWM1100	599718811	ZWG6105	Zanussi	20090501
91420615800	EWM1100	599709550	ZWG6104	Zanussi	20080620
91420615801	EWM1100	599715375	ZWG6104	Zanussi	20090130
91420615802	EWM1100	599720094	ZWG6104	Zanussi	20090626
91420616000	EWM1100	599712296	ZWG3100	Zanussi	20081017
91420616001	EWM1100	599718527	ZWG3100	Zanussi	20090417
91420700100	EWM2100	599713404	EWF10480W	Electrolux	20081107
91420700101	EWM2100	599713502	EWF10480W	Electrolux	20081121
91420700102	EWM2100	599719954	EWF10480W	Electrolux	20090619
91420700200	EWM1100	599712231	EWF10180W	Electrolux	20081010
91420700201	EWM1100	599713506	EWF10180W	Electrolux	20081121
91420700202	EWM1100	599719364	EWF10180W	Electrolux	20090522
91420700400	EWM2100	599716010	EWF10480W	Electrolux	20090213
91420700401	EWM2100	599719955	EWF10480W	Electrolux	20090619
91420700500	EWM1100	599716850	EWF10180W	Electrolux	20090313
91420700502	EWM1100	599720860	EWF10180W	Electrolux	20090731
91420700601	EWM1100	599720981	AWF10080W	ArthurMartinElux	20090807
91420710100	EWM1100	599713508	ZWH5105	Zanussi	20081121
91420710101	EWM1100	599718588	ZWH5105	Zanussi	20090417
91420710102	EWM1100	599720567	ZWH5105	Zanussi	20090710
91420710200	EWM1100	599713411	ZWH3105	Zanussi	20081031

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91420710201	EWM1100	599713880	ZWH3105	Zanussi	20081128
91420710202	EWM1100	599718287	ZWH3105	Zanussi	20090410
91420710203	EWM1100	599720569	ZWH3105	Zanussi	20090710
91420710301	EWM2100	599719311	ZWH6105	Zanussi	20090515
91420710401	EWM1100	599718024	FWH5105	Faure	20090403
91420710502	EWM2100	599720984	ZWH3105	Zanussi	20090807
91421102300	EWM1000	599355027	FA1025E	Zanussi	20021018
91421102301	EWM1000	599384158	FA1025E	Zanussi	20050418
91421102302	EWM1000	599371494	FA1025E	Zanussi	20050624
91421102400	EWM1000	599356277	FAE1025V	Zanussi	20030117
91421102700	EWM1000	599359049	LFV1060	Faure	20030530
91421102702	EWM1000	599371496	LFV1060	Faure	20050624
91421102800	EWM1000	599364022	FAE1025V	Zanussi	20040416
91421102802	EWM1000	599371498	FAE1025V	Zanussi	20050624
91421102900	EWM1000	599359024	FAE1025V	Zanussi	20030530
91421103000	EWM1000	599360105	P100E	Zoppas	20030725
91421103002	EWM1000	599371690	P100E	Zoppas	20050701
91421103300	EWM1000	599361441	FA1035E	Zanussi	20031031
91421103302	EWM1000	599371691	FA1035E	Zanussi	20050708
91421103500	EWM1000	599364136	FA1055E	Zanussi	20040423
91421103502	EWM1000	599371693	FA1055E	Zanussi	20050701
91421103600	EWM1000	599364144	LC1080E	Corbero	20040423
91421103602	EWM1000	599371695	LC1080E	Corbero	20050701
91421103700	EWM1000	599366494	EWF1005	Electrolux	20040924
91421103702	EWM1000	599371699	EWF1005	Electrolux	20050708
91421103800	EWM1000	599364148	FA1031E	Zanussi	20040423
91421103802	EWM1000	599371701	FA1031E	Zanussi	20050701
91421103900	EWM1000	599364944	FA1084E	Zanussi	20040618
91421103902	EWM1000	599371703	FA1084E	Zanussi	20050708
91421104000	EWM1000	599367351	FA1026HDRO	Electrolux	20041112
91421104001	EWM1000	599379323	FA1026HDRO	Zanussi	20050329
91421104002	EWM1000	599371705	FA1026HDRO	Zanussi	20050701
91421104100	EWM1000	599367358	EWF1060	Electrolux	20041112
91421104101	EWM1000	599380805	EWF1060	Electrolux	20060324
91421104102	EWM1000	599371706	EWF1060	Electrolux	20050708
91421104300	EWM1000	599368046	AWF916	ArthurMartinElux	20041231
91421104400	EWM1000	599368048	FAE1025V	Zanussi-Electrolux	20041231
91421104402	EWM1000	599371725	FAE1025V	Zanussi-Electrolux	20050701
91421104500	EWM1000	599368050	AWF940	ArthurMartinElux	20041231
91421104502	EWM1000	599371727	AWF940	ArthurMartinElux	20050708
91421104600	EWM1000	599368051	AWF1040	ArthurMartinElux	20041231
91421104602	EWM1000	599371730	AWF1040	ArthurMartinElux	20050708
91421104700	EWM1000	599368052	FWF3105	Faure	20041231
91421104702	EWM1000	599371732	FWF3105	Faure	20050701
91421104800	EWM1000	599368053	FWF3115	Faure	20041231
91421104801	EWM1000	599384800	FWF3115	Faure	20050329
91421104802	EWM1000	599371734	FWF3115	Faure	20050701
91421104900	EWM1000	599369710	ZWF3100	Zanussi	20050401
91421104902	EWM1000	599371736	ZWF3100	Zanussi	20050708
91421105301	EWM1000	599372063	178337_20343	SILENTIC	20050715
91421105500	EWM1000	599372077	P100E	Zoppas	20050715
91421105700	EWM1000	599373537	ZWF3102	Zanussi	20051021
91421105801	EWM1000	599372275	976357_20395	Privileg	20050805
91421105900	EWM1000	599373622	ADV106	Zanussi	20051028
91421106000	EWM1000	599374180	888/218-09	Lloyds	20051202

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91421106100	EWM1000	599374184	790215_20429	Privileg	20051202
91421110000	EWM1000	599375791	EWF1060	Electrolux	20060217
91421110001	EWM1000	599381767	EWF1060	Electrolux	20060512
91421110002	EWM1000	599381768	EWF1060	Electrolux	20060526
91421110100	EWM1000	599375793	EWF1005	Electrolux	20060217
91421110101	EWM1000	599381779	EWF1005	Electrolux	20060512
91421110102	EWM1000	599381784	EWF1005	Electrolux	20060526
91421110103	EWM1000	599700110	EWF1005	Electrolux	20070504
91421110300	EWM1000	599375799	FAE1025V	Zanussi	20060217
91421110301	EWM1000	599381832	FAE1025V	Zanussi	20060512
91421110400	EWM1000	599375801	FA1026HYDR	Zanussi	20060217
91421110401	EWM1000	599381800	FA1026HYDR	Zanussi	20060512
91421110402	EWM1000	599381803	FA1026HYDR	Zanussi	20060526
91421110700	EWM1000	599375804	BIW105W	BENDIX	20060217
91421110701	EWM1000	599381843	BIW105W	BENDIX	20060512
91421110702	EWM1000	599388868	BIW105W	BENDIX	20070518
91421110800	EWM1000	599375807	AW1001W	Tricity Bendix	20060217
91421110801	EWM1000	599381850	AW1001W	Tricity Bendix	20060512
91421110802	EWM1000	599388870	AW1001W	Tricity Bendix	20070518
91421111000	EWM1000	599375809	ZWF1011W	Zanussi-Electrolux	20060217
91421111001	EWM1000	599381858	ZWF1011W	Zanussi-Electrolux	20060512
91421111002	EWM1000	599388945	ZWF1011W	Zanussi-Electrolux	20070518
91421111201	EWM1000	599378693	178337_20574	SILENTIC	20060127
91421111202	EWM1000	599381959	178337_20574	SILENTIC	20060811
91421111203	EWM1000	599711772	WA100F	SILENTIC	20080926
91421111600	EWM1000	599381379	P100E	Zoppas	20060505
91421111601	EWM1000	599381385	P100E	Zoppas	20060508
91421111800	EWM1000	599375810	AWF1040	ArthurMartinElux	20060217
91421111801	EWM1000	599381967	AWF1040	ArthurMartinElux	20060811
91421111802	EWM1000	599388946	AWF1040	ArthurMartinElux	20070518
91421111900	EWM1000	599375813	FWF3115	Faure	20060217
91421111901	EWM1000	599381976	FWF3115	Faure	20060519
91421111902	EWM1000	599381986	FWF3115	Faure	20060811
91421112000	EWM1000	599375814	ZWF3100	Zanussi	20060224
91421112001	EWM1000	599382036	ZWF3100	Zanussi	20060811
91421112002	EWM1000	599700118	ZWF3100	Zanussi	20070504
91421112100	EWM1000	599375817	ZWF3102	Zanussi	20060224
91421112101	EWM1000	599381993	ZWF3102	Zanussi	20060519
91421112102	EWM1000	599382043	ZWF3102	Zanussi	20060811
91421112103	EWM1000	599700129	ZWF3102	Zanussi	20070504
91421112300	EWM1000	599375819	LC1080E	Corbero	20060224
91421112301	EWM1000	599382003	LC1080E	Corbero	20060519
91421112302	EWM1000	599382053	LC1080E	Corbero	20060811
91421112303	EWM1000	599700134	LC1080E	Corbero	20070504
91421112501	EWM1000	599376977	888/218 09	Lloyds	20060317
91421112502	EWM1000	599382079	888_218_09	Lloyds	20060811
91421112601	EWM1000	599382086	FA1025E	Zanussi	20060811
91421112800	EWM1000	599375820	FA1035E	Zanussi	20060224
91421112801	EWM1000	599381966	FA1035E	Zanussi	20060519
91421112802	EWM1000	599382091	FA1035E	Zanussi	20060811
91421112803	EWM1000	599388947	FA1035E	Zanussi	20070518
91421113000	EWM1000	599375833	TF1020E	Elektro Helios	20060224
91421113001	EWM1000	599382081	TF1020E	Elektro Helios	20060811
91421113002	EWM1000	599388944	TF1020E	Elektro Helios	20070518
91421113201	EWM1000	599376962	790215_20616	Privileg	20060310

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91421113202	EWM1000	599382055	790215_20616	Privileg	20060811
91421113300	EWM1000	599375831	ADV106	Zanussi	20060227
91421113301	EWM1000	599382010	ADV106	Zanussi	20060519
91421113302	EWM1000	599382062	ADV106	Zanussi	20060811
91421113303	EWM1000	599700136	ADV106	Zanussi	20070504
91421113400	EWM1000	599375830	ZWF1012W	Zanussi-Electrolux	20060224
91421113401	EWM1000	599382073	ZWF1012W	Zanussi-Electrolux	20060811
91421113402	EWM1000	599700135	ZWF1012W	Zanussi-Electrolux	20070504
91421113501	EWM1000	599378699	976357_20581	Privileg	20060127
91421113502	EWM1000	599382075	976357_20581	Privileg	20060811
91421113701	EWM1000	599381969	FWF3103	Faure	20060519
91421113702	EWM1000	599382098	FWF3103	Faure	20060811
91421113800	EWM1000	599380287	FWF3117	Faure	20060505
91421113801	EWM1000	599380294	FWF3117	Faure	20060519
91421113802	EWM1000	599380299	FWF3117	Faure	20060526
91421113803	EWM1000	599700139	FWF3117	Faure	20070504
91421113900	EWM1000	599380662	Z20	Zoppas	20060630
91421113901	EWM1000	599382049	Z20	Zoppas	20060811
91421113902	EWM1000	599707016	Z20	Zoppas	20080328
91421114000	EWM1000	599381389	FWF3105	Faure	20060505
91421114001	EWM1000	599381391	FWF3105	Faure	20060508
91421114002	EWM1000	599381394	FWF3105	Faure	20060522
91421114003	EWM1000	599388948	FWF3105	Faure	20070518
91421114100	EWM1000	599381192	FAE1025V	Zanussi	20060714
91421114200	EWM1000	599380693	888_420_09	Lloyds	20060630
91421114300	EWM1000	599380670	888_427_09	Lloyds	20060630
91421114400	EWM1000	599385169	LV4100	AEG Electrolux	20061103
91421114500	EWM1000	599700140	LC1090E	Corbero	20070420
91421114501	EWM1000	599700141	LC1090E	Corbero	20070504
91421210300	EWM1100	599700143	FWF3103	Faure	20070420
91421210301	EWM1100	599700154	FWF3103	Faure	20070504
91421210302	EWM1100	599711739	FWF3103	Faure	20080926
91421210500	EWM1100	599702244	Z105	Zoppas	20070729
91421210501	EWM1100	599711729	Z105	Zoppas	20080926
91421210600	EWM1100	599701389	FWF395	Faure	20070706
91421210601	EWM1100	599711732	FWF395	Faure	20080926
91421210700	EWM1100	599702257	ZWF5100	Zanussi	20070824
91421210701	EWM1100	599711741	ZWF5100	Zanussi	20080926
91421210800	EWM1100	599703720	LC1095E	Corbero	20071026
91421210801	EWM1100	599711734	LC1095E	Corbero	20080926
91421210900	EWM1100	599707045	AW1002W	Tricity Bendix	20080328
91421210901	EWM1100	599711735	AW1002W	Tricity Bendix	20080926
91421211000	EWM1100	599707672	P511	Zoppas	20080418
91421211001	EWM1100	599711736	P511	Zoppas	20080926
91421211100	EWM1100	599707313	FWF6115	Faure	20080411
91421211101	EWM1100	599711743	FWF6115	Faure	20080926
91421211200	EWM2100	599708416	ZWF10020W	Zanussi	20080516
91421211300	EWM1100	599709347	ZWF6115	Zanussi	20080613
91421211301	EWM1100	599711742	ZWF6115	Zanussi	20080926
91421211400	EWM1100	599713921	00963928_21035	SILENTIC	20081128
91421211800	EWM1100	599716855	Faure	Faure	20090313
91421211900	EWM1100	599718818	FWF5105	Faure	20090501
91421300500	EWM1000	599363498	AW1000W	Tricity Bendix	20040319
91421300501	EWM1000	599373856	AW1000W	Tricity Bendix	20050407
91421300502	EWM1000	599371678	AW1000W	Tricity Bendix	20050701

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91421300600	EWM1000	599364150	ZWF1010W	Zanussi-Electrolux	20040423
91421300602	EWM1000	599371681	ZWF1010W	Zanussi	20050701
91421300700	EWM1000	599367097	BIW104W	Tricity Bendix	20040922
91421300702	EWM1000	599371684	BIW104W	Tricity Bendix	20050701
91421300801	EWM1000	599370297	AW1001W	Tricity Bendix	20050422
91421300802	EWM1000	599371685	AW1001W	Tricity Bendix	20050708
91421300900	EWM1000	599371071	BIW105W	Tricity Bendix	20050603
91421300902	EWM1000	599371686	BIW105W	Tricity Bendix	20050701
91421301000	EWM1000	599373542	ZWF1012W	Zanussi-Electrolux	20051021
91421301100	EWM1000	599373617	ZWF1011W	Zanussi-Electrolux	20051021
91421400600	EWM1000	599366974	TF1020E	Elektro Helios	20041008
91421400601	EWM1000	599704360	TF1020E	Elektro Helios	20050401
91421400602	EWM1000	599371908	TF1020E	Elektro Helios	20050708
91421510100	EWM1000	599371319	ZWG3125	Zanussi	20050617
91421510101	EWM1000	599704119	ZWG3125	Zanussi	20060127
91421510300	EWM1000	599371327	FWF3125	Faure	20050624
91421510400	EWM1000	599371328	FWF3126	Faure	20050624
91421510401	EWM1000	599375735	FWF3126	Faure	20060106
91421510500	EWM1000	599371329	ZWF1221W	Zanussi-Electrolux	20050624
91421510501	EWM1000	599379936	ZWF1221W	Zanussi-Electrolux	20060330
91421510700	EWM1000	599371330	AW1260W	Tricity Bendix	20050624
91421510800	EWM1000	599371332	AW1201W	Tricity Bendix	20050624
91421510801	EWM1000	599375736	AW1201W	Tricity Bendix	20060106
91421510900	EWM1000	599371333	BIW125W	Tricity Bendix	20050624
91421510901	EWM1000	599375737	BIW125W	Tricity Bendix	20060106
91421511000	EWM1000	599371503	ZWG3121	Zanussi	20050624
91421511001	EWM1000	599379880	ZWG3121	Zanussi	20051128
91421511100	EWM1000	599373543	ZWG3122	Zanussi	20051021
91421511200	EWM1000	599371915	AWF1140	ArthurMartinElux	20050708
91421511300	EWM1000	599373618	ZWG3126	Zanussi	20051021
91421511400	EWM1000	599373545	ZWF1112W	Zanussi-Electrolux	20051021
91421511401	EWM1000	599375739	ZWF1112W	Zanussi-Electrolux	20060106
91421511500	EWM1000	599373619	ZWF1211W	Zanussi-Electrolux	20051021
91421511501	EWM1000	599374511	ZWF1211W	Zanussi-Electrolux	20051223
91421520000	EWM1000	599375740	BIW125W	BENDIX	20060224
91421520001	EWM1000	599377571	BIW125W	BENDIX	20060301
91421520002	EWM1000	599380305	BIW125W	BENDIX	20060505
91421520003	EWM1000	599382159	BIW125W	Tricity Bendix	20060825
91421520004	EWM1000	599384642	BIW125W	BENDIX	20061124
91421520100	EWM1000	599375742	AW1260W	Tricity Bendix	20060224
91421520101	EWM1000	599377558	AW1260W	Tricity Bendix	20060301
91421520102	EWM1000	599380330	AW1260W	Tricity Bendix	20060505
91421520103	EWM1000	599382164	AW1260W	Tricity Bendix	20060825
91421520104	EWM1000	599384802	AW1260W	Tricity Bendix	20060916
91421520200	EWM1000	599375747	AW1201W	Tricity Bendix	20060202
91421520201	EWM1000	599377552	AW1201W	Tricity Bendix	20060301
91421520202	EWM1000	599380341	AW1201W	Tricity Bendix	20060505
91421520203	EWM1000	599382170	AW1201W	Tricity Bendix	20060825
91421520204	EWM1000	599384803	AW1201W	Tricity Bendix	20060922
91421520300	EWM1000	599375749	ZWF1221W	Zanussi-Electrolux	20060224
91421520301	EWM1000	599377549	ZWF1221W	Zanussi-Electrolux	20060301
91421520302	EWM1000	599380362	ZWF1221W	Zanussi-Electrolux	20060505
91421520303	EWM1000	599382176	ZWF1221W	Zanussi-Electrolux	20060825
91421520304	EWM1000	599384804	ZWF1221W	Zanussi-Electrolux	20060908
91421520401	EWM1000	599377543	ZWF1211W	Zanussi-Electrolux	20060301

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91421520402	EWM1000	599382179	ZWF1211W	Zanussi-Electrolux	20060308
91421520403	EWM1000	599382182	ZWF1211W	Zanussi-Electrolux	20060825
91421520404	EWM1000	599384805	ZWF1211W	Zanussi-Electrolux	20060908
91421520501	EWM1000	599377213	AWF1140	ArthurMartinElux	20060317
91421520502	EWM1000	599382128	AWF1140	ArthurMartinElux	20060825
91421520503	EWM1000	599704362	AWF1140	ArthurMartinElux	20071123
91421520601	EWM1000	599378221	FWF3125	Faure	20060217
91421520602	EWM1000	599382123	FWF3125	Faure	20060825
91421520603	EWM1000	599384283	FWF3125	Faure	20061110
91421520700	EWM1000	599377743	ZWG3125	Zanussi	20060130
91421520701	EWM1000	599378220	ZWG3125	Zanussi	20060217
91421520702	EWM1000	599380998	ZWG3125	Zanussi	20060630
91421520703	EWM1000	599384311	ZWG3125	Zanussi	20061110
91421520800	EWM1000	599377745	ZWG3122	Zanussi	20060130
91421520801	EWM1000	599378219	ZWG3122	Zanussi	20060217
91421520802	EWM1000	599382216	ZWG3122	Zanussi	20060519
91421520803	EWM1000	599382125	ZWG3122	Zanussi	20060825
91421520804	EWM1000	599384323	ZWG3122	Zanussi	20061110
91421520900	EWM1000	599377747	ZWG3121	Zanussi	20060130
91421520901	EWM1000	599378218	ZWG3121	Zanussi	20060217
91421520902	EWM1000	599382222	ZWG3121	Zanussi	20060519
91421520903	EWM1000	599382230	ZWG3121	Zanussi	20060526
91421520904	EWM1000	599384815	ZWG3121	Zanussi	20060922
91421521001	EWM1000	599377219	ZWG3126	Zanussi	20060317
91421521002	EWM1000	599382234	ZWG3126	Zanussi	20060526
91421521003	EWM1000	599384861	ZWG3126	Zanussi	20060908
91421521101	EWM1000	599377527	ZWF1112W	Zanussi-Electrolux	20060301
91421521102	EWM1000	599380364	ZWF1112W	Zanussi-Electrolux	20060505
91421521103	EWM1000	599382218	ZWF1112W	Zanussi-Electrolux	20060526
91421521104	EWM1000	599384824	ZWF1112W	Zanussi-Electrolux	20060915
91421521300	EWM1000	599380365	FWG3126	Faure	20060505
91421521301	EWM1000	599380373	FWG3126	Faure	20060526
91421521302	EWM1000	599384850	FWG3126	Faure	20060908
91421521400	EWM1000	599381398	ZWG3129	Zanussi	20060505
91421521401	EWM1000	599381478	ZWG3129	Zanussi	20060508
91421521402	EWM1000	599381321	ZWG3129	Zanussi	20060714
91421521403	EWM1000	599385149	ZWG3129	Zanussi	20061215
91421521500	EWM1000	599381193	ZWG3128	Zanussi	20060714
91421521501	EWM1000	599384866	ZWG3128	Zanussi	20060908
91421521600	EWM1000	599701451	LF1206SI	Domeos	20070824
91421521800	EWM1000	599704365	EFL12E	Curtiss	20071123
91421610102	EWM2100	599711773	EWF12260W	Electrolux	20080926
91421610201	EWM1100	599711767	AWF12160W	ArthurMartin	20080926
91421610202	EWM1100	599718956	AWF12160W	ArthurMartinElux	20090508
91421610300	EWM1100	599708343	ZWF12070W1	Zanussi	20080516
91421610301	EWM1100	599710497	ZWF12070W1	Zanussi	20080718
91421610600	EWM1100	599715185	EWF12160W	Electrolux	20090123
91421610700	EWM2100	599716022	AWF12370W	ArthurMartinElux	20090213
91421610701	EWM1100	599718960	AWF12370W	ArthurMartinElux	20090508
91421610701	EWM2100	599718960	AWF12370W	ArthurMartinElux	20090508
91421610800	EWM1100	599716889	EWF12160W	Electrolux	20090313
91421610801	EWM1100	599718961	EWF12160W	Electrolux	20090508
91421610900	EWM1100	599719622	EWF12160W	Electrolux	20090605
91421615100	EWM1100	599388949	FWF3128	Faure	20070518
91421615200	EWM2100	599702254	ZWG6120	Zanussi	20070824

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91421615202	EWM2100	599719318	ZWG6120	Zanussi	20090515
91421615300	EWM1100	599702243	ZWG3120	Zanussi	20070824
91421615301	EWM1100	599711768	ZWG3120	Zanussi	20080926
91421615302	EWM1100	599718589	ZWG3120	Zanussi	20090417
91421615400	EWM1100	599708917	FWG3125	Faure	20080530
91421615401	EWM1100	599711751	FWG3125	Faure	20080926
91421615500	EWM1100	599707918	AW1202W	Tricity Bendix	20080425
91421615501	EWM1100	599711769	AW1202W	Tricity Bendix	20080926
91421615502	EWM1100	599719078	AW1202W	Tricity Bendix	20090508
91421615600	EWM1100	599707656	ZWG6122	Zanussi	20080418
91421615601	EWM1100	599708649	ZWG6122	Zanussi	20080522
91421615602	EWM1100	599708918	ZWG6122	Zanussi	20080530
91421615603	EWM1100	599712033	ZWG6122	Zanussi	20081003
91421615604	EWM1100	599719481	ZWG6122	Zanussi	20090529
91421615700	EWM2100	599711801	FWG6125	Faure	20080725
91421615701	EWM2100	599711763	FWG6125	Faure	20080926
91421615702	EWM2100	599718586	FWG6125	Faure	20090417
91421615800	EWM1100	599709551	ZWG5125	Zanussi	20080620
91421615801	EWM1100	599715722	ZWG5125	Zanussi	20090206
91421616000	EWM1100	599712494	ZWG5124	Zanussi	20081024
91421616001	EWM1100	599718612	ZWG5124	Zanussi	20090424
91421616200	EWM1100	599716468	LF1206ELE	Bellavita	20090227
91421616300	EWM1100	599715189	EFL1260D	Curtiss	20090123
91421616400	EWM1100	599716890	FWG5124	Faure	20090313
91421616401	EWM1100	599718528	FWG5124	Faure	20090417
91421616600	EWM1100	599716470	FWG5125	Faure	20090227
91421616601	EWM1100	599720568	FWG5125	Faure	20090710
91421616801	EWM1100	599718962	DO1206	Domeos	20090508
91421700100	EWM2100	599714203	EWF12680W	Electrolux	20081205
91421700102	EWM2100	599720861	EWF12680W	Electrolux	20090731
91421700200	EWM2100	599713026	EWF12480W	Electrolux	20081031
91421700201	EWM2100	599713886	EWF12480W	Electrolux	20081128
91421700202	EWM2100	599718288	EWF12480W	Electrolux	20090410
91421700203	EWM2100	599718965	EWF12480W	Electrolux	20090508
91421700300	EWM1100	599712232	EWF12180W	Electrolux	20081010
91421700301	EWM1100	599713505	EWF12180W	Electrolux	20081121
91421700303	EWM1100	599718966	EWF12180W	Electrolux	20090508
91421700400	EWM2100	599713914	AWF12480W	ArthurMartinElux	20081128
91421700401	EWM2100	599718290	AWF12480W	ArthurMartinElux	20090410
91421700402	EWM2100	599718967	AWF12480W	ArthurMartinElux	20090508
91421700600	EWM2100	599717131	EWF12680W	Electrolux	20090320
91421700801	EWM1100	599719440	AWF12080W	ArthurMartinElux	20090522
91421710100	EWM1100	599714576	ZWH5125	Zanussi	20081219
91421710101	EWM1100	599718816	ZWH5125	Zanussi	20090417
91421710200	EWM1100	599715023	ZWH3125	Zanussi	20090116
91421710201	EWM1100	599718034	ZWH3125	Zanussi	20090403
91421710300	EWM2100	599713516	ZWH6125	Zanussi	20081121
91421710301	EWM2100	599718295	ZWH6125	Zanussi	20090410
91421710302	EWM2100	599718819	ZWH6125	Zanussi	20090501
91421710400	EWM2100	599716895	FWH6125	Faure	20090313
91421710401	EWM2100	599718038	FWH6125	Faure	20090403
91421710402	EWM2100	599719154	FWH6125	Faure	20090508
91421710500	EWM1100	599713027	ZWH5125	Zanussi	20081031
91421710501	EWM1100	599715729	ZWH5125	Zanussi	20090206
91421710503	EWM1100	599719077	ZWH5125	Zanussi	20090508

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91421710600	EWM1100	599713890	FWH5125	Faure	20081128
91421710601	EWM1100	599718296	FWH5125	Faure	20090410
91421710700	EWM1100	599717132	LF1207ELE	Bellavita	20090320
91421710701	EWM1100	599718827	LF1207ELE	Bellavita	20090327
91421710702	EWM1100	599718828	LF1207ELE	Bellavita	20090501
91422510100	EWM1000	599373544	BIW145W	Tricity Bendix	20051021
91422510200	EWM1000	599371918	AWF1440	ArthurMartinElux	20050708
91422510300	EWM1000	599373620	AW1401W	Tricity Bendix	20051021
91422510400	EWM1000	599373854	ZWF1421W	Zanussi-Electrolux	20051104
91422520001	EWM1000	599377516	BIW145W	BENDIX	20060301
91422520002	EWM1000	599704124	BIW145W	BENDIX	20060303
91422520004	EWM1000	599386453	BIW145W	Tricity Bendix	20070119
91422520101	EWM1000	599377508	AW1401W	Tricity Bendix	20060301
91422520102	EWM1000	599704126	AW1401W	Tricity Bendix	20060303
91422520103	EWM1000	599382364	AW1401W	Tricity Bendix	20060830
91422520104	EWM1000	599384823	AW1401W	Tricity Bendix	20060922
91422520201	EWM1000	599377220	AWF1440	ArthurMartinElux	20060317
91422520202	EWM1000	599382370	AWF1440	ArthurMartinElux	20060830
91422520203	EWM1000	599385290	AWF1440	ArthurMartinElux	20060908
91422520301	EWM1000	599377499	ZWF1421W	Zanussi-Electrolux	20060301
91422520303	EWM1000	599382393	ZWF1421W	Zanussi-Electrolux	20060830
91422520304	EWM1000	599384830	ZWF1421W	Zanussi-Electrolux	20060908
91422520500	EWM1000	599383391	AWF1442	ArthurMartinElux	20060728
91422520501	EWM1000	599384817	AWF1442	ArthurMartinElux	20060908
91422520600	EWM1000	599383394	FWG3136	Faure	20060728
91422520601	EWM1000	599383903	FWG3136	Faure	20061027
91422610300	EWM1100	599708344	ZWF14070W1	Zanussi	20080516
91422610301	EWM1100	599716028	ZWF14070W1	Zanussi	20090213
91422610302	EWM1100	599718529	ZWF14070W1	Zanussi	20090417
91422615100	EWM1100	599388950	FWG3139	Faure	20070518
91422615101	EWM1100	599711753	FWG3139	Faure	20080926
91422615102	EWM1100	599716466	FWG3139	Faure	20090227
91422615200	EWM2100	599700142	FWG5139	Faure	20070427
91422615400	EWM1100	599707315	FWG5145	Faure	20080411
91422615401	EWM1100	599711754	FWG5145	Faure	20080926
91422615402	EWM1100	599716169	FWG5145	Faure	20090220
91422615500	EWM1100	599707919	AW1402W	Tricity Bendix	20080425
91422615501	EWM1100	599711770	AW1402W	Tricity Bendix	20080926
91422615502	EWM1100	599716176	AW1402W	Tricity Bendix	20090220
91422615700	EWM1100	599716473	FWG5145	Faure	20090227
91422615701	EWM1100	599718530	FWG5145	Faure	20090417
91422615801	EWM1100	599718697	FWG3139	Faure	20090424
91422700100	EWM2100	599713408	EWF14680W	Electrolux	20081031
91422700101	EWM2100	599715731	EWF14680W	Electrolux	20090206
91422700200	EWM2100	599713028	EWF14480W	Electrolux	20081031
91422700201	EWM2100	599715186	EWF14480W	Electrolux	20090123
91422700202	EWM2100	599719956	EWF14480W	Electrolux	20090619
91422700300	EWM2100	599715193	EWF14280W	Electrolux	20090123
91422700400	EWM2100	599713916	AWF14480W	ArthurMartinElux	20081128
91422700401	EWM2100	599718699	AWF14480W	ArthurMartinElux	20090424
91422700700	EWM2100	599716178	EWF14480W	Electrolux	20090220
91422700701	EWM2100	599718534	EWF14480W	Electrolux	20090417
91422700900	EWM2100	599719624	EWF14280W	Electrolux	20090605
91422710301	EWM2100	599718054	LF1407ELED	Bellavita	20090403
91422710500	EWM2100	599716034	DO1407SI	Domeos	20090213

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91422710501	EWM2100	599718291	DO1407SI	Domeos	20090410
91428102900	EWM1000	599355032	FA615E	Zanussi	20021018
91428102900	EWM1000	599359063	FA615E	Zanussi	20030530
91428103100	EWM1000	599355034	FA825E	Zanussi	20021018
91428103100	EWM1000	599359064	FA825E	Zanussi	20030530
91428103200	EWM1000	599356278	FAE625	Zanussi	20030117
91428103300	EWM1000	599356279	FAE825V	Zanussi	20030117
91428103400	EWM1000	599357154	FA615E	Zanussi	20030307
91428103401	EWM1000	599371851	FA615E	Zanussi	20050708
91428103500	EWM1000	599357156	FA825E	Zanussi	20030307
91428103501	EWM1000	599371854	FA825E	Zanussi	20050708
91428104100	EWM1000	599364028	FAE625	Zanussi	20040416
91428104200	EWM1000	599364031	FAE825V	Zanussi	20040416
91428104201	EWM1000	599371858	FAE825V	Zanussi	20050708
91428104300	EWM1000	599360108	P65E	Zoppas	20030725
91428104301	EWM1000	599371859	P65E	Zoppas	20050708
91428104400	EWM1000	599360110	P80E	Zoppas	20030725
91428104401	EWM1000	599371860	P80E	Zoppas	20050708
91428104900	EWM1000	599364050	LC880E	Corbero	20040423
91428104901	EWM1000	599371863	LC880E	Corbero	20050708
91428105100	EWM1000	599364054	FA835E	Zanussi	20040423
91428105200	EWM1000	599364056	LFV860	Faure	20040423
91428105300	EWM1000	599366740	EWF805	Electrolux	20041001
91428105301	EWM1000	599371866	EWF805	Electrolux	20050708
91428105400	EWM1000	599364059	FA831E	Zanussi	20040423
91428105401	EWM1000	599371867	FA831E	Zanussi	20050708
91428105600	EWM1000	599364947	FA884E	Zanussi	20040618
91428105601	EWM1000	599371870	FA884E	Zanussi	20050708
91428106100	EWM1000	599367437	FA826HYDRO	Zanussi	20041112
91428106101	EWM1000	599371876	FA826HYDRO	Zanussi	20050708
91428106200	EWM1000	599367475	FA678E	Zanussi	20041119
91428106201	EWM1000	599371877	FA678E	Zanussi	20050708
91428106300	EWM1000	599367477	FA878E	Zanussi	20041119
91428106301	EWM1000	599371879	FA878E	Zanussi	20050708
91428106600	EWM1000	599368068	FWF380	Faure	20041231
91428106601	EWM1000	599372065	FWF380	Faure	20050715
91428106700	EWM1000	599369797	ZWF360	Zanussi	20050401
91428106701	EWM1000	599371883	ZWF360	Zanussi	20050708
91428106800	EWM1000	599369804	ZWF380	Zanussi	20050408
91428106801	EWM1000	599371884	ZWF380	Zanussi	20050708
91428107200	EWM1000	599368873	FA825E	Zanussi	20050218
91428107201	EWM1000	599371887	FA825E	Zanussi	20050708
91428107400	EWM1000	599372066	P65E	Zoppas	20050715
91428107500	EWM1000	599372076	P80E	Zoppas	20050715
91428107701	EWM1000	599372276	494279_20394	Privileg	20050729
91428107800	EWM1000	599373538	ZWF382	Zanussi	20051021
91428107900	EWM1000	599373855	ZWF384	Zanussi	20051104
91428108100	EWM1000	599373628	ADV86	Zanussi	20051028
91428108300	EWM1000	599374182	323219_20428	Privileg	20051202
91428110000	EWM1000	599381289	EWF805	Electrolux	20060505
91428110001	EWM1000	599384118	EWF805	Electrolux	20060512
91428110002	EWM1000	599381567	EWF805	Electrolux	20060526
91428110400	EWM1000	599381336	FA826HYDRO	Zanussi	20060505
91428110401	EWM1000	599384121	FA826HYDRO	Zanussi	20060508
91428110402	EWM1000	599384122	FA826HYDRO	Zanussi	20060526

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91428111400	EWM1000	599377768	P65E	Zoppas	20060130
91428111401	EWM1000	599384125	P65E	Zoppas	20060508
91428111500	EWM1000	599377773	P80E	Zoppas	20060130
91428111501	EWM1000	599384126	P80E	Zoppas	20060508
91428111600	EWM1000	599377028	ZWF388	Zanussi	20060317
91428111601	EWM1000	599384127	ZWF388	Zanussi	20060508
91428111602	EWM1000	599384128	ZWF388	Zanussi	20060526
91428111800	EWM1000	599381548	FWF380	Faure	20060505
91428111801	EWM1000	599381559	FWF380	Faure	20060508
91428111802	EWM1000	599381566	FWF380	Faure	20060522
91428111901	EWM1000	599704367	ZWF360	Zanussi	20071123
91428112000	EWM1000	599381236	ZWF380	Zanussi	20060505
91428112001	EWM1000	599380596	ZWF380	Zanussi	20060512
91428112200	EWM1000	599381509	ZWF382	Zanussi	20060505
91428112201	EWM1000	599381513	ZWF382	Zanussi	20060508
91428112202	EWM1000	599381262	ZWF382	Zanussi	20060526
91428112300	EWM1000	599379749	ZWF384	Zanussi	20060505
91428112301	EWM1000	599704130	ZWF384	Zanussi	20060512
91428112302	EWM1000	599386986	ZWF384	Zanussi	20060609
91428112400	EWM1000	599380379	ZWF386	Zanussi	20060505
91428112401	EWM1000	599384131	ZWF386	Zanussi	20060508
91428112402	EWM1000	599384132	ZWF386	Zanussi	20060526
91428112800	EWM1000	599380394	LC880E	Corbero	20060505
91428112801	EWM1000	599384133	LC880E	Corbero	20060508
91428112802	EWM1000	599384134	LC880E	Corbero	20060526
91428113200	EWM1000	599380410	FA678E	Zanussi	20060505
91428113201	EWM1000	599384136	FA678E	Zanussi	20060508
91428113202	EWM1000	599384137	FA678E	Zanussi	20060526
91428113400	EWM1000	599376974	323219_20615	Privileg	20060310
91428113401	EWM1000	599384138	323219_20615	Privileg	20060508
91428113500	EWM1000	599381573	ADV86	Zanussi	20060505
91428113501	EWM1000	599381574	ADV86	Zanussi	20060508
91428113502	EWM1000	599381575	ADV86	Zanussi	20060522
91428113601	EWM1000	599387956	494279_20580	Privileg	20070105
91428113700	EWM1000	599380414	FWF393	Faure	20060505
91428113701	EWM1000	599380418	FWF393	Faure	20060519
91428113702	EWM1000	599380419	FWF393	Faure	20060526
91428114000	EWM1000	599381294	Z16	Zoppas	20060505
91428114001	EWM1000	599381488	Z16	Zoppas	20060508
91428114100	EWM1000	599380744	888_419_09	Lloyds	20060630
91428114200	EWM1000	599385095	LV4060	AEG Electrolux	20061215
91428114300	EWM1000	599385105	LV4080	AEG Electrolux	20061215
91428210400	EWM1100	599702233	ZWF365	Zanussi	20070706
91428210401	EWM1100	599711780	ZWF365	Zanussi	20080926
91428210500	EWM1100	599702232	ZWF385	Zanussi	20070706
91428210501	EWM1100	599711782	ZWF385	Zanussi	20080926
91428210601	EWM1100	599717348	EWF6020W	Electrolux	20090327
91428210700	EWM1100	599702261	ZWF560	Zoppas	20070824
91428210701	EWM1100	599711791	ZWF560	Zanussi	20080704
91428210702	EWM1100	599711792	ZWF560	Zanussi	20080926
91428210800	EWM1100	599702260	ZWF580	Zanussi	20070824
91428210801	EWM1100	599711793	ZWF580	Zanussi	20080926
91428210900	EWM1100	599703722	LC695E	Corbero	20071026
91428210901	EWM1100	599710498	LC695E	Corbero	20080718
91428210902	EWM1100	599711781	LC695E	Corbero	20080926

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91428211000	EWM1100	599703723	LC895E	Corbero	20071026
91428211001	EWM1100	599712034	LC895E	Corbero	20081003
91428211100	EWM1100	599707048	AWF7120W	ArthurMartinElux	20080328
91428211101	EWM1100	599711784	AWF7120W	ArthurMartinElux	20080926
91428211200	EWM1100	599707049	AWF6020W	ArthurMartinElux	20080328
91428211201	EWM1100	599713396	AWF6020W	ArthurMartinElux	20081114
91428211300	EWM1100	599707675	P56	Zoppas	20080418
91428211301	EWM1100	599710506	P56	Zoppas	20080718
91428211302	EWM1100	599711783	P56	Zoppas	20080926
91428211400	EWM1100	599707676	P58	Zoppas	20080418
91428211401	EWM1100	599711786	P58	Zoppas	20080926
91428211500	EWM1100	599707674	Z85	Zoppas	20080418
91428211501	EWM1100	599711787	Z85	Zoppas	20080926
91428211600	EWM1100	599707658	ZWF682	Zanussi	20080418
91428211601	EWM1100	599711794	ZWF682	Zanussi	20080926
91428211700	EWM1100	599710040	ZWF365	Zanussi	20080626
91428211701	EWM1100	599710044	ZWF365	Zanussi	20080704
91428211702	EWM1100	599713398	ZWF365	Zanussi	20081114
91428211800	EWM1100	599710501	ZWF685	Zanussi	20080718
91428211801	EWM1100	599714771	ZWF685	Zanussi	20081226
91428211900	EWM1100	599709549	ZWF684	Zanussi	20080620
91428211901	EWM1100	599713500	ZWF684	Zanussi	20081121
91428212000	EWM1100	599713029	00042498_21050	SILENTIC	20081031
91428212300	EWM1100	599713400	AWF5120W	ArthurMartin	20081114
91428213100	EWM1100	599717572	EWF6120W	Electrolux	20090325
91428213200	EWM1100	599717571	ZWF550	Zanussi	20090325
91428310100	EWM1000	599363502	AW850W	Tricity Bendix	20040319
91428310101	EWM1000	599371896	AW850W	Tricity Bendix	20050708
91428510100	EWM1000	599371334	ZWG385	Zanussi	20050624
91428510200	EWM1000	599371335	P76M	Zoppas	20050624
91428510300	EWM1000	599371336	P86M	Zoppas	20050624
91428510500	EWM1000	599374210	EWF831	Electrolux	20051202
91428510501	EWM1000	599384139	EWF831	Electrolux	20060330
91428510600	EWM1000	599373540	ZWF365	Zanussi	20051021
91428510700	EWM1000	599373541	ZWF386	Zanussi	20051021
91428520001	EWM1000	599378215	P76M	Zoppas	20060217
91428520002	EWM1000	599382298	P76M	Zoppas	20060526
91428520101	EWM1000	599377221	P86M	Zoppas	20060317
91428520102	EWM1000	599382299	P86M	Zoppas	20060526
91428520103	EWM1000	599384855	P86M	Zoppas	20061006
91428520200	EWM1000	599377737	ZWG385	Zanussi	20060130
91428520201	EWM1000	599378213	ZWG385	Zanussi	20060217
91428520202	EWM1000	599382306	ZWG385	Zanussi	20060526
91428520203	EWM1000	599384871	ZWG385	Zanussi	20060915
91428520300	EWM1000	599377738	ZWF365	Zanussi	20060130
91428520301	EWM1000	599378212	ZWF365	Zanussi	20060217
91428520302	EWM1000	599382311	ZWF365	Zanussi	20060526
91428520303	EWM1000	599384904	ZWF365	Zanussi	20060908
91428520400	EWM1000	599377740	ZWF386	Zanussi	20060130
91428520401	EWM1000	599378211	ZWF386	Zanussi	20060217
91428520402	EWM1000	599382317	ZWF386	Zanussi	20060526
91428520403	EWM1000	599384649	ZWF386	Zanussi	20061124
91428520601	EWM1000	599378217	EWF831	Electrolux	20060217
91428520602	EWM1000	599382301	EWF831	Electrolux	20060526
91428520603	EWM1000	599384813	EWF831	Electrolux	20061201

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91428520800	EWM1000	599381496	Z616	Zoppas	20060505
91428520801	EWM1000	599381325	Z616	Zoppas	20060714
91428520802	EWM1000	599384836	Z616	Zoppas	20061013
91428520900	EWM1000	599702237	LV5080	AEG Electrolux	20070608
91428610101	EWM2100	599719317	AWF8260W	ArthurMartinElux	20090515
91428615000	EWM1100	599702239	ZWG380	Zanussi	20070824
91428615001	EWM1100	599711788	ZWG380	Zanussi	20080926
91428615002	EWM1100	599719621	ZWG380	Zanussi	20090605
91428615100	EWM1100	599717629	ZWG585	Zanussi	20090326
91428615101	EWM1100	599719079	ZWG585	Zanussi	20090508
91451011600	EWM2000evo	599365201	L10500VI	AEG	20040702
91451090000	EWM2000evo	599372013	ZJ1218	Zanussi	20050715
91451090100	EWM2000evo	599372167	324885_20357	Privileg	20050722
91451090200	EWM2000evo	599372601	EW1233I	Electrolux	20050909
91451090300	EWM2000evo	599373097	IW1209.2W	Küppersbusch	20050930
91451090400	EWM2000evo	599373995	JWV7814	Juno-Electrolux	20051125
91451090500	EWM2000evo	599373704	EWI1235	Electrolux	20051104
91451090600	EWM2000evo	599372604	L10500VI	AEG Electrolux	20050916
91451090601	EWM2000evo	599374580	L10500VI	AEG Electrolux	20051230
91451090700	EWM2000evo	599374404	L12510VI	AEG Electrolux	20051216
91451090800	EWM2000evo	599372806	L12500VI	AEG Electrolux	20050923
91451090900	EWM2000evo	599373098	L12510VI	AEG Electrolux	20050930
91451091000	EWM2000evo	599373100	L14510VI	AEG Electrolux	20050930
91451091100	EWM2000evo	599374437	EW1418I	Electrolux	20051216
91451091200	EWM2000evo	599372608	LI120JE	Rex-Electrolux	20050916
91451091300	EWM2000evo	599372602	L12810VI	AEG Electrolux	20050909
91451091400	EWM2000evo	599373101	L14510VI	AEG Electrolux	20050930
91451091500	EWM2000evo	599373994	L14510VI	AEG Electrolux	20051125
91451091600	EWM2000evo	599382127	ZJ1218	Zanussi	20060526
91451091700	EWM2000evo	599375229	324885_20539	Privileg	20060120
91451091900	EWM2000evo	599376842	JWV7814	Juno-Electrolux	20060310
91451092000	EWM2000evo	599376843	L12510VI	AEG Electrolux	20060310
91451092100	EWM2000evo	599375465	L12510VI	AEG Electrolux	20060203
91451092200	EWM2000evo	599375469	L14510VI	AEG Electrolux	20060203
91451092300	EWM2000evo	599377256	EW1418I	Electrolux	20060331
91451092400	EWM2000evo	599376844	L14510VI	AEG Electrolux	20060310
91451092500	EWM2000evo	599376847	L14510VI	AEG Electrolux	20060310
91451092600	EWM2000evo	599377449	LI120JE	Rex-Electrolux	20060407
91451092700	EWM2000evo	599376848	L12810VI	AEG Electrolux	20060310
91451092800	EWM2000evo	599375452	EW1233I	Electrolux	20060127
91451092900	EWM2000evo	599377258	EWI1235	Electrolux	20060331
91451093000	EWM2000evo	599383545	JLBIWM1401	John Lewis	20061013
91451110000	EWM1000plus	599372607	LI100E	Rex-Electrolux	20050909
91451110100	EWM1000plus	599373102	ZTI1029	Zanussi	20050930
91451110101	EWM1000plus	599373908	ZTI1029	Zanussi	20051111
91451110200	EWM1000plus	599375374	LI100E	Rex-Electrolux	20060127
91451110300	EWM1000plus	599375998	ZTI1029	Zanussi	20060217
91451110400	EWM1000plus	599379543	L14800VI	AEG Electrolux	20060526
91451110500	EWM1000plus	599379547	AWI1215	ArthurMartinElux	20060526
91451110600	EWM1000plus	599381245	IW1409.1W	Küppersbusch	20060714
91451110700	EWM1000plus	599386803	TBWM1110	Tricity Bendix	20070309
91451110800	EWM1000plus	599389159	FWM12005EI	Franke	20070601
91451110900	EWM1000plus	599704092	LPR712	Prima	20071116
91451130100	EWM2100	599701094	EWG12440W	Electrolux	20070824
91451140000	EWM2100	599702832	EWG14740W	Electrolux	20071012

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451140100	EWM2100	599702841	EWG12740W	Electrolux	20071012
91451290000	EWM2000evo	599379915	QW14700	Husqvarna Electrolux	20060609
91451290001	EWM2000evo	599385638	QW14700	Husqvarna Electrolux	20070119
91451311800	EWM2000evo	599373638	EWN1640	Electrolux	20051028
91451312100	EWM2000evo	599375376	EWN1640	Electrolux	20060127
91451312101	EWM2000evo	599702382	EWN1640	Electrolux	20071005
91451312401	EWM2000evo	599382048	IZ161W	Zanussi-Electrolux	20060811
91451312501	EWM2000evo	599382058	IZ161S	Zanussi-Electrolux	20060811
91451312600	EWM2000evo	599379551	IZ16	Zanussi-Electrolux	20060526
91451313600	EWM2000evo	599379553	RJ612	Rex-Electrolux	20060512
91451313601	EWM2000evo	599379563	RJ612	Rex-Electrolux	20060526
91451313800	EWM2000evo	599379581	EWN1620W	Electrolux	20060526
91451330000	EWM1000plus	599367626	EWN820	Electrolux	20041203
91451330100	EWM1000plus	599369113	EWN1020	Electrolux	20041206
91451330101	EWM1000plus	599372099	EWN1020	Electrolux	20050722
91451330400	EWM1000plus	599376547	EWN1020	Electrolux	20060303
91451330401	EWM1000plus	599380746	EWN1020	Electrolux	20060623
91451360000	EWM2000evo	599372014	RJ120	Rex-Electrolux	20050715
91451360000	EWM2000evo	599373706	RJ120	Rex-Electrolux	20051104
91451360100	EWM2000evo	599372100	RJ1200A	Rex-Electrolux	20050722
91451360200	EWM2000evo	599371838	AWN1280	ArthurMartinElux	20050708
91451360300	EWM2000evo	599371839	AWN1480	ArthurMartinElux	20050708
91451360400	EWM2000evo	599373633	ZWN1220W	Zanussi-Electrolux	20051028
91451360700	EWM2000evo	599375681	ZWN1220W	Zanussi-Electrolux	20060210
91451360900	EWM2000evo	599382710	ZWN1420G	Zanussi-Electrolux	20060526
91451361000	EWM2000evo	599377456	RJ7120	Rex-Electrolux	20060407
91451361100	EWM2000evo	599377458	RJ7120A	Rex-Electrolux	20060407
91451361200	EWM2000evo	599377664	AWN1475	ArthurMartinElux	20060414
91451361300	EWM2000evo	599379583	RJ712	Rex-Electrolux	20060526
91451361400	EWM2000evo	599381405	EWF1470	Electrolux	20060526
91451361500	EWM2000evo	599381392	EWF1470	Electrolux	20060519
91451361700	EWM2000evo	599385915	EWF1470	Electrolux	20070209
91451380000	EWM3000new	599372605	RJ1600VA	Rex-Electrolux	20050909
91451380100	EWM3000new	599372224	AWN1680	ArthurMartinElux	20050729
91451380200	EWM3000new	599373648	ZWN1620W	Zanussi-Electrolux	20051028
91451380300	EWM3000new	599373646	ZWN1620S	Zanussi-Electrolux	20051028
91451380401	EWM3000new	599382087	ZWN1620W	Zanussi-Electrolux	20060811
91451380501	EWM3000new	599382089	ZWN1620S	Zanussi-Electrolux	20060811
91451380600	EWM3000new	599376321	RJ7160TA	Rex-Electrolux	20060303
91451380601	EWM3000new	599380154	RJ7160TA	Rex-Electrolux	20060609
91451380700	EWM3000new	599378020	AWN1680	ArthurMartinElux	20060421
91451380701	EWM3000new	599380168	AWN1680	ArthurMartinElux	20060609
91451380800	EWM3000new	599382808	ZWF1650	Zanussi	20060922
91451520200	EWM1000plus	599362132	350/040-09	Lloyds	20031219
91451520200	EWM1000plus	599364948	350/427-09	Lloyds	20040618
91451520300	EWM1000plus	599362138	350/095-09	Lloyds	20031219
91451520300	EWM1000plus	599364950	350/435-09	Lloyds	20040618
91451520600	EWM1000plus	599364053	L66530	AEG	20040423
91451520800	EWM1000plus	599364956	L62699	AEG	20040625
91451520900	EWM1000plus	599365248	L62622	AEG	20040709
91451521000	EWM1000plus	599366635	L60637	AEG	20041001
91451521100	EWM1000plus	599366379	L64550	AEG	20040917
91451521200	EWM1000plus	599366637	L62560	AEG	20041001
91451521300	EWM1000plus	599366638	L64560	AEG	20041001
91451521400	EWM1000plus	599366641	L66560	AEG	20041001

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451521500	EWM1000plus	599367386	503663_20310	Privileg	20041119
91451521600	EWM1000plus	599367388	767644_20311	Privileg	20041119
91451521700	EWM1000plus	599367391	775542_20312	Privileg	20041119
91451521900	EWM1000plus	599368537	L64560	AEG Electrolux	20050204
91451521901	EWM1000plus	599374583	L64560	AEG Electrolux	20051230
91451522000	EWM1000plus	599368550	L66560	AEG Electrolux	20050204
91451522100	EWM1000plus	599368362	L5211	AEG Electrolux	20050128
91451522101	EWM1000plus	599370108	L5211	AEG Electrolux	20050422
91451522102	EWM1000plus	599374597	L5211	AEG Electrolux	20051230
91451522200	EWM1000plus	599368364	L5411	AEG Electrolux	20050128
91451522201	EWM1000plus	599371358	L5411	AEG Electrolux	20050617
91451522202	EWM1000plus	599374192	L5411	AEG Electrolux	20051209
91451522300	EWM1000plus	599369609	237296_20339	Privileg	20050325
91451522400	EWM1000plus	599369610	141799_20340	Privileg	20050325
91451522500	EWM1000plus	599370818	L53600	AEG Electrolux	20050520
91451522501	EWM1000plus	599374194	L53600	AEG Electrolux	20051209
91451522600	EWM1000plus	599372555	L60890	AEG Electrolux	20050909
91451522700	EWM1000plus	599372557	L62890	AEG Electrolux	20050909
91451522800	EWM1000plus	599372560	L60822	AEG Electrolux	20050909
91451522801	EWM1000plus	599374247	L60822	AEG Electrolux	20051216
91451522900	EWM1000plus	599372562	L62822	AEG Electrolux	20050909
91451522901	EWM1000plus	599384092	L62822	AEG Electrolux	20051223
91451523000	EWM1000plus	599372563	L62890	AEG Electrolux	20050916
91451523001	EWM1000plus	599374248	L62890	AEG Electrolux	20051216
91451523100	EWM1000plus	599373099	CLARA868	AEG Electrolux	20050927
91451523101	EWM1000plus	599374245	CLARA868	AEG Electrolux	20051216
91451523200	EWM1000plus	599372208	L64540	AEG Electrolux	20050729
91451523201	EWM1000plus	599374598	L64540	AEG Electrolux	20051230
91451523300	EWM1000plus	599372210	L66561	AEG Electrolux	20050729
91451523301	EWM1000plus	599373792	L66561	AEG Electrolux	20051111
91451523400	EWM1000plus	599373103	CLARA1068	AEG Electrolux	20050930
91451523500	EWM1000plus	599374933	L62890	AEG Electrolux	20060113
91451523501	EWM1000plus	599385624	L62890	AEG Electrolux	20070119
91451523600	EWM1000plus	599375240	L64540	AEG Electrolux	20060120
91451523700	EWM1000plus	599375473	L66561	AEG Electrolux	20060203
91451523800	EWM1000plus	599374934	CLARA868	AEG Electrolux	20060113
91451523900	EWM1000plus	599374935	CLARA1068	AEG Electrolux	20060113
91451523901	EWM1000plus	599385625	CLARA1068	AEG Electrolux	20070119
91451524000	EWM1000plus	599376877	L60890	AEG Electrolux	20060310
91451524001	EWM1000plus	599385639	L60890	AEG Electrolux	20070119
91451524100	EWM1000plus	599376879	L62890	AEG Electrolux	20060310
91451524101	EWM1000plus	599385626	L62890	AEG Electrolux	20070119
91451524200	EWM1000plus	599376881	L60822	AEG Electrolux	20060310
91451524201	EWM1000plus	599385631	L60822	AEG Electrolux	20070119
91451524300	EWM1000plus	599377260	L62822	AEG Electrolux	20060331
91451524301	EWM1000plus	599385627	L62822	AEG Electrolux	20070119
91451524400	EWM1000plus	599376884	L53600	AEG Electrolux	20060310
91451524500	EWM1000plus	599382723	237296_20568	Privileg	20060526
91451524901	EWM1000plus	599376887	L64560	AEG Electrolux	20060310
91451525000	EWM1000plus	599376889	L60800	AEG Electrolux	20060310
91451525100	EWM1000	599383550	L1060EL	AEG Electrolux	20061013
91451525101	EWM1000plus	599388568	L1060EL	AEG Electrolux	20070511
91451525200	EWM1000plus	599379590	L1260EL	AEG Electrolux	20060526
91451525300	EWM1000plus	599381293	L72805	AEG Electrolux	20060714
91451525600	EWM1000plus	599379859	QW14660	Husqvarna Electrolux	20060526

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451525601	EWM1000plus	599385628	QW14660	Husqvarna Electrolux	20070119
91451525800	EWM1000plus	599384070	L60800	AEG Electrolux	20061103
91451525801	EWM1000plus	599385640	L60800	AEG Electrolux	20070119
91451525900	EWM1000plus	599385132	L64680	AEG Electrolux	20061208
91451525901	EWM1000plus	599385632	L64680	AEG Electrolux	20070119
91451526000	EWM1000plus	599388852	L62680	AEG Electrolux	20070525
91451526100	EWM1000plus	599388853	L66680	AEG Electrolux	20070525
91451540100	EWM1000plus	599365256	LF652D	Westinghouse	20040709
91451540300	EWM1000plus	599376013	ZKU220	Zanussi	20060217
91451630400	EWM2000evo	599360304	EWF1234	Electrolux	20030818
91451630401	EWM2000evo	599361615	EWF1234	Electrolux	20031129
91451630500	EWM2000evo	599360429	EWF1434	Electrolux	20030905
91451630501	EWM2000evo	599361987	EWF1434	Electrolux	20031205
91451630600	EWM2000evo	599360658	EWF1634	Electrolux	20030919
91451630700	EWM2000evo	599368685	EWF1234	Electrolux	20050211
91451630800	EWM2000evo	599368686	EWF1434	Electrolux	20050211
91451630900	EWM2000evo	599361362	EWF1045	Electrolux	20031031
91451630901	EWM2000evo	599369423	EWF1045	Electrolux	20050318
91451631000	EWM2000evo	599361364	EWF1245	Electrolux	20031031
91451631001	EWM2000evo	599369426	EWF1245	Electrolux	20050318
91451631100	EWM2000evo	599362703	EWF734	Electrolux	20040213
91451631101	EWM2000evo	599369986	EWF734	Electrolux	20050415
91451631200	EWM2000evo	599362707	EWF934	Electrolux	20040213
91451631300	EWM2000evo	599362875	EWF1034	Electrolux	20040220
91451631301	EWM2000evo	599372101	EWF1034	Electrolux	20050722
91451631400	EWM2000evo	599362712	EWF1234	Electrolux	20040213
91451631401	EWM2000evo	599369430	EWF1234	Electrolux	20050318
91451631500	EWM2000evo	599362715	EWF1434	Electrolux	20040213
91451631501	EWM2000evo	599369431	EWF1434	Electrolux	20050318
91451631600	EWM2000evo	599367418	EWF1426	Electrolux	20041119
91451631601	EWM2000evo	599369434	EWF1426	Electrolux	20050318
91451631700	EWM2000evo	599364466	EWF925	Electrolux	20040521
91451631701	EWM2000evo	599369458	EWF925	Electrolux	20050318
91451631800	EWM2000evo	599365208	FJE1205	Zanussi	20040702
91451631801	EWM2000evo	599369466	FJE1205	Zanussi	20050318
91451631900	EWM2000evo	599365347	179947_20268	Privileg	20040716
91451632000	EWM2000evo	599365410	657648_20269	Privileg	20040716
91451632100	EWM2000evo	599365411	ZWF1434W	Zanussi-Electrolux	20040716
91451632200	EWM2000evo	599365724	IF9450	Zanker	20040730
91451632300	EWM2000evo	599367968	EF7480	Zanker	20041231
91451632400	EWM2000evo	599367971	EF7680	Zanker	20041231
91451632500	EWM2000evo	599370711	ZWF1231W	Zanussi-Electrolux	20050513
91451632600	EWM2000evo	599370713	ZWF1431W	Zanussi-Electrolux	20050513
91451632700	EWM2000evo	599370970	ZWF1431S	Zanussi-Electrolux	20050527
91451632800	EWM2000evo	599370714	ZWF1631W	Zanussi-Electrolux	20050513
91451632900	EWM2000evo	599372015	EWF1255	Electrolux	20050715
91451633000	EWM2000evo	599370397	EWF1455	Electrolux	20050429
91451633800	EWM2000evo	599370553	EWF1236	Electrolux	20050506
91451633900	EWM2000evo	599370555	EWF1436	Electrolux	20050506
91451634000	EWM2000evo	599370556	EWF1636	Electrolux	20050506
91451634100	EWM2000evo	599370821	IF9650	Zanker	20050520
91451634500	EWM2000evo	599372263	IF9250	Zanker	20050805
91451634600	EWM2000evo	599375687	EWF1255	Electrolux	20060210
91451634601	EWM2000evo	599380735	EWF1255	Electrolux	20060623
91451634700	EWM2000evo	599375693	EWF1455	Electrolux	20060210

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451634701	EWM2000evo	599380734	EWF1455	Electrolux	20060623
91451635500	EWM2000evo	599378688	EWF1640	Electrolux	20060210
91451635501	EWM2000evo	599382068	EWF1640	Electrolux	20060811
91451635900	EWM2000evo	599374202	EF7281	Zanker	20051209
91451636000	EWM2000evo	599374203	EF7481	Zanker	20051209
91451636200	EWM2000evo	599376322	EWF1234	Electrolux	20060303
91451636201	EWM2000evo	599382069	EWF1234	Electrolux	20060811
91451636300	EWM2000evo	599376326	EWF1434	Electrolux	20060303
91451636301	EWM2000evo	599382071	EWF1434	Electrolux	20060811
91451636400	EWM2000evo	599377666	EWF1426	Electrolux	20060414
91451636401	EWM2000evo	599380723	EWF1426	Electrolux	20060623
91451636700	EWM2000evo	599376328	EWF1636	Electrolux	20060303
91451636701	EWM2000evo	599382092	EWF1636	Electrolux	20060811
91451636800	EWM2000evo	599377669	IF9250	Zanker	20060414
91451636801	EWM2000evo	599382082	IF9250	Zanker	20060811
91451636802	EWM2000evo	599385794	IF9250	Zanker	20070209
91451636900	EWM2000evo	599383555	IF9450	Zanker	20061013
91451636901	EWM2000evo	599702387	IF9450	Zanker	20071005
91451637000	EWM2000evo	599379561	444_607_09	Zanker	20060505
91451637001	EWM2000evo	599379566	IF9650	Zanker	20060526
91451637002	EWM2000evo	599388557	IF9650	Zanker	20070511
91451637100	EWM2000evo	599383217	EF7281	Zanker	20061006
91451637200	EWM2000evo	599383218	EF7481	Zanker	20061006
91451637500	EWM2000evo	599376329	EWF1236	Electrolux	20060303
91451637501	EWM2000evo	599380720	EWF1236	Electrolux	20060623
91451637502	EWM2000evo	599385796	EWF1236	Electrolux	20070209
91451637600	EWM2000evo	599376893	EWF1436	Electrolux	20060310
91451637601	EWM2000evo	599380698	EWF1436	Electrolux	20060623
91451637700	EWM2000evo	599376330	EWF1234	Electrolux	20060303
91451637701	EWM2000evo	599380697	EWF1234	Electrolux	20060623
91451637800	EWM2000evo	599376333	EWF1434	Electrolux	20060303
91451637801	EWM2000evo	599380669	EWF1434	Electrolux	20060623
91451637900	EWM2000evo	599376336	EWF925	Electrolux	20060303
91451637901	EWM2000evo	599380667	EWF925	Electrolux	20060623
91451638100	EWM2000evo	599378021	FJE1205	Zanussi	20060421
91451638101	EWM2000evo	599380652	FJE1205	Zanussi	20060623
91451638102	EWM2000evo	599386201	FJE1205	Zanussi	20070216
91451638300	EWM2000evo	599379574	767684_20685	Privileg	20060526
91451638400	EWM2000evo	599383219	EF7681	Zanker	20061006
91451638401	EWM2000evo	599702391	EF7681	Zanker	20071005
91451700000	EWM1000plus	599359927	RI800XC	Rex	20030711
91451700100	EWM1000plus	599359929	RI1000XC	Rex	20030711
91451700200	EWM1000plus	599359931	RI1200XC	Rex	20030711
91451700300	EWM1000plus	599359932	RI1600XC	Rex	20030711
91451700400	EWM1000plus	599360430	P1200EMD	Zoppas	20030905
91451700500	EWM1000plus	599360145	EWF1225	Electrolux	20030725
91451700501	EWM1000plus	599361664	EWF1225	Electrolux	20031128
91451700600	EWM1000plus	599361884	EW1080F	Electrolux	20031128
91451700700	EWM1000plus	599362770	EW1080F	Electrolux	20040213
91451700800	EWM1000plus	599362717	P1200EMD	Zoppas	20040213
91451700900	EWM1000plus	599360662	RQ1109I	Rex	20030926
91451701100	EWM1000	599361370	EWF1425	Electrolux	20031031
91451701200	EWM1000plus	599362428	EWF1088	Electrolux	20040130
91451701300	EWM1000plus	599362429	EWF1288	Electrolux	20040130
91451701301	EWM1000plus	599373801	EWF1288	Electrolux	20051111

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451701400	EWM1000plus	599362430	EWF1688	Electrolux	20040130
91451701500	EWM1000plus	599363136	ZWH520	Zanussi	20040227
91451701600	EWM1000plus	599363438	EW1080F	Electrolux	20040319
91451701700	EWM1000plus	599362291	EWF935	Electrolux	20040116
91451701800	EWM1000plus	599362292	EWF1035	Electrolux	20040116
91451701900	EWM1000plus	599362294	EWF1045	Electrolux	20040116
91451702000	EWM1000plus	599362730	EWF1025	Electrolux	20040213
91451702100	EWM1000plus	599362737	EWF1225	Electrolux	20040213
91451702400	EWM1000plus	599362927	AWF1260	ArthurMartinElux	20040220
91451702500	EWM1000plus	599363440	AWF1030	ArthurMartinElux	20040319
91451702600	EWM1000plus	599363851	RQ1100IXC	Rex-Electrolux	20040416
91451703000	EWM1000plus	599363853	RI1000XC	Rex-Electrolux	20040416
91451703100	EWM1000plus	599363855	RI1200XC	Rex-Electrolux	20040416
91451703200	EWM1000plus	599363824	FL1090	Zanussi	20040409
91451703300	EWM1000plus	599364168	FL1090ALU	Zanussi	20040430
91451703400	EWM1000plus	599363826	FL1290	Zanussi	20040409
91451703500	EWM1000plus	599364242	AWF1430	ArthurMartinElux	20040507
91451703800	EWM1000plus	599364856	RTF5141	Rosenlew	20040618
91451703900	EWM1000plus	599364535	EWF1423	Electrolux	20040528
91451704000	EWM1000plus	599364412	435555_20266	Privileg	20040521
91451704100	EWM1000plus	599365420	RI800XC	Rex-Electrolux	20040716
91451704300	EWM1000plus	599369774	EWF1268	Electrolux	20050404
91451704400	EWM1000plus	599367291	JLWM1201	John Lewis	20041112
91451704401	EWM1000plus	599373258	JLWM1201	John Lewis	20051007
91451704500	EWM1000plus	599367293	JLWM1402	John Lewis	20041112
91451704501	EWM1000plus	599373335	JLWM1402	John Lewis	20051007
91451704600	EWM1000plus	599371610	EWF1145	Electrolux	20050701
91451704700	EWM1000plus	599367492	EWF1045S	Electrolux	20041126
91451704800	EWM1000plus	599371427	ZWX1506W	Zanussi-Electrolux	20050624
91451704801	EWM1000plus	599374600	ZWX1506W	Zanussi-Electrolux	20051230
91451704900	EWM1000plus	599371430	ZWX1606W	Zanussi-Electrolux	20050624
91451704901	EWM1000plus	599374605	ZWX1606W	Zanussi-Electrolux	20051230
91451705000	EWM1000plus	599367864	EWF1230	Electrolux	20041218
91451705100	EWM1000plus	599367868	EWF1430	Electrolux	20041218
91451705200	EWM1000plus	599367870	EWF1630	Electrolux	20041218
91451705300	EWM1000plus	599368205	EWF1230	Electrolux	20050114
91451705400	EWM1000plus	599368207	EWF1430	Electrolux	20050114
91451705500	EWM1000plus	599368209	EWF1630	Electrolux	20050114
91451705600	EWM1000plus	599367442	447022_20308	Privileg	20041119
91451705700	EWM1000plus	599368690	EWF1435	Electrolux	20050211
91451705800	EWM1000plus	599368699	AWF1370	ArthurMartinElux	20050211
91451705900	EWM1000plus	599368820	AWF1470	ArthurMartinElux	20050218
91451706000	EWM1000plus	599368132	156647_20326	Privileg	20050107
91451706100	EWM1000plus	599369808	AWF1370S	ArthurMartinElux	20050408
91451706200	EWM1000plus	599370725	RI7000	Rex-Electrolux	20050513
91451706300	EWM1000plus	599370401	EWF1425	Electrolux	20050429
91451706400	EWM1000plus	599370404	EWF1625	Electrolux	20050429
91451706500	EWM1000plus	599371283	EWF1430	Electrolux	20050617
91451706600	EWM1000plus	599371285	P107XD	Zoppas	20050617
91451707200	EWM1000plus	599371431	765348_20393	Privileg	20050624
91451707300	EWM1000plus	599372584	P107XD	Zoppas	20050909
91451707500	EWM1000plus	599373534	508/152-09	Lloyds	20051021
91451707600	EWM1000plus	599373535	508/160-09	Lloyds	20051021
91451707700	EWM1000plus	599704820	EWF1268	Electrolux	20071207
91451708100	EWM1000plus	599374812	EWF1288	Electrolux	20060113

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451708101	EWM1000plus	599378949	EWF1288	Electrolux	20060505
91451708300	EWM1000plus	599375241	765348_20515	Privileg	20060120
91451708500	EWM1000plus	599376017	P107XD	Zoppas	20060217
91451708501	EWM1000plus	599378955	P107XD	Zoppas	20060505
91451708700	EWM1000plus	599375421	RI7000	Rex-Electrolux	20060203
91451708701	EWM1000plus	599378960	RI7000	Rex-Electrolux	20060505
91451708800	EWM1000plus	599375394	EWF1145	Electrolux	20060127
91451708801	EWM1000plus	599378963	EWF1145	Electrolux	20060505
91451709400	EWM1000plus	599376549	EWF1430	Electrolux	20060303
91451709401	EWM1000plus	599378965	EWF1430	Electrolux	20060505
91451709500	EWM1000plus	599375411	EWF1425	Electrolux	20060127
91451709501	EWM1000plus	599383774	EWF1425	Electrolux	20060421
91451709600	EWM1000plus	599375412	EWF1625	Electrolux	20060127
91451709601	EWM1000plus	599382094	EWF1625	Electrolux	20060811
91451709700	EWM1000plus	599375422	RTF5141	Rosenlew	20060203
91451709701	EWM1000plus	599378968	RTF5141	Rosenlew	20060505
91451709800	EWM1000plus	599376550	EWF1225	Electrolux	20060303
91451709801	EWM1000plus	599378969	EWF1225	Electrolux	20060505
91451709900	EWM1000plus	599379927	EWF1423	Electrolux	20060609
91451710000	EWM1000plus	599376551	EWF1025	Electrolux	20060303
91451710001	EWM1000plus	599378977	EWF1025	Electrolux	20060505
91451710100	EWM1000plus	599376018	JLWM1201	John Lewis	20060217
91451710101	EWM1000plus	599378990	JLWM1201	John Lewis	20060505
91451710200	EWM1000plus	599376020	JLWM1402	John Lewis	20060217
91451710201	EWM1000plus	599378991	JLWM1402	John Lewis	20060505
91451710800	EWM1000plus	599379557	EWF1427	Electrolux	20060526
91451710900	EWM1000plus	599379559	EWF1295	Electrolux	20060526
91451711200	EWM1000plus	599377672	JLWM1202	John Lewis	20060331
91451711201	EWM1000plus	599378992	JLWM1202	John Lewis	20060505
91451711300	EWM1000plus	599377673	JLWM1403	John Lewis	20060331
91451711301	EWM1000plus	599378993	JLWM1403	John Lewis	20060505
91451711500	EWM1000plus	599379457	695864_20666	Privileg	20060519
91451711700	EWM1000plus	599383557	EWF1297	Electrolux	20061013
91451711900	EWM1000plus	599388859	ZIF520SKD	Zanussi	20070525
91451720000	EWM1000plus	599360431	SF6250	Zanker	20030905
91451720100	EWM1000plus	599360432	SF6450	Zanker	20030905
91451720200	EWM1000plus	599360434	SF6650	Zanker	20030905
91451720300	EWM1000plus	599360436	EWF1020	Electrolux	20030905
91451720301	EWM1000plus	599361668	EWF1020	Electrolux	20031128
91451720302	EWM1000plus	599374244	EWF1020	Electrolux	20051216
91451720401	EWM1000plus	599364817	EWF1423	Electrolux	20040611
91451720500	EWM1000plus	599360758	EWF1422	Electrolux	20031003
91451720501	EWM1000plus	599363325	EWF1422	Electrolux	20040305
91451720600	EWM1000plus	599364060	EWF1221	Electrolux	20040423
91451720601	EWM1000plus	599384091	EWF1221	Electrolux	20051223
91451720700	EWM1000plus	599364063	EWF1421	Electrolux	20040423
91451720800	EWM1000plus	599361033	EWF830	Electrolux	20031031
91451720801	EWM1000plus	599374630	EWF830	Electrolux	20051230
91451720900	EWM1000plus	599361038	EWF1030	Electrolux	20031024
91451720901	EWM1000plus	599374632	EWF1030	Electrolux	20051230
91451721000	EWM1000plus	599361039	EWF1230	Electrolux	20031031
91451721001	EWM1000plus	599374239	EWF1230	Electrolux	20051223
91451721100	EWM1000plus	599361674	FE1205	Zanussi	20031128
91451721100	EWM1000plus	599366674	FE1205	Zanussi	20041008
91451721101	EWM1000plus	599374238	FE1205	Zanussi	20051223

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451721200	EWM1000plus	599361869	238549_20231	Privileg	20031128
91451721300	EWM1000plus	599361872	914345_20232	Privileg	20031128
91451721400	EWM1000plus	599361874	604382_20233	Privileg	20031128
91451721500	EWM1000plus	599361379	EWF1220	Electrolux	20031031
91451721600	EWM1000plus	599361381	EWF1420	Electrolux	20031031
91451721601	EWM1000plus	599374959	EWF1420	Electrolux	20051230
91451721700	EWM1000plus	599362183	PF4350	Zanker	20031219
91451721800	EWM1000plus	599362184	PF4350S	Zanker	20031223
91451722100	EWM1000plus	599362722	EWF1020	Electrolux	20040213
91451722101	EWM1000plus	599374634	EWF1020	Electrolux	20060106
91451722200	EWM1000plus	599362844	AWF1235	ArthurMartinElux	20040220
91451722300	EWM1000plus	599362845	AWF1435	ArthurMartinElux	20040220
91451722301	EWM1000plus	599374237	AWF1435	ArthurMartinElux	20051223
91451722500	EWM1000plus	599362608	382523_20259	Privileg	20040206
91451722501	EWM1000plus	599374973	382523_20259	Privileg	20051230
91451722600	EWM1000plus	599363385	ZE12	Zanussi-Electrolux	20040312
91451722700	EWM1000plus	599363386	ZE14	Zanussi-Electrolux	20040312
91451722800	EWM1000plus	599363389	ZE16	Zanussi-Electrolux	20040312
91451722900	EWM1000plus	599363860	RI700	Rex-Electrolux	20040416
91451723000	EWM1000plus	599363510	ZWF1230W	Zanussi-Electrolux	20040326
91451723001	EWM1000plus	599384093	ZWF1230W	Zanussi-Electrolux	20050909
91451723100	EWM1000plus	599363512	ZWF1430W	Zanussi-Electrolux	20040326
91451723200	EWM1000plus	599363518	ZWF1430S	Zanussi-Electrolux	20040326
91451723300	EWM1000plus	599363520	ZWF1630W	Zanussi-Electrolux	20040326
91451723400	EWM1000plus	599364170	TF1462E	Elektro Helios	20040430
91451723401	EWM1000plus	599374978	TF1462E	Elektro Helios	20051230
91451723500	EWM1000plus	599364453	FD1226	Zanussi-Electrolux	20040521
91451723600	EWM1000plus	599364454	FD1426	Zanussi-Electrolux	20040521
91451723700	EWM1000plus	599364461	FD1626	Zanussi-Electrolux	20040521
91451723900	EWM1000plus	599364464	FE1416	Zanussi	20040521
91451724000	EWM1000plus	599366808	FR1250W	Zanussi-Electrolux	20041015
91451724200	EWM1000plus	599369789	FR1450W	Zanussi-Electrolux	20040920
91451724300	EWM1000plus	599363779	118907_20263	Privileg	20040402
91451724301	EWM1000plus	599374974	118907_20263	Privileg	20051230
91451724500	EWM1000plus	599364467	EWF900	Electrolux	20040521
91451724501	EWM1000plus	599374960	EWF900	Electrolux	20060106
91451724600	EWM1000plus	599364857	RTF5120	Rosenlew	20040618
91451724700	EWM1000plus	599364858	RTF5140	Rosenlew	20040618
91451724800	EWM1000plus	599364971	FE1005	Zanussi	20040625
91451724801	EWM1000plus	599374976	FE1005	Zanussi	20051230
91451724900	EWM1000plus	599365941	EW1080F	Electrolux	20040827
91451725000	EWM1000plus	599364537	EWF1424	Electrolux	20040528
91451725001	EWM1000plus	599374234	EWF1424	Electrolux	20051223
91451725100	EWM1000plus	599364405	577808_20264	Privileg	20040521
91451725200	EWM1000plus	599364408	628649_20265	Privileg	20040521
91451725400	EWM1000plus	599364540	PF4450	Zanker	20040528
91451725500	EWM1000plus	599364541	PF4450S	Zanker	20040528
91451725600	EWM1000plus	599365947	SF6260	Zanker	20040827
91451725700	EWM1000plus	599365955	SF6460	Zanker	20040827
91451725800	EWM1000plus	599365956	SF6660	Zanker	20040827
91451725900	EWM1000plus	599365957	SF5600	Zanker	20040827
91451726000	EWM1000plus	599364974	360614_20287	Privileg	20040625
91451726200	EWM1000plus	599366346	597085_20290	Privileg	20040917
91451726300	EWM1000plus	599366374	289046_20291	Privileg	20040917
91451726400	EWM1000plus	599372313	EWF1621	Electrolux	20050422

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451726600	EWM1000plus	599367494	EWF1623	Electrolux	20041126
91451726601	EWM1000plus	599374231	EWF1623	Electrolux	20051223
91451726700	EWM1000plus	599366645	ZE16	Zanussi	20041001
91451726701	EWM1000plus	599374635	ZE16	Zanussi	20051230
91451726800	EWM1000plus	599367123	EWF1222	Electrolux	20041029
91451726801	EWM1000plus	599384095	EWF1222	Electrolux	20051223
91451726900	EWM1000plus	599367125	ZWX1505W	Zanussi-Electrolux	20041029
91451726902	EWM1000plus	599384097	ZWX1505W	Zanussi-Electrolux	20051223
91451727000	EWM1000plus	599366382	ZWX1605W	Zanussi-Electrolux	20040917
91451727001	EWM1000plus	599384099	ZWX1605W	Zanussi-Electrolux	20051028
91451727002	EWM1000plus	599374636	ZWX1605W	Zanussi-Electrolux	20060106
91451727100	EWM1000plus	599367627	EWF1225	Electrolux	20041203
91451727101	EWM1000plus	599374230	EWF1225	Electrolux	20051223
91451727200	EWM1000plus	599367628	EWF1425	Electrolux	20041203
91451727201	EWM1000plus	599374958	EWF1425	Electrolux	20060106
91451727300	EWM1000plus	599367630	EWF1220	Electrolux	20041203
91451727301	EWM1000plus	599374961	EWF1220	Electrolux	20060106
91451727500	EWM1000plus	599367878	EWF1220	Electrolux	20041218
91451727600	EWM1000plus	599367879	EWF1420	Electrolux	20041217
91451727601	EWM1000plus	599374993	EWF1420	Electrolux	20060106
91451727700	EWM1000plus	599367881	EWF1620	Electrolux	20041218
91451727800	EWM1000plus	599368828	EWF1220	Electrolux	20050218
91451727900	EWM1000plus	599368832	EWF1420	Electrolux	20050218
91451727901	EWM1000plus	599374989	EWF1420	Electrolux	20060106
91451728000	EWM1000plus	599368834	EWF1620	Electrolux	20050218
91451728001	EWM1000plus	599374992	EWF1620	Electrolux	20060106
91451728100	EWM1000plus	599367444	775600_20306	Privileg	20041119
91451728101	EWM1000plus	599374964	775600_20306	Privileg	20060106
91451728200	EWM1000plus	599367447	340593_20307	Privileg	20041119
91451728201	EWM1000plus	599374965	340593_20307	Privileg	20060106
91451728300	EWM1000plus	599367197	025894_20305	Privileg	20041105
91451728400	EWM1000plus	599367963	EF4240	Zanker	20041231
91451728500	EWM1000plus	599368274	EF4440	Zanker	20050121
91451728600	EWM1000plus	599367975	EF6440	Zanker	20041231
91451728800	EWM1000plus	599368276	EF6440S	Zanker	20050121
91451728900	EWM1000plus	599367977	EF6640	Zanker	20041231
91451729000	EWM1000plus	599368838	AWF1270	ArthurMartinElux	20050218
91451729001	EWM1000plus	599374991	AWF1270	ArthurMartinElux	20060106
91451729100	EWM1000plus	599369477	ZWG5141	Zanussi	20050318
91451729101	EWM1000plus	599374971	ZWG5141	Zanussi	20060113
91451729200	EWM1000plus	599369478	ZWG5161	Zanussi	20050318
91451729300	EWM1000plus	599368702	ZE16	Zanussi	20050211
91451729400	EWM2000evo	599369483	EWF935	Electrolux	20050318
91451729401	EWM1000plus	599384098	EWF935	Electrolux	20051223
91451729500	EWM2000evo	599369485	EWF1035	Electrolux	20050318
91451729501	EWM1000plus	599374228	EWF1035	Electrolux	20051223
91451729600	EWM1000plus	599369488	EWF1244	Electrolux	20050318
91451729700	EWM1000plus	599368566	EWF1444	Electrolux	20050204
91451729800	EWM1000plus	599368585	EWF1644	Electrolux	20050204
91451729900	EWM2000evo	599369491	EWF1045	Electrolux	20050318
91451729901	EWM1000plus	599374227	EWF1045	Electrolux	20051223
91451730100	EWM1000plus	599368134	799243_20325	Privileg	20050107
91451730200	EWM1000plus	599368370	029055_20331	Privileg	20050128
91451730300	EWM1000plus	599368598	EF3200	Zanker	20050204
91451730400	EWM1000plus	599368600	EF3400	Zanker	20050204

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451730500	EWM2000evo	599369493	EWF1287	Electrolux	20050318
91451730501	EWM1000plus	599374225	EWF1287	Electrolux	20051223
91451730600	EWM1000plus	599369264	EFX6250FML	Zanker	20050311
91451730601	EWM1000plus	599374995	EFX6250FML	Zanker	20060106
91451730700	EWM1000plus	599369496	EFX6250SFM	Zanker	20050318
91451730800	EWM1000plus	599369265	EFX6450FML	Zanker	20050311
91451730900	EWM1000plus	599369267	EFX6650FML	Zanker	20050311
91451730901	EWM1000plus	599384100	EFX6650FML	Zanker	20051223
91451731000	EWM1000plus	599369100	557/245-09	Lloyds	20050225
91451731001	EWM1000plus	599374242	557/245-09	Lloyds	20051216
91451731200	EWM1000plus	599369987	EWF1422	Electrolux	20050415
91451731201	EWM1000plus	599374980	EWF1422	Electrolux	20060106
91451731700	EWM1000plus	599371612	EWF1430	Electrolux	20050701
91451731901	EWM1000plus	599374223	EWF1230	Electrolux	20051223
91451732001	EWM1000plus	599374222	EWF1430	Electrolux	20051223
91451732101	EWM1000plus	599374220	EWF1630	Electrolux	20051223
91451732200	EWM1000plus	599370811	RE680XC	Rex-Electrolux	20050516
91451732201	EWM1000plus	599374983	RE680XC	Rex-Electrolux	20060106
91451732300	EWM1000plus	599370813	RE6100XC	Rex-Electrolux	20050516
91451732301	EWM1000plus	599374985	RE6100XC	Rex-Electrolux	20060106
91451732400	EWM1000plus	599370814	RE6120XC	Rex-Electrolux	20050516
91451732401	EWM1000plus	599374986	RE6120XC	Rex-Electrolux	20060106
91451732700	EWM1000plus	599371361	EF3600	Zanker	20050617
91451732701	EWM1000plus	599374241	EF3600	Zanker	20051216
91451732800	EWM1000plus	599371434	980545_20354	Privileg	20050624
91451732801	EWM1000plus	599374968	980545_20354	Privileg	20060106
91451732900	EWM1000plus	599371436	970068_20355	Privileg	20050624
91451732901	EWM1000plus	599374966	970068_20355	Privileg	20060106
91451733000	EWM1000plus	599370827	946137_20356	Privileg	20050520
91451733001	EWM1000plus	599374970	946137_20356	Privileg	20060106
91451733100	EWM1000plus	599370815	181507_20358	Privileg	20050516
91451733200	EWM1000plus	599370816	424747_20359	Privileg	20050516
91451733300	EWM1000plus	599372016	762327_20380	Privileg	20050715
91451733400	EWM1000plus	599370835	EF4642	Zanker	20050520
91451733500	EWM1000plus	599370836	390368_20377	Privileg	20050520
91451733501	EWM1000plus	599375001	390368_20377	Privileg	20060106
91451733600	EWM1000plus	599370837	971534_20378	Privileg	20050520
91451733601	EWM1000plus	599375003	971534_20378	Privileg	20060106
91451733700	EWM1000plus	599371446	EF4242	Zanker	20050624
91451733800	EWM1000plus	599371447	EF4442	Zanker	20050624
91451733900	EWM1000plus	599371614	AWF1272	ArthurMartinElux	20050701
91451733901	EWM1000plus	599374996	AWF1272	ArthurMartinElux	20060106
91451734000	EWM1000plus	599372606	CMF616	Marijnen	20050909
91451734001	EWM1000plus	599374219	CMF616	Marijnen	20051223
91451734100	EWM1000plus	599372213	EWF735	Electrolux	20050729
91451734200	EWM1000plus	599372214	EWF935	Electrolux	20050729
91451734201	EWM1000plus	599374224	CMF616	Electrolux	20051223
91451734300	EWM1000plus	599372216	EWF1035	Electrolux	20050729
91451734400	EWM1000plus	599372264	EWF936S	Electrolux	20050805
91451734401	EWM1000plus	599374221	EWF936S	Electrolux	20051223
91451734500	EWM1000plus	599372218	ZWF1218W	Zanussi-Electrolux	20050729
91451734900	EWM1000plus	599372217	EWF1229	Electrolux	20050729
91451734901	EWM1000plus	599374999	EWF1229	Electrolux	20060106
91451735000	EWM1000plus	599372219	EWF1429	Electrolux	20050729
91451735001	EWM1000plus	599375004	EWF1429	Electrolux	20060106

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451735100	EWM1000plus	599372220	EWF1629	Electrolux	20050729
91451735101	EWM1000plus	599375006	EWF1629	Electrolux	20060106
91451735200	EWM1000plus	599372613	ZWF1441W	Zanussi-Electrolux	20050916
91451735201	EWM1000plus	599373259	ZWF1441W	Zanussi-Electrolux	20051007
91451735202	EWM1000plus	599375009	ZWF1441W	Zanussi-Electrolux	20060106
91451735300	EWM1000plus	599372223	ZWF1241W	Zanussi-Electrolux	20050729
91451735301	EWM1000plus	599373336	ZWF1241W	Zanussi-Electrolux	20051007
91451735302	EWM1000plus	599375025	ZWF1241W	Zanussi-Electrolux	20060106
91451735500	EWM1000plus	599372615	RTF5121	Rosenlew	20050916
91451735600	EWM1000plus	599374018	EF4244 (PRIVILEG)	Zanker	20051125
91451735601	EWM1000plus	599375029	EF4244	Zanker	20060106
91451735700	EWM1000plus	599374019	EF4444 (PRIVILEG)	Zanker	20051125
91451735701	EWM1000plus	599374822	EF4444	Zanker	20060113
91451735800	EWM1000plus	599374025	EF4644 (PRIVILEG)	Zanker	20051125
91451735801	EWM1000plus	599375030	EF4644	Zanker	20060106
91451735900	EWM1000plus	599374819	FE1205	Zanussi	20060113
91451735901	EWM1000plus	599386303	FE1205	Zanussi	20070223
91451736000	EWM1000plus	599374828	EWF1220	Electrolux	20060120
91451736100	EWM1000plus	599374829	EWF1420	Electrolux	20060113
91451736200	EWM1000plus	599374830	EWF1620	Electrolux	20060120
91451736300	EWM1000plus	599374833	EWF1230	Electrolux	20060113
91451736400	EWM1000plus	599374834	EWF1430	Electrolux	20060113
91451736500	EWM1000plus	599374835	EWF1630	Electrolux	20060113
91451736600	EWM1000plus	599374837	EWF1420	Electrolux	20060113
91451736601	EWM1000plus	599385797	EWF1420	Electrolux	20070209
91451736700	EWM1000plus	599374839	EWF1220	Electrolux	20060113
91451736701	EWM1000plus	599385798	EWF1220	Electrolux	20070209
91451736900	EWM1000plus	599374840	EWF1225	Electrolux	20060113
91451736901	EWM1000plus	599385799	EWF1225	Electrolux	20070209
91451737000	EWM1000plus	599374841	EWF1425	Electrolux	20060113
91451737001	EWM1000plus	599385800	EWF1425	Electrolux	20070209
91451737100	EWM1000plus	599375415	EWF1244	Electrolux	20060127
91451737101	EWM1000plus	599385801	EWF1244	Electrolux	20070209
91451737200	EWM1000plus	599374844	EWF1444	Electrolux	20060113
91451737201	EWM1000plus	599385802	EWF1444	Electrolux	20070209
91451737300	EWM1000plus	599374845	EWF1644	Electrolux	20060113
91451737400	EWM1000plus	599375417	ZE16	Zanussi	20060127
91451737401	EWM1000plus	599388556	ZE16	Zanussi	20070511
91451737600	EWM1000plus	599374015	EWF1410	Electrolux	20051125
91451737601	EWM1000plus	599375007	EWF1410	Electrolux	20060106
91451738100	EWM1000plus	599374438	980545_20354	Privileg	20051216
91451738200	EWM1000plus	599374439	970068_20355	Privileg	20051216
91451738300	EWM1000plus	599374430	946137_20356	Privileg	20051216
91451738400	EWM1000plus	599374255	775600_20306	Privileg	20051216
91451738500	EWM1000plus	599374253	340593_20307	Privileg	20051216
91451738600	EWM1000plus	599375243	390368_20513	Privileg	20060120
91451738700	EWM1000plus	599375244	971534_20514	Privileg	20060120
91451738800	EWM1000plus	599374932	EWF1435	Electrolux	20060113
91451739000	EWM1000plus	599374921	EWF1430	Electrolux	20060120
91451739100	EWM1000plus	599374919	EWF1630	Electrolux	20060113
91451739200	EWM1000plus	599374924	EWF1220	Electrolux	20060113
91451739300	EWM1000plus	599374925	EWF1420	Electrolux	20060113
91451739400	EWM1000plus	599382734	EWF1620	Electrolux	20060526
91451739500	EWM1000plus	599374927	CMF616	Marijnen	20060120
91451739600	EWM1000plus	599374928	ZWG5141	Zanussi	20060113

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451739700	EWM1000plus	599375426	ZWG5161	Zanussi	20060203
91451739800	EWM1000plus	599373740	DO1400SI	Domeos	20051104
91451739801	EWM1000plus	599374987	DO1400SI	Domeos	20060106
91451739900	EWM1000plus	599374929	ZE16	Zanussi	20060120
91451739901	EWM1000plus	599388555	ZE16	Zanussi	20070511
91451740000	EWM1000plus	599383816	EWF1221	Electrolux	20060224
91451740001	EWM1000plus	599385821	EWF1221	Electrolux	20070209
91451740100	EWM1000plus	599375427	RE6100XC	Rex-Electrolux	20060127
91451740200	EWM1000plus	599375428	RE6120XC	Rex-Electrolux	20060203
91451740201	EWM1000plus	599385827	RE6120XC	Rex-Electrolux	20070209
91451740600	EWM1000plus	599375390	EWF935	Electrolux	20060127
91451740700	EWM1000plus	599375392	EWF1035	Electrolux	20060127
91451740800	EWM1000plus	599375400	EWF1045	Electrolux	20060127
91451740900	EWM1000plus	599375407	EWF1045S	Electrolux	20060127
91451741000	EWM1000plus	599375409	EWF1287	Electrolux	20060127
91451741100	EWM1000plus	599375413	EWF735	Electrolux	20060210
91451741200	EWM1000plus	599378022	EWF935	Electrolux	20060421
91451741300	EWM1000plus	599376557	EWF1035	Electrolux	20060303
91451741400	EWM1000plus	599377263	EWF936S	Electrolux	20060331
91451741401	EWM1000plus	599385818	EWF936S	Electrolux	20070209
91451741500	EWM1000plus	599376902	EWF1229	Electrolux	20060310
91451741501	EWM1000plus	599385822	EWF1229	Electrolux	20070209
91451741600	EWM1000plus	599376558	EWF1429	Electrolux	20060303
91451741601	EWM1000plus	599385819	EWF1429	Electrolux	20070209
91451741700	EWM1000plus	599377283	EWF1629	Electrolux	20060127
91451741800	EWM1000plus	599375247	FE1416	Zanussi	20060120
91451742001	EWM1000plus	599376904	RTF5121	Rosenlew	20060310
91451742100	EWM1000plus	599375423	RTF5120	Rosenlew	20060203
91451742200	EWM1000plus	599375424	RTF5140	Rosenlew	20060203
91451742400	EWM1000plus	599376908	TF1462E	Elektro Helios	20060310
91451742500	EWM1000plus	599376338	EWF1020	Electrolux	20060303
91451742600	EWM1000plus	599376021	FE1005	Zanussi	20060217
91451742700	EWM1000plus	599376339	EWF1222	Electrolux	20060303
91451742800	EWM1000plus	599376340	EWF1422	Electrolux	20060303
91451742900	EWM1000plus	599376341	EWF1020	Electrolux	20060303
91451742901	EWM1000plus	599385824	EWF1020	Electrolux	20070209
91451743000	EWM1000plus	599380867	888_079_09	Zanker	20060623
91451743100	EWM1000plus	599379645	888_079_05	Zanker	20060526
91451743200	EWM1000plus	599704837	EFX6450FML	Zanker	20071214
91451743300	EWM1000plus	599383871	EFX6650FML	Zanker	20060505
91451743400	EWM1000plus	599375431	EF4244	Zanker	20060127
91451743500	EWM1000plus	599383769	EF4444	Zanker	20060203
91451743600	EWM1000plus	599383771	EF4644	Zanker	20060203
91451744900	EWM1000plus	599377487	118907_20567	Privileg	20060407
91451745100	EWM1000plus	599379647	EWF1410	Electrolux	20060526
91451745200	EWM1000plus	599374117	724401_20457	Privileg	20051202
91451745300	EWM1000plus	599374118	232515_20458	Privileg	20051202
91451745500	EWM1000plus	599376343	EWF900	Electrolux	20060303
91451745900	EWM1000plus	599378025	DO1400SI	Domeos	20060421
91451746000	EWM1000plus	599380868	557_245_00	Lloyds	20060623
91451746200	EWM1000plus	599383874	EF3200	Zanker	20060519
91451746400	EWM1000plus	599375429	919470_20456	Privileg	20060203
91451746500	EWM1000plus	599379650	FWG5136	Faure	20060526
91451746501	EWM1000plus	599385816	FWG5136	Faure	20070209
91451746600	EWM1000plus	599376346	879436_20667	Privileg	20060303

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451746700	EWM1000plus	599376351	316134_20668	Privileg	20060303
91451746800	EWM1000plus	599376349	546750_20441	Privileg	20060303
91451746900	EWM1000plus	599378997	312292_20665	Privileg	20060505
91451747300	EWM1000plus	599383560	EWF1030	Electrolux	20061013
91451747400	EWM1000plus	599379656	072349_20682	Privileg	20060526
91451747500	EWM1000plus	599379657	ZWF1441W	Zanussi-Electrolux	20060526
91451750000	EWM2000evo	599360438	EWF1245	Electrolux	20030905
91451750001	EWM2000evo	599361620	EWF1245	Electrolux	20031121
91451750100	EWM2000evo	599360439	EWF1445	Electrolux	20030905
91451750101	EWM2000evo	599361622	EWF1445	Electrolux	20031121
91451750200	EWM2000evo	599360308	EWF1645	Electrolux	20030825
91451750201	EWM2000evo	599361623	EWF1645	Electrolux	20031121
91451750202	EWM2000evo	599369499	EWF1645	Electrolux	20050318
91451750300	EWM2000evo	599361481	EWF1445	Electrolux	20031107
91451750301	EWM2000evo	599370110	EWF1445	Electrolux	20050422
91451750400	EWM2000evo	599361992	EW1280F	Electrolux	20031205
91451750500	EWM2000evo	599362772	EW1280F	Electrolux	20040213
91451750501	EWM2000evo	599369988	EW1280F	Electrolux	20050415
91451750502	EWM2000evo	599372017	EW1280F	Electrolux	20050715
91451750700	EWM2000evo	599362849	EWF1245	Electrolux	20040220
91451750701	EWM2000evo	599369991	EWF1245	Electrolux	20050415
91451750800	EWM2000evo	599362745	EWF1245	Electrolux	20040213
91451750801	EWM2000evo	599369992	EWF1245	Electrolux	20050415
91451750900	EWM2000evo	599362747	EWF1445	Electrolux	20040213
91451750901	EWM2000evo	599369995	EWF1445	Electrolux	20050415
91451751000	EWM2000evo	599362749	EWF1645	Electrolux	20040213
91451751100	EWM2000evo	599362852	AWF1460	ArthurMartinElux	20040220
91451751101	EWM2000evo	599371363	AWF1460	ArthurMartinElux	20050617
91451751200	EWM2000evo	599362853	AWF1660	ArthurMartinElux	20040220
91451751300	EWM2000evo	599363444	ZWF1450W	Zanussi-Electrolux	20040319
91451751400	EWM2000evo	599363446	ZWF1650W	Zanussi-Electrolux	20040319
91451751401	EWM2000evo	599371364	ZWF1650W	Zanussi-Electrolux	20050617
91451751500	EWM2000evo	599363521	ZWF1240W	Zanussi-Electrolux	20040326
91451751501	EWM2000evo	599369997	ZWF1240W	Zanussi-Electrolux	20050415
91451751600	EWM2000evo	599363522	ZWF1440W	Zanussi-Electrolux	20040326
91451751601	EWM2000evo	599370000	ZWF1440W	Zanussi-Electrolux	20050415
91451751700	EWM2000evo	599363523	ZWF1640W	Zanussi-Electrolux	20040326
91451751701	EWM2000evo	599370003	ZWF1640W	Zanussi-Electrolux	20050415
91451751800	EWM2000evo	599364065	ZWF1640S	Zanussi-Electrolux	20040423
91451751801	EWM2000evo	599370010	ZWF1640S	Zanussi-Electrolux	20050415
91451752000	EWM3000new	599365579	R1200ITS	Rex-Electrolux	20040723
91451752100	EWM3000new	599365593	R1600ITS	Rex-Electrolux	20040723
91451752500	EWM3000new	599366386	AWF1660	ArthurMartinElux	20040917
91451752600	EWM3000new	599369116	EWF1645	Electrolux	20041214
91451752700	EWM3000new	599366575	EWF1646	Electrolux	20040924
91451752800	EWM3000new	599365432	233629_20270	Privileg	20040716
91451753000	EWM2000evo	599368852	EWF1440	Electrolux	20050218
91451753200	EWM2000evo	599368861	EWF1440	Electrolux	20050218
91451753400	EWM2000evo	599369104	EWF1447	Electrolux	20050225
91451753600	EWM2000evo	599369501	EWF1289	Electrolux	20050318
91451753700	EWM2000evo	599371448	ZWF1451W	Zanussi-Electrolux	20050624
91451753800	EWM2000evo	599370702	EWF1249	Electrolux	20050513
91451753900	EWM2000evo	599370704	EWF1449	Electrolux	20050513
91451754000	EWM2000evo	599371367	EWF1246	Electrolux	20050617
91451754100	EWM2000evo	599372624	EWF1444	Electrolux	20050909

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451754200	EWM2000evo	599372626	ZWF1237W	Zanussi-Electrolux	20050916
91451754300	EWM2000evo	599372267	ZWF1437W	Zanussi-Electrolux	20050805
91451754500	EWM2000evo	599376912	EWF1289	Electrolux	20060310
91451754501	EWM2000evo	599378995	EWF1289	Electrolux	20060505
91451754600	EWM2000evo	599377493	EWF1246	Electrolux	20060407
91451754601	EWM2000evo	599383862	EWF1246	Electrolux	20060421
91451754700	EWM2000evo	599376559	EWF1447	Electrolux	20060303
91451754701	EWM2000evo	599379002	EWF1447	Electrolux	20060505
91451754900	EWM2000evo	599376563	EWF1249	Electrolux	20060303
91451754901	EWM2000evo	599379004	EWF1249	Electrolux	20060505
91451755000	EWM2000evo	599376566	EWF1449	Electrolux	20060303
91451755001	EWM2000evo	599379005	EWF1449	Electrolux	20060505
91451755100	EWM2000evo	599376568	EWF1245	Electrolux	20060303
91451755101	EWM2000evo	599383868	EWF1245	Electrolux	20060421
91451755400	EWM2000evo	599377268	EWF1499	Electrolux	20060331
91451755401	EWM2000evo	599379008	EWF1499	Electrolux	20060505
91451770000	EWM1000plus	599363526	ZWF1217W	Zanussi-Electrolux	20040326
91451770001	EWM1000plus	599367887	ZWF1217W	Zanussi-Electrolux	20041217
91451770100	EWM1000plus	599368703	ZE12	Zanussi	20050211
91451770101	EWM1000plus	599370014	ZE12	Zanussi	20050415
91451770200	EWM1000plus	599368704	ZE14	Zanussi	20050211
91451770202	EWM1000plus	599370018	ZE14	Zanussi	20050415
91451770300	EWM1000plus	599370666	EWF840	Electrolux	20050506
91451770400	EWM1000plus	599370669	EWF1040	Electrolux	20050506
91451770401	EWM1000plus	599373799	EWF1040	Electrolux	20051111
91451770500	EWM1000plus	599370670	EWF1240	Electrolux	20050506
91451770600	EWM1000plus	599374441	FE1006	Zanussi	20051216
91451770700	EWM1000plus	599374155	FE1206	Zanussi	20051202
91451770800	EWM1000plus	599374442	FE1406	Zanussi	20051216
91451771100	EWM1000plus	599381332	EWF840	Electrolux	20060714
91451771200	EWM1000plus	599374910	EWF1040	Electrolux	20060113
91451771300	EWM1000plus	599374911	EWF1240	Electrolux	20060113
91451771301	EWM1000plus	599379012	EWF1240	Electrolux	20060505
91451771400	EWM1000plus	599375432	FE1006	Zanussi	20060127
91451771500	EWM1000plus	599375433	FE1206	Zanussi	20060127
91451771501	EWM1000plus	599379013	FE1206	Zanussi	20060505
91451771600	EWM1000plus	599375435	FE1406	Zanussi	20060127
91451771700	EWM1000plus	599378036	ZE12	Zanussi	20060331
91451771701	EWM1000plus	599379016	ZE12	Zanussi	20060505
91451771800	EWM1000plus	599374913	ZE14	Zanussi	20060120
91451780000	EWM3000new	599367300	JLWM1603	John Lewis	20041112
91451780100	EWM3000new	599370417	EWF1647	Electrolux	20050429
91451780300	EWM3000new	599368879	EWF1640	Electrolux	20050218
91451780400	EWM3000new	599368881	EWF1640	Electrolux	20050218
91451780500	EWM3000new	599371619	ZWF1651W	Zanussi-Electrolux	20050701
91451780600	EWM3000new	599371620	ZWV1651S	Zanussi-Electrolux	20050701
91451780700	EWM3000new	599371827	EWF1655	Electrolux	20050708
91451780800	EWM3000new	599370707	EWF1649	Electrolux	20050513
91451780900	EWM3000new	599371370	RI7200TS	Rex-Electrolux	20050617
91451781000	EWM3000new	599371372	RI7600TS	Rex-Electrolux	20050617
91451781200	EWM3000new	599372221	EWF1649	Electrolux	20050729
91451781300	EWM3000new	599373379	EWF1645	Electrolux	20051014
91451781400	EWM3000new	599374204	EWF1645	Electrolux	20051209
91451781500	EWM3000new	599376362	EWF1655	Electrolux	20060303
91451781501	EWM3000new	599379179	EWF1655	Electrolux	20060505

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91451781502	EWM3000new	599380176	EWF1655	Electrolux	20060609
91451781601	EWM3000new	599380185	EWF1649	Electrolux	20060609
91451781701	EWM3000new	599382095	EWF1645	Electrolux	20060811
91451781800	EWM3000new	599377503	RI7210TS	Rex-Electrolux	20060407
91451781801	EWM3000new	599379180	RI7210TS	Rex-Electrolux	20060505
91451781802	EWM3000new	599380192	RI7210TS	Rex-Electrolux	20060609
91451781901	EWM3000new	599382096	RI7600TS	Rex-Electrolux	20060811
91451782000	EWM3000new	599376368	EWF1646	Electrolux	20060303
91451782001	EWM3000new	599379182	EWF1646	Electrolux	20060505
91451782002	EWM3000new	599380199	EWF1646	Electrolux	20060609
91451782100	EWM3000new	599376381	EWF1647	Electrolux	20060303
91451782102	EWM3000new	599380209	EWF1647	Electrolux	20060609
91451782200	EWM3000new	599376385	EWF1649	Electrolux	20060303
91451782201	EWM3000new	599379183	EWF1649	Electrolux	20060505
91451782202	EWM3000new	599380218	EWF1649	Electrolux	20060609
91451782300	EWM3000new	599377519	JLWM1603	John Lewis	20060407
91451782301	EWM3000new	599379185	JLWM1603	John Lewis	20060505
91451782302	EWM3000new	599380221	JLWM1603	John Lewis	20060609
91451782400	EWM3000new	599378040	EWF1645	Electrolux	20060407
91451782402	EWM3000new	599380233	EWF1645	Electrolux	20060609
91451800500	EWM1100	599706240	ZWC85010W	Zanussi-Electrolux	20080229
91451810000	EWM2100	599389971	RWS12610W	Rex-Electrolux	20070622
91451810100	EWM2100	599389975	RWS10410W	Rex-Electrolux	20070622
91451810101	EWM2100	599711931	RWS10410W	Rex-Electrolux	20081017
91451810200	EWM2100	599701096	RWS10410S	Rex-Electrolux	20070824
91451810201	EWM2100	599711932	RWS10410S	Rex-Electrolux	20081017
91451810300	EWM2100	599389983	EWS10410W	Electrolux	20070629
91451810301	EWM2100	599711935	EWS10410W	Electrolux	20081017
91451810400	EWM2100	599389987	EWS12410W	Electrolux	20070629
91451810401	EWM2100	599711936	EWS12410W	Electrolux	20081017
91451810500	EWM2100	599389972	EWS10610W	Electrolux	20070622
91451810600	EWM2100	599389973	EWS12610W	Electrolux	20070622
91451810700	EWM2100	599702047	EWS12410W	Electrolux	20070921
91451810701	EWM2100	599711940	EWS12410W	Electrolux	20081017
91451810900	EWM2100	599706243	ZWC10510W	Zanussi-Electrolux	20080229
91451820000	EWM2100	599700416	EWS10710W	Electrolux	20070713
91451820100	EWM2100	599701258	EWS12710W	Electrolux	20070824
91451900000	EWM1100	599706091	ZWC6050W	Zanussi-Electrolux	20080222
91451900100	EWM1100	599706096	ZWC7050W	Zanussi-Electrolux	20080222
91451900200	EWM1100	599706097	ZWC5050W	Zanussi-Electrolux	20080222
91451900300	EWM1100	599706098	ZWC5055W	Zanussi-Electrolux	20080222
91451910000	EWM2100	599706099	ZWC85050W	Zanussi-Electrolux	20080222
91451910101	EWM2100	599709051	EWC10550W	Electrolux	20080613
91451910300	EWM2100	599706101	ZWC85055W	Zanussi-Electrolux	20080222
91452000000	EWM1000	599377800	ZWF1415W	Zanussi-Electrolux	20060414
91452000001	EWM1000	599385815	ZWF1415W	Zanussi-Electrolux	20070209
91452000100	EWM1000	599379283	F1046	Zanussi	20060519
91452000200	EWM1000	599378018	F1246	Zanussi	20060331
91452000201	EWM1000	599379188	F1246	Zanussi	20060505
91452000203	EWM1000	599384216	F1246	Zanussi	20061103
91452000205	EWM1000	599385820	F1246	Zanussi	20070209
91452000300	EWM1000	599379299	TF1234E	Elektro Helios	20060519
91452000302	EWM1000	599384218	TF1234E	Elektro Helios	20061103
91452000304	EWM1000	599385814	TF1234E	Elektro Helios	20070209
91452000400	EWM1000	599381388	783016_20406	Privileg	20060714

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452000500	EWM1000	599380873	497203_20404	Privileg	20060623
91452000600	EWM1000	599380875	362749_20405	Privileg	20060623
91452000800	EWM1000	599381486	ZWF1226	Zanussi	20060714
91452000801	EWM1000	599383664	ZWF1226	Zanussi	20061020
91452001100	EWM1000	599385607	KWG3100	Zanker	20070119
91452001200	EWM1000	599385608	KWG3120	Zanker	20070119
91452010000	EWM1000plus	599379448	ZWF1038	Zanussi	20060519
91452010002	EWM1000plus	599707796	ZWF1038	Zanussi	20080425
91452010100	EWM1000plus	599379449	ZWF1238	Zanussi	20060519
91452010101	EWM1000plus	599384220	ZWF1238	Zanussi	20061103
91452010103	EWM1000plus	599385843	ZWF1238	Zanussi	20070209
91452010200	EWM1000plus	599379450	ZWF1438	Zanussi	20060519
91452010300	EWM1000plus	599379451	ZWF1440	Zanussi	20060519
91452010400	EWM1000plus	599380592	ZWF1438	Zanussi	20060623
91452010500	EWM1000plus	599385853	KWG5120	Zanker	20070209
91452010600	EWM1000plus	599385852	KWG5140	Zanker	20070209
91452020000	EWM1000	599378003	R60A	Rex-Electrolux	20060421
91452020001	EWM1000	599380753	R60A	Rex-Electrolux	20060623
91452020002	EWM1000	599383666	R60A	Rex-Electrolux	20061020
91452020100	EWM1000	599378026	R65A	Rex-Electrolux	20060421
91452020101	EWM1000	599383667	R65A	Rex-Electrolux	20061020
91452020200	EWM1000	599379390	R12	Rex-Electrolux	20060519
91452020201	EWM1000	599383668	R12	Rex-Electrolux	20061020
91452020300	EWM1000	599379393	R16	Rex-Electrolux	20060519
91452020301	EWM1000	599383670	R16	Rex-Electrolux	20061020
91452020400	EWM1000	599378056	LB560	Rex-Electrolux	20060421
91452020401	EWM1000	599383672	LB560	Rex-Electrolux	20061020
91452020500	EWM1000	599378060	LB580	Rex-Electrolux	20060421
91452020501	EWM1000	599383673	LB580	Rex-Electrolux	20061020
91452020600	EWM1000	599379396	L508	Rex-Electrolux	20060519
91452020601	EWM1000	599383674	L508	Rex-Electrolux	20061020
91452020700	EWM1000	599379398	L510	Rex-Electrolux	20060519
91452020701	EWM1000	599383677	L510	Rex-Electrolux	20061020
91452021000	EWM1000	599379401	T160SP	Rex-Electrolux	20060519
91452021001	EWM1000	599383678	T160SP	Rex-Electrolux	20061020
91452021100	EWM1000	599381399	ZWF826	Zanussi	20060714
91452021101	EWM1000	599384221	ZWF826	Zanussi	20061103
91452021200	EWM1000	599380876	ZWF1026	Zanussi	20060623
91452021201	EWM1000	599383679	ZWF1026	Zanussi	20061020
91452021203	EWM1000	599708451	ZWF1026	Zanussi	20080530
91452025000	EWM1100	599715364	ZF205	Zoppas	20090207
91452025200	EWM1100	599715532	P56	Zoppas	20090213
91452025300	EWM1100	599715327	P58	Zoppas	20090206
91452026300	EWM1100	599719354	RWF8142W	Rex-Electrolux	20090522
91452026400	EWM1100	599719363	RWF8045W	Rex-Electrolux	20090522
91452026500	EWM1100	599719283	RWF10045W	Rex-Electrolux	20090515
91452026600	EWM1100	599719369	EWF8048W	Electrolux	20090522
91452026700	EWM1100	599719895	RWF10140W	Rex-Electrolux	20090619
91452040405	EWM1100	599715677	EWF10040W	Electrolux	20090214
91452041801	EWM1100	599710126	RWF10049W	Rex-Electrolux	20080718
91452042100	EWM1100	599700001	P506	Zoppas	20070629
91452042200	EWM1100	599700004	P508	Zoppas	20070629
91452042300	EWM1100	599700005	P510	Zoppas	20070629
91452042301	EWM1100	599707826	P510	Zoppas	20080425
91452042400	EWM1100	599388071	Z105	Zoppas	20070420

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452042500	EWM1100	599701289	FWF3128S	Faure	20070824
91452042600	EWM1100	599700847	423076_20936	Privileg	20070727
91452042700	EWM1100	599700848	073535_20937	Privileg	20070727
91452043400	EWM1100	599706143	ZWF3145	Zanussi	20080222
91452043800	EWM1100	599709522	EWF8047W	Electrolux	20080627
91452043900	EWM1100	599710738	WA508E	Primotecq	20080815
91452044000	EWM1100	599715153	ZWF3125	Zanussi	20090131
91452044001	EWM1100	599718159	ZWF3125	Zanussi	20090417
91452050003	EWM2100	599707544	EWF10240W	Electrolux	20080418
91452050400	EWM2100	599701487	EWF14240W	Electrolux	20070831
91452080001	EWM1100	599719297	P68	Zoppas	20090515
91452080201	EWM1100	599719301	P611	Zoppas	20090515
91452080401	EWM1100	599719807	ZF206	Zoppas	20090612
91452080600	EWM1100	599719166	RWP10170W	Rex-Electrolux	20090417
91452080601	EWM1100	599719302	RWP10170W	Rex-Electrolux	20090515
91452080701	EWM1100	599719305	RWP8170W	Rex-Electrolux	20090515
91452080801	EWM1100	599719168	RWP6170W	Rex-Electrolux	20090515
91452080901	EWM1100	599719162	RWP8075W	Rex-Electrolux	20090515
91452081001	EWM1100	599719170	RWP10075W	Rex-Electrolux	20090515
91452081101	EWM1100	599719306	RWP12075W	Rex-Electrolux	20090515
91452081200	EWM1100	599721430	EWP10075W	Electrolux	20090904
91452081600	EWM1100	599719811	ZF2461	Zoppas	20090612
91452090001	EWM2100	599719416	RWP12470W	Rex-Electrolux	20090522
91452100000	EWM1000	599376575	ZWF1021W	Zanussi-Electrolux	20060303
91452100001	EWM1000	599386052	ZWF1021W	Zanussi-Electrolux	20070105
91452100003	EWM1000	599386203	ZWF1021W	Zanussi-Electrolux	20070216
91452100100	EWM1000	599376577	ZWF1221W	Zanussi-Electrolux	20060303
91452100101	EWM1000	599383712	ZWF1221W	Zanussi-Electrolux	20061027
91452100200	EWM1000	599376580	ZWF1221S	Zanussi-Electrolux	20060303
91452100201	EWM1000	599383713	ZWF1221S	Zanussi-Electrolux	20061027
91452100300	EWM1000	599376232	ZWF1421W	Zanussi-Electrolux	20060224
91452100301	EWM1000	599383714	ZWF1421W	Zanussi-Electrolux	20061027
91452100400	EWM1000	599376581	ZWF1421S	Zanussi-Electrolux	20060303
91452100401	EWM1000	599383715	ZWF1421S	Zanussi-Electrolux	20061027
91452100500	EWM1000	599376582	ZWF1621W	Zanussi-Electrolux	20060303
91452100501	EWM1000	599383744	ZWF1621W	Zanussi-Electrolux	20061027
91452100503	EWM1000	599388548	ZWF1621W	Zanussi-Electrolux	20070511
91452100600	EWM1000	599383836	ZWF1621S	Zanussi-Electrolux	20060303
91452100601	EWM1000	599383745	ZWF1621S	Zanussi-Electrolux	20061027
91452100700	EWM1000	599376583	ZWF1521W	Zanussi-Electrolux	20060303
91452100800	EWM1000	599378065	F1446	Zanussi	20060421
91452100900	EWM1000	599379331	F1247	Zanussi	20060519
91452101000	EWM1000	599379332	F1447	Zanussi	20060519
91452101100	EWM1000	599383564	F1647	Zanussi	20061013
91452101200	EWM1000	599379370	F1646	Zanussi	20060519
91452101202	EWM1000	599388547	F1646	Zanussi	20070511
91452101300	EWM1000	599379378	TF1434E	Elektro Helios	20060519
91452101400	EWM1000	599379389	TF1254E	Elektro Helios	20060519
91452101500	EWM1000	599379453	T620SP	Rex-Electrolux	20060519
91452101501	EWM1000	599383746	T620SP	Rex-Electrolux	20061027
91452101600	EWM1000	599701264	F1645	Zanussi	20070831
91452101700	EWM1000	599381578	F1648	Zanussi	20060721
91452101702	EWM1000	599388546	F1648	Zanussi	20070511
91452102000	EWM1000	599384068	239359_20731	Privileg	20061103
91452102001	EWM1000	599386569	239359_20731	Privileg	20070309

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452102100	EWM1000	599384071	868028_20732	Privileg	20061103
91452103200	EWM1000	599700228	888_914	Lloyds	20070706
91452103300	EWM1000	599701844	SF2400N	Zanker	20070921
91452110000	EWM1000plus	599377533	AWF1270	ArthurMartinElux	20060407
91452110002	EWM1000plus	599388563	AWF1270	ArthurMartinElux	20070511
91452110200	EWM1000plus	599376915	ZWX1505W	Zanussi-Electrolux	20060310
91452110202	EWM1000plus	599388585	ZWX1505W	Zanussi-Electrolux	20070511
91452110300	EWM1000plus	599376603	ZWF1241W	Zanussi-Electrolux	20060303
91452110302	EWM1000plus	599388582	ZWF1241W	Zanussi-Electrolux	20070511
91452110400	EWM1000plus	599376605	ZWF1218W	Zanussi-Electrolux	20060303
91452110402	EWM1000plus	599386786	ZWF1218W	Zanussi-Electrolux	20070309
91452110700	EWM1000plus	599379454	TF1464E	Elektro Helios	20060519
91452110702	EWM1000plus	599386820	TF1464E	Elektro Helios	20070316
91452110800	EWM1000plus	599380883	ZWF1432W	Zanussi-Electrolux	20060623
91452110802	EWM1000plus	599386815	ZWF1432W	Zanussi-Electrolux	20070316
91452110900	EWM1000plus	599381485	ZWF1432S	Zanussi-Electrolux	20060714
91452110902	EWM1000plus	599386816	ZWF1432S	Zanussi-Electrolux	20070316
91452111000	EWM1000plus	599382685	ZWF1632W	Zanussi-Electrolux	20060915
91452111002	EWM1000plus	599388567	ZWF1632W	Zanussi-Electrolux	20070511
91452111100	EWM1000plus	599381587	ZWF1111W	Zanussi-Electrolux	20060721
91452111200	EWM1000plus	599381528	ZWF1311W	Zanussi-Electrolux	20060721
91452111300	EWM1000plus	599381583	RTF5126	Rosenlew	20060721
91452111302	EWM1000plus	599386821	RTF5126	Rosenlew	20070316
91452111400	EWM1000plus	599381584	RTF5142	Rosenlew	20060721
91452111402	EWM1000plus	599702185	RTF5142	Rosenlew	20071005
91452111500	EWM1000plus	599381585	RTF5122	Rosenlew	20060721
91452111502	EWM1000plus	599702187	RTF5122	Rosenlew	20071005
91452111600	EWM1000plus	599381781	460514_20740	Privileg	20060728
91452111601	EWM1000plus	599386885	460514_20740	Privileg	20070326
91452111900	EWM1000plus	599381484	504456_20698	Privileg	20060714
91452112000	EWM1000plus	599381097	610636_20699	Privileg	20060630
91452112100	EWM1000plus	599381098	282129_20778	Privileg	20060630
91452112200	EWM1000plus	599381100	222714_20697	Privileg	20060630
91452112201	EWM1000plus	599386886	222714_20697	Privileg	20070326
91452112300	EWM1000plus	599383212	FE1446	Zanussi	20061006
91452112302	EWM1000plus	599386822	FE1446	Zanussi	20070316
91452112303	EWM1000plus	599705327	FE1446	Zanussi	20080111
91452112400	EWM1000plus	599383565	FE1646	Zanussi	20061013
91452112402	EWM1000plus	599388565	FE1646	Zanussi	20070511
91452112403	EWM1000plus	599708418	FE1646	Zanussi	20080530
91452112500	EWM1000plus	599381286	732075_20693	Privileg	20060714
91452112501	EWM1000plus	599386884	732075_20693	Privileg	20070326
91452112600	EWM1000plus	599381386	928643_20694	Privileg	20060714
91452112601	EWM1000plus	599386888	928643_20694	Privileg	20070326
91452112700	EWM1000plus	599381387	460640_20695	Privileg	20060714
91452112701	EWM1000plus	599388655	460640_20695	Privileg	20070511
91452112800	EWM1000plus	599381600	888_400_09	Zanker	20060721
91452112801	EWM1000plus	599386877	EF4246	Zanker	20070316
91452112900	EWM1000plus	599381601	888_404_09	Zanker	20060721
91452112901	EWM1000plus	599386878	EF4446	Zanker	20070316
91452113000	EWM1000plus	599381605	888_412_09	Zanker	20060721
91452113001	EWM1000plus	599388656	EF4646	Zanker	20070511
91452113200	EWM1000plus	599383279	ZWG5141	Zanussi	20061013
91452113202	EWM1000plus	599386818	ZWG5141	Zanussi	20070316
91452113300	EWM1000plus	599383184	ZWG5161	Zanussi	20060929

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452113302	EWM1000plus	599388583	ZWG5161	Zanussi	20070511
91452113600	EWM1000plus	599383567	CMF616	Marijnen	20061013
91452113602	EWM1000plus	599702191	CMF616	Marijnen	20071005
91452114300	EWM1000plus	599382633	145386_20776	Privileg	20060915
91452114301	EWM1000plus	599702192	145386_20776	Privileg	20071005
91452114400	EWM1000plus	599382885	833658_20775	Privileg	20060929
91452114401	EWM1000plus	599386890	833658_20775	Privileg	20070326
91452114500	EWM1000plus	599383570	247084_20805	Privileg	20061013
91452114501	EWM1000plus	599386891	247084_20805	Privileg	20070326
91452114600	EWM1000plus	599383571	247101_20806	Privileg	20061013
91452114601	EWM1000plus	599388659	247101_20806	Privileg	20070511
91452114700	EWM1000plus	599385575	ZWF1441W	Zanussi-Electrolux	20070112
91452114701	EWM1000plus	599386845	ZWF1441W	Zanussi-Electrolux	20070316
91452114800	EWM1000plus	599384247	746699_20733	Privileg	20061103
91452114901	EWM1000plus	599387341	694479_20824	Privileg	20070316
91452115001	EWM1000plus	599387884	732613_20825	Privileg	20070406
91452115100	EWM1000plus	599385609	ZWF1220	Zanussi	20070119
91452115200	EWM1000plus	599385610	ZWF1420	Zanussi	20070119
91452115300	EWM1000plus	599385611	ZWF1620	Zanussi	20070119
91452115301	EWM1000plus	599702195	ZWF1620	Zanussi	20071005
91452115400	EWM1000plus	599385142	746699_20733	Privileg	20061208
91452115500	EWM1000plus	599385633	DO1400SI	Domeos	20070119
91452115600	EWM1000plus	599388077	ELF614D1	Essentielb	20070420
91452115700	EWM1000plus	599700233	ZWG5249	Zanussi	20070706
91452115800	EWM1000plus	599701270	DO1456SI	Domeos	20070824
91452120000	EWM2000evo	599376700	ZWF1231W	Zanussi-Electrolux	20060303
91452120002	EWM2000evo	599387118	ZWF1231W	Zanussi-Electrolux	20070316
91452120100	EWM2000evo	599376704	ZWF1431W	Zanussi-Electrolux	20060303
91452120200	EWM2000evo	599376709	ZWF1431S	Zanussi-Electrolux	20060303
91452120202	EWM2000evo	599387125	ZWF1431S	Zanussi-Electrolux	20070316
91452120300	EWM2000evo	599376711	ZWF1631W	Zanussi-Electrolux	20060303
91452120302	EWM2000evo	599388586	ZWF1631W	Zanussi-Electrolux	20070511
91452140404	EWM1100	599708420	EWF8070W	Electrolux	20080530
91452140503	EWM1100	599709541	EWF8170W	Electrolux	20080628
91452141200	EWM1100	599700719	672992_20718	Privileg	20070615
91452141300	EWM1100	599700850	934838_20719	Privileg	20070615
91452141302	EWM1100	599717832	934838_21231	Privileg	20090411
91452141400	EWM1100	599385160	525324_20792	Privileg	20061208
91452141401	EWM1100	599387139	525324_20891	Privileg	20070316
91452141500	EWM1100	599385162	586529_20793	Privileg	20061208
91452141501	EWM1100	599387138	586529_20892	Privileg	20070316
91452141502	EWM1100	599713694	00586529_21232	Privileg	20081205
91452141901	EWM1100	599708278	EWF12070W	Electrolux	20080523
91452142300	EWM1100	599386843	EWF14070W	Electrolux	20070316
91452142301	EWM1100	599712632	EWF14070W	Electrolux	20081107
91452143100	EWM1100	599700013	P608	Zoppas	20070629
91452143200	EWM1100	599700015	P610	Zoppas	20070629
91452143300	EWM1100	599388074	Z106	Zoppas	20070420
91452143301	EWM1100	599708443	Z106	Zoppas	20080530
91452143400	EWM1100	599702634	635824_20835	Privileg	20071012
91452143500	EWM1100	599702640	642945_20836	Privileg	20071012
91452143600	EWM1100	599701852	083821_20842	Privileg	20070921
91452143700	EWM1100	599701280	409092_20843	Privileg	20070824
91452143800	EWM1100	599700027	WA1240	FORS	20070629
91452143801	EWM1100	599705955	WA1240	FORS	20080215

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452143900	EWM2100	599700161	RWF8176W	Rex-Electrolux	20070629
91452144000	EWM1100	599701291	DF4242N	Zanker	20070824
91452144200	EWM1100	599701927	ZWG5120	Zanussi	20070921
91452144201	EWM1100	599709053	ZWG5120	Zanussi	20080613
91452144300	EWM1100	599701930	ZWG5140	Zanussi	20070921
91452144301	EWM1100	599708650	ZWG5140	Zanussi	20080606
91452144302	EWM1100	599712633	ZWG5140	Zanussi	20081107
91452144400	EWM1100	599701933	ZWG5160	Zanussi	20070921
91452144401	EWM1100	599708281	ZWG5160	Zanussi	20080523
91452144500	EWM1100	599701940	ZWG3105	Zanussi	20070921
91452144501	EWM1100	599708286	ZWG3105	Zanussi	20080523
91452144600	EWM1100	599702641	ZWG3105	Zanussi	20071012
91452144601	EWM1100	599708452	ZWG3105	Zanussi	20080530
91452144700	EWM1100	599701493	ZWG3125	Zanussi	20070831
91452144701	EWM1100	599708444	ZWG3125	Zanussi	20080530
91452144702	EWM1100	599722269	ZWG3125	Zanussi	20090831
91452144800	EWM1100	599702642	ZWG3145	Zanussi	20071012
91452144801	EWM1100	599708287	ZWG3145	Zanussi	20080523
91452144802	EWM1100	599712634	ZWG3145	Zanussi	20081107
91452144900	EWM1100	599701495	ZWG3165	Zanussi	20070831
91452144901	EWM1100	599711917	ZWG3165	Zanussi	20081010
91452145200	EWM1100	599704568	ZWG3125S	Zanussi	20071130
91452145300	EWM1100	599704575	ZWF1021	Zanussi	20071130
91452145301	EWM1100	599708654	ZWF1021	Zanussi	20080606
91452145400	EWM1100	599705844	EWF8170W	Electrolux	20080208
91452145600	EWM1100	599704822	ZWG3105S	Zanussi	20071207
91452145601	EWM1100	599708447	ZWG3105S	Zanussi	20080530
91452145700	EWM1100	599705203	DF4450	Zanker	20071221
91452145701	EWM1100	599712643	DF4450	Zanker	20081107
91452145800	EWM1100	599705553	DF4450S	Zanker	20080125
91452146001	EWM1100	599709267	EWF14170W	Electrolux	20080620
91452146002	EWM1100	599711923	EWF14170W	Electrolux	20081010
91452146100	EWM1100	599704477	ZWF1201	Zanussi	20071130
91452146101	EWM1100	599708448	ZWF1201	Zanussi	20080530
91452146900	EWM1100	599707576	RWF6170W	Rex-Electrolux	20080418
91452147000	EWM1100	599706426	729156_21013	Privileg	20080307
91452147001	EWM1100	599712649	00729156_21237	Privileg	20081107
91452147100	EWM1100	599711583	SF2210N	Zanker	20080919
91452147201	EWM1100	599713224	SF2410N	Zanker	20081114
91452147300	EWM1100	599711582	SF2410NS	Zanker	20080912
91452147400	EWM1100	599709275	SFX2410N	Zanker	20080620
91452147500	EWM1100	599711584	SFX4640N	Zanker	20080919
91452147600	EWM1100	599707875	RWF8079W	Rex-Electrolux	20080425
91452147800	EWM1100	599709950	RWF10079W	Rex-Electrolux	20080711
91452148100	EWM1100	599708820	AWF14070W	ArthurMartinElux	20080606
91452148101	EWM1100	599712652	AWF14070W	ArthurMartinElux	20081107
91452148200	EWM1100	599708663	ZWF16070W1	Zanussi	20080606
91452148300	EWM1100	599709766	DFX4450BE	Zanker	20080705
91452148301	EWM1100	599713327	DFX4450BE	Zanker	20081122
91452148400	EWM1100	599714758	ZWF12070S1	Zanussi	20090102
91452148500	EWM1100	599710824	WA610E	Novamatic	20080822
91452148600	EWM1100	599710826	WA612E	Novamatic	20080822
91452148700	EWM1100	599711839	AWF16170W	ArthurMartinElux	20081010
91452148900	EWM1100	599712853	ZWF12070G1	Zanussi	20081108
91452149000	EWM1100	599712287	00394856_21112	Privileg	20081024

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452149100	EWM1100	599712828	00394826_21113	Privileg	20081107
91452149200	EWM1100	599712292	00394793_21114	Privileg	20081024
91452149300	EWM1100	599713262	ZWF14070G1	Zanussi	20081121
91452149500	EWM1100	599712831	00029072_21124	Privileg	20081107
91452149600	EWM1100	599712832	00075360_21125	Privileg	20081107
91452149700	EWM1100	599712830	00089526_21126	Privileg	20081107
91452149800	EWM1100	599714251	DF4450	Zanker	20081219
91452149900	EWM1100	599714395	DF4450S	Zanker	20081226
91452150103	EWM2100	599708292	EWF12470W	Electrolux	20080523
91452150202	EWM2100	599387129	EWF14470W	Electrolux	20070316
91452150204	EWM2100	599713076	EWF14470W	Electrolux	20081010
91452150303	EWM2100	599707840	EWF10670W	Electrolux	20080425
91452150403	EWM2100	599707842	EWF12670W	Electrolux	20080425
91452151703	EWM2100	599708421	EWF12250	Electrolux	20080530
91452151704	EWM2100	599711925	EWF12250	Electrolux	20081010
91452151800	EWM2100	599383572	EWF14260	Electrolux	20061013
91452151802	EWM2100	599387165	EWF14260	Electrolux	20070323
91452151803	EWM2100	599707844	EWF14260	Electrolux	20080425
91452151804	EWM2100	599711937	EWF14260	Electrolux	20080912
91452151805	EWM2100	599712654	EWF14260	Electrolux	20081107
91452151902	EWM2100	599702206	EWF16250	Electrolux	20071005
91452151903	EWM2100	599708453	EWF16250	Electrolux	20080530
91452151904	EWM2100	599711926	EWF16250	Electrolux	20081010
91452152000	EWM2100	599383037	EWF16260	Electrolux	20060922
91452152002	EWM2100	599702207	EWF16260	Electrolux	20071005
91452152003	EWM2100	599707757	EWF16260	Electrolux	20080418
91452152004	EWM2100	599709054	EWF16260	Electrolux	20080613
91452152005	EWM2100	599712657	EWF16260	Electrolux	20081107
91452152100	EWM2100	599383042	EWF14450	Electrolux	20060922
91452152102	EWM2100	599387214	EWF14450	Electrolux	20070323
91452152103	EWM2100	599708424	EWF14450	Electrolux	20080530
91452152104	EWM2100	599712660	EWF14450	Electrolux	20081107
91452152203	EWM2100	599708428	EWF14460	Electrolux	20080530
91452152205	EWM2100	599711949	EWF14460	Electrolux	20081017
91452152303	EWM2100	599708431	EWF16460	Electrolux	20080530
91452152304	EWM2100	599711951	EWF16460	Electrolux	20081017
91452152403	EWM2100	599711956	EWF10470W	Electrolux	20081017
91452152503	EWM2100	599711958	EWF12470W	Electrolux	20081017
91452153000	EWM2100	599700080	EWF10470S	Electrolux	20070629
91452153001	EWM2100	599709055	EWF10470S	Electrolux	20080613
91452153101	EWM2100	599386231	132047_20715	Privileg	20070308
91452153200	EWM2100	599385164	608533_20786	Privileg	20061208
91452153201	EWM2100	599387188	608533_20893	Privileg	20070323
91452153301	EWM2100	599385858	449395_20717	Privileg	20070209
91452153500	EWM2100	599385165	594663_20787	Privileg	20061208
91452153501	EWM2100	599387186	594663_20894	Privileg	20070323
91452153502	EWM2100	599712661	00594663_21242	Privileg	20081107
91452153600	EWM2100	599385166	899187_20783	Privileg	20061208
91452153601	EWM2100	599387184	899187_20895	Privileg	20070323
91452153700	EWM2100	599385168	706664_20784	Privileg	20061208
91452153701	EWM2100	599387183	706664_20896	Privileg	20070323
91452153702	EWM2100	599712667	00706664_21243	Privileg	20081107
91452153901	EWM2100	599709711	EWF12440W	Electrolux	20080704
91452154001	EWM2100	599708432	EWF14440W	Electrolux	20080530
91452154002	EWM2100	599711954	EWF14440W	Electrolux	20081017

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452154100	EWM2100	599701100	EWF12270W	Electrolux	20070824
91452154101	EWM2100	599711960	EWF12270W	Electrolux	20081017
91452154200	EWM2100	599700235	EWF14270W	Electrolux	20070706
91452154201	EWM2100	599709057	EWF14270W	Electrolux	20080613
91452154400	EWM2100	599387885	277863_20820	Privileg	20070406
91452154401	EWM2100	599712670	00277863_21256	Privileg	20081107
91452154500	EWM2100	599701272	EWF12240W	Electrolux	20070824
91452154501	EWM2100	599708423	EWF12240W	Electrolux	20080530
91452154600	EWM2100	599701274	EWF14240W	Electrolux	20070824
91452154601	EWM2100	599709713	EWF14240W	Electrolux	20080704
91452154602	EWM2100	599712677	EWF14240W	Electrolux	20081107
91452154700	EWM2100	599700388	606488_20832	Privileg	20070713
91452154800	EWM2100	599700804	577019_20833	Privileg	20070615
91452154801	EWM2100	599712680	00577019_21244	Privileg	20081107
91452154900	EWM2100	599701275	792330_20841	Privileg	20070709
91452155000	EWM2100	599700186	MENAGE6250	Wyss	20070629
91452155002	EWM2100	599711959	MENAGE6250	Wyss	20081017
91452155100	EWM2100	599388819	WA1250	FORS	20070525
91452155101	EWM2100	599705956	WA1250	FORS	20080215
91452155201	EWM2100	599706102	WA1450	FORS	20080222
91452155300	EWM2100	599388823	WA1650	FORS	20070525
91452155301	EWM2100	599705959	WA1650	FORS	20080215
91452155400	EWM2100	599701875	EF4246N	Zanker	20070921
91452155500	EWM2100	599701277	EF4446N	Zanker	20070824
91452155600	EWM2100	599701276	EF4646N	Zanker	20070824
91452155700	EWM2100	599701278	EFX6250N	Zanker	20070824
91452155800	EWM2100	599701101	888_923_05	Zanker	20070824
91452156000	EWM2100	599703357	481466_20837	Privileg	20071026
91452156100	EWM2100	599703418	173484_20839	Privileg	20071026
91452156200	EWM2100	599700849	785698_20935	Privileg	20070727
91452156300	EWM2100	599702646	ZWG6100A	Zanussi	20071012
91452156301	EWM2100	599709058	ZWG6100A	Zanussi	20080613
91452156400	EWM2100	599718659	EWF10570W	Electrolux	20090501
91452156500	EWM2100	599702647	119987_20927	Privileg	20071012
91452156600	EWM2100	599702648	119969_20928	Privileg	20071012
91452156601	EWM2100	599712682	00119969_21258	Privileg	20081107
91452156700	EWM2100	599702766	338082_20947	Privileg	20071012
91452156800	EWM2100	599705845	EWF10279W	Electrolux	20080208
91452157400	EWM2100	599705412	ZWF9570W	Zanussi-Electrolux	20080111
91452157500	EWM2100	599705224	EFX4248N	Zanker	20071221
91452157600	EWM2100	599705225	EFX4448N	Zanker	20071221
91452157700	EWM2100	599705308	EFX4648N	Zanker	20080111
91452158300	EWM2100	599705226	507200_21001	Privileg	20071221
91452158400	EWM2100	599709715	ZWF1221	Zanussi	20080704
91452158500	EWM2100	599709750	ZWF1421	Zanussi	20080705
91452158501	EWM2100	599712685	ZWF1421	Zanussi	20081107
91452158600	EWM2100	599709754	ZWF1621	Zanussi	20080705
91452158700	EWM2100	599707335	EWF14270W	Electrolux	20080411
91452158701	EWM2100	599709717	EWF14270W	Electrolux	20080704
91452158702	EWM2100	599715650	EWF14270W	Electrolux	20090214
91452158800	EWM2100	599708293	RWF10470W	Rex-Electrolux	20080523
91452159000	EWM2100	599711585	EF4480N	Zanker	20080912
91452159001	EWM2100	599712688	EF4480N	Zanker	20081107
91452159100	EWM2100	599711649	EF3010N	Zanker	20080919
91452159200	EWM2100	599709951	EWF14248W	Electrolux	20080711

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452159300	EWM2100	599709918	EWF14448W	Electrolux	20080711
91452159301	EWM1100	599718403	EWF14448W	Electrolux	20090425
91452159400	EWM2100	599710734	EWF10670W	Electrolux	20080815
91452159500	EWM2100	599711653	EF3210N	Zanker	20080919
91452159600	EWM2100	599711658	EF4680N	Zanker	20080919
91452160400	EWM25_35	599702636	643466_20949	Privileg	20071005
91452160401	EWM25_35	599713334	00643466_20949	Privileg	20081122
91452160500	EWM25_35	599385435	EF8484	Zanker	20070105
91452160501	EWM25_35	599388610	EF8484	Zanker	20070518
91452160600	EWM25_35	599385430	890619_20723	Privileg	20061229
91452160601	EWM25_35	599385566	890619_20723	Privileg	20070112
91452160602	EWM2100	599714440	00890619_20897	Privileg	20081226
91452160602	EWM25_35	599714440	00890619_20897	Privileg	20081226
91452160700	EWM25_35	599385570	614149_20724	Privileg	20070112
91452160701	EWM25_35	599388661	614149_20724	Privileg	20070518
91452160800	EWM2100	599701299	591203_20846	Privileg	20070824
91452160900	EWM2100	599701301	779788_20847	Privileg	20070824
91452160901	EWM2100	599712709	779788_21249	Privileg	20081107
91452161000	EWM2100	599701302	431473_20848	Privileg	20070824
91452161100	EWM25_35	599701105	EF8482	Zanker	20070824
91452161200	EWM25_35	599700741	EF8486	Zanker	20070629
91452161300	EWM25_35	599704566	872393_20950	Privileg	20071130
91452161400	EWM25_35	599703176	250372_20807	Privileg	20071019
91452161500	EWM2100	599705372	679287_20944	Privileg	20080111
91452161600	EWM2100	599705374	698279_20945	Privileg	20080111
91452161601	EWM2100	599712894	00698279_21250	Privileg	20081108
91452161700	EWM2100	599705369	680865_20946	Privileg	20080111
91452161800	EWM25_35	599705377	475808_20941	Privileg	20080111
91452161801	EWM25_35	599713844	00475808_20941	Privileg	20081206
91452161900	EWM25_35	599705379	433225_20942	Privileg	20080111
91452162000	EWM25_35	599705380	474985_20943	Privileg	20080111
91452162400	EWM2100	599704194	343807_20994	Privileg	20071123
91452162500	EWM2100	599704096	907721_20995	Privileg	20071116
91452162501	EWM2100	599714463	00907721_21251	Privileg	20081226
91452162900	EWM2100	599704773	EFX4260	Zanker	20071207
91452163000	EWM2100	599705047	EFX4460	Zanker	20071221
91452163100	EWM2100	599705050	EFX4660	Zanker	20071221
91452163200	EWM25_35	599709523	223763_21031	Privileg	20080627
91452163300	EWM2100	599709524	EFX4275	Zanker	20080627
91452163400	EWM2100	599709525	EFX4475	Zanker	20080627
91452163401	EWM2100	599713845	EFX4475	Zanker	20081206
91452163500	EWM25_35	599709520	EFX4875	Zanker	20080627
91452163600	EWM2100	599709513	00065339_21080	Privileg	20080627
91452163700	EWM2100	599709514	00065493_21081	Privileg	20080627
91452163701	EWM2100	599713226	00065493_21254	Privileg	20081114
91452163800	EWM25_35	599709515	00212531_20998	Privileg	20080627
91452163900	EWM2100	599709953	ZWF12370W	Zanussi	20080711
91452164000	EWM2100	599711156	00205115_21097	Privileg	20080912
91452164001	EWM2100	599712895	00205115_21262	Privileg	20081108
91452164800	EWM25_35	599711546	EWF10771W	Electrolux	20080927
91452164900	EWM2100	599713836	00396536_21121	Privileg	20081206
91452165100	EWM25_35	599715633	IF9280	Zanker	20090214
91452165200	EWM25_35	599714269	IF9480	Zanker	20081219
91452165300	EWM25_35	599714273	IF9680	Zanker	20081219
91452165400	EWM25_35	599714106	EF8482	Zanker	20081213

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452165500	EWM25_35	599713423	EF8484	Zanker	20081024
91452165501	EWM25_35	599714466	EF8484	Zanker	20081226
91452165600	EWM25_35	599714388	EF8486	Zanker	20081226
91452165700	EWM2100	599717114	EWF12570X	Electrolux	20090327
91452166100	EWM25_35	599716490	00591502_21135	Privileg	20090313
91452166200	EWM25_35	599720948	00874058_21163	Privileg	20090807
91452180200	EWM2100	599709756	EWF8277W	Electrolux	20080705
91452180300	EWM2100	599709758	EWF10277W	Electrolux	20080705
91452180400	EWM2100	599714293	ZWG7105X	Zanussi	20081220
91452180500	EWM2100	599714397	ZWG7105X	Zanussi	20081226
91452180900	EWM2100	599716489	EWFM12470W	Electrolux	20090308
91452180901	EWM2100	599722193	EWFM12470W	Electrolux	20090826
91452181301	EWM2100	599712823	00396400_21110	Privileg	20081107
91452181400	EWM2100	599712824	00396404_21111	Privileg	20081107
91452181600	EWM2100	599718662	JLWM1203	John Lewis	20090501
91452181700	EWM2100	599712825	00160848_21129	Privileg	20081107
91452181800	EWM2100	599712826	00157673_21128	Privileg	20081107
91452181900	EWM2100	599712827	00160848_21127	Privileg	20081107
91452182000	EWM2100	599714369	EFX4250	Zanker	20081226
91452182100	EWM2100	599714370	EFX4450	Zanker	20081226
91452182200	EWM2100	599714385	EFX4650	Zanker	20081226
91452182300	EWM2100	599715826	ZWG6145	Zanussi	20090220
91452182301	EWM2100	599718834	ZWG6145	Zanussi	20090501
91452182400	EWM2100	599715362	ZWG6165	Zanussi	20090207
91452182401	EWM2100	599718167	ZWG6165	Zanussi	20090417
91452183000	EWM2100	599718309	00641335_21142	Privileg	20090418
91452183100	EWM2100	599719370	00655605_21151	Privileg	20090522
91452183200	EWM2100	599719812	00310442_21165	Privileg	20090612
91452183400	EWM2100	599720950	00644826_21156	Privileg	20090807
91452190000	EWM1100	599715107	ZWG5136	Zanussi	20090130
91452190001	EWM1100	599718786	ZWG5136	Zanussi	20090501
91452190100	EWM1100	599715108	ZWG5156	Zanussi	20090130
91452190101	EWM1100	599717844	ZWG5156	Zanussi	20090411
91452190200	EWM1100	599715111	ZWG5145	Zanussi	20090130
91452190201	EWM1100	599717851	ZWG5145	Zanussi	20090411
91452190300	EWM1100	599715365	ZWG5165	Zanussi	20090207
91452190301	EWM1100	599718248	ZWG5165	Zanussi	20090417
91452190400	EWM1100	599715311	ZWF3145	Zanussi	20090206
91452190401	EWM1100	599717850	ZWF3145	Zanussi	20090411
91452191200	EWM1100	599716429	ZWF12070W1	Zanussi	20090307
91452191300	EWM1100	599716431	ZWF14070W1	Zanussi	20090307
91452191500	EWM1100	599718666	ZWF3145	Zanussi	20090501
91452191600	EWM1100	599719444	DFX4450EE	Zanker	20090522
91452191700	EWM1100	599719743	00652740_21150	Privileg	20090612
91452192401	EWM1100	599720877	00642779_21149	Privileg	20090731
91452200000	EWM1000	599378068	AWF1273	ArthurMartinElux	20060421
91452200001	EWM1000	599383747	AWF1273	ArthurMartinElux	20061027
91452200100	EWM1000	599381390	T720SP	Rex-Electrolux	20060714
91452200101	EWM1000	599383748	T720SP	Rex-Electrolux	20061027
91452200200	EWM1000	599381400	AWF1075	ArthurMartinElux	20060714
91452200201	EWM1000	599383749	AWF1075	ArthurMartinElux	20061027
91452200300	EWM1000	599382358	FE827G	Zanussi	20060901
91452200301	EWM1000	599383750	FE827G	Zanussi	20061027
91452200400	EWM1000	599382360	FE1027G	Zanussi	20060901
91452200401	EWM1000	599383751	FE1027G	Zanussi	20061027

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452200500	EWM1000	599704991	ZWH5102	Zanussi	20071214
91452210000	EWM1000plus	599377537	AWF1370	ArthurMartinElux	20060407
91452210200	EWM1000plus	599381918	AWF1470	ArthurMartinElux	20060802
91452210301	EWM1000plus	599377269	AWF1373	ArthurMartinElux	20060407
91452210400	EWM1000plus	599377341	AWF1373S	ArthurMartinElux	20060407
91452210501	EWM1000plus	599377343	AWF1473	ArthurMartinElux	20060407
91452210600	EWM1000plus	599376630	ZWX1506W	Zanussi-Electrolux	20060217
91452210601	EWM1000plus	599379193	ZWX1506W	Zanussi-Electrolux	20060505
91452210700	EWM1000plus	599378073	ZWH5105	Zanussi	20060421
91452210800	EWM1000plus	599378135	ZWH5105A	Zanussi	20060421
91452210900	EWM1000plus	599378143	ZWH5125	Zanussi	20060421
91452211100	EWM1000plus	599381586	RTF5147	Rosenlew	20060721
91452211300	EWM1000plus	599381480	224579_20700	Privileg	20060713
91452211400	EWM1000plus	599381103	EFXX4242	Zanker	20060630
91452211600	EWM1000plus	599383269	ZWF1227W	Zanussi-Electrolux	20061013
91452211700	EWM1000plus	599383273	ZWF1427W	Zanussi-Electrolux	20061013
91452211800	EWM1000plus	599385606	JLWM1202	John Lewis	20070112
91452220000	EWM2000evo	599376723	ZWF1237W	Zanussi-Electrolux	20060303
91452220101	EWM2000evo	599376725	ZWF1437W	Zanussi	20060303
91452220201	EWM2000evo	599377345	ZWF1451W	Zanussi-Electrolux	20060407
91452220700	EWM2000evo	599381589	ZWF1637W	Zanussi-Electrolux	20060721
91452220800	EWM2000evo	599381590	ZWF1437S	Zanussi-Electrolux	20060721
91452230000	EWM3000new	599381395	ZWF1651W	Zanussi-Electrolux	20060714
91452230100	EWM3000new	599381541	ZWV1651S	Zanussi-Electrolux	20060721
91452230300	EWM3000new	599381133	AWF1673	ArthurMartinElux	20060623
91452240701	EWM1100	599713225	RWF12089W	Rex-Electrolux	20081114
91452240800	EWM1100	599700019	P710	Zoppas	20070629
91452240900	EWM1100	599388078	Z107	Zoppas	20070420
91452241100	EWM1100	599701294	AWF12180W	ArthurMartinElux	20070824
91452241101	EWM1100	599712927	AWF12180W	ArthurMartinElux	20081109
91452241200	EWM1100	599701949	ZWH5125	Zanussi	20070921
91452241300	EWM1100	599702852	ZWH5100	Zanussi	20071012
91452241301	EWM1100	599704721	ZWH5100	Zanussi	20071207
91452241500	EWM1100	599706428	AWF12170W	ArthurMartinElux	20080307
91452241501	EWM1100	599711995	AWF12170W	ArthurMartinElux	20081017
91452241700	EWM1100	599706467	AWF10180W	ArthurMartinElux	20080314
91452241800	EWM1100	599706754	FWH5125	Faure	20080321
91452241801	EWM1100	599712930	FWH5125	Faure	20081109
91452241900	EWM1100	599709921	RWF10089W	Rex-Electrolux	20080711
91452242000	EWM1100	599708665	ZWF12080W	Zanussi	20080606
91452242001	EWM1100	599712935	ZWF12080W	Zanussi	20081109
91452242100	EWM1100	599708668	ZWF14080W	Zanussi	20080606
91452242200	EWM1100	599711153	EWF10080W	Electrolux	20080912
91452242300	EWM1100	599712859	ZWF14080G	Zanussi	20081108
91452242400	EWM1100	599718194	EWF14180W	Electrolux	20090417
91452242600	EWM1100	599718411	AWF14170W	ArthurMartinElux	20090424
91452242900	EWM1100	599721371	ZWH5145	Zanussi	20090828
91452243000	EWM1100	599719826	ZF1671	Zoppas	20090612
91452243100	EWM1100	599719828	ZF207	Zoppas	20090612
91452243200	EWM1100	599719830	ZF2471	Zoppas	20090612
91452243300	EWM1100	599719835	RWF12085W	Rex-Electrolux	20090612
91452244700	EWM1100	599720445	RWF10085W	Rex-Electrolux	20090703
91452244800	EWM1100	599720952	RWF12180W	Rex-Electrolux	20090807
91452250102	EWM2100	599712982	EWF12680W	Electrolux	20081109
91452250202	EWM2100	599709923	EWF12480W	Electrolux	20080711

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452250203	EWM2100	599715679	EWF12480W	Electrolux	20090214
91452250402	EWM2100	599708295	EWF12480W	Electrolux	20080523
91452250403	EWM2100	599711996	EWF12480W	Electrolux	20081017
91452250500	EWM2100	599383929	EWF14480W	Electrolux	20061027
91452250500	EWM2100	599706431	EWF14480W CHILD LOCK	Electrolux	20080307
91452250502	EWM2100	599708433	EWF14480W	Electrolux	20080530
91452250600	EWM2100	599385572	007928_20785	Privileg	20070112
91452250901	EWM2100	599708435	EWF10480W	Electrolux	20080530
91452251100	EWM2100	599700083	AWF12480W	ArthurMartinElux	20070629
91452251101	EWM2100	599707849	AWF12480W	ArthurMartinElux	20080425
91452251102	EWM2100	599711997	AWF12480W	ArthurMartinElux	20081017
91452251201	EWM2100	599711998	AWF13480W	ArthurMartinElux	20081017
91452251301	EWM2100	599708434	AWF14480W	ArthurMartinElux	20080530
91452251400	EWM2100	599700172	JLWM1203	John Lewis	20070629
91452251401	EWM2100	599712944	JLWM1203	Juno-Electrolux	20081109
91452251500	EWM2100	599388094	JLWM1407	John Lewis	20070420
91452251601	EWM2100	599715664	EWF14480W	Electrolux	20090214
91452251701	EWM2100	599708670	ZWF12280W	Zanussi-Electrolux	20080606
91452251702	EWM2100	599712973	ZWF12280W	Zanussi-Electrolux	20081109
91452251801	EWM2100	599708455	ZWF14280W	Zanussi-Electrolux	20080530
91452252000	EWM25_35	599700106	ZWF16281W	Zanussi-Electrolux	20070629
91452252001	EWM25_35	599711999	ZWF16281W	Zanussi	20081017
91452252002	EWM2100	599720684	ZWF16281W	Zanussi	20090717
91452252002	EWM25_35	599720684	ZWF16281W	Zanussi	20090717
91452252101	EWM2100	599708308	AWF14480S	ArthurMartinElux	20080523
91452252200	EWM2100	599388438	P712D	Zoppas	20070504
91452252201	EWM2100	599713078	P712D	Zoppas	20081024
91452252202	EWM2100	599715670	P712D	Zoppas	20090214
91452252500	EWM2100	599701285	EFXX7242N	Zanker	20070824
91452252600	EWM2100	599701961	ZWH6105	Zanussi	20070921
91452252601	EWM2100	599712000	ZWH6105	Zanussi	20081017
91452252700	EWM2100	599702657	EWF14480W	Electrolux	20071012
91452252800	EWM2100	599702660	ZWH6100	Zanussi	20071012
91452252801	EWM2100	599712002	ZWH6100	Zanussi	20081017
91452252900	EWM2100	599702665	ZWH6120	Zanussi	20071012
91452252901	EWM2100	599712983	ZWH6120	Zanussi	20081024
91452253000	EWM2100	599702668	ZWH6100A	Zanussi	20071012
91452253001	EWM2100	599714471	ZWH6100A	Zanussi	20081226
91452253100	EWM2100	599706103	ZWF12580W	Zanussi-Electrolux	20080222
91452253101	EWM2100	599712955	ZWF12580W	Zanussi-Electrolux	20081109
91452253300	EWM2100	599705816	EWF12480W	Electrolux	20080208
91452253400	EWM2100	599705802	RWFH12280W	Rex-Electrolux	20080208
91452253401	EWM2100	599712003	RWFH12280W	Rex-Electrolux	20081017
91452253500	EWM25_35	599705410	966393_20990	Privileg	20080111
91452253700	EWM2100	599705310	EFXX7242N	Zanker	20080111
91452253701	EWM2100	599715673	EFXX7242N	Zanker	20090214
91452253800	EWM2100	599705746	EFXX7242NS	Zanker	20080201
91452253801	EWM2100	599715865	EFXX7242NS	Zanker	20090220
91452254100	EWM2100	599706469	FWH6145	Faure	20080314
91452254300	EWM2100	599706757	AWF12480S	ArthurMartinElux	20080321
91452254301	EWM2100	599708456	AWF12480S	ArthurMartinElux	20080530
91452254302	EWM1100	599712962	AWF12480S	ArthurMartinElux	20081109
91452254500	EWM2100	599707574	RWF12480W	Rex-Electrolux	20080418
91452254501	EWM2100	599709096	RWF12480W	Rex-Electrolux	20080614
91452254502	EWM2100	599712004	RWF12480W	Rex-Electrolux	20081017

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452254600	EWM2100	599709718	EWF12287W	Electrolux	20080704
91452254601	EWM2100	599712980	EWF12287W	Electrolux	20081109
91452254700	EWM2100	599709954	EWF16487W	Electrolux	20080711
91452254700	EWM25_35	599709954	EWF16487W	Electrolux	20080711
91452254800	EWM2100	599710735	EWF12680W	Electrolux	20080815
91452255600	EWM2100	599710133	ZWH7100C	Zanussi	20080718
91452255700	EWM2100	599714295	ZWH7125X	Zanussi	20081220
91452256200	EWM2100	599716512	AWFM14480W	ArthurMartinElux	20090313
91452256300	EWM1100	599718211	EWFM14480W	Electrolux	20090417
91452256400	EWM2100	599717783	EWFM14480W	Electrolux	20090410
91452256500	EWM2100	599722457	EWFM14480W	Electrolux	20091012
91452257200	EWM2100	599718311	EWFM14480W	Electrolux	20090418
91452257400	EWM2100	599711551	AWFH12280W	ArthurMartinElux	20080927
91452257401	EWM2100	599719428	AWFH12280W	ArthurMartinElux	20090522
91452257500	EWM2100	599713265	IZWH6125	Ideal-Zanussi	20081121
91452257800	EWM2100	599715313	EWFH12280W	Electrolux	20090206
91452257801	EWM2100	599720654	EWFH12280W	Electrolux	20090717
91452258100	EWM2100	599716424	EWF14480W	Electrolux	20090307
91452258101	EWM2100	599720052	EWF14480W	Electrolux	20090626
91452258300	EWM2100	599715363	ZWH6145	Zanussi	20090207
91452258400	EWM2100	599719139	RWFM14480W	Rex-Electrolux	20090508
91452258800	EWM2100	599719942	ZWH6105	Zanussi	20090619
91452259000	EWM2100	599719944	EWF10480W	Electrolux	20090619
91452260100	EWM25_35	599383147	EWF16781W	Electrolux	20060929
91452260102	EWM25_35	599388611	EWF16781W	Electrolux	20070518
91452260202	EWM2100	599703971	EWF14589W	Electrolux	20071116
91452260202	EWM2100	599705972	EWF14589W CHILD LOCK	Electrolux	20080215
91452260300	EWM25_35	599382970	EWF16589W	Electrolux	20060922
91452260302	EWM25_35	599703973	EWF16589W	Electrolux	20071116
91452260400	EWM25_35	599384466	EWF14580W	Electrolux	20061117
91452260400	EWM25_35	599705979	EWF14580W CHILD LOCK	Electrolux	20080215
91452260500	EWM25_35	599384468	EWF16580W	Electrolux	20061110
91452260600	EWM25_35	599383087	EWF14786W	Electrolux	20060929
91452260700	EWM25_35	599383088	EWF14785W	Electrolux	20060929
91452260800	EWM25_35	599385629	EWF16785W	Electrolux	20070119
91452261000	EWM25_35	599383148	EWF14780W	Electrolux	20060929
91452261100	EWM2100	599383149	EWF16780W	Electrolux	20060929
91452261100	EWM2100	599705985	EWF16780W CHILD LOCK	Electrolux	20080215
91452261100	EWM25_35	599383149	EWF16780W	Electrolux	20060929
91452261100	EWM25_35	599705985	EWF16780W CHILD LOCK	Electrolux	20080215
91452261200	EWM25_35	599383220	EWF14781W	Electrolux	20061006
91452261202	EWM25_35	599388612	EWF14781W	Electrolux	20070518
91452261302	EWM2100	599712005	EWF14780	Electrolux	20081017
91452261400	EWM25_35	599383152	EWF16780	Electrolux	20060929
91452261402	EWM25_35	599712006	EWF16780	Electrolux	20081017
91452261500	EWM25_35	599383265	EWF14781W	Electrolux	20061013
91452261602	EWM2100	599710151	EWF12580W	Electrolux	20080718
91452261700	EWM25_35	599383095	EWF14781W	Electrolux	20060929
91452261800	EWM25_35	599384458	EWF14781W	Electrolux	20061117
91452262200	EWM25_35	599385582	EWF16470W	Electrolux	20070112
91452262300	EWM25_35	599700086	EWF16370W	Electrolux	20070629
91452262301	EWM25_35	599720076	EWF16370W	Electrolux	20090626
91452262500	EWM25_35	599386805	AWF16781W	ArthurMartinElux	20070309
91452262800	EWM25_35	599700071	ZWF14581W	Zanussi-Electrolux	20070629
91452262801	EWM2100	599709270	ZWF14581W	Zanussi-Electrolux	20080620

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452262801	EWM25_35	599709270	ZWF14581W	Zanussi-Electrolux	20080620
91452262802	EWM25_35	599713223	ZWF14581W	Zanussi-Electrolux	20081114
91452262900	EWM2100	599700073	ZWF16581W	Zanussi-Electrolux	20070629
91452262900	EWM25_35	599700073	ZWF16581W	Zanussi-Electrolux	20070629
91452262901	EWM2100	599709100	ZWF16581W	Zanussi	20080614
91452262901	EWM25_35	599709100	ZWF16581W	Zanussi	20080614
91452262902	EWM25_35	599719111	ZWF16581W	Zanussi	20090508
91452262903	EWM25_35	599719798	ZWF16581W	Zanussi	20090612
91452262904	EWM25_35	599720987	ZWF16581W	Zanussi	20090807
91452263000	EWM25_35	599700074	ZWF16581S	Zanussi-Electrolux	20070629
91452263100	EWM25_35	599700581	JLWM1604	John Lewis	20070720
91452263101	EWM25_35	599720685	JLWM1604	John Lewis	20090717
91452263300	EWM25_35	599701286	200015_20919	Privileg	20070824
91452263400	EWM25_35	599701287	600219_20920	Privileg	20070824
91452263700	EWM2100	599703748	ZWH6195	Zanussi	20071102
91452263701	EWM2100	599712946	ZWH6195	Zanussi	20081109
91452263900	EWM2100	599706472	AWF14580W	ArthurMartinElux	20080314
91452264000	EWM2100	599710375	ZWF14380W	Zanussi	20080725
91452264100	EWM2100	599714343	ZWF14380S	Zanussi	20081221
91452264300	EWM2100	599718423	EWFM14580W	Electrolux	20090424
91452264500	EWM2100	599713270	ZWF16581G	Zanussi	20081121
91452264500	EWM25_35	599713270	ZWF16581G	Zanussi	20081121
91452264600	EWM25_35	599711581	JLWM1409	John Lewis	20080927
91452264800	EWM2100	599714299	EWF14380W	Electrolux	20081220
91452264900	EWM2100	599716083	EWF12580X	Electrolux	20090227
91452265000	EWM2100	599718541	EWF12580X	Electrolux	20090426
91452265500	EWM25_35	599716786	EWF16781W	Electrolux	20090320
91452265501	EWM25_35	599720078	EWF16781W	Electrolux	20090626
91452265502	EWM25_35	599720991	EWF16781W	Electrolux	20090807
91452265600	EWM25_35	599717125	EWF14781W	Electrolux	20090327
91452265700	EWM25_35	599717801	AWF16781W	ArthurMartinElux	20090411
91452265800	EWM25_35	599719915	EWF14580W	Electrolux	20090619
91452265900	EWM25_35	599720957	RWF14781W	Rex-Electrolux	20090807
91452267600	EWM2100	599722454	ZWF14380G	Zanussi	20091007
91452270000	EWM25_35	599383465	EWF12981W	Electrolux	20061013
91452270000	EWM25_35	599703148	EWF12981W CHILD LOCK	Electrolux	20071019
91452270002	EWM25_35	599713230	EWF12981W	Electrolux	20081114
91452270100	EWM25_35	599384173	EWF14981W	Electrolux	20061103
91452270100	EWM25_35	599705993	EWF14981W CHILD LOCK	Electrolux	20080215
91452270200	EWM25_35	599384174	EWF16981W	Electrolux	20061103
91452270200	EWM25_35	599705996	EWF16981W CHILD LOCK	Electrolux	20080215
91452270202	EWM25_35	599720994	EWF16981W	Electrolux	20090807
91452270300	EWM25_35	599384063	EWF16981W	Electrolux	20061027
91452270302	EWM25_35	599388613	EWF16981W	Electrolux	20070518
91452270400	EWM25_35	599384176	EWF16980W	Electrolux	20061103
91452270400	EWM25_35	599703153	EWF16980W CHILD LOCK	Electrolux	20071019
91452270500	EWM25_35	599384469	EWF16981W	Electrolux	20061110
91452270600	EWM25_35	599384162	EWF16981W	Electrolux	20061103
91452270700	EWM25_35	599385630	EWF16980	Electrolux	20070119
91452270800	EWM25_35	599385574	EWF16981W	Electrolux	20070112
91452270900	EWM25_35	599385866	EWF14981W	Electrolux	20070216
91452271000	EWM25_35	599719503	EWF12981W	Electrolux	20080523
91452271100	EWM25_35	599714427	00751022_20849	Privileg	20081226
91452271200	EWM25_35	599714407	00859695_20850	Privileg	20081226
91452330200	EWM3000new	599701925	679310_20934	Privileg	20070921

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452330300	EWM3000new	599702511	JLWM1405	John Lewis	20071012
91452340000	EWM1100	599716795	ZWN5105	Zanussi	20090320
91452340200	EWM1100	599718424	ZWN6104	Zanussi	20090424
91452340300	EWM1100	599718969	EWF10190W	Electrolux	20090508
91452340400	EWM1100	599718850	EWF10190W	Electrolux	20090501
91452340500	EWM1100	599718877	RWF10190W	Rex-Electrolux	20090501
91452340800	EWM1100	599721353	RWF10095W	Rex-Electrolux	20090828
91452340900	EWM1100	599718879	P810	Zoppas	20090501
91452350700	EWM2100	599716440	ZWN3125	Zanussi	20090307
91452351000	EWM2100	599721361	RWF10490W	Rex-Electrolux	20090828
91452360000	EWM25_35	599700626	ZWF14791W	Zanussi-Electrolux	20070720
91452360002	EWM25_35	599720072	ZWF14791W	Zanussi	20090626
91452360600	EWM25_35	599701858	P810D	Zoppas	20070921
91452360601	EWM25_35	599712046	P810D	Zoppas	20081017
91452360602	EWM25_35	599715246	P810D	Zoppas	20090206
91452360800	EWM25_35	599702782	ZWN6105	Zanussi	20071012
91452360801	EWM25_35	599712049	ZWN6105	Zanussi	20081017
91452360803	EWM25_35	599718768	ZWN6105	Zanussi	20090424
91452360900	EWM25_35	599703177	ZWN6125	Zanussi	20071019
91452360901	EWM25_35	599712889	ZWN6125	Zanussi	20081108
91452360902	EWM25_35	599715276	ZWN6125	Zanussi	20090206
91452360903	EWM25_35	599717148	ZWN6125	Zanussi	20090328
91452361200	EWM25_35	599719916	EWF14597W	Electrolux	20090619
91452361300	EWM25_35	599711155	EWF14591W	Electrolux	20080912
91452361301	EWM2100	599716382	EWF14591W	Electrolux	20090306
91452361301	EWM25_35	599716382	EWF14591W	Electrolux	20090306
91452361302	EWM25_35	599720653	EWF14591W	Electrolux	20090717
91452361400	EWM25_35	599705313	EFXX8448N	Zanker	20080111
91452361500	EWM25_35	599706433	AWF14591W	ArthurMartinElux	20080307
91452361501	EWM25_35	599710511	AWF14591W	ArthurMartinElux	20080801
91452361502	EWM2100	599715280	AWF14591W	ArthurMartinElux	20090206
91452361502	EWM25_35	599715280	AWF14591W	ArthurMartinElux	20090206
91452361600	EWM25_35	599706759	EWF10591W	Electrolux	20080321
91452361601	EWM2100	599713228	EWF10591W	Electrolux	20081114
91452361601	EWM25_35	599713228	EWF10591W	Electrolux	20081114
91452361602	EWM2100	599716383	EWF10591W	Electrolux	20090306
91452361602	EWM25_35	599716383	EWF10591W	Electrolux	20090306
91452361800	EWM25_35	599708681	ZWN3145	Zanussi	20080606
91452361801	EWM25_35	599712052	ZWN3145	Zanussi	20081017
91452361802	EWM25_35	599717159	ZWN3145	Zanussi	20090328
91452361900	EWM25_35	599706769	EWF12591W	Electrolux	20080321
91452361901	EWM25_35	599712055	EWF12591W	Electrolux	20081017
91452361902	EWM25_35	599716385	EWF12591W	Electrolux	20090306
91452362000	EWM25_35	599706772	ZWN6105	Zanussi	20080321
91452362001	EWM25_35	599712054	ZWN6105	Zanussi	20081017
91452362002	EWM25_35	599715282	ZWN6105	Zanussi	20090206
91452362100	EWM25_35	599706774	ZWN6125	Zanussi	20080321
91452362102	EWM25_35	599715866	ZWN6125	Zanussi	20090220
91452362200	EWM25_35	599708536	RWF12591W	Rex-Electrolux	20080530
91452362201	EWM25_35	599717161	RWF12591W	Rex-Electrolux	20090328
91452362300	EWM25_35	599708699	ZWN6100	Zanussi	20080606
91452362301	EWM25_35	599712891	ZWN6100	Zanussi	20081108
91452362302	EWM25_35	599715868	ZWN6100	Zanussi	20090220
91452362400	EWM25_35	599708700	ZWN6120	Zanussi	20080606
91452362401	EWM25_35	599712047	ZWN6120	Zanussi	20081017

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452362402	EWM25_35	599718217	ZWN6120	Zanussi	20090417
91452362500	EWM25_35	599711884	JLWM1406	John Lewis	20081010
91452362501	EWM25_35	599715287	JLWM1406	John Lewis	20090206
91452362800	EWM2100	599713279	RWF10591W	Rex-Electrolux	20081121
91452362800	EWM25_35	599713279	RWF10591W	Rex-Electrolux	20081121
91452362900	EWM25_35	599714384	IF9480.8	Zanker	20081226
91452362901	EWM25_35	599715684	IF9480.8	Zanker	20090214
91452363200	EWM25_35	599720077	IZWN3145	Ideal-Zanussi	20090626
91452363300	EWM25_35	599719919	50814	Privileg	20090619
91452363400	EWM25_35	599721437	RWF14591W	Rex-Electrolux	20090904
91452363800	EWM25_35	599721926	EWF14592W	Electrolux	20090925
91452370000	EWM25_35	599714430	00820320_20917	Privileg	20081226
91452370001	EWM25_35	599715288	00820320_20917	Privileg	20090206
91452400000	EWM1000	599378027	L50212	AEG Electrolux	20060414
91452400001	EWM1000	599383752	L50212	AEG Electrolux	20061027
91452400002	EWM1000	599387177	L50212	AEG Electrolux	20070323
91452400100	EWM1000	599378144	L50612	AEG Electrolux	20060421
91452400101	EWM1000	599383753	L50612	AEG Electrolux	20061027
91452400102	EWM1000	599387176	L50612	AEG Electrolux	20070323
91452400200	EWM1000	599380583	L52600	AEG Electrolux	20060623
91452400201	EWM1000	599383702	L52600	AEG Electrolux	20061027
91452400202	EWM1000	599387174	L52600	AEG Electrolux	20070323
91452400300	EWM1000	599380590	L54600	AEG Electrolux	20060616
91452400301	EWM1000	599383754	L54600	AEG Electrolux	20061027
91452400302	EWM1000	599387271	L54600	AEG Electrolux	20070323
91452400400	EWM1000	599381397	L52612	AEG Electrolux	20060714
91452400401	EWM1000	599383681	L52612	AEG Electrolux	20061020
91452400402	EWM1000	599387167	L52612	AEG Electrolux	20070323
91452400701	EWM1000	599384640	L5019	AEG Electrolux	20061117
91452400801	EWM1000	599385121	L5019	AEG Electrolux	20061208
91452400802	EWM1000	599388618	L5019	AEG Electrolux	20070518
91452401001	EWM1000	599385122	L52609	AEG Electrolux	20061208
91452401100	EWM1000	599383116	L58220	AEG Electrolux	20060908
91452401101	EWM1000	599383114	L58220	AEG Electrolux	20060929
91452401102	EWM1000	599387265	L58220	AEG Electrolux	20070323
91452401200	EWM1000	599383117	L58222	AEG Electrolux	20060908
91452401201	EWM1000	599383115	L58222	AEG Electrolux	20060929
91452401202	EWM1000	599388619	L58222	AEG Electrolux	20070518
91452401300	EWM1000	599383171	L58223	AEG Electrolux	20060908
91452401301	EWM1000	599383172	L58223	AEG Electrolux	20061006
91452401302	EWM1000	599388620	L58223	AEG Electrolux	20070518
91452401401	EWM1000	599387171	L50815	AEG Electrolux	20070323
91452401501	EWM1000	599387272	L52810	AEG Electrolux	20070323
91452401601	EWM1000	599388621	LP5051	AEG Electrolux	20070518
91452401701	EWM1000	599388622	LP5251	AEG Electrolux	20070518
91452401801	EWM1000	599387263	EWF1090	Electrolux	20070323
91452401900	EWM1000	599384750	L54600	AEG Electrolux	20061124
91452401901	EWM1000	599387273	L54600	AEG Electrolux	20070323
91452402000	EWM1000	599385123	L54609	AEG Electrolux	20061208
91452402001	EWM1000	599387266	L54609	AEG Electrolux	20070323
91452402100	EWM1000	599384232	L54811	AEG Electrolux	20061103
91452402101	EWM1000	599387277	L54811	AEG Electrolux	20070323
91452402200	EWM1000	599704842	L52810	AEG Electrolux	20071214
91452402300	EWM1000	599386223	L5214	AEG Electrolux	20070216
91452403000	EWM1000	599385439	L52608	AEG Electrolux	20070105

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452403001	EWM1000	599385441	L52608	AEG Electrolux	20070112
91452403100	EWM1000	599384482	L53601	AEG Electrolux	20061110
91452403101	EWM1000	599387278	L53601	AEG Electrolux	20070323
91452403200	EWM1000	599385124	L50600	AEG Electrolux	20061208
91452403201	EWM1000	599387258	L50600	AEG Electrolux	20070323
91452403300	EWM1000	599385634	L50212	AEG Electrolux	20070119
91452403400	EWM1000	599385635	L50612	AEG Electrolux	20070119
91452403500	EWM1000	599385636	L52612	AEG Electrolux	20070119
91452403700	EWM1000	599385867	L50800	AEG Electrolux	20070216
91452403900	EWM1000	599385869	L52810	AEG Electrolux	20070216
91452404100	EWM1000	599387855	L50210	AEG Electrolux	20070406
91452404600	EWM1000	599388938	L54106	AEG Electrolux	20070525
91452410000	EWM1000plus	599381428	L72812	AEG Electrolux	20060721
91452410001	EWM1000plus	599387259	L72812	AEG Electrolux	20070323
91452410100	EWM1000plus	599381519	L74812	AEG Electrolux	20060721
91452410101	EWM1000plus	599387279	L74812	AEG Electrolux	20070323
91452410200	EWM1000plus	599381491	L72805	AEG Electrolux	20060714
91452410201	EWM1000plus	599387280	L72805	AEG Electrolux	20070323
91452410501	EWM1000plus	599387260	L63815	AEG Electrolux	20070323
91452410600	EWM1000plus	599384460	L63813	AEG Electrolux	20061110
91452410601	EWM1000plus	599387262	L63813	AEG Electrolux	20070323
91452410700	EWM1000plus	599383291	L60610	AEG Electrolux	20061013
91452410701	EWM1000plus	599387281	L60610	AEG Electrolux	20070323
91452410800	EWM1000plus	599383293	L62610	AEG Electrolux	20061013
91452410801	EWM1000plus	599387285	L62610	AEG Electrolux	20070323
91452411000	EWM1000plus	599383162	L64600	AEG Electrolux	20060929
91452411100	EWM1000plus	599383606	L62825	AEG Electrolux	20061013
91452411101	EWM1000plus	599387282	L62825	AEG Electrolux	20070323
91452411200	EWM1000plus	599385637	L63815	AEG Electrolux	20070119
91452411301	EWM1000plus	599387264	L74810	AEG Electrolux	20070323
91452411400	EWM1000plus	599384638	L62810	AEG Electrolux	20061117
91452411601	EWM1000plus	599386827	L64810	AEG Electrolux	20070316
91452411700	EWM1000plus	599384072	L64811	AEG Electrolux	20061103
91452411701	EWM1000plus	599386828	L64811	AEG Electrolux	20070316
91452411800	EWM1000plus	599384073	L66811	AEG Electrolux	20061103
91452411801	EWM1000plus	599388623	L66811	AEG Electrolux	20070518
91452412000	EWM1000plus	599384645	L72800	AEG Electrolux	20061117
91452412001	EWM1000plus	599386830	L72800	AEG Electrolux	20070316
91452412100	EWM1000plus	599384647	L74800	AEG Electrolux	20061117
91452412101	EWM1000plus	599386831	L74800	AEG Electrolux	20070316
91452412300	EWM1000plus	599387860	L63812	AEG Electrolux	20070406
91452412400	EWM1000plus	599385585	L64810	AEG Electrolux	20070112
91452412401	EWM1000plus	599386832	L64810	AEG Electrolux	20070316
91452412500	EWM1000plus	599384656	L74803	AEG Electrolux	20061117
91452412501	EWM1000plus	599386840	L74803	AEG Electrolux	20070316
91452412600	EWM1000plus	599384488	L75805	AEG Electrolux	20061110
91452412800	EWM1000plus	599384074	L62800	AEG Electrolux	20061103
91452412801	EWM1000plus	599386833	L62800	AEG Electrolux	20070316
91452413000	EWM1000plus	599384075	L66800	AEG Electrolux	20061103
91452413100	EWM1000plus	599384082	L62806	AEG Electrolux	20061103
91452413101	EWM1000plus	599386834	L62806	AEG Electrolux	20070316
91452413300	EWM1000plus	599384483	WA1656	Novamatic	20061110
91452413301	EWM1000plus	599388624	WA1656	Novamatic	20070518
91452413400	EWM1000plus	599384658	L63600	AEG Electrolux	20061117
91452413501	EWM1000plus	599386835	L63803	AEG Electrolux	20070316

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452413700	EWM1000plus	599701305	L62810	AEG Electrolux	20070824
91452413900	EWM1000plus	599385600	L62809	AEG Electrolux	20070112
91452414200	EWM1000plus	599385612	L63800	AEG Electrolux	20070119
91452414301	EWM1000plus	599388627	L75605	AEG Electrolux	20070518
91452414400	EWM1000plus	599387856	L74812	AEG Electrolux	20070406
91452414500	EWM1000plus	599386793	L60805	AEG Electrolux	20070309
91452414600	EWM1000plus	599386301	L62825	AEG Electrolux	20070223
91452414700	EWM1000plus	599386236	L72600	AEG Electrolux	20070216
91452414900	EWM1000plus	599387857	L62810	AEG Electrolux	20070406
91452415000	EWM1000plus	599387861	L64810	AEG Electrolux	20070406
91452415100	EWM1000plus	599386794	L64606	AEG Electrolux	20070309
91452415200	EWM1000plus	599386795	L6480	AEG Electrolux	20070309
91452415300	EWM1000plus	599386796	L65800	AEG Electrolux	20070309
91452415400	EWM1000plus	599386300	L60895	AEG Electrolux	20070223
91452415500	EWM1000plus	599386797	L62895	AEG Electrolux	20070309
91452415600	EWM1000plus	599386798	L60825	AEG Electrolux	20070309
91452415900	EWM1000plus	599388400	L62605	AEG Electrolux	20070427
91452416000	EWM1000plus	599388097	L60900	AEG Electrolux	20070420
91452416200	EWM1000plus	599703424	L6415	AEG Electrolux	20071026
91452416300	EWM1000plus	599703427	L6661EX	AEG Electrolux	20071026
91452416400	EWM1000plus	599703428	L74810SPOR	AEG Electrolux	20071026
91452430400	EWM3000new	599386329	L76910	AEG Electrolux	20061208
91452430401	EWM3000new	599388638	L76910	AEG Electrolux	20070518
91452430800	EWM3000new	599384484	L66815	AEG Electrolux	20061110
91452430801	EWM3000new	599388639	L66815	AEG Electrolux	20070518
91452430900	EWM3000new	599384751	L76800	AEG Electrolux	20061124
91452430901	EWM3000new	599388641	L76800	AEG Electrolux	20070518
91452431300	EWM3000new	599384659	LB3850	AEG Electrolux	20061117
91452431301	EWM3000new	599702215	LB3850	AEG Electrolux	20071005
91452431700	EWM1000	599383930	EWF1870	Electrolux	20061027
91452440000	EWM1100	599704890	L52840	AEG Electrolux	20071214
91452440101	EWM1100	599703977	L50843	AEG Electrolux	20071116
91452440300	EWM1100	599701288	L54840	AEG Electrolux	20070824
91452440301	EWM1100	599712888	L54840	AEG Electrolux	20081108
91452440400	EWM1100	599704289	L50840	AEG Electrolux	20071123
91452440500	EWM1100	599703162	WAK2E100	Electrolux	20071019
91452440600	EWM1100	599704602	LP5052	AEG Electrolux	20071130
91452440700	EWM1100	599704993	LP5252	AEG Electrolux	20071214
91452440800	EWM1100	599704292	L54840	AEG Electrolux	20071123
91452440900	EWM1100	599704293	L54630	AEG Electrolux	20071123
91452441000	EWM1100	599704294	L54638	AEG Electrolux	20071123
91452441100	EWM1100	599705205	L54840	AEG Electrolux	20071221
91452441101	EWM1100	599712890	L54840	AEG Electrolux	20081108
91452441102	EWM1100	599714477	L54840	AEG Electrolux	20081212
91452441103	EWM1100	599715601	L54840	AEG Electrolux	20090213
91452441200	EWM1100	599705051	L52840	AEG Electrolux	20071221
91452441300	EWM1100	599707157	L52840	AEG Electrolux	20080404
91452441400	EWM1100	599706776	L55845	AEG Electrolux	20080321
91452441500	EWM1100	599709760	WA1241	FORS	20080705
91452441600	EWM1100	599717812	L50840	AEG Electrolux	20090411
91452441700	EWM1100	599717814	L52840	AEG Electrolux	20090411
91452441800	EWM1100	599714312	L52840	AEG Electrolux	20081221
91452442000	EWM1100	599715319	L50840	AEG Electrolux	20090206
91452442300	EWM1100	599721852	L56840	AEG Electrolux	20090925
91452450000	EWM2100	599704855	L64840	AEG Electrolux	20071214

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452450100	EWM2100	599389849	L62840	AEG Electrolux	20070622
91452450200	EWM2100	599389851	L64840	AEG Electrolux	20070622
91452450202	EWM2100	599712872	L64840	AEG Electrolux	20081108
91452450300	EWM2100	599389852	L66840	AEG Electrolux	20070622
91452450400	EWM25_35	599701297	L60843	AEG Electrolux	20070824
91452450401	EWM25_35	599710140	L60843	AEG Electrolux	20080718
91452450500	EWM25_35	599701303	L64841	AEG Electrolux	20070831
91452450600	EWM2100	599701914	L64842	AEG Electrolux	20070921
91452450601	EWM2100	599712875	L64842	AEG Electrolux	20081108
91452450700	EWM2100	599701976	L64843	AEG Electrolux	20070921
91452450701	EWM2100	599712877	L64843	AEG Electrolux	20081108
91452450800	EWM2100	599701981	L66843	AEG Electrolux	20070921
91452450900	EWM2100	599703942	L64845	AEG Electrolux	20071109
91452450901	EWM2100	599712879	L64845	AEG Electrolux	20081108
91452451000	EWM2100	599702541	L60640	AEG Electrolux	20071012
91452451001	EWM2100	599707580	L60640	AEG Electrolux	20080418
91452451100	EWM2100	599702549	L62640	AEG Electrolux	20071012
91452451101	EWM2100	599706864	L62640	AEG Electrolux	20080328
91452451200	EWM2100	599701369	L68640	AEG Electrolux	20070831
91452451201	EWM2100	599707856	L68640	AEG Electrolux	20080425
91452451300	EWM2100	599705206	L62840	AEG Electrolux	20071221
91452451400	EWM25_35	599701995	L72640	AEG Electrolux	20070921
91452451401	EWM25_35	599706446	L72640	AEG Electrolux	20080307
91452451500	EWM25_35	599703183	L60840	AEG Electrolux	20071019
91452451501	EWM25_35	599710392	L60840	AEG Electrolux	20080726
91452451800	EWM2100	599703186	WAL6E100	Electrolux	20071019
91452451801	EWM2100	599712884	WAL6E100	Electrolux	20081108
91452452000	EWM2100	599703439	WA1356F	AEG Electrolux	20071026
91452452001	EWM2100	599712880	WA1356F	Electrolux	20081108
91452452100	EWM2100	599704603	LB3252	AEG Electrolux	20071130
91452452200	EWM2100	599704606	LB3452	AEG Electrolux	20071130
91452452201	EWM2100	599712881	LB3452	AEG Electrolux	20081108
91452452300	EWM2100	599704608	LB3652	AEG Electrolux	20071130
91452452501	EWM2100	599706112	L6482	AEG Electrolux	20080222
91452452502	EWM2100	599706860	L6482	AEG Electrolux	20080328
91452452503	EWM2100	599712882	L6482	AEG Electrolux	20081108
91452452600	EWM2100	599704445	LP2252F	AEG Electrolux	20071130
91452452700	EWM2100	599704461	L64840	AEG Electrolux	20071130
91452452800	EWM2100	599704417	L64640	AEG Electrolux	20071123
91452452900	EWM2100	599704996	L66840	AEG Electrolux	20071214
91452452901	EWM2100	599707871	L66840	AEG Electrolux	20080425
91452453000	EWM2100	599705003	L64840	AEG Electrolux	20071214
91452453001	EWM2100	599707584	L64840	AEG Electrolux	20080418
91452453002	EWM2100	599712786	L64840	AEG Electrolux	20081107
91452453003	EWM2100	599714485	L64840	AEG Electrolux	20081226
91452453004	EWM2100	599715585	L64840	AEG Electrolux	20090213
91452453100	EWM2100	599704968	L62840	AEG Electrolux	20071214
91452453101	EWM2100	599708458	L62840	AEG Electrolux	20080530
91452453200	EWM2100	599705005	L64640	AEG Electrolux	20071214
91452453201	EWM2100	599707858	L64640	AEG Electrolux	20080425
91452453202	EWM2100	599712789	L64640	AEG Electrolux	20081107
91452453203	EWM2100	599714486	L64640	AEG Electrolux	20081226
91452453204	EWM2100	599715587	L64640	AEG Electrolux	20090213
91452453300	EWM2100	599704971	L64641	AEG Electrolux	20071214
91452453301	EWM2100	599707859	L64641	AEG Electrolux	20080425

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452453302	EWM2100	599712793	L64641	AEG Electrolux	20081107
91452453303	EWM2100	599714481	L64641	AEG Electrolux	20081212
91452453304	EWM2100	599715598	L64641	AEG Electrolux	20090213
91452453400	EWM2100	599706858	L65845	AEG Electrolux	20080321
91452453401	EWM2100	599707161	L65845	AEG Electrolux	20080404
91452453500	EWM2100	599707872	L64840	AEG Electrolux	20080425
91452453501	EWM2100	599712797	L64840	AEG Electrolux	20081107
91452453600	EWM25_35	599710135	L72840M	AEG Electrolux	20080718
91452453700	EWM2100	599708705	L66840	AEG Electrolux	20080606
91452453800	EWM2100	599709925	WA1251	FORS	20080711
91452453901	EWM2100	599713082	WA1451	FORS	20081114
91452454000	EWM25_35	599709764	WA1651	FORS	20080705
91452454001	EWM25_35	599717411	WA1651	FORS	20090403
91452454300	EWM25_35	599714310	L60847	AEG Electrolux	20081221
91452454400	EWM2100	599716805	L64840L	AEG Electrolux	20090320
91452454500	EWM2100	599716547	L64840L	AEG Electrolux	20090313
91452454600	EWM2100	599716807	L66840L	AEG Electrolux	20090320
91452455000	EWM2100	599717991	L62840L	AEG Electrolux	20090417
91452455100	EWM2100	599721461	L60640	AEG Electrolux	20090904
91452455200	EWM2100	599716552	L66640	AEG Electrolux	20090313
91452455300	EWM2100	599716810	L64640	AEG Electrolux	20090320
91452455700	EWM2100	599721464	L60840L	AEG Electrolux	20090904
91452455801	EWM2100	599721520	L62840L	AEG Electrolux	20090904
91452455900	EWM2100	599721934	L64680L	AEG Electrolux	20090925
91452460000	EWM25_35	599702103	L78840	AEG Electrolux	20070928
91452460100	EWM25_35	599702104	L78840	AEG Electrolux	20070928
91452460101	EWM25_35	599707873	L78840	AEG Electrolux	20080425
91452460200	EWM25_35	599702042	L78840	AEG Electrolux	20070921
91452460201	EWM25_35	599706934	L78840	AEG Electrolux	20080328
91452460400	EWM25_35	599702051	QW18805	Husqvarna Electrolux	20070921
91452460401	EWM25_35	599706937	QW18805	Husqvarna Electrolux	20080328
91452460500	EWM25_35	599703224	WASL4E100	Electrolux	20071019
91452460501	EWM25_35	599706448	WASL4E100	Electrolux	20080307
91452460600	EWM25_35	599705184	LR2852	AEG Electrolux	20071221
91452460601	EWM25_35	599706117	LR2852	AEG Electrolux	20080222
91452460700	EWM25_35	599707888	LN78860	AEG Electrolux	20080425
91452460800	EWM25_35	599707890	LN78860	AEG Electrolux	20080425
91452500000	EWM1000	599383160	L58820	AEG Electrolux	20060908
91452500001	EWM1000	599383167	L58820	AEG Electrolux	20061006
91452500100	EWM1000	599383165	L58828	AEG Electrolux	20060908
91452500101	EWM1000	599383682	L58828	AEG Electrolux	20061020
91452500200	EWM1000	599385855	L52820	AEG Electrolux	20070209
91452510000	EWM1000plus	599381518	L64800	AEG Electrolux	20060721
91452510100	EWM1000plus	599381521	L64806	AEG Electrolux	20060721
91452510200	EWM1000plus	599381532	QW12670	Husqvarna Electrolux	20060721
91452510300	EWM1000plus	599381533	QW13680	Husqvarna Electrolux	20060721
91452510400	EWM1000plus	599381536	QW14760	Husqvarna Electrolux	20060721
91452510500	EWM1000plus	599381538	QW15770	Husqvarna Electrolux	20060721
91452510600	EWM1000plus	599381275	L74820	AEG Electrolux	20060707
91452510700	EWM1000plus	599381277	L76820	AEG Electrolux	20060707
91452510800	EWM1000plus	599383526	L74810	AEG Electrolux	20060707
91452510900	EWM1000plus	599383156	L74819	AEG Electrolux	20060929
91452511100	EWM1000plus	599381757	L62810	AEG Electrolux	20060728
91452511200	EWM1000plus	599381761	L74810	AEG Electrolux	20060728
91452511300	EWM1000plus	599381766	L75805	AEG Electrolux	20060728

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452511500	EWM1000plus	599701436	L64819	AEG Electrolux	20070726
91452511800	EWM1000plus	599385125	L64819	AEG Electrolux	20061208
91452511900	EWM1000plus	599385126	L74819	AEG Electrolux	20061208
91452512100	EWM1000plus	599383137	L64819	AEG Electrolux	20060929
91452512200	EWM1000plus	599385127	L60829	AEG Electrolux	20061208
91452512300	EWM1000plus	599385128	L60829	AEG Electrolux	20061208
91452512400	EWM1000plus	599383159	L70810	AEG Electrolux	20060929
91452512500	EWM1000plus	599383164	L72810	AEG Electrolux	20060929
91452512600	EWM1000plus	599383168	L74810	AEG Electrolux	20060929
91452512700	EWM1000plus	599383224	L74825	AEG Electrolux	20061006
91452512800	EWM1000plus	599704864	L62812	AEG Electrolux	20071214
91452512900	EWM1000plus	599384083	LB3051	AEG Electrolux	20061103
91452513000	EWM1000plus	599384085	LB3251	AEG Electrolux	20061103
91452513100	EWM1000plus	599384084	LB3451	AEG Electrolux	20061103
91452513200	EWM1000plus	599383233	EWF1182	Electrolux	20061006
91452513300	EWM1000plus	599383234	EWF1280	Electrolux	20061006
91452513400	EWM1000plus	599383235	EWF1490	Electrolux	20061006
91452513500	EWM1000plus	599383294	EWF1387	Electrolux	20061013
91452513600	EWM1000plus	599386841	LB3452N	AEG Electrolux	20070316
91452513700	EWM1000plus	599384246	L74810	AEG Electrolux	20061103
91452513800	EWM1000plus	599385129	L74810	AEG Electrolux	20061208
91452513900	EWM1000plus	599385131	L74819	AEG Electrolux	20061208
91452514000	EWM1000plus	599386800	L72818	AEG Electrolux	20070309
91452514200	EWM1000plus	599385601	LPRINCESS	AEG Electrolux	20070112
91452514300	EWM1000plus	599385598	LBELLA	AEG Electrolux	20070112
91452514400	EWM1000plus	599384233	L75805	AEG Electrolux	20061103
91452514500	EWM1000plus	599702672	L64810	AEG Electrolux	20071012
91452514600	EWM1000plus	599700647	L74810	AEG Electrolux	20070720
91452514800	EWM1000plus	599704865	L74800	AEG Electrolux	20071214
91452514900	EWM1000plus	599385584	L60824	AEG Electrolux	20070112
91452515100	EWM1000plus	599385586	L60827	AEG Electrolux	20070112
91452515200	EWM1000plus	599385587	L60828	AEG Electrolux	20070112
91452515300	EWM1000plus	599385588	L61825	AEG Electrolux	20070112
91452515400	EWM1000plus	599385589	L62828	AEG Electrolux	20070112
91452515500	EWM1000plus	599385590	L64822	AEG Electrolux	20070112
91452515600	EWM1000plus	599385593	L64823	AEG Electrolux	20070112
91452515700	EWM1000plus	599385594	L65825	AEG Electrolux	20070112
91452515800	EWM1000plus	599385595	L60820	AEG Electrolux	20070112
91452515900	EWM1000plus	599385130	L62800	AEG Electrolux	20061208
91452516000	EWM1000plus	599385138	L74800	AEG Electrolux	20061208
91452516100	EWM1000plus	599386229	L72880	AEG Electrolux	20070216
91452516200	EWM1000plus	599386298	L74810	AEG Electrolux	20070223
91452516201	EWM1000plus	599388628	L74810	AEG Electrolux	20070518
91452516300	EWM1000plus	599388100	L60810	AEG Electrolux	20070420
91452516400	EWM1000plus	599387716	L60210	AEG Electrolux	20070330
91452516500	EWM1000plus	599387869	L60810	AEG Electrolux	20070406
91452516600	EWM1000plus	599387872	L62810	AEG Electrolux	20070406
91452516700	EWM1000plus	599387873	L70810	AEG Electrolux	20070406
91452516800	EWM1000plus	599387876	L72810	AEG Electrolux	20070406
91452517000	EWM1000plus	599702695	L72815 VERS.WHITE	AEG Electrolux	20071012
91452517000	EWM1000plus	599703976	L72815 VERS.SILVER	AEG Electrolux	20071109
91452520000	EWM2000evo	599383529	L84812	AEG Electrolux	20060714
91452520100	EWM2000evo	599383383	QW14790	Husqvarna Electrolux	20061013
91452520200	EWM2000evo	599384087	L84820	AEG Electrolux	20061103
91452520400	EWM2000evo	599381776	L84810	AEG Electrolux	20060728

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452520600	EWM2000evo	599385614	QW14800	Husqvarna Electrolux	20070119
91452520700	EWM2000evo	599383607	EWF1481	Electrolux	20061013
91452520800	EWM2000evo	599386234	L84810	AEG Electrolux	20070216
91452520900	EWM2000evo	599387877	L84810	AEG Electrolux	20070406
91452530200	EWM3000new	599384088	L76810	AEG Electrolux	20061103
91452530300	EWM3000new	599383188	L76819	AEG Electrolux	20060929
91452530400	EWM3000new	599383189	L76810	AEG Electrolux	20060929
91452531100	EWM3000new	599704894	L76819	AEG Electrolux	20071214
91452531500	EWM3000new	599385135	L76819	AEG Electrolux	20061208
91452531600	EWM3000new	599385136	L76818	AEG Electrolux	20061208
91452531800	EWM3000new	599385133	L76820	AEG Electrolux	20061208
91452532400	EWM3000new	599385134	L75817	AEG Electrolux	20061208
91452532500	EWM3000new	599384760	L76815	AEG Electrolux	20061124
91452532600	EWM3000new	599386819	L76815	AEG Electrolux	20070309
91452532700	EWM3000new	599385856	L76820	AEG Electrolux	20070209
91452532900	EWM3000new	599385565	QW16700	Husqvarna Electrolux	20070112
91452533300	EWM3000new	599700648	L76880	AEG Electrolux	20070720
91452533700	EWM3000new	599386239	L76830	AEG Electrolux	20070216
91452533800	EWM3000new	599386222	L76840	AEG Electrolux	20070216
91452533900	EWM3000new	599386240	L76850	AEG Electrolux	20070216
91452534600	EWM3000new	599387883	L76810	AEG Electrolux	20070406
91452540000	EWM1100	599701290	L52850	AEG Electrolux	20070831
91452540001	EWM1100	599720062	L52850	AEG Electrolux	20090626
91452550000	EWM2100	599389400	L62850	AEG Electrolux	20070601
91452550002	EWM2100	599712802	L62850	AEG Electrolux	20081107
91452550100	EWM25_35	599701758	L62853	AEG Electrolux	20070907
91452550101	EWM25_35	599710143	L62853	AEG Electrolux	20080718
91452550102	EWM2100	599713200	L62853	AEG Electrolux	20081114
91452550102	EWM25_35	599713200	L62853	AEG Electrolux	20081114
91452550200	EWM25_35	599701111	L72853	AEG Electrolux	20070615
91452550201	EWM25_35	599704012	L72853	AEG Electrolux	20071116
91452550202	EWM25_35	599713331	L72853	AEG Electrolux	20081122
91452550300	EWM25_35	599701313	L64851	AEG Electrolux	20070824
91452550301	EWM25_35	599710146	L64851	AEG Electrolux	20080718
91452550400	EWM25_35	599701306	L72650	AEG Electrolux	20070831
91452550401	EWM25_35	599706967	L72650	AEG Electrolux	20080328
91452550500	EWM2100	599701371	L68650	AEG Electrolux	20070831
91452550501	EWM2100	599707863	L68650	AEG Electrolux	20080425
91452550600	EWM25_35	599701316	L74653	AEG Electrolux	20070824
91452550601	EWM25_35	599710394	L74653	AEG Electrolux	20080726
91452550603	EWM25_35	599719961	L74653	AEG Electrolux	20090626
91452550700	EWM25_35	599701312	L75655	AEG Electrolux	20070824
91452550701	EWM25_35	599712060	L75655	AEG Electrolux	20081017
91452550702	EWM25_35	599719965	L75655	AEG Electrolux	20090626
91452550703	EWM25_35	599720933	L75655	AEG Electrolux	20090807
91452550800	EWM25_35	599701308	L70657	AEG Electrolux	20070824
91452550801	EWM25_35	599710148	L70657	AEG Electrolux	20080718
91452550803	EWM25_35	599719967	L70657	AEG Electrolux	20090626
91452550900	EWM25_35	599701317	L70654	AEG Electrolux	20070824
91452550901	EWM25_35	599710149	L70654	AEG Electrolux	20080718
91452550903	EWM25_35	599719969	L70654	AEG Electrolux	20090626
91452551000	EWM25_35	599701318	L72656	AEG Electrolux	20070824
91452551001	EWM25_35	599710395	L72656	AEG Electrolux	20080726
91452551002	EWM25_35	599713085	L72656	AEG Electrolux	20081114
91452551004	EWM25_35	599720655	L72656	AEG Electrolux	20090717

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452551100	EWM25_35	599701309	L71655	AEG Electrolux	20070824
91452551101	EWM25_35	599710396	L71655	AEG Electrolux	20080726
91452551103	EWM25_35	599720579	L71655	AEG Electrolux	20090710
91452551200	EWM25_35	599701310	L72658	AEG Electrolux	20070831
91452551201	EWM25_35	599712062	L72658	AEG Electrolux	20081017
91452551202	EWM25_35	599715608	L72658	AEG Electrolux	20090213
91452551204	EWM25_35	599719970	L72658	AEG Electrolux	20090626
91452551300	EWM25_35	599701311	L74652	AEG Electrolux	20070831
91452551301	EWM25_35	599710397	L74652	AEG Electrolux	20080726
91452551303	EWM25_35	599719974	L74652	AEG Electrolux	20090626
91452551400	EWM2100	599701314	L60850	AEG Electrolux	20070831
91452551500	EWM25_35	599701535	L74651	AEG Electrolux	20070831
91452551501	EWM25_35	599708310	L74651	AEG Electrolux	20080523
91452551600	EWM25_35	599701942	L74652	AEG Electrolux	20070921
91452551601	EWM25_35	599707321	L74652 VERS. WHITE	AEG Electrolux	20080411
91452551601	EWM25_35	599712257	L74652 VERS.SILVER	AEG Electrolux	20081024
91452551700	EWM25_35	599701946	L76651	AEG Electrolux	20070921
91452551701	EWM25_35	599706449	L76651	AEG Electrolux	20080307
91452551702	EWM25_35	599720521	L76651	AEG Electrolux	20090710
91452551900	EWM25_35	599704899	L74650	AEG Electrolux	20071214
91452551901	EWM25_35	599708440	L74650	AEG Electrolux	20080530
91452551902	EWM25_35	599720459	L74650	AEG Electrolux	20090703
91452552100	EWM25_35	599702112	L76853M	AEG Electrolux	20070928
91452552101	EWM25_35	599720578	L76853M	AEG Electrolux	20090710
91452552200	EWM25_35	599703194	WAGL4E100	Electrolux	20071019
91452552201	EWM25_35	599713337	WAGL4E100	Electrolux	20081122
91452552202	EWM25_35	599719975	WAGL4E100	Electrolux	20090626
91452552300	EWM25_35	599703195	WAGL6E100	Electrolux	20071019
91452552301	EWM25_35	599719979	WAGL6E100	Electrolux	20090626
91452552400	EWM25_35	599703200	WAGL7E100	Electrolux	20071019
91452552401	EWM25_35	599719980	WAGL7E100	Electrolux	20090626
91452552700	EWM25_35	599702675	L72655	AEG Electrolux	20071012
91452552701	EWM25_35	599706244	L72655	AEG Electrolux	20080229
91452552702	EWM25_35	599715873	L72655	AEG Electrolux	20090220
91452552800	EWM25_35	599705820	LB3453N	AEG Electrolux	20080208
91452552801	EWM25_35	599719984	LB3453N	AEG Electrolux	20090626
91452552900	EWM2100	599705187	L64853	AEG Electrolux	20071221
91452552901	EWM2100	599709723	L64853	AEG Electrolux	20080704
91452553000	EWM25_35	599705208	L76658	AEG Electrolux	20071221
91452553001	EWM25_35	599706450	L76658	AEG Electrolux	20080307
91452553003	EWM25_35	599720026	L76658	AEG Electrolux	20090626
91452553004	EWM25_35	599720939	L76658	AEG Electrolux	20090807
91452553100	EWM25_35	599705210	LREGINA	AEG Electrolux	20071221
91452553101	EWM25_35	599706968	LREGINA	AEG Electrolux	20080328
91452553103	EWM25_35	599719990	LREGINA	AEG Electrolux	20090626
91452553104	EWM25_35	599720935	LREGINA	AEG Electrolux	20090807
91452553200	EWM25_35	599705232	L74658	AEG Electrolux	20071221
91452553201	EWM25_35	599706183	L74658	AEG Electrolux	20080222
91452553203	EWM25_35	599720007	L74658	AEG Electrolux	20090626
91452553300	EWM25_35	599705211	LBELLA	AEG Electrolux	20071221
91452553301	EWM25_35	599706451	LBELLA	AEG Electrolux	20080307
91452553302	EWM25_35	599719800	LBELLA	AEG Electrolux	20090529
91452553303	EWM25_35	599720009	LBELLA	AEG Electrolux	20090626
91452553400	EWM25_35	599706970	L64851	AEG Electrolux	20080328
91452553401	EWM25_35	599720657	L64851	AEG Electrolux	20090717

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452553500	EWM25_35	599714392	L74650	AEG Electrolux	20081226
91452553501	EWM25_35	599720461	L74650	AEG Electrolux	20090703
91452553600	EWM2100	599706661	L64850	AEG Electrolux	20080314
91452553700	EWM2100	599708819	L64850	AEG Electrolux	20080606
91452553800	EWM25_35	599708706	L74650	AEG Electrolux	20080606
91452553801	EWM25_35	599712806	L74650	AEG Electrolux	20081107
91452553802	EWM25_35	599720010	L74650	AEG Electrolux	20090626
91452553900	EWM25_35	599708708	L76650	AEG Electrolux	20080606
91452553901	EWM25_35	599712064	L76650	AEG Electrolux	20081017
91452553902	EWM25_35	599720443	L76650	AEG Electrolux	20090703
91452553903	EWM25_35	599720937	L76650	AEG Electrolux	20090807
91452554000	EWM25_35	599710138	L72650	AEG Electrolux	20080718
91452554001	EWM25_35	599716844	L72650	AEG Electrolux	20090321
91452554100	EWM2100	599709938	WAGLES7000	Electrolux	20080711
91452554200	EWM2100	599711341	L60550	AEG Electrolux	20080829
91452554300	EWM2100	599711657	L705500	AEG Electrolux	20080919
91452554400	EWM2100	599711662	L725500	AEG Electrolux	20080912
91452554401	EWM2100	599712819	L725500	AEG Electrolux	20081107
91452554500	EWM25_35	599711663	L72650	AEG Electrolux	20080919
91452554501	EWM25_35	599715877	L72650	AEG Electrolux	20090220
91452554600	EWM25_35	599711573	LAVAMAT5.0	AEG Electrolux	20080927
91452554601	EWM25_35	599720014	LAVAMAT5.0	AEG Electrolux	20090626
91452554700	EWM25_35	599712258	LAVAMAT5.0	AEG Electrolux	20081024
91452554800	EWM25_35	599712259	LAVAMAT5.0	AEG Electrolux	20081024
91452554900	EWM25_35	599713280	LAVAMAT5.0	AEG Electrolux	20081121
91452555000	EWM25_35	599712512	L75655	AEG Electrolux	20081031
91452555200	EWM2100	599718218	L705500	AEG Electrolux	20090417
91452555300	EWM2100	599718219	L725500	AEG Electrolux	20090417
91452555500	EWM2100	599716555	L72559	AEG Electrolux	20090313
91452556000	EWM2100	599721774	L64850L	AEG Electrolux	20090918
91452556300	EWM2100	599717510	L74750	AEG Electrolux	20090404
91452556500	EWM25_35	599717750	L66850L	AEG Electrolux	20090410
91452556501	EWM25_35	599720938	L66850L	AEG Electrolux	20090807
91452556600	EWM2100	599717751	L64850L	AEG Electrolux	20090410
91452556800	EWM2100	599718004	L62850L	AEG Electrolux	20090417
91452556900	EWM2100	599719922	L74750	AEG Electrolux	20090619
91452557400	EWM2100	599720661	L64857L	AEG Electrolux	20090717
91452557500	EWM2100	599719923	L62850L	AEG Electrolux	20090619
91452557600	EWM2100	599721937	L64880L	AEG Electrolux	20090925
91452557700	EWM25_35	599721938	L66880L	AEG Electrolux	20090925
91452560000	EWM25_35	599704907	L76850	AEG Electrolux	20071214
91452560100	EWM25_35	599389401	L74850	AEG Electrolux	20070601
91452560200	EWM25_35	599389404	L76850	AEG Electrolux	20070601
91452560300	EWM25_35	599389840	L74850	AEG Electrolux	20070622
91452560400	EWM25_35	599389842	L76850	AEG Electrolux	20070622
91452560402	EWM25_35	599720929	L76850	AEG Electrolux	20090807
91452560500	EWM25_35	599701560	L74850M	AEG Electrolux	20070831
91452560501	EWM25_35	599706946	L74850M	AEG Electrolux	20080328
91452560600	EWM25_35	599702546	L74850M	AEG Electrolux	20071012
91452560700	EWM25_35	599701315	L76850	AEG Electrolux	20070824
91452560800	EWM25_35	599701365	L74850	AEG Electrolux	20070831
91452561000	EWM2100	599702535	L72850	AEG Electrolux	20071012
91452561000	EWM25_35	599702535	L72850	AEG Electrolux	20071012
91452561001	EWM25_35	599713199	L72850	AEG Electrolux	20081114
91452561100	EWM25_35	599702002	L70850	AEG Electrolux	20070922

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452561200	EWM25_35	599702039	L74850	AEG Electrolux	20070921
91452561300	EWM25_35	599702102	L70850M	AEG Electrolux	20070928
91452561400	EWM25_35	599702101	L72850M	AEG Electrolux	20070928
91452561401	EWM25_35	599713699	L72850M	AEG Electrolux	20081205
91452561500	EWM25_35	599703225	WASL2E100	Electrolux	20071019
91452561600	EWM2100	599703206	WA1657	Novamatic	20071019
91452561600	EWM2100	599706003	WA1657	Novamatic	20080215
91452561600	EWM25_35	599703206	WA1657	Novamatic	20071019
91452561600	EWM25_35	599706003	WA1657	Novamatic	20080215
91452561601	EWM25_35	599720915	WA1657	Novamatic	20090807
91452561700	EWM25_35	599705194	LR2452	AEG Electrolux	20071221
91452561800	EWM25_35	599705237	LR2652	AEG Electrolux	20071221
91452561801	EWM25_35	599722356	LR2652	AEG Electrolux	20090916
91452561900	EWM25_35	599705195	WASL1E100	Electrolux	20071221
91452561901	EWM25_35	599720916	WASL1E100	Electrolux	20090807
91452562000	EWM25_35	599705228	L76659	AEG Electrolux	20071221
91452562001	EWM25_35	599706969	L76659	AEG Electrolux	20080328
91452562002	EWM25_35	599719801	L76659	AEG Electrolux	20090612
91452562003	EWM25_35	599720917	L76659	AEG Electrolux	20090807
91452562100	EWM25_35	599705212	L74659	AEG Electrolux	20071221
91452562101	EWM25_35	599706452	L74659	AEG Electrolux	20080307
91452562102	EWM25_35	599719804	L74659	AEG Electrolux	20090612
91452562200	EWM25_35	599705314	L74850	AEG Electrolux	20080111
91452562300	EWM25_35	599705305	L76850	AEG Electrolux	20080111
91452562400	EWM25_35	599707162	L76850	AEG Electrolux	20080404
91452562600	EWM25_35	599707585	L74850M	AEG Electrolux	20080418
91452562700	EWM25_35	599710121	L74850B	AEG Electrolux	20080718
91452562800	EWM25_35	599711682	L74850B	AEG Electrolux	20081003
91452562900	EWM2100	599709940	WE7600	FORS	20080711
91452562900	EWM25_35	599709940	WE7600	FORS	20080711
91452562901	EWM25_35	599720919	WE7600	FORS	20090807
91452563000	EWM25_35	599713838	L74850B	AEG Electrolux	20081206
91452563100	EWM25_35	599720478	L74850A	AEG Electrolux	20090710
91452563200	EWM25_35	599716811	L74850A	AEG Electrolux	20090320
91452563300	EWM25_35	599720480	L76850A	AEG Electrolux	20090710
91452563301	EWM25_35	599720921	L76850A	AEG Electrolux	20090807
91452563400	EWM2100	599716558	L76850A	AEG Electrolux	20090313
91452563400	EWM25_35	599716558	L76850A	AEG Electrolux	20090313
91452563401	EWM25_35	599720923	L76850A	AEG Electrolux	20090807
91452563600	EWM25_35	599717811	L76850A	AEG Electrolux	20090411
91452563700	EWM25_35	599717813	L74850A	AEG Electrolux	20090411
91452563800	EWM25_35	599719746	L72853A	AEG Electrolux	20090612
91452563900	EWM25_35	599718886	L74850B	AEG Electrolux	20090501
91452564000	EWM25_35	599718851	L74850B	AEG Electrolux	20090501
91452564100	EWM25_35	599717757	L74850A	AEG Electrolux	20090410
91452564200	EWM25_35	599717759	L76850A	AEG Electrolux	20090410
91452564201	EWM25_35	599720924	L76850A	AEG Electrolux	20090807
91452564500	EWM25_35	599721469	L72850M	AEG Electrolux	20090904
91452564600	EWM25_35	599719303	L72850M	AEG Electrolux	20090515
91452564700	EWM25_35	599718888	L72850M	AEG Electrolux	20090501
91452565000	EWM25_35	599720954	L74650LE	AEG Electrolux	20090807
91452565100	EWM25_35	599721483	L74650LE	AEG Electrolux	20090904
91452565200	EWM25_35	599721485	L70850A	AEG Electrolux	20090904
91452565300	EWM25_35	599721363	L72850A	AEG Electrolux	20090828
91452565400	EWM25_35	599721493	L74850A	AEG Electrolux	20090904

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452565500	EWM25_35	599721853	L74650LE	AEG Electrolux	20090925
91452565600	EWM25_35	599722228	L74650LE	AEG Electrolux	20090929
91452565700	EWM25_35	599722033	L75854A	AEG Electrolux	20090922
91452565800	EWM25_35	599722070	L75854A	AEG Electrolux	20090924
91452565900	EWM25_35	599722078	L75854A	AEG Electrolux	20090921
91452566100	EWM25_35	599721943	L75854A	AEG Electrolux	20090925
91452570000	EWM25_35	599389146	L84850	AEG Electrolux	20070525
91452570002	EWM25_35	599705555	L84850	AEG Electrolux	20080125
91452570200	EWM25_35	599701114	L86850	AEG Electrolux	20070824
91452570300	EWM25_35	599701115	L84850	AEG Electrolux	20070824
91452570400	EWM25_35	599700729	L86850	AEG Electrolux	20070601
91452570500	EWM25_35	599701112	L86859	AEG Electrolux	20070810
91452570600	EWM25_35	599701118	L86850	AEG Electrolux	20070824
91452570800	EWM25_35	599703209	L86850	AEG Electrolux	20071019
91452570900	EWM25_35	599702043	L86850	AEG Electrolux	20070921
91452570901	EWM25_35	599705822	L86850	AEG Electrolux	20080208
91452571000	EWM25_35	599701903	L84850	AEG Electrolux	20070921
91452571100	EWM25_35	599701905	L86850	AEG Electrolux	20070921
91452571200	EWM25_35	599702050	QW16905	Husqvarna Electrolux	20070921
91452571201	EWM25_35	599705748	QW16905	Husqvarna Electrolux	20080201
91452571202	EWM25_35	599718251	QW16905	Husqvarna Electrolux	20090417
91452571203	EWM25_35	599720925	QW16905	Husqvarna Electrolux	20090807
91452571300	EWM25_35	599703223	WASL6E100	Electrolux	20071019
91452571301	EWM25_35	599720677	WASL6E100	Electrolux	20090717
91452571400	EWM25_35	599704775	LR1652	AEG Electrolux	20071207
91452571500	EWM25_35	599711683	L86850	AEG Electrolux	20081003
91452571501	EWM25_35	599722267	L86850	AEG Electrolux	20090827
91452571600	EWM25_35	599707336	L84850M	AEG Electrolux	20080411
91452571700	EWM25_35	599709725	LN88670	AEG Electrolux	20080704
91452571701	EWM25_35	599715593	LN88670	AEG Electrolux	20090213
91452571800	EWM25_35	599710122	LN88670	AEG Electrolux	20080718
91452571900	EWM25_35	599712084	L86850WS	AEG Electrolux	20081017
91452571901	EWM25_35	599716088	L86850WS	AEG Electrolux	20090227
91452572100	EWM25_35	599717815	L86850A	AEG Electrolux	20090411
91452572101	EWM25_35	599720926	L86850A	AEG Electrolux	20090807
91452572200	EWM25_35	599717761	L86850A	AEG Electrolux	20090410
91452572201	EWM25_35	599720927	L86850A	AEG Electrolux	20090807
91452572300	EWM25_35	599717762	L84850A	AEG Electrolux	20090410
91452572400	EWM25_35	599719758	L86853A	AEG Electrolux	20090612
91452572700	EWM25_35	599717817	L86859A	AEG Electrolux	20090411
91452572701	EWM25_35	599720928	L86859A	AEG Electrolux	20090807
91452630000	EWM3000new	599382655	L74900	AEG Electrolux	20060908
91452630001	EWM3000new	599388633	L74900	AEG Electrolux	20070518
91452630100	EWM3000new	599383190	L74900	AEG Electrolux	20060929
91452630101	EWM3000new	599387112	L74900	AEG Electrolux	20070316
91452630200	EWM3000new	599383925	L74900	AEG Electrolux	20061027
91452630201	EWM3000new	599387119	L74900	AEG Electrolux	20070316
91452630300	EWM3000new	599383932	L74900	AEG Electrolux	20061027
91452630301	EWM3000new	599387113	L74900	AEG Electrolux	20070316
91452630401	EWM3000new	599387121	L74900	AEG Electrolux	20070316
91452630500	EWM3000new	599383936	L74900	AEG Electrolux	20061027
91452630501	EWM3000new	599387124	L74900	AEG Electrolux	20070316
91452630600	EWM1000plus	599383166	L74900	AEG Electrolux	20060929
91452630601	EWM3000new	599702817	L74900	AEG Electrolux	20071012
91452630700	EWM3000new	599387882	L74900	AEG Electrolux	20070406

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452630801	EWM3000new	599387116	L74900	AEG Electrolux	20070316
91452630900	EWM3000new	599384660	L74900	AEG Electrolux	20061117
91452630901	EWM3000new	599387117	L74900	AEG Electrolux	20070316
91452631000	EWM3000new	599384485	L74900	AEG Electrolux	20061110
91452631001	EWM3000new	599388634	L74900	AEG Electrolux	20070518
91452631100	EWM3000new	599386297	QW14780	Husqvarna Electrolux	20070223
91452631200	EWM3000new	599386295	L72900	AEG Electrolux	20070223
91452660000	EWM25_35	599704909	L74950	AEG Electrolux	20071214
91452660002	EWM25_35	599715499	L74950	AEG Electrolux	20090213
91452660100	EWM25_35	599389846	L74950	AEG Electrolux	20070622
91452660102	EWM25_35	599715508	L74950	AEG Electrolux	20090213
91452660200	EWM25_35	599389848	L74950	AEG Electrolux	20070622
91452660202	EWM25_35	599715512	L74950	AEG Electrolux	20090213
91452660300	EWM25_35	599701138	L74953	AEG Electrolux	20070810
91452660301	EWM25_35	599715533	L74953	AEG Electrolux	20090213
91452660400	EWM25_35	599701879	L74950	AEG Electrolux	20070921
91452660401	EWM25_35	599715687	L74950	AEG Electrolux	20090214
91452660500	EWM25_35	599701143	L74950	AEG Electrolux	20070824
91452660501	EWM25_35	599706955	L74950	AEG Electrolux	20080328
91452660502	EWM25_35	599715689	L74950	AEG Electrolux	20090214
91452660600	EWM25_35	599702110	L74950	AEG Electrolux	20070928
91452660700	EWM25_35	599702105	L74950	AEG Electrolux	20070928
91452660701	EWM25_35	599720025	L74950	AEG Electrolux	20090626
91452660800	EWM25_35	599702044	L74950	AEG Electrolux	20070921
91452660900	EWM25_35	599701908	L74950	AEG Electrolux	20070921
91452660901	EWM25_35	599715534	L74950	AEG Electrolux	20090213
91452661000	EWM25_35	599703761	L74959	AEG Electrolux	20071102
91452661100	EWM25_35	599701891	L74665	AEG Electrolux	20070921
91452661102	EWM25_35	599710124	L74665 VERS.WHITE	AEG Electrolux	20080718
91452661200	EWM25_35	599702052	QW14785	Husqvarna Electrolux	20070921
91452661300	EWM25_35	599702106	L72950	AEG Electrolux	20070928
91452661301	EWM25_35	599715538	L72950	AEG Electrolux	20090213
91452661400	EWM25_35	599702107	L74950	AEG Electrolux	20070928
91452661401	EWM25_35	599715690	L74950	AEG Electrolux	20090214
91452661500	EWM25_35	599706960	QW14785K	Husqvarna Electrolux	20080328
91452661501	EWM25_35	599717162	QW14785K	Husqvarna Electrolux	20090328
91452661600	EWM25_35	599707316	L74950	AEG Electrolux	20080411
91452661601	EWM25_35	599720028	L74950	AEG Electrolux	20090626
91452661700	EWM25_35	599706434	L74920	AEG Electrolux	20080307
91452661701	EWM25_35	599713087	L74920	AEG Electrolux	20081114
91452661702	EWM25_35	599715539	L74920	AEG Electrolux	20090213
91452661800	EWM25_35	599707952	LN78480	AEG Electrolux	20080425
91452661801	EWM25_35	599715694	LN78480	AEG Electrolux	20090214
91452661900	EWM25_35	599707956	LN78480	AEG Electrolux	20080425
91452661901	EWM25_35	599715540	LN78480	AEG Electrolux	20090213
91452662000	EWM25_35	599708716	L74950	AEG Electrolux	20080606
91452662001	EWM25_35	599715696	L74950	AEG Electrolux	20090214
91452662100	EWM25_35	599711555	L74950B	AEG Electrolux	20080927
91452662101	EWM25_35	599716868	L74950B	AEG Electrolux	20090321
91452662200	EWM25_35	599712505	L74959	AEG Electrolux	20081101
91452662201	EWM25_35	599715541	L74959	AEG Electrolux	20090213
91452662400	EWM25_35	599720481	L74950A	AEG Electrolux	20090710
91452662600	EWM25_35	599721653	L76950A	AEG Electrolux	20090918
91452662900	EWM25_35	599722229	L76950A	AEG Electrolux	20090924
91452663200	EWM25_35	599719924	L74953A	AEG Electrolux	20090619

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452663800	EWM25_35	599722180	LN79480A	AEG Electrolux	20090924
91452664200	EWM25_35	599719938	L74920	AEG Electrolux	20090619
91452664700	EWM25_35	599721365	L72950M	AEG Electrolux	20090828
91452664800	EWM25_35	599721499	L74950M	AEG Electrolux	20090904
91452664900	EWM25_35	599721505	L74950B	AEG Electrolux	20090904
91452665200	EWM25_35	599721660	LN77480	AEG Electrolux	20090918
91452665900	EWM25_35	599722663	L74950A	AEG Electrolux	20091019
91452666100	EWM25_35	599718866	QW14783	Husqvarna Electrolux	20090501
91452666300	EWM25_35	599721856	LN75480	AEG Electrolux	20090925
91452666400	EWM25_35	599721502	L74950A	AEG Electrolux	20090904
91452666500	EWM25_35	599721507	L72950A	AEG Electrolux	20090904
91452666600	EWM25_35	599721662	LN79680A	AEG Electrolux	20090918
91452666700	EWM25_35	599722167	LN79680A	AEG Electrolux	20091001
91452667100	EWM25_35	599722172	LN79689A	AEG Electrolux	20091001
91452670100	EWM25_35	599389147	L84950	AEG Electrolux	20070525
91452670101	EWM25_35	599705478	L84950	AEG Electrolux	20080118
91452670200	EWM25_35	599700242	L84950	AEG Electrolux	20070706
91452670300	EWM25_35	599701364	L84950	AEG Electrolux	20070831
91452670301	EWM25_35	599715693	L84950	AEG Electrolux	20090214
91452670400	EWM25_35	599701353	L84953	AEG Electrolux	20070824
91452670500	EWM25_35	599701141	L84950	AEG Electrolux	20070824
91452670501	EWM25_35	599716813	L84950	AEG Electrolux	20090320
91452670600	EWM25_35	599702551	L84950	AEG Electrolux	20071012
91452670700	EWM25_35	599702554	L84950	AEG Electrolux	20071012
91452670701	EWM25_35	599715546	L84950	AEG Electrolux	20090213
91452670800	EWM25_35	599703211	L84950	AEG Electrolux	20071019
91452670900	EWM25_35	599701911	L84950	AEG Electrolux	20070921
91452670901	EWM25_35	599715700	L84950	AEG Electrolux	20090214
91452671000	EWM25_35	599701884	L84950	AEG Electrolux	20070921
91452671001	EWM25_35	599715550	L84950	AEG Electrolux	20090213
91452671100	EWM25_35	599709767	L84950	AEG Electrolux	20080705
91452671101	EWM25_35	599715704	L84950	AEG Electrolux	20090214
91452671200	EWM25_35	599702677	L82950	AEG Electrolux	20071012
91452671300	EWM25_35	599702681	L84950	AEG Electrolux	20071012
91452671301	EWM25_35	599718585	L84950	AEG Electrolux	20090501
91452671400	EWM25_35	599710736	LN88480	AEG Electrolux	20080815
91452671401	EWM25_35	599715705	LN88480	AEG Electrolux	20090214
91452671600	EWM25_35	599721658	L86950A	AEG Electrolux	20090918
91452671700	EWM25_35	599721664	L86950A	AEG Electrolux	20090918
91452672000	EWM25_35	599721673	LN89480A	AEG Electrolux	20090918
91452672100	EWM25_35	599721368	QW16980	Husqvarna Electrolux	20090828
91452672400	EWM25_35	599720662	L84950A	AEG Electrolux	20090717
91452673600	EWM25_35	599721674	L84950A	AEG Electrolux	20090918
91452673700	EWM25_35	599722182	LN89680A	AEG Electrolux	20090924
91452673900	EWM25_35	599722163	L86950A	AEG Electrolux	20091001
91452710000	EWM2100	599387870	RWN10470W	Rex-Electrolux	20070406
91452710001	EWM2100	599705559	RWN10470W	Rex-Electrolux	20080125
91452710100	EWM2100	599388204	RWN10470S	Rex-Electrolux	20070420
91452710200	EWM2100	599387874	RWN12470W	Rex-Electrolux	20070406
91452710201	EWM2100	599712816	RWN12470W	Rex-Electrolux	20081107
91452710300	EWM2100	599388193	EWN13570W	Electrolux	20070427
91452710400	EWM2100	599703767	EWN10470W	Electrolux	20071102
91452710401	EWM2100	599709542	EWN10470W	Electrolux	20080628
91452710500	EWM2100	599706786	EWN10470W	Electrolux	20080321
91452710600	EWM2100	599707892	RWN12570W	Rex-Electrolux	20080425

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452730000	EWM25_35	599387727	RWN12781W	Rex-Electrolux	20070330
91452730100	EWM25_35	599387796	RWN12781S	Rex-Electrolux	20070406
91452730101	EWM25_35	599717158	RWN12781S	Rex-Electrolux	20090328
91452730200	EWM25_35	599387897	RWN16781W	Rex-Electrolux	20070406
91452730201	EWM25_35	599717402	RWN16781W	Rex-Electrolux	20090403
91452730300	EWM2100	599388982	RWN12480W	Rex-Electrolux	20070525
91452730400	EWM25_35	599387901	EWN14781W	Electrolux	20070406
91452730500	EWM25_35	599387902	EWN16781W	Electrolux	20070406
91452730600	EWM2100	599388205	EWN14780W	Electrolux	20070420
91452730601	EWM2100	599703986	EWN14780W	Electrolux	20071116
91452730602	EWM2100	599706979	EWN14780W	Electrolux	20080328
91452730700	EWM2100	599388199	EWN14780S	Electrolux	20070420
91452730701	EWM2100	599712082	EWN14780S	Electrolux	20081017
91452730800	EWM25_35	599388206	EWN16781W	Electrolux	20070420
91452730801	EWM25_35	599707340	EWN16781W	Electrolux	20080411
91452730900	EWM2100	599388145	EWN14580W	Electrolux	20070420
91452731000	EWM25_35	599387846	RWN12480W	Rex-Electrolux	20070406
91452731300	EWM2100	599702135	EWN12580S	Electrolux	20070928
91452731400	EWM2100	599714342	EWN12488W	Electrolux	20081221
91452731401	EWM2100	599717838	EWN12488W	Electrolux	20090411
91452731500	EWM2100	599707677	RWN12580W	Rex-Electrolux	20080418
91452731501	EWM2100	599717426	RWN12580W	Rex-Electrolux	20090403
91452731600	EWM2100	599708711	EWN14580W	Electrolux	20080606
91452731700	EWM25_35	599709512	EWN16581W	Electrolux	20080627
91452760000	EWM25_35	599388425	RWN12591W	Rex-Electrolux	20070504
91452760100	EWM25_35	599700120	AWN12691W	ArthurMartinElux	20070629
91452760101	EWM25_35	599708441	AWN12691W VERS.WHITE	ArthurMartinElux	20080530
91452760101	EWM25_35	599711878	AWN12691W VERS.SILVE	ArthurMartinElux	20081010
91452760200	EWM25_35	599700122	AWN13691W	ArthurMartinElux	20070629
91452760300	EWM25_35	599700127	EWN14791W	Electrolux	20070629
91452760400	EWM25_35	599700133	AWN12691S	ArthurMartinElux	20070629
91452760500	EWM25_35	599700137	EWN10791W	Electrolux	20070629
91452760600	EWM25_35	599701273	EWN12791W	Electrolux	20070831
91452760700	EWM25_35	599702139	EWN14591W	Electrolux	20070928
91452760801	EWM25_35	599706798	EWN10791W	Electrolux	20080321
91452760900	EWM25_35	599706153	AWN14791W	ArthurMartinElux	20080222
91452760901	EWM25_35	599706976	AWN14791W VERS.SILVE	ArthurMartinElux	20080328
91452760901	EWM25_35	599711880	AWN14791W VERS.SILVE	ArthurMartinElux	20081010
91452761000	EWM25_35	599707678	RWN12592W	Rex-Electrolux	20080418
91452761200	EWM25_35	599708442	EWN14791W	Electrolux	20080530
91452770000	EWM25_35	599388428	RWN14991W	Rex-Electrolux	20070504
91452770001	EWM25_35	599705336	RWN14991W	Rex-Electrolux	20080111
91452770002	EWM25_35	599718312	RWN14991W	Rex-Electrolux	20090418
91452770100	EWM25_35	599388143	EWN14991W	Electrolux	20070427
91452770101	EWM25_35	599710127	EWN14991W	Electrolux	20080718
91452770300	EWM25_35	599388149	AWN14991W	ArthurMartinElux	20070427
91452770301	EWM25_35	599706120	AWN14991W	ArthurMartinElux	20080222
91452770400	EWM25_35	599388429	EWN14991W	Electrolux	20070504
91452770401	EWM25_35	599712821	EWN14991W	Electrolux	20081107
91452770500	EWM25_35	599388150	EWN14991W	Electrolux	20070427
91452770501	EWM25_35	599706121	EWN14991W	Electrolux	20080222
91452770502	EWM25_35	599717436	EWN14991W	Electrolux	20090403
91452770600	EWM25_35	599388153	EWN14991W	Electrolux	20070427
91452770601	EWM25_35	599705341	EWN14991W	Electrolux	20080111
91452770700	EWM25_35	599388154	EWN14991S	Electrolux	20070427

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452770701	EWM25_35	599705354	EWN14991S	Electrolux	20080111
91452770800	EWM25_35	599701133	EWN14991W	Electrolux	20070824
91452770801	EWM25_35	599705826	EWN14991W	Electrolux	20080208
91452770900	EWM25_35	599701136	EWN14991W	Electrolux	20070824
91452770901	EWM25_35	599714475	EWN14991W	Electrolux	20081226
91452771000	EWM25_35	599702147	EWN14991W	Electrolux	20070928
91452771100	EWM25_35	599704916	EWN14991W	Electrolux	20071214
91452771101	EWM25_35	599706986	EWN14991W	Electrolux	20080328
91452771600	EWM25_35	599709724	EWN14991W	Electrolux	20080704
91452771700	EWM25_35	599707876	EWN14991K	Electrolux	20080425
91452771800	EWM25_35	599715628	EWN14991W	Electrolux	20090214
91452771900	EWM25_35	599709501	EWN14991W	Electrolux	20080627
91452771900	EWM25_35	599712371	EWN14991W	Electrolux	20080922
91452772100	EWM25_35	599710737	EWN14991W	Electrolux	20080815
91452772300	EWM25_35	599711542	EWN14991K	Electrolux	20080927
91452800000	EWM1100	599710788	EWG10050W	Electrolux	20080725
91452800100	EWM1100	599711671	L50642VI	AEG Electrolux	20081003
91452800200	EWM1100	599710794	ZWI1125	Zanussi	20080725
91452800201	EWM1100	599720603	ZWI1125	Zanussi	20090717
91452800300	EWM1100	599710792	ZWI1105	Zanussi	20080725
91452800301	EWM1100	599720624	ZWI1105	Zanussi	20090717
91452800400	EWM1100	599710795	ZWI1125	Zanussi	20080725
91452800500	EWM1100	599710772	EWG85050W	Electrolux	20080725
91452800700	EWM1100	599710793	ZWI1855	Zanussi	20080725
91452800701	EWM1100	599720618	ZWI1855	Zanussi	20090717
91452800900	EWM1100	599711835	LI1000E	Rex-Electrolux	20081010
91452800901	EWM1100	599720873	LI1000E	Rex-Electrolux	20090731
91452801000	EWM1100	599714745	ZWI1125	Zanussi	20090102
91452801001	EWM1100	599720609	ZWI1125	Zanussi	20090717
91452810000	EWM2100	599710813	EWG12450W	Electrolux	20080725
91452810001	EWM2100	599716086	EWG12450W	Electrolux	20090227
91452810002	EWM2100	599720874	EWG12450W	Electrolux	20090731
91452810100	EWM2100	599710820	L62642VI	AEG Electrolux	20080725
91452810101	EWM2100	599720878	L62642VI	AEG Electrolux	20090731
91452810200	EWM2100	599711660	AWG12450W	ArthurMartinElux	20080919
91452810201	EWM2100	599715553	AWG12450W	ArthurMartinElux	20090213
91452810202	EWM2100	599720627	AWG12450W	ArthurMartinElux	20090717
91452810300	EWM2100	599710812	EWG12450W	Electrolux	20080725
91452810301	EWM2100	599713695	EWG12450W	Electrolux	20081205
91452810302	EWM2100	599720629	EWG12450W	Electrolux	20090717
91452810400	EWM2100	599710816	L62642VI	AEG Electrolux	20080725
91452810600	EWM2100	599711836	ZWI1216	Zanussi	20081010
91452810601	EWM2100	599716543	ZWI1216	Zanussi	20090313
91452810602	EWM2100	599720881	ZWI1216	Zanussi	20090731
91452810700	EWM2100	599721656	EWG12450W	Electrolux	20090918
91452810800	EWM2100	599713302	00396574_21119	Privileg	20081122
91452810900	EWM2100	599712508	LI1200E	Rex-Electrolux	20081031
91452810901	EWM2100	599720882	LI1200E	Rex-Electrolux	20090731
91452811100	EWM2100	599719817	FWM1200-6	Franke	20090612
91452811101	EWM2100	599720884	FWM1200-6	Franke	20090731
91452820000	EWM2100	599717807	L73742VI	AEG Electrolux	20090411
91452820100	EWM2100	599710802	EWG12750W	Electrolux	20080725
91452820200	EWM2100	599717508	L73742VI	AEG Electrolux	20090404
91452820300	EWM2100	599710805	ZWI1215	Zanussi	20080725
91452820301	EWM2100	599714768	ZWI1215	Zanussi	20090102

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452820302	EWM2100	599720631	ZWI2125	Zanussi	20090717
91452820400	EWM2100	599710807	ZWI2125	Zanussi	20080725
91452820401	EWM2100	599713698	ZWI2125	Zanussi	20081205
91452820600	EWM2100	599711838	L63742VI	AEG Electrolux	20081010
91452820601	EWM2100	599720635	L63742VI	AEG Electrolux	20090717
91452821000	EWM2100	599710786	EWG14750W	Electrolux	20080725
91452821001	EWM2100	599719359	EWG14750W	Electrolux	20090522
91452821300	EWM2100	599710809	L63742VI	AEG Electrolux	20080725
91452821301	EWM2100	599713470	L63742VI	AEG Electrolux	20081128
91452821400	EWM2100	599712515	LI1400JE	Rex-Electrolux	20081031
91452821600	EWM2100	599710810	JLBIWM1402	John Lewis	20080725
91452821700	EWM2100	599714103	JWG14750W	Juno-Electrolux	20081213
91452821800	EWM2100	599711672	L63742VI	AEG Electrolux	20081003
91452821801	EWM2100	599713326	L63742VI	AEG Electrolux	20081122
91452821900	EWM2100	599718344	L73742VI	AEG Electrolux	20090419
91452822000	EWM2100	599717124	EWG14550W	Electrolux	20090327
91452822100	EWM2100	599711541	L63742VI	AEG Electrolux	20080927
91452822200	EWM2100	599715631	EWG14750W	Electrolux	20090214
91452822201	EWM2100	599720055	EWG14750W	Electrolux	20090626
91452822300	EWM2100	599718654	L63742VI	AEG Electrolux	20090501
91452822400	EWM2100	599720451	IW1409.2W	Küppersbusch	20090703
91452900000	EWM1100	599721512	EWS8070W	Electrolux	20090904
91452900100	EWM1100	599714316	EWS10070W	Electrolux	20081221
91452900101	EWM1100	599719093	EWS10070W	Electrolux	20090508
91452900300	EWM1100	599718619	RWS10079W	Rex-Electrolux	20090501
91452900600	EWM1100	599713824	EWS10170W	Electrolux	20081206
91452900601	EWM1100	599719021	EWS10170W	Electrolux	20090508
91452901300	EWM1100	599717438	ZWS588	Zanussi	20090403
91452901800	EWM1100	599718200	ZWS5883	Zanussi	20090330
91452901801	EWM1100	599718609	ZWS5883	Zanussi	20090501
91452901900	EWM1100	599717808	ZWS5108	Zanussi	20090411
91452901901	EWM1100	599720024	ZWS5108	Zanussi	20090626
91452902000	EWM1100	599715831	PL846	Zoppas	20090220
91452902001	EWM1100	599719025	PL846	Zoppas	20090508
91452902200	EWM1100	599715328	RWS10170W	Rex-Electrolux	20090207
91452902201	EWM1100	599718726	RWS10170W	Rex-Electrolux	20090424
91452902500	EWM1100	599720524	EWS6170W	Electrolux	20090710
91452902600	EWM1100	599720528	EWS7170W	Electrolux	20090710
91452910000	EWM2100	599714319	EWS10470W	Electrolux	20081221
91452910001	EWM2100	599718742	EWS10470W	Electrolux	20090424
91452910100	EWM2100	599715146	EWS12470W	Electrolux	20090131
91452910101	EWM2100	599718787	EWS12470W	Electrolux	20090501
91452910400	EWM2100	599714321	EWS10670W	Electrolux	20081221
91452910401	EWM2100	599718771	EWS10670W	Electrolux	20090424
91452910500	EWM2100	599714029	EWS12670W	Electrolux	20081212
91452910501	EWM2100	599719100	EWS12670W	Electrolux	20090508
91452910800	EWM2100	599717440	EWS10277W	Electrolux	20090403
91452910801	EWM2100	599718746	EWS10277W	Electrolux	20090424
91452910900	EWM2100	599715330	EWS10470S	Electrolux	20090207
91452910901	EWM2100	599719107	EWS10470S	Electrolux	20090508
91452911000	EWM2100	599717441	RWS10470S	Rex-Electrolux	20090403
91452911001	EWM2100	599720035	RWS10470S	Rex-Electrolux	20090626
91452911400	EWM2100	599715309	ZWS7108	Zanussi	20090206
91452911401	EWM2100	599719101	ZWS7108	Zanussi	20090508
91452911500	EWM2100	599717442	ZWS7128	Zanussi	20090403

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91452911501	EWM2100	599720479	ZWS7128	Zanussi	20090710
91452911600	EWM2100	599715843	PL1046D	Zoppas	20090220
91452911601	EWM2100	599720577	PL1046D	Zoppas	20090710
91452911700	EWM2100	599714323	00605226_21117	Privileg	20081221
91452911800	EWM2100	599714082	00395278_21118	Privileg	20081213
91452911900	EWM2100	599715331	RWS10470W	Rex-Electrolux	20090207
91452911901	EWM2100	599718792	RWS10470W	Rex-Electrolux	20090501
91452912000	EWM2100	599718214	RWS12670W	Rex-Electrolux	20090330
91452912001	EWM2100	599718522	RWS12670W	Rex-Electrolux	20090426
91452912002	EWM2100	599719424	RWS12670W	Rex-Electrolux	20090522
91452912100	EWM2100	599717478	EWS12470W	Electrolux	20090404
91452912101	EWM2100	599718793	EWS12470W	Electrolux	20090501
91452920000	EWM2100	599720456	EWS10570W	Electrolux	20090703
91452920200	EWM2100	599719847	EWS10770W	Electrolux	20090612
91452920300	EWM2100	599719850	EWS12770W	Electrolux	20090612
91452930000	EWM25_35	599720669	EWS12971W	Electrolux	20090717
91452930100	EWM25_35	599720974	EWS14971W	Electrolux	20090807
91452960000	EWM25_35	599720960	LS60840L	AEG Electrolux	20090710
91452960100	EWM25_35	599720966	LS62840L	AEG Electrolux	20090807
91452960200	EWM25_35	599720965	LS60840L	AEG Electrolux	20090807
91452960300	EWM25_35	599720963	LS62840L	AEG Electrolux	20090807
91452960400	EWM25_35	599720970	LS70840	AEG Electrolux	20090807
91452960500	EWM25_35	599720972	LS72840	AEG Electrolux	20090807
91452960600	EWM25_35	599721857	LS70840	AEG Electrolux	20090925
91452960700	EWM25_35	599721860	LS72840	AEG Electrolux	20090925
91452960800	EWM25_35	599720973	LS72840	AEG Electrolux	20090807
91452960900	EWM25_35	599721863	LS70840	AEG Electrolux	20090925
91452961000	EWM25_35	599720964	LS60843L	AEG Electrolux	20090807
91452961100	EWM25_35	599720976	LS72843	AEG Electrolux	20090807
91452980000	EWM25_35	599720979	LS84840	AEG Electrolux	20090807
91452980100	EWM25_35	599722960	LS84840	AEG Electrolux	20091022
91460110700	EWM2000evo	599366440	L12620	AEG	20040917
91460111200	EWM2000evo	599368373	L12620	AEG Electrolux	20050128
91460111500	EWM2000evo	599370708	ZWD1271W	Zanussi-Electrolux	20050513
91460111600	EWM2000evo	599370710	ZWD1471W	Zanussi-Electrolux	20050513
91460111700	EWM2000evo	599370971	ZWD1471S	Zanussi-Electrolux	20050527
91460111800	EWM2000evo	599371622	L12830	AEG Electrolux	20050701
91460111900	EWM2000evo	599372785	REG3610WT	AEG Electrolux	20050923
91460112100	EWM2000evo	599376979	L12620	AEG Electrolux	20060310
91460112200	EWM2000evo	599383780	L12830	AEG Electrolux	20060203
91460112300	EWM2000evo	599375239	758765_20544	Privileg	20060120
91460112500	EWM2000evo	599375591	ZWD1271W	Zanussi-Electrolux	20060210
91460112600	EWM2000evo	599375593	ZWD1471W	Zanussi-Electrolux	20060210
91460112700	EWM2000evo	599375596	ZWD1471S	Zanussi-Electrolux	20060210
91460120000	EWM2000evo	599371305	ZJD12191	Zanussi	20050617
91460120400	EWM2000evo	599372569	EWX1237	Electrolux	20050909
91460120500	EWM2000evo	599372572	L12710VIT	AEG Electrolux	20050909
91460120600	EWM2000evo	599372573	L14710VIT	AEG Electrolux	20050909
91460120700	EWM2000evo	599373380	EWD1419I	Electrolux	20051014
91460120800	EWM2000evo	599373381	L12720VIT	AEG Electrolux	20051014
91460121000	EWM2000evo	599372972	IWT1259.2W	Küppersbusch	20050930
91460121100	EWM2000evo	599374086	L14710VIT	AEG Electrolux	20051125
91460121200	EWM2000evo	599372776	L12700VIT	AEG Electrolux	20050923
91460121300	EWM2000evo	599373104	IWT1259WCN	Küppersbusch	20050930
91460121400	EWM2000evo	599372780	JLBIWD1400	John Lewis	20050923

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91460121500	EWM2000evo	599373249	L14710VIT	AEG Electrolux	20051007
91460121600	EWM2000evo	599373105	EWX1237	Electrolux	20050930
91460121700	EWM2000evo	599377541	EWD1419I	Electrolux	20060407
91460121701	EWM2000evo	599386199	EWD1419I	Electrolux	20070216
91460121800	EWM2000evo	599375437	ZJD12191	Zanussi	20060127
91460121801	EWM2000evo	599384662	ZJD12191	Zanussi	20061117
91460121900	EWM2000evo	599376066	L14710VIT	AEG Electrolux	20060217
91460121901	EWM2000evo	599386197	L14710VIT	AEG Electrolux	20070216
91460122000	EWM2000evo	599383853	JWT8014	Juno-Electrolux	20060407
91460122001	EWM2000evo	599386196	JWT8014	Juno-Electrolux	20070216
91460122100	EWM2000evo	599383854	IWT1259.2W	Küppersbusch	20060407
91460122200	EWM2000evo	599377683	702 262	Küppersbusch	20060414
91460122300	EWM2000evo	599382403	L12710VIT	AEG Electrolux	20060901
91460122301	EWM2000evo	599384664	L12710VIT	AEG Electrolux	20061117
91460122400	EWM2000evo	599381564	L14710VIT	AEG Electrolux	20060714
91460122401	EWM2000evo	599384666	L14710VIT	AEG Electrolux	20061117
91460122500	EWM2000evo	599376528	L12720VIT	AEG Electrolux	20060303
91460122501	EWM2000evo	599386195	L12720VIT	AEG Electrolux	20070216
91460122700	EWM2000evo	599383873	L12710VIT	AEG Electrolux	20060519
91460122701	EWM2000evo	599386209	L12710VIT	AEG Electrolux	20070216
91460122800	EWM2000evo	599381338	EWX1237	Electrolux	20060714
91460122801	EWM2000evo	599386210	EWX1237	Electrolux	20070216
91460122900	EWM2000evo	599378528	EWX1237	Electrolux	20060421
91460122901	EWM2000evo	599386211	EWX1237	Electrolux	20070216
91460123000	EWM2000evo	599376981	L14710VIT	AEG Electrolux	20060310
91460123001	EWM2000evo	599386212	L14710VIT	AEG Electrolux	20070216
91460123100	EWM2000evo	599376983	JLBIWD1400	John Lewis	20060310
91460123101	EWM2000evo	599386213	JLBIWD1400	John Lewis	20070216
91460123200	EWM2000evo	599379658	AWX1285	ArthurMartinElux	20060526
91460123201	EWM2000evo	599386214	AWX1285	ArthurMartinElux	20070216
91460123300	EWM2000evo	599379659	L14800VIT	AEG Electrolux	20060526
91460123301	EWM2000evo	599386215	L14800VIT	AEG Electrolux	20070216
91460123400	EWM2000evo	599381247	IWT1459.1W	Küppersbusch	20060714
91460123401	EWM2000evo	599386216	IWT1459.1W	Küppersbusch	20070216
91460123500	EWM2000evo	599383618	EWD1409I	Electrolux	20061013
91460123600	EWM2000evo	599706250	I1459.1WCN	Küppersbusch	20080229
91460130000	EWM2000evo	599383941	TBWD1210	Tricity Bendix	20061027
91460130200	EWM2000evo	599704101	LPR722	Prima	20071116
91460164400	EWM2000evo	599365621	L14720	AEG	20040723
91460164500	EWM2000evo	599366582	L14720	AEG	20040924
91460164600	EWM2000evo	599367194	L12620	AEG	20041105
91460164700	EWM2000evo	599367195	L14820	AEG	20041105
91460165300	EWM2000evo	599368705	L14720	AEG Electrolux	20050211
91460165400	EWM2000evo	599368381	L14720	AEG Electrolux	20050128
91460165500	EWM2000evo	599369376	L14720	AEG Electrolux	20050311
91460165600	EWM2000evo	599369809	L12620	AEG Electrolux	20050408
91460165700	EWM2000evo	599369811	L14820	AEG Electrolux	20050408
91460165800	EWM2000evo	599369383	AWW1307	ArthurMartinElux	20050311
91460165900	EWM2000evo	599369385	AWW1507	ArthurMartinElux	20050311
91460166000	EWM2000evo	599370389	QW1460HT	Husqvarna Electrolux	20050429
91460166100	EWM2000evo	599373658	EWD1300	Electrolux	20051028
91460166400	EWM2000evo	599376984	L14720	AEG Electrolux	20060310
91460166500	EWM2000evo	599375439	EWW1440	Electrolux	20060127
91460166700	EWM2000evo	599704929	EWD1300	Electrolux	20071214
91460167000	EWM2000evo	599375315	954713_20545	Privileg	20060120

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91460167100	EWM2000evo	599375316	782160_20546	Privileg	20060120
91460167300	EWM2000evo	599375617	L14720	AEG Electrolux	20060210
91460167500	EWM2000evo	599375318	W1207	Zanussi-Electrolux	20060120
91460167600	EWM2000evo	599377545	AWW1307	ArthurMartinElux	20060407
91460167700	EWM2000evo	599378530	AWW1507	ArthurMartinElux	20060421
91460167900	EWM2000evo	599377339	L12620	AEG Electrolux	20060331
91460168000	EWM2000evo	599377342	L14820	AEG Electrolux	20060331
91460168100	EWM2000evo	599376987	QW1460HT	Husqvarna Electrolux	20060310
91460168300	EWM2000evo	599700512	L12820J5 VERS.SILVER	AEG Electrolux	20070622
91460168300	EWM2000evo	599702125	L12820J5 VERS. WHITE	AEG Electrolux	20070810
91460168400	EWM2000evo	599704934	L12820J6	AEG Electrolux	20071214
91460168600	EWM2000evo	599379178	EWW1495	Electrolux	20060512
91460168800	EWM2000evo	599378531	L12720	AEG Electrolux	20060421
91460170000	EWM2000evo	599388984	L12820J5	AEG Electrolux	20070525
91460170100	EWM2000evo	599700244	L12820J6	AEG Electrolux	20070706
91460191400	EWM2000evo	599369775	L12700VIT	AEG Electrolux	20050404
91460210100	EWM3000new	599366585	L16820	AEG	20040924
91460210300	EWM3000new	599365733	L16820	AEG	20040730
91460210400	EWM3000new	599366588	L16820	AEG	20040924
91460210500	EWM3000new	599366669	L16820	AEG	20041008
91460210600	EWM3000new	599368613	L16820	AEG Electrolux	20050204
91460210700	EWM3000new	599368713	L16820	AEG Electrolux	20050211
91460210800	EWM3000new	599368383	L16820	AEG Electrolux	20050128
91460210900	EWM3000new	599369533	L16820	AEG Electrolux	20050318
91460211000	EWM3000new	599369105	L16820	AEG Electrolux	20050225
91460211100	EWM3000new	599369779	L16820	AEG Electrolux	20050404
91460211200	EWM3000new	599369534	L16820	AEG Electrolux	20050318
91460211600	EWM3000new	599369784	L16820	AEG Electrolux	20050404
91460211700	EWM3000new	599369941	L16820	AEG Electrolux	20050415
91460211900	EWM3000new	599371505	ZWD1681W	Zanussi-Electrolux	20050624
91460212000	EWM3000new	599371513	L16830	AEG Electrolux	20050624
91460212100	EWM3000new	599376447	L16820	AEG Electrolux	20060303
91460212101	EWM3000new	599380238	L16820	AEG Electrolux	20060616
91460212200	EWM3000new	599380087	L16830	AEG Electrolux	20060508
91460212201	EWM3000new	599380264	L16830	AEG Electrolux	20060616
91460212301	EWM3000new	599385564	EWW1291	Electrolux	20070112
91460212401	EWM3000new	599387715	EWW1291	Electrolux	20070330
91460212501	EWM3000new	599387712	EWW1291	Electrolux	20070330
91460212600	EWM3000new	599379631	L16820	AEG Electrolux	20060512
91460212601	EWM3000new	599379633	L16820	AEG Electrolux	20060526
91460212700	EWM3000new	599378533	L16820	AEG Electrolux	20060421
91460212701	EWM3000new	599380266	L16820	AEG Electrolux	20060616
91460212800	EWM3000new	599376449	L16820	AEG Electrolux	20060303
91460212801	EWM3000new	599380269	L16820	AEG Electrolux	20060616
91460212900	EWM3000new	599376448	ZWD1681W	Zanussi-Electrolux	20060303
91460212901	EWM3000new	599380273	ZWD1681W	Zanussi-Electrolux	20060616
91460213000	EWM3000new	599376518	L16820	AEG Electrolux	20060303
91460213001	EWM3000new	599380278	L16820	AEG Electrolux	20060616
91460213100	EWM3000new	599378534	L16820	AEG Electrolux	20060421
91460213101	EWM3000new	599380279	L16820	AEG Electrolux	20060616
91460213200	EWM3000new	599376520	L16820	AEG Electrolux	20060303
91460213201	EWM3000new	599380281	L16820	AEG Electrolux	20060616
91460213300	EWM3000new	599376521	L16820	AEG Electrolux	20060303
91460213301	EWM3000new	599380282	L16820	AEG Electrolux	20060616
91460213400	EWM3000new	599381173	L16825	AEG Electrolux	20060707

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91460213500	EWM3000new	599383931	L16820	AEG Electrolux	20061027
91460220000	EWM3000new	599382466	ZWD1682W	Zanussi-Electrolux	20060901
91460230000	EWM2100	599701362	EWX14440W	Electrolux	20070727
91460240000	EWM2100	599704785	EWX14540W	Electrolux	20071207
91460240100	EWM2100	599702619	EWX12540W	Electrolux	20071012
91460240200	EWM2100	599702702	EWX14540W	Electrolux	20071012
91460240300	EWM2100	599706122	EWX12540W	Electrolux	20080222
91460310000	EWM2000evo	599380001	AWW1227	ArthurMartinElux	20060609
91460310100	EWM2000evo	599379867	AWW1427	ArthurMartinElux	20060526
91460310200	EWM2000evo	599380010	JLWD1406	John Lewis	20060609
91460310300	EWM2000evo	599381183	AWW1525	ArthurMartinElux	20060707
91460310400	EWM2000evo	599381188	EWW1690	Electrolux	20060707
91460310700	EWM2000evo	599704933	EWW1292	Electrolux	20071214
91460310800	EWM2000evo	599711686	EWW1292	Electrolux	20081003
91460310900	EWM2000evo	599384487	EWW1292	Electrolux	20061110
91460311000	EWM2000evo	599388116	JLWD1408	John Lewis	20070420
91460311100	EWM2000evo	599387793	EWD1477	Electrolux	20070406
91460320000	EWM2000evo	599381413	FKF2126	Faure	20060714
91460320200	EWM2000evo	599380413	UMBRIA	Zanussi	20060616
91460320300	EWM2000evo	599380889	KT2250	Elektro Helios	20060623
91460320400	EWM2000evo	599380019	ZWD1262W	Zanussi-Electrolux	20060609
91460320500	EWM2000evo	599381199	ZWD1262S	Zanussi-Electrolux	20060707
91460320700	EWM2000evo	599382361	ZWD1252W	Zanussi-Electrolux	20060901
91460320800	EWM2000evo	599381510	ZWW1202	Zanussi	20060714
91460320900	EWM2000evo	599382456	WDR1041W	Tricity Bendix	20060901
91460321000	EWM2000evo	599382465	WDR1241W	Tricity Bendix	20060901
91460321100	EWM2000evo	599383635	ZWD1662W	Zanussi-Electrolux	20061013
91460321101	EWM2000evo	599388636	ZWD1662W	Zanussi-Electrolux	20070518
91460321200	EWM2000evo	599388983	ZIWD220SKD	Zanussi	20070525
91460330000	EWM2000evo	599380023	ZWD1272W	Zanussi-Electrolux	20060609
91460330100	EWM2000evo	599380407	ZWD1472W	Zanussi-Electrolux	20060616
91460330200	EWM2000evo	599380893	ZWD1472S	Zanussi-Electrolux	20060623
91460330300	EWM2000evo	599381542	EWW1290	Electrolux	20060721
91460330600	EWM2000evo	599384244	EWW1290	Electrolux	20061103
91460340000	EWM2000evo	599384090	PLA147D	Zoppas	20061103
91460340100	EWM2000evo	599383296	RIL7200	Rex-Electrolux	20061013
91460340200	EWM2000evo	599383297	RIL7600	Rex-Electrolux	20061013
91460400000	EWM2100	599700524	ZWD12270W	Zanussi-Electrolux	20070720
91460400001	EWM2100	599707591	ZWD12270W	Zanussi-Electrolux	20080418
91460400100	EWM2100	599701144	ZWD12270S	Zanussi	20070824
91460400101	EWM2100	599707593	ZWD12270S	Zanussi-Electrolux	20080418
91460400200	EWM2100	599701148	ZWD14270W	Zanussi-Electrolux	20070824
91460400201	EWM2100	599707596	ZWD14270W	Zanussi-Electrolux	20080418
91460400300	EWM2100	599701147	ZWD16270W	Zanussi-Electrolux	20070824
91460400301	EWM2100	599707598	ZWD16270W	Zanussi-Electrolux	20080418
91460400400	EWM2100	599701359	EWW12470W	Electrolux	20070824
91460400401	EWM2100	599707600	EWW12470W	Electrolux	20080418
91460400402	EWM2100	599721594	EWW12470W	Electrolux	20090911
91460400500	EWM2100	599702053	EWW12470W	Electrolux	20070921
91460400501	EWM2100	599714436	EWW12470W	Electrolux	20081226
91460400600	EWM2100	599703299	FKF2129	Faure	20071026
91460400700	EWM2100	599702060	EWW14470W	Electrolux	20070921
91460400701	EWM2100	599707604	EWW14470W	Electrolux	20080418
91460400800	EWM2100	599703178	ZKG2105	Zanussi	20071019
91460400801	EWM2100	599711966	ZKG2105	Zanussi	20081017

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91460400900	EWM2100	599703301	ZKG2125	Zanussi	20071026
91460400901	EWM2100	599711967	ZKG2125	Zanussi	20081017
91460400902	EWM2100	599721596	ZKG2125	Zanussi	20090911
91460401000	EWM2100	599702568	RWW12470W	Rex-Electrolux	20071012
91460401001	EWM2100	599708315	RWW12470W	Rex-Electrolux	20080523
91460401002	EWM2100	599718252	RWW12470W	Rex-Electrolux	20090417
91460401100	EWM2100	599704104	ZWD1460	Zanussi	20071116
91460401101	EWM2100	599710074	ZWD1460	Zanussi	20080627
91460401102	EWM2100	599711970	ZWD1460	Zanussi	20081017
91460401300	EWM2100	599703180	ZKG2145	Zanussi	20071019
91460401301	EWM2100	599711972	ZKG2145	Zanussi	20081017
91460401400	EWM2100	599705749	EWW12470W	Electrolux	20080201
91460401401	EWM2100	599707877	EWW12470W	Electrolux	20080425
91460401402	EWM2100	599721599	EWW12470W	Electrolux	20090911
91460401500	EWM2100	599705828	EWW12470W	Electrolux	20080208
91460401600	EWM2100	599705597	ZKG2125	Zanussi	20080125
91460401601	EWM2100	599710512	ZKG2125	Zanussi	20080801
91460401700	EWM2100	599706155	ZWW9570W	Zanussi-Electrolux	20080222
91460401800	EWM2100	599705601	552130_20956	Privileg	20080125
91460401801	EWM2100	599721609	00552130_21357	Privileg	20090911
91460401900	EWM2100	599705602	552137_20957	Privileg	20080125
91460402000	EWM2100	599708316	WDR1242W	Tricity Bendix	20080523
91460402001	EWM2100	599711971	WDR1242W	Tricity Bendix	20081017
91460402100	EWM2100	599705750	WTF8280	Zanker	20080201
91460402200	EWM2100	599705599	WTF8480	Zanker	20080125
91460402300	EWM2100	599705595	WD8126EL	NORDLAND	20080125
91460402301	EWM2100	599711973	WD8126EL	NORDLAND	20081017
91460402400	EWM2100	599706125	552277_20954	Privileg	20080222
91460402500	EWM2100	599706126	637321_20955	Privileg	20080222
91460402600	EWM2100	599714110	EWW12470W	Electrolux	20081213
91460402700	EWM2100	599710128	EWW12470W	Electrolux	20080718
91460402800	EWM2100	599708814	ZWD12270W1	Zanussi	20080606
91460402801	EWM2100	599721612	ZWD12270W1	Zanussi	20090911
91460402900	EWM2100	599708816	ZWD14270W1	Zanussi	20080606
91460403000	EWM2100	599711157	ZWD16270W1	Zanussi	20080912
91460403001	EWM2100	599712733	ZWD16270W1	Zanussi	20080929
91460403002	EWM2100	599712735	ZWD16270W1	Zanussi	20081107
91460403100	EWM2100	599714333	ZWD12270S1	Zanussi	20081221
91460403400	EWM2100	599714421	ZWD12270G1	Zanussi	20081226
91460403401	EWM2100	599721613	ZWD12270G1	Zanussi	20090911
91460403500	EWM2100	599717633	IZKG2125	Ideal-Zanussi	20090327
91460403501	EWM2100	599721614	IZKG2125	Ideal-Zanussi	20090911
91460404000	EWM2100	599719765	WTF8280.6	Zanker	20090612
91460404001	EWM2100	599721615	WTF8280.6	Zanker	20090911
91460404100	EWM2100	599719772	WTF8480.6	Zanker	20090612
91460404400	EWM2100	599720949	ZKG2125	Zanussi	20090807
91460410000	EWM25_35	599705608	920300_20958	Privileg	20080125
91460410100	EWM25_35	599705752	552163_20959	Privileg	20080201
91460420000	EWM25_35	599702571	RWW16681W	Rex-Electrolux	20071012
91460420200	EWM2100	599702055	EWW12480W	Electrolux	20070921
91460420201	EWM2100	599707881	EWW12480W	Electrolux	20080425
91460420202	EWM2100	599715706	EWW12480W	Electrolux	20090214
91460420300	EWM2100	599702943	KT2255	Elektro Helios	20071012
91460420301	EWM2100	599711975	KT2255	Elektro Helios	20081017
91460420302	EWM2100	599717144	KT2255	Elektro Helios	20090328

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91460420400	EWM2100	599719485	EWW15580W	Electrolux	20080523
91460420500	EWM2100	599706246	ZWW12570W	Zanussi-Electrolux	20080229
91460420501	EWM2100	599718347	ZWW12570W	Zanussi-Electrolux	20090419
91460420600	EWM2100	599703181	ZKH2125	Zanussi	20071019
91460420601	EWM2100	599711976	ZKH2125	Zanussi	20081017
91460420602	EWM2100	599716074	ZKH2125	Zanussi	20090227
91460420700	EWM2100	599703158	ZKH2145	Zanussi	20071019
91460420701	EWM2100	599711978	ZKH2145	Zanussi	20081017
91460420800	EWM2100	599705830	PLA714D	Zoppas	20080208
91460420801	EWM2100	599711980	PLA714D	Zoppas	20081017
91460420802	EWM2100	599719022	PLA714D	Zoppas	20090508
91460420900	EWM2100	599705831	ZKH2125	Zanussi	20080208
91460420901	EWM2100	599711977	ZKH2125	Zanussi	20081017
91460420902	EWM2100	599715892	ZKH2125	Zanussi	20090220
91460421000	EWM2100	599706790	FKH2125	Faure	20080321
91460421001	EWM2100	599712737	FKH2125	Faure	20081107
91460421002	EWM2100	599715715	FKH2125	Faure	20090215
91460421100	EWM2100	599707345	ZKH2145	Zanussi	20080411
91460421101	EWM2100	599712739	ZKH2145	Zanussi	20081107
91460421200	EWM2100	599714335	ZKH2105	Zanussi	20081221
91460421500	EWM2100	599721870	EWW14480W	Electrolux	20090925
91460421800	EWM2100	599717118	AWW12480W	ArthurMartinElux	20090327
91460421900	EWM2100	599716846	FKH2125	Faure	20090321
91460422000	EWM2100	599716615	AWW14480W	ArthurMartinElux	20090313
91460422400	EWM2100	599721925	EWW12480W	Electrolux	20090925
91460430000	EWM25_35	599701099	ZWD14581W	Zanussi-Electrolux	20070824
91460430001	EWM25_35	599711982	ZWD14581W	Zanker-Electrolux	20081017
91460430100	EWM25_35	599701373	ZWD14581S	Zanussi-Electrolux	20070831
91460430101	EWM2100	599709273	ZWD14581S	Zanussi-Electrolux	20080620
91460430101	EWM25_35	599709273	ZWD14581S	Zanussi-Electrolux	20080620
91460430200	EWM25_35	599701152	ZWD16581W	Zanussi-Electrolux	20070824
91460430300	EWM2100	599701229	AWW12580W	ArthurMartinElux	20070831
91460430301	EWM2100	599707609	AWW12580W	ArthurMartinElux	20080418
91460430302	EWM2100	599715718	AWW12580W	ArthurMartinElux	20090215
91460430400	EWM25_35	599701230	AWW14581W	ArthurMartinElux	20070831
91460430401	EWM25_35	599709947	AWW14581W	ArthurMartinElux	20080613
91460430402	EWM2100	599709948	AWW14581W	ArthurMartinElux	20080711
91460430402	EWM25_35	599709948	AWW14581W	ArthurMartinElux	20080711
91460430500	EWM25_35	599701380	EWW16781W	Electrolux	20070824
91460430501	EWM25_35	599720889	EWW16781W	Electrolux	20090731
91460430600	EWM25_35	599702061	EWW14781W	Electrolux	20070921
91460430700	EWM25_35	599702574	EWW16781W	Electrolux	20071012
91460430800	EWM2100	599702062	EWW14781W	Electrolux	20070921
91460430800	EWM25_35	599702062	EWW14781W	Electrolux	20070921
91460430801	EWM25_35	599717146	EWW14781W	Electrolux	20090328
91460431000	EWM25_35	599702622	EWW14581W	Electrolux	20071012
91460431001	EWM25_35	599710513	EWW14581W	Electrolux	20080801
91460431200	EWM25_35	599702628	EWW16489W	Electrolux	20071012
91460431201	EWM2100	599709274	EWW16489W	Electrolux	20080620
91460431201	EWM25_35	599709274	EWW16489W	Electrolux	20080620
91460431202	EWM25_35	599722688	EWW16489W	Electrolux	20091015
91460431300	EWM25_35	599703946	WTGL3E100	Electrolux	20071109
91460431301	EWM25_35	599718203	WTGL3E100	Electrolux	20090417
91460431302	EWM25_35	599722697	WTGL3E100	Electrolux	20090907
91460431500	EWM25_35	599705477	EWW14582W	Electrolux	20080118

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91460431502	EWM25_35	599710400	EWW14582W	Electrolux	20080726
91460431600	EWM25_35	599705609	805721_20960	Privileg	20080125
91460431601	EWM25_35	599720890	805721_21339	Privileg	20090731
91460431900	EWM25_35	599707351	EWW14781W	Electrolux	20080411
91460432000	EWM25_35	599707954	AWW14581S	ArthurMartinElux	20080425
91460432002	EWM25_35	599711984	AWW14581S	ArthurMartinElux	20081017
91460432100	EWM25_35	599708818	JLWD1609	John Lewis	20080606
91460432101	EWM25_35	599720891	JLWD1609	John Lewis	20090731
91460432201	EWM25_35	599709526	ZWD14581W1	Zanussi	20080627
91460432300	EWM25_35	599714753	ZWD14581S1	Zanussi	20090102
91460432500	EWM2100	599718608	EWW12580W	Electrolux	20090501
91460432700	EWM25_35	599713706	00395116_21108	Privileg	20081205
91460432701	EWM25_35	599721618	00395116_21340	Privileg	20090911
91460440100	EWM25_35	599719756	ZWD14791W	Zanussi	20090612
91460440900	EWM25_35	599721931	EWW14791W	Electrolux	20090925
91460441000	EWM25_35	599719940	EWW14791W	Electrolux	20090619
91460442100	EWM25_35	599721772	EWW14791W	Electrolux	20090918
91460500000	EWM2100	599705026	LR3410WT	AEG Electrolux	20071214
91460500100	EWM2100	599705757	L14840	AEG Electrolux	20080201
91460500101	EWM2100	599708439	L14840	AEG Electrolux	20080530
91460500200	EWM2100	599705611	L14840	AEG Electrolux	20080125
91460500201	EWM2100	599713467	L14840	AEG Electrolux	20081128
91460500400	EWM2100	599709482	L14840	AEG Electrolux	20080627
91460500600	EWM2100	599711690	L14840	AEG Electrolux	20081003
91460500700	EWM2100	599707323	L12840	AEG Electrolux	20080411
91460500701	EWM2100	599721624	L12840	AEG Electrolux	20090911
91460500800	EWM2100	599710378	L12840	AEG Electrolux	20080725
91460500801	EWM2100	599721626	L12840	AEG Electrolux	20090911
91460530000	EWM25_35	599703964	L16853	AEG Electrolux	20071109
91460530001	EWM25_35	599715562	L16853	AEG Electrolux	20090213
91460530100	EWM25_35	599705835	L16850	AEG Electrolux	20080208
91460530101	EWM25_35	599720525	L16850	AEG Electrolux	20090710
91460530102	EWM25_35	599720988	L16850	AEG Electrolux	20090807
91460530200	EWM25_35	599703965	L16850	AEG Electrolux	20071109
91460530201	EWM25_35	599721628	L16850	AEG Electrolux	20090911
91460530300	EWM25_35	599705668	L16850	AEG Electrolux	20080125
91460530301	EWM25_35	599720875	L16850	AEG Electrolux	20090731
91460530400	EWM25_35	599704939	L16850	AEG Electrolux	20071214
91460530401	EWM25_35	599720879	L16850	AEG Electrolux	20090731
91460530500	EWM25_35	599704943	L16850	AEG Electrolux	20071214
91460530600	EWM25_35	599705316	QW1600HT	Husqvarna Electrolux	20080111
91460530601	EWM25_35	599722268	QW1600HT	Husqvarna Electrolux	20090921
91460530700	EWM25_35	599706252	L16850	AEG Electrolux	20080229
91460530701	EWM25_35	599720880	L16850	AEG Electrolux	20090731
91460530800	EWM25_35	599705612	L16850	AEG Electrolux	20080125
91460530900	EWM25_35	599709494	L16850	AEG Electrolux	20080627
91460530901	EWM25_35	599720883	L16850	AEG Electrolux	20090731
91460531000	EWM25_35	599706792	L16850	AEG Electrolux	20080321
91460531001	EWM25_35	599720680	L16850	AEG Electrolux	20090717
91460531100	EWM25_35	599707342	L14850	AEG Electrolux	20080411
91460531200	EWM25_35	599709497	L14850	AEG Electrolux	20080627
91460531300	EWM25_35	599710380	L14850	AEG Electrolux	20080725
91460531400	EWM25_35	599710381	L16850	AEG Electrolux	20080725
91460531401	EWM25_35	599721636	L16850	AEG Electrolux	20090911
91460531700	EWM25_35	599721425	L14850A	AEG Electrolux	20090904

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91460531800	EWM25_35	599721369	L16850A	AEG Electrolux	20090828
91460532000	EWM25_35	599721431	L16850A	AEG Electrolux	20090904
91460532200	EWM25_35	599722162	L16850A	AEG Electrolux	20091002
91460532400	EWM25_35	599720951	L16853A	AEG Electrolux	20090807
91460600000	EWM2100	599711520	ZKI225	Zanussi	20080926
91460600001	EWM2100	599712745	ZKI225	Zanussi	20081107
91460600100	EWM2100	599711521	EWX14450W	Electrolux	20080926
91460600200	EWM2100	599711522	EWX14450W	Electrolux	20080926
91460600700	EWM2100	599716792	ZKI225	Zanussi	20090320
91460610000	EWM2100	599711562	L12843VIT	AEG Electrolux	20080927
91460610001	EWM2100	599712746	L12843VIT	AEG Electrolux	20081107
91460610100	EWM2100	599711498	L11842VIT	AEG Electrolux	20080926
91460610101	EWM2100	599712747	L11842VIT	AEG Electrolux	20081107
91460610200	EWM2100	599711502	L12843VIT	AEG Electrolux	20080926
91460610201	EWM2100	599712748	L12843VIT	AEG Electrolux	20081107
91460610300	EWM2100	599711488	ZKI245	Zanussi	20080912
91460610301	EWM2100	599712760	ZKI245	Zanussi	20081107
91460610400	EWM2100	599711508	ZKI525	Zanussi	20080926
91460610401	EWM2100	599713324	ZKI525	Zanussi	20081122
91460610600	EWM2100	599711497	L11842VIT	AEG Electrolux	20080926
91460610601	EWM2100	599712762	L11842VIT	AEG Electrolux	20081107
91460610700	EWM2100	599711505	L12843VIT	AEG Electrolux	20080926
91460610701	EWM2100	599715895	L12843VIT	AEG Electrolux	20090220
91460610800	EWM2100	599711515	AWX12550W	ArthurMartinElux	20080926
91460610900	EWM2100	599716087	EWX14550W	Electrolux	20090227
91460611000	EWM2100	599716798	JLBIWD1403	John Lewis	20090320
91460611100	EWM2100	599714028	L12843VIT	AEG Electrolux	20081212
91460611300	EWM2100	599711517	EWX12550W	Electrolux	20080926
91460611500	EWM2100	599712829	JWX14550W	Juno-Electrolux	20081107
91460611600	EWM2100	599714746	L12843VIT	AEG Electrolux	20090102
91460611700	EWM2100	599711523	L12843VIT	AEG Electrolux	20080926
91460611701	EWM2100	599712763	L12843VIT	AEG Electrolux	20081107
91460611800	EWM2100	599715829	EWX12550W	Electrolux	20090220
91460611900	EWM2100	599715356	L12843VIT	AEG Electrolux	20090207
91460612000	EWM2100	599717992	L12843VIT	AEG Electrolux	20090417
91460612200	EWM2100	599717123	EWX14550W	Electrolux	20090327
91460612300	EWM2100	599717503	EWX14550W	Electrolux	20090404
91460612400	EWM2100	599719848	FWD1400-6E	Franke	20090612
91460612500	EWM2100	599720454	IWT1459.2W	Küppersbusch	20090703
91465332300	EWM2000evo	599372018	L12820	AEG Electrolux	20050715
91465332400	EWM2000evo	599369390	FKF2120	Faure	20050311
91465332600	EWM2000evo	599368719	L12620	AEG Electrolux	20050211
91465332700	EWM2000evo	599369633	ZKG2100	Zanussi	20050325
91465332800	EWM2000evo	599369537	ZKG2120	Zanussi	20050318
91465332900	EWM2000evo	599369538	L12620	AEG Electrolux	20050318
91465333000	EWM2000evo	599372640	WD1245	Zanussi	20050909
91465333100	EWM2000evo	599372642	ZWD1251W	Zanussi-Electrolux	20050916
91465333400	EWM2000evo	599375248	W1206	Zanussi-Electrolux	20060120
91465333500	EWM2000evo	599382259	COMPLESSO	Zanussi	20060526
91465333600	EWM2000evo	599374903	L12620	AEG Electrolux	20060120
91465333700	EWM2000evo	599383825	ZWD1251W	Zanussi-Electrolux	20060224
91465333800	EWM2000evo	599383856	FKF2120	Faure	20060414
91465333900	EWM2000evo	599381339	ZKG2100	Zanussi	20060714
91465334000	EWM2000evo	599381341	ZKG2120	Zanussi	20060714
91465334100	EWM2000evo	599375249	WD1245	Zanussi	20060120

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91465334200	EWM2000evo	599704956	L12820	AEG Electrolux	20071214
91475650000	EWM1000plus	599359810	RKI1000	Rex	20030704
91475650100	EWM1000plus	599361474	EWS1020	Electrolux	20031107
91475650101	EWM1000plus	599373383	EWS1020	Electrolux	20051014
91475650200	EWM1000plus	599362754	EWS1030	Electrolux	20040213
91475650201	EWM1000plus	599373492	EWS1030	Electrolux	20051014
91475650300	EWM1000plus	599362756	EWS1020	Electrolux	20040213
91475650301	EWM1000plus	599373493	EWS1020	Electrolux	20051014
91475650301	EWM1000plus	599374005	EWS1020	Electrolux	20051125
91475650400	EWM1000plus	599364315	EWS1230	Electrolux	20040514
91475650401	EWM1000plus	599373494	EWS1230	Electrolux	20051014
91475650500	EWM1000plus	599363422	EWS1200	Electrolux	20040312
91475650501	EWM1000plus	599373785	EWS1200	Electrolux	20051111
91475650600	EWM1000plus	599363882	RKI1200	Rex-Electrolux	20040416
91475650601	EWM1000plus	599373689	RKI1200	Rex-Electrolux	20051028
91475650602	EWM1000plus	599373802	RKI1200	Rex-Electrolux	20051111
91475650700	EWM1000plus	599363883	RKI1000AL	Rex-Electrolux	20040416
91475650701	EWM1000plus	599373733	RKI1000AL	Rex-Electrolux	20051028
91475650702	EWM1000plus	599373748	RKI1000AL	Rex-Electrolux	20051111
91475650800	EWM1000plus	599366486	L1045EL	AEG	20040917
91475650900	EWM1000plus	599366490	L1245EL	AEG	20040917
91475651000	EWM1000plus	599364318	FE925N	Zanussi-Electrolux	20040514
91475651001	EWM1000plus	599373755	FE925N	Zanussi	20051111
91475651100	EWM1000plus	599364323	FE1024N	Zanussi-Electrolux	20040514
91475651101	EWM1000plus	599373761	FE1024N	Zanussi	20051111
91475651200	EWM1000plus	599365211	477164_20271	Privileg	20040702
91475651201	EWM1000plus	599373865	477164_20271	Privileg	20051111
91475651300	EWM1000plus	599365213	805251_20272	Privileg	20040702
91475651301	EWM1000plus	599373866	805251_20272	Privileg	20051111
91475651400	EWM1000plus	599365262	926084_20285	Privileg	20040709
91475651401	EWM1000plus	599373822	926084_20285	Privileg	20051111
91475651500	EWM1000plus	599365692	RKI1000	Rex-Electrolux	20040730
91475651600	EWM1000plus	599365699	FE1026N	Zanussi	20040730
91475651601	EWM1000plus	599373819	FE1026N	Zanussi	20051111
91475651700	EWM1000plus	599365472	EWS800	Electrolux	20040716
91475651701	EWM1000plus	599373816	EWS800	Electrolux	20051111
91475651800	EWM1000plus	599366592	L1046EL	AEG	20040924
91475651900	EWM1000plus	599366593	L1246EL	AEG	20040924
91475652000	EWM1000plus	599367636	EWS1230	Electrolux	20041203
91475652001	EWM1000plus	599373814	EWS1230	Electrolux	20051111
91475652100	EWM1000plus	599367517	EWS1021	Electrolux	20041126
91475652101	EWM1000plus	599373810	EWS1021	Electrolux	20051111
91475652200	EWM1000plus	599367520	EWS1221	Electrolux	20041126
91475652201	EWM1000plus	599373808	EWS1221	Electrolux	20051111
91475652300	EWM1000plus	599368890	AWS1225	ArthurMartinElux	20050218
91475652400	EWM1000plus	599370551	CLARA1048	AEG Electrolux	20050506
91475652401	EWM1000plus	599373807	CLARA1048	AEG Electrolux	20051111
91475652500	EWM1000plus	599369512	CLARA1248	AEG Electrolux	20050318
91475652501	EWM1000plus	599373806	CLARA1248	AEG Electrolux	20051111
91475652600	EWM1000plus	599368624	L1045EL	AEG Electrolux	20050213
91475652601	EWM1000plus	599373805	L1045EL	AEG Electrolux	20051111
91475652700	EWM1000plus	599368625	L1245EL	AEG Electrolux	20050204
91475652701	EWM1000plus	599373781	L1245EL	AEG Electrolux	20051111
91475652800	EWM1000plus	599369108	L1046EL	AEG Electrolux	20050225
91475652801	EWM1000plus	599373804	L1046EL	AEG Electrolux	20051111

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91475652900	EWM1000plus	599369109	L1246EL	AEG Electrolux	20050225
91475652901	EWM1000plus	599373710	L1246EL	AEG Electrolux	20051104
91475653000	EWM1000plus	599373382	L1249	AEG Electrolux	20051014
91475653100	EWM1000plus	599374156	L1049	AEG Electrolux	20051202
91475653200	EWM1000plus	599374893	L1046EL	AEG Electrolux	20060113
91475653201	EWM1000plus	599386366	L1046EL	AEG Electrolux	20070216
91475653202	EWM1000plus	599702235	L1046EL	AEG Electrolux	20071005
91475653300	EWM1000plus	599374897	L1246EL	AEG Electrolux	20060113
91475653301	EWM1000plus	599386655	L1246EL	AEG Electrolux	20070302
91475653302	EWM1000plus	599702236	L1246EL	AEG Electrolux	20071005
91475653400	EWM1000plus	599375709	EWS1021	Electrolux	20060210
91475653401	EWM1000plus	599386304	EWS1021	Electrolux	20070223
91475653500	EWM1000plus	599375712	EWS1221	Electrolux	20060210
91475653501	EWM1000plus	599385222	EWS1221	Electrolux	20060428
91475653600	EWM1000plus	599377025	L1245EL	AEG Electrolux	20060310
91475653601	EWM1000plus	599717137	L1245EL	AEG Electrolux	20070112
91475653602	EWM1000plus	599702242	L1245EL	AEG Electrolux	20071005
91475653700	EWM1000plus	599377032	EWS1230	Electrolux	20060310
91475653800	EWM1000plus	599375505	L1049	AEG Electrolux	20060203
91475653801	EWM1000plus	599386994	L1049	AEG Electrolux	20070316
91475653802	EWM1000plus	599702253	L1049	AEG Electrolux	20071005
91475653900	EWM1000plus	599377034	L1249	AEG Electrolux	20060310
91475653901	EWM1000plus	599700449	L1249	AEG Electrolux	20060707
91475654000	EWM1000plus	599382453	CLARA1048	AEG Electrolux	20060421
91475654001	EWM1000plus	599382455	CLARA1048	AEG Electrolux	20060428
91475654002	EWM1000plus	599702264	CLARA1048	AEG Electrolux	20071005
91475654100	EWM1000plus	599379037	CLARA1248	AEG Electrolux	20060421
91475654101	EWM1000plus	599701479	CLARA1248	AEG Electrolux	20060424
91475654102	EWM1000plus	599702266	CLARA1248	AEG Electrolux	20071005
91475654200	EWM1000plus	599374416	477164_20271	Privileg	20051216
91475654300	EWM1000plus	599374409	805251_20272	Privileg	20051216
91475654400	EWM1000plus	599374469	926084_20536	Privileg	20051223
91475654500	EWM1000plus	599376491	EWS1200	Electrolux	20060303
91475654501	EWM1000plus	599702620	EWS1200	Electrolux	20060424
91475654600	EWM1000plus	599376027	FE925N	Zanussi	20060217
91475654601	EWM1000plus	599381920	FE925N	Zanussi	20060804
91475654700	EWM1000plus	599376029	FE1026N	Zanussi	20060217
91475654701	EWM1000plus	599705229	FE1026N	Zanussi	20060424
91475654702	EWM1000plus	599702268	FE1026N	Zanussi	20071005
91475654800	EWM1000plus	599376031	FE1024N	Zanussi	20060217
91475654801	EWM1000plus	599383756	FE1024N	Zanussi	20060526
91475654900	EWM1000plus	599376495	EWS800	Electrolux	20060303
91475654901	EWM1000plus	599385871	EWS800	Electrolux	20070209
91475655000	EWM1000plus	599376492	EWS1020	Electrolux	20060303
91475655001	EWM1000plus	599385524	EWS1020	Electrolux	20060428
91475655002	EWM1000plus	599702289	EWS1020	Electrolux	20071005
91475655100	EWM1000plus	599376496	EWS1030	Electrolux	20060303
91475655101	EWM1000plus	599384945	EWS1030	Electrolux	20060424
91475655200	EWM1000plus	599376497	EWS1230	Electrolux	20060303
91475655201	EWM1000plus	599702426	EWS1230	Electrolux	20060424
91475655202	EWM1000plus	599702292	EWS1230	Electrolux	20071005
91475655300	EWM1000plus	599377619	RKI1200	Rex-Electrolux	20060407
91475655301	EWM1000plus	599388390	RKI1200	Rex-Electrolux	20070427
91475655400	EWM1000plus	599377621	RKI1000AL	Rex-Electrolux	20060407
91475655401	EWM1000plus	599384268	RKI1000AL	Rex-Electrolux	20061103

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91475655500	EWM1000plus	599383875	EWS1030	Electrolux	20060519
91475655800	EWM1000plus	599382324	L1045EL	AEG Electrolux	20060421
91475655801	EWM1000plus	599382325	L1045EL	AEG Electrolux	20060526
91475655802	EWM1000plus	599702295	L1045EL	AEG Electrolux	20071005
91475655900	EWM1000plus	599379607	ZWS830	Zanussi	20060526
91475655901	EWM1000plus	599383686	ZWS830	Zanussi	20061020
91475655902	EWM1000plus	599702303	ZWS830	Zanussi	20071005
91475656000	EWM1000plus	599379609	ZWS1030	Zanussi	20060526
91475656001	EWM1000plus	599383685	ZWS1030	Zanussi	20061020
91475656002	EWM1000plus	599702304	ZWS1030	Zanussi	20071005
91475656100	EWM1000plus	599378043	EWS1240	Electrolux	20060421
91475656200	EWM1000plus	599379612	L1249	AEG Electrolux	20060421
91475656201	EWM1000plus	599379622	L1249	AEG Electrolux	20060526
91475656202	EWM1000plus	599702307	L1249	AEG Electrolux	20071005
91475656500	EWM1000plus	599381010	ZWS1040	Zanussi	20060630
91475656501	EWM1000plus	599702312	ZWS1040	Zanussi	20071005
91475656600	EWM1000	599381512	477164_20981	Privileg	20060714
91475656700	EWM1000plus	599381143	805251_20982	Privileg	20060707
91475656800	EWM1000plus	599382450	926084_20983	Privileg	20060901
91475656901	EWM1000plus	599703066	L1070EL	AEG Electrolux	20071012
91475657300	EWM1000plus	599703824	805251_20982	Privileg	20071109
91475657400	EWM1000plus	599704416	926084_20983	Privileg	20071123
91475670000	EWM1000	599379902	RK650A	Rex-Electrolux	20060609
91475670100	EWM1000	599379907	RK850A	Rex-Electrolux	20060609
91475670200	EWM1000	599379909	RK1000A	Rex-Electrolux	20060609
91475670300	EWM1000	599381511	PL84E	Zoppas	20060714
91475670400	EWM1000	599381030	PL104E	Zoppas	20060630
91475690201	EWM2000evo	599703071	L1271EL	AEG Electrolux	20071012
91476050000	EWM1000plus	599365678	FE904NN	Zanussi	20040730
91476050100	EWM1000plus	599365937	EWS1005	Electrolux	20040827
91476050200	EWM1000plus	599367523	126006_20309	Privileg	20041126
91478070200	EWM1000	599351850	QUARZO II	Zanussi	20020411
91478070300	EWM1000	599351852	RUBINO II	Zanussi	20020411
91478070400	EWM1000	599351854	ZAFFIRO II	Zanussi	20020411
91478070500	EWM1000	599356053	EW1050F	Electrolux	20021220
91478070700	EWM1000	599353471	AW1200W	Tricity Bendix	20020703
91478070701	EWM1000	599368124	AW1200W	Tricity Bendix	20050107
91478070800	EWM1000	599353472	AW1400W	Tricity Bendix	20020703
91478070801	EWM1000	599368125	AW1400W	Tricity Bendix	20050107
91478070802	EWM1000	599370022	AW1400W	Tricity Bendix	20050415
91478070900	EWM1000	599354624	F1215	Zanussi	20020927
91478070901	EWM1000	599370133	F1215	Zanussi	20050422
91478071000	EWM1000	599354627	F1415	Zanussi	20020927
91478071001	EWM1000	599383899	F1415	Zanussi	20050304
91478071002	EWM1000	599373727	F1415	Zanussi	20051104
91478071100	EWM1000	599361450	QUARZOII	Zanussi-Electrolux	20031107
91478071200	EWM1000	599361451	RUBINOII	Zanussi-Electrolux	20031107
91478071300	EWM1000	599361452	ZAFFIROII	Zanussi-Electrolux	20031107
91478071301	EWM1000	599369840	ZAFFIROII	Zanussi-Electrolux	20050408
91478071302	EWM1000	599373803	ZAFFIROII	Zanussi-Electrolux	20051111
91478071500	EWM1000	599358841	LFV1260	Faure	20030523
91478071501	EWM1000	599370136	LFV1260	Faure	20050422
91478071600	EWM1000	599359986	F1214	Zanussi	20030718
91478071700	EWM1000	599360697	RE313E	Rex	20031003
91478071901	EWM1000	599368977	QUARZOII	Zanussi-Electrolux	20050218

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91478072200	EWM1000	599362320	582603_20225	Privileg	20040116
91478072300	EWM1000	599362321	238913_20256	Privileg	20040116
91478072301	EWM1000	599385040	238913_20256	Privileg	20060130
91478072400	EWM1000	599362322	943365_20257	Privileg	20040116
91478072500	EWM1000	599363154	LFV1360	Faure	20040227
91478072501	EWM1000	599369843	LFV1360	Faure	20050408
91478072502	EWM1000	599370137	LFV1360	Faure	20050422
91478072600	EWM1000	599363892	RE7	Rex-Electrolux	20040416
91478072700	EWM1000	599363398	ZWF1020W	Zanussi-Electrolux	20040312
91478072703	EWM1000	599368126	ZWF1020W	Zanussi-Electrolux	20050107
91478072704	EWM1000	599369007	ZWF1020W	Zanussi-Electrolux	20050225
91478072800	EWM1000	599363402	ZWF1220W	Zanussi-Electrolux	20040312
91478072801	EWM1000	599368128	ZWF1220W	Zanussi-Electrolux	20050107
91478072900	EWM1000	599363409	ZWF1220S	Zanussi-Electrolux	20040312
91478072901	EWM1000	599368130	ZWF1220S	Zanussi-Electrolux	20050107
91478073000	EWM1000	599363416	ZWF1420W	Zanussi-Electrolux	20040312
91478073001	EWM1000	599368131	ZWF1420W	Zanussi-Electrolux	20050114
91478073002	EWM1000	599370025	ZWF1420W	Zanussi-Electrolux	20050415
91478073100	EWM1000	599364235	ZWF1210W	Zanussi-Electrolux	20040507
91478073101	EWM1000	599370026	ZWF1210W	Zanussi-Electrolux	20050415
91478073102	EWM1000	599383909	ZWF1210W	Zanussi-Electrolux	20051223
91478073200	EWM1000	599362962	ZWF380-60000039FOXTR	Zanussi	20040225
91478073300	EWM1000	599364719	RTF3101	Rosenlew	20040604
91478073301	EWM1000	599369010	RTF3101	Rosenlew	20050225
91478073302	EWM1000	599370139	RTF3101	Rosenlew	20050422
91478073303	EWM1000	599373730	RTF3101	Rosenlew	20051104
91478073400	EWM1000	599365939	EW880F	Electrolux	20040827
91478073500	EWM1000	599364733	350/419-14	Lloyds	20040604
91478073600	EWM1000	599364824	RE313E	Rex-Electrolux	20040611
91478073601	EWM1000	599370148	RE313E	Rex-Electrolux	20050422
91478073700	EWM1000	599364827	ZWF1000	Zanussi-Electrolux	20040611
91478073800	EWM1000	599364829	ZWF1200	Zanussi-Electrolux	20040611
91478074100	EWM1000	599366376	210865_20294	Privileg	20040917
91478074200	EWM1000	599365735	511228	LUNIK	20040730
91478074300	EWM1000	599367352	ZWF1010W	Zanussi-Electrolux	20041112
91478074400	EWM1000	599367350	AW1000W	Tricity Bendix	20041112
91478074401	EWM1000	599369844	AW1000W	Tricity Bendix	20050408
91478074500	EWM1000	599367678	CMFDUKAAT	Marijnen	20041210
91478074501	EWM1000	599370153	CMFDUKAAT	Marijnen	20050422
91478074600	EWM1000	599369012	FWF3135	Faure	20050225
91478074601	EWM1000	599369847	FWF3135	Faure	20050408
91478074602	EWM1000	599370154	FWF3135	Faure	20050422
91478074700	EWM1000	599367526	ZWF1415W	Zanussi-Electrolux	20041126
91478074702	EWM1000	599372019	ZWF1415W	Zanussi-Electrolux	20050715
91478074703	EWM1000	599383912	ZWF1415W	Zanussi-Electrolux	20051223
91478074900	EWM1000	599368904	ZWF3102	Zanussi	20050218
91478074901	EWM1000	599371412	ZWF3102	Zanussi	20050617
91478074902	EWM1000	599383621	ZWF3102	Zanussi	20051216
91478075000	EWM1000	599368906	ZWF3122	Zanussi	20050218
91478075001	EWM1000	599370156	ZWF3122	Zanussi	20050422
91478075100	EWM1000	599369313	ZWG3102	Zanussi	20050311
91478075101	EWM1000	599370158	ZWG3102	Zanussi	20050422
91478075102	EWM1000	599374387	ZWG3102	Zanussi	20051216
91478075200	EWM1000	599369315	ZWG3122	Zanussi	20050311
91478075201	EWM1000	599370162	ZWG3122	Zanussi	20050422

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91478075300	EWM1000	599369309	ZWG3144	Zanussi	20050311
91478075301	EWM1000	599370033	ZWG3144	Zanussi	20050415
91478075400	EWM1000	599368909	ZWG3142	Zanussi	20050218
91478075401	EWM1000	599369848	ZWG3142	Zanussi	20050408
91478075402	EWM1000	599370038	ZWG3142	Zanussi	20050415
91478075500	EWM1000	599368914	ZWF1000	Zanussi	20050218
91478075501	EWM1000	599383914	ZWF1000	Zanussi	20050408
91478075600	EWM1000	599368917	ZWF1200	Zanussi	20050218
91478075601	EWM1000	599370164	ZWF1200	Zanussi	20050422
91478075700	EWM1000	599368919	ZWF1400	Zanussi	20050218
91478075701	EWM1000	599369851	ZWF1400	Zanussi	20050408
91478075702	EWM1000	599370170	ZWF1400	Zanussi	20050422
91478075800	EWM1000	599369486	AW1201W	Tricity Bendix	20050318
91478075900	EWM1000	599369489	AW1401W	Tricity Bendix	20050318
91478075901	EWM1000	599374533	AW1401W	Tricity Bendix	20051230
91478076000	EWM1000	599368272	004541_20332	Privileg	20050121
91478076100	EWM1000	599368273	610348_20333	Privileg	20050121
91478076200	EWM1000	599370533	EWF820	Electrolux	20050506
91478076300	EWM1000	599370977	EWF1020	Electrolux	20050527
91478076301	EWM1000	599383915	EWF1020	Electrolux	20051223
91478076400	EWM1000	599370534	EWF1220	Electrolux	20050506
91478076500	EWM1000	599371657	386.737_20345	SILENTIC	20050701
91478076600	EWM1000	599369792	440.513_20346	SILENTIC	20050404
91478076700	EWM1000	599370538	R70A	Rex-Electrolux	20050506
91478076800	EWM1000	599370540	R80A	Rex-Electrolux	20050506
91478076900	EWM1000	599370543	R100A	Rex-Electrolux	20050506
91478076901	EWM1000	599374532	R100A	Rex-Electrolux	20051230
91478077000	EWM1000	599371414	EWF1028	Electrolux	20050617
91478077001	EWM1000	599383917	EWF1028	Electrolux	20051230
91478077300	EWM1000	599369831	444/615	Lloyds	20050408
91478077400	EWM1000	599371515	EWF1030	Electrolux	20050624
91478077401	EWM1000	599380799	EWF1030	Electrolux	20060526
91478077500	EWM1000	599372565	F1046	Zanussi	20050909
91478077501	EWM1000	599383919	ZWF1000	Zanussi	20051223
91478077600	EWM1000	599372566	F1246	Zanussi	20050909
91478077700	EWM1000	599372768	ZWF3120	Zanussi	20050923
91478078001	EWM1000	599383921	888_222_14	Lloyds	20051223
91478078100	EWM1000	599372771	888/222 05	Lloyds	20050923
91478078300	EWM1000	599380577	EWF820	Electrolux	20060623
91478078400	EWM1000	599374520	EWF1020	Electrolux	20060106
91478078500	EWM1000	599374522	EWF1220	Electrolux	20060106
91478078501	EWM1000	599379025	EWF1220	Electrolux	20060505
91478078600	EWM1000	599377038	ZWF3120	Zanussi	20060310
91478078601	EWM1000	599379026	ZWF3120	Zanussi	20060505
91478078700	EWM1000	599702037	ZWF3122	Zanussi	20060210
91478078701	EWM1000	599379046	ZWF3122	Zanussi	20060505
91478078800	EWM1000	599374527	ZWG3122	Zanussi	20060120
91478078801	EWM1000	599379047	ZWG3122	Zanussi	20060505
91478079000	EWM1000	599374530	ZWG3142	Zanussi	20060120
91478079200	EWM1000	599378030	AW1401W	Tricity Bendix	20060421
91478079401	EWM1000	599379055	386.737_20575	SILENTIC	20060505
91478079402	EWM1000	599383690	386737_20770	SILENTIC	20061020
91478079500	EWM1000	599374449	440.513_20346	SILENTIC	20051216
91478079501	EWM1000	599379061	440.513_20576	SILENTIC	20060505
91478079800	EWM1000	599374103	888/226-09	Lloyds	20051125

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91478080000	EWM1000	599375449	R80A	Rex-Electrolux	20060203
91478080100	EWM1000	599375450	R100A	Rex-Electrolux	20060203
91478080200	EWM1000	599380645	FWF3135	Faure	20060526
91478080400	EWM1000	599383781	F1046	Zanussi	20060203
91478080500	EWM1000	599375250	F1246	Zanussi	20060120
91478080501	EWM1000	599379063	F1246	Zanussi	20060505
91478080600	EWM1000	599375448	RTF3101	Rosenlew	20060203
91478080801	EWM1000	599379064	888/222 05	Lloyds	20060505
91478080901	EWM1000	599379088	888/226 09	Lloyds	20060505
91478081000	EWM1000	599374119	969048_20434	Privileg	20051202
91478081100	EWM1000	599383783	969048_20617	Privileg	20060203
91478081101	EWM1000	599383692	969048_20771	Privileg	20061020
91478081201	EWM1000	599383637	004541_20556	Privileg	20061013
91478081301	EWM1000	599383693	610348_20557	Privileg	20061020
91478081401	EWM1000	599382097	AW1201W	Tricity Bendix	20060811
91478081501	EWM1000	599379091	210865_20553	Privileg	20060505
91478081800	EWM1000	599376403	FWF3113	Faure	20060303
91478081801	EWM1000	599379096	FWF3113	Faure	20060505
91478081900	EWM1000	599380634	EWF1029	Electrolux	20060526
91478082000	EWM1000	599377040	F1215	Zanussi	20060310
91478082001	EWM1000	599379098	F1215	Zanussi	20060505
91478082100	EWM1000	599377042	F1415	Zanussi	20060310
91478082200	EWM1000	599377051	FAE1226	Zanussi	20060310
91478082300	EWM1000	599376407	EWF1030	Electrolux	20060303
91478082400	EWM1000	599376409	EWF1028	Electrolux	20060303
91478082600	EWM1000	599377056	FWF1400	Zanussi	20060310
91478082700	EWM1000	599382221	ZWF3102	Zanussi	20060825
91478082800	EWM1000	599379661	706187_20679	Privileg	20060526
91478082801	EWM1000	599383694	706187_20773	Privileg	20061020
91478082900	EWM1000	599379662	821084_20680	Privileg	20060526
91478083000	EWM1000	599379930	RTF3143	Rosenlew	20060609
91478083100	EWM1000	599382189	RTF3125	Rosenlew	20060825
91478083200	EWM1000	599381568	RTF3102	Rosenlew	20060721
91478083300	EWM1000	599382190	RTF3124	Rosenlew	20060825
91478083400	EWM1000	599382192	RTF3103	Rosenlew	20060825
91478090000	EWM1000	599359445	FAE1025V	Zanussi	20030613
91478090001	EWM1000	599359987	FAE1025V	Zanussi	20030718
91478090002	EWM1000	599360672	FAE1025V	Zanussi	20030919
91478090003	EWM1000	599369011	FAE1025V	Zanussi	20050225
91478090004	EWM1000	599376570	FAE1025V	Zanussi	20051021
91478090100	EWM1000	599359563	FAE625	Zanussi	20030620
91478090200	EWM1000	599359564	FAE825V	Zanussi	20030620
91478090201	EWM1000	599359991	FAE825V	Zanussi	20030718
91478090202	EWM1000	599362006	FAE825V	Zanussi	20031205
91478090300	EWM1000	599359565	FAE1025V	Zanussi	20030620
91478090301	EWM1000	599359994	FAE1025V	Zanussi	20030718
91478090302	EWM1000	599362007	FAE1025V	Zanussi	20031205
91478090500	EWM1000	599371239	FAE1025V	Zanussi	20050610
91478090600	EWM1000	599371241	FA826HYDRO	Zanussi	20050610
91478090700	EWM1000	599371244	FA1026HYDR	Zanussi	20050610
91478090800	EWM1000	599371246	EWF805	Electrolux	20050610
91478090900	EWM1000	599371247	EWF1005	Electrolux	20050617
91478091000	EWM1000	599371248	EWF1060	Electrolux	20050617
91478091200	EWM1000	599374453	P80E	Zoppas	20051216
91478091300	EWM1000	599377623	P100E	Zoppas	20050825

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91478091700	EWM1000	599374534	EWF805	Electrolux	20060106
91478091800	EWM1000	599374535	EWF1005	Electrolux	20060106
91478091900	EWM1000	599374536	EWF1060	Electrolux	20060106
91478092000	EWM1000	599374847	FAE825V	Zanussi	20060113
91478092100	EWM1000	599379938	FAE1025V	Zanussi	20060609
91478092200	EWM1000	599374849	FA826HYDRO	Zanussi	20060113
91478092300	EWM1000	599374850	FA1026HYDR	Zanussi	20060113
91478092400	EWM1000	599380406	P65E	Zoppas	20060616
91478092500	EWM1000	599380399	P80E	Zoppas	20060616
91478092600	EWM1000	599375447	P100E	Zoppas	20060127
91478092700	EWM1000	599376050	FAE1025V	Zanussi	20060217
91478860000	EWM1000plus	599367631	FE804	Zanussi	20041203
91478860001	EWM1000plus	599382173	FE804	Zanussi	20060526
91478860100	EWM1000plus	599365426	FE1004	Zanussi	20040716
91478860101	EWM1000plus	599369015	FE1004	Zanussi	20050225
91478860102	EWM1000plus	599380081	FE1004	Zanussi	20050722
91478860103	EWM1000plus	599382172	FE1004	Zanussi	20060526
91479110000	EWM1000	599351644	FS1055W	Zanussi	20020402
91479110100	EWM1000	599351645	FS1155W	Zanussi	20020402
91479110200	EWM1000	599351646	FS1255W	Zanussi	20020402
91479110300	EWM1000	599351648	FS1455W	Zanussi	20020402
91479110400	EWM1000	599354866	FS1255S	Zanussi	20021011
91479110500	EWM1000	599351867	F1025	Zanussi	20020411
91479110600	EWM1000	599351871	F1225	Zanussi	20020411
91479110700	EWM1000	599351878	F1425	Zanussi	20020411
91479110800	EWM1000	599351882	AWF910	ArthurMartinElux	20020411
91479110900	EWM1000	599352631	865147_20066	Privileg	20020529
91479111000	EWM1000	599352632	945101_20067	Privileg	20020529
91479111100	EWM1000	599352634	018454_20068	Privileg	20020529
91479111200	EWM1000	599352635	266391_20060	Privileg	20020529
91479111300	EWM1000	599352636	930777_20061	Privileg	20020529
91479111400	EWM1000	599352639	829880_20065	Privileg	20020529
91479111500	EWM1000	599352737	266412_20062	Privileg	20020607
91479111600	EWM1000	599352766	614643_20063	Privileg	20020607
91479111700	EWM1000	599352770	266471_20064	Privileg	20020607
91479111800	EWM1000	599352890	FS1355W	Zanussi	20020621
91479111900	EWM1000	599353515	AWF910C	ArthurMartinElux	20020711
91479112000	EWM1000	599353555	F1256W	Zanussi	20020717
91479112100	EWM1000	599361461	F1225	Zanussi-Electrolux	20031107
91479112200	EWM1000	599361462	F1425	Zanussi-Electrolux	20031107
91479112300	EWM1000	599354477	206304_20125	Privileg	20020920
91479112500	EWM1000	599359275	F1015	Zanussi	20030606
91479112501	EWM1000	599383763	F1015	Zanussi	20051223
91479112600	EWM1000	599356980	F1215	Zanussi	20030228
91479112601	EWM1000	599383764	F1215	Zanussi	20051223
91479112700	EWM1000	599357572	F1213	Zanussi	20030321
91479112900	EWM1000	599354729	F1026	Zanussi	20021004
91479113000	EWM1000	599354736	F1226	Zanussi	20021004
91479113100	EWM1000	599354737	F1426	Zanussi	20021004
91479113101	EWM1000	599383770	F1426	Zanussi	20051223
91479113200	EWM1000	599354745	F1025	Zanussi	20021004
91479113300	EWM1000	599354746	F1225	Zanussi	20021004
91479113400	EWM1000	599355855	TF1032E	Elektro Helios	20021213
91479113500	EWM1000	599355864	TF1232E	Elektro Helios	20021213
91479113501	EWM1000	599383777	TF1232E	Elektro Helios	20051223

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91479113600	EWM1000	599355613	TF1052E	Elektro Helios	20021129
91479113601	EWM1000	599383789	TF1052E	Elektro Helios	20051223
91479113700	EWM1000	599355614	TF1252E	Elektro Helios	20021129
91479113701	EWM1000	599383791	TF1252E	Elektro Helios	20051223
91479113900	EWM1000	599355148	FL708	Zanussi	20021101
91479114000	EWM1000	599361131	FL708	Zanussi	20031017
91479114100	EWM1000	599355151	FL708ALU	Zanussi	20021101
91479114200	EWM1000	599355154	FL908	Zanussi	20021101
91479114300	EWM1000	599365737	FL908	Zanussi	20040730
91479114400	EWM1000	599355162	FL1108	Zanussi	20021101
91479114500	EWM1000	599355435	EW1030F	Electrolux	20021115
91479114501	EWM1000	599382166	EW1030F	Electrolux	20060526
91479114600	EWM1000	599355436	EW1230F	Electrolux	20021115
91479114700	EWM1000	599355437	EW1430F	Electrolux	20021115
91479114800	EWM1000	599355874	TF1232E	Elektro Helios	20021213
91479114801	EWM1000	599383794	TF1232E	Elektro Helios	20051223
91479114900	EWM1000	599356060	CMF914	Marijnen	20021220
91479115000	EWM1000	599356062	CMF912	Marijnen	20021220
91479115100	EWM1000	599356063	CMF DUKAAT	Marijnen	20021220
91479115200	EWM1000	599356065	CMF FLORIJN	Marijnen	20021220
91479115300	EWM1000	599356649	EW1400 ANTARTIDE	Electrolux	20021102
91479115400	EWM1000	599356981	AWF915	ArthurMartinElux	20030228
91479115500	EWM1000	599356983	AWF1015	ArthurMartinElux	20030228
91479115600	EWM1000	599356838	AWF1215	ArthurMartinElux	20030221
91479115700	EWM1000	599358276	EW770F	Electrolux	20030418
91479115800	EWM1000	599360157	743422_20155	Privileg	20030725
91479115800	EWM1000	599369270	743422_20155	Privileg	20050311
91479115801	EWM1000	599383802	743422_20155	Privileg	20051223
91479115900	EWM1000	599359276	EWF1029	Electrolux	20030606
91479115901	EWM1000	599383798	EWF1029	Electrolux	20051223
91479116000	EWM1000	599358941	RE65	Rex	20030530
91479116100	EWM1000	599358943	RE80	Rex	20030530
91479116200	EWM1000	599358945	RE100	Rex	20030530
91479116300	EWM1000	599358946	RE120	Rex	20030530
91479116400	EWM1000	599358793	FS1055W	Zanussi-Electrolux	20030516
91479116500	EWM1000	599358794	FS1155W	Zanussi-Electrolux	20030516
91479116600	EWM1000	599358795	FS1255W	Zanussi-Electrolux	20030516
91479116700	EWM1000	599358796	FS1455W	Zanussi-Electrolux	20030516
91479116800	EWM1000	599358801	FS1255S	Zanussi-Electrolux	20030516
91479116900	EWM1000	599358803	FS1355W	Zanussi-Electrolux	20030516
91479117000	EWM1000	599358963	993401_20168	Privileg	20030530
91479117100	EWM1000	599358968	308637_20161	Privileg	20030530
91479117101	EWM1000	599383805	308637_20161	Privileg	20051223
91479117200	EWM1000	599358971	220052_20162	Privileg	20030530
91479117201	EWM1000	599383813	220052_20162	Privileg	20051223
91479117300	EWM1000	599358972	842040_20166	Privileg	20030530
91479117301	EWM1000	599383814	842040_20166	Privileg	20051223
91479117400	EWM1000	599358975	746752_20165	Privileg	20030530
91479117401	EWM1000	599383881	746752_20165	Privileg	20051223
91479117500	EWM1000	599358977	212234_20163	Privileg	20030530
91479117501	EWM1000	599383883	212234_20163	Privileg	20051223
91479117502	EWM1000	599383762	212234_20163	Privileg	20050930
91479117600	EWM1000	599358978	932587_20164	Privileg	20030530
91479117700	EWM1000	599359801	452546_20202	Privileg	20030704
91479117800	EWM1000	599359802	092676_20203	Privileg	20030704

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91479117900	EWM1000	599359803	637774_20204	Privileg	20030704
91479118000	EWM1000	599359804	147230_20205	Privileg	20030704
91479118100	EWM1000	599359805	637773_20206	Privileg	20030704
91479118500	EWM1000	599360699	SF4000	Zanker	20031003
91479118600	EWM1000	599360701	SF4200	Zanker	20031003
91479118700	EWM1000	599360702	SF4400	Zanker	20031003
91479118800	EWM1000	599360398	EWF810	Electrolux	20030829
91479118801	EWM1000	599383809	EWF810	Electrolux	20051223
91479118900	EWM1000	599360399	EWF1010	Electrolux	20030829
91479119000	EWM1000	599360158	AWF915C	ArthurMartinElux	20030801
91479119100	EWM1000	599360402	FS1555W	Zanussi-Electrolux	20030829
91479119200	EWM1000	599360673	RE316E	Rex	20030919
91479119300	EWM1000	599360675	RQ99E	Rex	20030927
91479119400	EWM1000	599362326	RE160EX	Rex	20040123
91479119600	EWM1000	599360762	EWF1232	Electrolux	20031003
91479119601	EWM1000	599362463	EWF1232	Electrolux	20040206
91479119602	EWM1000	599383885	EWF1232	Electrolux	20051223
91479119700	EWM1000	599360766	EWF1235	Electrolux	20031003
91479119701	EWM1000	599362009	EWF1235	Electrolux	20031205
91479119702	EWM1000	599382207	EWF1235	Electrolux	20051212
91479119800	EWM1000	599360442	FL1208	Zanussi	20030905
91479120100	EWM1000	599361648	EWF1210	Electrolux	20031128
91479120200	EWM1000	599365396	F1025	Zanussi-Electrolux	20040709
91479120400	EWM1000	599363324	F1425	Zanussi-Electrolux	20040307
91479120500	EWM1000	599363204	ZWG390	Zanussi	20040227
91479120600	EWM1000	599362049	873750_20235	Privileg	20031212
91479120800	EWM1000	599362306	PF2445	Zanker	20040114
91479120900	EWM1000	599362309	PF4225	Zanker	20040116
91479121000	EWM1000	599362763	350/133-09 50290	Lloyds	20040213
91479121100	EWM1000	599362011	EWF1029	Electrolux	20031205
91479121200	EWM1000	599362764	EWF1030	Electrolux	20040213
91479121400	EWM1000	599384242	CMF914	Marijnen	20050107
91479121500	EWM1000	599362584	EWF630	Electrolux	20040206
91479121600	EWM1000	599362585	EWF830	Electrolux	20040206
91479121700	EWM1000	599362863	AWF1010	ArthurMartinElux	20040220
91479121800	EWM1000	599362865	AWF1115	ArthurMartinElux	20040220
91479121900	EWM1000	599362866	AWF1020	ArthurMartinElux	20040220
91479122000	EWM1000	599362869	AWF1220	ArthurMartinElux	20040220
91479122100	EWM1000	599362870	AWF1420	ArthurMartinElux	20040220
91479122200	EWM1000	599363206	SF1251	Zanker	20040227
91479122300	EWM1000	599363417	CMFCYCLE	Marijnen	20040312
91479122301	EWM1000	599383927	CMFCYCLE	Marijnen	20051223
91479122400	EWM1000	599364016	RE70	Rex-Electrolux	20040420
91479122401	EWM1000	599383935	RE70	Rex-Electrolux	20051223
91479122500	EWM1000	599364017	RE80	Rex-Electrolux	20040423
91479122501	EWM1000	599383990	RE80	Rex-Electrolux	20051223
91479122600	EWM1000	599364018	RE90	Rex-Electrolux	20040423
91479122601	EWM1000	599383940	RE90	Rex-Electrolux	20051223
91479122700	EWM1000	599364019	RE100	Rex-Electrolux	20040423
91479122701	EWM1000	599383992	RE100	Rex-Electrolux	20051223
91479122800	EWM1000	599364023	RE120	Rex-Electrolux	20040423
91479122900	EWM1000	599363839	RQ99E	Rex-Electrolux	20040409
91479123000	EWM1000	599364240	P8EM	Zoppas	20040507
91479123100	EWM1000	599363419	PF4425	Zanker	20040312
91479123200	EWM1000	599364526	F1215	Zanussi-Electrolux	20040528

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91479123300	EWM1000	599364530	F1415	Zanussi-Electrolux	20040528
91479123400	EWM1000	599364147	PF4227	Zanker	20040430
91479123500	EWM1000	599364734	RTF3100	Rosenlew	20040604
91479123600	EWM1000	599364739	RTF3123	Rosenlew	20040604
91479123700	EWM1000	599364742	RTF3122	Rosenlew	20040604
91479123701	EWM1000	599384002	RTF3122	Rosenlew	20051223
91479123800	EWM1000	599364743	RTF3120	Rosenlew	20040604
91479123900	EWM1000	599364415	204404_20267	Privileg	20040521
91479124000	EWM1000	599364532	SF4426	Zanker	20040528
91479124100	EWM1000	599365214	FL708ALU	Zanussi	20040702
91479124101	EWM1000	599384006	FL708ALU	Zanussi	20051223
91479124200	EWM1000	599364468	FL1231	Zanussi	20040521
91479124300	EWM1000	599364834	RE160EX	Rex-Electrolux	20040611
91479124400	EWM1000	599364835	RE316E	Rex-Electrolux	20040611
91479124600	EWM1000	599364836	ZWF1400	Zanussi-Electrolux	20040611
91479124700	EWM1000	599365934	FL1108ALU	Zanussi	20040820
91479124800	EWM1000	599365429	SF5400	Zanker	20040716
91479124900	EWM1000	599366499	FL1018	Zanussi	20040917
91479125000	EWM1000	599370042	EWF668	Electrolux	20050415
91479125600	EWM1000	599366813	SF4229	Zanker	20041015
91479125700	EWM1000	599366812	SF4429	Zanker	20041015
91479125800	EWM1000	599366596	DF4229	Zanker	20040924
91479125900	EWM1000	599366599	DF4429	Zanker	20040924
91479126000	EWM1000	599367393	TF1432E	Elektro Helios	20041119
91479126001	EWM1000	599383942	TF1432E	Elektro Helios	20051223
91479126100	EWM1000	599367127	BIW145W	Tricity Bendix	20041029
91479126101	EWM1000	599383995	BIW145W	BENDIX	20051021
91479126102	EWM1000	599384010	BIW145W	BENDIX	20051223
91479126200	EWM1000	599371658	EWF1215	Electrolux	20050701
91479126201	EWM1000	599383939	EWF1215	Electrolux	20051223
91479126300	EWM1000	599367606	DF4240	Zanker	20041203
91479126301	EWM1000	599384288	DF4240	Zanker	20051223
91479126400	EWM1000	599367609	DF4440	Zanker	20041203
91479126401	EWM1000	599384011	DF4440	Zanker	20051223
91479126500	EWM1000	599367684	DF4440B	Zanker	20041210
91479126501	EWM1000	599383994	DF4440B	Zanker	20050930
91479126502	EWM1000	599384012	DF4440B	Zanker	20051223
91479126600	EWM1000	599367690	DF4440S	Zanker	20041210
91479126601	EWM1000	599384013	DF4440S	Zanker	20051223
91479126700	EWM1000	599368293	EWF1230	Electrolux	20050128
91479126701	EWM1000	599384014	EWF1230	Electrolux	20051223
91479126800	EWM1000	599367947	F1227	Zanussi	20041231
91479126900	EWM1000	599367949	F1427	Zanussi	20041231
91479127100	EWM1000	599368296	CMFEURO	Marijnen	20050128
91479127200	EWM1000	599369586	ZWG385	Zanussi	20050325
91479127300	EWM1000	599369833	ZWG385A	Zanussi	20050408
91479127301	EWM1000	599384015	ZWG385A	Zanussi	20051223
91479127400	EWM1000	599369587	ZWG3105	Zanussi	20050325
91479127500	EWM1000	599369835	ZWG3105A	Zanussi	20050408
91479127501	EWM1000	599384016	ZWG3105A	Zanussi	20051223
91479127600	EWM1000	599369590	ZWG3125	Zanussi	20050325
91479127700	EWM1000	599367956	SF2201	Zanker	20041231
91479127701	EWM1000	599384017	SF2201	Zanker	20051223
91479127800	EWM1000	599367957	SF2401	Zanker	20041231
91479127801	EWM1000	599384019	SF2401	Zanker	20051223

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91479127900	EWM1000	599369291	ZWG3164	Zanussi	20050311
91479127901	EWM1000	599384020	ZWG3164	Zanussi	20051223
91479128000	EWM1000	599368922	ZWG3162	Zanussi	20050218
91479128001	EWM1000	599380684	ZWG3162	Zanussi	20051021
91479128100	EWM1000	599369591	ZWG3143	Zanussi	20050325
91479128101	EWM1000	599374125	ZWG3143	Zanussi	20051202
91479128200	EWM1000	599369592	ZWG3163	Zanussi	20050325
91479128201	EWM1000	599384021	ZWG3163	Zanussi	20051223
91479128300	EWM1000	599369593	ZWG3123	Zanussi	20050325
91479128301	EWM1000	599384022	ZWG3123	Zanussi	20051223
91479128400	EWM1000	599367888	ZWF1210W	Zanussi-Electrolux	20041218
91479128500	EWM1000	599369494	EWF735	Electrolux	20050318
91479128600	EWM1000	599370024	AW1260W	Tricity Bendix	20050415
91479128601	EWM1000	599384026	AW1260W	Tricity Bendix	20051223
91479128700	EWM1000	599369791	AW1460W	Tricity Bendix	20050404
91479128701	EWM1000	599383997	AW1460W	Tricity Bendix	20051021
91479128702	EWM1000	599384027	AW1460W	Tricity Bendix	20051223
91479128900	EWM1000	599369594	ZWF1021W	Zanussi-Electrolux	20050325
91479129000	EWM1000	599369595	ZWF1221W	Zanussi-Electrolux	20050325
91479129001	EWM1000	599384028	ZWF1221W	Zanussi-Electrolux	20051223
91479129100	EWM1000	599369836	ZWF1221S	Zanussi-Electrolux	20050408
91479129101	EWM1000	599383998	ZWF1221S	Zanussi-Electrolux	20051021
91479129102	EWM1000	599384030	ZWF1221S	Zanussi-Electrolux	20051223
91479129200	EWM1000	599369596	ZWF1421W	Zanussi-Electrolux	20050325
91479129201	EWM1000	599384031	ZWF1421W	Zanussi-Electrolux	20051223
91479129202	EWM1000	599374115	ZWF1421W	Zanussi-Electrolux	20051202
91479129300	EWM1000	599369837	F1626	Zanussi	20050408
91479129301	EWM1000	599384032	F1626	Zanussi	20051223
91479129400	EWM1000	599369226	175401_20350	Privileg	20050304
91479129401	EWM1000	599384033	175401_20350	Privileg	20051223
91479129500	EWM1000	599370547	R800AXC	Rex-Electrolux	20050506
91479129501	EWM1000	599383993	R800AXC	Rex-Electrolux	20051223
91479129601	EWM1000	599373671	DF2200	Zanker	20051104
91479129701	EWM1000	599373674	DF2400	Zanker	20051104
91479129801	EWM1000	599373677	DF2600	Zanker	20051104
91479129900	EWM1000	599371516	SFX2400 (PRIVILEG)	Zanker	20050624
91479129901	EWM1000	599384034	SFX2400	Zanker	20051223
91479130000	EWM1000	599372103	556_767_09	Zanker	20050722
91479130001	EWM1000	599384042	SF2200	Zanker	20051223
91479130100	EWM1000	599372104	SF2400	Zanker	20050722
91479130101	EWM1000	599384043	SF2400	Zanker	20051223
91479130200	EWM1000	599370839	933910_20376	Privileg	20050520
91479130201	EWM1000	599383944	933910_20376	Privileg	20051223
91479130600	EWM1000	599371290	RTF3141	Rosenlew	20050617
91479130601	EWM1000	599384044	RTF3141	Rosenlew	20051223
91479130800	EWM1000	599372105	CMFDUKAAT	Marijnen	20050722
91479130801	EWM1000	599384048	CMFDUKAAT	Marijnen	20051223
91479130900	EWM1000	599372106	CMFFLORIJN	Marijnen	20050722
91479130901	EWM1000	599384046	CMFFLORIJN	Marijnen	20051223
91479131000	EWM1000	599372107	CMFEURO	Marijnen	20050722
91479131001	EWM1000	599384049	CMFEURO	Marijnen	20051223
91479131100	EWM1000	599371822	F1645	Zanussi	20050708
91479131200	EWM1000	599372108	F1247	Zanussi	20050722
91479131201	EWM1000	599384054	F1247	Zanussi	20051223
91479131300	EWM1000	599372109	F1447	Zanussi	20050722

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91479131301	EWM1000	599384052	F1447	Zanussi	20051223
91479131500	EWM1000	599372590	F1446	Zanussi	20050909
91479131501	EWM1000	599384053	F1446	Zanussi	20051223
91479131600	EWM1000	599372673	ZWF1200	Zanussi	20050916
91479131700	EWM1000	599372678	ZWF1400	Zanussi	20050916
91479131701	EWM1000	599384055	ZWF1400	Zanussi	20051223
91479131800	EWM1000	599373531	ZWF1221G	Zanussi-Electrolux	20051021
91479131801	EWM1000	599384060	ZWF1221G	Zanussi-Electrolux	20051223
91479131900	EWM1000	599372679	ZWF1421S	Zanussi-Electrolux	20050916
91479131901	EWM1000	599383999	ZWF1421S	Zanussi-Electrolux	20051021
91479131902	EWM1000	599384062	ZWF1421S	Zanussi-Electrolux	20051223
91479132001	EWM1000	599384066	ZWF1621W	Zanussi-Electrolux	20051223
91479132002	EWM1000	599373681	ZWF1621W	Zanussi-Electrolux	20051104
91479132101	EWM1000	599384067	ZWF1621S	Zanussi-Electrolux	20051223
91479132102	EWM1000	599374095	ZWF1621S	Zanussi-Electrolux	20051125
91479132200	EWM1000	599373253	ZWF1521W	Zanussi-Electrolux	20051007
91479132201	EWM1000	599384004	ZWF1521W	Zanussi-Electrolux	20051021
91479132202	EWM1000	599384047	ZWF1521W	Zanussi-Electrolux	20051223
91479132300	EWM1000	599372681	BONUX	Zanussi	20050916
91479132301	EWM1000	599379107	BONUX	Zanussi	20051021
91479132600	EWM1000	599384238	CMFCYCLE	Marijnen	20051104
91479132700	EWM1000	599382224	EWF1029	Electrolux	20060825
91479132800	EWM1000	599375252	ZWF1200	Zanussi	20060120
91479132900	EWM1000	599375261	ZWF1400	Zanussi	20060120
91479133000	EWM1000	599374870	BONUX	Zanussi	20060120
91479133001	EWM1000	599386257	BONUX	Zanussi	20070223
91479133100	EWM1000	599382226	ZWG3164	Zanussi	20060825
91479133101	EWM1000	599388825	ZWG3164	Zanussi	20070518
91479133200	EWM1000	599374872	ZWG3162	Zanussi	20060120
91479133201	EWM1000	599388830	ZWG3162	Zanussi	20070323
91479133202	EWM1000	599388831	ZWG3162	Zanussi	20070518
91479133300	EWM1000	599382227	BIW145W	BENDIX	20060825
91479133301	EWM1000	599386251	BIW145W	BENDIX	20070223
91479133600	EWM1000	599378148	AW1260W	Tricity Bendix	20060421
91479133700	EWM1000	599375383	AW1460W	Tricity Bendix	20060127
91479133800	EWM1000	599704962	EWF668	Electrolux	20071214
91479133900	EWM1000	599373532	192.007_20413	SILENTIC	20051021
91479134000	EWM1000	599382242	ZWG3144	Zanussi	20060825
91479134001	EWM1000	599386246	ZWG3144	Zanussi	20070223
91479134300	EWM1000	599374883	F900	Zanussi-Electrolux	20060113
91479134301	EWM1000	599386247	F900	Zanussi-Electrolux	20070223
91479134400	EWM1000	599382274	933910_20507	Privileg	20060825
91479134500	EWM1000	599374435	308637_20161	Privileg	20051216
91479134600	EWM1000	599374252	220052_20162	Privileg	20051216
91479134700	EWM1000	599374433	842040_20166	Privileg	20051216
91479134800	EWM1000	599374436	746752_20510	Privileg	20051216
91479134900	EWM1000	599374470	212234_20508	Privileg	20051223
91479135000	EWM1000	599382307	932587_20509	Privileg	20060825
91479135100	EWM1000	599376051	CMFCYCLE	Marijnen	20060217
91479135200	EWM1000	599374873	CMFDUKAAT	Marijnen	20060120
91479135201	EWM1000	599386248	CMFDUKAAT	Marijnen	20070223
91479135300	EWM1000	599374875	CMFFLORIJN	Marijnen	20060120
91479135301	EWM1000	599386249	CMFFLORIJN	Marijnen	20070223
91479135500	EWM1000	599379108	ZWF1200	Zanussi	20060505
91479135600	EWM1000	599378683	ZWF1400	Zanussi	20060127

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91479135700	EWM1000	599374876	ZWG3123	Zanussi	20060120
91479135701	EWM1000	599386250	ZWG3123	Zanussi	20070223
91479135800	EWM1000	599379109	ZWG3143	Zanussi	20060505
91479135801	EWM1000	599386271	ZWG3143	Zanussi	20070223
91479135900	EWM1000	599374880	ZWG3163	Zanussi	20060120
91479135901	EWM1000	599388832	ZWG3163	Zanussi	20070518
91479136000	EWM1000	599375601	ZWF1221G	Zanussi-Electrolux	20060210
91479136001	EWM1000	599386273	ZWF1221G	Zanussi-Electrolux	20070223
91479136100	EWM1000	599374100	F1647	Zanussi	20051125
91479136200	EWM1000	599373376	757299_20415	Privileg	20051014
91479136201	EWM1000	599384041	757299_20415	Privileg	20051223
91479136300	EWM1000	599373377	490781_20416	Privileg	20051014
91479136301	EWM1000	599384040	490781_20416	Privileg	20051223
91479136400	EWM1000	599382249	192007_20577	SILENTIC	20060825
91479136801	EWM1000	599386270	ZWG3105A	Zanussi	20070223
91479137400	EWM1000	599377695	FL708ALU	Zanussi	20060414
91479137401	EWM1000	599386274	FL708ALU	Zanussi	20070223
91479137600	EWM1000	599382186	EW1030F	Electrolux	20060526
91479137700	EWM1000	599379663	EWF1235	Electrolux	20060526
91479137901	EWM1000	599375227	F1446	Zanussi	20060120
91479138000	EWM1000	599377697	F1645	Zanussi	20060414
91479138200	EWM1000	599375441	F1247	Zanussi-Electrolux	20060127
91479138300	EWM1000	599375442	F1447	Zanussi	20060127
91479138400	EWM1000	599375443	F1647	Zanussi	20060127
91479138500	EWM1000	599375597	RTF3122	Rosenlew	20060201
91479138700	EWM1000	599375599	RTF3141	Rosenlew	20060203
91479138800	EWM1000	599377066	TF1232E	Elektro Helios	20060310
91479138900	EWM1000	599377067	TF1252E	Elektro Helios	20060310
91479139000	EWM1000	599377068	TF1232E	Elektro Helios	20060310
91479139100	EWM1000	599377069	TF1432E	Elektro Helios	20060310
91479139200	EWM1000	599376411	EWF1230	Electrolux	20060303
91479139400	EWM1000	599376388	DF4440S	Zanker	20060303
91479139500	EWM1000	599383838	757299_20415	Privileg	20060303
91479139600	EWM1000	599383830	490781_20560	Privileg	20060224
91479140100	EWM1000	599383823	F1626	Zanussi	20060217
91479140200	EWM1000	599374471	795519_20455	Privileg	20051223
91479140400	EWM1000	599377351	R800AXC	Rex-Electrolux	20060331
91479140401	EWM1000	599386276	R800AXC	Rex-Electrolux	20070223
91479140500	EWM1000	599382739	AW1260S	Tricity Bendix	20060526
91479140600	EWM1000	599376413	EWF1412	Electrolux	20060303
91479140700	EWM1000	599378150	ZWF1210	Zanussi	20060421
91479140701	EWM1000	599386277	ZWF1210	Zanussi	20070223
91479140800	EWM1000	599378152	ZWF1410	Zanussi	20060421
91479140801	EWM1000	599386279	ZWF1410	Zanussi	20070223
91479140900	EWM1000	599379994	444_615_09	Lloyds	20060609
91479141100	EWM1000	599383687	SF2400	Zanker	20061020
91479141101	EWM1000	599388898	SF2400	Zanker	20070518
91479141200	EWM1000	599377070	658783_20644	Privileg	20060310
91479141300	EWM1000	599379664	ZWF1210	Zanussi	20060526
91479141301	EWM1000	599388833	ZWF1210	Zanussi	20070518
91479141400	EWM1000	599379665	ZWF1410	Zanussi	20060526
91479141401	EWM1000	599386269	ZWF1410	Zanussi	20070223
91479141600	EWM1000	599382180	RTF3146	Rosenlew	20060825
91479141601	EWM1000	599386268	RTF3146	Rosenlew	20070223
91479141700	EWM1000	599382181	RTF3126	Rosenlew	20060825

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91479141701	EWM1000	599386280	RTF3126	Rosenlew	20070223
91479141800	EWM1000	599382297	ZWF1000	Zanussi	20060825
91479141900	EWM1000	599383706	ZWF1600	Zanussi	20060707
91479141901	EWM1000	599388834	ZWF1600	Zanussi	20070518
91479142000	EWM1000	599381012	746752_20510	Privileg	20060630
91479142100	EWM1000	599381014	888_435_09	Lloyds	20060630
91479142101	EWM1000	599386589	888_435_09	Lloyds	20070309
91479142200	EWM1000	599381025	888_558_09	Zanker	20060630
91479142300	EWM1000	599380397	DF4240	Zanker	20060616
91479142500	EWM1000	599381027	751604_20710	Privileg	20060630
91479142600	EWM1000	599380973	DF4242	Zanker	20060623
91479142601	EWM1000	599386267	DF4242	Zanker	20070223
91479142700	EWM1000	599381610	DF4242S	Zanker	20060721
91479142701	EWM1000	599386204	DF4242S	Zanker	20070216
91479142800	EWM1000	599381611	460004_20768	Privileg	20060721
91479143000	EWM1000	599382446	922987_20713	Privileg	20060901
91479143100	EWM1000	599382448	017127_20714	Privileg	20060901
91479190600	EWM1000	599380396	P86M	Zoppas	20060616
91479190700	EWM1000	599380391	P106M	Zoppas	20060616
91479250000	EWM1000	599355617	959720_20117	Privileg	20021129
91479250100	EWM1000	599355618	651591_20118	Privileg	20021129
91479250200	EWM1000	599355655	715/430-09	Lloyds	20021206
91479250500	EWM1000	599358285	EW880F	Electrolux	20030418
91479250600	EWM1000	599358811	AW1260W	Tricity Bendix	20030516
91479250601	EWM1000	599384007	AW1260W	Tricity Bendix	20051223
91479250700	EWM1000	599358812	AW1460W	Tricity Bendix	20030516
91479250800	EWM1000	599358286	FE1025G	Zanussi	20030418
91479250900	EWM1000	599359287	FX1165W	Zanussi-Electrolux	20030606
91479251000	EWM1000	599359289	FX1265W	Zanussi-Electrolux	20030606
91479251100	EWM1000	599359290	FX1365W	Zanussi-Electrolux	20030606
91479251200	EWM1000	599359291	FX1465W	Zanussi-Electrolux	20030606
91479251300	EWM1000	599358982	017848_20169	Privileg	20030530
91479251400	EWM1000	599358983	060854_20170	Privileg	20030530
91479251600	EWM1000	599358984	077791_20167	Privileg	20030530
91479251700	EWM1000	599360049	EWF1010	Electrolux	20030718
91479251800	EWM1000	599360050	EWF1210	Electrolux	20030718
91479252100	EWM1000	599359684	P800EM	Zoppas	20030627
91479252200	EWM1000	599359685	P1000EM	Zoppas	20030627
91479252400	EWM1000	599362773	EW880F	Electrolux	20040213
91479252500	EWM1000	599360678	BIW126W	Tricity Bendix	20030919
91479252600	EWM1000	599362059	927146_20236	Privileg	20031212
91479252700	EWM1000	599362061	236247_20237	Privileg	20031212
91479252800	EWM1000	599362062	601996_20234	Privileg	20031212
91479252900	EWM1000	599362063	350/141-09	Lloyds	20031212
91479253000	EWM1000	599362064	350/176-09	Lloyds	20031212
91479253200	EWM1000	599374887	EWF1010	Electrolux	20060113
91479253201	EWM1000	599379114	EWF1010	Electrolux	20060505
91479253400	EWM1000	599376059	FE1025G	Zanussi	20060224
91479253401	EWM1000	599379128	FE1025G	Zanussi	20060505
91479270000	EWM1000	599360449	P800EM	Zoppas	20030905
91479270100	EWM1000	599360451	P1000EM	Zoppas	20030905
91479270200	EWM1000	599360703	FX1165W	Zanussi-Electrolux	20031003
91479270300	EWM1000	599361885	FX1265W	Zanussi-Electrolux	20031128
91479270400	EWM1000	599360704	FX1365W	Zanussi-Electrolux	20031003
91479270500	EWM1000	599361887	FX1465W	Zanussi-Electrolux	20031128

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91479270600	EWM1000	599360705	AW1560W	Tricity Bendix	20031003
91479270700	EWM1000	599360774	EW880F	Electrolux	20031003
91479271000	EWM1000	599363448	EW880F	Electrolux	20040319
91479271100	EWM1000	599362426	FXC1206	Zanussi-Electrolux	20040130
91479271200	EWM1000	599362427	FXC1406	Zanussi-Electrolux	20040130
91479271400	EWM1000	599364740	RTF3121	Rosenlew	20040604
91479271700	EWM1000	599366663	708759_20296	Privileg	20041001
91479271800	EWM1000	599367892	FXC1206	Zanussi-Electrolux	20041218
91479271900	EWM1000	599367613	SFX4040	Zanker	20041203
91479272000	EWM1000	599367617	DFX4240	Zanker	20041203
91479272100	EWM1000	599367618	DFX4440	Zanker	20041203
91479272200	EWM1000	599371291	P87X	Zoppas	20050617
91479272300	EWM1000	599370981	FE825G	Zanussi	20050527
91479272400	EWM1000	599370841	FAMILY7DFXX4040	Zanker	20050520
91479272500	EWM1000	599370842	FAMILY7DFXX4240	Zanker	20050520
91479272600	EWM1000	599370843	FAMILY7DFXX4440	Zanker	20050520
91479272800	EWM1000	599379995	FE825G	Zanussi	20060609
91479272900	EWM1000	599380885	AW1560W	Tricity Bendix	20060613
91479273000	EWM1000	599375604	FXC1206	Zanussi-Electrolux	20060203
91479273001	EWM1000	599379133	FXC1206	Zanussi-Electrolux	20060505
91479273300	EWM1000	599375606	RTF3121	Rosenlew	20060203
91479273301	EWM1000	599379139	RTF3121	Rosenlew	20060505
91479273400	EWM1000	599376042	F7DFXX4040	Zanker	20060217
91479273401	EWM1000	599379160	F7DFXX4040	Zanker	20060505
91479273700	EWM1000	599375445	DFX4240	Zanker	20060127
91479273701	EWM1000	599379163	DFX4240	Zanker	20060505
91479273900	EWM1000	599384287	P87X	Zoppas	20061110
91484110000	EWM1000	599383641	EWF695	Electrolux	20061013
91484180000	EWM1000	599372823	L5011	AEG Electrolux	20050916
91484180100	EWM1000	599372825	L5212	AEG Electrolux	20050916
91484180200	EWM1000	599372826	L5412	AEG Electrolux	20050916
91484180201	EWM1000	599384106	L5412	AEG Electrolux	20051223
91484180300	EWM1000	599375612	L5011	AEG Electrolux	20060203
91484180400	EWM1000	599378180	L5212	AEG Electrolux	20051231
91484180500	EWM1000	599375260	L5412	AEG Electrolux	20060120
91484180501	EWM1000	599386206	L5412	AEG Electrolux	20070216
91484180700	EWM1000	599378483	L50820	AEG Electrolux	20060421
91484180800	EWM1000	599376434	L5011	AEG Electrolux	20060303
91484180801	EWM1000	599386207	L5011	AEG Electrolux	20070216
91484180900	EWM1000	599376436	L5212	AEG Electrolux	20060303
91484180901	EWM1000	599386256	L5212	AEG Electrolux	20070223
91484181000	EWM1000	599378494	L58210	AEG Electrolux	20060421
91484181100	EWM1000	599378501	L58213	AEG Electrolux	20060421
91484181200	EWM1000	599378510	L58212	AEG Electrolux	20060421
91484181300	EWM1000	599379668	L5016	AEG Electrolux	20060526
91484181501	EWM1000	599386254	EWF1096	Electrolux	20070223
91484181601	EWM1000	599386252	EWF896	Electrolux	20070223
91484190000	EWM1000	599388881	L52810	AEG Electrolux	20070406
91484190001	EWM1000	599379167	L52810	AEG Electrolux	20060505
91490000400	EWM3000new	599374154	R8400TS	Rex-Electrolux	20051123
91490007900	EWM3000new	599383370	543976_20701	Privileg	20061007
91490008200	EWM3000new	599382621	R8400TS	Rex-Electrolux	20060630
91490011600	EWM1000plus	599384661	EWS1007	Electrolux	20061006
91490011601	EWM1000plus	599387618	EWS1007	Electrolux	20070124
91490015300	EWM1100	599711047	EWF8586	Electrolux	20080627

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490015400	EWM1100	599711050	EWF8576	Electrolux	20080627
91490015500	EWM1100	599711077	EWF8556	Electrolux	20080627
91490015600	EWM2100	599710997	EWF1083	Electrolux	20080627
91490015700	EWM2100	599711037	EWF1074	Electrolux	20080627
91490015800	EWM1100	599711044	EWF8555	Electrolux	20080627
91490015900	EWM2100	599711039	EWF1074	Electrolux	20080627
91490016000	EWM2100	599711011	EWF1073	Electrolux	20080627
91490016100	EWM2100	599710999	EWF1082	Electrolux	20080627
91490016400	EWM1100	599711086	SWF8556	SIMPSON	20080627
91490016600	EWM2100	599711000	EWF1082	Electrolux	20080627
91490016700	EWM2100	599710998	EWF1082	Electrolux	20080627
91490016800	EWM2100	599711006	EWF1082B	Electrolux	20080627
91490016900	EWM2100	599711007	EWF1082B	Electrolux	20080627
91490017000	EWM2100	599711005	EWF1082B	Electrolux	20080627
91490017100	EWM2100	599711003	EWF1082G	Electrolux	20080627
91490017200	EWM2100	599711004	EWF1082G	Electrolux	20080627
91490017300	EWM2100	599711002	EWF1082G	Electrolux	20080627
91490017400	EWM2100	599711012	EWF1073	Electrolux	20080627
91490017500	EWM2100	599711010	EWF1073	Electrolux	20080627
91490017600	EWM2100	599711017	EWF1073A	Electrolux	20080627
91490017700	EWM2100	599711018	EWF1073A	Electrolux	20080627
91490017800	EWM2100	599711015	EWF1073A	Electrolux	20080627
91490017900	EWM2100	599711040	EWF1074	Electrolux	20080627
91490018000	EWM2100	599711038	EWF1074	Electrolux	20080627
91490018100	EWM1100	599711162	EWF8555	Electrolux	20080901
91490018200	EWM1100	599711043	EWF8555	Electrolux	20080627
91490018300	EWM1100	599711048	EWF8586	Electrolux	20080627
91490018400	EWM1100	599711046	EWF8586	Electrolux	20080627
91490018500	EWM1100	599711073	EWF8576	Electrolux	20080627
91490018600	EWM1100	599711049	EWF8576	Electrolux	20080627
91490018700	EWM1100	599711079	EWF8556	Electrolux	20080627
91490018800	EWM1100	599711076	EWF8556	Electrolux	20080627
91490019000	EWM2100	599711090	EWF1073	Electrolux	20080627
91490019100	EWM1100	599711091	EWF8576	Electrolux	20080627
91490019200	EWM1100	599711094	EWF8556	Electrolux	20080627
91490019300	EWM1100	599711085	SWF1076	SIMPSON	20080627
91490019900	EWM1100	599711180	WH263i	Lux	20080901
91490100000	EWM1000	599380165	PP653E	Zoppas	20060616
91490100001	EWM1000	599385294	PP653E	Zoppas	20061222
91490100005	EWM1000	599704201	PP653E	Zoppas	20071116
91490100100	EWM1000	599380171	RDE83	Rex-Electrolux	20060616
91490100101	EWM1000	599385299	RDE83	Rex-Electrolux	20061222
91490100102	EWM1000	599701665	RDE83	Rex-Electrolux	20070205
91490100200	EWM1000	599380175	FO950	Electrolux	20060616
91490100400	EWM1000	599380178	ZWO384	Zanussi	20060616
91490100401	EWM1000	599385204	ZWO384	Zanussi	20060901
91490100402	EWM1000	599701675	ZWO384	Zanussi	20070205
91490100403	EWM1000	599701714	ZWO384	Zanussi	20070521
91490100404	EWM1000	599701770	ZWO384	Zanussi	20070618
91490100405	EWM1000	599701773	ZWO384	Zanussi	20070730
91490100406	EWM1000	599708412	ZWO384	Zanussi	20080516
91490100500	EWM1000	599380180	ZWO3104	Zanussi	20060616
91490100501	EWM1000	599385200	ZWO3104	Zanussi	20061208
91490100502	EWM1000	599700830	ZWO3104	Zanussi	20070206
91490100503	EWM1000	599701003	ZWO3104	Zanussi	20070525

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490100504	EWM1000	599701771	ZWO3104	Zanussi	20070618
91490100505	EWM1000	599701775	ZWO3104	Zanussi	20070730
91490100506	EWM1000	599708935	ZWO3104	Zanussi	20080530
91490120000	EWM1000plus	599368995	FE904NN	Zanussi	20050225
91490120001	EWM1000plus	599380183	FE904NN	Zanussi	20060616
91490120200	EWM1000plus	599369569	FE1006NN	Zanussi	20050325
91490120201	EWM1000plus	599378198	FE1006NN	Zanussi	20051230
91490120202	EWM1000plus	599385301	FE1006NN	Zanussi	20061222
91490120300	EWM1000plus	599370423	EWS1105	Electrolux	20050506
91490120301	EWM1000plus	599378205	EWS1105	Electrolux	20051230
91490120302	EWM1000plus	599385302	EWS1105	Electrolux	20061222
91490120400	EWM1000plus	599380686	126006_20533	Privileg	20060623
91490120600	EWM1000plus	599380700	FE904NN	Zanussi	20060623
91490120601	EWM1000plus	599701005	FE904NN	Zanussi	20070525
91490120602	EWM1000plus	599701778	FE904NN	Zanussi	20070730
91490120603	EWM1000	599709326	FE904NN	Zanussi	20080613
91490120700	EWM1000plus	599380246	EWS1105	Electrolux	20060616
91490120701	EWM1000plus	599385303	EWS1105	Electrolux	20061222
91490120703	EWM1000plus	599708568	EWS1105	Electrolux	20080530
91490120800	EWM1000plus	599380249	FE1006NN	Zanussi	20060616
91490120801	EWM1000plus	599385304	FE1006NN	Zanussi	20061222
91490120802	EWM1000plus	599701007	FE1006NN	Zanussi	20070525
91490120803	EWM1000plus	599701782	FE1006NN	Zanussi	20070730
91490120804	EWM1000plus	599708569	FE1006NN	Zanussi	20080530
91490120900	EWM1000plus	599380593	EWS1030	Electrolux	20060616
91490120901	EWM1000plus	599385305	EWS1030	Electrolux	20061222
91490121000	EWM1000plus	599380703	126006_20736	Privileg	20060630
91490121002	EWM1000plus	599701997	126006_20736	Privileg	20070727
91490121003	EWM1000plus	599701793	126006_20736	Privileg	20070730
91490121100	EWM1000plus	599704061	126006_20984	Privileg	20071109
91490140000	EWM1000	599373402	FE802	Zanussi	20051014
91490140100	EWM1000	599373489	FE1002	Zanussi	20051014
91490140200	EWM1000	599373488	ELU EWF 1090 SU-UKR-	Electrolux	20051014
91490140300	EWM1000	599380283	EWF1090	Electrolux	20060616
91490140301	EWM1000	599701681	EWF1090	Electrolux	20070205
91490140400	EWM1000	599380285	FE802	Zanussi	20060616
91490140401	EWM1000	599701008	FE802	Zanussi	20070518
91490140402	EWM1000	599701719	FE802	Zanussi	20070521
91490140403	EWM1000	599708570	FE802	Zanussi	20080530
91490140500	EWM1000	599380288	FE1002	Zanussi	20060616
91490140501	EWM1000	599701673	FE1002	Zanussi	20070205
91490140502	EWM1000	599701737	FE1002	Zanussi	20070521
91490140503	EWM1000	599708571	FE1002	Zanussi	20080530
91490140600	EWM1000	599380291	ZWD381	Zanussi	20060616
91490140602	EWM1000	599701738	ZWD381	Zanussi	20070521
91490140603	EWM1000	599708572	ZWD381	Zanussi	20080530
91490160000	EWM1000plus	599380653	ZWD586	Zanussi	20060623
91490160001	EWM1000plus	599701739	ZWD586	Zanussi	20070521
91490160002	EWM1000plus	599708574	ZWD586	Zanussi	20080530
91490160100	EWM1000plus	599380654	ZWD5106	Zanussi	20060623
91490160101	EWM1000plus	599701742	ZWD5106	Zanussi	20070521
91490160102	EWM1000plus	599708577	ZWD5106	Zanussi	20080530
91490170000	EWM2000evo	599702008	EWS1051	Electrolux	20070914
91490170100	EWM2000evo	599702009	EWS1251	Electrolux	20070914
91490180000	EWM1000	599380633	ZWS382	Zanussi	20060623

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490180100	EWM1000	599380636	ZWS3102	Zanussi	20060623
91490180200	EWM1000	599380638	ZWS3122	Zanussi	20060623
91490180300	EWM1000	599380640	ZWS382	Zanussi	20060623
91490180301	EWM1000	599701690	ZWS382	Zanussi	20070205
91490180302	EWM1000	599701745	ZWS382	Zanussi	20070521
91490180303	EWM1000	599708413	ZWS382	Zanussi	20080516
91490180400	EWM1000	599380642	ZWS3102	Zanussi	20060623
91490180401	EWM1000	599701693	ZWS3102	Zanussi	20070205
91490180402	EWM1000	599701746	ZWS3102	Zanussi	20070521
91490180403	EWM1000	599708414	ZWS3102	Zanussi	20080516
91490180500	EWM1000	599380643	ZWS3122	Zanussi	20060623
91490180501	EWM1000	599701689	ZWS3122	Zanussi	20070205
91490180502	EWM1000	599701750	ZWS3122	Zanussi	20070521
91490180503	EWM1000	599708939	ZWS3122	Zanussi	20080530
91490200001	EWM1100	599708588	EWS8000W	Electrolux	20080530
91490200200	EWM1100	599707715	ZWO685	Zanussi	20080418
91490200201	EWM1100	599718099	ZWO685	Zanussi	20090410
91490200300	EWM1100	599707716	ZWO6105	Zanussi	20080418
91490200301	EWM1100	599718100	ZWO6105	Zanussi	20090410
91490200400	EWM1100	599708346	ZWO585	Zanussi	20080516
91490200401	EWM1100	599718094	ZWO585	Zanussi	20090403
91490200500	EWM1100	599708347	ZWO5105	Zanussi	20080516
91490200501	EWM1100	599718253	ZWO5105	Zanussi	20090410
91490200600	EWM1100	599714769	PP83	Zoppas	20081226
91490200700	EWM1100	599715026	RWS1000W	Rex-Electrolux	20090116
91490210000	EWM2100	599703147	EWS10400W	Electrolux	20071012
91490210002	EWM2100	599708415	EWS10400W	Electrolux	20080516
91490210003	EWM2100	599709776	EWS10400W	Electrolux	20080627
91490210100	EWM2100	599702077	EWS11600W	Electrolux	20070921
91490210200	EWM2100	599708352	ZWO7105	Zanussi	20080516
91490210201	EWM2100	599718255	ZWO7105	Zanussi	20090410
91490210300	EWM2100	599707542	WAGL5S100	Electrolux	20080418
91490210301	EWM2100	599712216	WAGL5S100	Electrolux	20081010
91490210400	EWM2100	599712416	00641572_21116	Privileg	20081024
91490220001	EWM1100	599708941	EWS8012W	Electrolux	20080530
91490220101	EWM1100	599709548	EWS10012W	Electrolux	20080620
91490220200	EWM1100	599707897	ZWS687	Zanussi	20080425
91490220201	EWM1100	599718256	ZWS687	Zanussi	20090410
91490220300	EWM1100	599708350	ZWS6107	Zanussi	20080516
91490220301	EWM1100	599718322	ZWS6107	Zanussi	20090410
91490220400	EWM1100	599708351	ZWS6127	Zanussi	20080516
91490220401	EWM1100	599718106	ZWS6127	Zanussi	20090410
91490220500	EWM1100	599707910	ZWS587	Zanussi	20080425
91490220501	EWM1100	599718095	ZWS587	Zanussi	20090403
91490220600	EWM1100	599707911	ZWS5107	Zanussi	20080425
91490220601	EWM1100	599718257	ZWS5107	Zanussi	20090410
91490220800	EWM1100	599715713	EWS8014W	Electrolux	20090206
91490230000	EWM2100	599702081	EWS10412W	Electrolux	20070921
91490230002	EWM2100	599708594	EWS10412W	Electrolux	20080530
91490230003	EWM2100	599709101	EWS10412W	Electrolux	20080606
91490230100	EWM2100	599702084	EWS12412W	Electrolux	20070921
91490230200	EWM2100	599700815	EWS10612W	Electrolux	20070613
91490230201	EWM2100	599708595	EWS10612W	Electrolux	20080530
91490230300	EWM2100	599702085	EWS12612W	Electrolux	20070921
91490230301	EWM2100	599708954	EWS12612W	Electrolux	20080530

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490230400	EWM2100	599708353	ZWS787	Zanussi	20080516
91490230401	EWM2100	599718069	ZWS787	Zanussi	20090403
91490230500	EWM2100	599708354	ZWS7107	Zanussi	20080516
91490230501	EWM2100	599718071	ZWS7107	Zanussi	20090403
91490230600	EWM2100	599707908	ZWS7127	Zanussi	20080425
91490230601	EWM2100	599718072	ZWS7127	Zanussi	20090403
91490240000	EWM2100	599702088	EWS10712W	Electrolux	20070921
91490240001	EWM2100	599708597	EWS10712W	Electrolux	20080530
91490240100	EWM2100	599701919	EWS12712W	Electrolux	20070914
91490240101	EWM2100	599709779	EWS12712W	Electrolux	20080627
91490250001	EWM1100	599708598	EWF10020W	Electrolux	20080530
91490250002	EWM1100	599713033	EWF10020W	Electrolux	20081031
91490250100	EWM1100	599707744	ZWD685	Zanussi	20080418
91490250101	EWM1100	599718102	ZWD685	Zanussi	20090410
91490250200	EWM1100	599707898	ZWD6105	Zanussi	20080425
91490250201	EWM1100	599713034	ZWD6105	Zanussi	20081031
91490250202	EWM1100	599718324	ZWD6105	Zanussi	20090410
91490250300	EWM1100	599707903	ZWD585	Zanussi	20080425
91490250301	EWM1100	599718096	ZWD585	Zanussi	20090403
91490250400	EWM1100	599708349	ZWD5105	Zanussi	20080516
91490250401	EWM1100	599713036	ZWD5105	Zanussi	20081031
91490250402	EWM1100	599718286	ZWD5105	Zanussi	20090410
91490251500	EWM1100	599715719	EWF8020W	Electrolux	20090206
91490260000	EWM2100	599708355	ZWD785	Zanussi	20080516
91490260001	EWM2100	599718082	ZWD785	Zanussi	20090403
91490260100	EWM2100	599708356	ZWD7105	Zanussi	20080516
91490260101	EWM2100	599713035	ZWD7105	Zanussi	20081031
91490260102	EWM2100	599718342	ZWD7105	Zanussi	20090410
91490300200	EWM1000	599380475	L52400	AEG Electrolux	20060623
91490300300	EWM1000	599380495	L54400	AEG Electrolux	20060623
91490300401	EWM1000	599380507	L52610	AEG Electrolux	20060623
91490300500	EWM1000	599380502	L54610	AEG Electrolux	20060623
91490300600	EWM1000	599380891	L52610	AEG Electrolux	20060630
91490300700	EWM1000	599381783	L54610	AEG Electrolux	20060724
91490300800	EWM1000	599381055	L52408	AEG Electrolux	20060707
91490300900	EWM1000	599381056	L54408	AEG Electrolux	20060707
91490301000	EWM1000	599700866	L54619	AEG Electrolux	20070727
91490301100	EWM1000	599385571	L52600	AEG Electrolux	20070119
91490301200	EWM1000	599385573	L54600	AEG Electrolux	20070119
91490310000	EWM1000plus	599380732	L6215	AEG Electrolux	20060630
91490310100	EWM1000plus	599380733	L 6415	AEG Electrolux	20060630
91490310101	EWM1000plus	599702843	L6415	AEG Electrolux	20071012
91490310200	EWM1000plus	599380737	L6615	AEG Electrolux	20060630
91490310201	EWM1000plus	599702847	L6615	AEG Electrolux	20071012
91490310300	EWM1000plus	599382460	L60610	AEG Electrolux	20060901
91490310301	EWM1000plus	599704853	L60610	AEG Electrolux	20071207
91490310400	EWM1000plus	599382463	L62610	AEG Electrolux	20060901
91490310401	EWM1000plus	599702850	L62610	AEG Electrolux	20071012
91490310500	EWM1000plus	599383625	L66610	AEG Electrolux	20061013
91490310501	EWM1000plus	599702857	L66610	AEG Electrolux	20071012
91490310600	EWM1000plus	599383215	L72610	AEG Electrolux	20060929
91490310601	EWM1000plus	599702858	L72610	AEG Electrolux	20071012
91490310800	EWM1000plus	599383626	L62610	AEG Electrolux	20061020
91490310801	EWM1000plus	599703363	L62610	AEG Electrolux	20071026
91490310900	EWM1000plus	599384260	L64600	AEG Electrolux	20061103

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490311000	EWM1000plus	599382471	L64610	AEG Electrolux	20060901
91490311100	EWM1000plus	599382470	L66610	AEG Electrolux	20060901
91490311200	EWM1000plus	599382520	L64618	AEG Electrolux	20060908
91490311201	EWM1000plus	599702859	L64618	AEG Electrolux	20071012
91490311300	EWM1000plus	599382523	L64619	AEG Electrolux	20060908
91490311400	EWM1000plus	599382521	L64617	AEG Electrolux	20060908
91490311500	EWM1000plus	599382524	L66617	AEG Electrolux	20060908
91490311501	EWM1000plus	599702865	L66617	AEG Electrolux	20071012
91490311600	EWM1000plus	599382530	L6461EX	AEG Electrolux	20060908
91490311700	EWM1000plus	599382531	L6661EX	AEG Electrolux	20060908
91490311701	EWM1000plus	599702866	L6661EX	AEG Electrolux	20071012
91490311800	EWM1000plus	599383627	L6465N	AEG Electrolux	20061013
91490311900	EWM1000plus	599383629	L74600	AEG Electrolux	20061013
91490312000	EWM1000plus	599385923	L6466N	AEG Electrolux	20061215
91490312100	EWM1000plus	599383264	L74810	AEG Electrolux	20061006
91490312101	EWM1000plus	599705722	L74810	AEG Electrolux	20080201
91490312200	EWM1000plus	599383267	L76810	AEG Electrolux	20061006
91490312201	EWM1000plus	599702867	L76810	AEG Electrolux	20071012
91490312300	EWM1000plus	599383630	L74810SPOR	AEG Electrolux	20061013
91490312301	EWM1000plus	599702869	L74810SPOR	AEG Electrolux	20071012
91490312400	EWM1000plus	599383272	L74819	AEG Electrolux	20061006
91490312500	EWM1000plus	599383631	L76819	AEG Electrolux	20061013
91490312600	EWM1000plus	599383639	L6420	AEG Electrolux	20061013
91490312700	EWM1000plus	599383277	L6460	AEG Electrolux	20061006
91490312701	EWM1000plus	599703362	L6460	AEG Electrolux	20071026
91490312800	EWM1000plus	599383640	L62610	AEG Electrolux	20061013
91490313000	EWM1000plus	599384239	L62820	AEG Electrolux	20061103
91490313200	EWM1000plus	599384241	L64620	AEG Electrolux	20061103
91490313201	EWM1000plus	599702870	L64620	AEG Electrolux	20071012
91490313300	EWM1000plus	599383280	L64820	AEG Electrolux	20061006
91490313400	EWM1000plus	599383281	L66820	AEG Electrolux	20061006
91490313401	EWM1000plus	599705723	L66820	AEG Electrolux	20080201
91490313600	EWM1000plus	599384243	QW14761	Husqvarna Electrolux	20061103
91490313800	EWM1000plus	599387487	L7680	AEG Electrolux	20070323
91490313900	EWM1000plus	599701029	L72810	AEG Electrolux	20070803
91490314100	EWM1000plus	599386306	L63600	AEG Electrolux	20070216
91490314101	EWM1000plus	599702871	L63600	AEG Electrolux	20071012
91490314200	EWM1000plus	599386307	L63803	AEG Electrolux	20070216
91490314201	EWM1000plus	599703360	L63803	AEG Electrolux	20071026
91490314300	EWM1000plus	599386308	L63805	AEG Electrolux	20070216
91490314301	EWM1000plus	599703365	L63805	AEG Electrolux	20071026
91490314400	EWM1000plus	599385577	L62800	AEG Electrolux	20070119
91490314500	EWM1000plus	599385580	L62806	AEG Electrolux	20070119
91490314600	EWM1000plus	599385581	L62809	AEG Electrolux	20070119
91490314700	EWM1000plus	599386309	L66800	AEG Electrolux	20070216
91490314701	EWM1000plus	599701562	L66800	AEG Electrolux	20070727
91490314800	EWM1000plus	599386310	L72800	AEG Electrolux	20070216
91490314900	EWM1000plus	599386311	L74800	AEG Electrolux	20070216
91490314901	EWM1000plus	599703359	L74800	AEG Electrolux	20071026
91490315000	EWM1000plus	599386312	L74803	AEG Electrolux	20070216
91490315001	EWM1000plus	599703366	L74803	AEG Electrolux	20071026
91490315100	EWM1000plus	599386313	L75805	AEG Electrolux	20070216
91490315101	EWM1000plus	599701620	L75805	AEG Electrolux	20070727
91490315200	EWM1000plus	599386555	LMARATHON	AEG Electrolux	20070223
91490315201	EWM1000plus	599701623	LMARATHON	AEG Electrolux	20070727

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490315300	EWM1000plus	599387443	L7481	AEG Electrolux	20070323
91490315301	EWM1000plus	599703416	L7481	AEG Electrolux	20071026
91490320300	EWM2100	599721807	LN69460L	AEG Electrolux	20090925
91490320400	EWM2100	599721816	LN66669	AEG Electrolux	20090925
91490330000	EWM1000plus	599386326	L64800	AEG Electrolux	20070223
91490330100	EWM1000plus	599386557	L64806	AEG Electrolux	20070223
91490330200	EWM1000plus	599386558	L72818	AEG Electrolux	20070223
91490330300	EWM1000plus	599386559	L74818	AEG Electrolux	20070223
91490330400	EWM1000plus	599386560	L74819	AEG Electrolux	20070223
91490330500	EWM1000plus	599386561	LPRINCESS	AEG Electrolux	20070223
91490330600	EWM1000plus	599386562	LBELLA	AEG Electrolux	20070223
91490340000	EWM1100	599700840	L52840	AEG Electrolux	20070803
91490340001	EWM1100	599704022	L52840	AEG Electrolux	20071116
91490340100	EWM1100	599700846	L52840	AEG Electrolux	20070803
91490340101	EWM1100	599703249	L52840	AEG Electrolux	20071019
91490340200	EWM1100	599700852	L54840	AEG Electrolux	20070803
91490340201	EWM1100	599703250	L54840	AEG Electrolux	20071019
91490340300	EWM1100	599700854	L52630	AEG Electrolux	20070803
91490340301	EWM1100	599703252	L52630	AEG Electrolux	20071019
91490340400	EWM1100	599700857	L52638	AEG Electrolux	20070803
91490340401	EWM1100	599703253	L52638	AEG Electrolux	20071019
91490340500	EWM1100	599700882	L54630	AEG Electrolux	20070803
91490340501	EWM1100	599703254	L54630	AEG Electrolux	20071019
91490340502	EWM1100	599710858	L54630	AEG Electrolux	20080815
91490340600	EWM1100	599700885	L54638	AEG Electrolux	20070803
91490340601	EWM1100	599703257	L54638	AEG Electrolux	20071019
91490340602	EWM1100	599710860	L54638	AEG Electrolux	20080816
91490340700	EWM1100	599700891	L52840	AEG Electrolux	20070803
91490340701	EWM1100	599703258	L52840	AEG Electrolux	20071019
91490340800	EWM1100	599700890	L54840	AEG Electrolux	20070803
91490340801	EWM1100	599703259	L54840	AEG Electrolux	20071019
91490340900	EWM1100	599700893	L54849	AEG Electrolux	20070803
91490340901	EWM1100	599703262	L54849	AEG Electrolux	20071019
91490341000	EWM1100	599706127	L54840	AEG Electrolux	20080222
91490341001	EWM1100	599712260	L54840	AEG Electrolux	20081017
91490341100	EWM1100	599704025	L52840	AEG Electrolux	20071116
91490341301	EWM1100	599711694	LN58460	AEG Electrolux	20080926
91490341400	EWM1100	599708722	LN58459	AEG Electrolux	20080530
91490341401	EWM1100	599711281	LN58459	AEG Electrolux	20080912
91490341500	EWM1100	599713480	L58840	AEG Electrolux	20081121
91490341600	EWM1100	599716107	L50840	AEG Electrolux	20090220
91490350000	EWM2100	599700907	L60840	AEG Electrolux	20070810
91490350001	EWM2100	599703364	L60840	AEG Electrolux	20071026
91490350002	EWM2100	599706641	L60840	AEG Electrolux	20080314
91490350100	EWM2100	599700915	L62840	AEG Electrolux	20070810
91490350101	EWM2100	599703228	L62840	AEG Electrolux	20071019
91490350102	EWM2100	599706596	L62840	AEG Electrolux	20080314
91490350200	EWM2100	599700918	L64840	AEG Electrolux	20070810
91490350201	EWM2100	599703229	L64840	AEG Electrolux	20071019
91490350202	EWM2100	599706598	L64840	AEG Electrolux	20080314
91490350203	EWM2100	599711283	L64840	AEG Electrolux	20080912
91490350300	EWM2100	599700910	L62840	AEG Electrolux	20070803
91490350301	EWM2100	599703230	L62840	AEG Electrolux	20071019
91490350302	EWM2100	599706642	L62840	AEG Electrolux	20080314
91490350400	EWM2100	599700912	L64840	AEG Electrolux	20070803

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490350401	EWM2100	599703231	L64840	AEG Electrolux	20071019
91490350402	EWM2100	599706988	L64840	AEG Electrolux	20080328
91490350403	EWM2100	599711284	L64840	AEG Electrolux	20080912
91490350500	EWM2100	599700860	L66840	AEG Electrolux	20070726
91490350501	EWM2100	599701625	L66840	AEG Electrolux	20070727
91490350502	EWM2100	599706604	L66840	AEG Electrolux	20080314
91490350600	EWM2100	599700923	L62640	AEG Electrolux	20070810
91490350601	EWM2100	599703232	L62640	AEG Electrolux	20071019
91490350602	EWM2100	599706643	L62640	AEG Electrolux	20080314
91490350700	EWM2100	599700926	L64640	AEG Electrolux	20070810
91490350701	EWM2100	599703233	L64640	AEG Electrolux	20071019
91490350702	EWM2100	599706605	L64640	AEG Electrolux	20080314
91490350703	EWM2100	599711289	L64640	AEG Electrolux	20080912
91490350800	EWM2100	599700879	L66640	AEG Electrolux	20070726
91490350801	EWM2100	599701629	L66840	AEG Electrolux	20070727
91490350802	EWM2100	599707746	L66640	AEG Electrolux	20080425
91490350900	EWM2100	599700930	L64848	AEG Electrolux	20070810
91490350901	EWM2100	599703234	L64848	AEG Electrolux	20071019
91490350902	EWM2100	599706990	L64848	AEG Electrolux	20080328
91490350903	EWM2100	599711290	L64848	AEG Electrolux	20080912
91490351000	EWM2100	599700933	L6484N	AEG Electrolux	20070810
91490351001	EWM2100	599703235	L6484N	AEG Electrolux	20071019
91490351002	EWM2100	599707164	L6484N	AEG Electrolux	20080404
91490351003	EWM2100	599711816	L6484N	AEG Electrolux	20081003
91490351100	EWM2100	599701012	L60640	AEG Electrolux	20070810
91490351101	EWM2100	599703236	L60640	AEG Electrolux	20071019
91490351102	EWM2100	599706644	L60640	AEG Electrolux	20080314
91490351200	EWM2100	599701014	L62640	AEG Electrolux	20070810
91490351201	EWM2100	599703237	L62640	AEG Electrolux	20071019
91490351202	EWM2100	599706606	L62640	AEG Electrolux	20080314
91490351300	EWM2100	599701017	L64840	AEG Electrolux	20070810
91490351301	EWM2100	599703238	L64840	AEG Electrolux	20071019
91490351302	EWM2100	599706991	L64840	AEG Electrolux	20080328
91490351400	EWM25_35	599701024	L66841	AEG Electrolux	20070810
91490351401	EWM25_35	599707292	L66841	AEG Electrolux	20080411
91490351500	EWM2100	599704503	L62640	AEG Electrolux	20071130
91490351501	EWM2100	599706996	L62640	AEG Electrolux	20080328
91490351600	EWM2100	599704925	L64640	AEG Electrolux	20071214
91490351700	EWM2100	599705002	L62645	AEG Electrolux	20071214
91490351701	EWM2100	599706998	L62645	AEG Electrolux	20080328
91490351800	EWM2100	599705004	L64645	AEG Electrolux	20071214
91490351801	EWM2100	599707001	L64645	AEG Electrolux	20080328
91490351900	EWM2100	599701417	L64647	AEG Electrolux	20070831
91490351901	EWM2100	599703239	L64647	AEG Electrolux	20071019
91490351902	EWM2100	599706997	L64647	AEG Electrolux	20080328
91490352000	EWM2100	599702372	QW12675	Husqvarna Electrolux	20070907
91490352001	EWM2100	599702309	QW12675	Husqvarna Electrolux	20071005
91490352002	EWM2100	599706806	QW12675	Husqvarna Electrolux	20080321
91490352100	EWM2100	599702374	QW14675	Husqvarna Electrolux	20070907
91490352101	EWM2100	599702313	QW14675	Husqvarna Electrolux	20071005
91490352102	EWM2100	599706610	QW14675	Husqvarna Electrolux	20080314
91490352103	EWM2100	599710861	QW14675	Husqvarna Electrolux	20080816
91490352200	EWM2100	599702376	QW14585	Husqvarna Electrolux	20070907
91490352201	EWM2100	599702314	QW14585	Husqvarna Electrolux	20071005
91490352202	EWM2100	599707304	QW14585	Husqvarna Electrolux	20080411

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490352203	EWM2100	599711293	QW14585	Husqvarna Electrolux	20080912
91490352300	EWM2100	599701418	L62840	AEG Electrolux	20070831
91490352301	EWM2100	599703240	L62840	AEG Electrolux	20071019
91490352400	EWM2100	599701419	L64840	AEG Electrolux	20070831
91490352401	EWM2100	599703243	L64840	AEG Electrolux	20071019
91490352500	EWM2100	599701390	L66840	AEG Electrolux	20070720
91490352501	EWM2100	599701635	L66840	AEG Electrolux	20070727
91490352701	EWM2100	599702326	L64640	AEG Electrolux	20071005
91490352702	EWM2100	599706805	L64640	AEG Electrolux	20080321
91490352703	EWM2100	599711818	L64640	AEG Electrolux	20081003
91490352801	EWM2100	599702327	L64840	AEG Electrolux	20071005
91490352802	EWM2100	599706612	L64840	AEG Electrolux	20080314
91490352803	EWM2100	599710862	L64840	AEG Electrolux	20080816
91490352900	EWM2100	599702329	L64845	AEG Electrolux	20071005
91490352901	EWM2100	599706807	L64845	AEG Electrolux	20080321
91490352902	EWM2100	599711294	L64845	AEG Electrolux	20080912
91490353000	EWM2100	599702375	L64846	AEG Electrolux	20070907
91490353001	EWM2100	599704028	L64846	AEG Electrolux	20071116
91490353002	EWM2100	599706810	L64846	AEG Electrolux	20080321
91490353003	EWM2100	599711325	L64846	AEG Electrolux	20080911
91490353100	EWM2100	599702330	L66840	AEG Electrolux	20071005
91490353200	EWM2100	599701676	L64840	AEG Electrolux	20070810
91490353201	EWM2100	599703244	L64840	AEG Electrolux	20071019
91490353202	EWM2100	599706993	L64840	AEG Electrolux	20080328
91490353300	EWM25_35	599702332	L66841	AEG Electrolux	20071005
91490353600	EWM2100	599702377	L64640	AEG Electrolux	20070907
91490353601	EWM2100	599703245	L64640	AEG Electrolux	20071019
91490353900	EWM2100	599704030	L64845	AEG Electrolux	20071116
91490353901	EWM2100	599706994	L64845	AEG Electrolux	20080328
91490354000	EWM25_35	599703820	L66845	AEG Electrolux	20071109
91490354001	EWM25_35	599707748	L66845	AEG Electrolux	20080425
91490354100	EWM2100	599704034	L60840	AEG Electrolux	20071116
91490354101	EWM2100	599706613	L60840	AEG Electrolux	20080314
91490354200	EWM2100	599704037	L62840	AEG Electrolux	20071116
91490354201	EWM2100	599706995	L62840	AEG Electrolux	20080328
91490354300	EWM2100	599704041	L64640	AEG Electrolux	20071116
91490354400	EWM2100	599704147	L64641	AEG Electrolux	20071116
91490354500	EWM2100	599704279	L64845	AEG Electrolux	20071123
91490354600	EWM25_35	599704148	L66845	AEG Electrolux	20071116
91490354601	EWM25_35	599707749	L66845	AEG Electrolux	20080425
91490354700	EWM2100	599706305	L6261	AEG Electrolux	20080229
91490354701	EWM2100	599706645	L6261	AEG Electrolux	20080314
91490354800	EWM2100	599706308	L6461	AEG Electrolux	20080229
91490354801	EWM2100	599706614	L6461	AEG Electrolux	20080314
91490354802	EWM2100	599710865	L6461	AEG Electrolux	20080816
91490354900	EWM2100	599707515	L64848	AEG Electrolux	20080418
91490355000	EWM2100	599707516	LN68460	AEG Electrolux	20080418
91490355001	EWM2100	599710863	LN68460	AEG Electrolux	20080816
91490355100	EWM25_35	599707680	LN68661	AEG Electrolux	20080418
91490355200	EWM2100	599708513	LN68460	AEG Electrolux	20080523
91490355201	EWM2100	599710864	LN68460	AEG Electrolux	20080816
91490355300	EWM2100	599707518	LN68661	AEG Electrolux	20080418
91490355300	EWM25_35	599707518	LN68661	AEG Electrolux	20080418
91490355400	EWM2100	599709318	LN66260	AEG Electrolux	20080616
91490355500	EWM2100	599710119	LN66460	AEG Electrolux	20080711

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490355501	EWM2100	599711695	LN66460	AEG Electrolux	20080926
91490355700	EWM2100	599707519	LN66460	AEG Electrolux	20080418
91490355701	EWM2100	599713864	LN66460	AEG Electrolux	20081130
91490355800	EWM2100	599708515	LN66265	AEG Electrolux	20080523
91490355900	EWM2100	599708992	LN66465	AEG Electrolux	20080606
91490355901	EWM2100	599710866	LN66465	AEG Electrolux	20080816
91490356000	EWM2100	599707520	LN66467	AEG Electrolux	20080418
91490356001	EWM2100	599710867	LN66467	AEG Electrolux	20080816
91490356200	EWM25_35	599708994	LN68665	AEG Electrolux	20080606
91490356300	EWM2100	599707961	L62840L	AEG Electrolux	20080425
91490356400	EWM2100	599707963	L64840L	AEG Electrolux	20080425
91490356401	EWM2100	599711296	L64840L	AEG Electrolux	20080912
91490356500	EWM2100	599707964	L66840L	AEG Electrolux	20080425
91490356600	EWM2100	599707683	L62612	AEG Electrolux	20080418
91490356700	EWM2100	599707524	L64614	AEG Electrolux	20080418
91490356701	EWM2100	599711886	L64614	AEG Electrolux	20081003
91490356800	EWM2100	599708726	L64848L	AEG Electrolux	20080530
91490356801	EWM2100	599711297	L64848L	AEG Electrolux	20080912
91490356900	EWM2100	599709321	L62640L	AEG Electrolux	20080616
91490357000	EWM2100	599708966	L64640L	AEG Electrolux	20080606
91490357001	EWM2100	599711298	L64640L	AEG Electrolux	20080912
91490357100	EWM2100	599708995	L66640L	AEG Electrolux	20080606
91490357200	EWM2100	599708996	L52840D	AEG Electrolux	20080606
91490357300	EWM2100	599708997	L54840D	AEG Electrolux	20080606
91490357301	EWM2100	599711300	L54840D	AEG Electrolux	20080912
91490357400	EWM2100	599709289	L54849D	AEG Electrolux	20080614
91490357401	EWM2100	599710868	L54849D	AEG Electrolux	20080816
91490357500	EWM2100	599710850	LN68465	AEG Electrolux	20080731
91490357501	EWM2100	599711299	LN68465	AEG Electrolux	20080912
91490357600	EWM25_35	599710846	LN68665	AEG Electrolux	20080815
91490357700	EWM2100	599710829	L7664	AEG Electrolux	20080815
91490357800	EWM2100	599710849	LN66469	AEG Electrolux	20080731
91490357801	EWM2100	599710869	LN66469	AEG Electrolux	20080816
91490357900	EWM2100	599716517	L62840L	AEG Electrolux	20090306
91490358000	EWM2100	599716520	L64840L	AEG Electrolux	20090306
91490358100	EWM2100	599716521	L60840L	AEG Electrolux	20090306
91490358200	EWM2100	599717873	QW12676	Husqvarna Electrolux	20090404
91490358300	EWM2100	599717876	QW14676	Husqvarna Electrolux	20090404
91490358800	EWM2100	599721808	LN69460L	AEG Electrolux	20090925
91490358900	EWM2100	599721811	LN69665L	AEG Electrolux	20090925
91490359100	EWM2100	599721813	LN69460L	AEG Electrolux	20090925
91490359200	EWM2100	599721814	LN69660L	AEG Electrolux	20090925
91490359600	EWM2100	599721894	LN69665L	AEG Electrolux	20090925
91490359700	EWM2100	599720831	LN69467L	AEG Electrolux	20090731
91490359800	EWM2100	599719677	L6060	AEG Electrolux	20090605
91490359900	EWM2100	599719947	L5482	AEG Electrolux	20090619
91490380000	EWM25_35	599701037	L72850	AEG Electrolux	20070810
91490380100	EWM25_35	599701038	L72850	AEG Electrolux	20070810
91490380200	EWM25_35	599701043	L74650	AEG Electrolux	20070810
91490380201	EWM2100	599705727	L74650	AEG Electrolux	20071112
91490380201	EWM25_35	599705727	L74650	AEG Electrolux	20071112
91490380202	EWM25_35	599705728	L74650	AEG Electrolux	20070813
91490380300	EWM25_35	599701059	L74659	AEG Electrolux	20070810
91490380301	EWM25_35	599709503	L74659	AEG Electrolux	20080620
91490380400	EWM25_35	599701069	L76659	AEG Electrolux	20070810

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490380401	EWM25_35	599707754	L76659	AEG Electrolux	20080425
91490380500	EWM2100	599700936	L64859	AEG Electrolux	20070810
91490380501	EWM2100	599706616	L64859	AEG Electrolux	20080314
91490380600	EWM2100	599700946	L6485EX	AEG Electrolux	20070810
91490380601	EWM2100	599707747	L6485EX	AEG Electrolux	20080425
91490380700	EWM25_35	599701072	L6685EX	AEG Electrolux	20070810
91490380701	EWM25_35	599707758	L6685EX	AEG Electrolux	20080425
91490380800	EWM2100	599700947	L64857	AEG Electrolux	20070810
91490380801	EWM2100	599706808	L64857	AEG Electrolux	20080321
91490380900	EWM25_35	599701074	L66855	AEG Electrolux	20070810
91490380901	EWM25_35	599707759	L66855	AEG Electrolux	20080425
91490381000	EWM25_35	599701077	L66857	AEG Electrolux	20070810
91490381100	EWM25_35	599701079	L74658 VERS. SILVER	AEG Electrolux	20070810
91490381100	EWM25_35	599705863	L74658 VERS. WHITE	AEG Electrolux	20080215
91490381200	EWM25_35	599701081	L76658 VERS. SILVER	AEG Electrolux	20070810
91490381200	EWM25_35	599705864	L76658 VERS. WHITE	AEG Electrolux	20080215
91490381300	EWM25_35	599701082	L72650	AEG Electrolux	20070810
91490381301	EWM25_35	599707528	L72650	AEG Electrolux	20080418
91490381302	EWM25_35	599718802	L72650	AEG Electrolux	20090501
91490381500	EWM25_35	599704944	L74655	AEG Electrolux	20071214
91490381600	EWM25_35	599704850	L76650	AEG Electrolux	20071207
91490381601	EWM25_35	599707760	L76650	AEG Electrolux	20080425
91490381700	EWM25_35	599705008	L76655	AEG Electrolux	20071214
91490381701	EWM25_35	599707294	L76655	AEG Electrolux	20080411
91490381800	EWM25_35	599701420	L76657	AEG Electrolux	20070831
91490381801	EWM25_35	599707295	L76657	AEG Electrolux	20080411
91490381900	EWM25_35	599701473	QW14765	Husqvarna Electrolux	20070831
91490381901	EWM25_35	599707296	QW14765	Husqvarna Electrolux	20080411
91490382000	EWM25_35	599702339	QW16775	Husqvarna Electrolux	20071005
91490382001	EWM25_35	599707297	QW16775	Husqvarna Electrolux	20080411
91490382100	EWM25_35	599701471	L74650	AEG Electrolux	20070831
91490382101	EWM25_35	599707299	L74650	AEG Electrolux	20080411
91490382200	EWM25_35	599702341	L76650	AEG Electrolux	20071005
91490382201	EWM25_35	599708516	L76650	AEG Electrolux	20080523
91490382202	EWM25_35	599722291	L76650	AEG Electrolux	20090810
91490382300	EWM25_35	599702342	L76656	AEG Electrolux	20071005
91490382301	EWM25_35	599707300	L76656	AEG Electrolux	20080411
91490382400	EWM25_35	599702345	L76657	AEG Electrolux	20071005
91490382401	EWM25_35	599707301	L76657	AEG Electrolux	20080411
91490382402	EWM25_35	599720829	L76657	AEG Electrolux	20090731
91490383100	EWM2100	599704044	L64853	AEG Electrolux	20071116
91490383400	EWM25_35	599704505	LBELLA VERS. SILVER	AEG Electrolux	20071130
91490383400	EWM25_35	599705865	LBELLA VERS. WHITE	AEG Electrolux	20080215
91490383500	EWM25_35	599704149	LREGINA VERS. SILVER	AEG Electrolux	20071116
91490383500	EWM25_35	599705866	LREGINA VERS. WHITE	AEG Electrolux	20080215
91490383700	EWM25_35	599708993	LN76670	AEG Electrolux	20080606
91490384000	EWM25_35	599710383	LN76475	AEG Electrolux	20080718
91490384100	EWM25_35	599708732	LN76675	AEG Electrolux	20080530
91490384200	EWM25_35	599708517	LN76677	AEG Electrolux	20080523
91490384300	EWM2100	599707967	L64859L	AEG Electrolux	20080425
91490384400	EWM2100	599707969	L6485EXL	AEG Electrolux	20080425
91490384500	EWM25_35	599708330	L6685EXL	AEG Electrolux	20080516
91490384501	EWM25_35	599720820	L6685EXL	AEG Electrolux	20090731
91490384600	EWM25_35	599708734	L66855L	AEG Electrolux	20080530
91490384700	EWM2100	599708998	L64857L	AEG Electrolux	20080606

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490384800	EWM25_35	599708999	L66857L	AEG Electrolux	20080606
91490384801	EWM25_35	599722294	L66857L	AEG Electrolux	20090811
91490384900	EWM2100	599708518	L64850LSPO	AEG Electrolux	20080523
91490385000	EWM25_35	599708332	L66850LSPO	AEG Electrolux	20080516
91490385100	EWM2100	599710384	L74550	AEG Electrolux	20080718
91490385200	EWM2100	599710385	L74559	AEG Electrolux	20080718
91490385300	EWM25_35	599710851	LAVAMAT5.0	AEG Electrolux	20080815
91490385400	EWM25_35	599711174	LAVAMAT5.0	AEG Electrolux	20080913
91490385500	EWM25_35	599711177	LAVAMAT5.0	AEG Electrolux	20080913
91490385600	EWM2100	599717128	L62850L	AEG Electrolux	20090320
91490385601	EWM2100	599718220	L62850L	AEG Electrolux	20090410
91490385700	EWM2100	599717134	L64850L	AEG Electrolux	20090320
91490385800	EWM2100	599717130	L66850L	AEG Electrolux	20090320
91490385800	EWM25_35	599717130	L66850L	AEG Electrolux	20090320
91490385801	EWM2100	599720895	L66850L	AEG Electrolux	20090731
91490385801	EWM25_35	599720895	L66850L	AEG Electrolux	20090731
91490385900	EWM2100	599716818	L64850LE	AEG Electrolux	20090313
91490386000	EWM2100	599714770	L64852L	AEG Electrolux	20081226
91490386100	EWM2100	599717879	QW14692	Husqvarna Electrolux	20090404
91490386200	EWM25_35	599717883	QW16690	Husqvarna Electrolux	20090404
91490386201	EWM25_35	599722310	QW16690	Husqvarna Electrolux	20090811
91490386300	EWM2100	599716886	L64858L	AEG Electrolux	20090314
91490386600	EWM2100	599717129	L64850L	AEG Electrolux	20090320
91490386700	EWM2100	599717885	L64855L	AEG Electrolux	20090404
91490386800	EWM2100	599717886	L64856L	AEG Electrolux	20090404
91490386900	EWM2100	599718315	L64858L	AEG Electrolux	20090411
91490387000	EWM2100	599718316	L72550	AEG Electrolux	20090411
91490387300	EWM2100	599721817	LN77470	AEG Electrolux	20090925
91490387401	EWM25_35	599720896	QW16771	Husqvarna Electrolux	20090731
91490387700	EWM25_35	599721823	L72650H	AEG Electrolux	20090925
91490387800	EWM25_35	599721759	L74650H	AEG Electrolux	20090918
91490387900	EWM2100	599720846	L74750	AEG Electrolux	20090731
91490388100	EWM25_35	599721840	LN73670	AEG Electrolux	20090925
91490388200	EWM25_35	599721744	LN75677	AEG Electrolux	20090918
91490388300	EWM25_35	599721825	LN75670	AEG Electrolux	20090925
91490388401	EWM2100	599721874	LN77670	AEG Electrolux	20090925
91490388401	EWM25_35	599721874	LN77670	AEG Electrolux	20090925
91490388501	EWM25_35	599721877	LN77670	AEG Electrolux	20090925
91490388601	EWM25_35	599721896	LN77675	AEG Electrolux	20090925
91490388700	EWM2100	599721897	LN68471S	AEG Electrolux	20090925
91490390000	EWM25_35	599701086	L74850	AEG Electrolux	20070810
91490390001	EWM2100	599705714	L74850	AEG Electrolux	20071112
91490390001	EWM25_35	599705714	L74850	AEG Electrolux	20071112
91490390002	EWM25_35	599705713	L74850	AEG Electrolux	20070813
91490390003	EWM25_35	599708326	L74850	AEG Electrolux	20080516
91490390100	EWM25_35	599701087	L76850	AEG Electrolux	20070810
91490390101	EWM25_35	599708519	L76850	AEG Electrolux	20080523
91490390200	EWM25_35	599701088	L74850	AEG Electrolux	20070810
91490390300	EWM25_35	599701089	L76850	AEG Electrolux	20070810
91490390400	EWM25_35	599701091	L74850	AEG Electrolux	20070810
91490390500	EWM25_35	599701092	L76850	AEG Electrolux	20070810
91490390501	EWM25_35	599722212	L76850	AEG Electrolux	20090829
91490390600	EWM25_35	599702354	L74859	AEG Electrolux	20071005
91490390601	EWM25_35	599710888	L74859	AEG Electrolux	20080816
91490390700	EWM25_35	599702355	L76859	AEG Electrolux	20071005

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490390701	EWM25_35	599710891	L76859	AEG Electrolux	20080816
91490390800	EWM25_35	599701470	L74850	AEG Electrolux	20070831
91490390900	EWM25_35	599701421	L76850	AEG Electrolux	20070831
91490391000	EWM2100	599702358	QW14695	Husqvarna Electrolux	20071005
91490391001	EWM2100	599709504	QW14695	Husqvarna Electrolux	20080620
91490391100	EWM25_35	599702359	QW14805	Husqvarna Electrolux	20071005
91490391200	EWM25_35	599702362	QW16778	Husqvarna Electrolux	20071005
91490391201	EWM25_35	599710870	QW16778	Husqvarna Electrolux	20080816
91490391300	EWM25_35	599702363	L74850	AEG Electrolux	20071005
91490391400	EWM25_35	599701472	L76850	AEG Electrolux	20070831
91490391500	EWM25_35	599704047	L76855	AEG Electrolux	20071116
91490391600	EWM25_35	599703819	L74659 VERS. SILVER	AEG Electrolux	20071109
91490391600	EWM25_35	599705867	L74659 VERS. WHITE	AEG Electrolux	20080215
91490391700	EWM25_35	599703998	L76659 VERS. SILVER	AEG Electrolux	20071109
91490391700	EWM25_35	599705868	L76659 VERS. WHITE	AEG Electrolux	20080215
91490391800	EWM25_35	599704152	L76855	AEG Electrolux	20071116
91490391900	EWM25_35	599704010	L74859	AEG Electrolux	20071109
91490392000	EWM25_35	599704945	L76859	AEG Electrolux	20071214
91490392100	EWM25_35	599710382	LN78470	AEG Electrolux	20080718
91490392200	EWM25_35	599707775	LN78670	AEG Electrolux	20080425
91490392201	EWM25_35	599722215	LN78670	AEG Electrolux	20090814
91490392300	EWM25_35	599709319	LN78470	AEG Electrolux	20080616
91490392400	EWM25_35	599708324	LN78670	AEG Electrolux	20080516
91490392500	EWM25_35	599708735	LN78675	AEG Electrolux	20080530
91490392600	EWM25_35	599711324	LN78675	AEG Electrolux	20080911
91490392601	EWM25_35	599722220	LN78675	AEG Electrolux	20090814
91490392700	EWM25_35	599710509	ÖKOPLUS14	AEG Electrolux	20080725
91490392800	EWM25_35	599710508	ÖKOPLUS16	AEG Electrolux	20080725
91490392900	EWM25_35	599712482	LN78479	AEG Electrolux	20081024
91490393000	EWM25_35	599713050	LN78679	AEG Electrolux	20081107
91490393001	EWM25_35	599720840	LN78679	AEG Electrolux	20090731
91490393100	EWM25_35	599717887	L72850A	AEG Electrolux	20090404
91490393200	EWM2100	599716828	L74850A	AEG Electrolux	20090313
91490393200	EWM25_35	599716828	L74850A	AEG Electrolux	20090313
91490393300	EWM25_35	599716870	L76850A	AEG Electrolux	20090314
91490393301	EWM25_35	599720818	L76850A	AEG Electrolux	20090731
91490393400	EWM2100	599716830	L74650LE	AEG Electrolux	20090313
91490393400	EWM25_35	599716830	L74650LE	AEG Electrolux	20090313
91490393600	EWM25_35	599718428	QW16800	Husqvarna Electrolux	20090417
91490393800	EWM25_35	599716873	L76859A	AEG Electrolux	20090314
91490393801	EWM25_35	599720811	L76859A	AEG Electrolux	20090731
91490393900	EWM25_35	599716885	L74859A	AEG Electrolux	20090314
91490394000	EWM25_35	599720821	LN79470A	AEG Electrolux	20090731
91490394101	EWM25_35	599720813	LN79670A	AEG Electrolux	20090731
91490394200	EWM25_35	599721878	LN79470A	AEG Electrolux	20090925
91490394301	EWM25_35	599721879	LN79670A	AEG Electrolux	20090925
91490394400	EWM25_35	599719106	L76850A	AEG Electrolux	20090508
91490394401	EWM25_35	599722225	L76850A	AEG Electrolux	20090820
91490394500	EWM25_35	599716888	L72850A	AEG Electrolux	20090314
91490394600	EWM25_35	599718425	L74850A	AEG Electrolux	20090418
91490394700	EWM25_35	599722191	L74850A	AEG Electrolux	20090925
91490394800	EWM25_35	599722195	L76855A	AEG Electrolux	20090925
91490394900	EWM25_35	599722196	L76856A	AEG Electrolux	20090925
91490395000	EWM25_35	599721845	LN73471S	AEG Electrolux	20090925
91490395200	EWM25_35	599722479	L74858A	AEG Electrolux	20091014

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490440000	EWM1100	599387436	EWF8040W	Electrolux	20070323
91490440001	EWM1100	599701580	EWF8040W	Electrolux	20070528
91490440002	EWM1100	599703260	EWF8040W	Electrolux	20071019
91490440202	EWM1100	599709505	EWF12040W	Electrolux	20080620
91490440302	EWM1100	599708977	EWF10149W	Electrolux	20080606
91490440400	EWM1100	599701391	883564_20720	Privileg	20070831
91490440401	EWM1100	599711301	00883564_21218	Privileg	20080912
91490440600	EWM1100	599700878	642945_20836	Privileg	20070726
91490440601	EWM1100	599701411	642945_20836	Privileg	20070831
91490440700	EWM1100	599700877	641301_20790	Privileg	20070803
91490440800	EWM1100	599700421	EWF8040W	Electrolux	20070525
91490440801	EWM1100	599701589	EWF8040W	Electrolux	20070528
91490440802	EWM1100	599703261	EWF8040W	Electrolux	20071019
91490440803	EWM1100	599709508	EWF8040W	Electrolux	20080620
91490440902	EWM1100	599709000	EWF10040W	Electrolux	20080606
91490441000	EWM1100	599701678	ZWG5125	Zanussi	20070831
91490441001	EWM1100	599704281	ZWG5125	Zanussi	20071123
91490441100	EWM1100	599701412	ZWG5136	Zanussi	20070831
91490441101	EWM1100	599710874	ZWG5136	Zanussi	20080816
91490441200	EWM1100	599701386	ZWG5156	Zanussi	20070720
91490441201	EWM1100	599701414	ZWG5156	Zanussi	20070831
91490441401	EWM1100	599710872	EWF14070W	Electrolux	20080816
91490441402	EWM1100	599717312	EWF14070W	Electrolux	20090327
91490441501	EWM1100	599717316	EWF12070W	Electrolux	20090327
91490441602	EWM1100	599717314	EWF16070W	Electrolux	20090327
91490441700	EWM2100	599701234	EWF12070W	Electrolux	20070720
91490441701	EWM1100	599717323	EWF12070W	Electrolux	20090327
91490441800	EWM1100	599701474	TF1255E	Elektro Helios	20070831
91490441801	EWM1100	599717324	TF1255E	Elektro Helios	20090327
91490441900	EWM1100	599701475	TF1455E	Elektro Helios	20070831
91490441901	EWM1100	599710889	TF1455E	Elektro Helios	20080816
91490441902	EWM1100	599717332	TF1455E	Elektro Helios	20090327
91490442000	EWM1100	599705724	EWF14079W	Electrolux	20080201
91490442001	EWM1100	599710873	EWF14079W	Electrolux	20080816
91490442002	EWM1100	599719952	EWF14079W	Electrolux	20090619
91490442100	EWM1100	599702364	ZWG5145	Zanussi	20071005
91490442101	EWM1100	599710875	ZWG5145	Zanussi	20080816
91490442102	EWM1100	599717342	ZWG5145	Zanussi	20090327
91490442200	EWM1100	599702365	ZWG5165	Zanussi	20071005
91490442201	EWM1100	599717344	ZWG5165	Zanussi	20090327
91490442300	EWM1100	599702368	ZWG3125	Zanussi	20071005
91490442400	EWM1100	599702941	ZWG3145	Zanussi	20071012
91490442500	EWM1100	599702369	ZWG3165	Zanussi	20071005
91490442600	EWM1100	599702370	RTF3520	Rosenlew	20071005
91490442601	EWM1100	599717329	RTF3520	Rosenlew	20090327
91490442700	EWM1100	599702371	RTF3540	Rosenlew	20071005
91490442701	EWM1100	599713862	RTF3540	Rosenlew	20081130
91490442702	EWM1100	599717334	RTF3540	Rosenlew	20090327
91490442800	EWM1100	599703278	ZWG385	Zanussi	20071026
91490442900	EWM1100	599703279	ZWG3105	Zanussi	20071026
91490442901	EWM1100	599719343	ZWG3105	Zanussi	20090522
91490443100	EWM1100	599703281	ZWG3165	Zanussi	20071026
91490443101	EWM1100	599717337	ZWG3165	Zanussi	20090327
91490443200	EWM1100	599704948	ZWG5105	Zanussi	20071214
91490443201	EWM1100	599718221	ZWG5105	Zanussi	20090410

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490443300	EWM1100	599702942	ZWG5125	Zanussi	20071012
91490443301	EWM1100	599717340	ZWG5125	Zanussi	20090327
91490443400	EWM1100	599702944	ZWG5145	Zanussi	20071012
91490443401	EWM1100	599711819	ZWG5145	Zanussi	20081003
91490443402	EWM1100	599717345	ZWG5145	Zanussi	20090327
91490443500	EWM1100	599705213	ZWG5145	Zanussi	20071221
91490443502	EWM1100	599711302	ZWG5145	Zanussi	20080912
91490443600	EWM1100	599705359	ZWG5165	Zanussi	20080111
91490443601	EWM1100	599710876	ZWG5165	Zanussi	20080816
91490443900	EWM1100	599705481	ZWF3145	Zanussi	20080118
91490443902	EWM1100	599710892	ZWF3145	Zanussi	20080816
91490444000	EWM1100	599705214	WA8125	NORDLAND	20071221
91490444001	EWM1100	599708723	WA8125	NORDLAND	20080530
91490444100	EWM1100	599705215	WA8145	NORDLAND	20071221
91490444101	EWM1100	599708727	WA8145	NORDLAND	20080530
91490444102	EWM1100	599710895	WA8145	NORDLAND	20080816
91490444200	EWM1100	599704960	WA8146	NORDLAND	20071214
91490444201	EWM1100	599709005	WA8146	NORDLAND	20080606
91490444202	EWM1100	599710877	WA8146	NORDLAND	20080816
91490444300	EWM1100	599709322	253753_21030	Privileg	20080616
91490444400	EWM1100	599709323	ZWG6144	Zanussi	20080616
91490444401	EWM1100	599712096	ZWG6144	Zanussi	20081010
91490444500	EWM1100	599710093	00964535_21037	SILENTIC	20080704
91490444501	EWM1100	599713053	00964535_21037	Privileg	20081107
91490444700	EWM1100	599709553	00115106_21092	Privileg	20080621
91490444800	EWM1100	599710852	00115119_21093	Privileg	20080731
91490444801	EWM1100	599710894	00115119_21220	Privileg	20080816
91490444900	EWM1100	599710854	00115129_21094	Privileg	20080731
91490445000	EWM1100	599710830	ZWG3125	Zanussi	20080815
91490445100	EWM1100	599710853	ZWG3145	Zanussi	20080731
91490445101	EWM1100	599710893	ZWG3145	Zanussi	20080816
91490445200	EWM1100	599710845	EWF16079W	Electrolux	20080815
91490445201	EWM1100	599717937	EWF16079W	Electrolux	20090410
91490445300	EWM1100	599718896	00394934_21115	Privileg	20090501
91490445400	EWM1100	599711713	00394303_21109	Privileg	20080926
91490445500	EWM1100	599715416	SF2410N	Zanker	20090206
91490445600	EWM1100	599714568	SFX2410N	Zanker	20081219
91490446100	EWM1100	599720857	TF1236E	Elektro Helios	20090731
91490446300	EWM1100	599720828	ZWG5141	Zanussi	20090731
91490446400	EWM1100	599721883	ZWG685	Zanussi	20090925
91490446500	EWM1100	599721884	ZWG5105	Zanussi	20090925
91490446600	EWM1100	599719551	JLWM1200	John Lewis	20090525
91490446700	EWM1100	599720466	ZWF14069W	Zanussi	20090703
91490450001	EWM2100	599701547	EWF12270W	Electrolux	20070521
91490450002	EWM2100	599709007	EWF12270W	Electrolux	20080606
91490450003	EWM2100	599710896	EWF12270W	Electrolux	20080816
91490450101	EWM2100	599701593	EWF10670W	Electrolux	20070528
91490450102	EWM2100	599717940	EWF10670W	Electrolux	20090410
91490450201	EWM2100	599701550	EWF12670W	Electrolux	20070521
91490450202	EWM2100	599717941	EWF12670W	Electrolux	20090410
91490450301	EWM2100	599701598	EWF10470W	Electrolux	20070528
91490450302	EWM2100	599708728	EWF10470W	Electrolux	20080530
91490450303	EWM2100	599710878	EWF10470W	Electrolux	20080816
91490450401	EWM2100	599701551	EWF12470W	Electrolux	20070521
91490450402	EWM2100	599710094	EWF12470W	Electrolux	20080704

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490450403	EWM2100	599710879	EWF12470W	Electrolux	20080816
91490450501	EWM2100	599701552	EWF14470W	Electrolux	20070521
91490450502	EWM2100	599706647	EWF14470W	Electrolux	20080314
91490450503	EWM2100	599710881	EWF14470W	Electrolux	20080731
91490450504	EWM2100	599711303	EWF14470W	Electrolux	20080912
91490450601	EWM2100	599701604	EWF10240W	Electrolux	20070528
91490450700	EWM2100	599700990	EWF10479W	Electrolux	20070525
91490450701	EWM2100	599701607	EWF10479W	Electrolux	20070528
91490450702	EWM2100	599711304	EWF10479W	Electrolux	20080912
91490450703	EWM2100	599717903	EWF10479W	Electrolux	20090404
91490450800	EWM2100	599700999	EWF10679W	Electrolux	20070525
91490450801	EWM2100	599703272	EWF10679W	Electrolux	20071019
91490450802	EWM2100	599717943	EWF10679W	Electrolux	20090410
91490450900	EWM2100	599705009	00277863_21221	Privileg	20071214
91490451000	EWM2100	599701225	EWF10240W	Electrolux	20070525
91490451001	EWM2100	599701611	EWF10240W	Electrolux	20070528
91490451002	EWM2100	599709015	EWF10240W	Electrolux	20080606
91490451100	EWM2100	599701415	ZWG6105	Zanussi	20070831
91490451101	EWM2100	599704059	ZWG6105	Zanussi	20071116
91490451200	EWM2100	599701124	EWF12449W	Electrolux	20070824
91490451300	EWM2100	599701129	EWF12370W	Electrolux	20070824
91490451301	EWM2100	599710898	EWF12370W	Electrolux	20080816
91490451302	EWM2100	599717892	EWF12370W	Electrolux	20090404
91490451400	EWM2100	599701130	EWF14370W	Electrolux	20070824
91490451401	EWM2100	599710899	EWF14370W	Electrolux	20080816
91490451402	EWM2100	599717897	EWF14370W	Electrolux	20090404
91490451500	EWM2100	599701227	EWF16370W	Electrolux	20070720
91490451501	EWM2100	599701643	EWF16370	Electrolux	20070727
91490451502	EWM2100	599717898	EWF16370W	Electrolux	20090404
91490451600	EWM2100	599701134	EWF14470W	Electrolux	20070824
91490451601	EWM2100	599706618	EWF14470W	Electrolux	20080314
91490451602	EWM2100	599710882	EWF14470W	Electrolux	20080816
91490451603	EWM2100	599717904	EWF14470W	Electrolux	20090404
91490451700	EWM2100	599701228	EWF16470W	Electrolux	20070720
91490451701	EWM2100	599701646	EWF16470W	Electrolux	20070727
91490451702	EWM2100	599707305	EWF16470W	Electrolux	20080411
91490451703	EWM2100	599719436	EWF16470W	Electrolux	20090522
91490451800	EWM2100	599701135	EWF12470W	Electrolux	20070824
91490451801	EWM2100	599710883	EWF12470W	Electrolux	20080816
91490451802	EWM2100	599719300	EWF12470W	Electrolux	20090515
91490451900	EWM2100	599702508	EWF14373W	Electrolux	20071005
91490451901	EWM2100	599706619	EWF14373W	Electrolux	20080314
91490451902	EWM2100	599711305	EWF14373W	Electrolux	20080912
91490451903	EWM2100	599717899	EWF14373W	Electrolux	20090404
91490452000	EWM2100	599701476	TF1465E	Elektro Helios	20070831
91490452001	EWM2100	599710871	TF1465E	Elektro Helios	20080816
91490452002	EWM2100	599717962	TF1465E	Elektro Helios	20090410
91490452100	EWM2100	599702512	ZWG6145	Zanussi	20071005
91490452101	EWM2100	599713349	ZWG6145	Zanussi	20081115
91490452102	EWM2100	599718613	ZWG6145	Zanussi	20090424
91490452200	EWM2100	599701139	EWF12376W	Electrolux	20070824
91490452201	EWM2100	599710897	EWF12376W	Electrolux	20080816
91490452400	EWM2100	599702513	ZWG6165	Zanussi	20071005
91490452401	EWM2100	599717969	ZWG6165	Zanussi	20090410
91490452500	EWM2100	599704848	RTF5720	Rosenlew	20071207

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490452501	EWM2100	599717973	RTF5720	Rosenlew	20090410
91490452600	EWM2100	599703283	ZWG6125	Zanussi	20071026
91490452700	EWM2100	599704506	ZWG6145	Zanussi	20071130
91490452701	EWM2100	599712264	ZWG6145	Zanussi	20081017
91490452702	EWM2100	599717974	ZWG6145	Zanussi	20090410
91490452800	EWM2100	599705370	ZWF1221	Zanussi	20080111
91490452801	EWM2100	599708334	ZWF1221	Zanussi	20080516
91490452900	EWM2100	599705386	ZWF1421	Zanussi	20080111
91490452901	EWM2100	599708336	ZWF1421	Zanussi	20080516
91490453000	EWM2100	599705836	ZWF1621	Zanussi	20080208
91490453001	EWM2100	599707004	ZWF1621	Zanussi	20080328
91490453101	EWM2100	599704153	ZWG6125	Zanussi	20071116
91490453200	EWM2100	599703834	ZWG6145	Zanussi	20071026
91490453201	EWM2100	599704063	ZWG6145	Zanussi	20071116
91490453202	EWM2100	599710900	ZWG6145	Zanussi	20080816
91490453301	EWM2100	599704079	ZWG6165	Zanussi	20071116
91490453500	EWM2100	599704961	ZWG6145	Zanussi	20071214
91490453501	EWM2100	599706812	ZWG6145	Zanussi	20080321
91490453503	EWM2100	599711718	ZWG6145	Zanussi	20080926
91490453600	EWM2100	599704963	ZWG6165	Zanussi	20071214
91490453601	EWM2100	599706814	ZWG6165	Zanussi	20080321
91490453602	EWM2100	599710903	ZWG6165	Zanussi	20080816
91490453700	EWM2100	599704969	WA8614EL	NORDLAND	20071214
91490453701	EWM2100	599708730	WA8614EL	NORDLAND	20080530
91490453702	EWM2100	599710902	WA8614EL	NORDLAND	20080816
91490453703	EWM2100	599716444	WA8614EL	NORDLAND	20090228
91490453800	EWM2100	599705007	WA8616EL	NORDLAND	20071214
91490453801	EWM2100	599708731	WA8616EL	NORDLAND	20080530
91490453802	EWM2100	599716445	WA8616EL	NORDLAND	20090228
91490453900	EWM2100	599707532	ZWGH7105	Zanussi	20080418
91490454000	EWM2100	599706625	099465_21012	Privileg	20080314
91490454001	EWM2100	599710901	00099465_21222	Privileg	20080816
91490454100	EWM2100	599708520	EWF12479W	Electrolux	20080523
91490454500	EWM2100	599710856	00114940_21095	Privileg	20080731
91490454501	EWM2100	599710907	00114940_21224	Privileg	20080816
91490454600	EWM2100	599713474	00115012_21096	Privileg	20081121
91490454700	EWM2100	599721888	EWF10475W	Electrolux	20090925
91490460000	EWM2100	599701239	EWF12440W	Electrolux	20070720
91490460001	EWM2100	599709039	EWF12440W	Electrolux	20080606
91490460002	EWM2100	599718235	EWF12440W	Electrolux	20090410
91490480001	EWM2100	599710906	EWF12680W	Electrolux	20080816
91490480100	EWM2100	599702515	ZWH6125	Zanussi	20071005
91490480101	EWM2100	599710904	ZWH6125	Zanussi	20080816
91490480200	EWM2100	599701185	EWF14370W	Electrolux	20070824
91490480201	EWM2100	599707008	EWF14370W	Electrolux	20080328
91490480400	EWM2100	599702518	RTF5740	Rosenlew	20071005
91490480500	EWM25_35	599705365	ZWH6165	Zanussi	20080111
91490480501	EWM25_35	599720812	ZWH6165	Zanussi	20090731
91490480600	EWM2100	599705011	ZWH6145	Zanussi	20071214
91490480601	EWM2100	599707005	ZWH6145	Zanussi	20080328
91490480602	EWM2100	599710905	ZWH6145	Zanussi	20080816
91490480700	EWM2100	599705371	ZWH6145	Zanussi	20080111
91490480800	EWM2100	599708795	ZWH7145	Zanussi	20080530
91490480900	EWM25_35	599709324	ZWH8165	Zanussi	20080616
91490480901	EWM25_35	599722299	ZWH8165	Zanussi	20090820

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490481100	EWM2100	599716563	EWF14280W	Electrolux	20090306
91490481200	EWM2100	599716564	EWF14283W	Electrolux	20090306
91490482400	EWM2100	599722504	EWF12483W	Electrolux	20091012
91490490001	EWM2100	599711310	EWF12780W	Electrolux	20080912
91490490200	EWM25_35	599701204	EWF16589W	Electrolux	20070824
91490490201	EWM2100	599713056	EWF16589W	Electrolux	20081107
91490490201	EWM25_35	599713056	EWF16589W	Electrolux	20081107
91490490202	EWM25_35	599710908	EWF16589W	Electrolux	20080816
91490490203	EWM25_35	599720836	EWF16589W	Electrolux	20090731
91490490300	EWM2100	599701154	EWF14589W	Electrolux	20070824
91490490301	EWM2100	599708808	EWF14589W	Electrolux	20080530
91490490302	EWM2100	599710909	EWF14589W	Electrolux	20080816
91490490400	EWM2100	599701165	EWF14470W	Electrolux	20070824
91490490401	EWM2100	599707009	EWF14470W	Electrolux	20080328
91490490500	EWM25_35	599701207	EWF16370W	Electrolux	20070824
91490490501	EWM25_35	599710911	EWF16370W	Electrolux	20080816
91490490502	EWM25_35	599720815	EWF16370W	Electrolux	20090731
91490490600	EWM25_35	599701210	EWF16470W	Electrolux	20070824
91490490601	EWM25_35	599720531	EWF16470W	Electrolux	20090710
91490490602	EWM25_35	599720985	EWF16470W	Electrolux	20090807
91490490700	EWM25_35	599701212	EWF14580W	Electrolux	20070810
91490490701	EWM2100	599705730	EWF14580W	Electrolux	20071112
91490490701	EWM25_35	599705730	EWF14580W	Electrolux	20071112
91490490702	EWM25_35	599705731	EWF14580W	Electrolux	20070813
91490490703	EWM25_35	599710510	EWF14580W	Electrolux	20080725
91490490800	EWM25_35	599701213	EWF16580W	Electrolux	20070824
91490490801	EWM25_35	599709506	EWF16580W	Electrolux	20080620
91490490802	EWM25_35	599722343	EWF16580W	Electrolux	20090921
91490491100	EWM25_35	599701215	EWF16780W	Electrolux	20070824
91490491101	EWM2100	599713063	EWF16780W	Electrolux	20081107
91490491101	EWM25_35	599713063	EWF16780W	Electrolux	20081107
91490491102	EWM25_35	599722316	EWF16780W	Electrolux	20090804
91490491200	EWM25_35	599701218	EWF14780W	Electrolux	20070810
91490491201	EWM2100	599705733	EWF14780W	Electrolux	20071112
91490491201	EWM25_35	599705733	EWF14780W	Electrolux	20071112
91490491202	EWM25_35	599705735	EWF14780W	Electrolux	20070813
91490491203	EWM25_35	599716147	EWF14780W	Electrolux	20090220
91490491300	EWM25_35	599701221	EWF14781W	Electrolux	20070824
91490491400	EWM25_35	599701223	EWF16781W	Electrolux	20070824
91490491500	EWM2100	599702520	EWF14583W	Electrolux	20071005
91490491501	EWM2100	599707010	EWF14583W	Electrolux	20080328
91490491600	EWM25_35	599706628	EWF14781W	Electrolux	20080314
91490491800	EWM25_35	599718318	EWF14781W	Electrolux	20090411
91490491900	EWM25_35	599718320	EWF16781W	Electrolux	20090411
91490491901	EWM25_35	599720833	EWF16781W	Electrolux	20090731
91490492001	EWM25_35	599721889	ZWF16381W	Zanussi	20090925
91490492100	EWM2100	599720855	ZWF12380W	Zanussi	20090731
91490492200	EWM2100	599720856	ZWF14380W	Zanussi	20090731
91490540000	EWM1100	599700874	034133_20788	Privileg	20070803
91490540100	EWM1100	599700876	00735761_21225	Privileg	20070803
91490540301	EWM1100	599709040	ZWF5105	Zanussi	20080606
91490540400	EWM1100	599704986	ZWF3105	Zanussi	20071214
91490540401	EWM1100	599708525	ZWF3105	Zanussi	20080523
91490540500	EWM1100	599705846	ZWF385	Zanussi	20080208
91490540601	EWM1100	599708528	TF1021E	Elektro Helios	20080523

APPLIANCES LIST

PNC_ELC	Platform	Pub	Model	BrandName	ProdDate
91490540801	EWM1100	599720825	ZWF5105	Zanussi	20090731
91490541001	EWM1100	599709507	RTF3300	Rosenlew	20080620
91490541500	EWM1100	599707165	EWF12049W	Electrolux	20080404
91490541600	EWM1100	599706631	423076_20936	Privileg	20080314
91490541800	EWM1100	599705487	ZWF3125	Zanussi	20080118
91490541801	EWM1100	599710910	ZWF3125	Zanussi	20080816
91490542000	EWM1100	599709034	256236_21028	Privileg	20080606
91490542100	EWM1100	599709035	254057_21227	Privileg	20080606
91490542101	EWM1100	599712281	00254057_21029	Privileg	20081017
91490542200	EWM1100	599710095	00964140_21036	SILENTIC	20080704