

DCR-VX2000/VX2000E

RMT-811

SERVICE MANUAL

Level 2

Ver 1.0 2000. 04

Self Diagnosis
Supported model

Digital Handycam

InfoLITHIUMTM L SERIES

C/M Cassette Memory



MEMORY STICK



Photo : DCR-VX2000

US Model
Canadian Model
Korea Model
DCR-VX2000

AEP Model
UK Model
Australian Model
Chinese Model
DCR-VX2000E

E Model
Hong Kong Model
Tourist Model
DCR-VX2000/VX2000E

C MECHANISM

On the VC-242 board

This service manual provides the information that is premised the circuit board replacement service and not intended repair inside the VC-242 board.

Therefore, schematic diagram, printed wiring board and electrical parts list of the VC-242 board are not shown.

The following pages are not shown.

Schematic diagram Pages 4-13 to 4-50
Printed wiring board Pages 4-51 to 4-54
Electrical parts list Pages 6-27 to 6-36

For MECHANISM ADJUSTMENTS, refer to the
"DV MECHANICAL ADJUSTMENT MANUAL IV
C MECHANISM" (9-974-050-11).

DCR-VX2000 : NTSC model
DCR-VX2000E : PAL model

SPECIFICATIONS

Video camera recorder

System

Video recording system

2 rotary heads
Helical scanning system

Audio recording system

Rotary heads, PCM system
Quantization: 12 bits (Fs 32 kHz,
stereo 1, stereo 2), 16 bits
(Fs 48 kHz, stereo)

Video signal

VX2000: NTSC color, standards
VX2000E: PAL colour, standards

Usable cassette

Mini DV cassette with the **MiniDV**
mark printed

Tape speed

SP: Approx. 18.81 mm/s
LP: Approx. 12.56 mm/s

Recording/playback time (using cassette DVM60)

SP: 1 h

LP: 1.5 h

Fast-forward/rewind time (using cassette DVM60)

Approx. 2 min and 30 s

Viewfinder

Electric viewfinder (colour)

Image device

1/3 type CCD (3 Charge Coupled
Device)

VX2000:

Approx. 380 000 pixels
(Effective: Approx. 340 000 pixels)

VX2000E:

Approx. 450 000 pixels
(Effective: Approx. 400 000 pixels)

Lens

Combined power zoom lens

Filter diameter 58 mm (2 3/8 in)

12x (Optical), 48x (Digital)

F1.6 - 2.4

Focal length

6 - 72 mm (1/4 - 2 7/8 in)

When converted to a 35 mm still
camera

43.2 - 518.4 mm (1 3/4 - 20 1/2 in)

Colour temperature

Auto, Indoor (3200K),

Outdoor (5800K),

Minimum illumination

2 lux (F 1.6)

Input/Output connectors

S video input/output

Input/output auto switch

4-pin mini DIN

Luminance signal: 1 Vp-p,

75 ohms, unbalanced

Chrominance signal:

0.286 Vp-p (VX2000)

0.3 Vp-p (VX2000E),

75 ohms, unbalanced

Video input/output

Input/output auto switch

RCA pin-jack, 1 Vp-p, 75 ohms,

unbalanced, sync negative

Audio input/output

Input/output auto switch

RCA pin-jack, 327 mV, (at output

impedance more than 47 kilohms)

Output impedance with less than

2.2 kilohms

Input impedance more than

47 kilohms

Headphones jack

Stereo minijack (ø 3.5 mm)

LANC control jack

Stereo mini-minijack (ø 2.5 mm)

MIC jack

Minijack, 0.388 mV low imped-
ance with 2.5 to 3.0 V DC, output
impedance 6.8 kilohms (ø 3.5 mm)

Stereo type

DV input/output

4-pin connector

Speaker

Dynamic speaker (ø 20 mm)

LCD screen

Picture

2.5 type measured diagonally

49.9x 37.3 mm (2 x 1 1/2 in)

Total dot number

200 640 (880 x 228)

General

Power requirements

7.2 V (battery pack)

8.4 V (AC power adaptor)

— Continued on next page —


Mini **DV** Digital
Video
Cassette

DIGITAL VIDEO CAMERA RECORDER


SONY®

SECTION 3
BLOCK DIAGRAMS


3-1. OVERALL BLOCK DIAGRAM (1/4) () : Page No. shown in () indicates the page to refer on the schematic diagram.

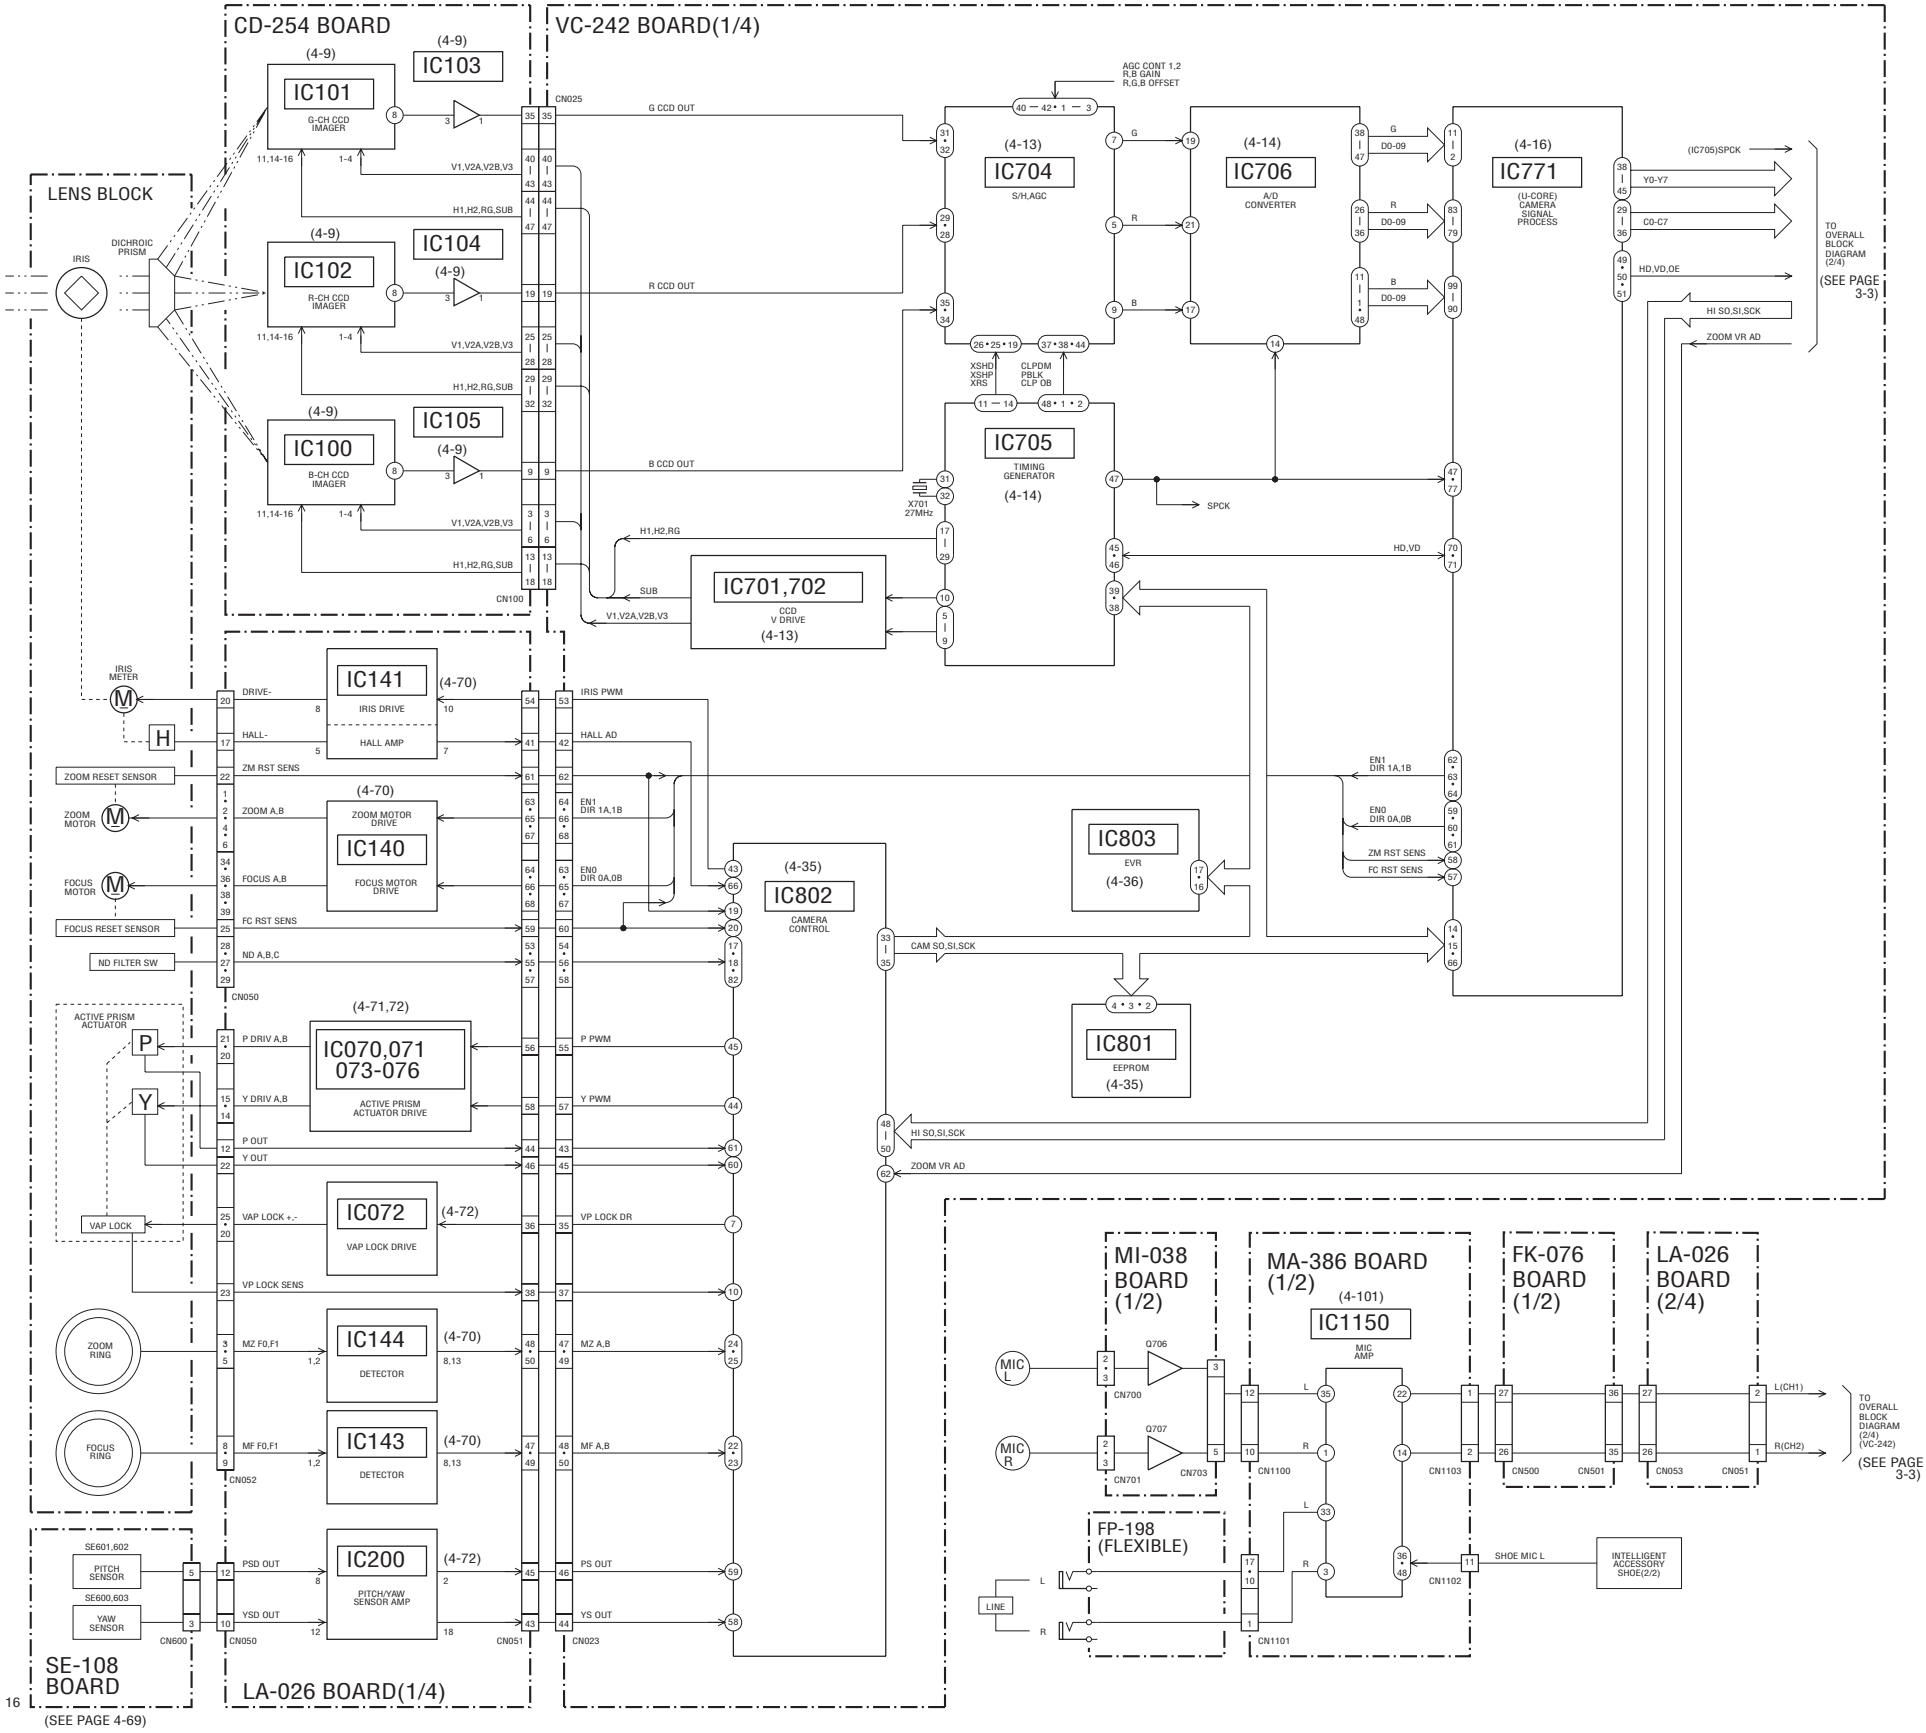


3-2. OVERALL BLOCK DIAGRAM (2/4) () : Page No. shown in () indicates the page to refer on the schematic diagram.

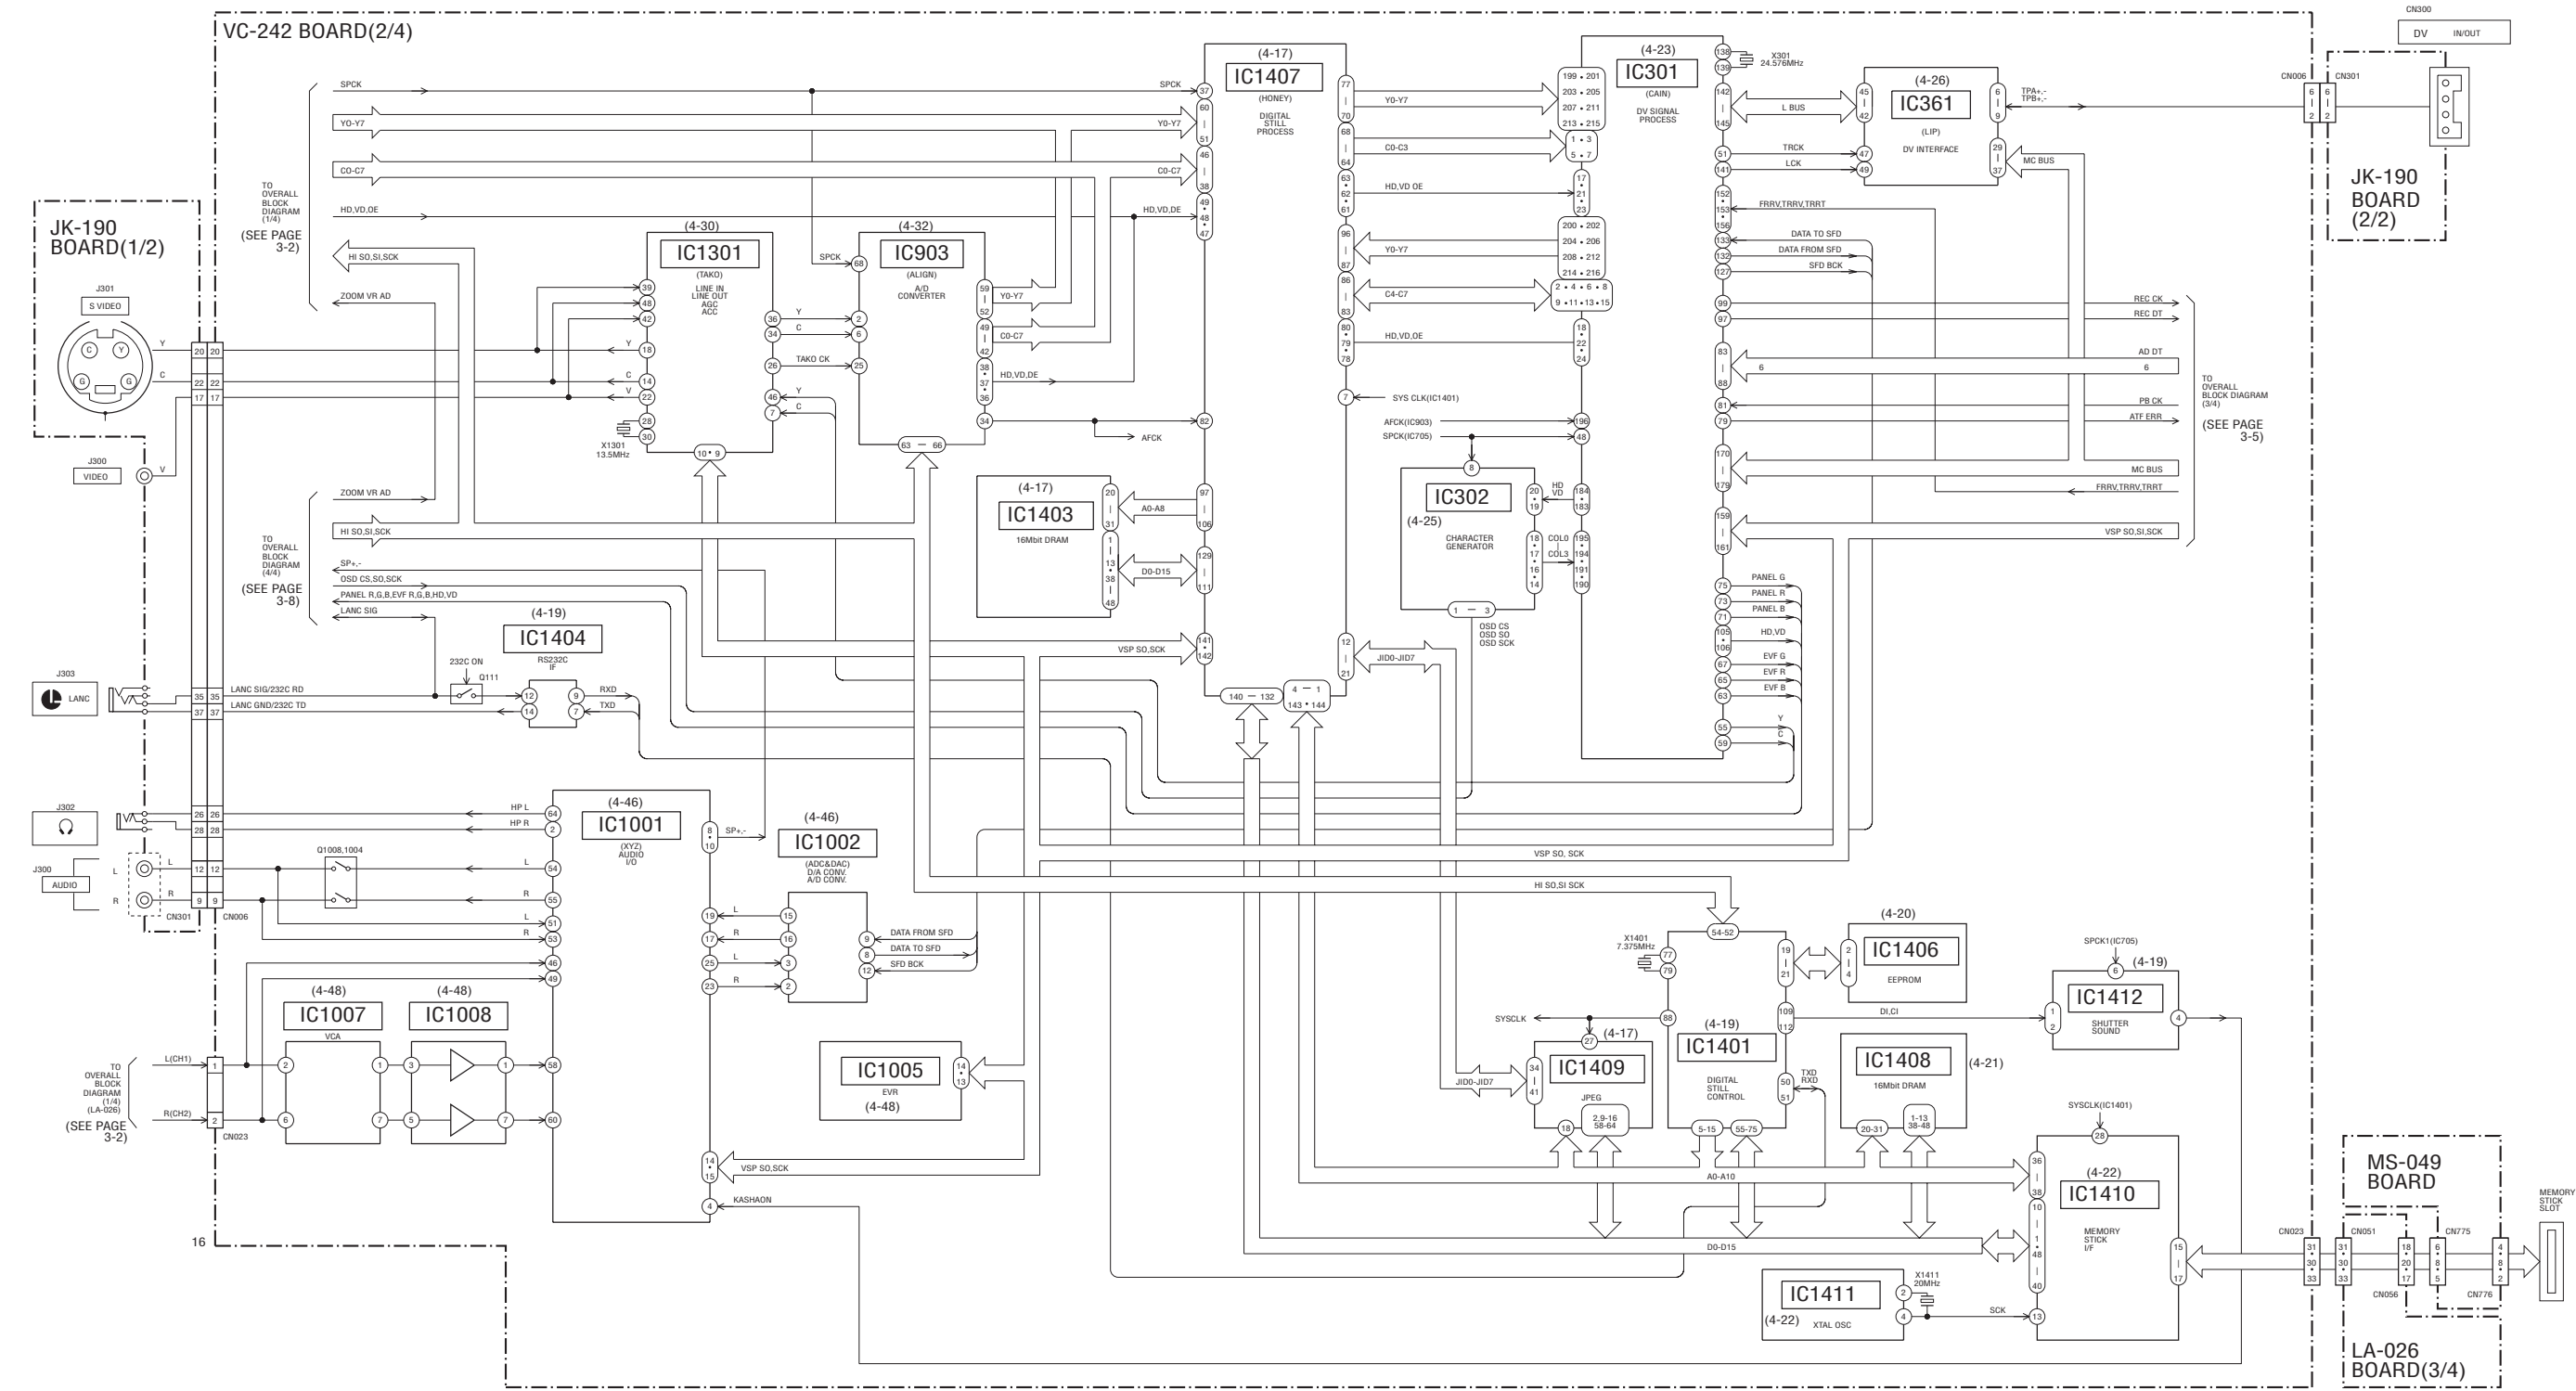


3-3. OVERALL BLOCK DIAGRAM (3/4) () : Page No. shown in () indicates the page to refer on the schematic diagram.

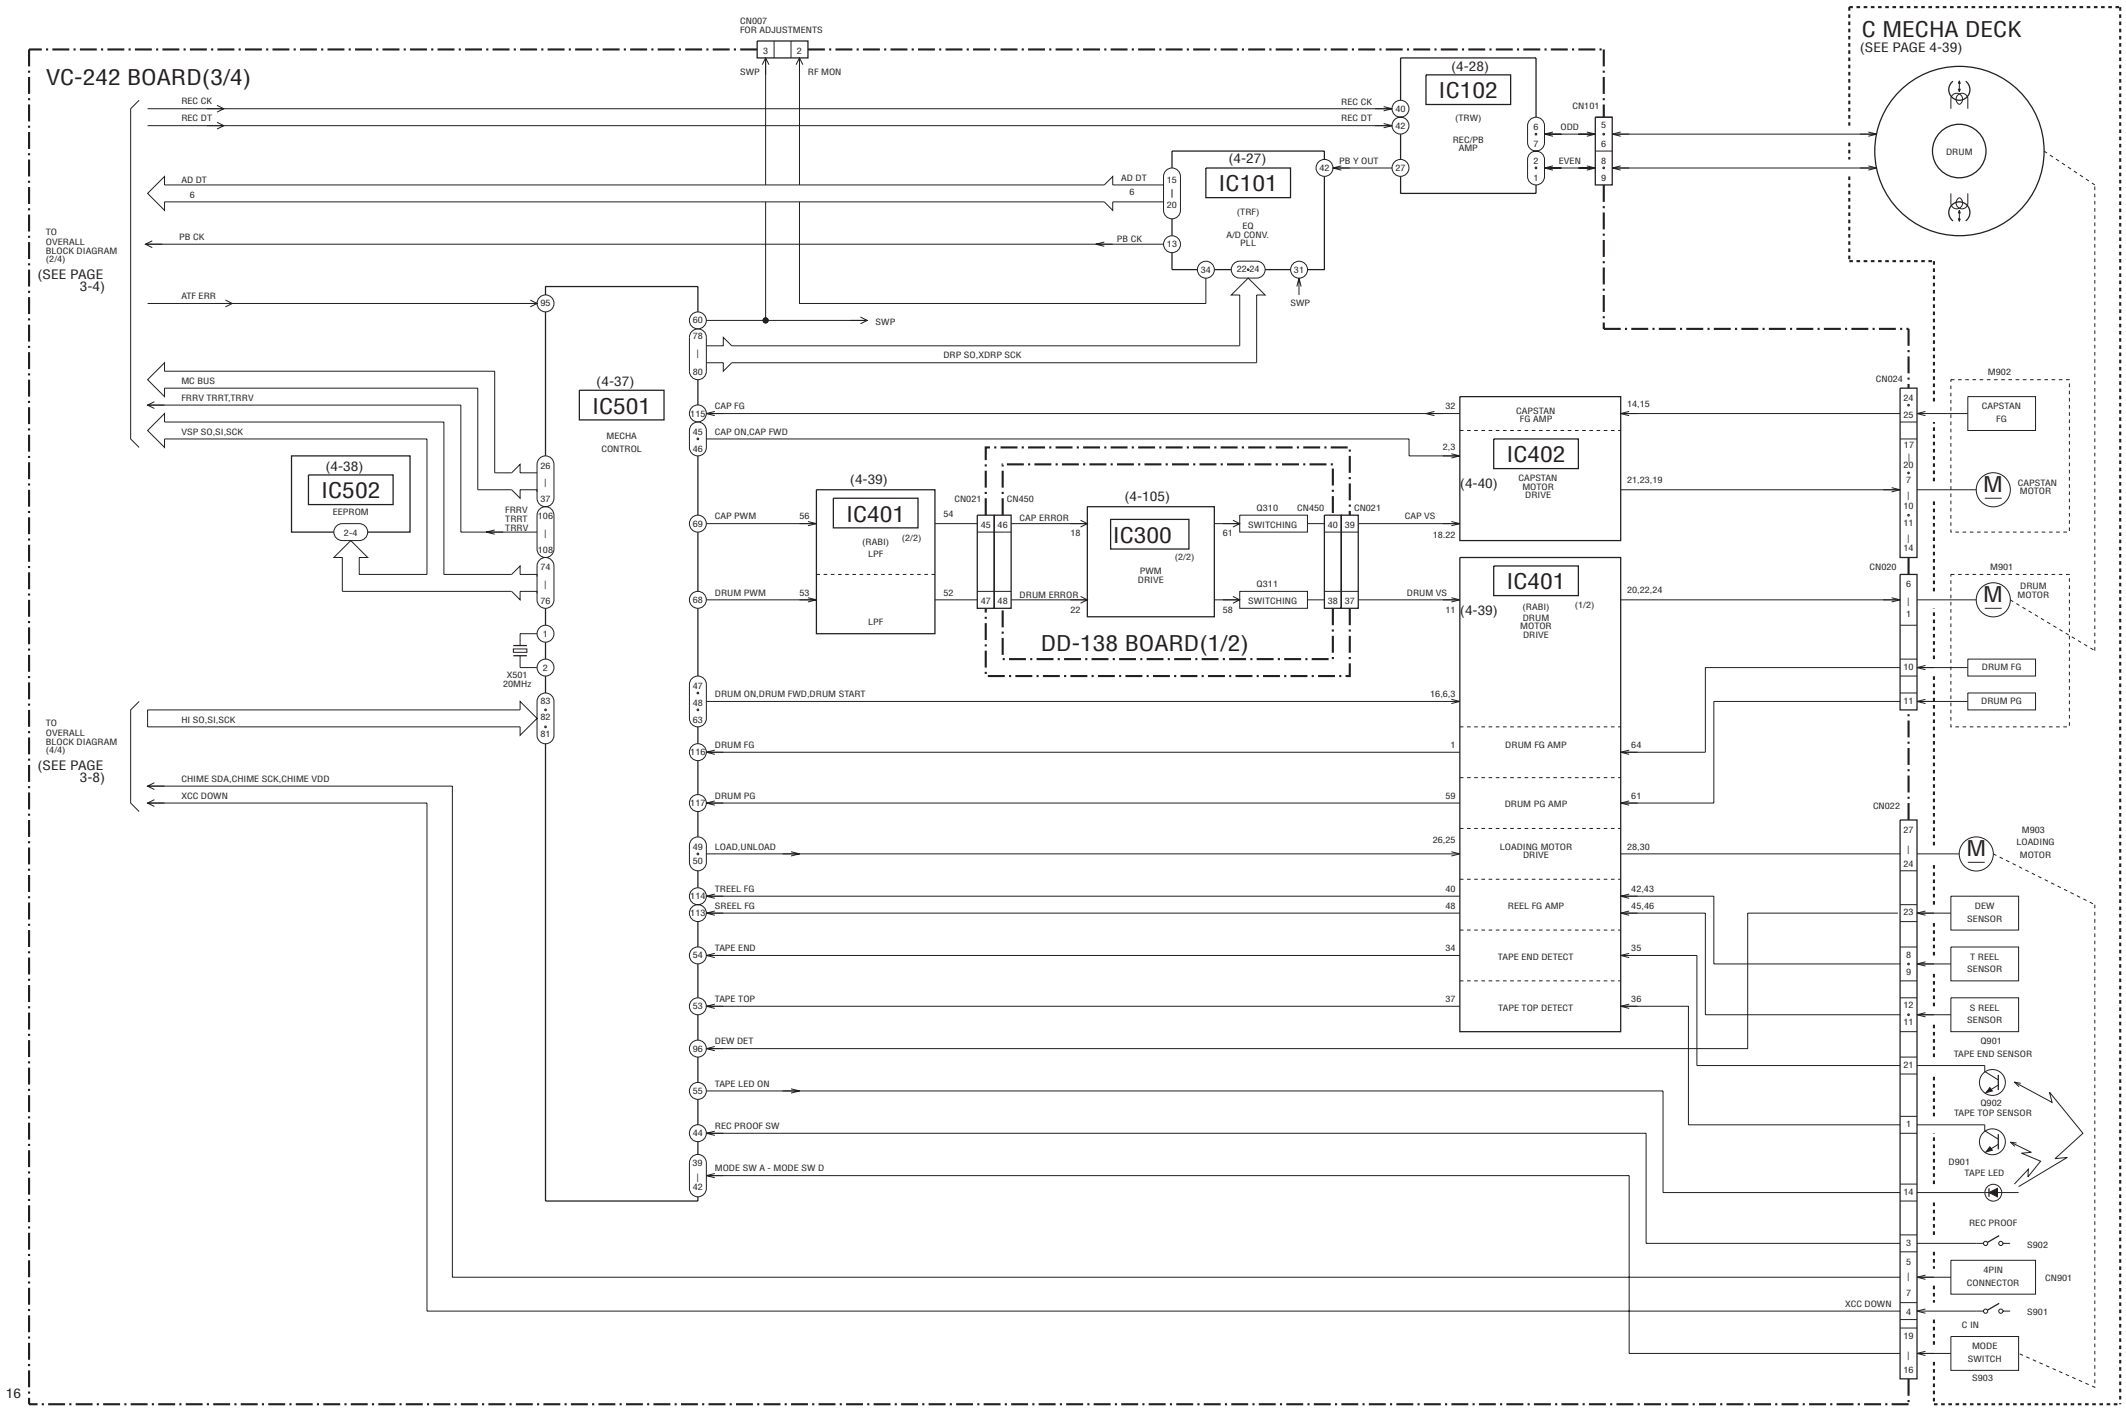


3-4. OVERALL BLOCK DIAGRAM (4/4) () : Page No. shown in () indicates the page to refer on the schematic diagram.

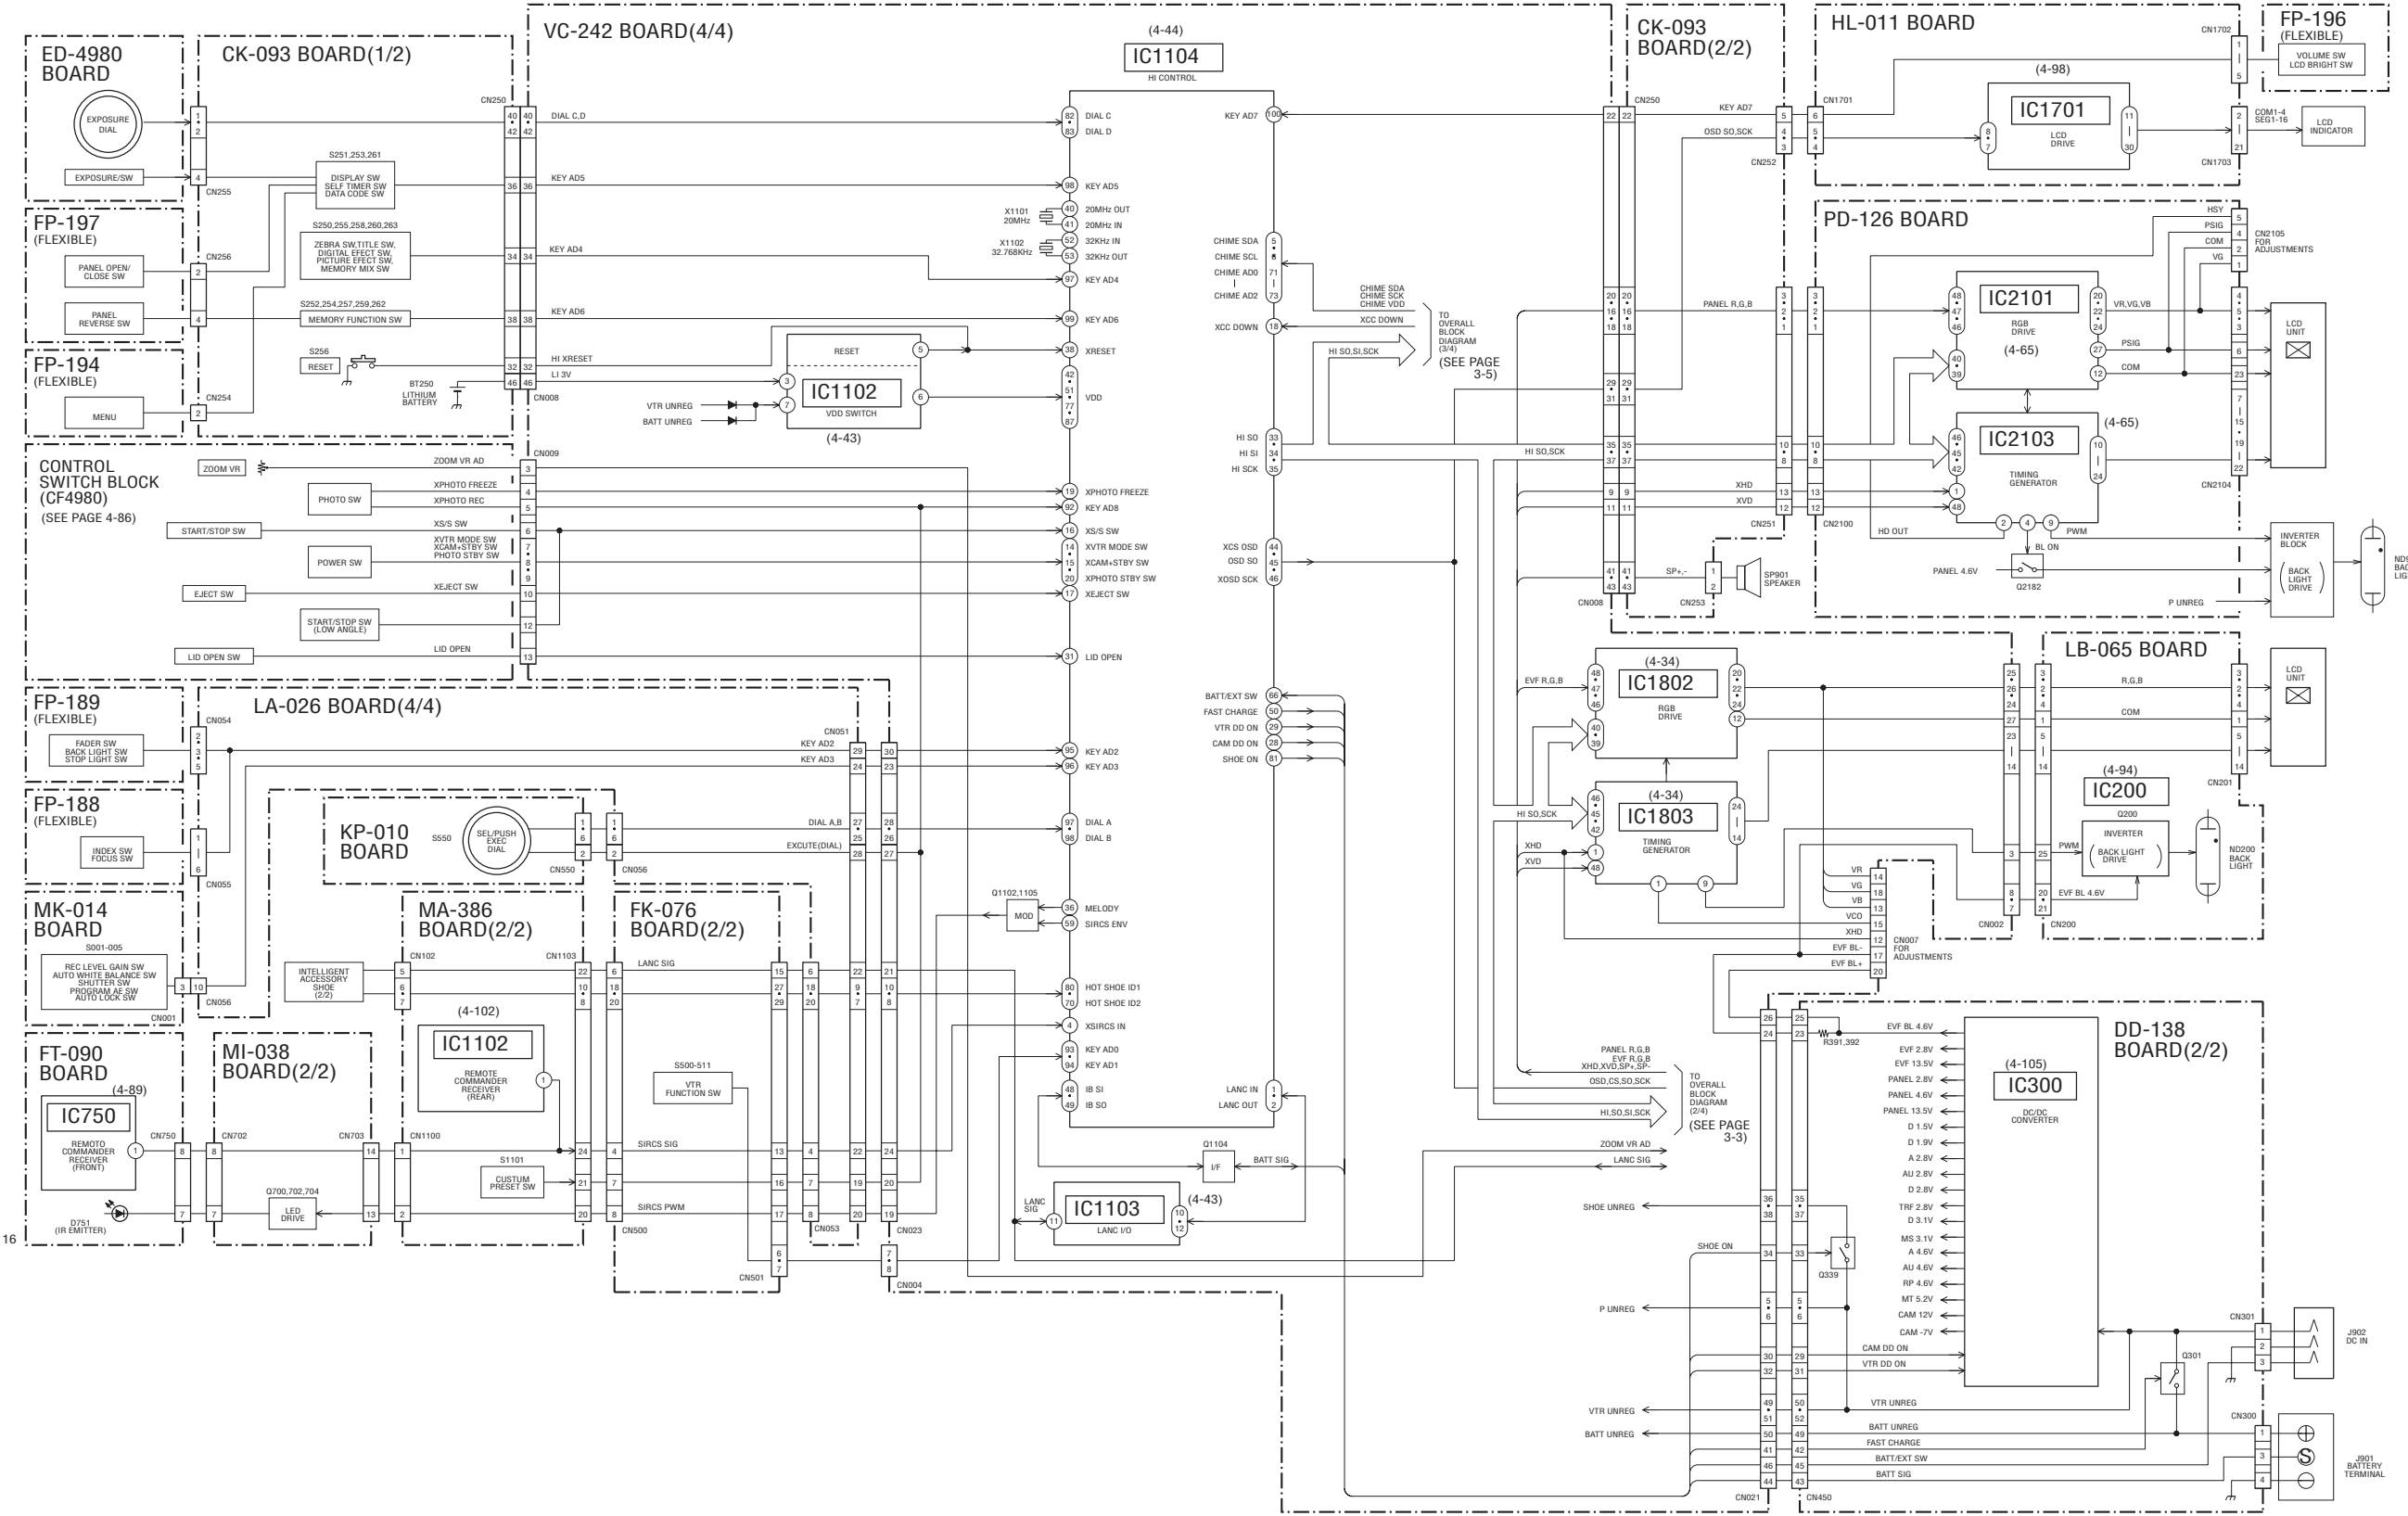


3-5. POWER BLOCK DIAGRAM (1/3) () : Page No. shown in () indicates the page to refer on the schematic diagram.

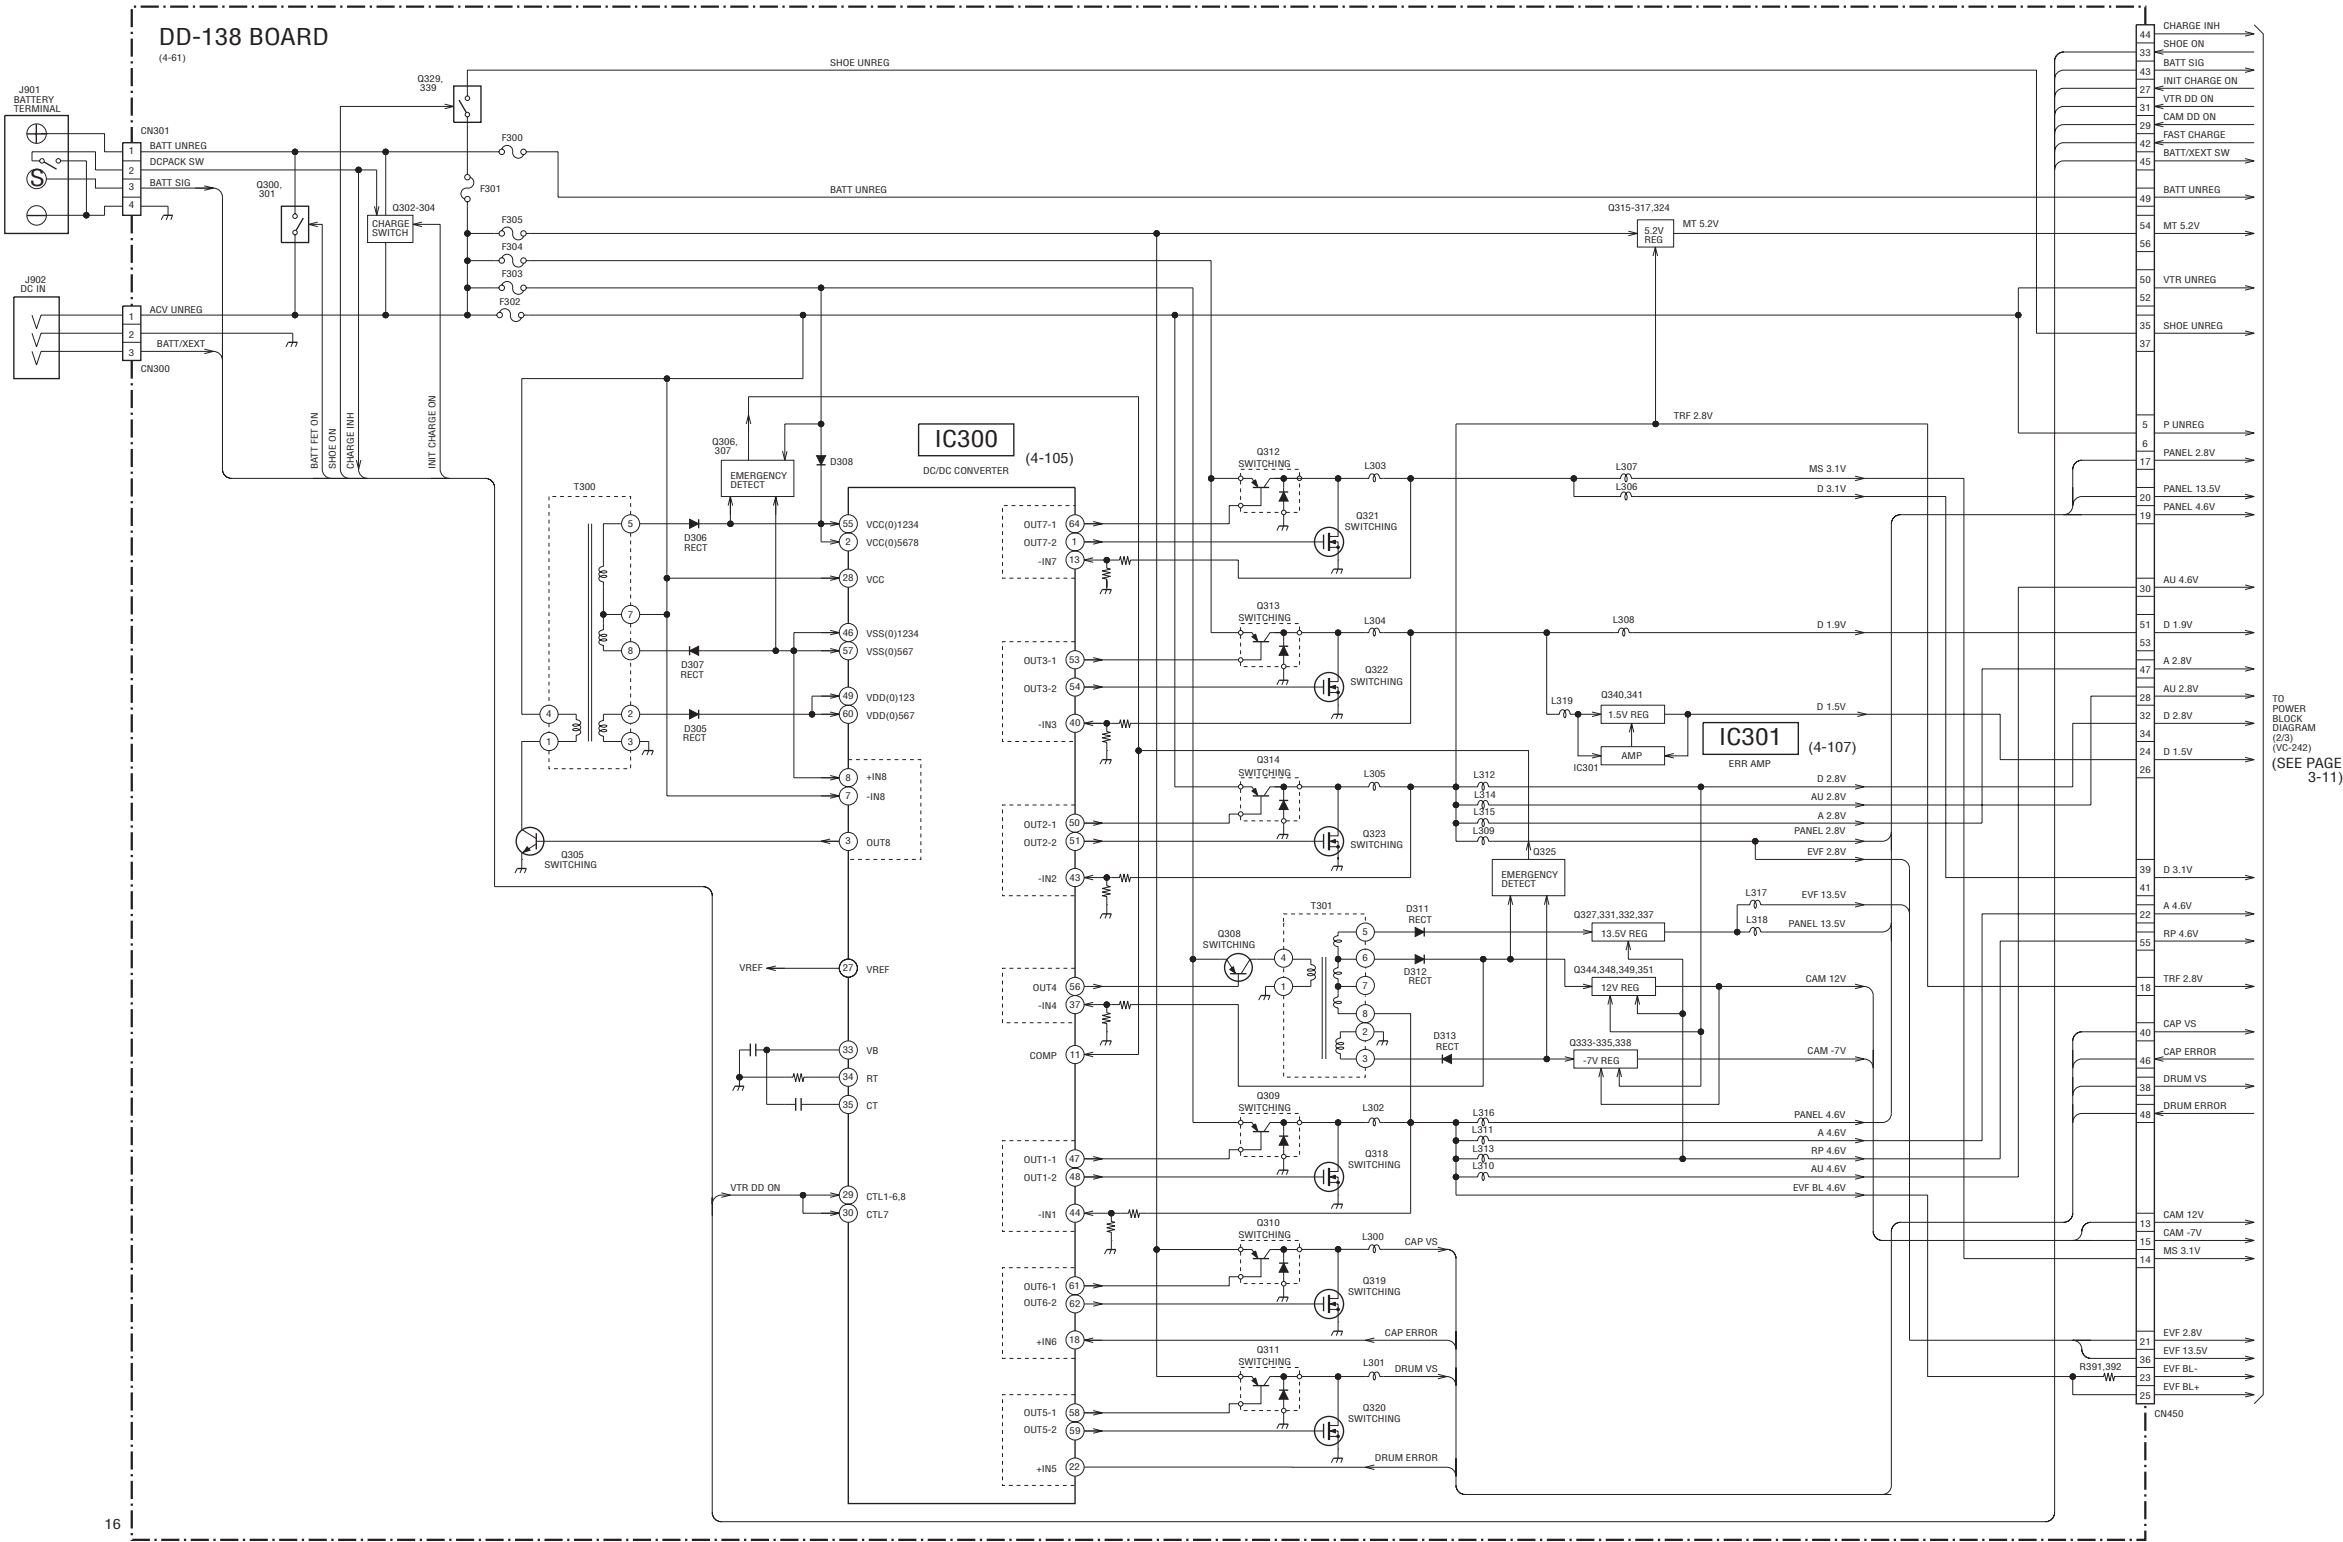

3-6. POWER BLOCK DIAGRAM (2/3) () : Page No. shown in () indicates the page to refer on the schematic diagram.

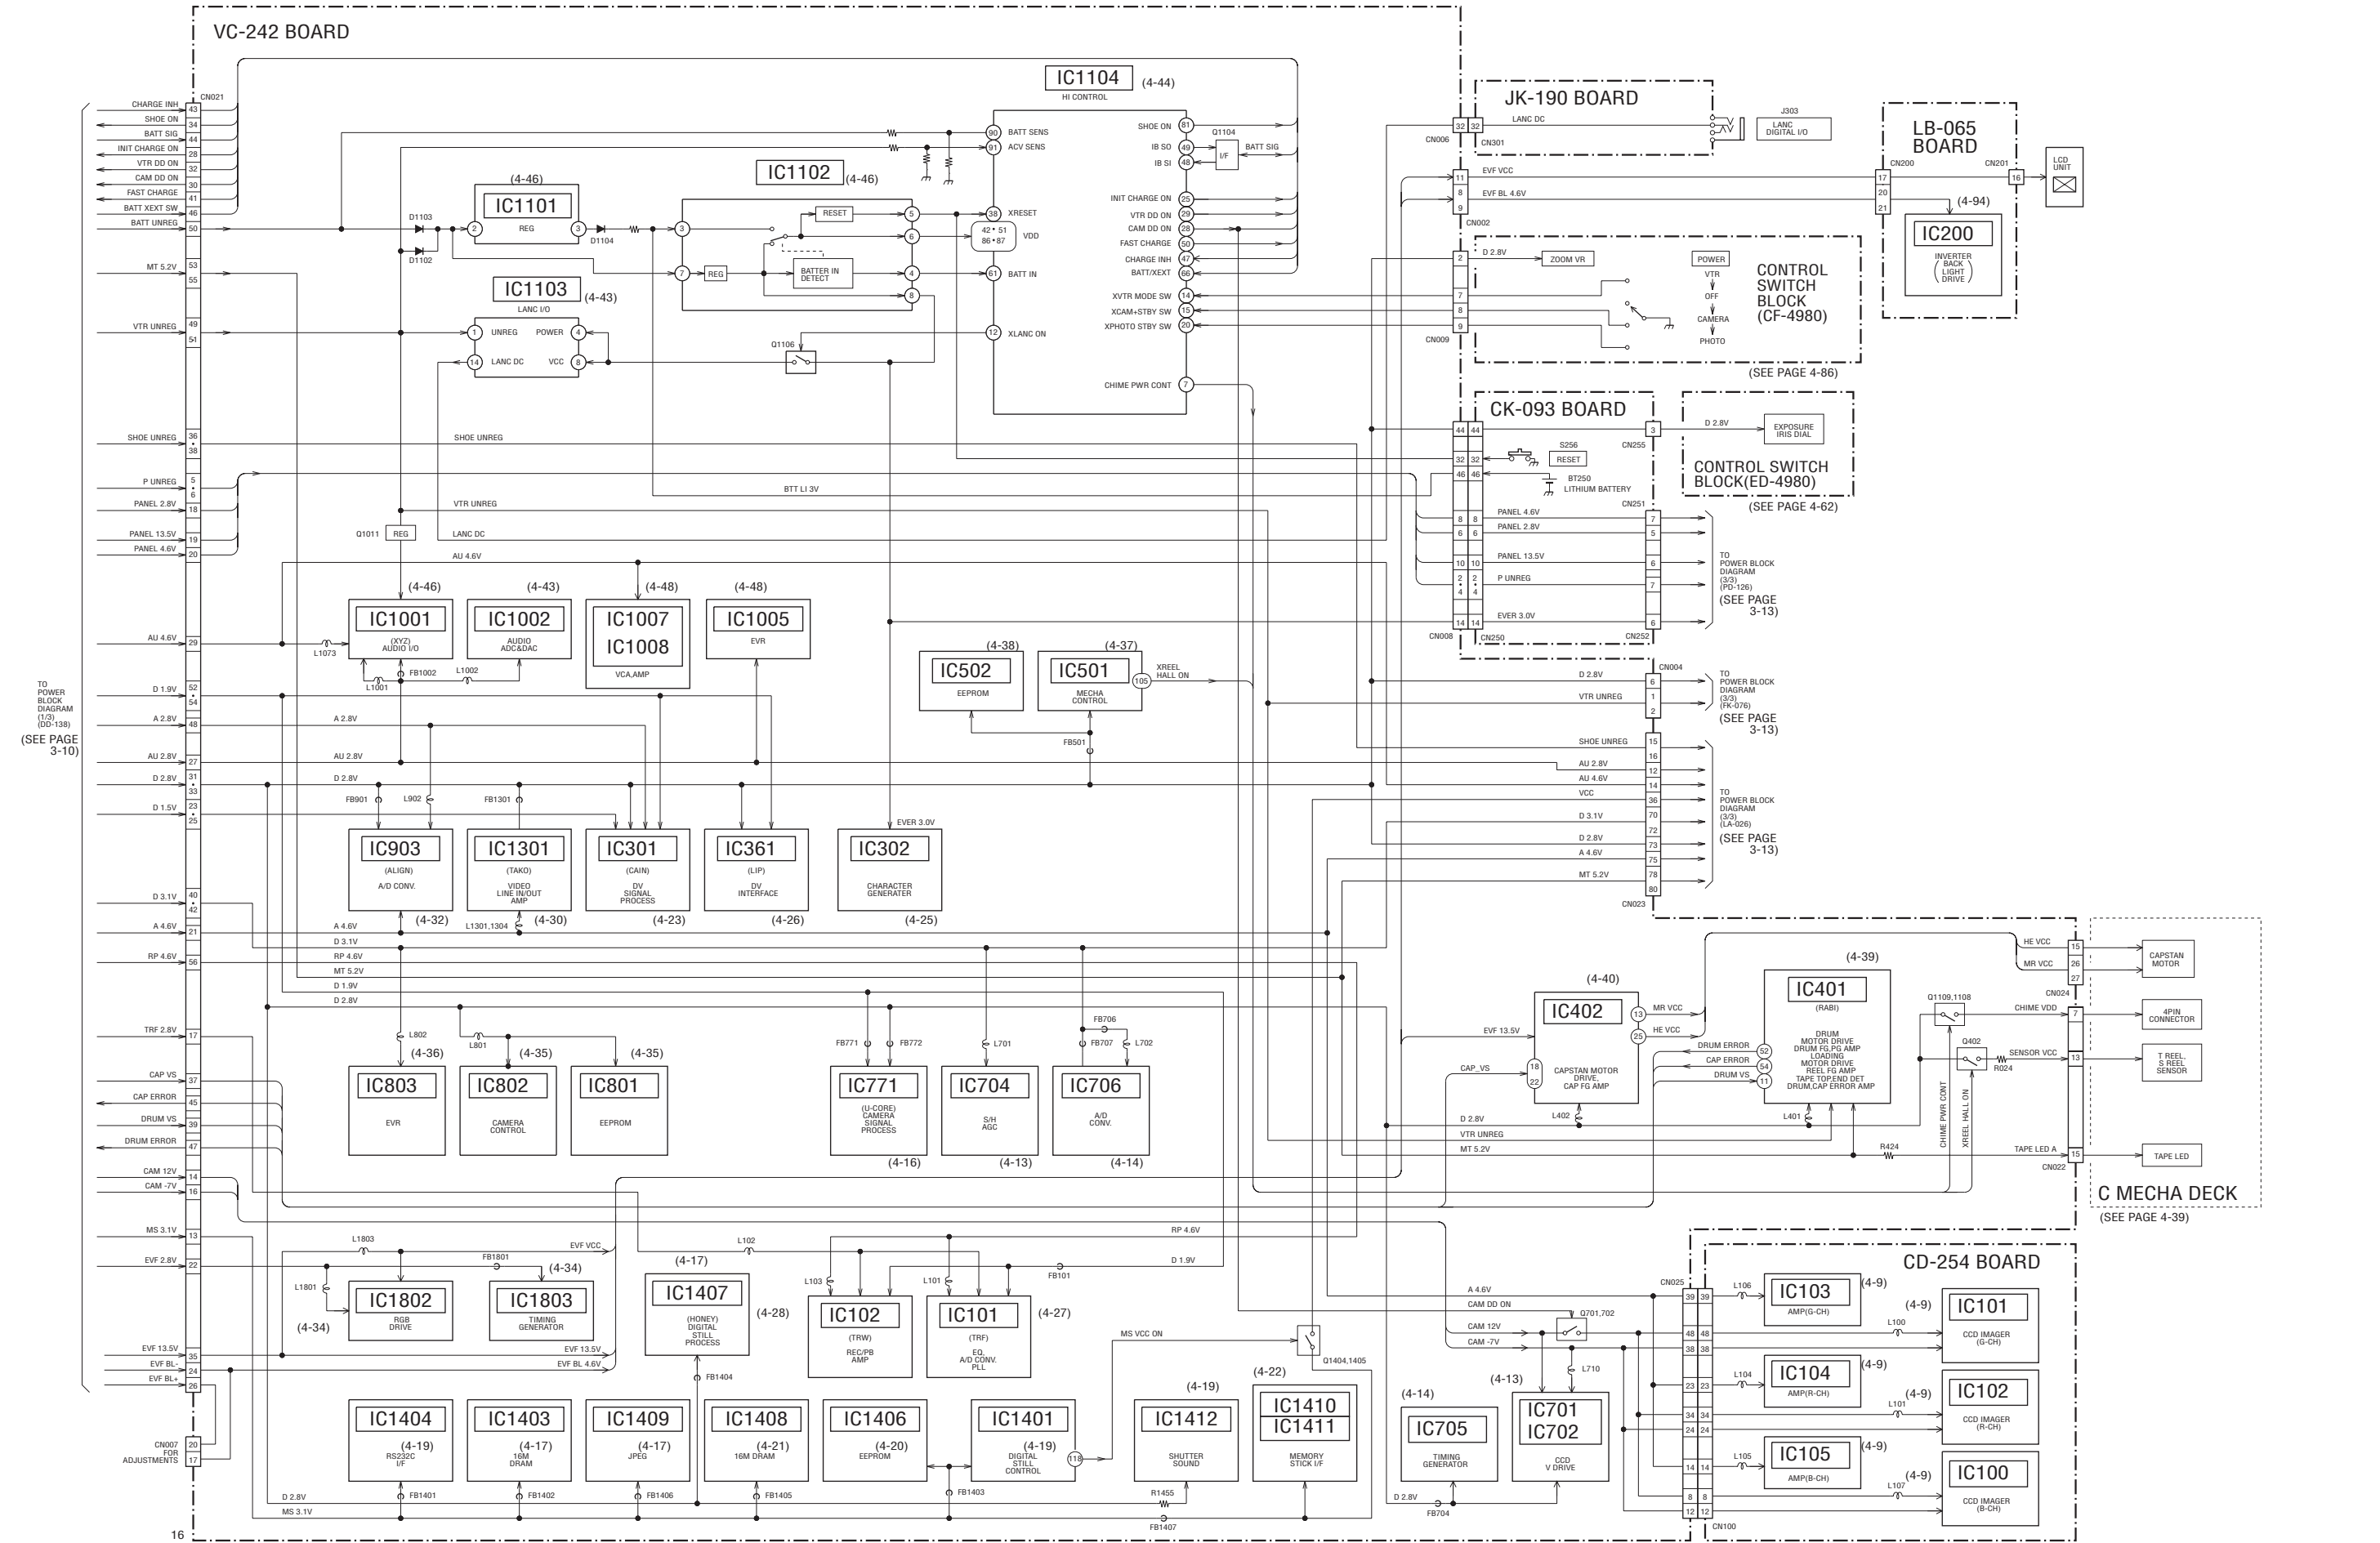


3-7. POWER BLOCK DIAGRAM (3/3) () : Page No. shown in () indicates the page to refer on the schematic diagram.

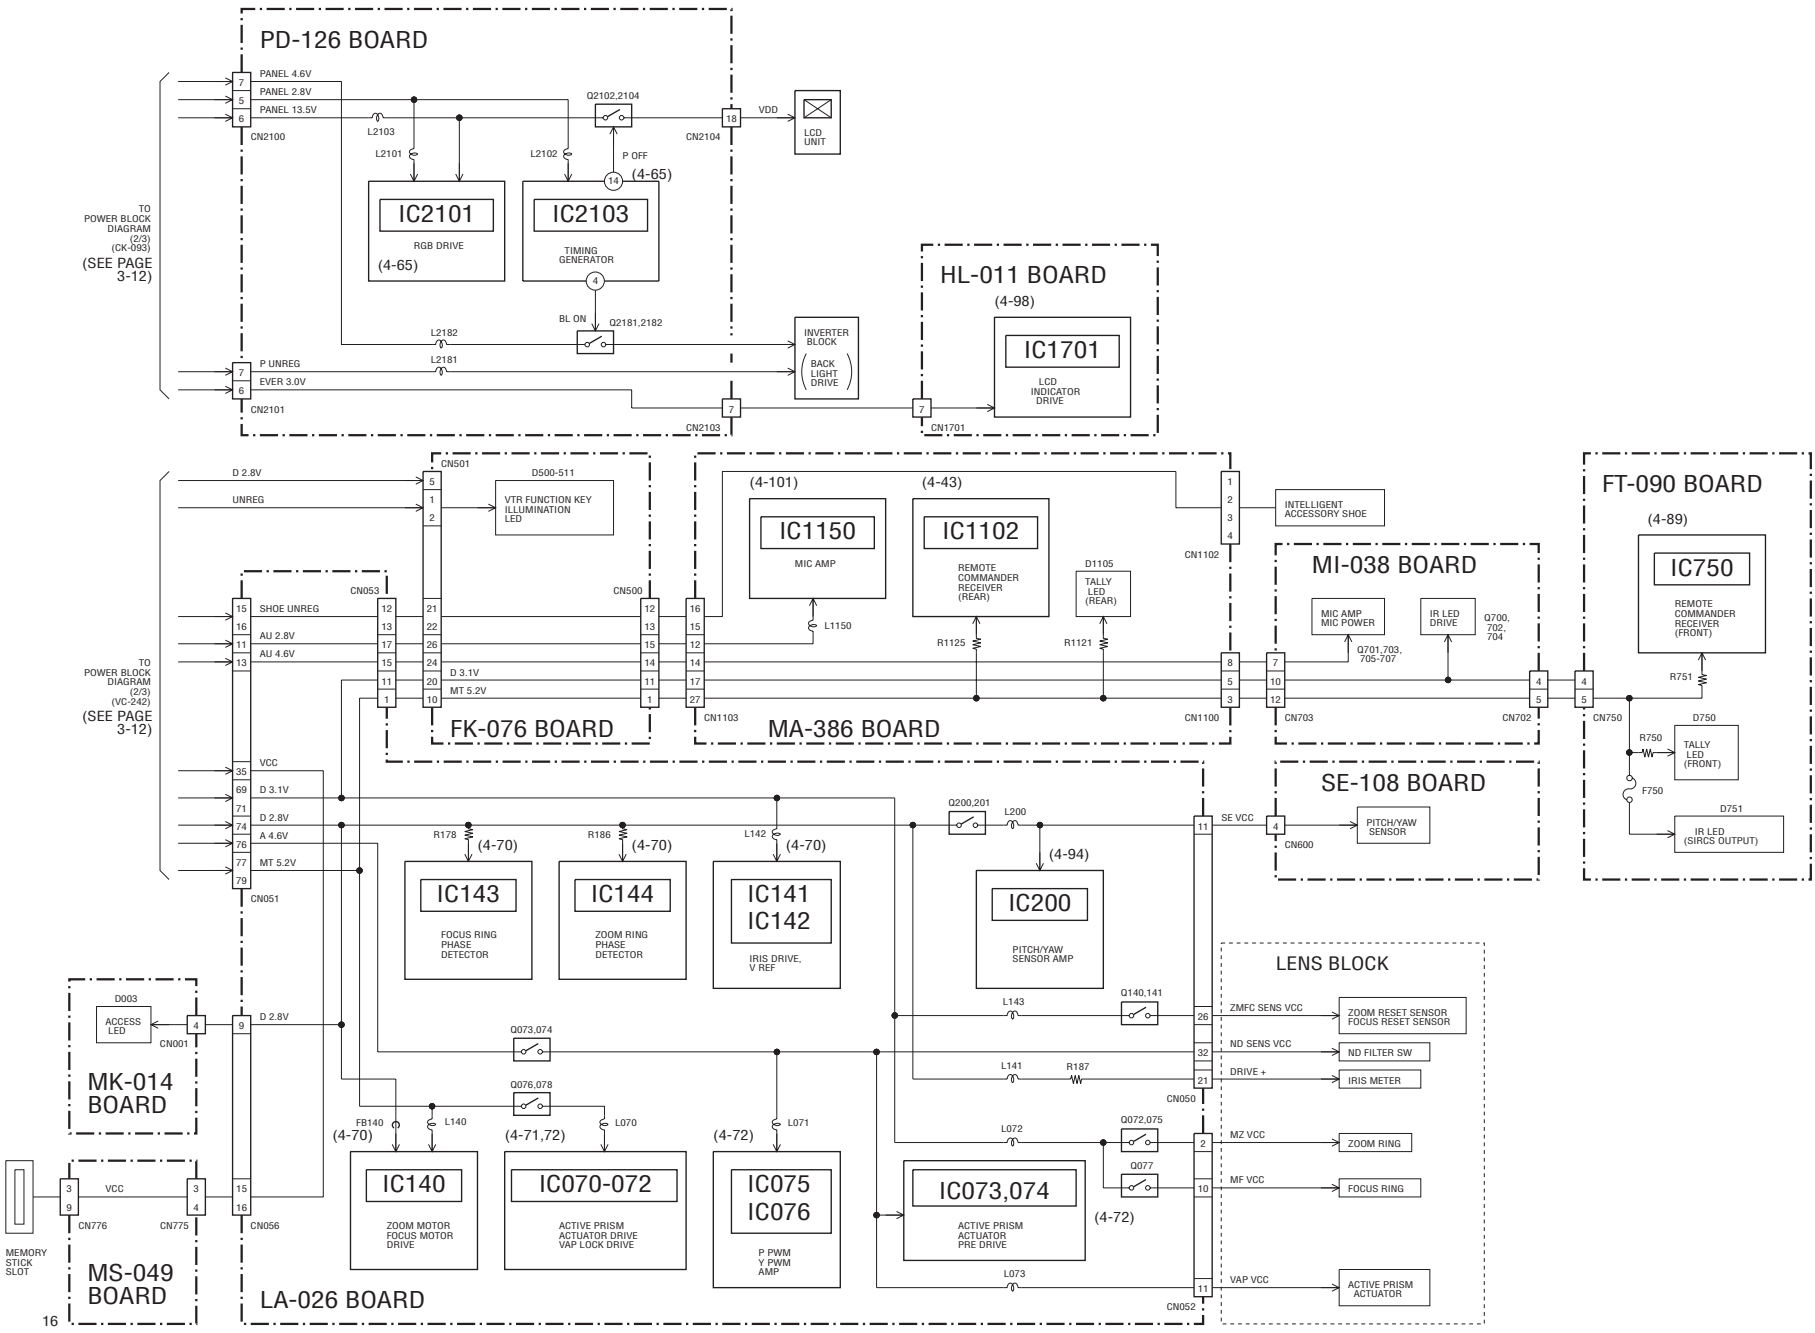


SECTION 4

PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS


4-1. FRAME SCHEMATIC DIAGRAM (1/3)

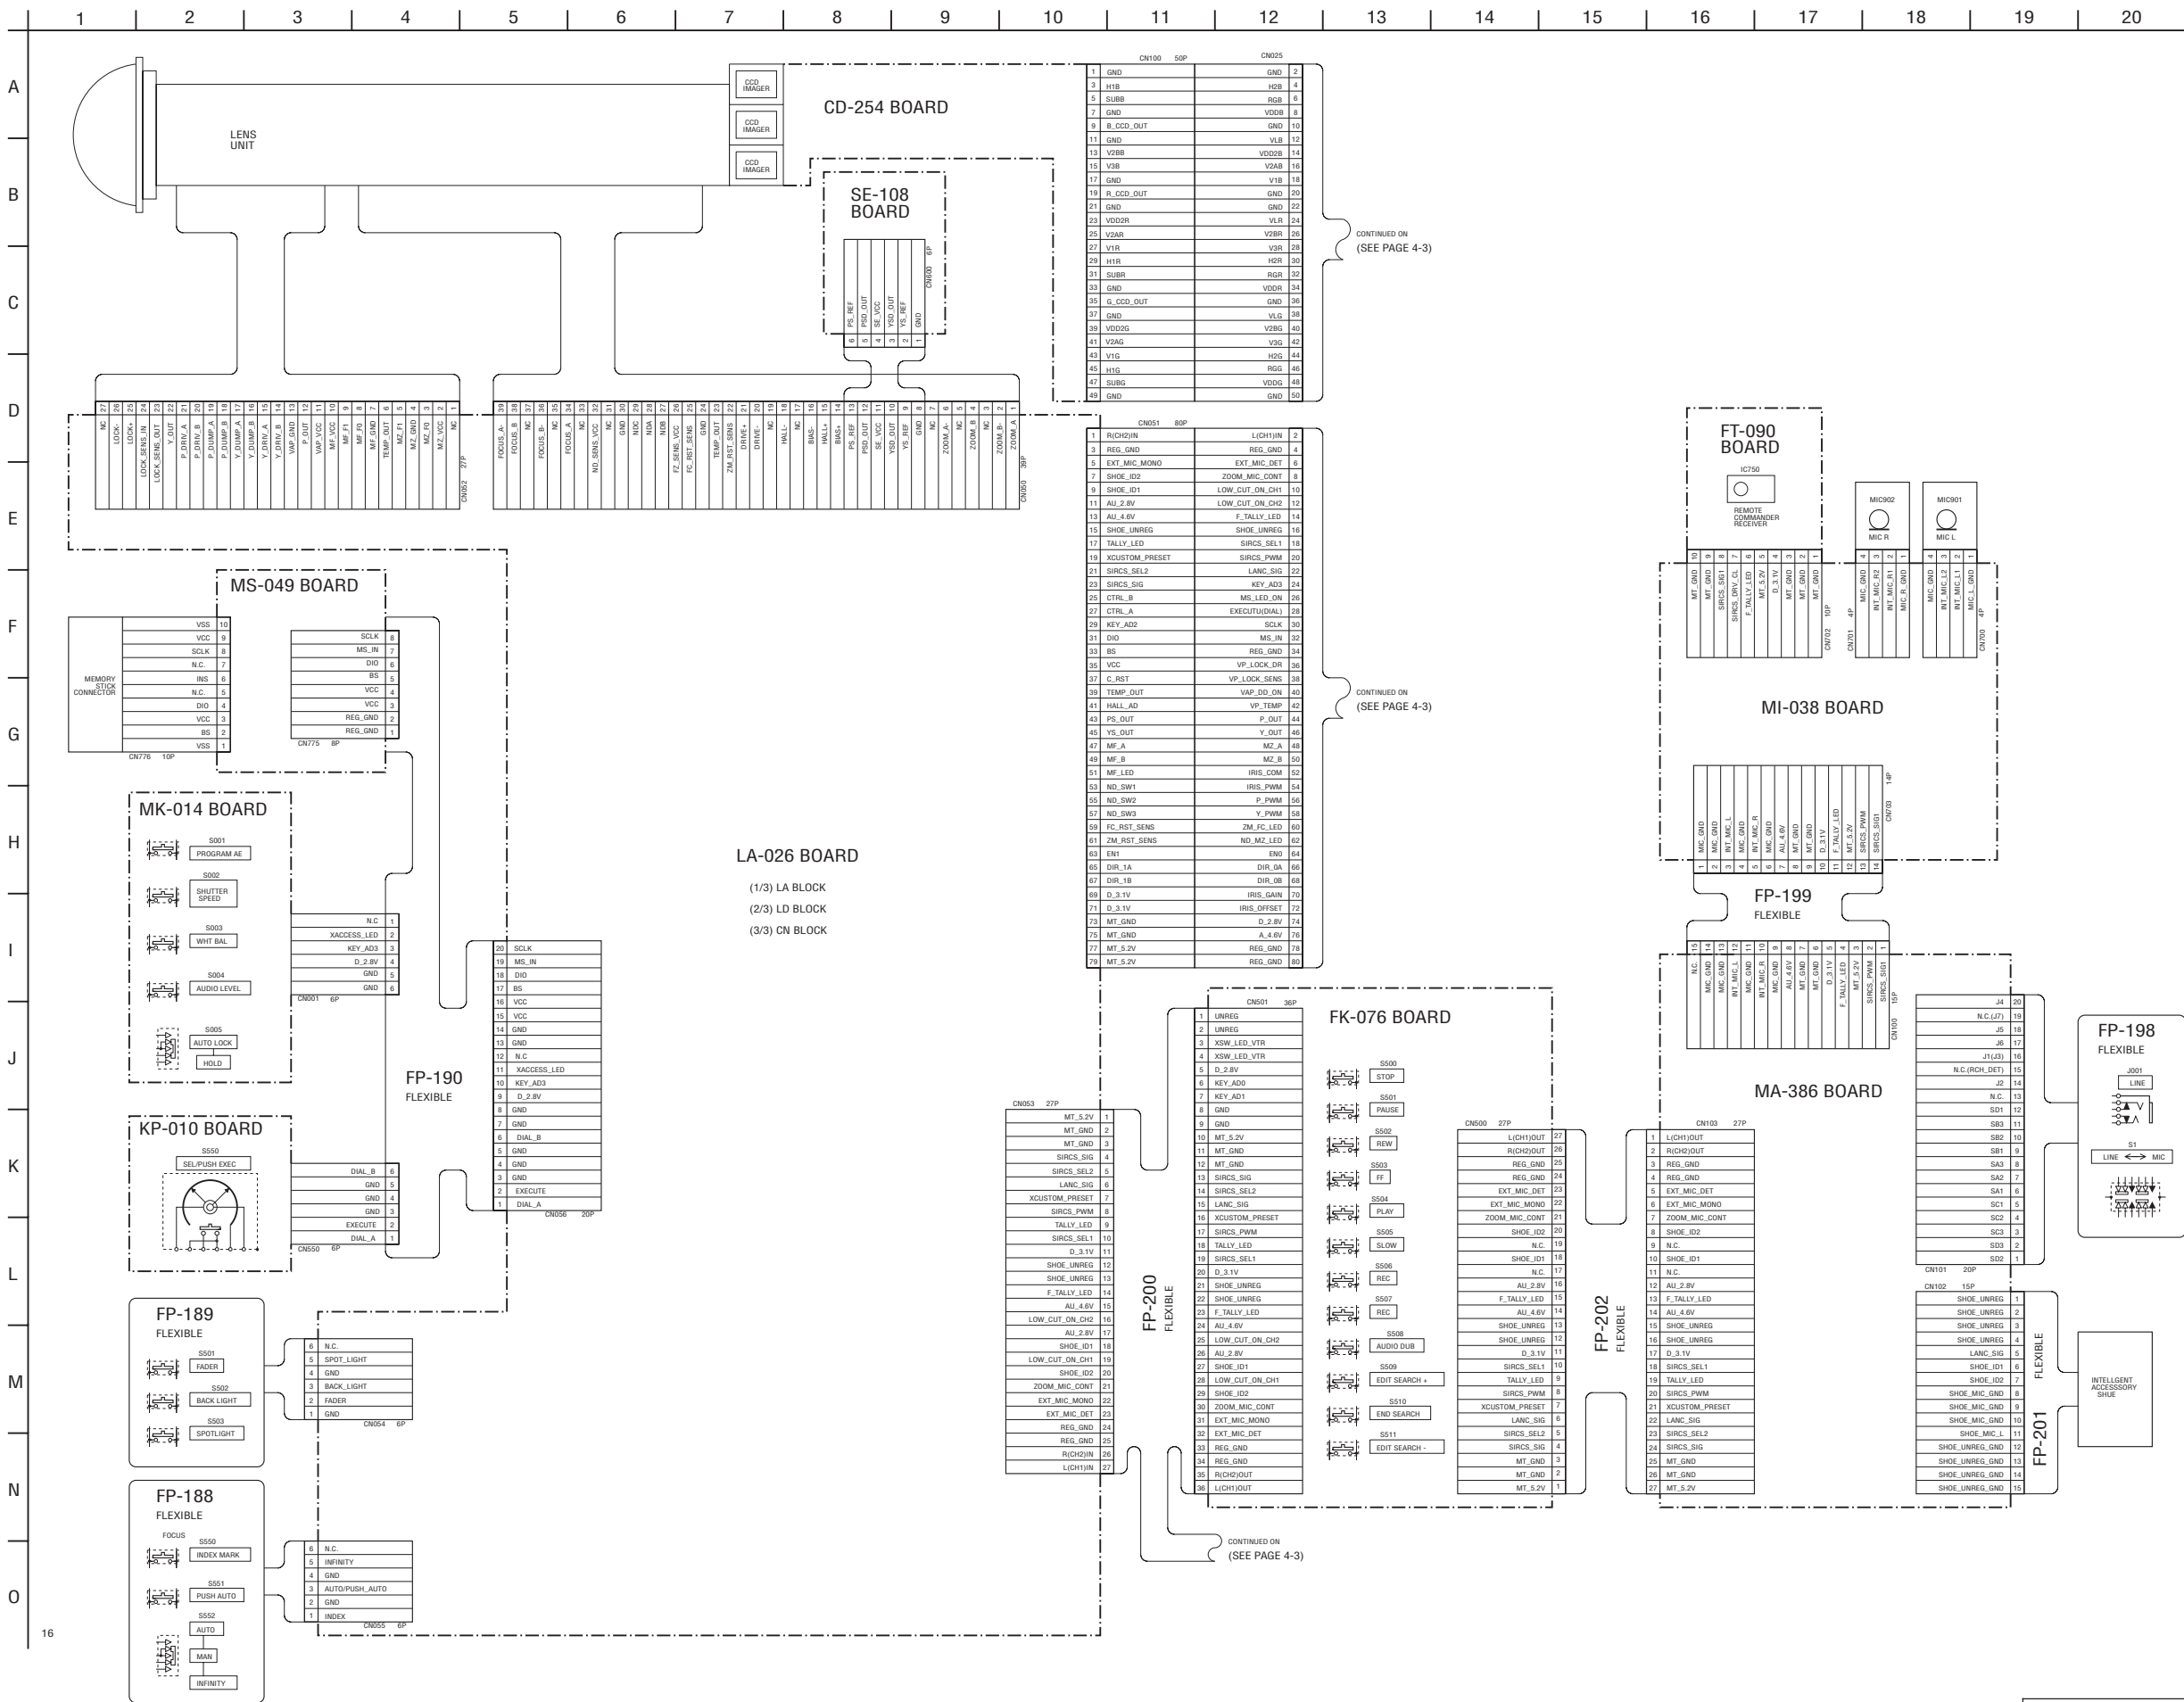

FRAME SCHEMATIC DIAGRAM (2/3)

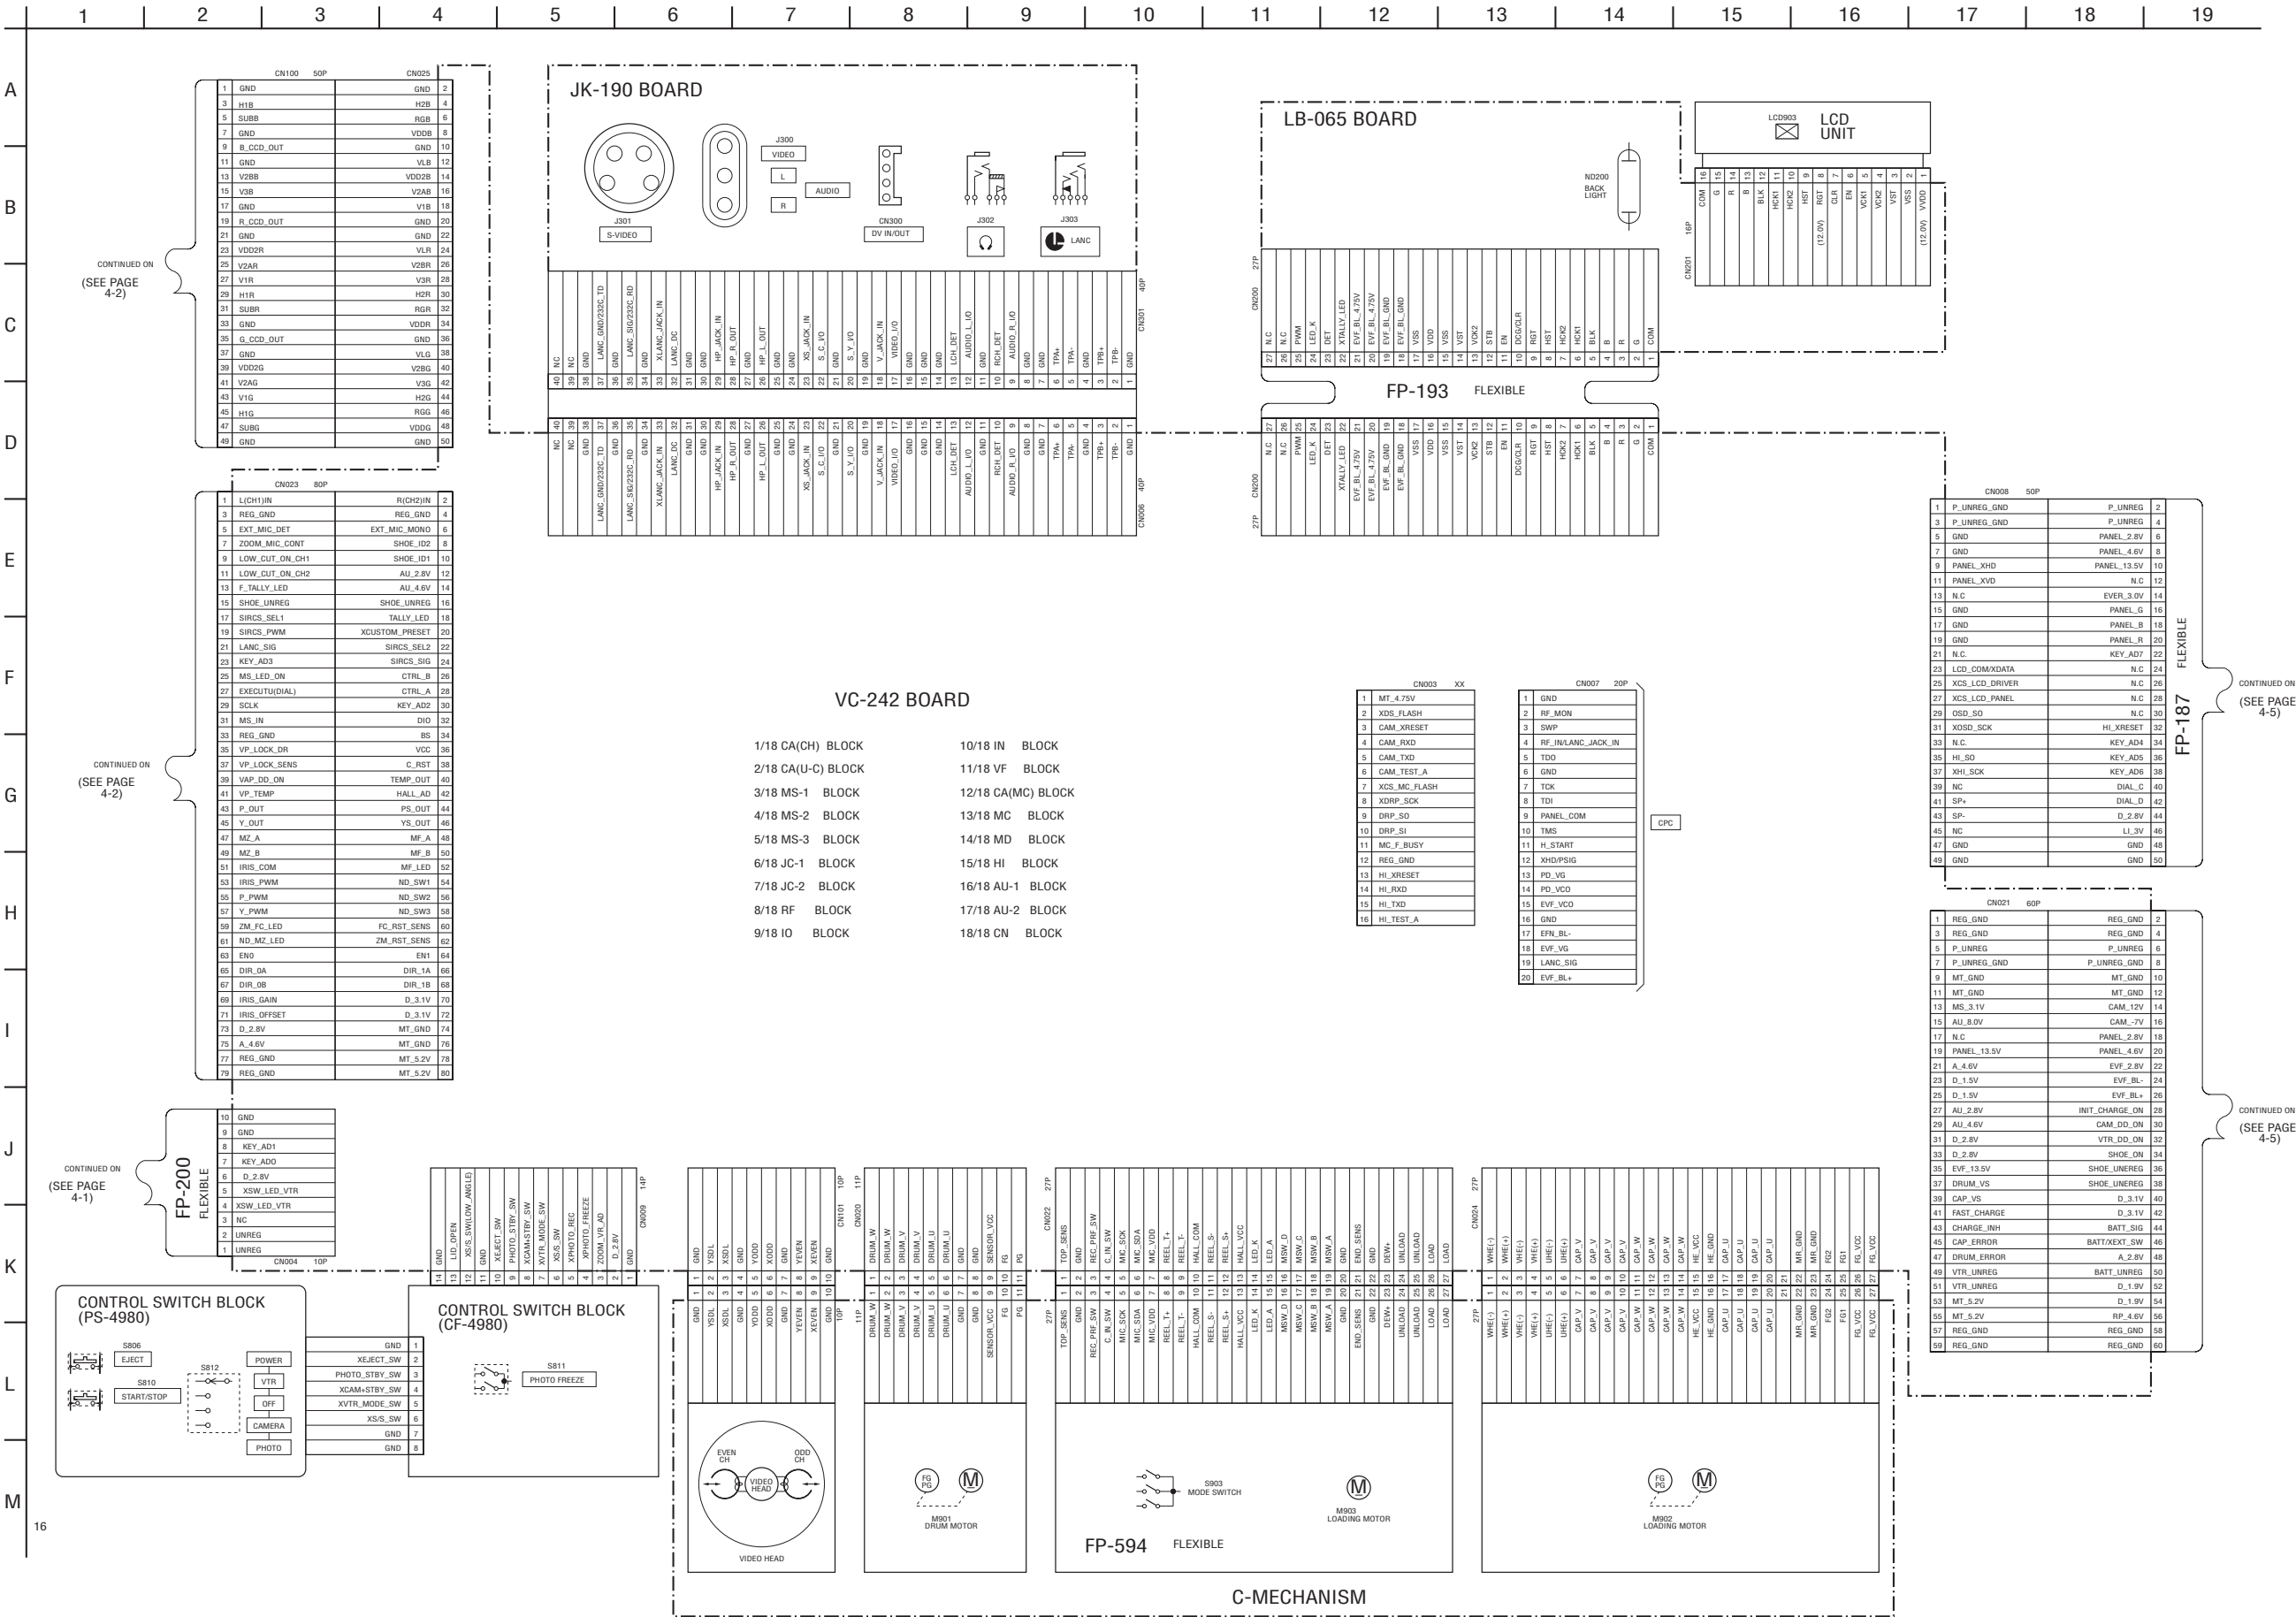

FRAME SCHEMATIC DIAGRAM (3/3)

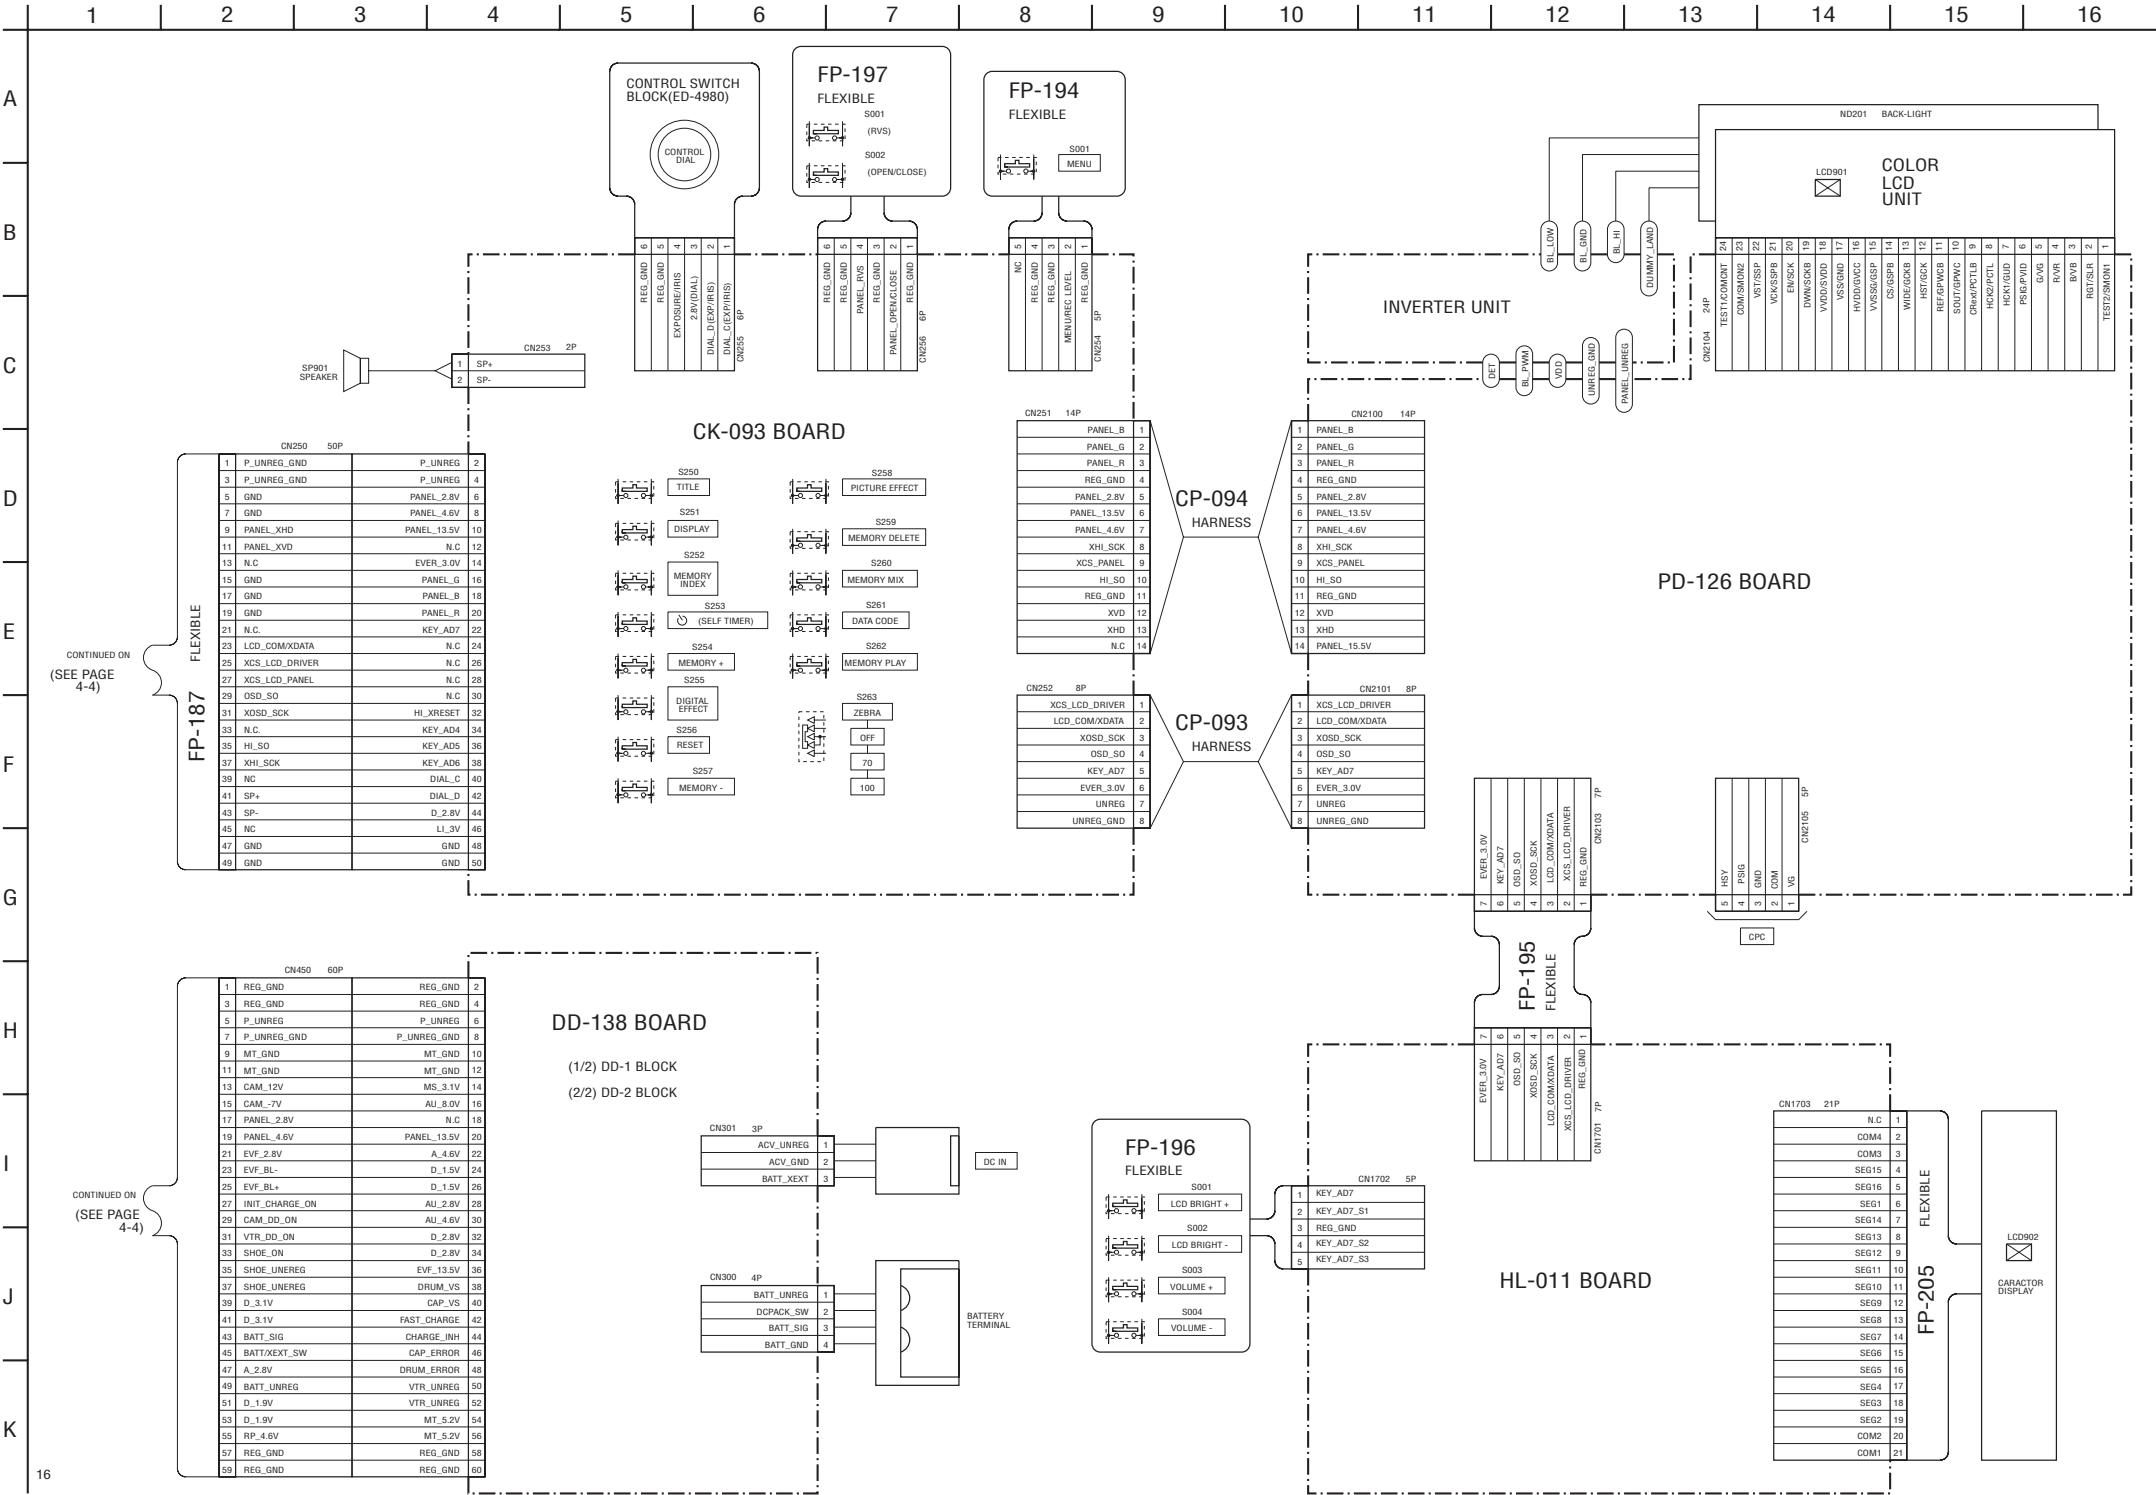

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR WIRING BOARDS AND SCHEMATIC DIAGRAMS
(In addition to this, the necessary note is printed in each block)

(For printed wiring boards)

- Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)
- Through hole is omitted.
- Circled numbers refer to waveforms.
- There are few cases that the part printed on diagram isn't mounted in this model.
- Chip parts.

Transistor

Diode

(For schematic diagrams)

- All capacitors are in mF unless otherwise noted. pF : m mF. 50V or less are not indicated except for electrolytics and tantalums.
- Chip resistors are 1/10W unless otherwise noted. kW=1000W, MW=1000kW.
- Caution when replacing chip parts.
New parts must be attached after removal of chip.
Be careful not to heat the minus side of tantalum capacitor, Because it is damaged by the heat.
- Some chip part will be indicated as follows.

Example

C541
22U
TA A

L452
10UH
2520

Kinds of capacitor

Temperature characteristics

External dimensions (mm)

- Constants of resistors, capacitors, ICs and etc with XX indicate that they are not used.
In such cases, the unused circuits may be indicated.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Signal name
XEDIT → EDIT PB/XREC → PB/REC
- non flammable resistor
- fusible resistor
- panel designation
- B+ Line *
- B- Line *
- IN/OUT direction of (+,-) B LINE. *
- adjustment for repair. *
- Circled numbers refer to waveforms. *

* Indicated by the color red.

Note :
The components identified by mark or dotted line with mark are critical for safety.
Replace only with part number specified.

Note :
Les composants identifiés par une marque sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

(Measuring conditions voltage and waveform)

- Voltages and waveforms are measured between the measurement points and ground when camera shoots color bar chart of pattern box. They are reference values and reference waveforms. *
- (VOM of DC 10 MΩ input impedance is used.).
- Voltage values change depending upon input impedance of VOM used.) *

1. Connection

2. Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.

Fig. a (Video output terminal output waveform)


Fig.b (Picture on monitor TV)

When indicating parts by reference number, pleas include the board name.

4-8


For Schematic Diagram

- Refer to page 4-11 for printed wiring board.
- Refer to page 4-109 for waveforms.

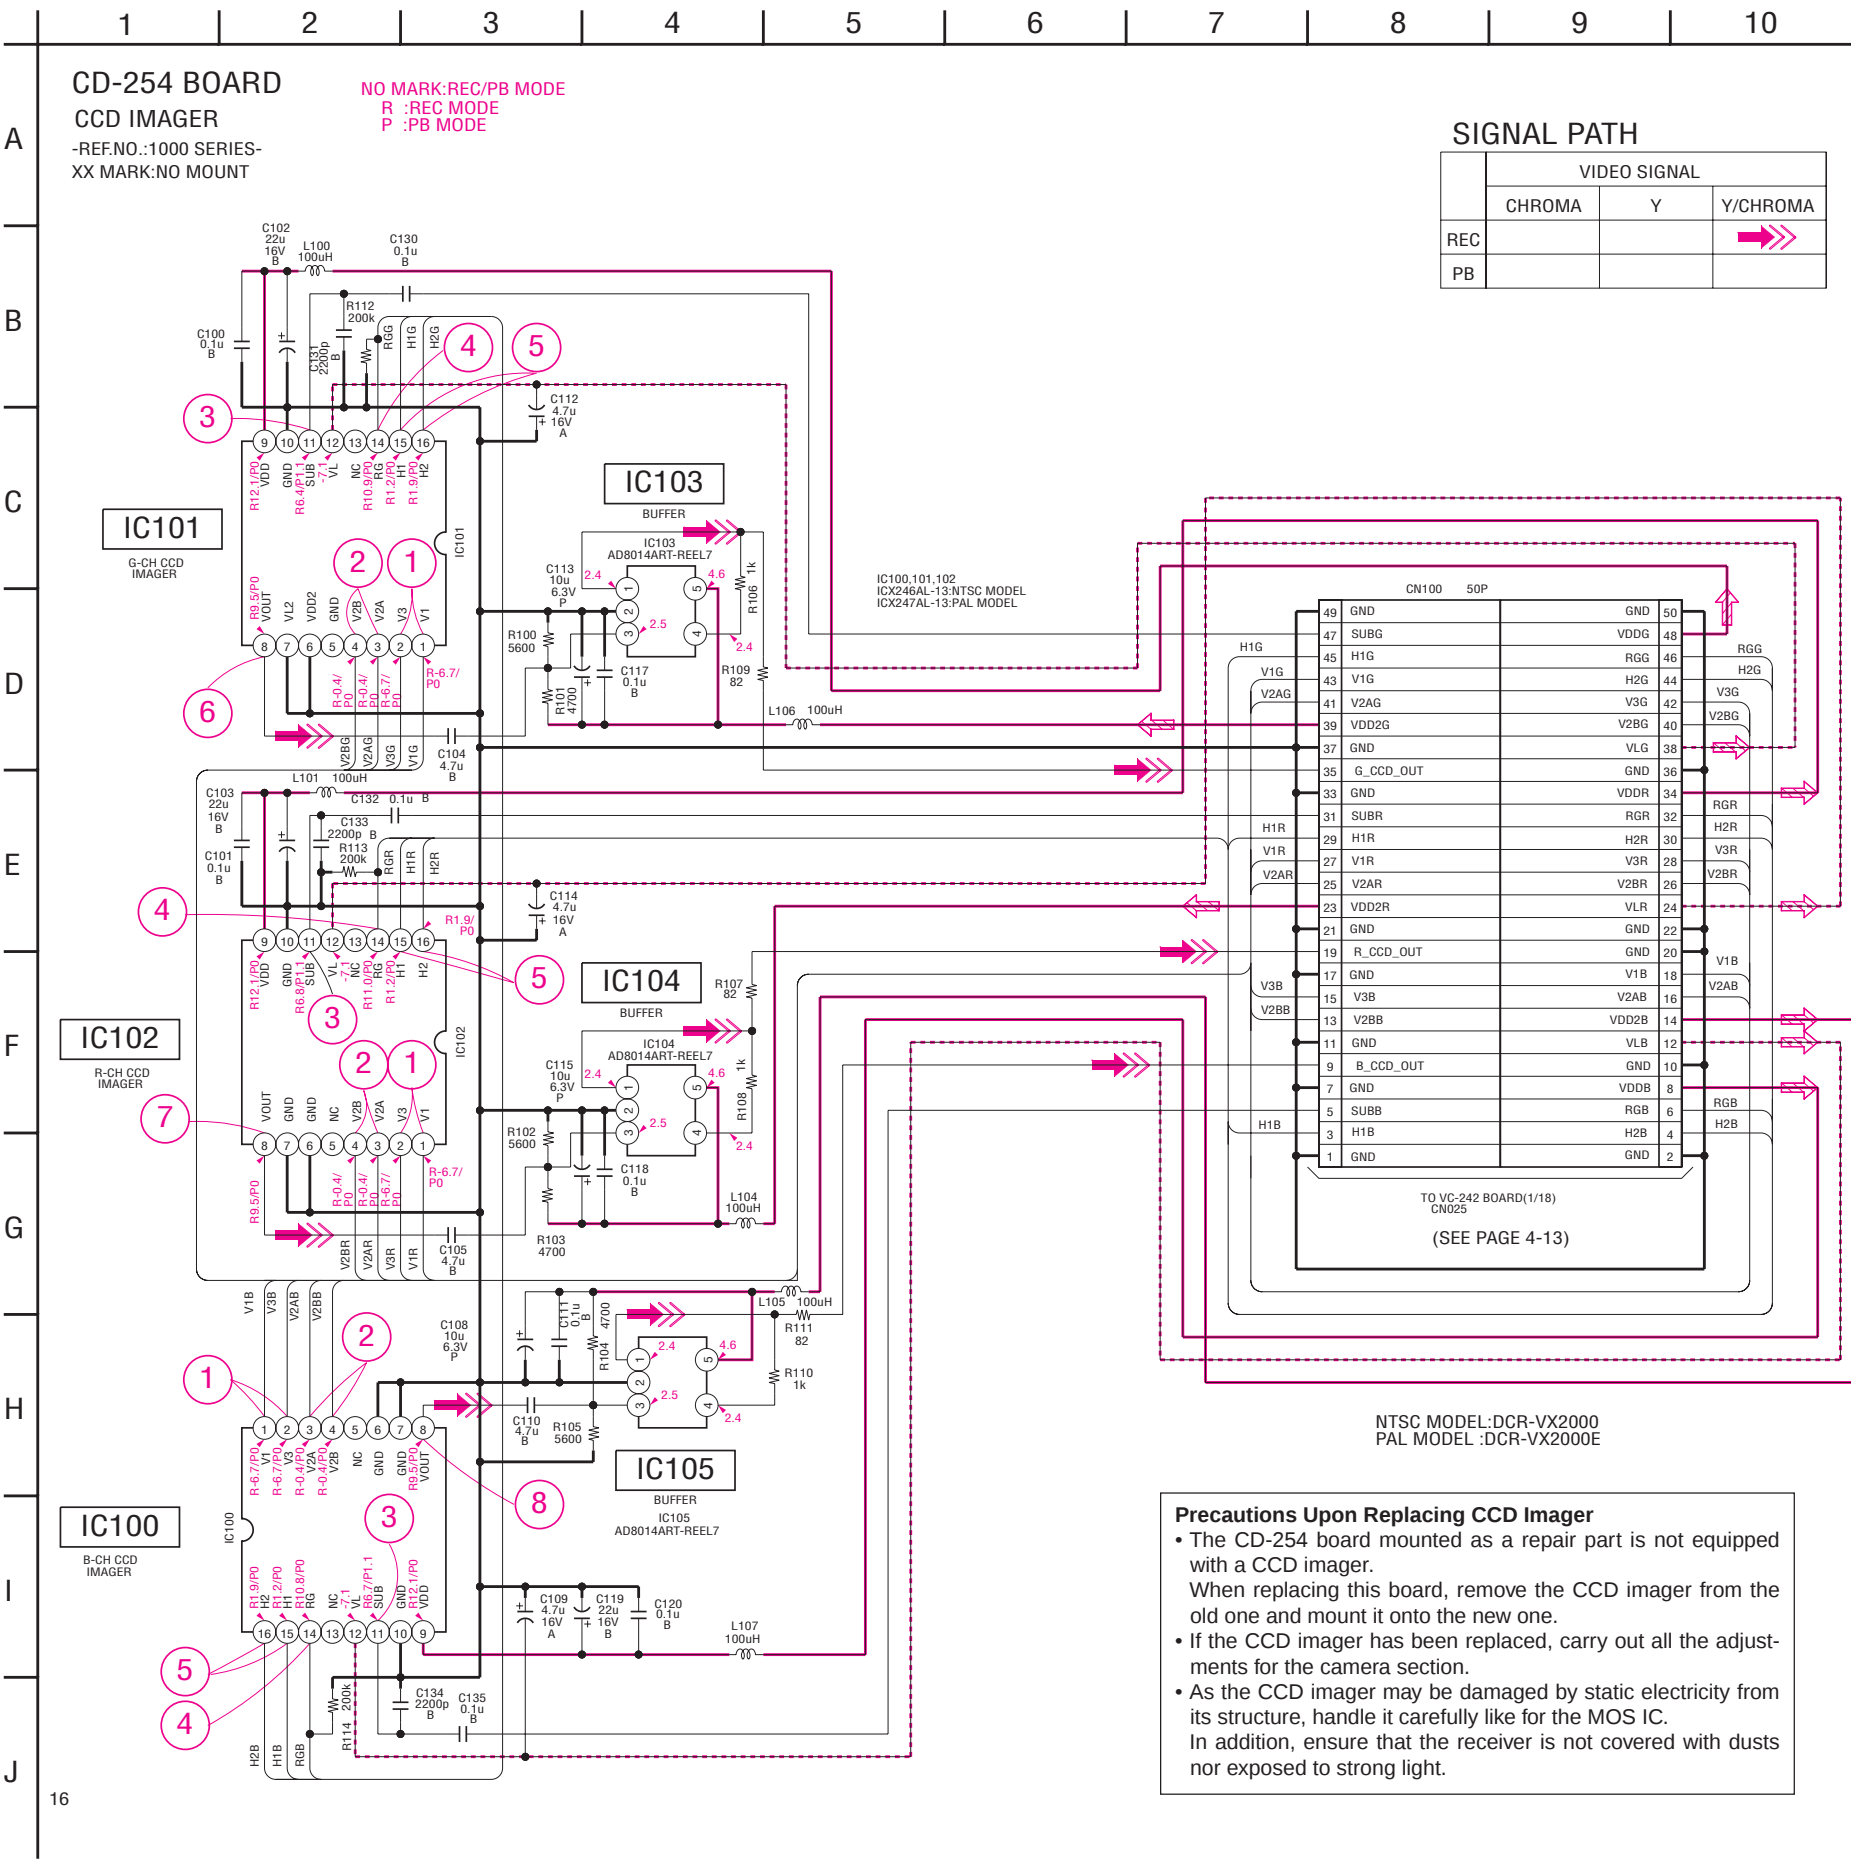

— Ref. No. CD-254 Board; 1,000 Series —


CD-254 BOARD (SIDE B)

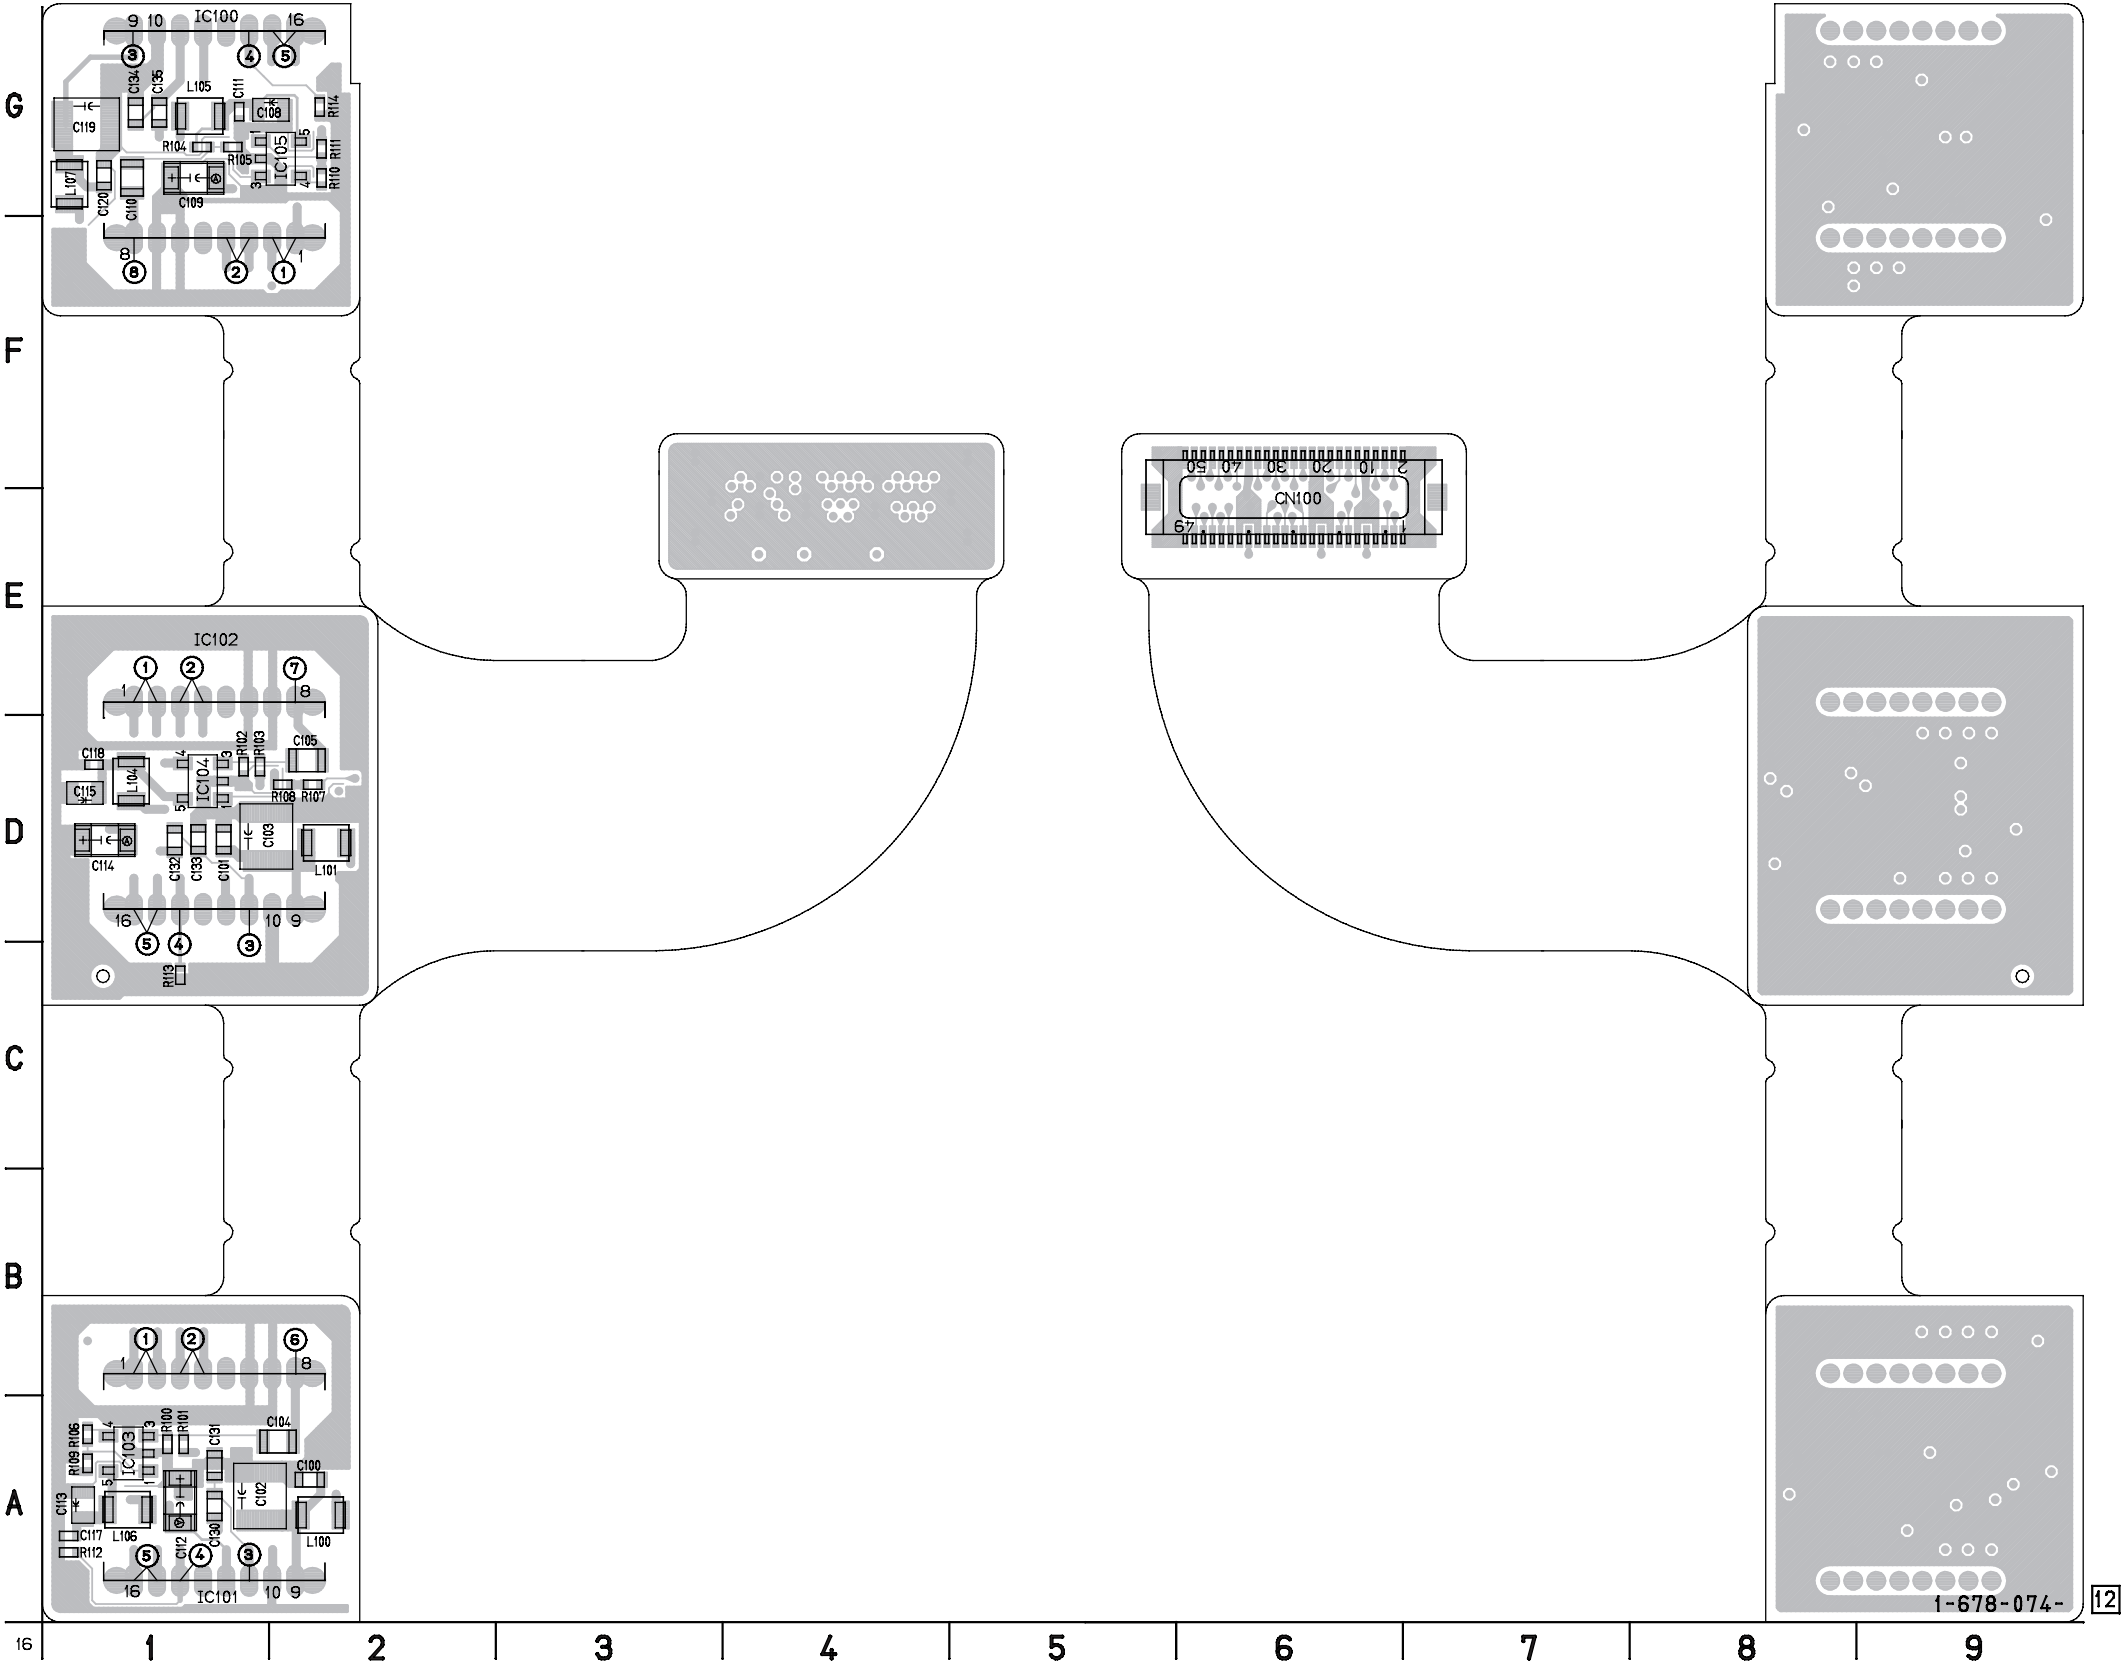



For printed wiring board

- Refer to page 4-116 for parts location.
- This board is four-layer print board. However, the patterns of layers two and three have not been included in the diagram.

There are few cases that the part printed on this diagram isn't mounted in this model.

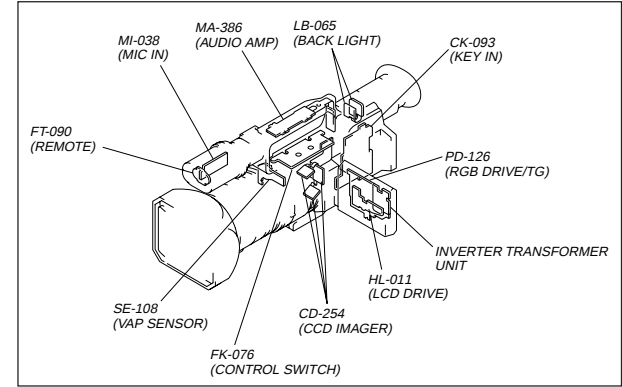


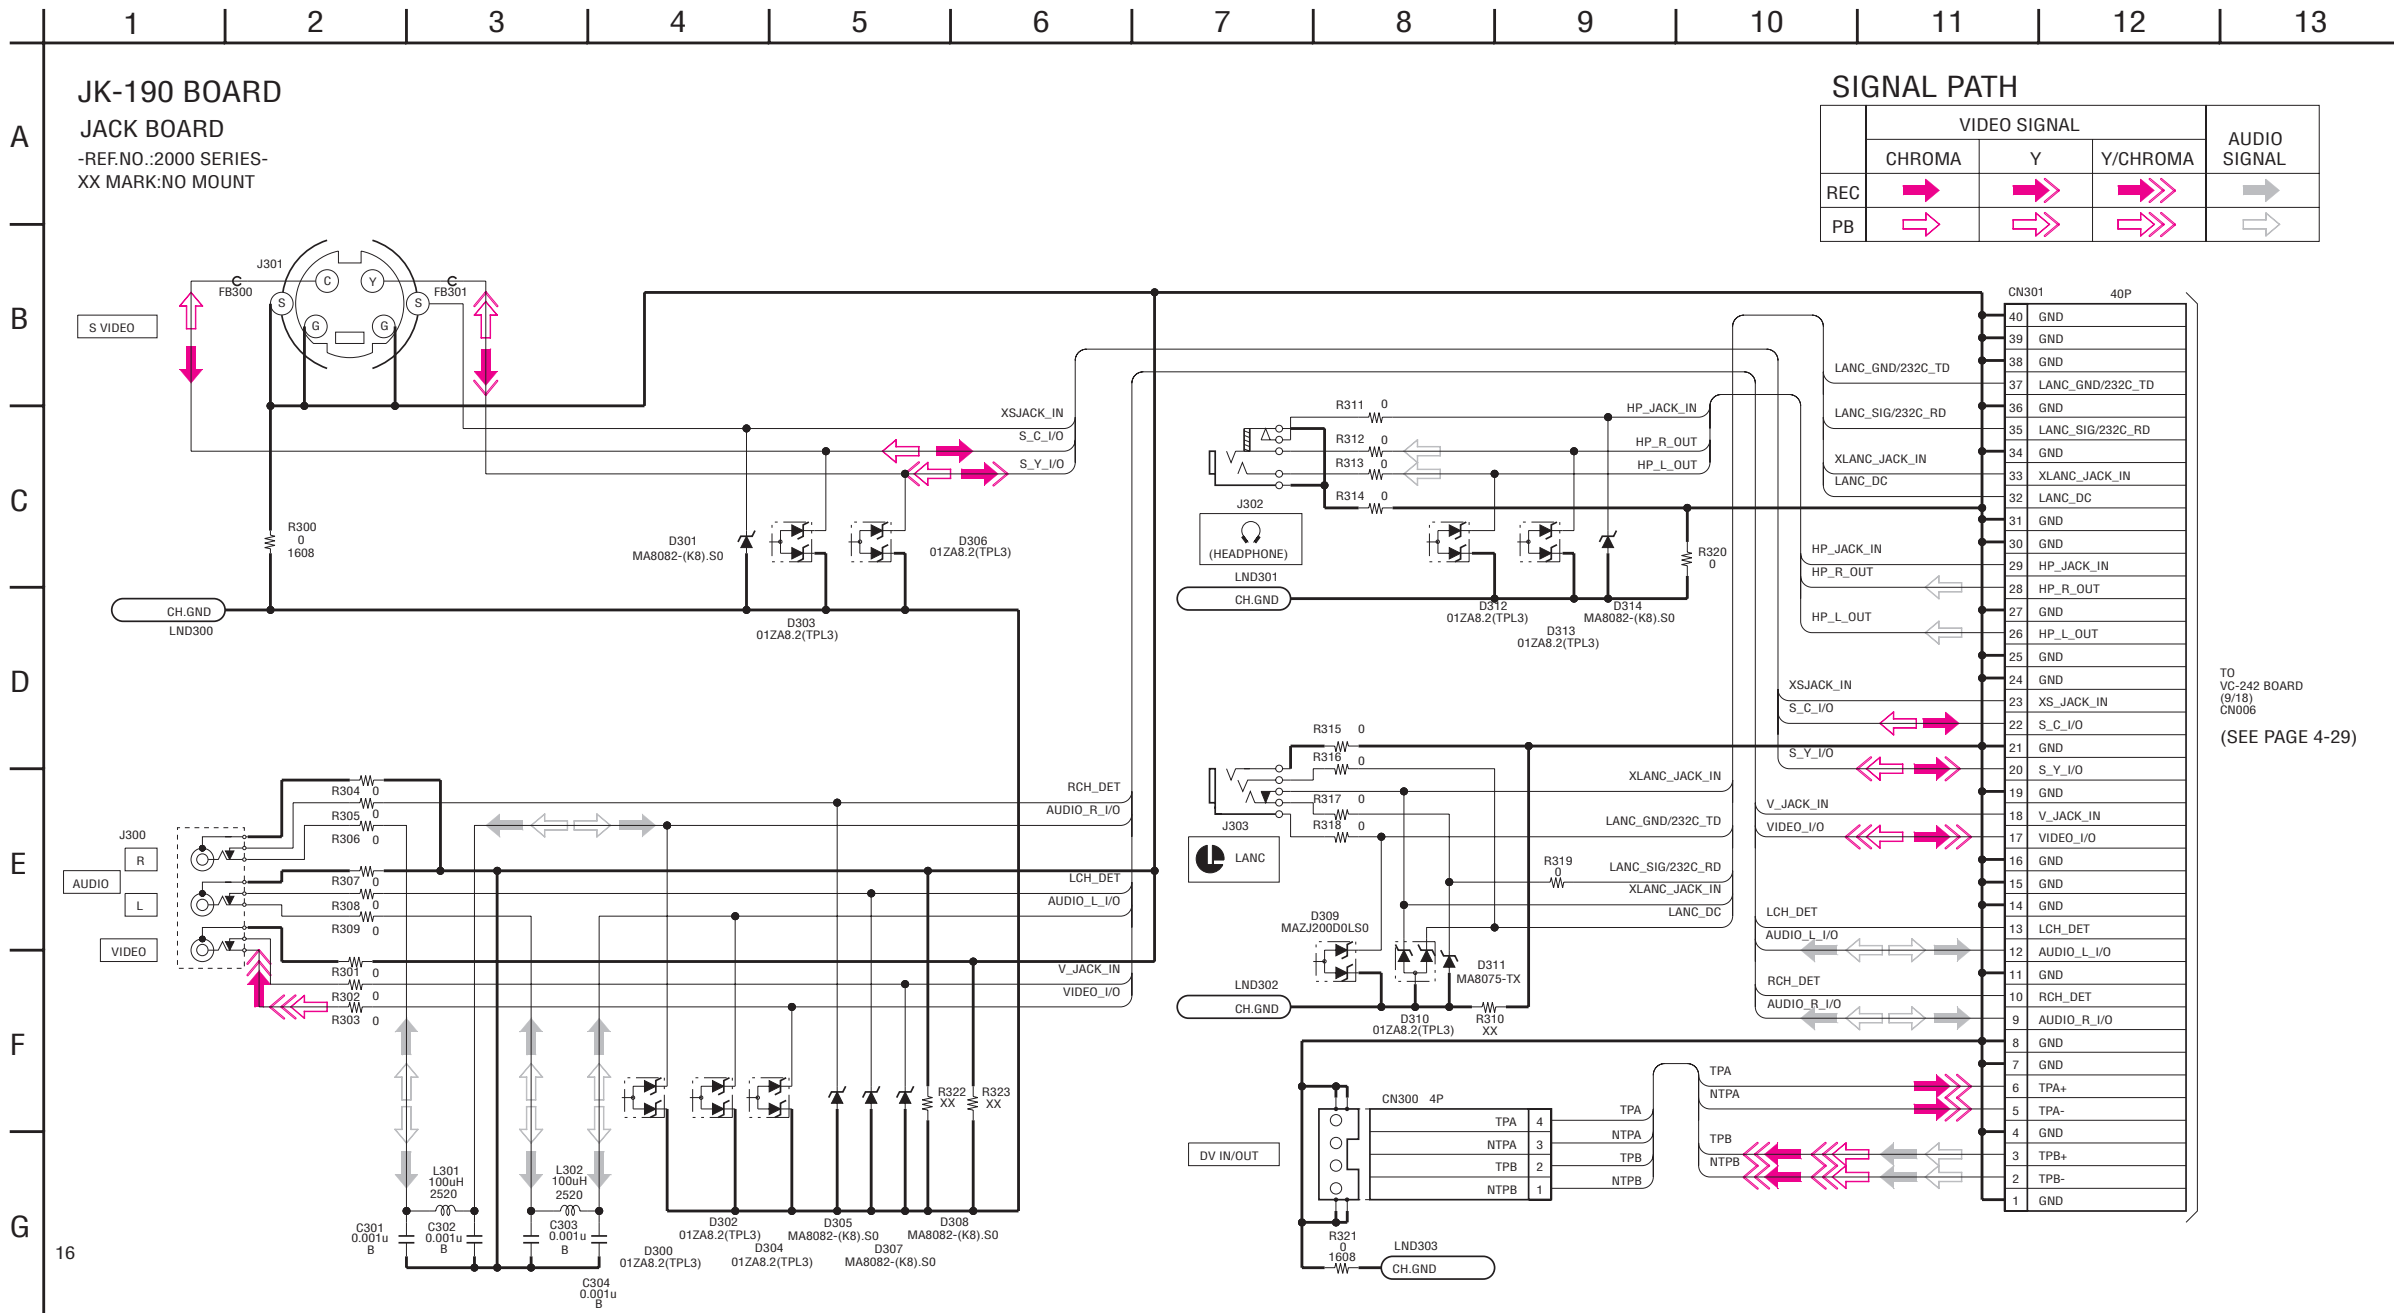

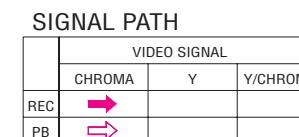

For Schematic Diagram

• Refer to page 4-109 for waveforms.

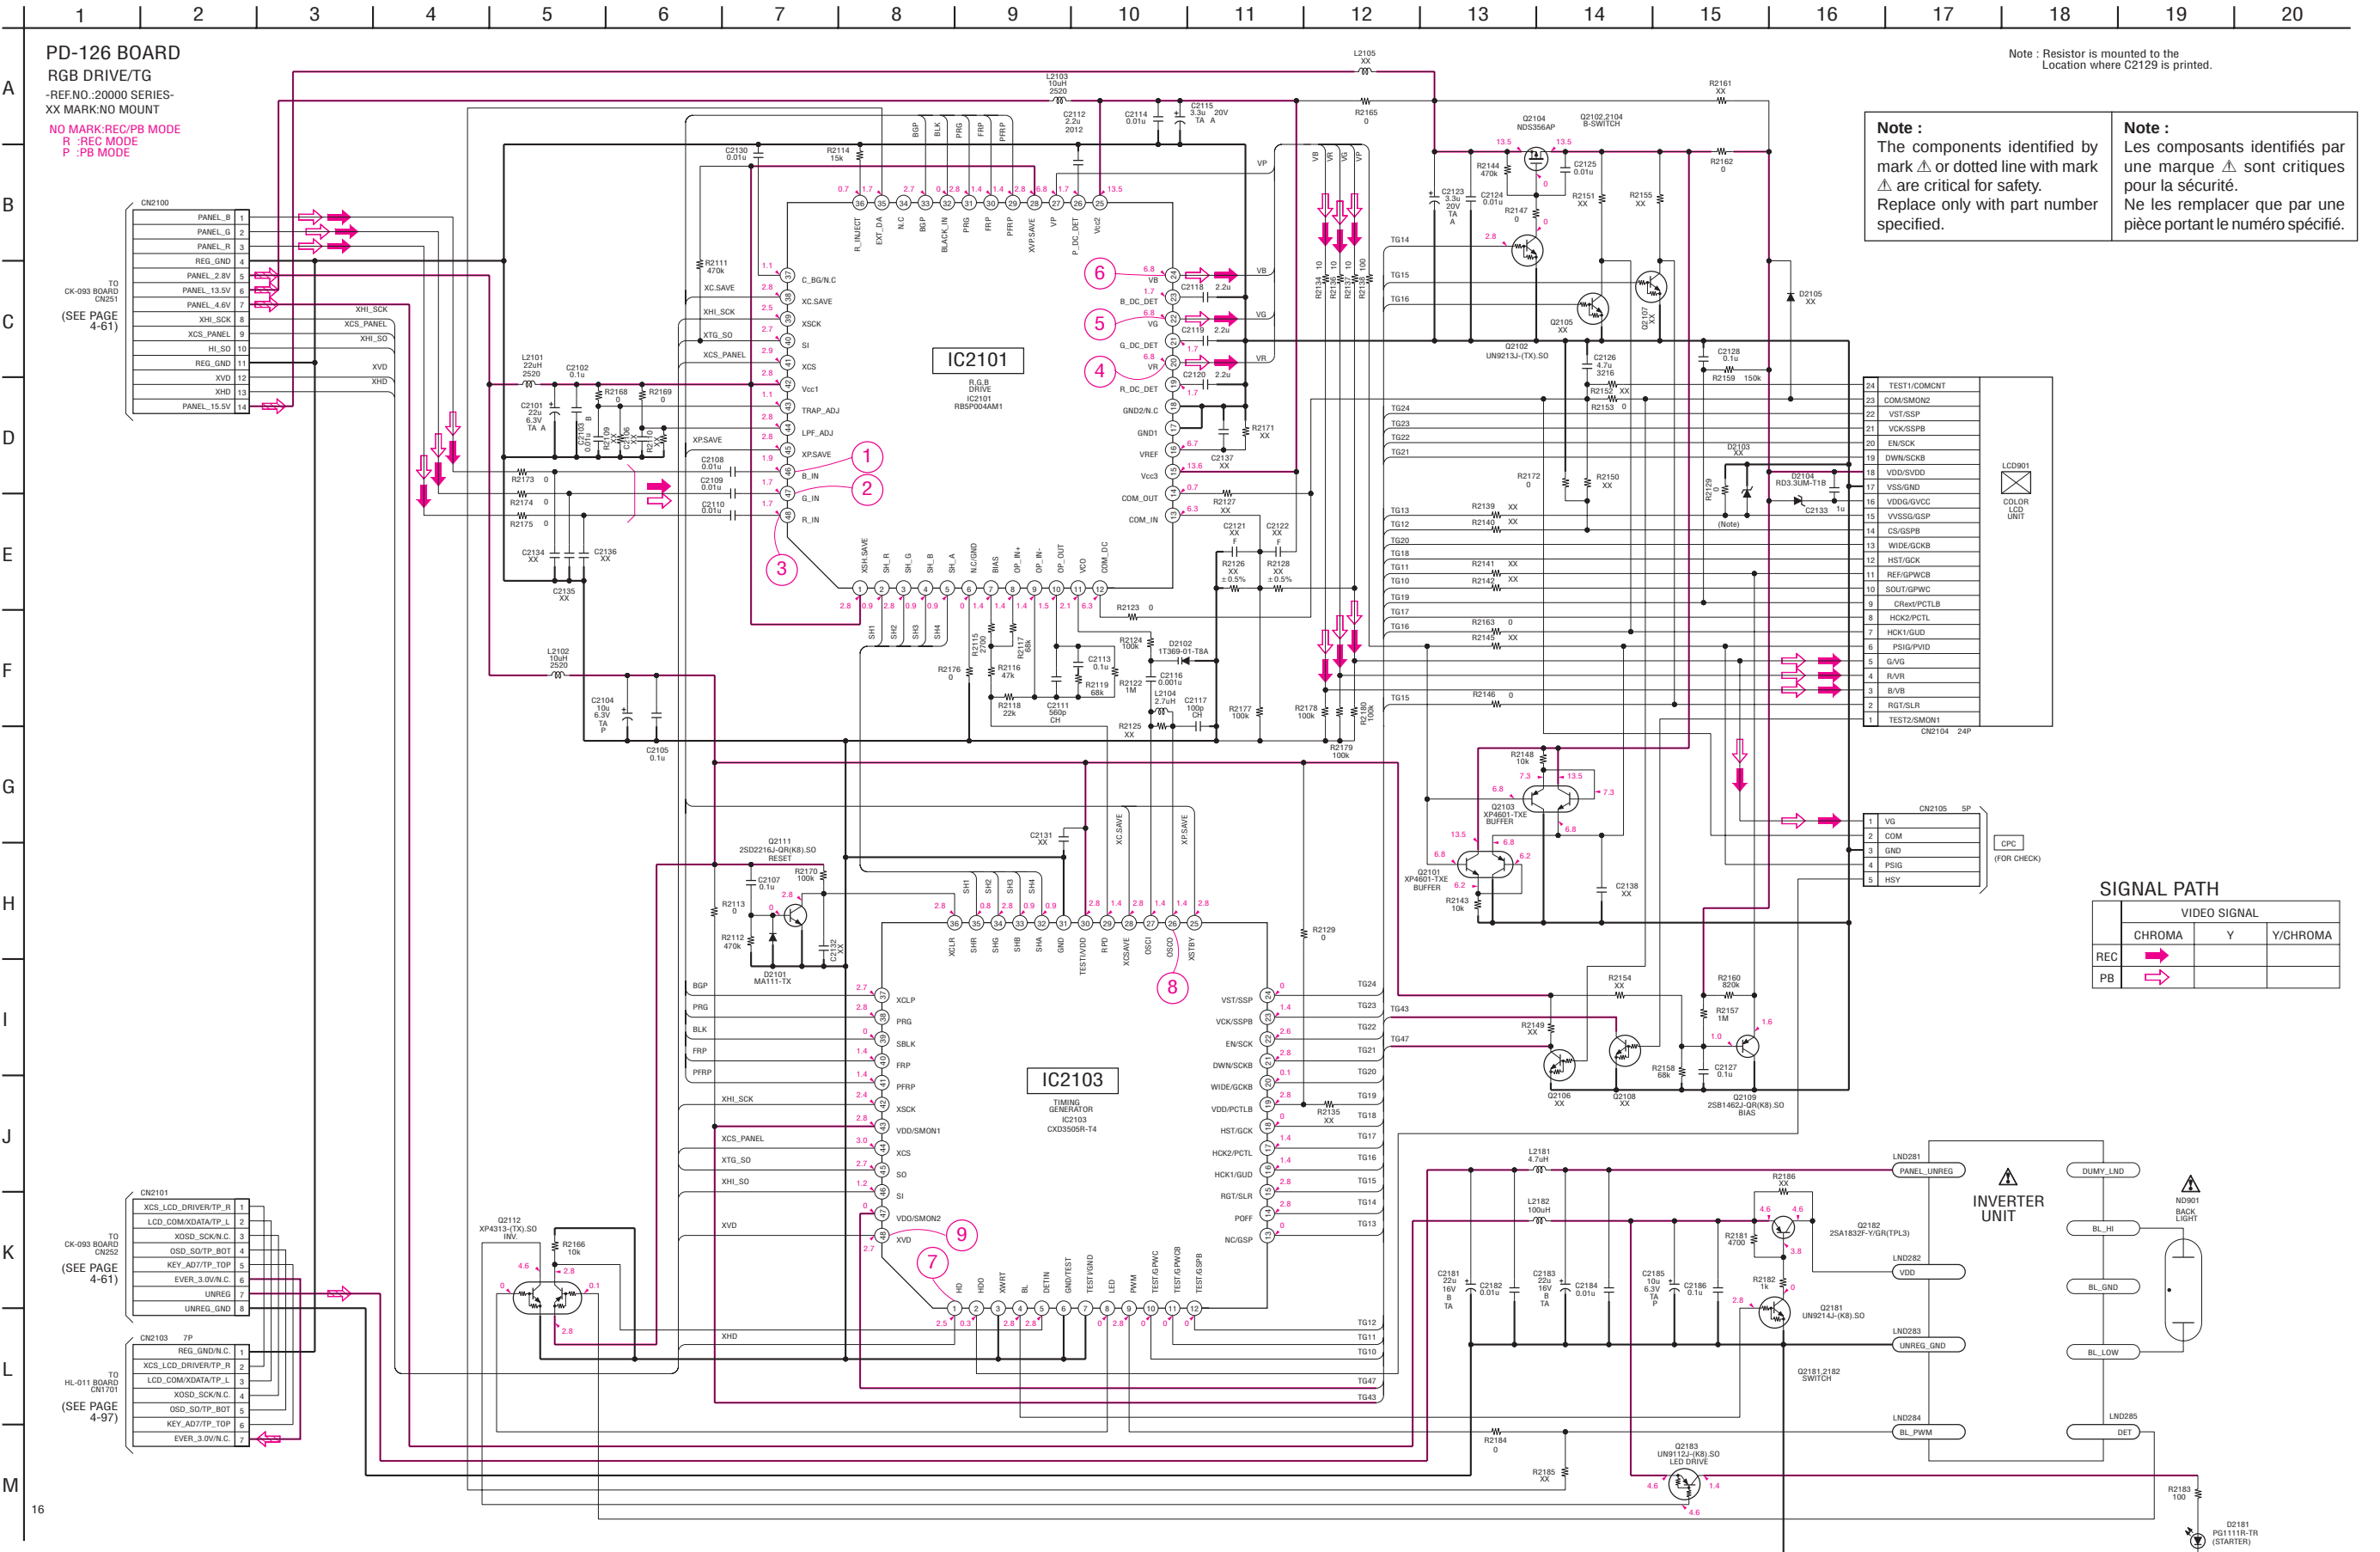


- Refer to page 4-75 for SE-108 printed wiring board.




For Schematic Diagram



- Refer to page 4-67 for printed wiring board.

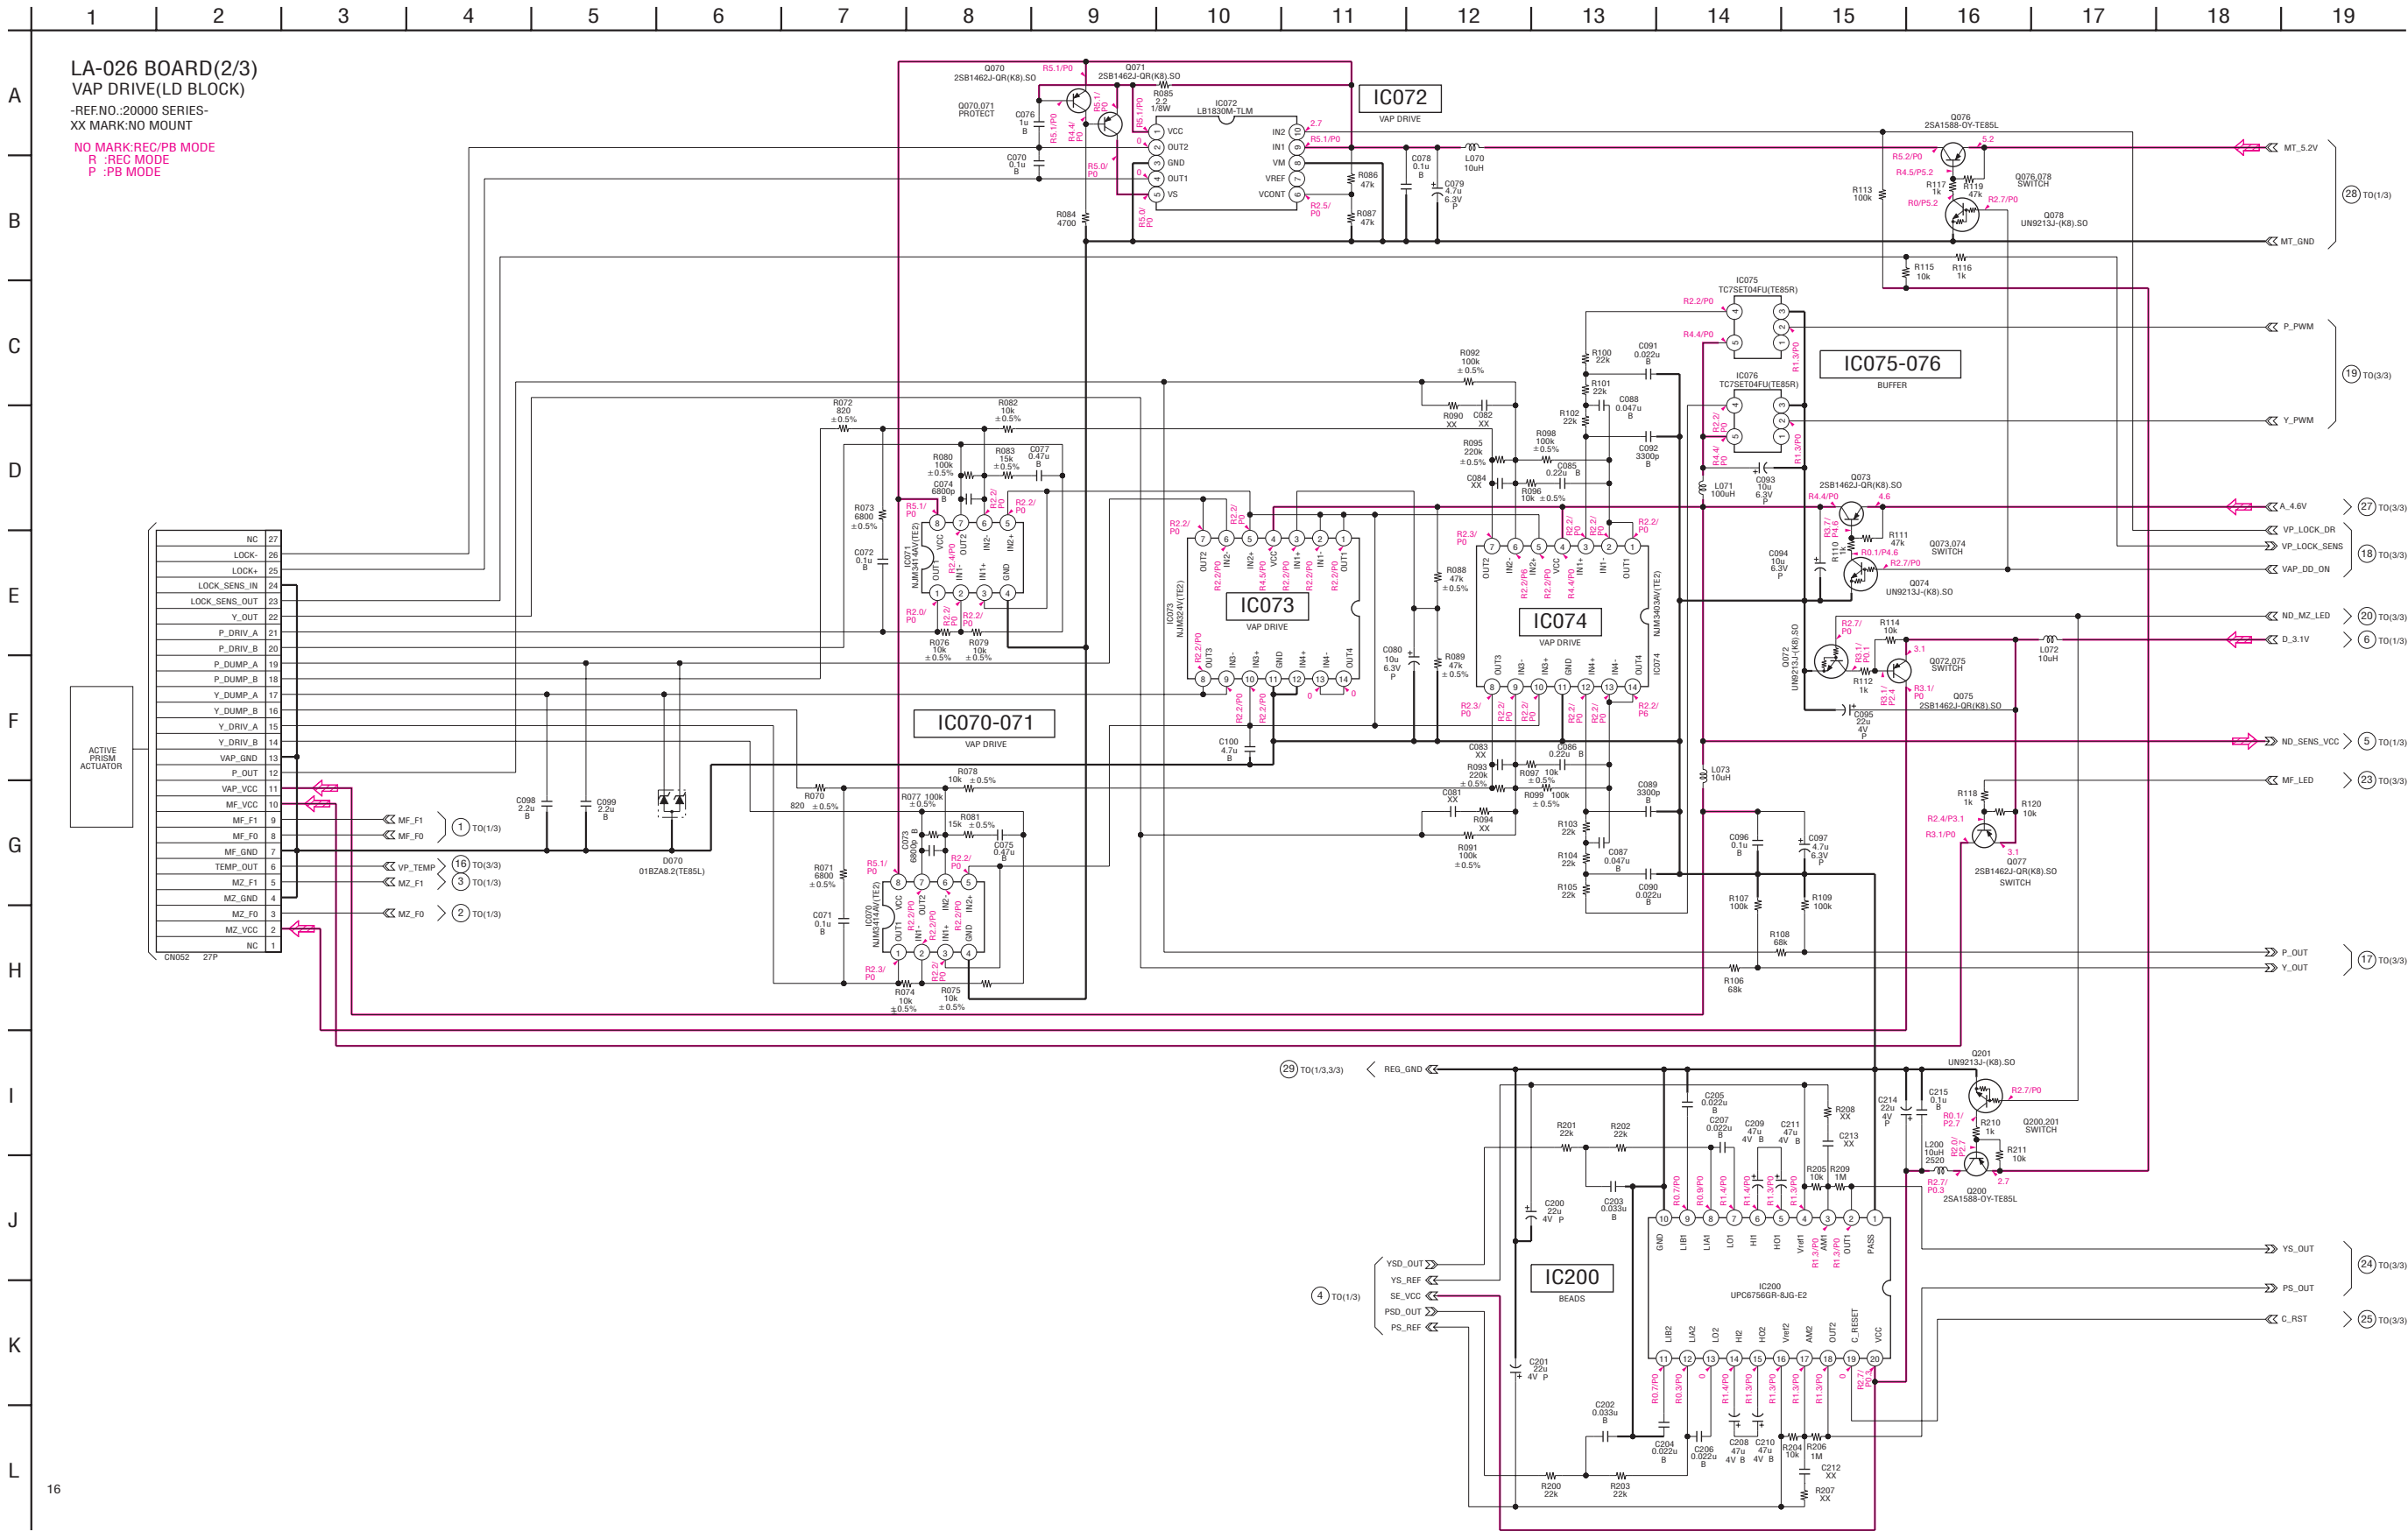


For Schematic Diagram

• Refer to page 4-67 for printed wiring board.

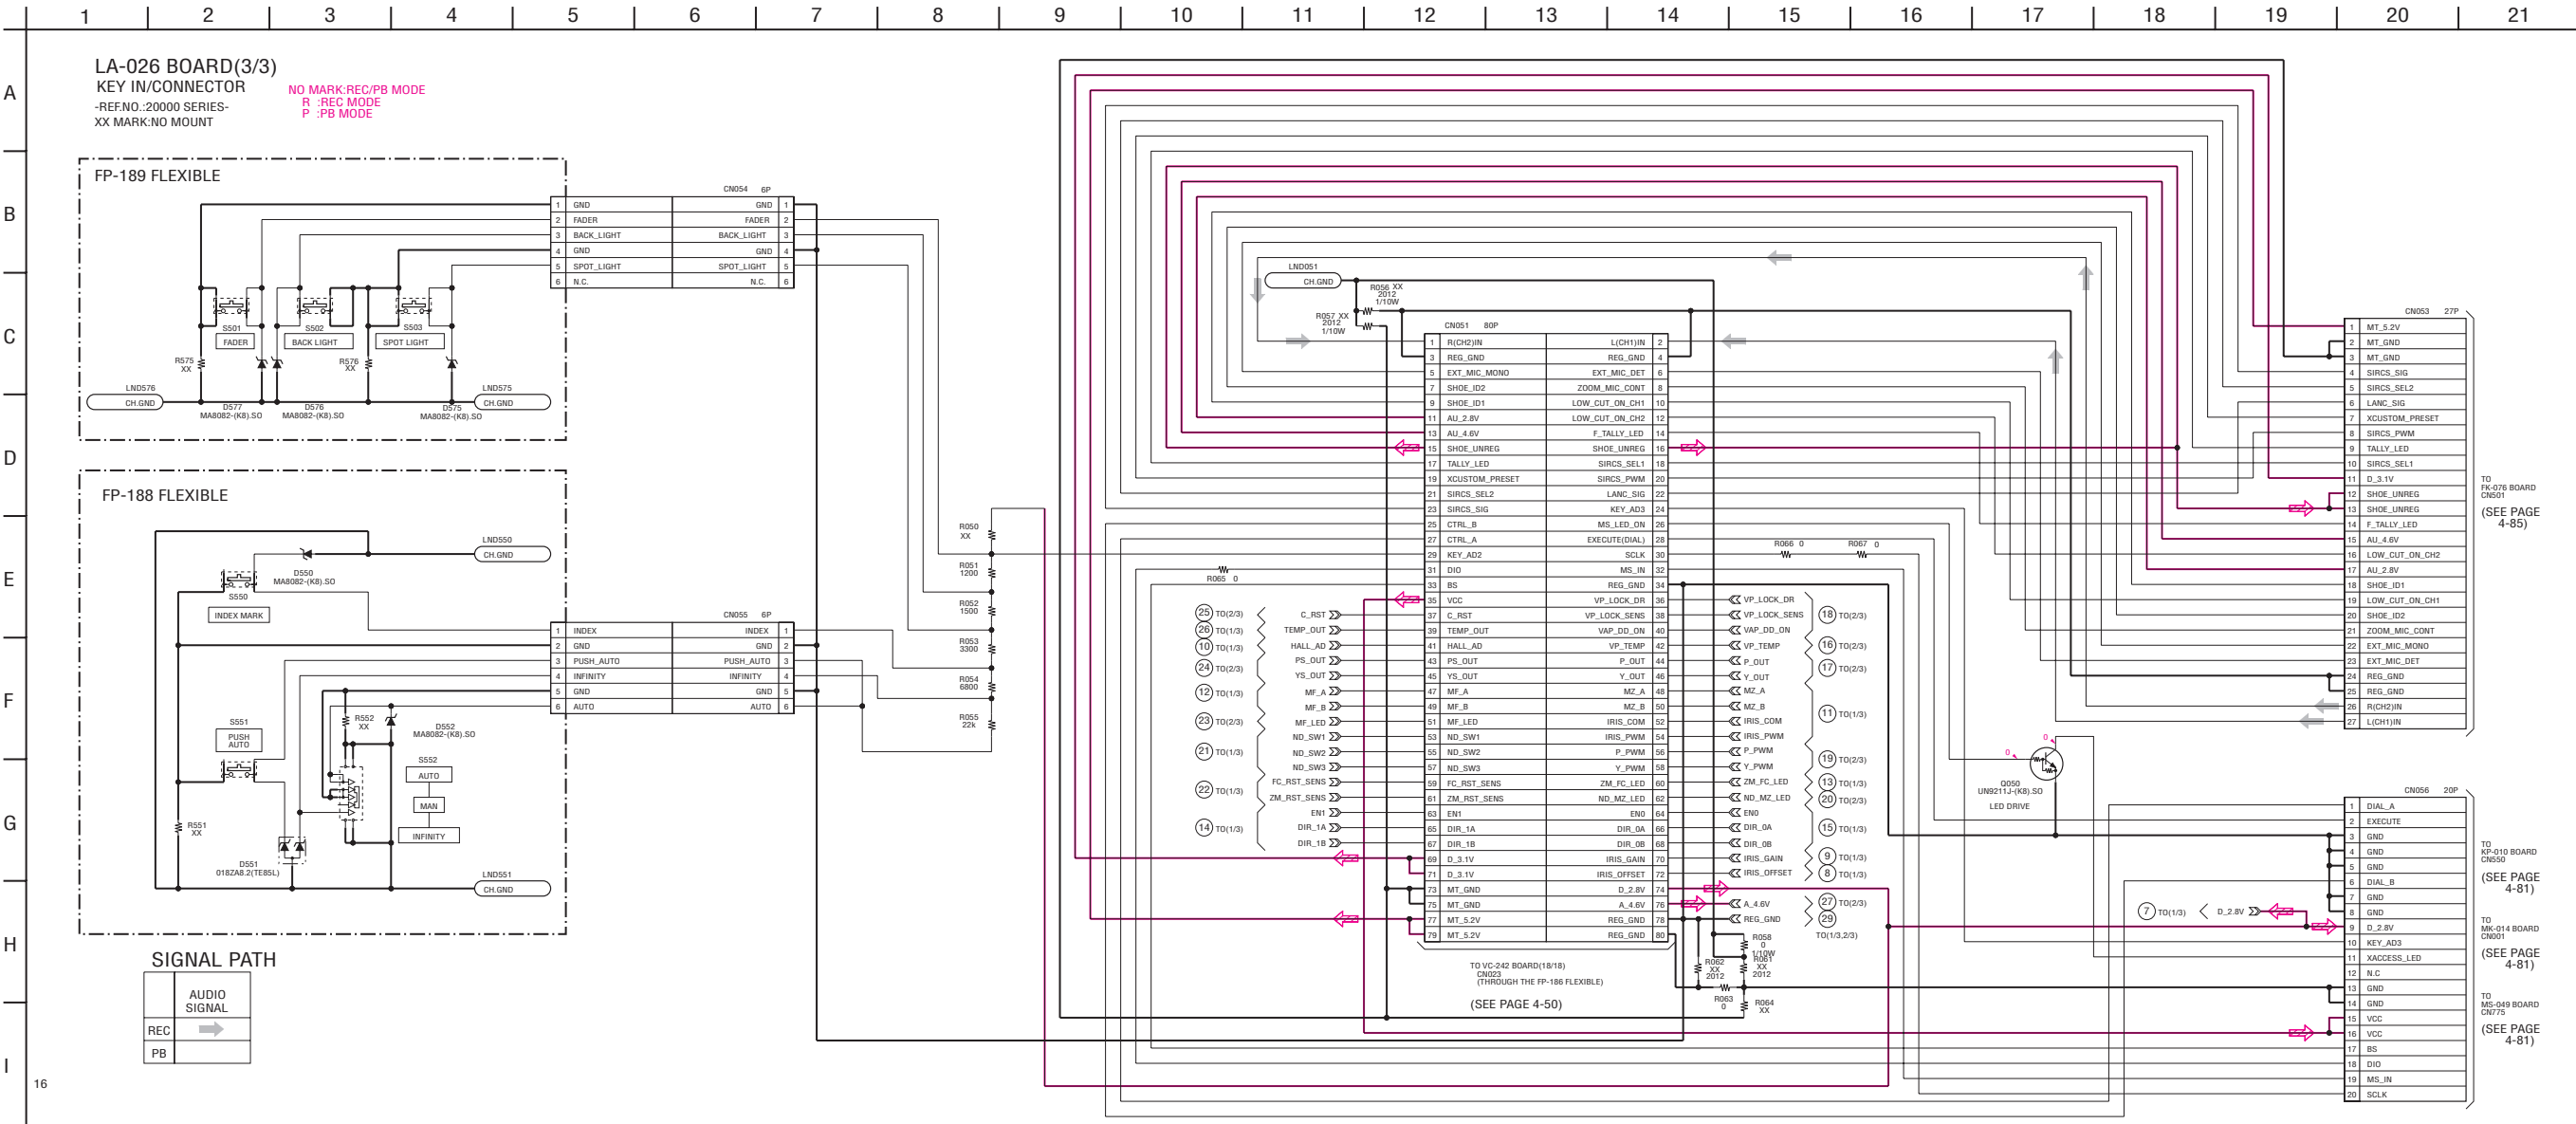


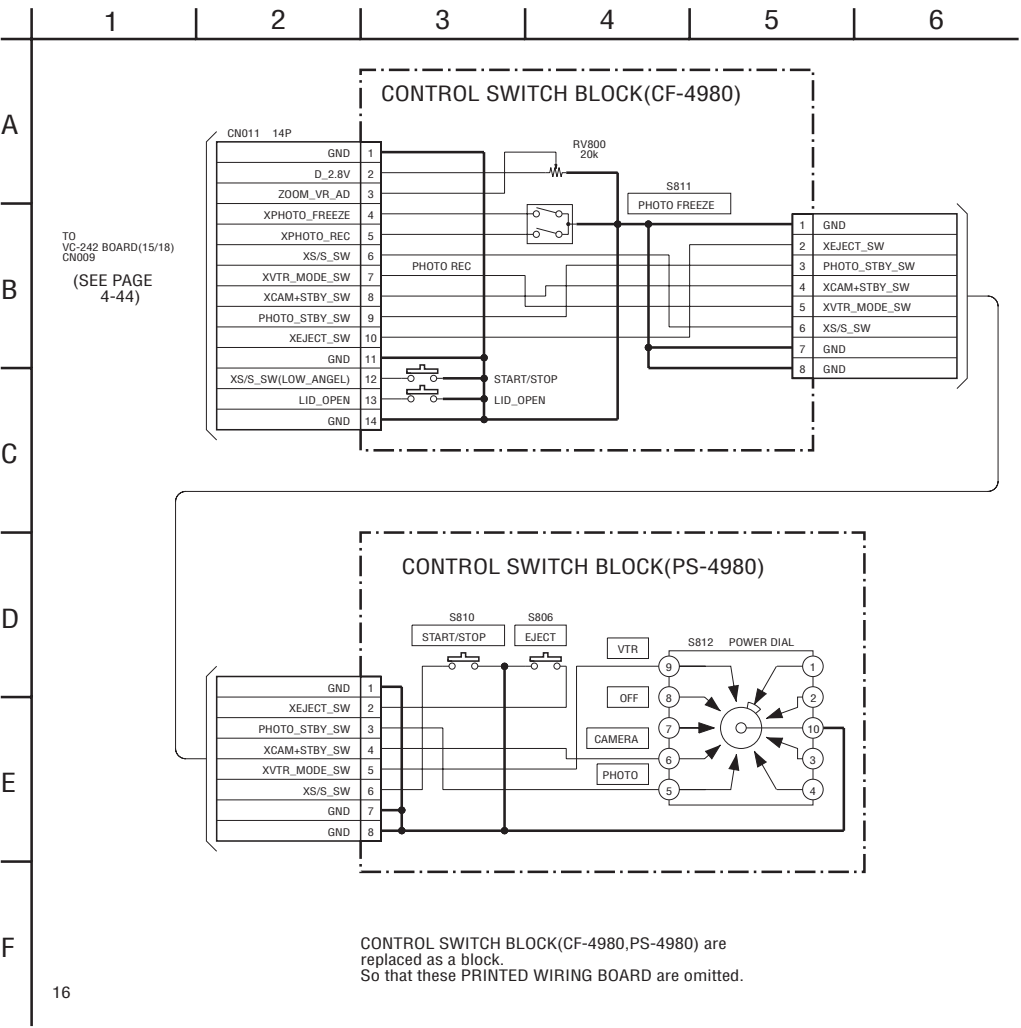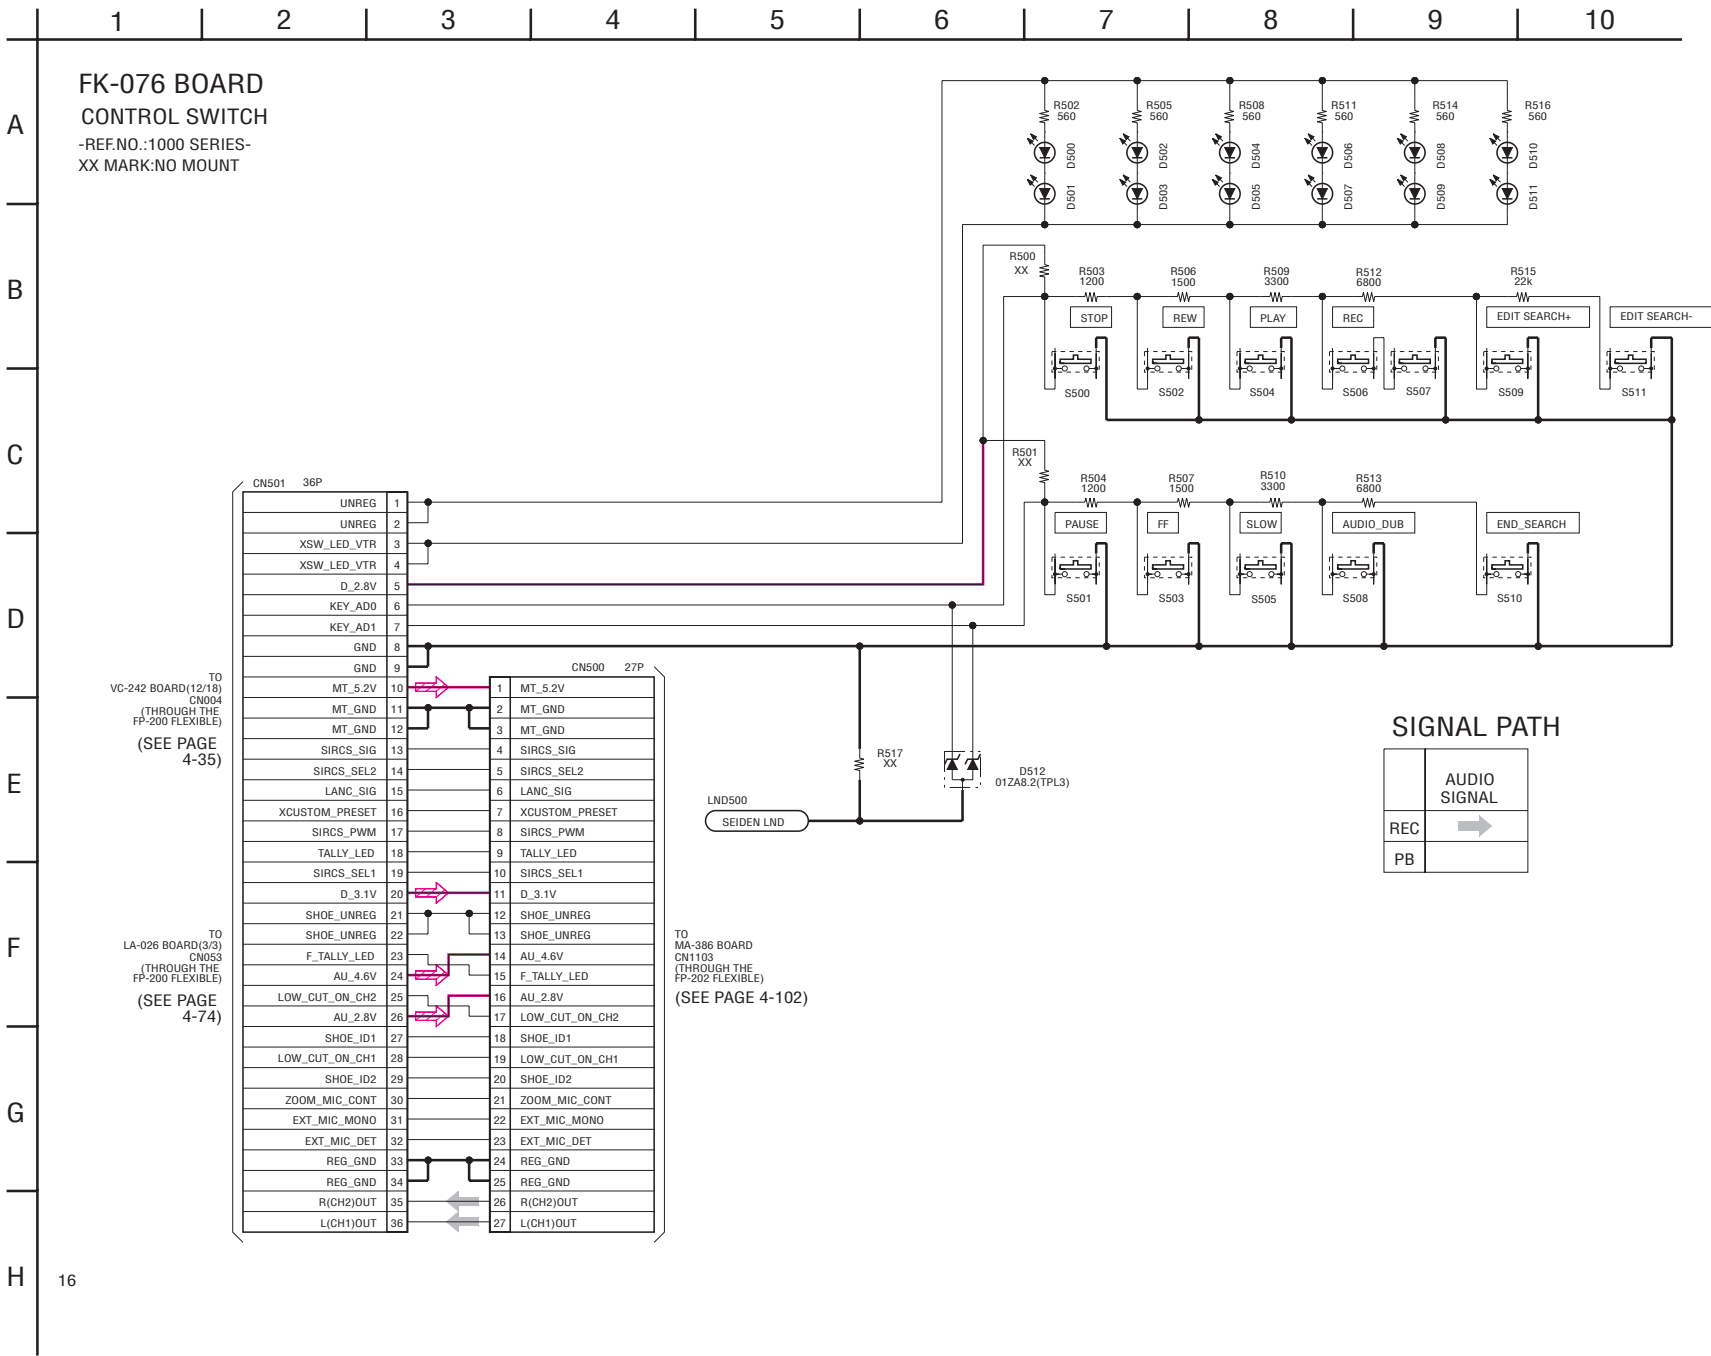

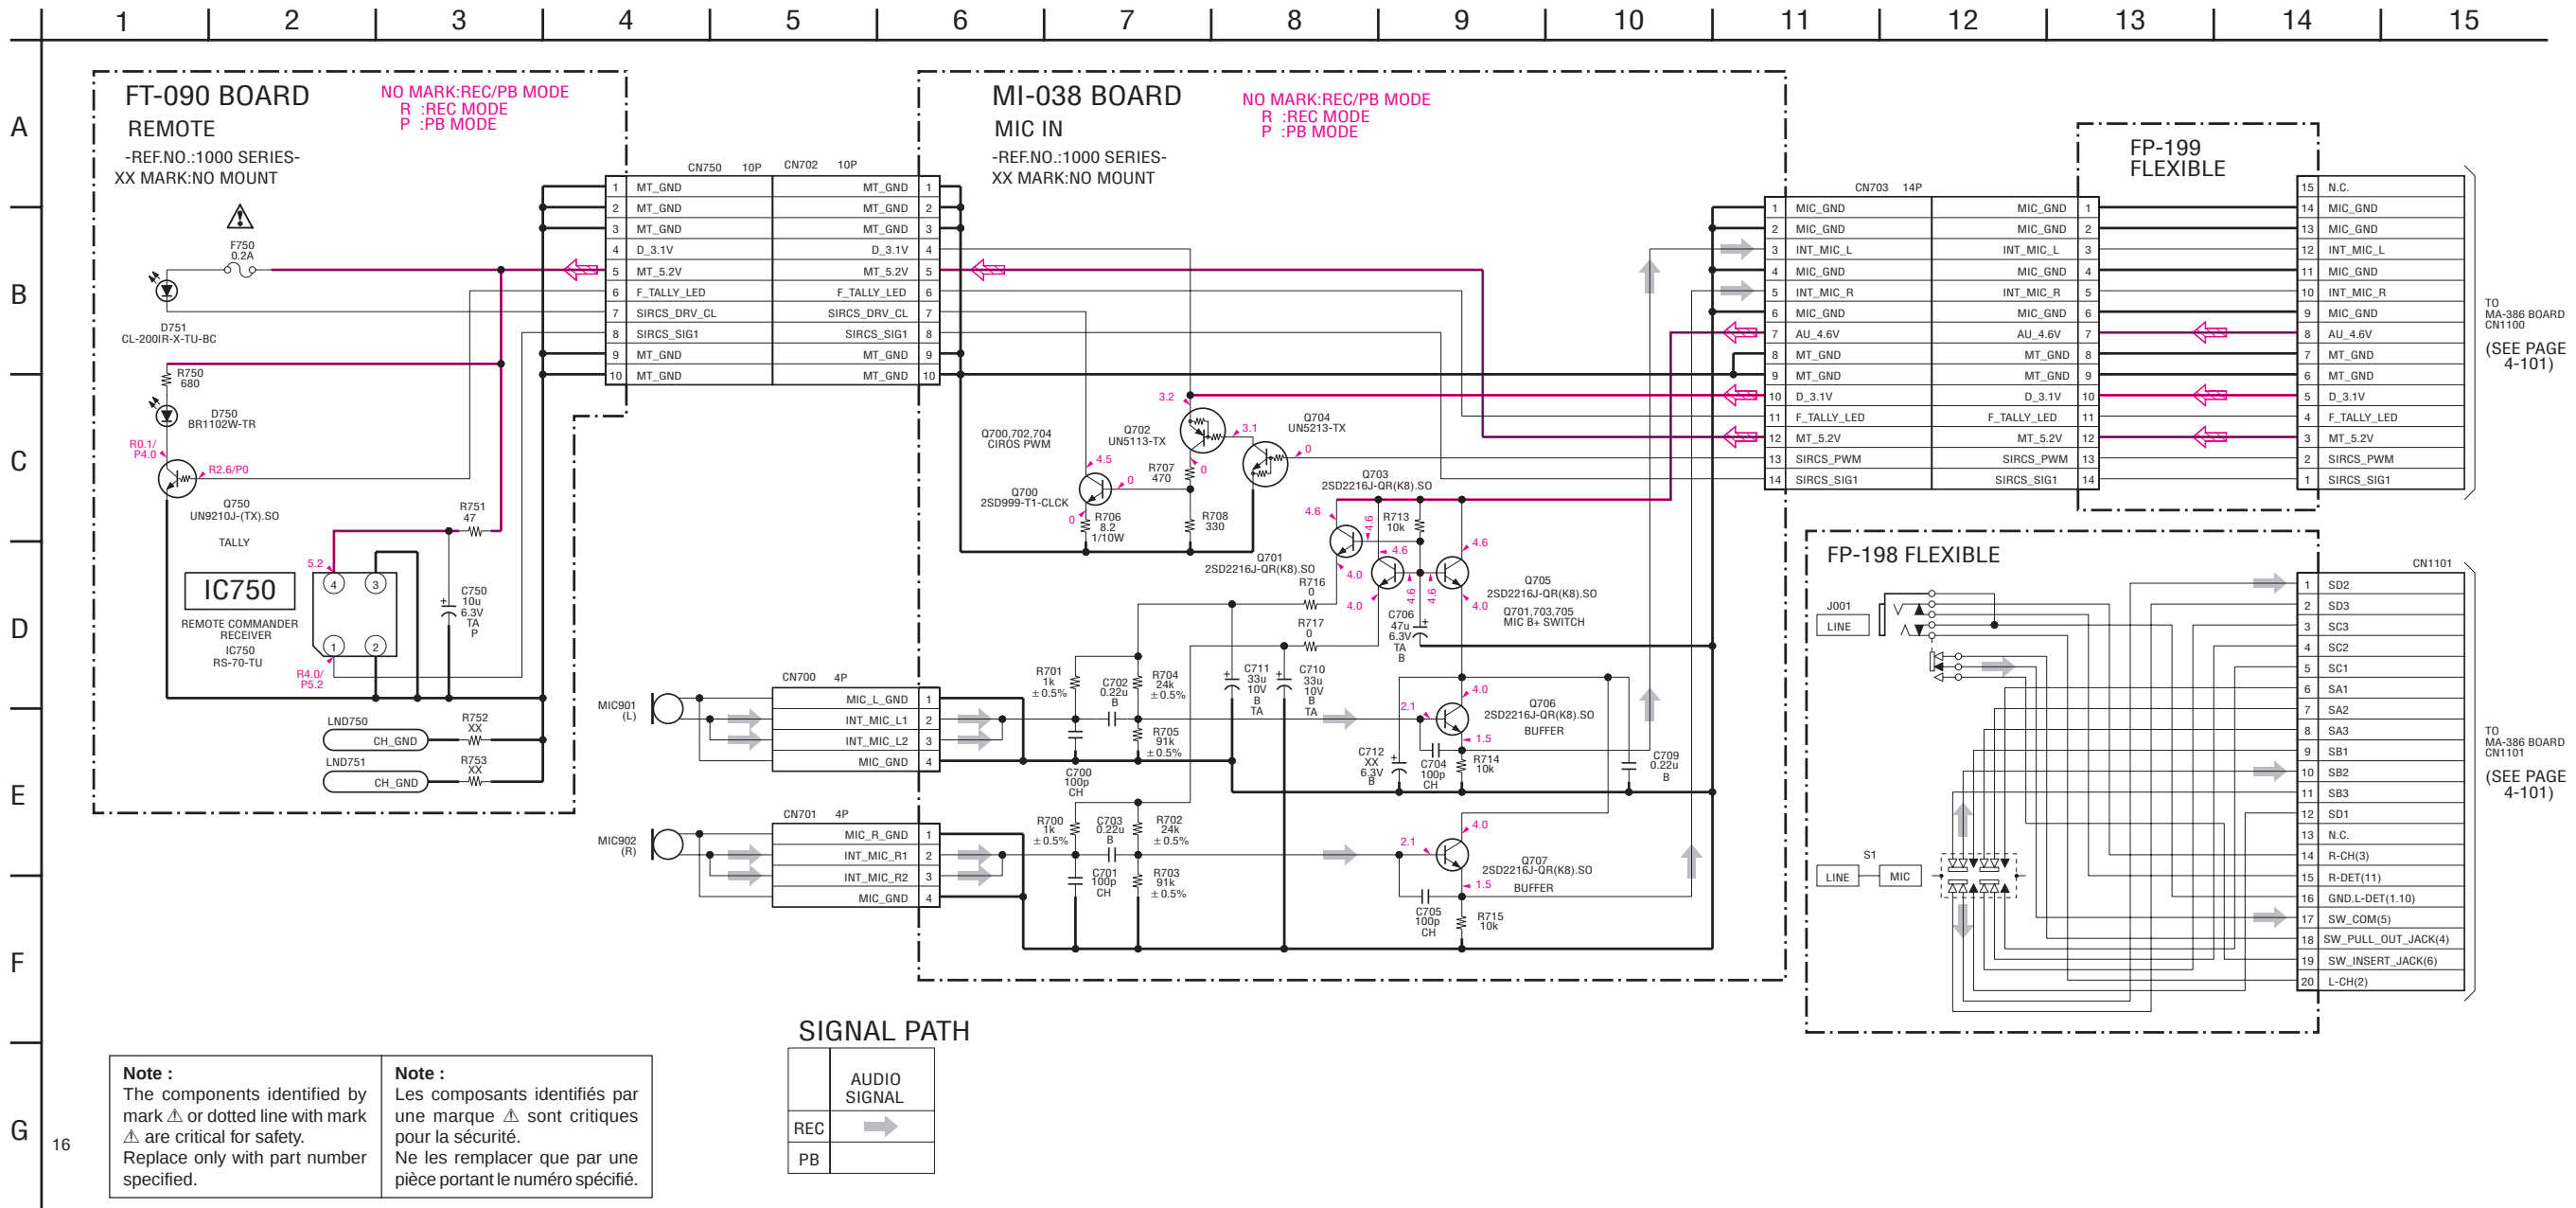



For Schematic Diagram

• Refer to page 4-109 for waveform.

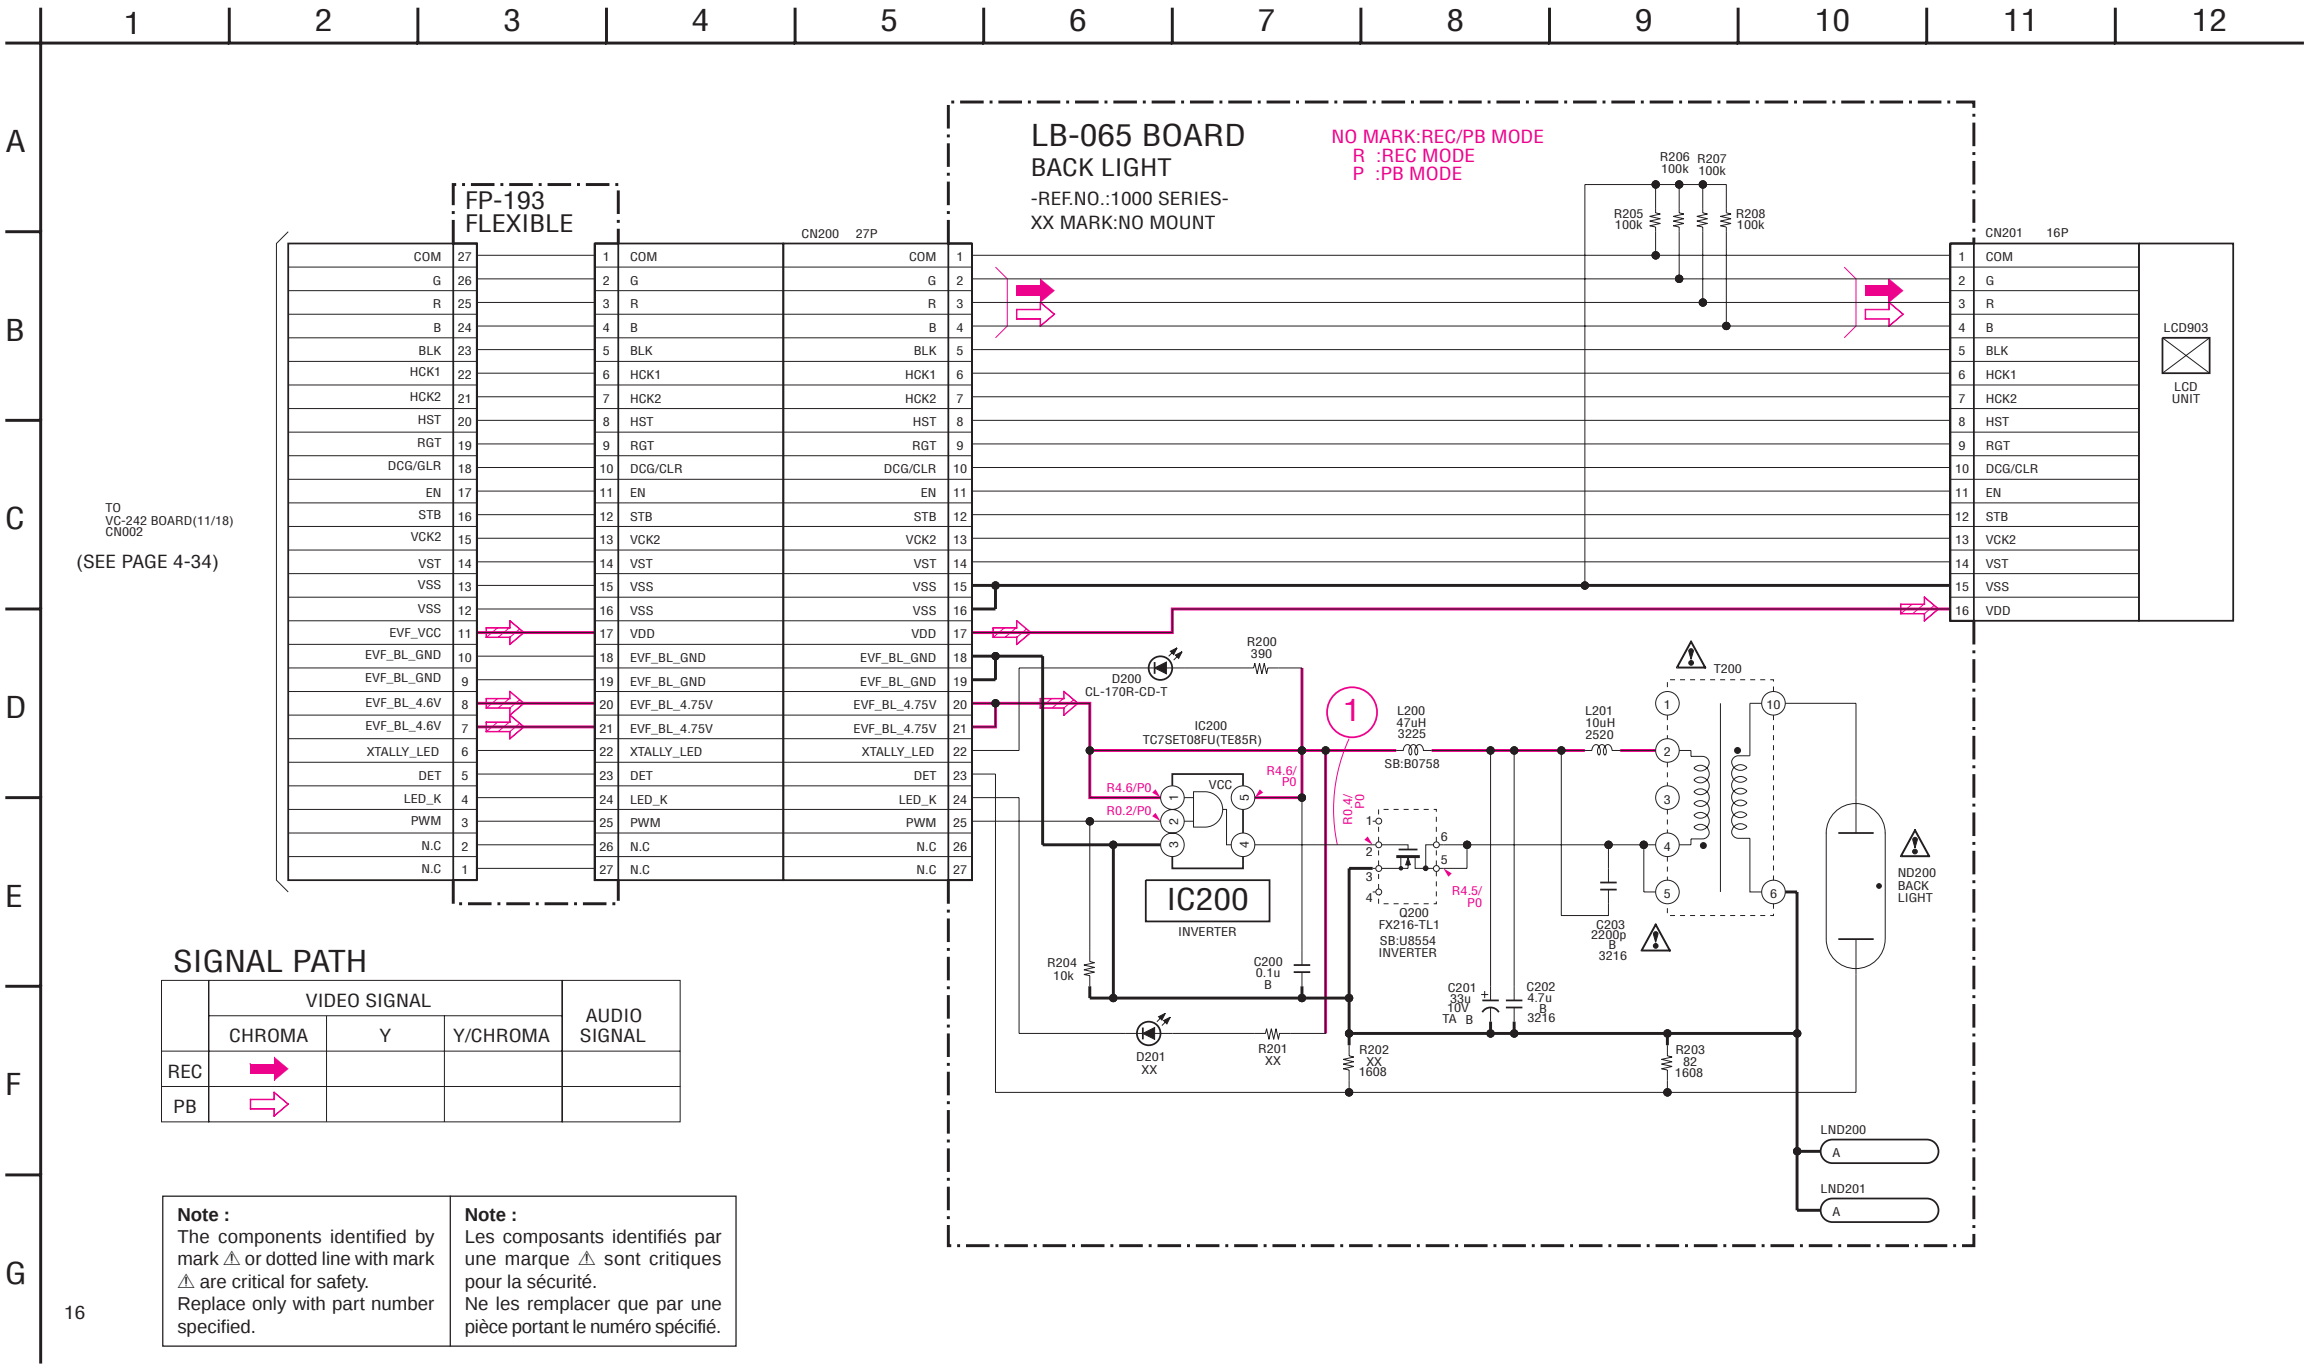

For Schematic Diagram
• Refer to page 4-110 for waveform.

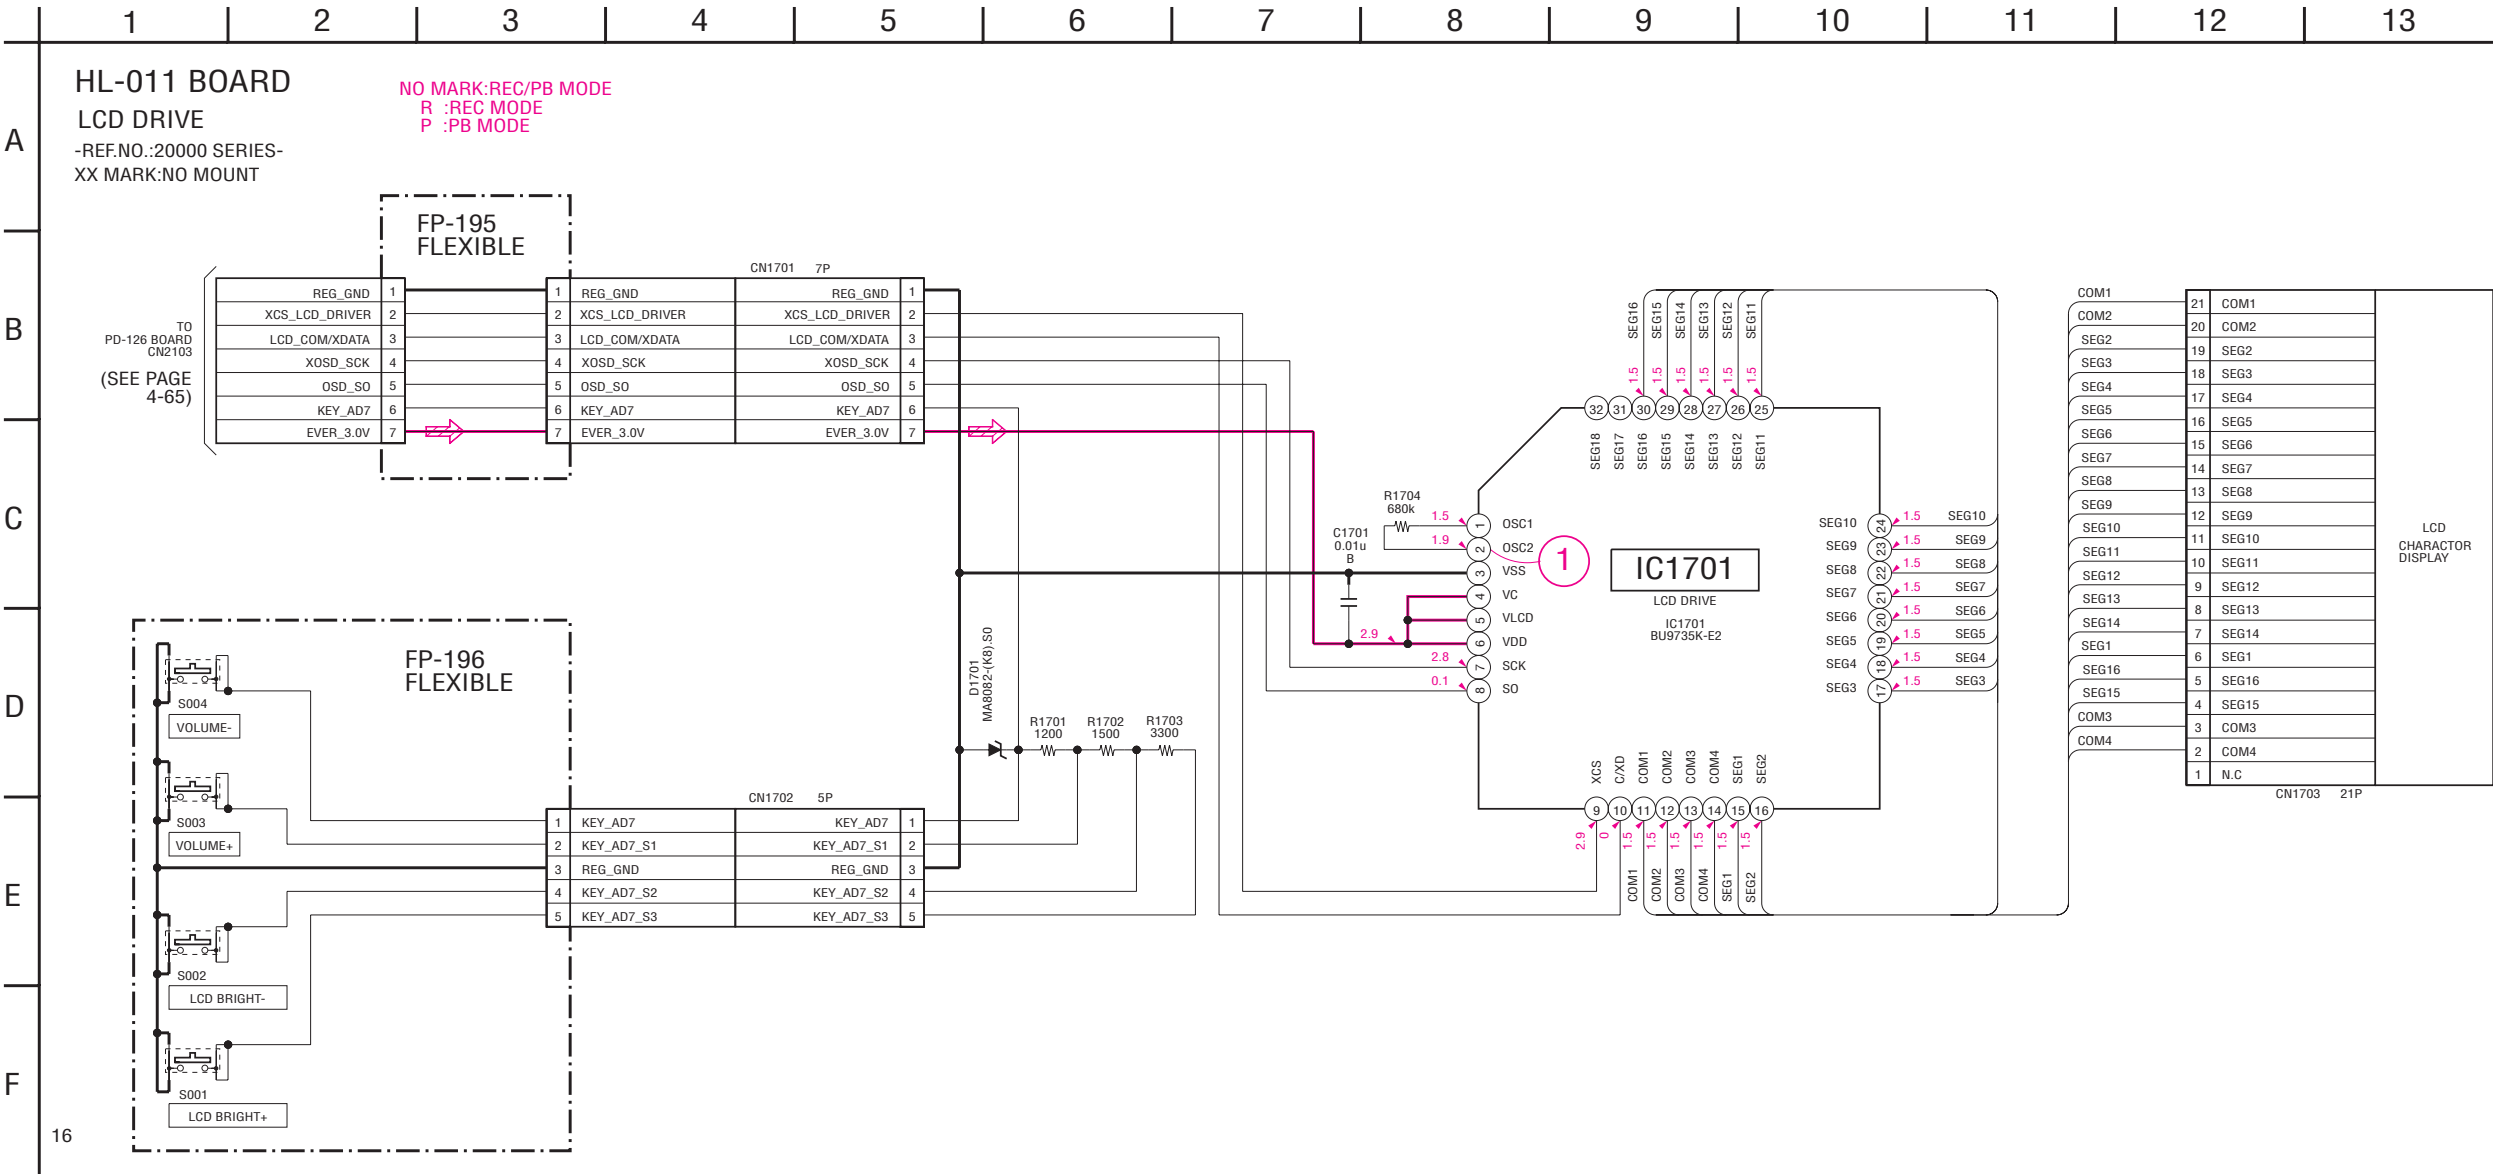

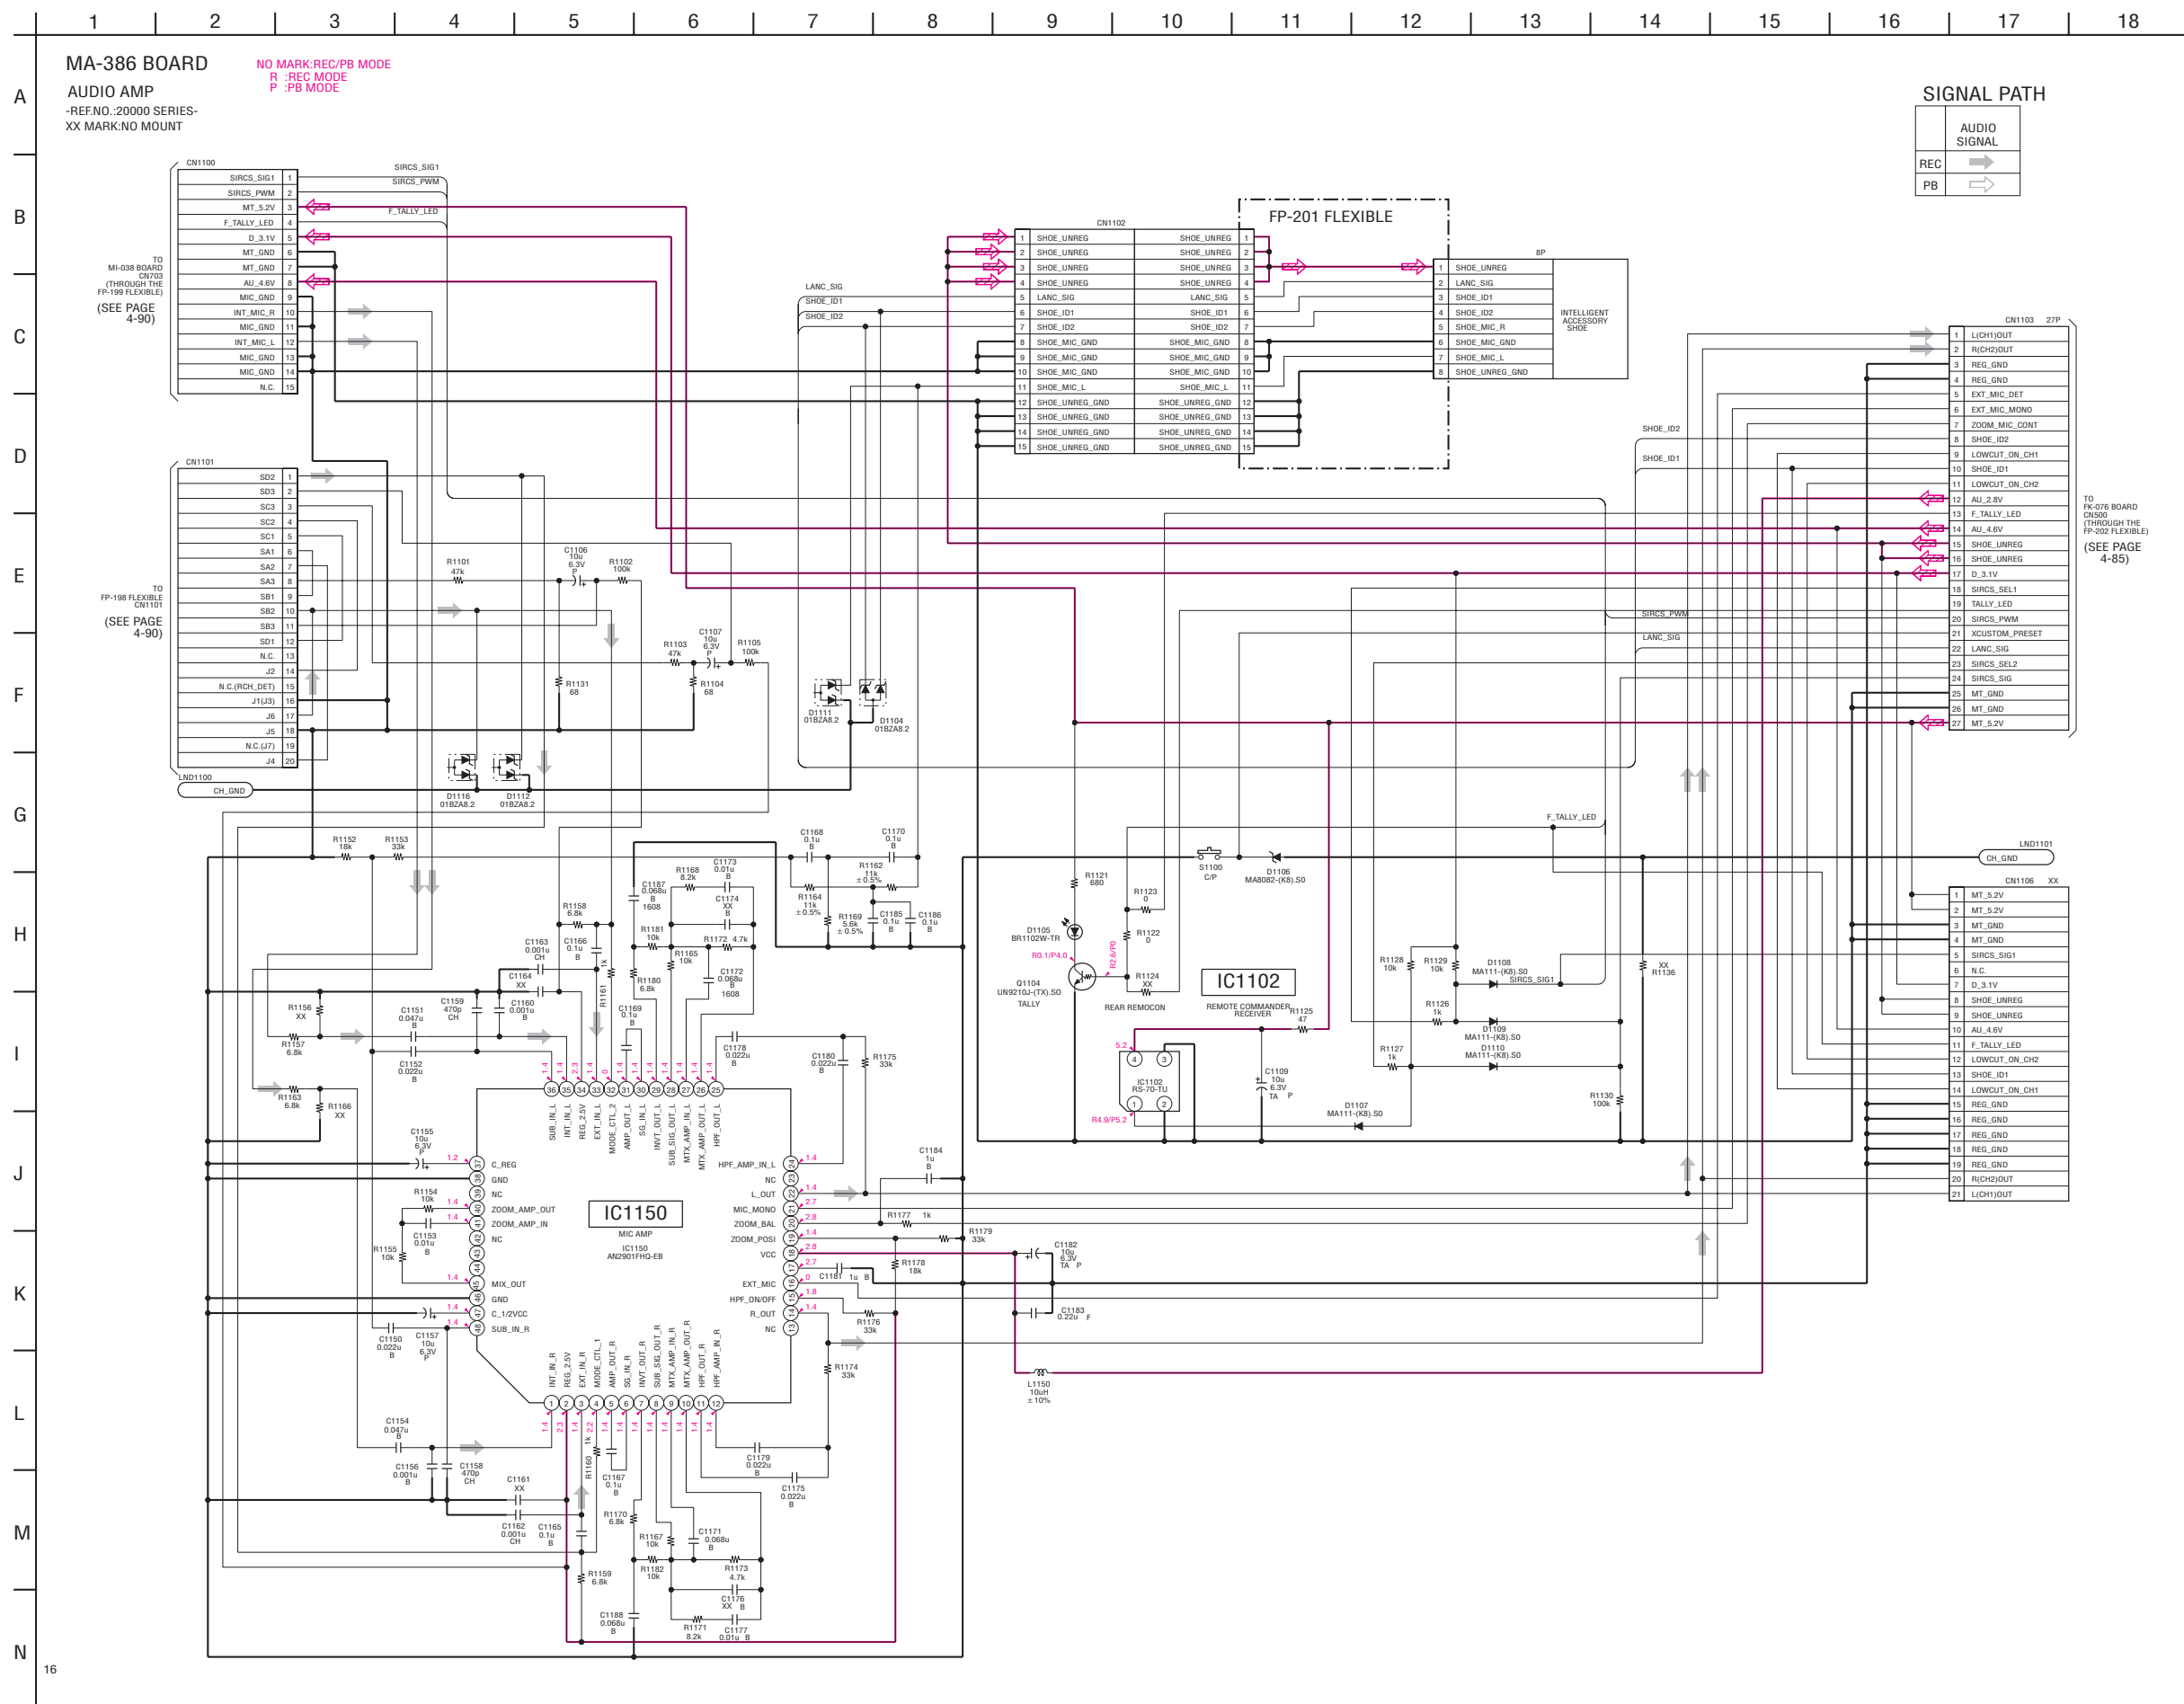


- Refer to page 4-110 for waveforms.



- Refer to page 4-103 for printed wiring board.


NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE

	REC	REC/PB	PB
Drum speed servo			
Drum phase servo			
Drum servo (speed and phase)			
Capstan speed servo			
Capstan phase servo			
Capstan servo (speed and phase)			

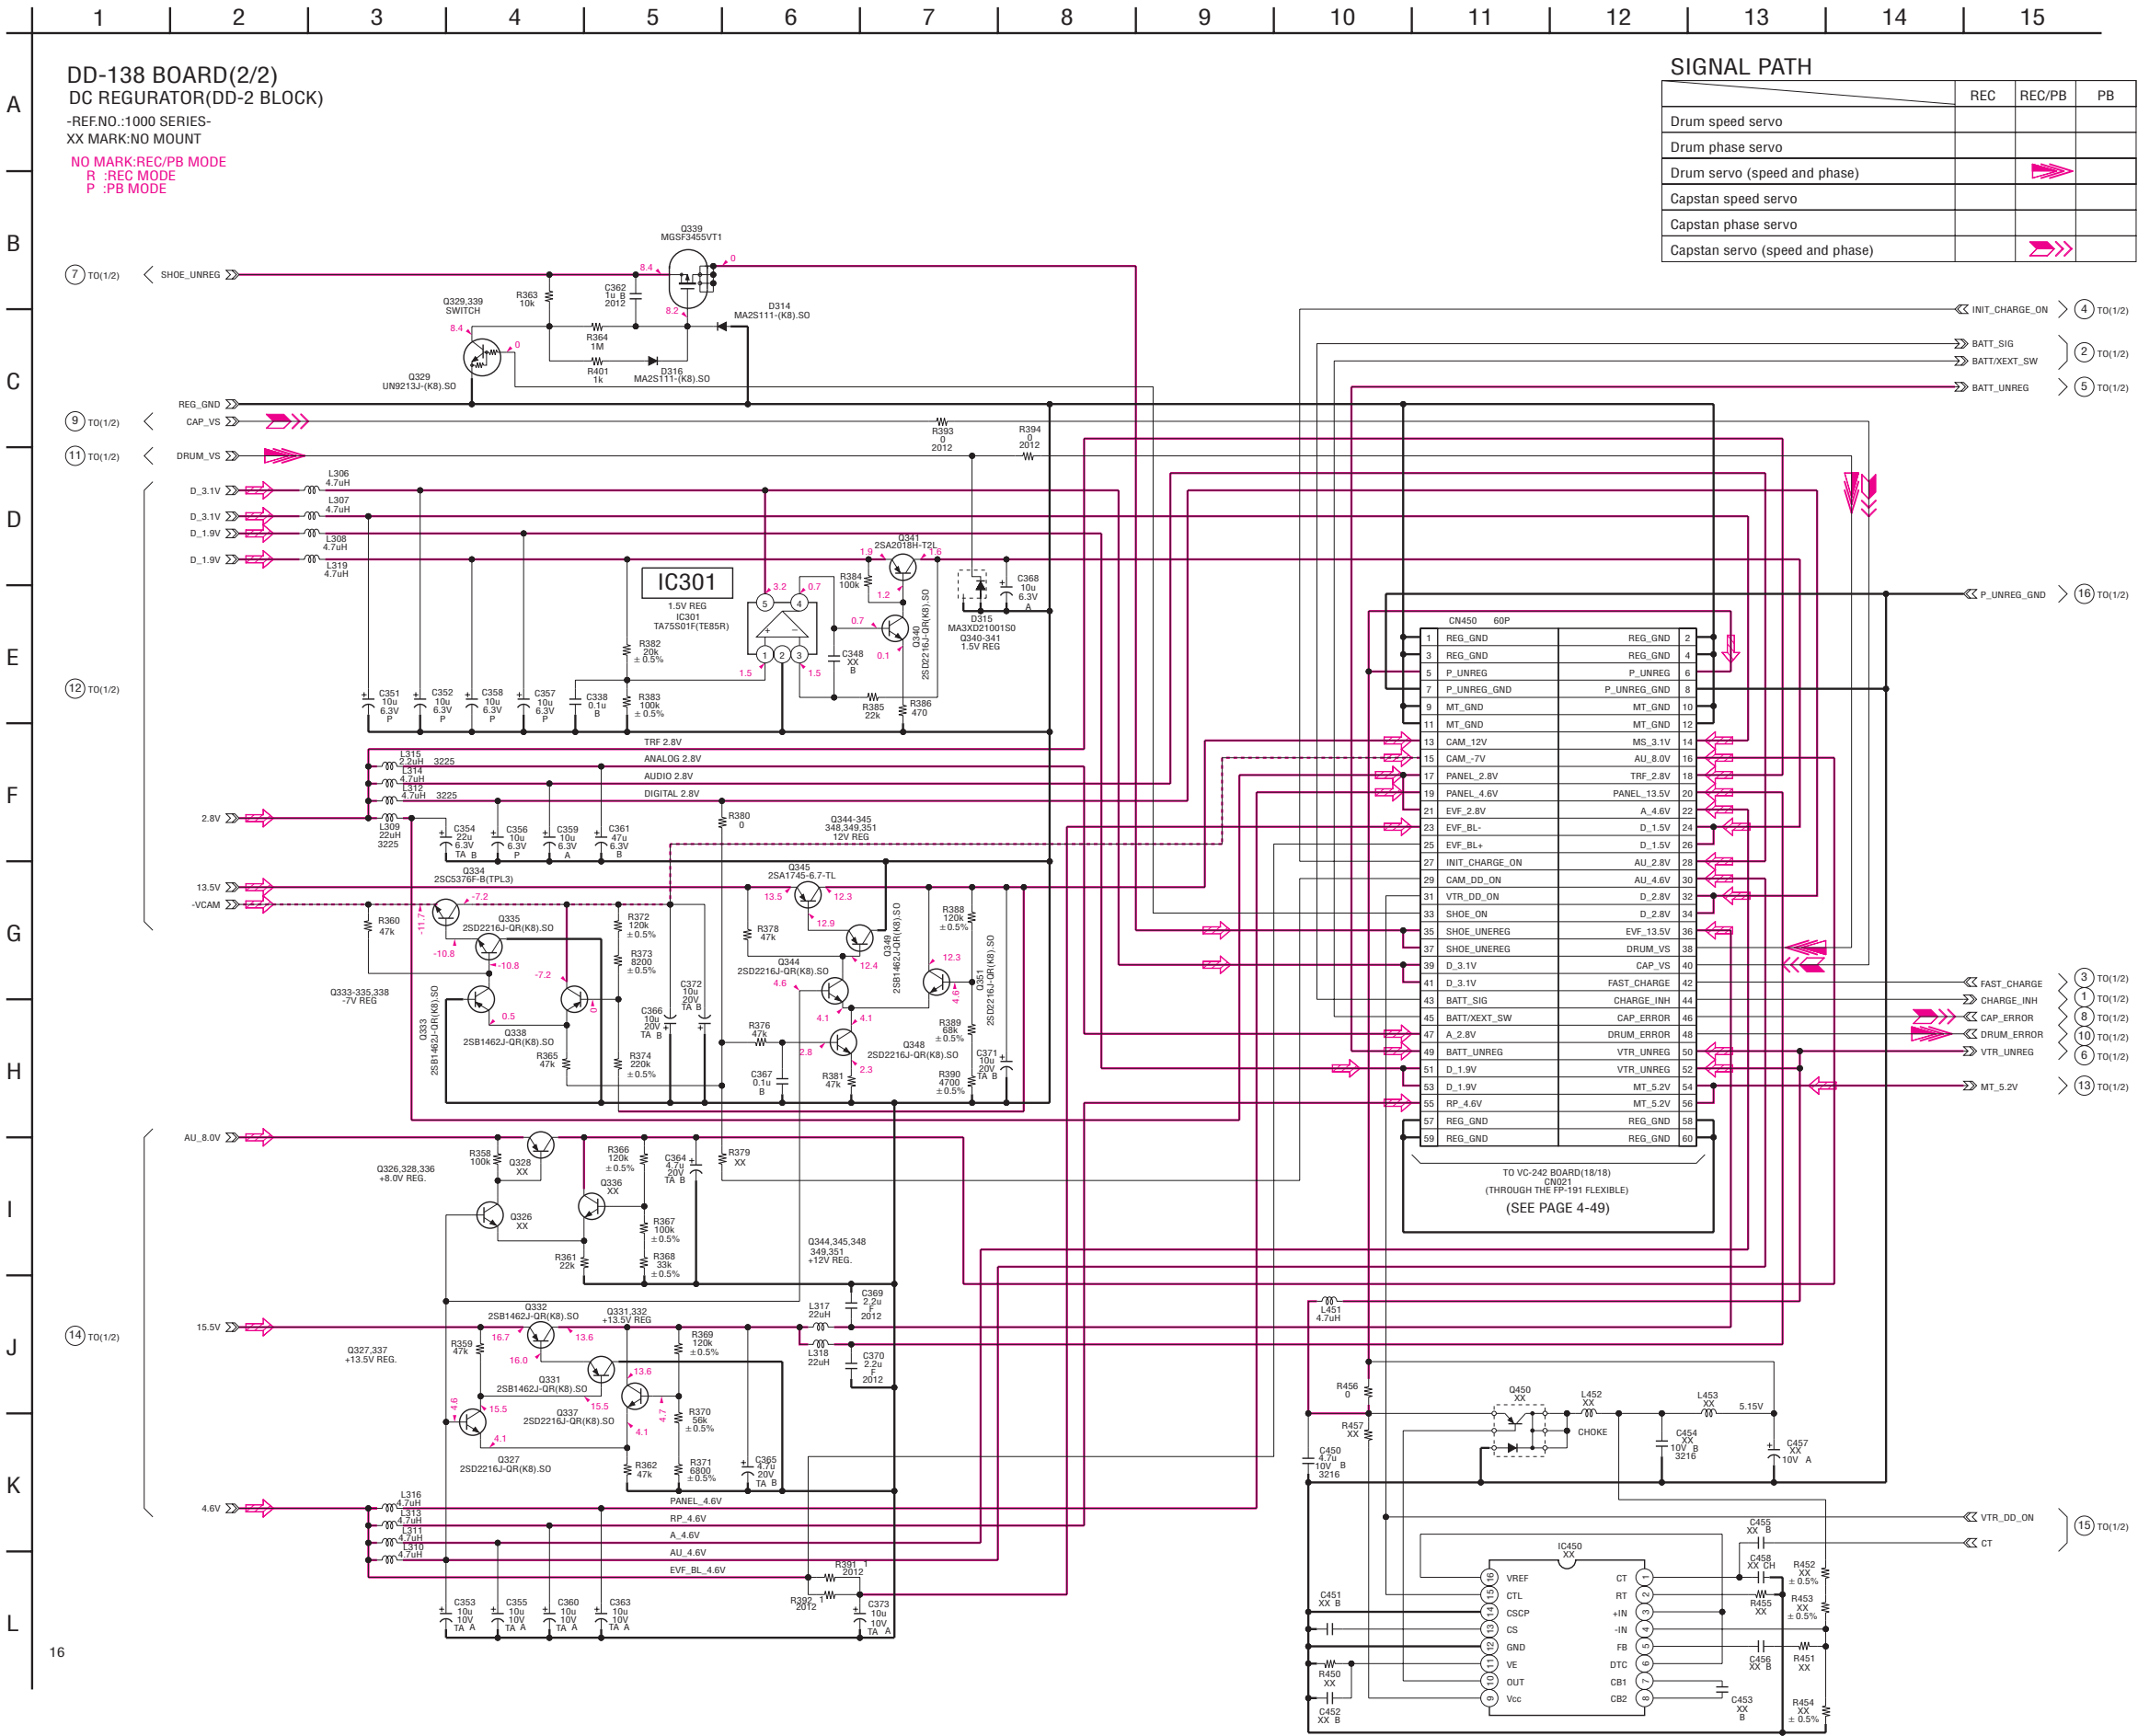


4-3. WAVEFORMS


CD-254 BOARD
REC

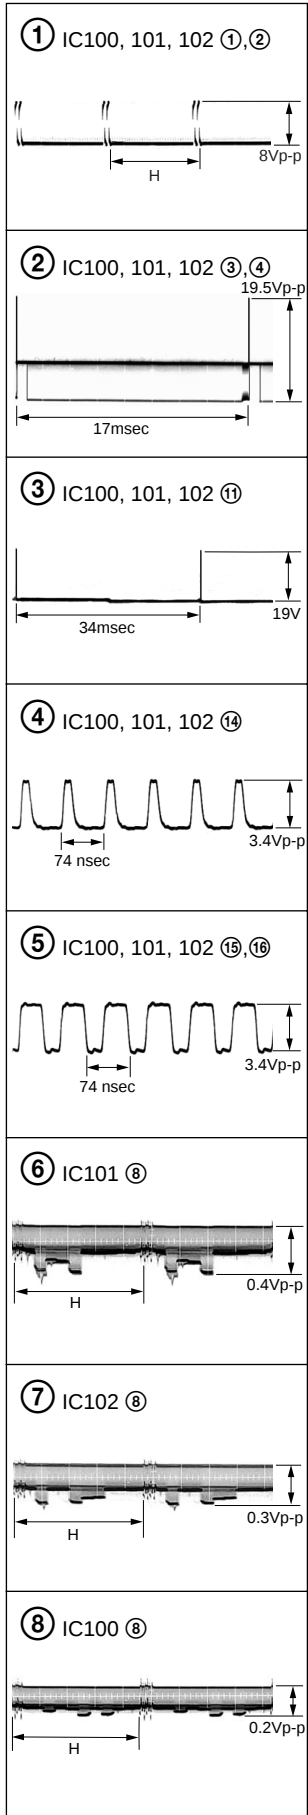


PD-126 BOARD
REC/PB

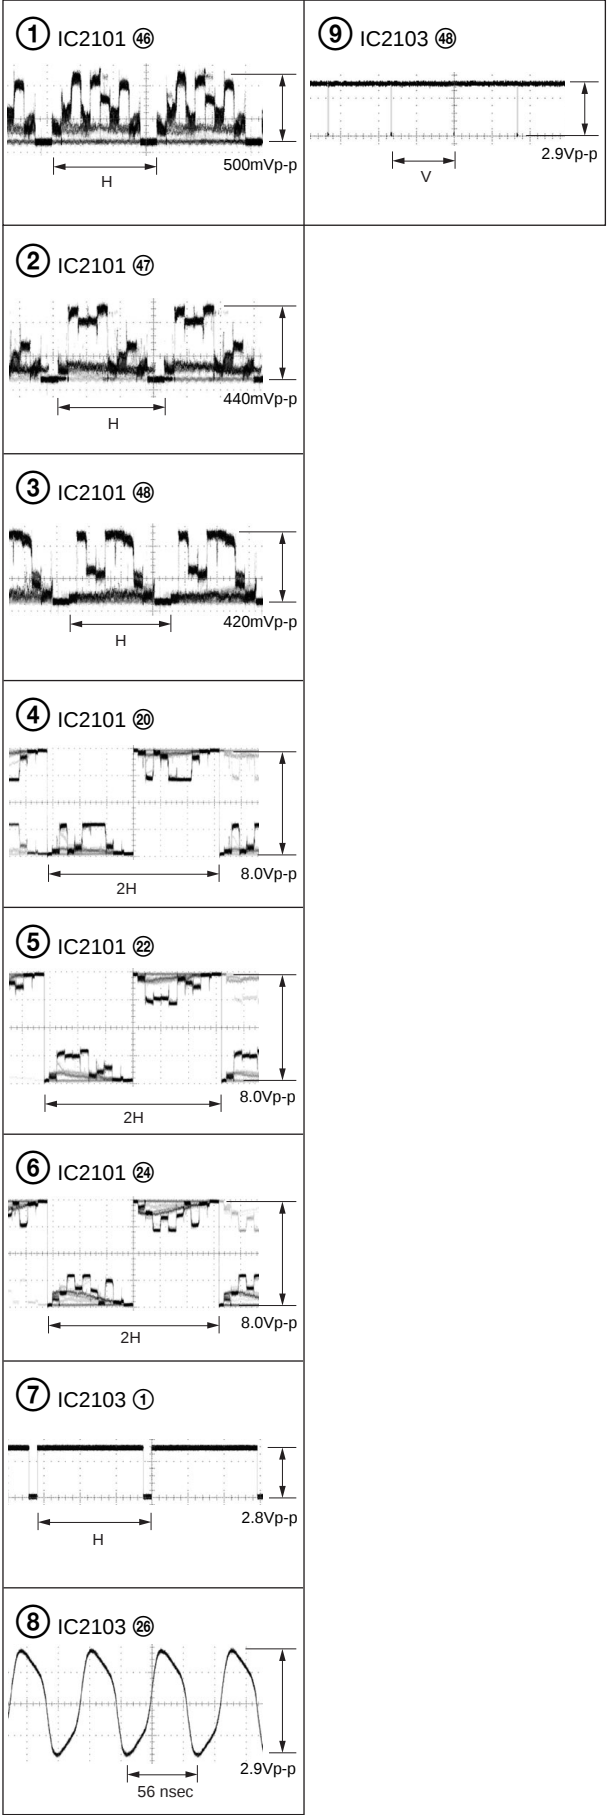


LB-065 BOARD
REC/PB

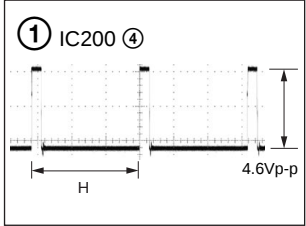

HL-011 BOARD
REC/PB

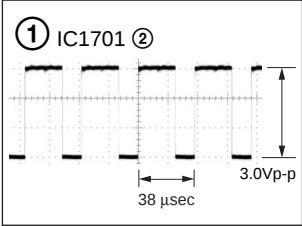

DD-138 BOARD (1/2)
CAMERA REC

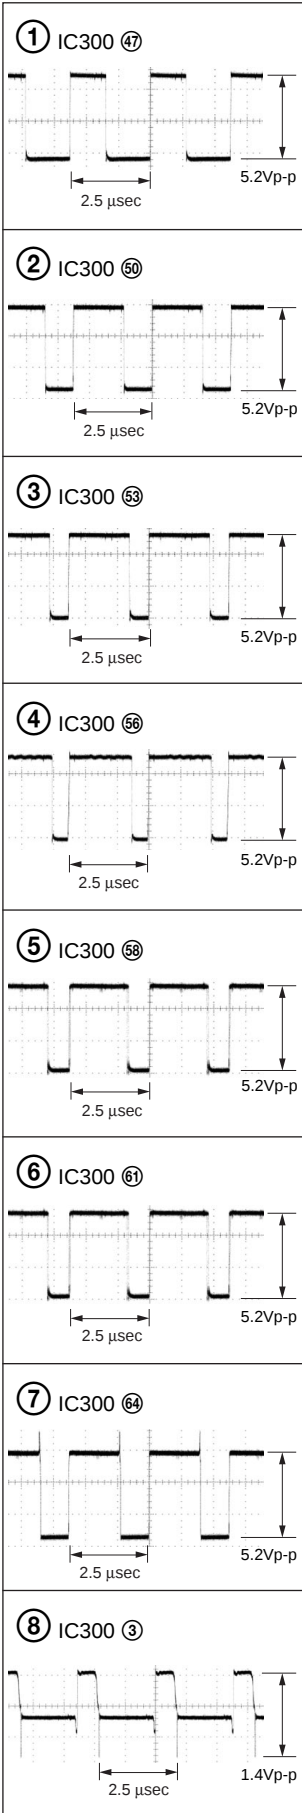

SECTION 5 ADJUSTMENTS


1. Before starting adjustment

EVR Data Re-writing Procedure When Replacing Board

The data that is stored in the repair board, is not necessarily correct.
Perform either procedure 1 or procedure 2 or procedure 3 when replacing board.


Procedure 1

Save the EVR data of the machine in which a board is going to be replaced. Download the saved data after a board is replaced.

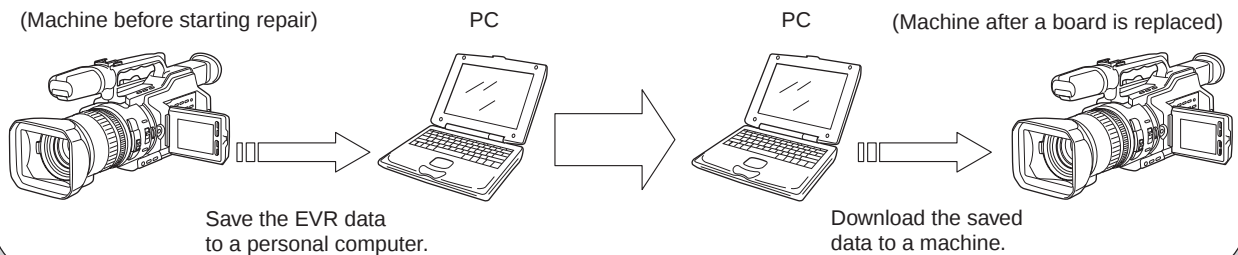


Procedure 2

Remove the EEPROM from the board of the machine that is going to be repaired. Install the removed EEPROM to the replaced board.

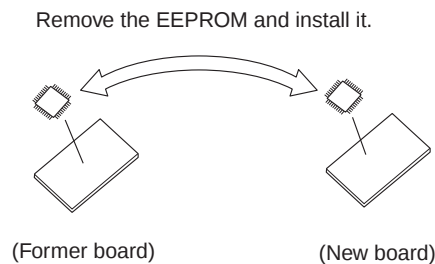

Procedure 3

When the data cannot be saved due to defective EEPROM, or when the EEPROM cannot be removed or installed, save the data from the same model of the same destination, and download it.

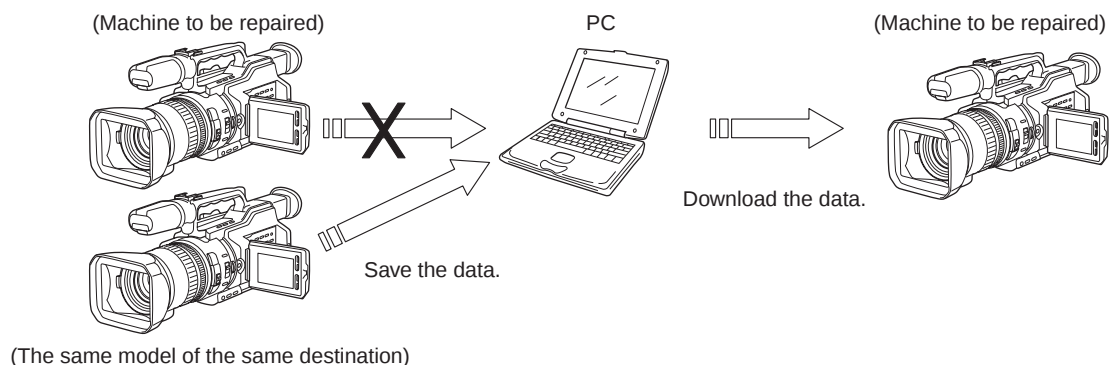

After the EVR data is saved and downloaded, check the respective items of the EVR data.
(Refer to page 5-3 for the items to be checked.)

1-1. Adjusting items when replacing main parts and boards.

• Adjusting items when replacing main parts

When replacing main parts, adjust the items indicated by ● in the following table.

Note1: When replacing the drum Assy., reset the data of page: 2, address: A2 to A4 to "00". (Refer to "Record of Use check" of "5-4. SERVICE MODE")

Adjustment Section	Adjustment	Replaced parts																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																							
		Block replacement											Parts replacement																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																												
		Lens device	Prism assy (Including 3 CCD imagers)	VAP unit	Mechanism deck	EVF block	LCD902 (LCD panel)	LCD block	LCD901 (LCD panel)	LCD block	ND901 (Fluorescent tube)	LCD block	Inverter unit	Control switch (CF-4980)	Mechanism deck	M901 (Drum motor)	Mechanism deck	M902 (Capstan motor)	FP-594 board	H902 (T reel FG sensor)	SE600 to 603 (PITCH/YAW sensor)	PD-108 board	IC2101 (RGB driver (LCD))	PD-126 board	IC2103 (Timing generator (LCD))	LB-065 board	ND200 (Fluorescent tube (EVF))	VC-242 board	IC1802 (RGB driver (EVF))	VC-242 board	IC1803 (Timing generator (EVF))	VC-242 board	IC705, X701 (Timing generator)	VC-242 board	IC704 (S/H, AGC)	VC-242 board	IC706 (A/D converter)	VC-242 board	IC802 (Camera micro processor)	VC-242 board	IC1301 (LINE IN/OUT amp)	VC-242 board	IC301 (DV signal process)	VC-242 board	IC101 (EQ, A/D CONV., PLL)	VC-242 board	IC102 (REC/PB amp)	VC-242 board	IC803 (EVR)																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																								
Initialization of B, C, D, E, F, 8 page data	Initialization of C, D, 8 page data																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																								

Table. 5-1-1(1).

• **Adjusting items when replacing a board or EEPROM**

When replacing a board or EEPROM, adjust the items indicated by ● in the following table.

Adjustment Section	Adjustment	Board replacement						
		CD-252 board	FP-594 board	VC-242 board	SE-108 board	PD-126 board	LB-065 board	
Initialization of B, C, D, E, F, 8 page data	Initialization of C, D, 8 page data			●				●
	Initialization of B page data			●				●
	Initialization of E, F page data			●			●	
	Modification of E page data			●			●	
Camera	27MHz origin oscillation adj.			●			●	
	Zoom key center adj.			●			●	
	HALL adj.			●			●	
	Offset adj.	●	●				●	
	Flange back adj.	●	●				●	
	Pre-white balance data input	●	●				●	
	AWB standard data input	●	●				●	
	MAX GAIN adj.	●	●				●	
	LV standard data input	●	●				●	
	White balance ND filter 1 compensation	●	●				●	
	White balance ND filter 2 compensation	●	●				●	
	Auto white balance adj.	●	●				●	
	Color reproduction adj. (ND filter OFF)	●	●				●	
	Color reproduction adj. (ND filter 1)	●	●				●	
	Color reproduction adj. (ND filter 2)	●	●				●	
	Steady shot adj.		●	●			●	
EVF	VCO adj.		●				●	
	Bright adj.		●				●	
	Contrast adj.		●				●	
	Backlight consumption current adj.		●			●	●	
	White balance adj.		●			●	●	
LCD	VCO adj.		●		●		●	
	Bright adj.		●		●		●	
	Black limit adj.		●		●		●	
	Contrast adj.		●		●		●	
	Center level adj.		●		●		●	
	V COM adj.		●		●		●	
	White balance adj.		●		●		●	
System control	Serial No. input		●				●	
	Battery end adj.		●				●	
Servo, RF	CAP FG duty adj.		●				●	
	T reel FG duty adj.	●	●				●	
	Switching position adj.		●				●	
	AGC center level adj.		●				●	
	APC & AEQ adj.		●				●	
	PLL f ₀ & LPF f ₀ adj.		●				●	
Video	Chroma BPF f ₀ adj.		●				●	
	S VIDEO OUT Y level adj.		●				●	
	S VIDEO OUT Cr, Cb level adj.		●				●	
Mechanism	Tape path adj.	●						

Table. 5-1-1(2).

5-1. CAMERA SECTION ADJUSTMENT

1-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION)

1-1-1. List of Service Tools

- Oscilloscope
- Color monitor
- Vectorscope
- Regulated power supply
- Digital voltmeter

Ref. No.	Name	Parts Code	Usage
J-1	Filter for color temperature correction (C14)	J-6080-058-A	Auto white balance adjustment/check White balance adjustment/check
J-2	ND filter 1.0	J-6080-808-A	White balance check
	ND filter 0.3	J-6080-818-A	White balance check (2 sheets used)
J-3	Pattern box PTB-450	J-6082-200-A	
J-4	Color chart for pattern box	J-6020-250-A	
J-5	Adjustment remote commander (RM-95 upgraded) (Note1)	J-6082-053-B	
J-6	Siemens star chart	J-6080-875-A	For checking the flange back
J-7	Clear chart for pattern box	J-6080-621-A	
J-8	CPC-13 jig	J-6082-443-A	For adjusting the video section For adjusting the color viewfinder
J-9	Extension cable (50P, 0.5mm)	J-6082-496-A	For extension between the CD-254 board (CN100) and the VC-242 board (CN025)
J-10	Mini pattern box	J-6082-353-B	For adjusting the flange back
J-11	Camera table	J-6082-384-A	For adjusting the flange back

Note1: If the micro processor IC in the adjustment remote commander is not the new micro processor (UPD7503G-C56-12), the pages cannot be switched. In this case, replace with the new micro processor (8-759-148-35).

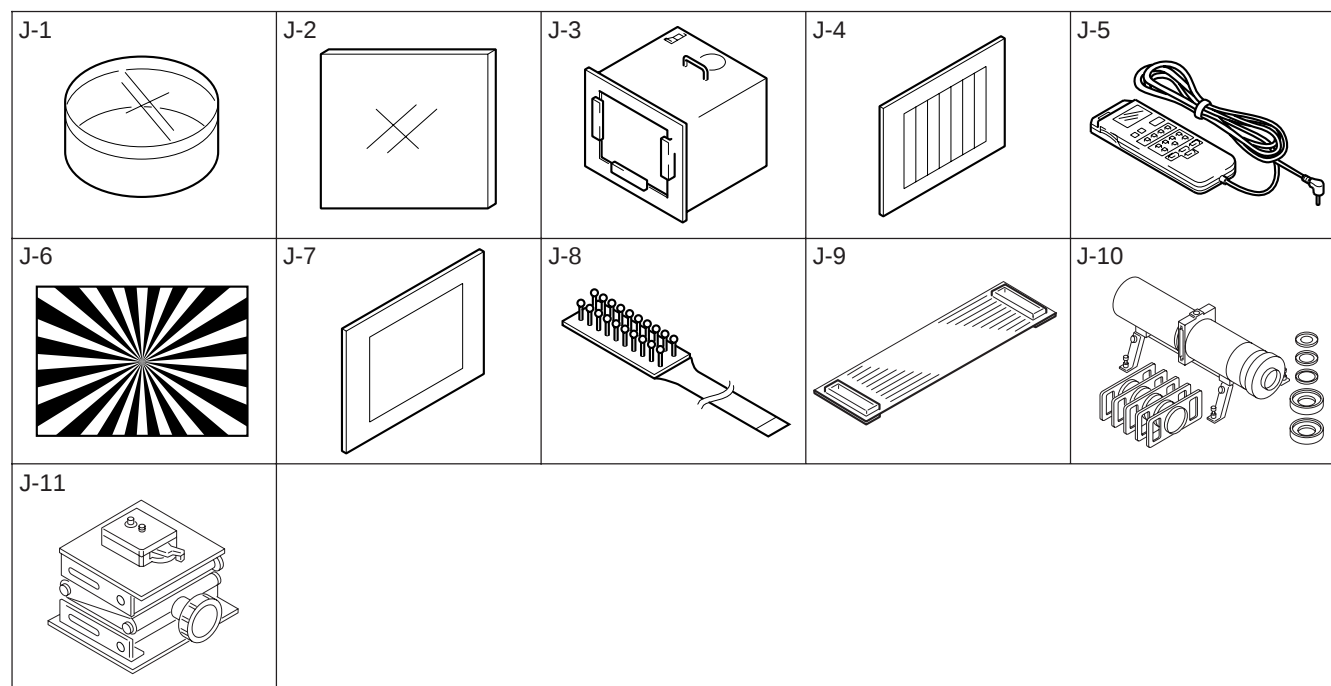


Fig. 5-1-1.

1-1-2. Preparations

Note 1: For details of how remove the cabinet and boards, refer to “2. DISASSEMBLY”.

Note 2: When performing only the adjustments, the lens block and boards need not be disassembled.

1) Connect the equipment for adjustments according to Fig. 5-1-3.

Note 3: As removing the cabinet (R) (removing the VC-242 board CN008) means removing the lithium 3V power supply (CK-093 board BT250), data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc.) will be lost. Before removing, note down the self-diagnosis data and the data on history use (data of page: 2, address: A2 to AA). (Refer to “SELF-DIAGNOSIS FUNCTION” for the self-diagnosis data, and to “5-4.Service Mode” for the data on the history use.)

Note 4: Setting the “Forced Camera Power ON” Mode

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjustment remote commander.

The above procedure will enable the camera power to be turned on with the control switch block (CF-4980) removed. After completing adjustments, be sure to exit the “Forced Camera Power ON Mode”.

Note 5: Exiting the “Forced Camera Power ON” Mode

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 0, address: 01, and set data: 00.

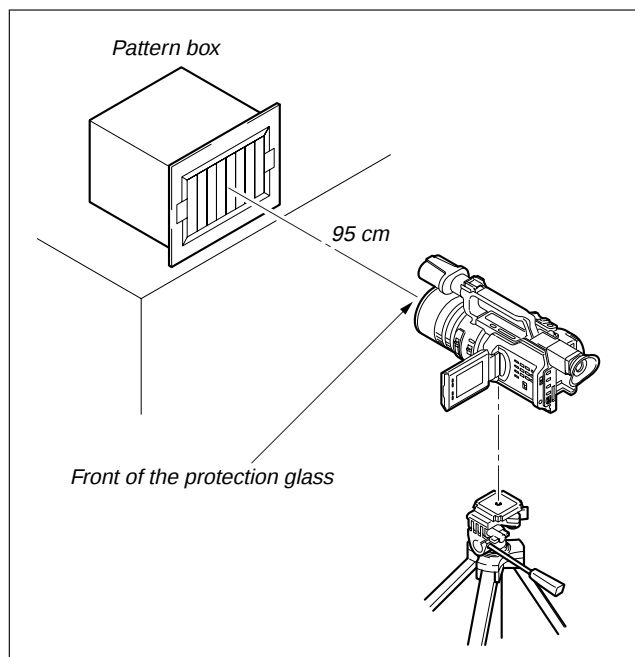


Fig. 5-1-2.

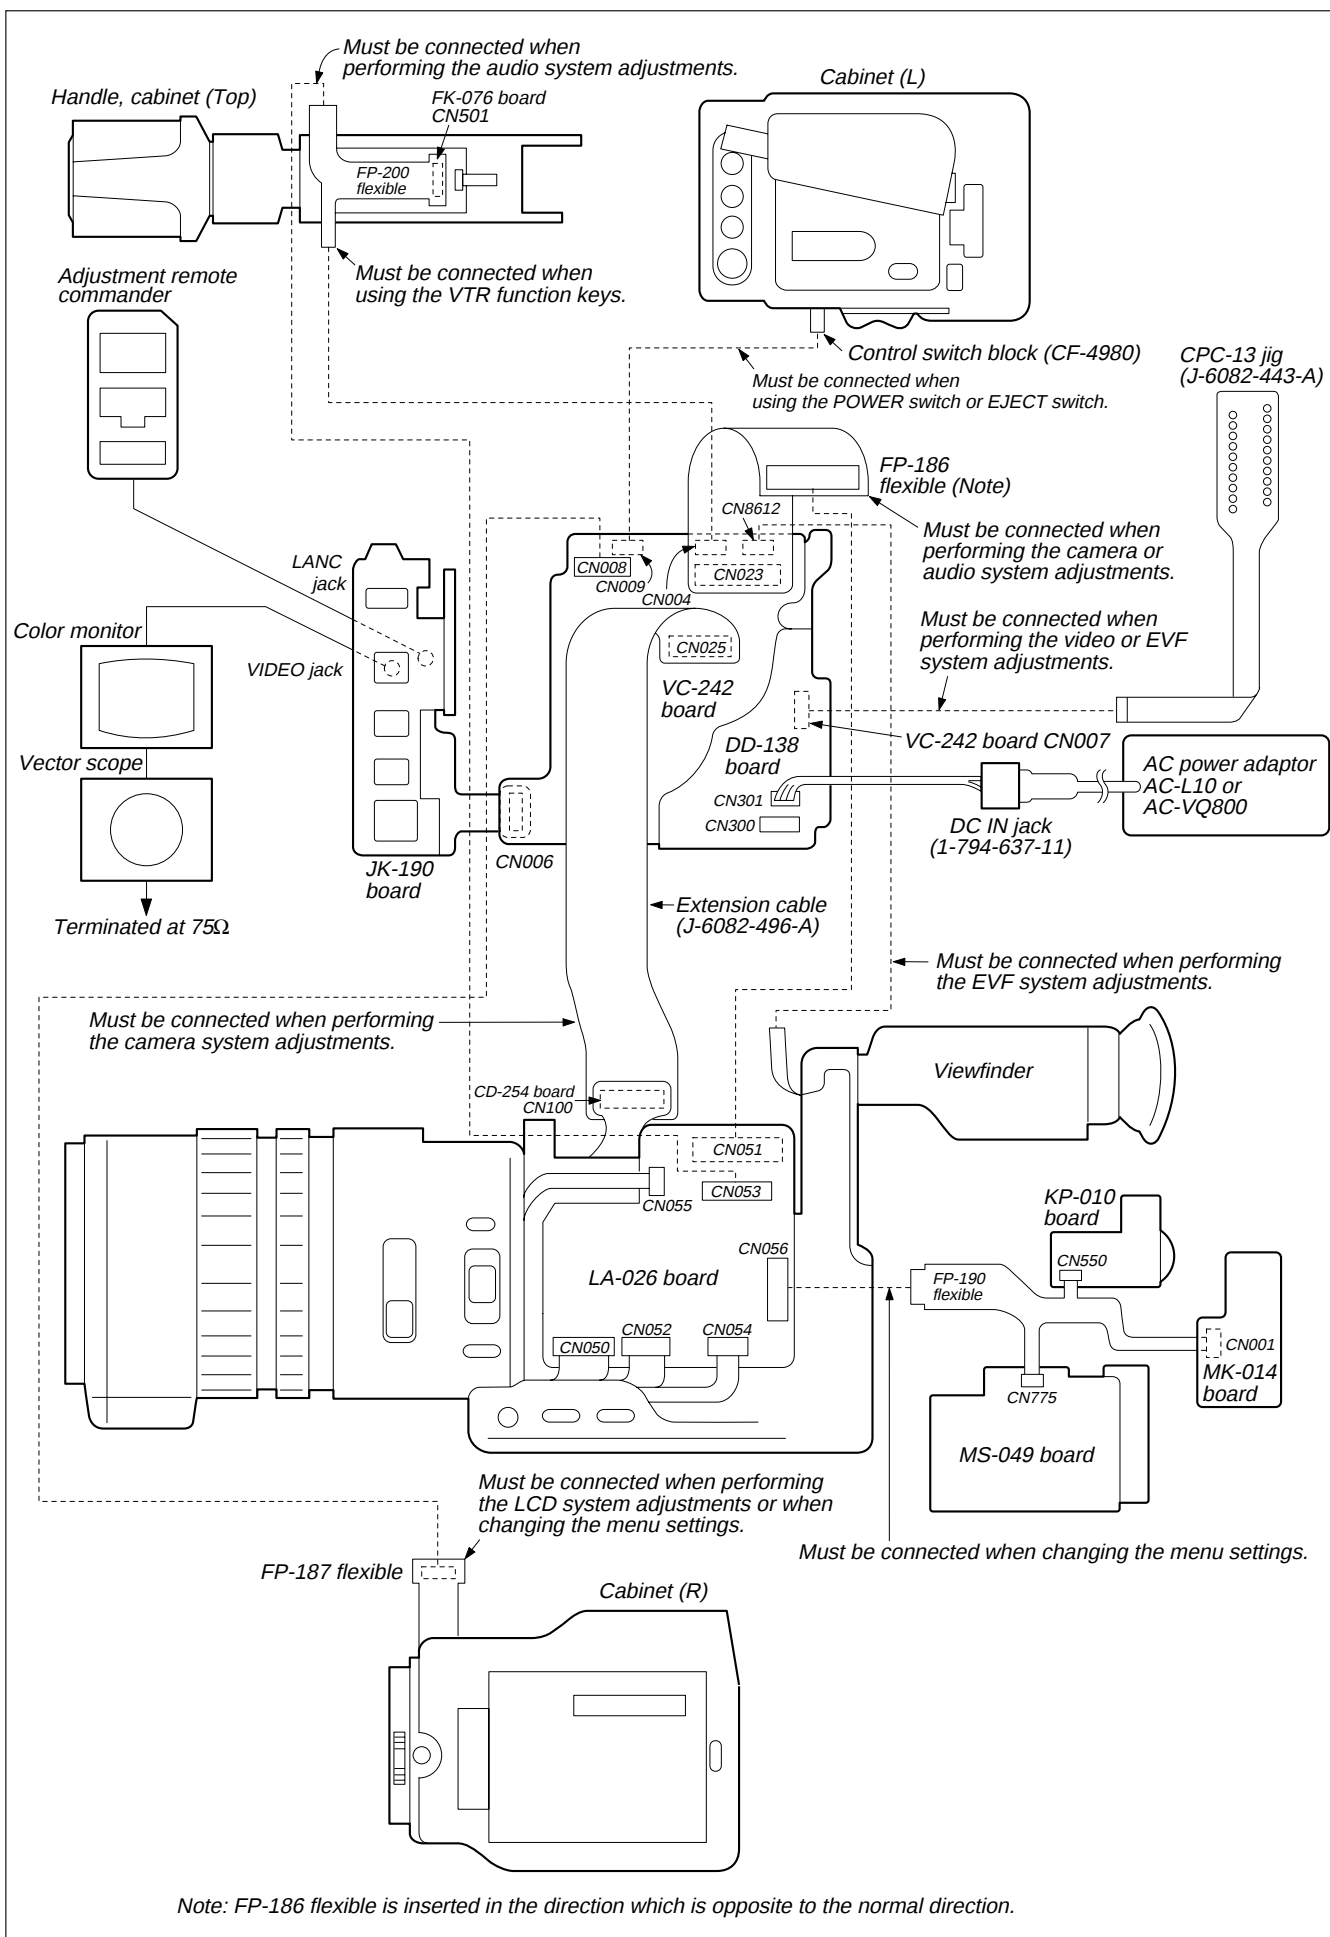


Fig. 5-1-3.

1-1-3. Precaution

1. Setting the Switch

Unless otherwise specified, set the switches as follows and perform adjustments without loading cassette.

- | | | | |
|---|-----------|---|-----|
| 1. POWER switch (CF-4980 block) | CAMERA | 10. BACK LIGHT (FP-189 flexible) | OFF |
| 2. DEMO MODE (Menu display) | OFF | 11. SPOT LIGHT (FP-189 flexible) | OFF |
| 3. DIGITAL ZOOM (Menu display) | OFF | 12. PICTURE EFFECT (CK-093 board) | OFF |
| 4. STEADY SHOT (Menu display) | OFF | 13. DIGITAL EFFECT (CK-093 board) | OFF |
| 5. DISPLAY (Menu display) | V-OUT/LCD | 14. ZEBRA (CK-093 board) | OFF |
| 6. DISPLAY (CK-093 board) | ON | 15. 16 : 9 WIDE (Menu display) | OFF |
| 7. AUTO LOCK (MK-014 board) | AUTO | 16. AUTO SHUTTER (Menu display) | OFF |
| 8. ND FILTER (Lens block) | OFF | 17. PROG.SCAN (Menu display) | OFF |
| 9. FOCUS switch (FP-188 flexible) | MANUAL | | |

2. Order of Adjustments

Basically carry out adjustments in the order given.

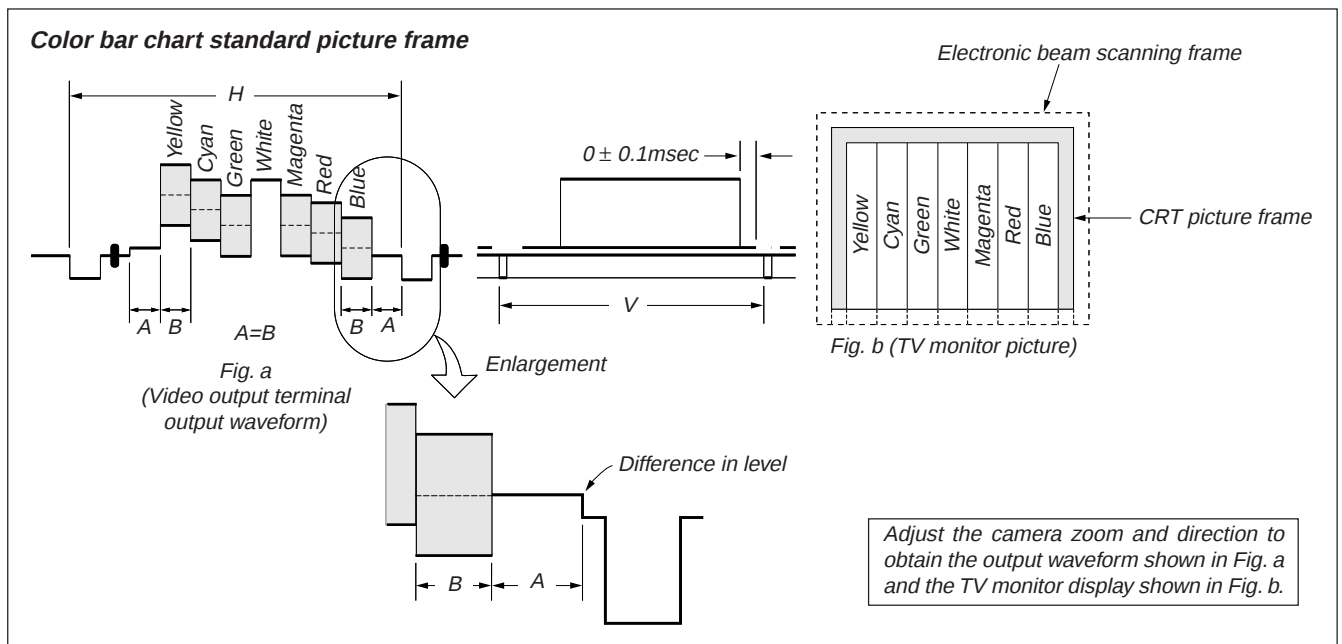


Fig. 5-1-4

3. Subjects

- 1) Color bar chart (Standard picture frame).
When performing adjustments using the color bar chart, adjust the picture frame as shown in Fig. 5-1-4. (Standard picture frame)
- 2) Clear chart (Standard picture frame)
Remove the color bar chart from the pattern box and insert a clear chart in its place. (Do not perform zoom operations during this time.)
- 3) Flange back adjustment chart
Make the chart shown in Fig. 5-1-5 using A0 size (1189 mm × 841 mm) black and white vellum paper.

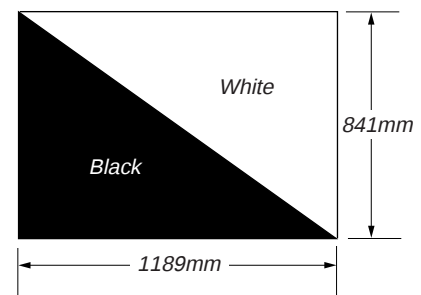


Fig. 5-1-5

Note: Use matte vellum paper bigger than A0, and make sure the edges of the black and white paper joined together are not rough.

1-2. INITIALIZATION OF B, C, D, E, F, 8 PAGE DATA

1-2-1. INITIALIZATION OF C, D, 8 PAGE DATA

1. Initializing the C, D, 8 Page Data

Note1: If “Initializing the C, D, 8 Page Data” is performed, all data of the C page, D page and 8 page will be initialized. (It is impossible to initialize a single page.)

Note2: If the C, D, 8 page data has been initialized, the following adjustments need to be performed again.

- 1) Modification of C, D, 8 page data
- 2) Serial No. input
- 3) Servo and RF system adjustments
- 4) Video system adjustments
- 5) Color viewfinder system adjustments
- 6) LCD system Adjustments

Adjustment Page	C
Adjustment Address	10 to FF
Adjustment Page	D
Adjustment Address	10 to FF
Adjustment Page	8
Adjustment Address	00 to FF

Initializing Method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data
2	3	81		Check that the data is “00”.
3	3	80	0A	Set the data, and press the PAUSE button.
4	3	80		Check that the data changes to “1A”
5				Perform “Modification of C, D, 8 Page Data”.

2. Modification of C, D, 8 Page Data

If the C, D, 8 page data has been initialized, change the data of the “Fixed data-2” address shown in the following tables by manual input.

Modifying Method:

- 1) Before changing the data, select page: 0, address: 01, and set data: 01.
- 2) New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.
Note: If copy the data built in the different model, the camcorder may not operate.
- 3) When changing the data, press the PAUSE button of the adjustment remote commander each time when setting new data to write the data in the non-volatile memory.
- 4) Check that the data of adjustment addresses is the initial value. If not, change the data to the initial value.

Processing after Completing Modification of C, D, 8 Page data

Order	Page	Address	Data	Procedure
1	2	00	29	Set the data
2	2	01	29	Set the data, and press the PAUSE button.

Note: If the following symptoms occur after completing of the “Modification of C, D, 8 page data”, check that the data of the “Fixed data-2” addresses of D page are same as those of the same model of the same destination.

- 1) The battery end mark on the LCD or viewfinder screen is flashing.
- 2) The power is shut off so that unit cannot operate.

3. C Page Table

Note: Fixed data-1: Initialized data. (Refer to “1. Initializing the C, D, 8 Page Data”.)

Fixed data-2: Modified data. (Refer to “2. Modification of C, D, 8 Page Data”.)

Address	Initial value	Remark
00 to 0F		
10	EE	Switching position adj.
11	00	
12	00	
13	00	
14 to 15		Fixed data-1
16	E0	Cap FG duty adj.
17	E0	Treel FG duty adj.
18	2A	AEQ adj.
19	2A	
1A		Fixed data-1
1B	32	AEQ adj.
1C	32	
1D		Fixed data-1
1E	25	AGC center level adj.
1F	3E	PLL fo adj.
20	3E	
21	DC	APC adj.
22	99	LPF fo adj.

Address	Initial value	Remark
23 to 24		Fixed data-1
25	88	S VIDEO out Y level adj.
26	E3	S VIDEO out Cr level adj.
27	A1	S VIDEO out Cb level adj.
28	04	Chroma BPF f ₀ adj.
29	20	PLL f ₀ fine adj.
2A to 2B		Fixed data-1
2C	03	APC adj.
2D to 41		Fixed data-1
42		Fixed data-2
43 to 81		Fixed data-1
82		Fixed data-2
83 to 85		Fixed data-1
86		Fixed data-2
87		
88		
89		
8A to 9A		Fixed data-1
9B		Fixed data-2
9C		Fixed data-1
9D		Fixed data-2
9E		
9F		
A0		
A1 to A2		Fixed data-1
A3		Fixed data-2
A4		
A5		
A6		
A7		
A8		
A9 to AA		Fixed data-1
AB		Fixed data-2
AC		Fixed data-1
AD		Fixed data-2
AE		Fixed data-1
AF		Fixed data-2
B0		
B1		Fixed data-1
B2		Fixed data-2
B3		
B4		
B5		
B6		
B7		
B8		
B9		
BA to BF		Fixed data-1
C0		Fixed data-2
C1		Fixed data-1
C2		Fixed data-2
C3		
C4		
C5		
C6		
C7		Fixed data-1

Address	Initial value	Remark
C8		Fixed data-2
C9		
CA to E7		Fixed data-1
E8	08	Serial No. input
E9	00	
EA	46	
EB	01	
EC	01	
ED	00	
EE	00	
EF	00	
F0 to F3		Fixed data-1
F4	00	Emergency memory address
F5	00	
F6	00	
F7	00	
F8	00	
F9	00	
FA	00	
FB	00	
FC	00	
FD	00	
FE	00	
FF	00	

Table. 5-1-2.

4. D Page Table

Note: Fixed data-1: Initialized data. (Refer to “1. Initializing the C, D, 8 Page Data”.)
Fixed data-2: Modified data. (Refer to “2. Modification of C, D, 8 Page Data”.)

Address	Initial value	Remark
00 to 0F		
10	00	Test mode
11 to 12		Fixed data-1
13		Fixed data-2
14		
15		Fixed data-1
16		Fixed data-2
17		
18		
19		Fixed data-1
1A		Fixed data-2
1B		
1C		
1D		Fixed data-1
1E		Fixed data-2
1F		
20		
21		
22		
23		
24		Fixed data-1
25		Fixed data-2
26		
27		
28		
29		
2A		Fixed data-1
2B		Fixed data-2
2C		
2D		Fixed data-1
2E		Fixed data-2
2F		
30		
31 to 32		Fixed data-1
33		Fixed data-2
34		
35		
36		
37		
38 to 3F		Fixed data-1
40		Fixed data-2
41 to 43		Fixed data-1
44		Fixed data-2
45		
46		Fixed data-1
47		Fixed data-2
48	91	Battery end adj.
49	97	
4A	A8	
4B	BD	
4C	C8	

Address	Initial value	Remark
4D to 4E		Fixed data-1
50		Fixed data-2
51		
52		
53		
54		
55 to 57		Fixed data-1
58		Fixed data-2
59		
5A		
5B		
5C		
5D to 63		Fixed data-1
64		Fixed data-2
65		
66		
67		Fixed data-1
68		Fixed data-2
69		Fixed data-1
6A		Fixed data-2
6B to 7A		Fixed data-1
7B		Fixed data-2
7C to 8F		Fixed data-1
90		Fixed data-2
91		
92	60	
93	60	VCO adj. (EVF)
94		Fixed data-2
95	AC	Bright adj. (EVF)
96		Fixed data-2
97	90	White balance adj. (EVF)
98	80	
99	30	Contrast adj. (EVF)
9A		Fixed data-1
9B		Fixed data-2
9C	F0	Backlight consumption current adj. (EVF)
9D	F0	
9E	11	
9F	1F	
A0		Fixed data-2
A1		
A2	71	VCO adj. (LCD)
A3	71	
A4	9F	V-COM adj. (LCD)
A5	AA	Bright adj.(LCD)
A6	0A	Black limit adj.(LCD)
A7		Fixed data-2
A8	85	White balance adj. (LCD)
A9	75	
AA	40	Contrast adj. (LCD)
AB	30	Center level adj.(LCD)
AC		Fixed data-2
AD		
AE		
AF		
B0		

Address	Initial value	Remark
B1 to B8		Fixed data-1
B9		Fixed data-2
BA		
BB to C3		Fixed data-1
C4		Fixed data-2
C5		Fixed data-1
C6		Fixed data-2
C7 to CF		Fixed data-1
D0		Fixed data-2
D1		
D2 to D5		Fixed data-1
D6		Fixed data-2
D7		
D8 to DA		Fixed data-1
DB		Fixed data-2
DC to FF		Fixed data-1

Table. 5-1-3.

5. 8 Page Table

Note: Fixed data-1: Initialized data. (Refer to “1. Initializing the C, D, 8 Page Data”.)
Fixed data-2: Modified data. (Refer to “2. Modification of C, D, 8 Page Data”.)

Address	Remark
00 to 0A	Fixed data-1
0B	Fixed data-2
0C to 98	Fixed data-1
99	Fixed data-2
9A to FF	Fixed data-1

Table. 5-1-4.

1-2-2. INITIALIZATION OF B PAGE DATA

Note: When reading the B page data, insert a “Memory Stick” into the “Memory Stick” slot.

Switch setting:

POWER MEMORY

1. Initializing the B Page Data

Note: If the B page data has been initialized, the following adjustments need to be performed again.

1) Modification of B page data

Adjustment Page	B
Adjustment Address	00 to FF

Initializing Method

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	5	01	F3	Set the data, and press PAUSE button.
3	5	00	01	Set the data, and press PAUSE button.
4	5	01		Wait for three seconds.
5	5	00		Check that the data is “00”.
6	5	02		Check that the data is “00”.
7				Perform “Modification of B Page Data”.

2. Modification of B Page Data

If the B page data has been initialized, change the data of the “Fixed data-2” address shown in the following tables by manual input.

Preparations:

Order	Page	Address	Data	Procedure
1	2	8F	00	Set the data, and press PAUSE button.
2	2	8F	03	Set the data, and press PAUSE button.
3	2	8F	00	Set the data, and press PAUSE button.

Modifying Method:

- 1) Before changing the data, select page: 0, address: 01, and set data: 01.
- 2) New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.
Note: If copy the data built in the different model, the camcorder may not operate.
- 3) When changing the data, press the PAUSE button of the adjustment remote commander each time when setting new data to write the data in the non-volatile memory.

Processing after Completing Modification of B Page data:

Order	Page	Address	Data	Procedure
1	2	00	29	Set the data.
2	2	01	29	Set the data, and press PAUSE button.

5. B Page Table

Note: Fixed data-1: Initialized data. (Refer to “1. or 3. Initializing the B Page Data”.)

Fixed data-2: Modified data. (Refer to “2. or 4. Modification of B Page Data”.)

Address	Remark
00 to 5F	Fixed data-1
60	Fixed data-2
61 to FF	Fixed data-1

Table. 5-1-5.

1-2-3. INITIALIZATION OF E, F PAGE DATA

1. Initializing the E, F Page Data

Note1: If “Initializing the E, F Page Data” is performed, all data of the E page and F page will be initialized. (It is impossible to initialize a single page.)

Note2: If the E, F page data has been initialized, following adjustments need to be performed again.

- 1) Modification of E, F page data
- 2) Camera system adjustments

Adjustment Page	F
Adjustment Address	10 to FF
Adjustment Page	E
Adjustment Address	00 to F4 (Note3) 00 to F6 (Note4) 00 to F7 (Note5)

Note3: Camera microprocessor ver. 1.0

Note4: Camera microprocessor ver. 2.0

Note5: Camera microprocessor ver. 3.0

Switch setting:

POWER CAMERA

Initializing Method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01		Set the following data, and press PAUSE button. 2D: DCR-VX2000 (NTSC) 2F : DCR-VX2000E (PAL)
3	6	03	01	Set the data, and press PAUSE button.
4	6	02		Check that the data changes to “01”.
5				Perform “Modification of E, F Page Data”.

2. Modification of E, F Page Data

If the E, F page data has been initialized, change the data of the “Fixed data-2” address shown in the following table by manual input.

Modifying Method:

- 1) Before changing the data, select page: 0, address: 01, and set data: 01.
- 2) New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.
Note: If copy the data built in the different model, the camcorder may not operate.
- 3) When changing the data, press the PAUSE button of the adjustment remote commander each time when setting new data to write the data in the non-volatile memory.
- 4) Check that the data of adjustment addresses is the initial value. If not, change the data to the initial value.

Processing after Completing Modification of E, F Page data

- 1) Select page: 0, address: 01, and set data: 00.
- 2) Turn off the power and turn on again.

3. Modification of E Page Data

When replacing the camera microprocessor (VC-242 board IC802), change the data shown in the following table by manual input.

Version check of the camera microprocessor:

Order	Page	Address	Data	Procedure
1	6	FF		The data shows the version of the camera microprocessor. 01: Ver. 1.0 02: Ver. 2.0 03: Ver. 3.0

Modifying Method:

- When replaced with the camera microprocessor ver. 2.0.

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	E	F5	8B	Set the data, and press PAUSE button.
3	E	F6	D0	Set the data, and press PAUSE button.
4	0	01	00	Set the data.
5				Turn off the power and turn on again.

- When replaced with the camera microprocessor ver. 3.0.

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	E	F5	8B	Set the data, and press PAUSE button.
3	E	F6	D0	Set the data, and press PAUSE button.
4	E	F7	25	Set the data, and press PAUSE button.
5	0	01	00	Set the data.
6				Turn off the power and turn on again.

4. F Page Table

Note1: Fixed data-1: Initialized data. (Refer to “1. Initializing the E, F Page Data”.)
Fixed data-2: Modified data. (Refer to “2. Modification of E, F Page Data”.)

Address	Initial value		Remark
	NTSC	PAL	
00 to 0F			
10 to 14			Fixed data-1
15			Fixed data-2
16 to 1B			Fixed data-1
1C	80	80	27MHz origin osc. adj.
1D			Fixed data-1
1E	60	60	HALL adj.
1F	40	60	
20	00	00	AWB standard data input
21	15	15	
22	00	00	
23	2E	2E	
24	AE	AE	Flange back adj.
25	2B	2B	
26	44	44	
27	43	43	
28	B2	B2	
29	16	16	
2A	00	00	
2B	00	00	
2C	8B	8B	MAX GAIN adj.
2D to 33			Fixed data-1
34	88	90	Auto white balance adj.
35	6C	8F	
36	D6	D6	Flange back adj.
37	E6	E6	
38	46	46	
39	45	00	
3A	3F	19	
3B	3F	00	
3C	16	27	
3D	A8	A8	
3E	38	38	LV standard data input
3F	76	76	
40			Fixed data-1
41	50	50	Steady shot adj.
42	50	50	
43			Fixed data-1
44	EB	EB	Color reproduction adj. (ND filter OFF)
45	D5	D5	
46	20	20	
47	20	20	
48 to 49			Fixed data-1
4A	00	00	WB ND filter 1 compensation
4B	00	00	
4C to 52			Fixed data-1
53			Fixed data-2
54 to 5C			Fixed data-1
5D	80	80	Zoom key center adj.
5E to 5F			Fixed data-1

Address	Initial value		Remark
	NTSC	PAL	
60			Fixed data-2
61 to 6A			Fixed data-1
6B			Fixed data-2
6C			
6D			
6E			
6F			Fixed data-1
70	89	89	HALL adj.
71 to 7B			Fixed data-1
7C			Fixed data-2
7D			
7E to 80			Fixed data-1
81			Fixed data-2
82			Fixed data-1
83			Fixed data-2
84 to 8D			Fixed data-1
8E			Fixed data-2
8F to 9E			Fixed data-1
9F			Fixed data-2
A0 to A5			Fixed data-1
A6			Fixed data-2
A7			
A8 to B1			Fixed data-1
B2			Fixed data-2
B3 to B9			Fixed data-1
BA			Fixed data-2
BB to C5			Fixed data-1
C6			Fixed data-2
C7			Fixed data-1
C8			Fixed data-2
C9 to CA			Fixed data-1
CB			Fixed data-2
CC			
CD			
CE			
CF			
D0			
D1			
D2			
D3			
D4			
D5			
D6 to DF			Fixed data-1
E0			Fixed data-2
E1 to EC			Fixed data-1
ED			Fixed data-2
EE to F4			Fixed data-1
F5			Fixed data-2
F6			
F7			
F8			Fixed data-1
F9			Fixed data-2
FA to FC			Fixed data-1
FD			Fixed data-2
FE to FF			Fixed data-1

Table. 5-1-6.

5. E Page Table

Note1: Fixed data-1: Initialized data. (Refer to “1. Initializing the E, F Page Data”.)

Fixed data-2: Modified data. (Refer to “2. Modification of E, F Page Data”.)

Note2: Refer to “2. Modification of E, F Page Data” for the camera microprocessor version.

Address	Initial value		Remark
	NTSC	PAL	
00 to 05			Fixed data-1
06			Fixed data-2
07			
08 to 10			Fixed data-1
11			Fixed data-2
12 to 13			Fixed data-1
14			Fixed data-2
15 to 29			Fixed data-1
2A	10	10	Pre-white balance data input
2B	10	10	
2C			Fixed data-1
2D	80	80	Offset adj.
2E	80	80	
2F	80	80	
30 to 47			Fixed data-1
48			Fixed data-2
49			
4A to 51			Fixed data-1
52			Fixed data-2
53			Fixed data-1
54			Fixed data-2
55			Fixed data-1
56			Fixed data-2
57			Fixed data-1
58			Fixed data-2
59			Fixed data-1
5A			Fixed data-2
5B			
5C			Fixed data-1
5D			Fixed data-2
5E			
5F			
60 to 61			Fixed data-1
62	EB	EB	Color reproduction adj. (ND filter 1)
63	D5	D5	
64	20	20	
65	20	20	
66 to 74			Fixed data-1
75			Fixed data-2
76 to 8B			Fixed data-1
8C			Fixed data-2
8D			
8E	00	00	WB ND filter 2 compensation
8F	00	00	
90	EB	EB	Color reproduction adj. (ND filter 2)
91	D5	D5	
92	20	20	
93	20	20	
94			Fixed data-2

Address	Initial value		Remark
	NTSC	PAL	
95 to A0			Fixed data-1
A1			Fixed data-2
A2			
A3 to A7			Fixed data-1
A8			Fixed data-2
A9 to AB			Fixed data-1
AC			Fixed data-2
AD			
AE to B0			Fixed data-1
B1			Fixed data-2
B2			Fixed data-1
B3			Fixed data-2
B4 to B9			Fixed data-1
BA			Fixed data-2
BB to C3			Fixed data-1
C4			Fixed data-2
C5 to CB			Fixed data-1
CC			Fixed data-2
CD			
CE			
CF to D9			Fixed data-1
DA			Fixed data-2
DB			
DC to EB			Fixed data-1
EC			Fixed data-2
ED to F2			Fixed data-1
F3			Fixed data-2
F4			Fixed data-1
F5 (*1)	8B	8B	Refer to “3. Modification of E Page Data”.
F6 (*1)	D0	D0	
F7 (*2)	25	25	

*1: Only for the camera microprocessor ver. 2.0 or ver. 3.0

*2: Only for the camera microprocessor ver. 3.0

Table. 5-1-6.

1-3. CAMERA SYSTEM ADJUSTMENTS

Before perform the camera system adjustments, check that the specified values of “VIDEO SYSTEM ADJUSTMENT” are satisfied.

1. 27MHz Origin Oscillation Adjustment
(VC-242 board)

Set the frequency of the clock for synchronization.
If deviated, the synchronization will be disrupted and the color will become inconsistent.

Subject	Not required
Measurement Point	Pin ④7 of IC771 or pin ①4 of IC706
Measuring Instrument	Frequency counter
Adjustment Page	F
Adjustment Address	1C
Specified Value	$f=13500000 \pm 68\text{Hz}$

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	F	1C		Change the data and set the frequency (f) to the specified value.
3	F	1C		Press PAUSE button.
4	0	01	00	Set the data.

2. Zoom Key Center Adjustment

Set the A/D value center of the microprocessor to the center voltage of the zoom key.

If deviated, the zoom lens operates of itself ,even if the zoom key is the center position.

Subject	Not required
Measurement Point	Display data of page: 6, address: 50
Measuring Instrument	Adjustment remote commander
Adjustment Page	F
Adjustment Address	5D

Note: Don’t touch the zoom switch during adjustment.

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	50		Read the data, and this data is named D ₅₀ .
3	F	5D	D ₅₀	Set the data, and press PAUSE button.
4	0	01	00	Set the data.

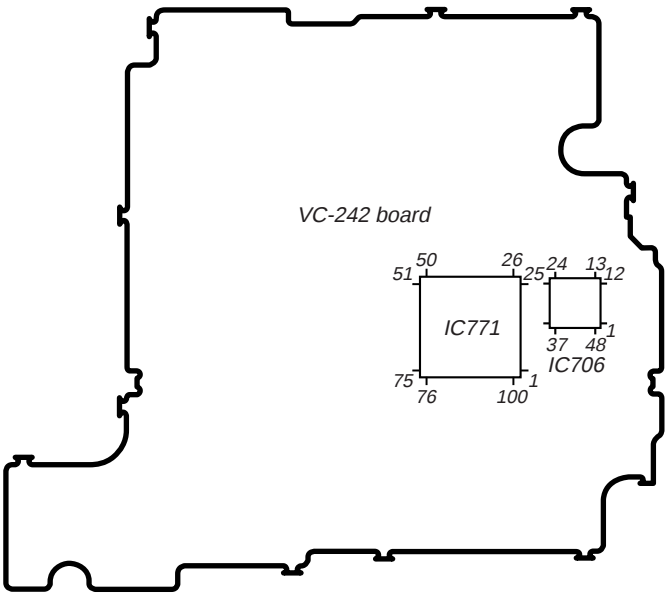


Fig. 5-1-6.

3. HALL Adjustment

For detecting the position of the lens iris, adjust AMP gain and offset.

Subject	Not required
Measurement Point	Display data of page 1 (Note1)
Measuring Instrument	Adjustment remote commander
Adjustment Page	F
Adjustment Address	1E, 1F, 70
Specified Value 1	88 to 8C
Specified Value 2	15 to 19

Note1: Displayed data of page 1 of the adjustment remote commander.
1 : XX : XX — IRIS display data

Note2: Check that the data of page: 6, address: 02 is “00”. If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	94	8A	Set the data.
3	6	95	17	Set the data.
4	6	01	6D	Set the data, and press PAUSE button.
5	6	02		Check that the data changes to “01”. (Note3)
6	6	01	00	Set the data, and press PAUSE button.

Note3: The adjustment data will be automatically input to page: F, address: 1E, 1F, 70.

Checking method:

Order	Page	Address	Data	Procedure
1	6	04	03	Set the data.
2	6	01	01	Set the data, and press PAUSE button.
3	1			Check that the IRIS display data (Note1) satisfies the specified value 1.
4	6	01	03	Set the data, and press PAUSE button.
5	1			Check that the IRIS display data (Note1) satisfies the specified value.2.

Processing after Completing Adjustments:

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	04	00	Set the data.
3	6	94	00	Set the data.
4	6	95	00	Set the data.
5	0	01	00	Set the data.

4. Offset Adjustment

Adjust so that the AGC OUT potential lies within the specified value of the digital clamp.

Subject	Not required
Measurement Point	DDS display data of LCD or TV monitor (Note1)
Measuring Instrument	
Adjustment Page	E
Adjustment Address	2D, 2E, 2F
Specified Value	70 to 90

Note 1: DDS display data of LCD or TV monitor.
CA 00 0000
CA 00 00XX — Object data

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	11	02	Set the data, and press PAUSE button.
3	6	01	05	Set the data, and press PAUSE button.
4	E	0C	02	Set the data, and press PAUSE button.
5	6	04	1F	Set the data.
6	E	2D		Change the data and adjust the DDS display data (Note 1) to “80”. (Rch offset adjustment)
7	E	2D		Press PAUSE button.
8	6	04	20	Set the data.
9	E	2E		Change the data and adjust the DDS display data (Note 1) to “80”. (Gch offset adjustment)
10	E	2E		Press PAUSE button.
11	6	04	21	Set the data.
12	E	2F		Change the data and adjust the DDS display data (Note 1) to “80”. (Bch offset adjustment)
13	E	2F		Press PAUSE button.

Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	D	11	00	Set the data, and press PAUSE button.
2	E	0C	00	Set the data, and press PAUSE button.
3	0	01	00	Set the data.
4	6	01	00	Set the data, and press PAUSE button.
5	6	04	00	Set the data.
6				Turn off the power and turn on again.

5. Flange Back Adjustment (Using Minipattern Box)

The inner focus lens flange back adjustment is carried out automatically. In whichever case, the focus will be deviated during auto focusing/manual focusing.

Subject	Siemens star chart with ND filter for the minipattern box (Note2)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	24 to 2B, 36 to 3D, 5D

Note1: Dark Siemens star chart.

Note2: Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

Switch setting:

ND FILTER OFF
(The data of page: 6, address: 9D is "00".)

Preparations:

- 1) The minipattern box is installed as shown in the following figure.
Note: The attachment lenses are not used.
- 2) Install the minipattern box so that the distance between it and the front of the protection glass of the camcorder is less than 3cm. (Remove the lens hood.)
- 3) Make the height of the minipattern box and the camcorder equal.
- 4) Check that the output voltage of the regulated power supply is the specified voltage.
- 5) Check that at both the zoom lens TELE end and WIDE end, the center of the Siemens star chart and center of the exposure screen coincide.

Specified voltage: The specified voltage varies according to the minipattern box, so adjust the power supply output voltage to the specified voltage written on the sheet which is supplied with the minipattern box.

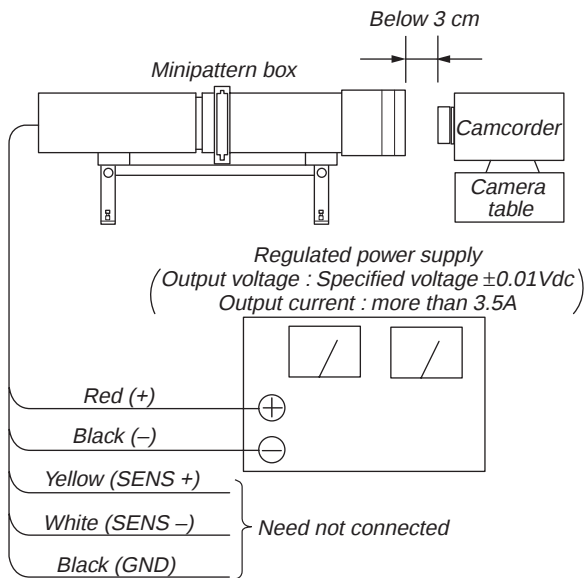


Fig. 5-1-7.

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01	13	Set the data, and press PAUSE button. (Note3)
3	6	01	27	Set the data, and press PAUSE button.
4	6	02		Check that the data changes to "01". (Note4)
5	F	2A		Check that the data is "00" to "07".

Note3: Don't touch the zoom switch. If you touch the zoom switch, the zoom center adjustment data will be rewritten in the value which isn't correct.

Note4: The adjustment data will be automatically input to page: F, address:: 24 to 2B, 36 to 3D, 5D.

Processing after Completing Adjustments:

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	0	01	00	Set the data.
4				Turn off the power and turn on again.
5				Perform "Flange Back Check".

6. Flange Back Adjustment (Using Flange Back Adjustment Chart and Subject More Than 500m Away)

The inner focus lens flange back adjustment is carried out automatically. In whichever case, the focus will be deviated during auto focusing/manual focusing.

6-1. Flange Back Adjustment (1)

Subject	Flange back adjustment chart (2.0 m from the front of the protection glass) (Luminance: 230 ± 30 lux)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	24 to 2B, 36 to 3D, 5D

Note1: Check that the data of page: 6, address: 02 is “00”. If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

Switch setting:

ND FILTER OFF

(The data of page: 6, address: 9D is “00”.)

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01	13	Set the data, and press PAUSE button. (Note2)
3	6	01	15	Set the data, and press PAUSE button.
4	6	02		Check that the data changes to “01”. (Note3)
5	F	2A		Check that the data is “00” to “07”.

Note2: Don't touch the zoom switch. If you touch the zoom switch, the zoom center adjustment data will be rewritten in the value which isn't correct.

Note3: The adjustment data will be automatically input to page: F, address: 24 to 2B, 36 to 3D, 5D.

Processing after Completing Adjustments:

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2				Turn off the power and turn on again.
3				Perform “Flange Back Adjustment (2)”

6-2. Flange Back Adjustment (2)

Perform this adjustment after performing “Flange Back Adjustment (1)”.

Subject	Subject more than 500m away (Subjects with clear contrast such as buildings, etc.)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	24 to 2B, 36 to 3D, 5D

Note1: Check that the data of page: 6, address: 02 is “00”. If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

Preparations:

- 1) Set the zoom lens to the TELE end and expose a subject that is more than 500 m away (subject with clear contrast such as building, etc.). (Nearby subjects less than 500 m away should not be in the screen.)

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01	13	Set the data, and press PAUSE button. (Note2)
				Place a ND filter on the lens so that the optimum image is obtain.
3	6	01	29	Set the data, and press PAUSE button.
4	6	02		Check that the data changes to “01”. (Note3)

Note2: Don't touch the zoom switch. If you touch the zoom switch, the zoom center adjustment data will be rewritten in the value which isn't correct.

Note3: The adjustment data will be automatically input to page: F, address: 24 to 2B, 36 to 3D, 5D.

Processing after Completing Adjustments:

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2				Turn off the power and turn on again.
3				Perform “Flange Back Check”.

7. Flange Back Check

Subject	Siemens star (2.0m from the front of the protection glass) (Luminance : approx. 300 ± 50 lux)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Specified Value	Focused at the TELE end and WIDE end.

Checking method:

- 1) Place the Siemens star 2.0m from the front of the protection glass.
- 2) To open the IRIS, decrease the luminous intensity to the Siemens star up to a point before noise appear on the image.
- 3) Shoot the Siemens star with the zoom TELE end.
- 4) Turn on the auto focus.
- 5) Check that the lens is focused.
- 6) Turn off the auto focus.
- 7) While observe the TV monitor, move the zoom to the WIDE end and check that the lens is focused.

8. Picture Frame Setting

Subject	Color bar chart (Color bar standard picture frame) (95cm from the front of the protection glass)
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope and TV monitor
Specified Value	$A=B$, $C=D$, $t=0 \pm 0.1\text{msec}$

Switch setting:

- 1) ND FILTER OFF
(The data of page: 6, address: 9D is "00".)
- 2) STEADY SHOT (Menu setting) OFF

Setting method:

Order	Page	Address	Data	Procedure
1	6	2C	01	Set the data.
2	6	90	28	Set the data.
3	6	91	02	Set the data.
4	6	92	6E	Set the data.
5	6	93	49	Set the data.
6	6	01	79	Set the data, and press PAUSE button.
7				Adjust the camera direction, and set to the specified position.
8				Mark the position of the picture frame on the monitor display, and adjust the picture frame to this position in following adjustments using "Color bar standard frame".
9	6	01	00	Set the data, and press PAUSE button.

Check on the oscilloscope

1. Horizontal period

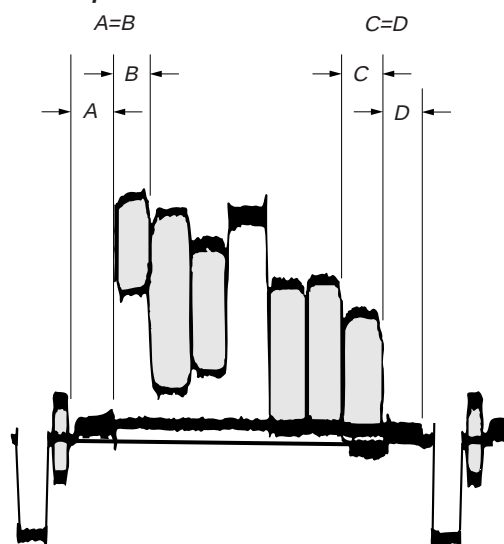


Fig. 5-1-8.

2. Vertical period


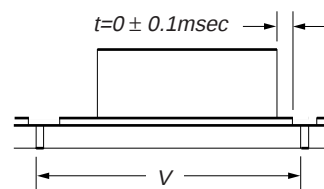


Fig. 5-1-9.

Color on the TV monitor

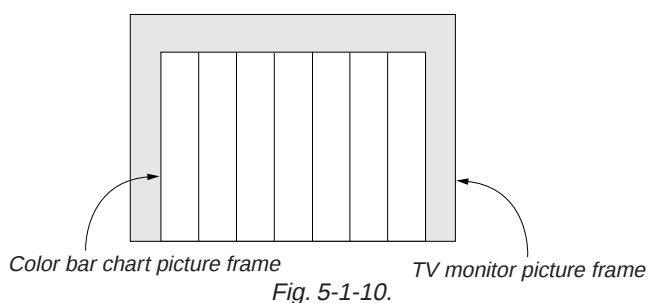

9. Pre White Balance Data Input

At 3200k, input the pre white balance standard data.

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	E
Adjustment Address	2A, 2B

Note1: After the power is turned on, this adjustment can be done only once.

Switch setting:

ND FILTER OFF
(The data of page: 6, address: 9D is "00".)

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	02	00	Set the data.
3	F	20	00	Set the data, and press PAUSE button.
4	F	21	15	Set the data, and press PAUSE button.
5	F	22	00	Set the data, and press PAUSE button.
6	F	23	2E	Set the data, and press PAUSE button.
7	6	01	7F	Set the data, and press PAUSE button.
8	6	01	7D	Set the data, and press PAUSE button. (Note)
9	6	02		Check that the data changes to "01".

Note: The adjustment data will be automatically input to page: E, address: 2A and 2B.

Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	0	01	00	Set the data.
4				Perform "Auto White Balance Standard Data Input".

10. Auto White Balance Standard Data Input

At 3200K, input the white balance standard data.

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	F
Adjustment Address	20 to 23

Note1: After the power is turned on, this adjustment can be done only once.

Note2: Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

Switch setting:

ND FILTER OFF
(The data of page: 6, address: 9D is "00".)

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01	11	Set the data, and press PAUSE button.
3	6	01	0B	Set the data, and press PAUSE button. (Note)
4	6	02		Check that the data changes to "01".

Note: The adjustment data will be automatically input to page: F, address: 20 to 23.

Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	0	01	00	Set the data.

11. MAX GAIN Adjustment

Setting the minimum illumination.

If it is not consistent, the image level required for taking subjects in low illuminance will not be produced (dark).

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	F
Adjustment Address	2C

Switch setting:

ND FILTER OFF
(The data of page: 6, address: 9D is "00".)

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	02	00	Set the data.
3	6	96	00	Set the data.
4	6	97	5C	Set the data.
5	6	01	6F	Set the data, and press PAUSE button. (Note)
6	6	02		Check that the data changes to "01".

Note: The adjustment data will be automatically input to page: F, address: 2C.

Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	96	00	Set the data.
2	6	97	00	Set the data.
3	6	01	00	Set the data, and press PAUSE button.
4	6	02	00	Set the data.
5	0	01	00	Set the data.

12. LV Standard Data Input

Adjust the normal coefficient of the light value.

Subject	Clear chart (Color bar standard picture frame)
Measurement Point	Display data of page 1 (Note2)
Measuring Instrument	Adjustment remote commander
Adjustment Page	F
Adjustment Address	3E, 3F
Specified Value	0FE0 to 1020

Note1: Check that the data of page: 6, address: 02 is "00". If not, turn the power of the unit OFF/ON.

Note2: Displayed data of page 1 of the adjustment remote commander.
1 : XX : XX

└── LV data

Switch setting:

ND FILTER OFF
(The data of page: 6, address: 9D is "00".)

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	F	15	40	Set the data, and press PAUSE button.
3				Wait for 5 seconds.
4	6	01	0D	Set the data, and press PAUSE button. (Note3)
5	6	02		Check that the data changes to "01".
6	6	04	1E	Set the data.
7	1			Check that the LV data (Note2) satisfies the specified value. If not, repeat from step 2.

Note3: The adjustment data will be automatically input to page: F, address: 3E and 3F.

Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	6	04	00	Set the data.
4	F	15	44	Set the data, and press PAUSE button.
5	0	01	00	Set the data.

13. White Balance ND Filter 1 Compensation

Compensate the white balance deviation when ND FILTER switch is “1”.

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	F
Adjustment Address	4A, 4B

Note1: After the power is turned on, this adjustment can be done only once.

Note2: Check that the data of page: 6, address: 02 is “00”. If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

Switch setting:

ND FILTER 1
(The data of page: 6, address: 9D is “01”.)

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01	11	Set the data, and press PAUSE button.
3	6	01	09	Set the data, and press PAUSE button. (Note)
4	6	02		Check that the data changes to “01”.

Note: The adjustment data will be automatically input to page: F, address: 4A and 4B.

Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	0	01	00	Set the data.

14. White Balance ND Filter 2 Compensation

Compensate the white balance deviation when ND FILTER switch is “2”.

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	E
Adjustment Address	8E, 8F

Note1: After the power is turned on, this adjustment can be done only once.

Note2: Check that the data of page: 6, address: 02 is “00”. If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

Switch setting:

ND FILTER 2
(The data of page: 6, address: 9D is “02”.)

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01	CF	Set the data, and press PAUSE button.
3	6	01	CD	Set the data, and press PAUSE button. (Note)
4	6	02		Check that the data changes to “01”.

Note: The adjustment data will be automatically input to page: E, address: 8E and 8F.

Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	0	01	00	Set the data.
4				Set ND FILTER switch to “OFF”.

15. Auto White Balance Adjustment

Adjust to the proper auto white balance output data.
If it is not correct, auto white balance and color reproducibility will be poor.

Subject	Clear chart (Color bar standard picture frame)
Filter	Filter C14 for color temperature correction
Adjustment Page	F
Adjustment Address	34, 35

Note1: After the power is turned on, this adjustment can be done only once.

Note2: Check that the data of page: 6, address: 02 is “00”. If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

Switch setting:

ND FILTER OFF
(The data of page: 6, address: 9D is “00”).

Adjusting method:

Order	Page	Address	Data	Procedure
1				Place the C14 filter for color temperature correction on the lens.
2	0	01	01	Set the data.
3	6	02	00	Set the data.
4	6	01	83	Set the data, and press PAUSE button.
5	6	01	81	Set the data, and press PAUSE button. (Note)
6	6	02		Check that the data changes to “01”.

Note: The adjustment data will be automatically input to page: F, address: 34 and 35.

Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	0	01	00	Set the data.

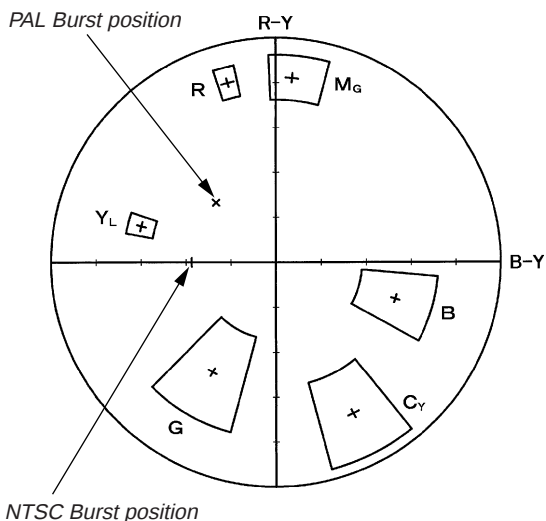


Fig. 5-1-11.

16. Color Reproduction Adjustment (ND Filter OFF)

When the ND FILTER switch is “OFF”, adjust the color difference matrix coefficient so that proper color reproduction is produced.

Subject	Color bar chart (Color bar standard picture frame)
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	44, 45, 46, 47
Specified Value	All color luminance points should settle within each color reproduction frame. (Fig. 5-1-11)

Note1: After the power is turned on, this adjustment can be done only once.

Note2: Check that the data of page: 6, address: 02 is “00”. If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

Switch setting:

ND FILTER OFF
(The data of page: 6, address: 9D is “00”).

Adjusting method:

Order	Page	Address	Data	Procedure
1				Check that the picture frame is set to the specified position. (Refer to “8. Picture Frame Setting”).
2	0	01	01	Set the data.
3	F	5E	2D	Set the data, and press PAUSE button.
4	F	44	00	Set the data, and press PAUSE button.
5	F	45	00	Set the data, and press PAUSE button.
6	F	46	20	Set the data, and press PAUSE button.
7	F	47	20	Set the data, and press PAUSE button.
8	6	01	AB	Set the data, and press PAUSE button.
9	6	01	A9	Set the data, and press PAUSE button. (Note)
10	6	02		Check that the data changes to “01”.
11				Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame. (Fig. 5-1-11)
12				Check that all color luminance points settle within each color reproduction frame. (Fig. 5-1-11)

Note: The adjustment data will be automatically input to page: F, address: 44 to 47.

Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	F	5E	1D	Set the data, and press PAUSE button.
3	0	01	00	Set the data.

17. Color Reproduction Adjustment (ND Filter 1)

When the ND FILTER switch is “1”, adjust the color difference matrix coefficient so that proper color reproduction is produced.

Subject	Color bar chart (Color bar standard picture frame)
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	E
Adjustment Address	62, 63, 64, 65
Specified Value	All color luminance points should settle within each color reproduction frame. (Fig. 5-1-11)

Note1: After the power is turned on, this adjustment can be done only once.

Note2: Check that the data of page: 6, address: 02 is “00”. If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

Switch setting:

- 1) ND FILTER..... 1
(The data of page: 6, address: 9D is “01”.)

Adjusting method:

Order	Page	Address	Data	Procedure
1				Check that the picture frame is set to the specified position. (Refer to “8. Picture Frame Setting”.)
2	0	01	01	Set the data.
3	F	5E	2D	Set the data, and press PAUSE button.
4	E	62	00	Set the data, and press PAUSE button.
5	E	63	00	Set the data, and press PAUSE button.
6	E	64	20	Set the data, and press PAUSE button.
7	E	65	20	Set the data, and press PAUSE button.
8	6	01	C3	Set the data, and press PAUSE button.
9	6	01	C1	Set the data, and press PAUSE button. (Note)
10	6	02		Check that the data changes to “01”.
11				Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame. (Fig. 5-1-11)
12				Check that all color luminance points settle within each color reproduction frame. (Fig. 5-1-11)

Note: The adjustment data will be automatically input to page: E, address: 62 to 65.

Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	F	5E	1D	Set the data, and press PAUSE button.
3	0	01	00	Set the data.

18. Color Reproduction Adjustment (ND Filter 2)

When the ND FILTER switch is “2”, adjust the color difference matrix coefficient so that proper color reproduction is produced.

Subject	Color bar chart (Color bar standard picture frame)
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	E
Adjustment Address	90, 91, 92, 93
Specified Value	All color luminance points should settle within each color reproduction frame. (Fig. 5-1-11)

Note1: After the power is turned on, this adjustment can be done only once.

Note2: Check that the data of page: 6, address: 02 is “00”. If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

Switch setting:

- 1) ND FILTER..... 2
(The data of page: 6, address: 9D is “02”.)

Adjusting method:

Order	Page	Address	Data	Procedure
1				Check that the picture frame is set to the specified position. (Refer to “8. Picture Frame Setting”.)
2	0	01	01	Set the data.
3	F	5E	2D	Set the data, and press PAUSE button.
4	E	90	00	Set the data, and press PAUSE button.
5	E	91	00	Set the data, and press PAUSE button.
6	E	92	20	Set the data, and press PAUSE button.
7	E	93	20	Set the data, and press PAUSE button.
8	6	01	CB	Set the data, and press PAUSE button.
9	6	01	C9	Set the data, and press PAUSE button. (Note)
10	6	02		Check that the data changes to “01”.
11				Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame. (Fig. 5-1-11)
12				Check that all color luminance points settle within each color reproduction frame. (Fig. 5-1-11)

Note: The adjustment data will be automatically input to page: E, address: 90 to 93.

Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	F	5E	1D	Set the data, and press PAUSE button.
4	0	01	00	Set the data.
5				Set ND FILTER switch to “OFF”.

19. White Balance Check

Subject	Clear chart (Color bar standard picture frame)
Filter	Filter C14 for color temperature correction ND filter 1.0 and 0.3 (2 sheets)
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Specified Value	Fig. 5-1-12. A to B

Switch setting:

ND FILTER OFF
(The data of page: 6, address: 9D is "00".)

Checking method:

Order	Page	Address	Data	Procedure
				Indoor white balance check
1				Check that the lens is not covered with either filter.
2	6	01	0F	Set the data, and press PAUSE button.
3				Check that the center of the white luminance point is within the circle shown Fig. 5-1-12. A.
				Outdoor white balance check
4				Place the C14 filter on the lens.
5	6	01	3F	Set the data, and press PAUSE button.
6				Check that the center of the white luminance point is within the circle shown Fig. 5-1-12. B.
7				Remove the C14 filter.
				Indoor white balance data check
8				Place the ND filter 1.6 (1.0+0.3+0.3) on the lens.
9	6	01	0F	Set the data, and press PAUSE button.
10				Wait for 2 seconds.
11	0	01	01	Set the data.
12	F	10	A1	Set the data, and press PAUSE button.
13	F	11	04	Set the data, and press PAUSE button.
14	1			Check that the second digit of the display data (Note) is an odd number. Specified value: 1 : XX : <u>XX</u> └─ Odd number
15	6	04	C6	Set the data.
16	1			Check that the display data (Note) satisfies the specified value. Specified value: 0000 to 0C50

Note: Displayed data of the adjustment remote commander.

1 : XX : XX
 └─ Display data

Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	04	00	Set the data.
3	F	10	00	Set the data, and press PAUSE button.
4	F	11	00	Set the data, and press PAUSE button.
5	0	01	00	Set the data.

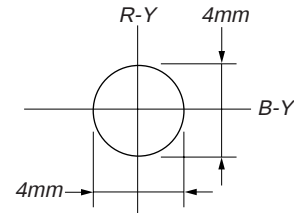


Fig. 5-1-12. (A)

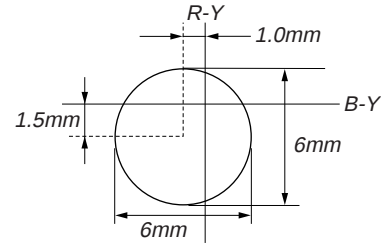


Fig. 5-1-12. (B)

20. Steady Shot Adjustment

- This adjustment is performed only when replacing the angular velocity sensor.
Although this adjustment need not be performed when the circuit is damaged, etc., check the operations.
- Note down the sensitivity displayed on the angular velocity sensor of the repair parts. At this time, note down also to which board it was attached to.

Be sure to check because if attached incorrectly, the screen will vibrate up and down or left and right during hand-shake correction operations.

Precautions on the Parts Replacement

There are two types of repair parts.

Type A: ENC03JA

Type B: ENC03JB

Replace the broken sensor with a same type sensor. If replace with other type parts, the image will vibrate up and down or left and right during hand-shake correction operations. After replacing, re-adjust according to the adjusting method after replacement.

Precautions on Angular Velocity Sensor

The sensor incorporates a precision oscillator. Handle it with care as if it dropped, the balance of the oscillator will be disrupted and operations will not be performed properly.

Switch setting:

STEADY SHOT (Menu) ON
DIGITAL ZOOM (Menu)OFF

20-1. Steady Shot Adjustment (1)

Subject	Pattern A (1.5m from the front of the lens)
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope (V period)
Adjustment Page	F
Adjustment Address	41



A4 size (297mm × 210mm)

Fig.5-1-13.

Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: F, address: EA, set data: 76, and press the PAUSE button of the adjustment remote commander.
- 3) Expose pattern A with the zoom TELE end.
- 4) Adjust the focus.
- 5) Measure the vertical position SV1 (msec) of the falling edge of the waveform. (Oscilloscope is V period)
- 6) Select page: F, address: EA, set data: 8A, and press the PAUSE button.
- 7) Measure the vertical position SV2 (msec) of the falling edge of the waveform. (Oscilloscope is V period)
- 8) Obtain D₄₁' using the following equation (decimal calculation).
NTSC model

$$D_{41}' = \frac{1.53}{SV1 - SV2} \times \frac{0.6}{\text{PITCH sensor sensitivity}} \times 99$$

PAL model

$$D_{41}' = \frac{1.84}{SV1 - SV2} \times \frac{0.6}{\text{PITCH sensor sensitivity}} \times 99$$

Note: PITCH sensor sensitivity (SE601 or SE602 of SE-108 board) is written only on the repair parts.

- 9) Convert D₄₁' to hexadecimal notation, and obtain D₄₁. (Round off to one decimal place)
(Refer to Table 5-4-1. "Hexadecimal notation-Decimal notation conversion table" of "5-4. Service Mode".)
- 10) Select page: F, address: 41, set data: D₄₁, and press the PAUSE button.

Processing after Completing Adjustments

- 1) Select page: F, address: EA, set data: 80, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: 0, address: 01, and set data: 00.
- 3) Check that the steady shot operation is performed normally.

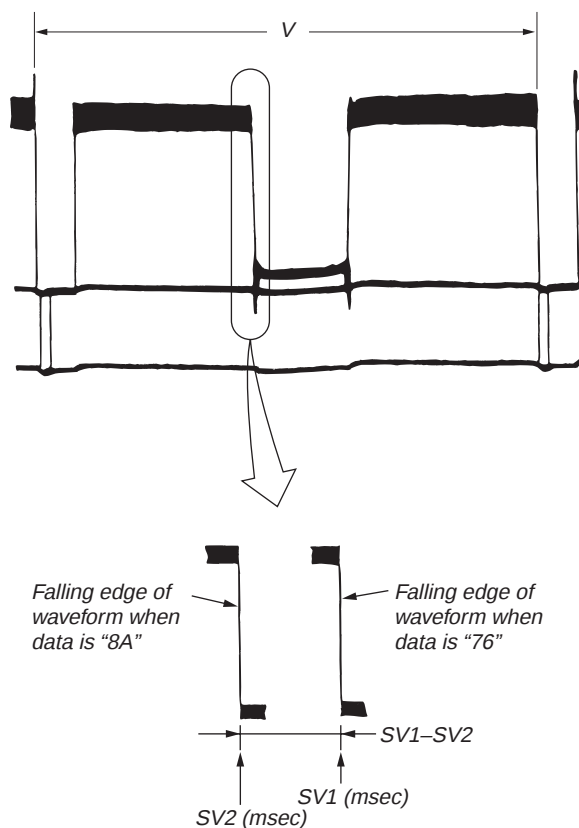


Fig. 5-1-14.

20-2. Steady Shot Adjustment (2)

Subject	Pattern B (1.5m from the front of the lens)
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope (H period)
Adjustment Page	F
Adjustment Address	42

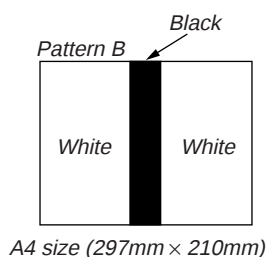


Fig.5-1-15.

Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: F, address: EB, set data: 76, and press the PAUSE button of the adjustment remote commander.
- 3) Expose pattern B with the zoom TELE end.
- 4) Adjust the focus.
- 5) Measure the horizontal position SH1 (μ sec) of the falling edge of the waveform. (Oscilloscope is H period)
- 6) Select page: F, address: EB, set data: 8A, and press the PAUSE button.
- 7) Measure the horizontal position SH2 (μ sec) of the falling edge of the waveform. (Oscilloscope is H period)
- 8) Obtain D_{42'} using the following equation (decimal calculation).

$$D_{42'} = \frac{3.90}{SH1 - SH2} \times \frac{0.6}{\text{YAW sensor sensitivity}} \times 99$$

Note: YAW sensor sensitivity (SE600 or SE603 of SE-108 board) is written only on the repair parts.

- 9) Convert D_{42'} to hexadecimal notation, and obtain D₄₂. (Round off to one decimal place)
(Refer to Table 5-4-1. "Hexadecimal notation-Decimal notation conversion table" of "5-4. Service Mode".)
- 10) Select page: F, address: 42, set data: D₄₂, and press the PAUSE button.

Processing after Completing Adjustments

- 1) Select page: F, address: EB, set data: 80, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: 0, address: 01, and set data: 00.
- 3) Check that the steady shot operation is performed normally.

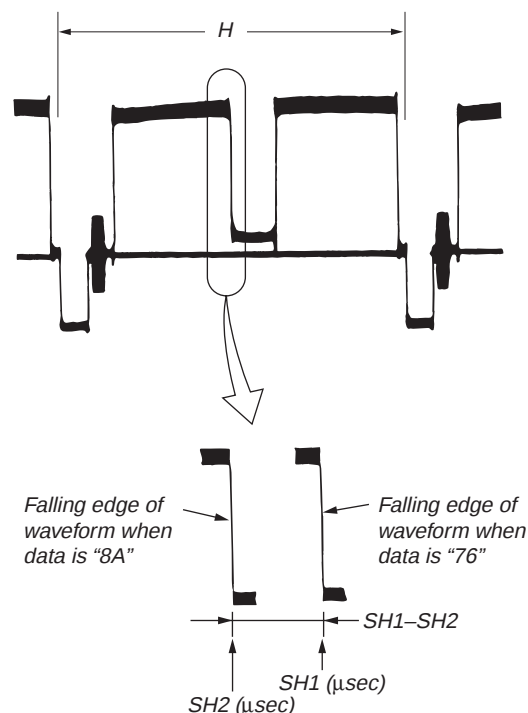


Fig. 5-1-16.

1-4. COLOR ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENT

Note1: The back light (fluorescent tube) is driven by a high voltage AC power supply. Therefore, do not touch the back light holder to avoid electrical shock.

Note2: When replacing the LCD unit, be careful to prevent damages caused by static electricity.

Note3: As the PANEL CLOSE switch is attached to the cabinet (R), this cabinet must be attached when performing adjustments. If you perform the adjustments with cabinet (R) removed, set the following data.

1) Select page: 2, address: 0E, and set data: 67.

2) Select page: 2, address: 0F, and set data: 01.

Reset the data after completing adjustment.

1) Select page: 2, address: 0E, and set data: 00.

2) Select page: 2, address: 0F, and set data: 00.

[Adjusting connector]

Most of the measuring points for adjusting the viewfinder system are concentrated in CN007 of the VC-242 board.

Connect the Measuring Instruments via the CPC-13 jig (J-6082-433-A).

The following table shows the Pin No. and signal name of CN007.

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	11	H START
2	RF MON	12	XHD/PSIG
3	SWP	13	EVF VB
4	RF IN/LANC JACK IN	14	EVF VR
5	TDO	15	EVF VCO
6	GND	16	GND
7	TCK	17	EVF BL –
8	TDI	18	EVF VG
9	PANEL COM	19	LANC SIG
10	TMS	20	EVF BL +

Table 5-1-7.

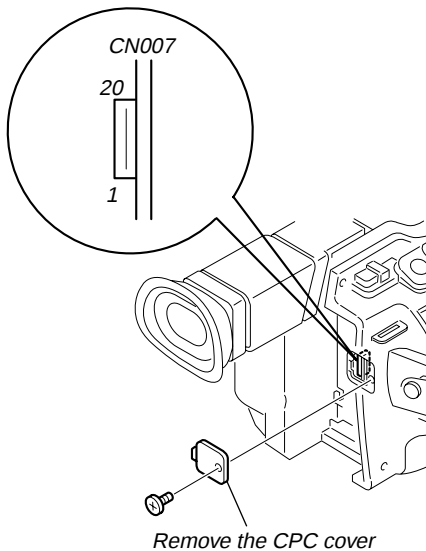


Fig. 5-1-17.

1. VCO Adjustment (VC-242 board)

Set the VCO free-run frequency. If deviated, the EVF screen will be blurred.

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ⑮ of CN007 (EVF VCO)
Measuring Instrument	Frequency counter
Adjustment Page	D
Adjustment Address	92, 93
Specified Value	f = 15734 ± 30Hz (NTSC) f = 15625 ± 30Hz (PAL)

Note1: NTSC: DCR-VX2000

PAL: DCR-VX2000E

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	92		Change the data and set the VCO frequency (f) to the specified value.
3	D	92		Press PAUSE button.
4	D	92		Read the data, and this data is named D ₉₂ .
5				Convert D ₉₂ to decimal notation, and obtain D ₉₂ '. (Note2)
6				Calculate D ₉₃ ' using following equations (Decimal calculation) NTSC model: When D ₉₂ ' ≤ 226 D ₉₃ ' = D ₉₂ ' + 29 When D ₉₂ ' > 226 D ₉₃ ' = 255 PAL model: When D ₉₂ ' ≥ 29 D ₉₃ ' = D ₉₂ ' – 29 When D ₉₂ ' < 29 D ₉₃ ' = 00
7				Convert D ₉₃ ' to a hexadecimal number, and obtain D ₉₃ . (Note2)
8	D	93	D ₉₃	Set the data, and press PAUSE button.
9	0	01	00	Set the data.

Note2: Refer to “Table 5-4-1. Hexadecimal-decimal Conversion Table”.

2. Bright Adjustment (VC-242 board)

Set the D range of the RGB decoder used to drive the LCD to the specified value. If deviated, the LCD screen will become blackish or saturated (whitish).

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ⑮ of CN007 (EVF VG)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	95
Specified Value	A = 7.30 ± 0.05V

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	95		Change the data and set the voltage (A) between the reversed waveform pedestal and non-reversed waveform pedestal to the specified value.
3	D	95		Press PAUSE button.
4	0	01	00	Set the data.

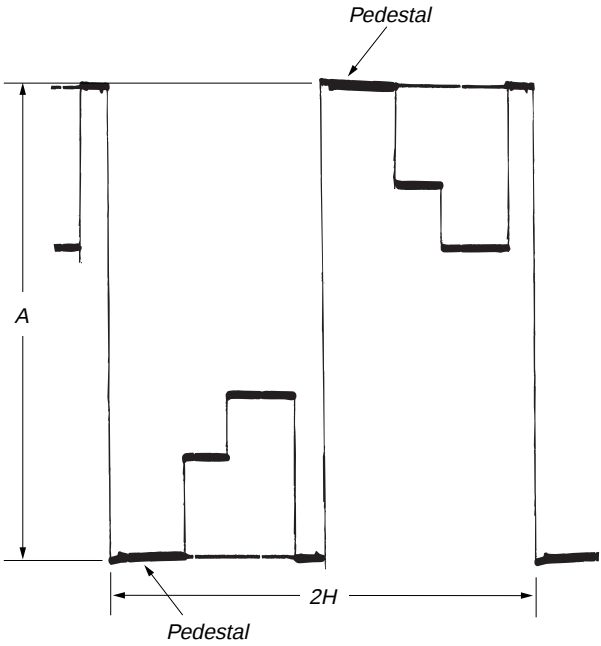


Fig. 5-1-18.

3. Contrast Adjustment (VC-242 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ⑮ of CN007 (EVF VG)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	99
Specified Value	A=2.45 ± 0.05V

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	99		Change the data and set the voltage (A) between the 3 steps peak and pedestal to the specified value. (The data should be "00" to "7F".)
3	D	99		Press PAUSE button.
4	0	01	00	Set the data.

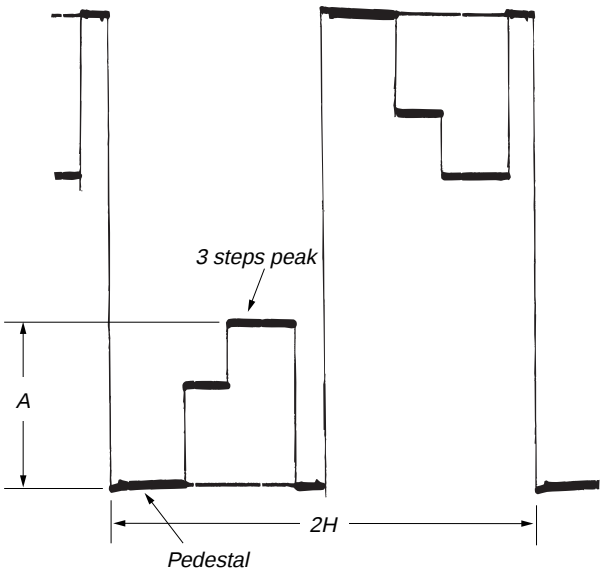


Fig. 5-1-19.

4. Backlight Consumption Current Adjustment (VC-242 board)

Set the backlight luminance and color temperature.
If deviated, the image may become dark or bright.

Mode	Camera
Subject	Arbitrary
Measurement Point	+ Probe: Pin ⑳ of CN007 (EVF BL+) – Probe: Pin ⑰ of CN007 (EVF BL–)
Measuring Instrument	Digital voltmeter
Adjustment Page	D
Adjustment Address	9C, 9D, 9E, 9F
Specified Value	BRIGHT mode : $A=37.0 \pm 1.5\text{mVdc}$ NORMAL mode : $A=22.0 \pm 1.5\text{mVdc}$

Note1: Perform the adjustment in the following order.

Note2: Adjust 30 seconds after running on the power supply.

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	9C	F0	Set the data, and press PAUSE button.
3	D	9D	F0	Set the data, and press PAUSE button.
4	D	9E	11	Set the data, and press PAUSE button.
5	D	9F	1F	Set the data, and press PAUSE button.
6	D	9D		Change the data and set the voltage difference (A) between Pin ⑳ and Pin ⑰ to the specified value of BRIGHT mode. (The data should be “C0” to “FF”.)
7	D	9D		Press PAUSE button.
8	D	9C		Set the same data as address: 9D.
9	D	9C		Press PAUSE button.
10	D	9E		Change the data and set the voltage difference (A) between Pin ⑳ and Pin ⑰ to the specified value of NORMAL mode. (The data should be “00” to “1F”.)
11	D	9E		Press PAUSE button.
12	0	01	00	Set the data.

5. White Balance Adjustment (VC-242 board)

Correct the white balance.

If deviated, the reproduction of the EVF screen may degenerate.

Mode	Camera
Subject	Arbitrary
Measurement Point	Check on EVF screen
Measuring Instrument	
Adjustment Page	D
Adjustment Address	97, 98
Specified Value	The EVF screen should not be colored.

Note1: Check the white balance only when replacing the following parts.
If necessary, adjust them.

1. LCD panel
2. Light induction plate
3. IC1802

Note2: Use the AC power adaptor.

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	97	90	Set the data, and press PAUSE button.
3	D	98	80	Set the data, and press PAUSE button.
4	D	98		Check that the EVF screen is not colored. If not colored, proceed to step 10.
5	D	97		Change the data so that the EVF screen is not colored.
6	D	97		Press PAUSE button.
7	D	98		Change the data so that the EVF screen is not colored.
8	D	98		Press PAUSE button.
9	D	98		If the EVF screen is colored, repeat steps 5 to 9.
10	0	01	00	Set the data.

1-5. LCD SYSTEM ADJUSTMENT

Note 1: The back light (fluorescent tube) is driven by a high voltage AC power supply. Therefore, do not touch the back light holder to avoid electrical shock.

Note 2: When replacing the LCD unit, be careful to prevent damages caused by static electricity.

[Adjusting connector]

Most of the measuring points for adjusting the LCD system are concentrated in CN2105 of the PD-126 board. The following table shows the Pin No. and signal name of CN2105.

Pin No.	Signal Name
1	VG
2	COM
3	GND
4	PSIG
5	HSY

Table 5-1-8.

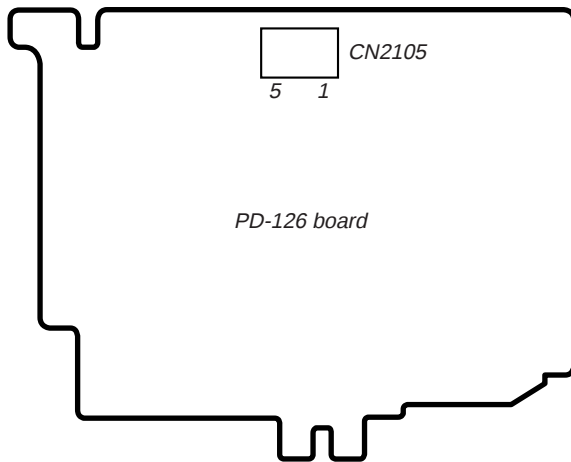


Fig. 5-1-20.

1. VCO Adjustment (PD-126 board)

Set the VCO free-run frequency. If deviated, the LCD screen will be blurred.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ⑤ of CN2105 (HSY)
Measuring Instrument	Frequency counter
Adjustment Page	D
Adjustment Address	A2, A3
Specified Value	f = 15734 ± 30Hz (NTSC) f = 15625 ± 30Hz (PAL)

Note1: NTSC: DCR-VX2000
PAL: DCR-VX2000E

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	A2		Change the data and set the VCO frequency (f) to the specified value.
3	D	A2		Press PAUSE button.
4	D	A2		Read the data, and this data is named D _{A2} .
5				Convert D _{A2} to decimal notation, and obtain D _{A2} '. (Note2)
6				Calculate D _{A3} ' using following equations (Decimal calculation) NTSC model: When D _{A2} ' ≤ 221 D _{A3} ' = D _{A2} ' + 34 When D _{A2} ' > 221 D _{A3} ' = 255 PAL model: When D _{A2} ' ≥ 34 D _{A3} ' = D _{A2} ' - 34 When D _{A2} ' < 34 D _{A3} ' = 00
7				Convert D _{A3} ' to a hexadecimal number, and obtain D _{A3} . (Note2)
8	D	A3	D _{A3}	Set the data, and press PAUSE button.
9	0	01	00	Set the data.

Note2: Refer to "Table 5-4-1. Hexadecimal-decimal Conversion Table".

2. Bright Adjustment (PD-126 board)

Set the D range of the RGB decoder used to drive the LCD to the specified value. If deviated, the LCD screen will become blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ① of CN2105 (VG)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	A5
Specified Value	$A = 7.8 \pm 0.05V$

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	A5		Change the data and set the voltage (A) between the reversed waveform pedestal and non-reversed waveform pedestal to the specified value.
3	D	A5		Press PAUSE button.
4	0	01	00	Set the data.

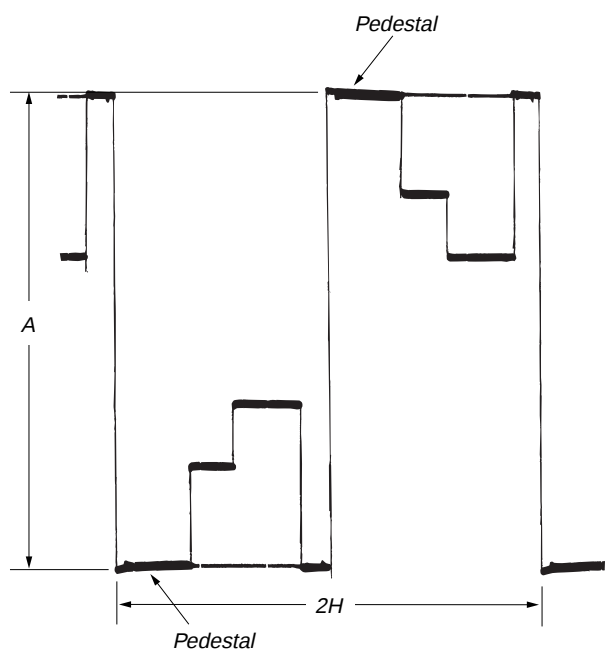


Fig. 5-1-21.

3. Black Limit Adjustment (PD-126 board)

Set the dynamic range of the LCD driver to an appropriate level. If deviated, the LCD screen will become blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ④ of CN2105 (PSIG)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	A6
Specified Value	$A = 8.50 \pm 0.05V$

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	2	0E	61	Set the data.
3	2	0F		Set the following data. 5B: DCR-VX2000 (NTSC) 53: DCR-VX2000E (PAL)
4	D	A6		Change the data and set the PSIG signal amplitude (A) to the specified value. (The data should be "00" to "0F".)
5	D	A6		Press PAUSE button.
6	2	0E	00	Set the data.
7	2	0F	00	Set the data.
8	0	01	00	Set the data.

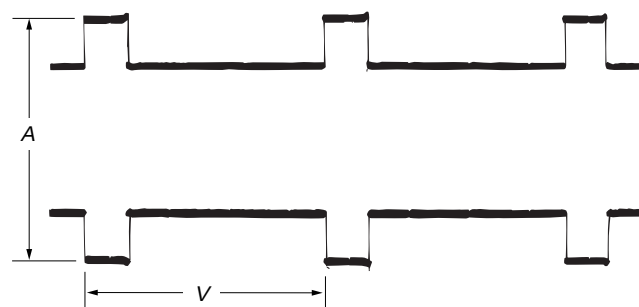


Fig. 5-1-22.

4. Contrast Adjustment (PD-126 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ① of CN2105 (VG)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	AA
Specified Value	A = 3.10 ± 0.05V

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	AA		Change the data and set the voltage (A) between the 3 steps peak and pedestal to the specified value. (The data should be “00” to “7F”.)
3	D	AA		Press PAUSE button.
4	0	01	00	Set the data.
5				Check that the specified value of “Bright Adjustment” is satisfied.

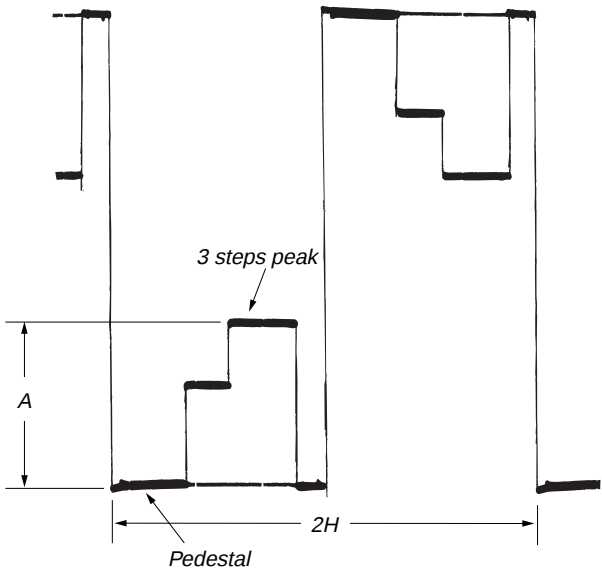


Fig. 5-1-23.

5. Center Level Adjustment (PD-126 board)

Set the video signal center level of LCD panel to an appropriate level.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ① of CN2105 (VG)
Measuring Instrument	Digital voltmeter
Adjustment Page	D
Adjustment Address	AB
Specified Value	A = 7.00 ± 0.05Vdc

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	3	0C	60	Set the data, and press PAUSE button.
3	3	22	08	Set the data, and press PAUSE button.
4	D	AB		Change the data and set the DC voltage (A) to the specified value. (The data should be “00” to “7F”.)
5	D	AB		Press PAUSE button.
6	3	0C	00	Set the data, and press PAUSE button.
7	3	22	00	Set the data, and press PAUSE button.
8	0	01	00	Set the data.

6. V-COM Adjustment (PD-126 board)

Set the DC bias of the common electrode drive signal of LCD to the specified value.

If deviated, the LCD display will move, producing flicker and conspicuous vertical lines.

Mode	VTR stop
Signal	No signal
Measurement Point	Check on LCD display
Measuring Instrument	
Adjustment Page	D
Adjustment Address	A4
Specified Value	The brightness difference between the section A and section B is minimum.

Note: Perform “Bright Adjustment”, “Black Limit Adjustment”, “Contrast Adjustment” and “Center Level Adjustment” before this adjustment.

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	B0		Write down the data.
3	D	B0	CA	Set the data, and press PAUSE button.
4	D	A4		Change the data so that the brightness of the section A and that of the section B is equal. (The data should be “80” to “BF”.)
5	D	A4		Subtract 2 from the data.
6	D	A4		Press PAUSE button.
7	D	B0		Write the data that was written down in the step 2.
8	D	B0		Press PAUSE button.
9	0	01	00	Set the data.

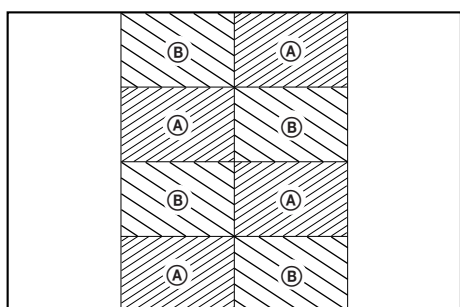


Fig. 5-1-24.

7. White Balance Adjustment (PD-126 board)

Correct the white balance.

If deviated, the reproduction of the LCD screen may degenerate.

Mode	VTR stop
Signal	No signal
Measurement Point	Check on LCD screen
Measuring Instrument	
Adjustment Page	D
Adjustment Address	A8, A9
Specified Value	The LCD screen should not be colored.

Note1: Check the white balance only when replacing the following parts. If necessary, adjust them.

1. LCD panel
2. Light induction plate
3. IC2101

Note2: Use the AC power adaptor.

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	A8	85	Set the data, and press PAUSE button.
3	D	A9	75	Set the data, and press PAUSE button.
4	D	A9		Check that the LCD screen is not colored. If not colored, proceed to step 10.
5	D	A8		Change the data so that the LCD screen is not colored.
6	D	A8		Press PAUSE button.
7	D	A9		Change the data so that the LCD screen is not colored.
8	D	A9		Press PAUSE button.
9	D	A9		If the LCD screen is colored, repeat steps 5 to 9.
10	0	01	00	Set the data.

5-2. MECHANISM SECTION ADJUSTMENT

On the mechanism section adjustment

For details of mechanism section adjustments, checks, and replacement of mechanism parts, refer to the separate volume “DV MECHANICAL ADJUSTMENT MANUAL IV [C Mechanism]”.

2-1. HOW TO ENTER RECORD MODE WITHOUT CASSETTE

- 1) Connect the adjustment remote commander to the LANC jack.
- 2) Turn the HOLD switch of the adjustment remote commander to the ON position.
- 3) Close the cassette compartment without the cassette.
- 4) Select page: 3, address: 01, set data: 0C, and press the PAUSE button of the adjustment remote commander.
(The mechanism enters the record mode automatically.)
Note: The function buttons become inoperable.
- 5) To quit the record mode, select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander. (Whenever you want to quit the record mode, be sure to quit following this procedure.)

2-2. HOW TO ENTER PLAYBACK MODE WITHOUT CASSETTE

- 1) Connect the adjustment remote commander to the LANC jack.
- 2) Turn the HOLD switch of the adjustment remote commander to the ON position.
- 3) Close the cassette compartment without the cassette.
- 4) Select page: 3, address: 01, set data: 0B, and press the PAUSE button of the adjustment remote commander.
(The mechanism enters the playback mode automatically.)
Note: The function buttons become inoperable.
- 5) To quit the playback mode, select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander. (Whenever you want to quit the playback mode, be sure to quit following this procedure.)

2-3. TAPE PATH ADJUSTMENT

1. Preparation for Adjustment

- 1) Clean the tape running side (tape guide, drum, capstan shaft, pinch roller, etc.).
- 2) Connect the adjustment remote commander to the LANC jack.
- 3) Turn the HOLD switch of the adjustment remote commander to the ON position.
- 4) Connect an oscilloscope to VC-242 board CN007 via the CPC-13 jig (J-6082-443-A).
Channel 1: VC-242 board, CN007 Pin ② (Note)
External trigger: VC-242 board, CN007 Pin ③
Note: Connect a 75 Ω resistor between pins ② of CN007 and ① (GND).
75 Ω resistor (Parts code: 1-247-804-11)
- 5) Playback the alignment tape for tracking. (XH2-1)
- 6) Select page: 3, address: 33, and set data: 08.
- 7) Select page: 3, address: 26, and set data: 31.
- 8) Check that the oscilloscope RF waveform is normal at the entrance and exit.

If not normal, adjust according to the separate volume “DV MECHANICAL ADJUSTMENT MANUAL IV [C Mechanism]”.

CN007 of VC-242 board

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	11	H START
2	RF MON	12	XHD/PSIG
3	SWP	13	EVF VB
4	RF IN/LANC JACK IN	14	EVF VR
5	TDO	15	EVF VCO
6	GND	16	GND
7	TCK	17	EVF BL –
8	TDI	18	EVF VG
9	PANEL COM	19	LANC SIG
10	TMS	20	EVF BL +

2. Procedure after operations

- 1) Connect the adjustment remote commander to the LANC jack and set the HOLD switch to the ON position.
- 2) Select page: 3, address: 26, and set data: 00.
- 3) Select page: 3, address: 33, and set data: 00.

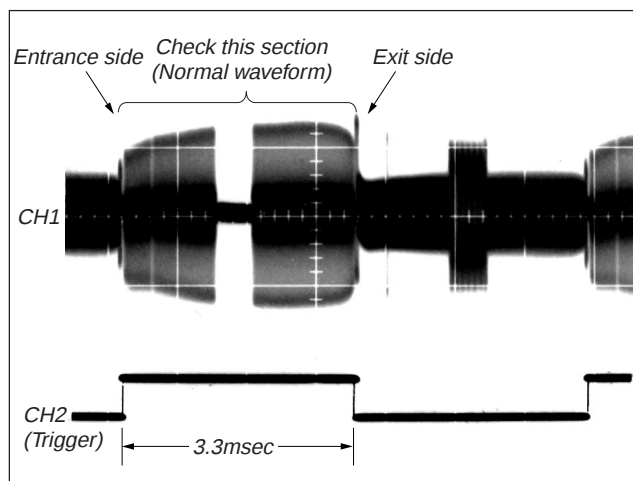


Fig. 5-2-1.

5-3. VIDEO SECTION ADJUSTMENTS

NTSC model : DCR-VX2000

PAL model : DCR-VX2000E

3-1. PREPARATIONS BEFORE ADJUSTMENTS

Use the following measuring instruments for video section adjustments.

3-1-1. Equipment Required

- 1) TV monitor
- 2) Oscilloscope (dual-phenomenon, band above 30 MHz with delay mode) (Unless specified otherwise, use a 10 : 1 probe.)
- 3) Frequency counter
- 4) Pattern generator with video output terminal.
- 5) Digital voltmeter
- 6) Audio generator
- 7) Audio level meter
- 8) Audio distortion meter
- 9) Audio attenuator
- 10) Regulated power supply
- 11) Alignment tapes
 - Tracking standard (XH2-1)
Parts code: 8-967-997-01
 - SW/OL standard (XH2-3)
Parts code: 8-967-997-11
 - Audio operation check for NTSC (XH5-3)
Parts code: 8-967-997-51
 - System operation check for NTSC (XH5-5)
Parts code: 8-967-997-61
 - BIST check for NTSC (XH5-6)
Parts code: 8-967-997-71
 - Audio operation check for PAL (XH5-3P)
Parts code: 8-967-997-55
 - System operation check for PAL (XH5-5P)
Parts code: 8-967-997-66
 - BIST check for PAL (XH5-6P)
Parts code: 8-967-997-76
- 12) Adjustment remote commander (J-6082-053-B)
- 13) CPC-13 jig (J-6082-443-A)
- 14) Extension cable (50P, 0.5 mm)
For extension between the CD-254 board (CN100) and the VC-242 board (CN025) (J-6082-496-A)

3-1-2. Precautions on Adjusting

- 1) The adjustments of this unit are performed in the VTR mode or camera mode.
To set to the VTR mode, set the power switch to "VCR" (or "PLAYER") or set the "Forced VTR Power ON mode" using the adjustment remote commander (Note 1).
To set to the Camera mode, set the power switch to "CAMERA" or set the "Forced Camera Power ON mode" using the adjustment remote commander (Note 2).
After completing adjustments, be sure to exit the "Forced VTR Power ON Mode" or "Forced Camera Power ON Mode". (Note 3)
- 2) The handle block (Microphone unit, Microphone amplifier, remote commander receiver, VTR function key) need not be connected except during "Battery End Adjustment" and "Audio adjustments". To remove, disconnect the following connector.
FK-076 board CN501 (36P, 0.8mm)
- 3) By setting the "Forced VTR Power ON mode" or "Forced Camera Power ON mode", the video section can be operate even if the cabinet (L) (Control switch block (CF-4980)) has been removed. When removing the cabinet (L) disconnect the following connector.
VC-242 board CN009 (14P, 0.5mm)
- 4) Cabinet (R) (CK-93board, LCD block) need not be connected. But removing the cabinet (R) (removing the VC-242 board CN008) means removing the lithium 3V power supply (CK-093 board, BT250) , data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc.) will be lost. Before removing, note down the self-diagnosis data and the data on the history use (data of page: 2, address: A2 to AA). (Refer to "SELF-DIAGNOSIS FUNCTION" for the self-diagnosis data, and to "5-4.Service Mode" for the data on the history use.)
To remove the cabinet (R), disconnect the following connector.
VC-242 board CN008 (50P, 0.5mm)
- 5) The viewfinder (LB-065 board) is need not be connected. To remove it, disconnect the following connector.
VC-242 board CN8612 (27P, 0.3mm)
- 6) The FP-200 (flexible) is need not be connected. To remove it, disconnect the following connectors.
VC-242 board CN004 (10P, 0.5mm)
LA-026 board CN053 (27P, 0.5mm)
- 7) The LA-026 board is need not be connected. To remove it, disconnect the following connectors.
VC-242 board CN023 (80P, 0.5mm)
- 8) The CD-254 board of the lens block is need not be connected. To remove it, disconnect the following connectors.
VC-242 board CN025 (50P, 0.5mm)

Note 1: Setting the "Forced VTR Power ON" mode (VTR mode)

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 02, and press the PAUSE button of the adjustment remote commander.

The above procedure will enable the VTR power to be turned on with the control switch block (CF-4980) removed.

After completing adjustments, be sure to exit the "Forced Power ON mode".

Note 2: Setting the "Forced Camera Power ON" mode (Camera mode)

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjustment remote commander.

The above procedure will enable the camera power to be turned on with the control switch block (CF-4980) removed.

After completing adjustments, be sure to exit the "Forced Power ON mode".

Note 3: Setting the "Forced Memory Power ON" mode (Memory mode)

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 05, and press the PAUSE button of the adjustment remote commander.

The above procedure will enable the memory power to be turned on with the control switch block (CF-4980) removed.

After completing adjustments, be sure to exit the "Forced Power ON mode".

Note 4: Exiting the "Forced Power ON" mode

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 0, address: 01, and set data: 00.

3-1-3. Adjusting Connectors

Some of the adjusting points of the video section are concentrated at VC-242 board CN007. Connect the measuring instruments via the CPC-13 jig (J-6082-443-A). The following table lists the pin numbers and signal names of CN007.

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	11	H START
2	RF MON	12	XHD/PSIG
3	SWP	13	EVF VB
4	RF IN/LANC JACK IN	14	EVF VR
5	TDO	15	EVF VCO
6	GND	16	GND
7	TCK	17	EVF BL –
8	TDI	18	EVF VG
9	PANEL COM	19	LANC SIG
10	TMS	20	EVF BL +

Table 5-3-1.

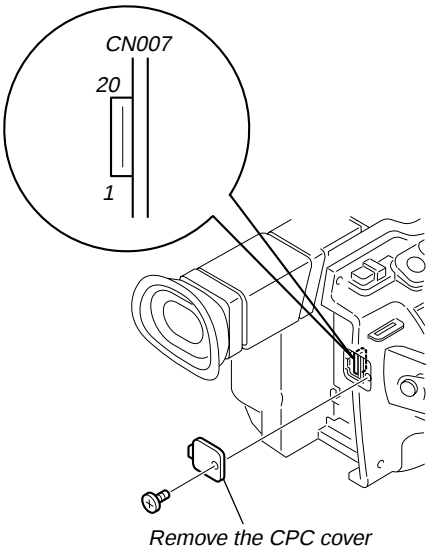


Fig. 5-3-1

3-1-4. Connecting the Equipment

Connect the measuring instruments as shown in Fig. 5-3-2, and perform the adjustments.

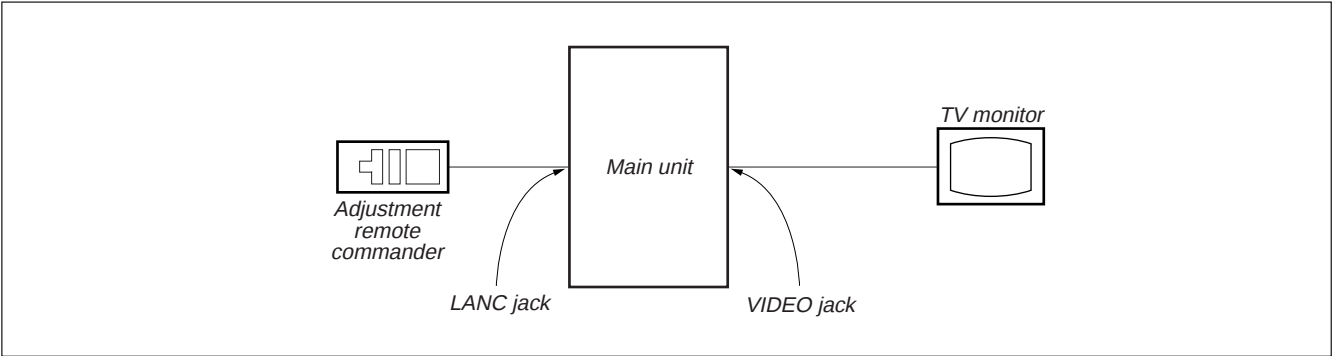


Fig. 5-3-2.

3-1-5. Alignment Tapes

Use the alignment tapes shown in the following table.
Use tapes specified in the signal column of each adjustment.

Name	Use
Tracking standard (XH2-1)	Tape path adjustment
SW/OL standard (XH2-3)	Switching position adjustment
Audio operation check (XH5-3 (NTSC), XH5-3P (PAL))	Audio system adjustment
System operation check (XH5-5 (NTSC), XH5-5P (PAL))	Operation check
BIST check (XH5-6 (NTSC), XH5-6P (PAL))	BIST check

Fig. 5-3-3 shows the 75% color bar signals recorded on the alignment tape for Audio Operation Check.

Note: Measure with video terminal (Terminated at 75 Ω)

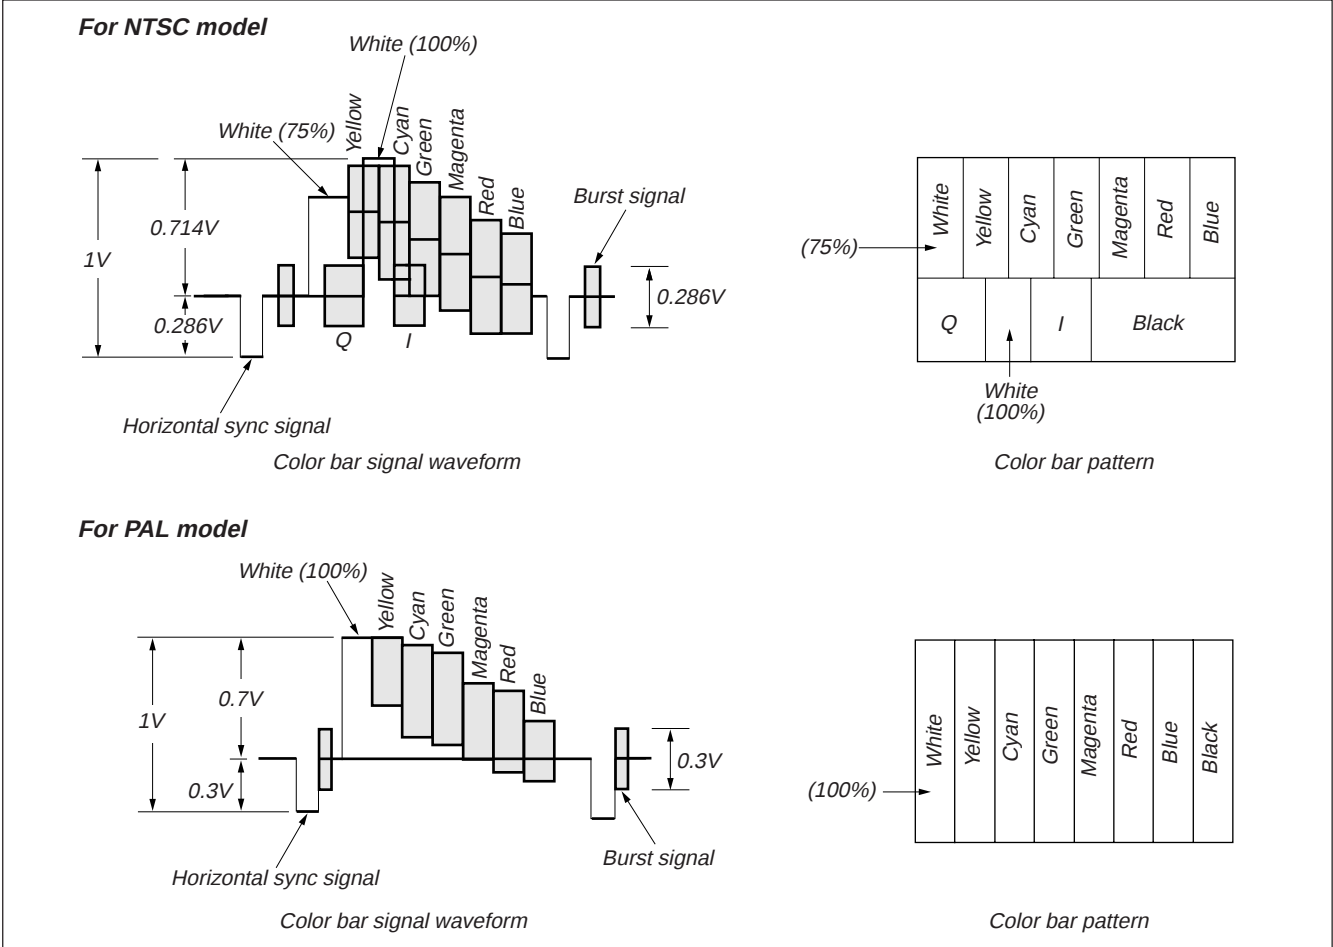


Fig. 5-3-3. Color bar signal of alignment tapes

3-1-6. Input/Output Level and Impedance

Video input/output

Phono jack

Video signal: 1 Vp-p, 75 Ω unbalanced, sync negative

S video input/output

4-pin mini DIN

Luminance signal: 1 Vp-p, 75 Ω unbalanced, sync negative

Chrominance signal: 0.286 Vp-p, 75 Ω unbalanced (NTSC)
: 0.300 Vp-p, 75 Ω unbalanced (PAL)

Audio input/output

Phono jack

Input level: 327mV

Input impedance: More than 47kΩ

Output level: 327 mV (at load impedance 47 kΩ)

Output impedance: Below 2.2 kΩ

3-2. SYSTEM CONTROL SYSTEM ADJUSTMENT

1. Initialization of B, C, D, E, F, 8 Page Data

If the B, C, D, E, F, 8 page data is erased due to some reason, perform “1-2. INITIALIZATION OF B, C, D, E, F, 8 PAGE DATA”, of “5-1. CAMERA SECTION ADJUSTMENT”

2. Serial No. Input

2-1. Company ID Input

Write the company ID in the EEPROM (nonvolatile memory).

Page	C
Address	E8, E9, EA, EB, EC

Input method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Input the following data to page: C, addresses: E8 to EC.
Note: Press the PAUSE button of the adjustment remote commander each time to set the data.

Address	Data
E8	08
E9	00
EA	46
EB	01
EC	01

- 3) Select page: 0, address: 01, and set data: 00.

2-2. Serial No. Input

Write the serial No. and model code in the EEPROM (nonvolatile memory). Convert the serial No. on the name plate from decimal to hexadecimal, and write in the EEPROM.

Page	C
Address	ED, EE, EF

Input method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Read the serial No. on the name plate, and take it as D₁.
Example: If the serial No. is 77881.
D₁=77881
- 3) Obtain D₂ and H₁ corresponding to D₁ from Table 5-3-2.
Example: If D₁ is “77881”.
D₂=D₁-65536=12345
H₁=FE

D ₁ (Decimal)	D ₂ (Decimal)	H ₁ (Hexadecimal) (Service model code)
000001 to 065535	D ₁	FE
065536 to 131071	D ₁ -65536	FE
131072 to 196607	D ₁ -131072	FE

Table 5-3-2.

- 4) Input H₁ to page: C, address: ED. (Model code input)
Example: If H₁ is “FE”.
Select page: C, address: ED, set data: FE, and press the PAUSE button.
- 5) Obtain the maximum decimal not exceeding D₂ from Table 5-3-3, and take this as D₃.
Example: If D₂ is “12345”.
D₃=12288
- 6) Obtain the hexadecimal corresponding to D₃ from Table 5-3-3, and take this as H₃.
Example: If D₃ is “12288”.
H₃=3000
- 7) Obtain the difference D₄ between D₂ and D₃. (Decimal calculation, $0 \leq D_4 \leq 255$)
D₄= D₂-D₃
Example: If D₂ is “12345” and D₃ is “12288”.
D₄=12345-12288=57
- 8) Convert D₄ to hexadecimal, and take this as H₄. (Refer to “Hexadecimal-decimal conversion table” in “5-4. Service Mode”.)
Example: If D₄ is “57”.
H₄=39
- 9) Input the upper 2 digits of H₃ to page: C, address: EE.
Example: If H₃ is “3000”.
Select page: C, address: EE, set data: 30, and press the PAUSE button.
- 10) Input H₄ to page: C, address: EF.
Example: If H₄ is “39”.
Select page: C, address: EF, set data: 39, and press the PAUSE button.
- 11) Select page: 0, address: 01, and set data: 00.

Decimal (D ₃)	Hexa- decimal (H ₃)	Decimal (D ₃)	Hexa- decimal (H ₃)	Decimal (D ₃)	Hexa- decimal (H ₃)	Decimal (D ₃)	Hexa- decimal (H ₃)	Decimal (D ₃)	Hexa- decimal (H ₃)	Decimal (D ₃)	Hexa- decimal (H ₃)	Decimal (D ₃)	Hexa- decimal (H ₃)	Decimal (D ₃)	Hexa- decimal (H ₃)
0	0000	8192	2000	16384	4000	24576	6000	32768	8000	40960	A000	49152	C000	57344	E000
256	0100	8448	2100	16640	4100	24832	6100	33024	8100	41216	A100	49408	C100	57600	E100
512	0200	8704	2200	16896	4200	25088	6200	33280	8200	41472	A200	49664	C200	57856	E200
768	0300	8960	2300	17152	4300	25344	6300	33536	8300	41728	A300	49920	C300	58112	E300
1024	0400	9216	2400	17408	4400	25600	6400	33792	8400	41984	A400	50176	C400	58368	E400
1280	0500	9472	2500	17664	4500	25856	6500	34048	8500	42240	A500	50432	C500	58624	E500
1536	0600	9728	2600	17920	4600	26112	6600	34304	8600	42496	A600	50688	C600	58880	E600
1792	0700	9984	2700	18176	4700	26368	6700	34560	8700	42752	A700	50944	C700	59136	E700
2048	0800	10240	2800	18432	4800	26624	6800	34816	8800	43008	A800	51200	C800	59392	E800
2304	0900	10496	2900	18688	4900	26880	6900	35072	8900	43264	A900	51456	C900	59648	E900
2560	0A00	10752	2A00	18944	4A00	27136	6A00	35328	8A00	43520	AA00	51712	CA00	59904	EA00
2816	0B00	11008	2B00	19200	4B00	27392	6B00	35584	8B00	43776	AB00	51968	CB00	60160	EB00
3072	0C00	11264	2C00	19456	4C00	27648	6C00	35840	8C00	44032	AC00	52224	CC00	60416	EC00
3328	0D00	11520	2D00	19712	4D00	27904	6D00	36096	8D00	44288	AD00	52480	CD00	60672	ED00
3584	0E00	11776	2E00	19968	4E00	28160	6E00	36352	8E00	44544	AE00	52736	CE00	60928	EE00
3840	0F00	12032	2F00	20224	4F00	28416	6F00	36608	8F00	44800	AF00	52992	CF00	61184	EF00
4096	1000	12288	3000	20480	5000	28672	7000	36864	9000	45056	B000	53248	D000	61440	F000
4352	1100	12544	3100	20736	5100	28928	7100	37120	9100	45312	B100	53504	D100	61696	F100
4608	1200	12800	3200	20992	5200	29184	7200	37376	9200	45568	B200	53760	D200	61952	F200
4864	1300	13056	3300	21248	5300	29440	7300	37632	9300	45824	B300	54016	D300	62208	F300
5120	1400	13312	3400	21504	5400	29696	7400	37888	9400	46080	B400	54272	D400	62464	F400
5376	1500	13568	3500	21760	5500	29952	7500	38144	9500	46336	B500	54528	D500	62720	F500
5632	1600	13824	3600	22016	5600	30208	7600	38400	9600	46592	B600	54784	D600	62976	F600
5888	1700	14080	3700	22272	5700	30464	7700	38656	9700	46848	B700	55040	D700	63232	F700
6144	1800	14336	3800	22528	5800	30720	7800	38912	9800	47104	B800	55296	D800	63488	F800
6400	1900	14592	3900	22784	5900	30976	7900	39168	9900	47360	B900	55552	D900	63744	F900
6656	1A00	14848	3A00	23040	5A00	31232	7A00	39424	9A00	47616	BA00	55808	DA00	64000	FA00
6912	1B00	15104	3B00	23296	5B00	31488	7B00	39680	9B00	47872	BB00	56064	DB00	64256	FB00
7168	1C00	15360	3C00	23552	5C00	31744	7C00	39936	9C00	48128	BC00	56320	DC00	64512	FC00
7424	1D00	15616	3D00	23808	5D00	32000	7D00	40192	9D00	48384	BD00	56576	DD00	64768	FD00
7680	1E00	15872	3E00	24064	5E00	32256	7E00	40448	9E00	48640	BE00	56832	DE00	65024	FE00
7936	1F00	16128	3F00	24320	5F00	32512	7F00	40704	9F00	48896	BF00	57088	DF00	65280	FF00

Table 5-3-3.

3. Battery End Adjustment

Set the battery end voltage.

If the voltage is incorrect, the life of the battery will shorten.

The image at the battery end will also be rough.

Mode	Camera recording
Subject	Arbitrary
Measurement Point	Display data of page: 2, address: 5D
Measuring Instrument	Adjustment remote commander
Adjustment Page	D
Adjustment Address	48 to 4C

Switch setting

- 1) AUTO FOCUS OFF

Connection:

- 1) Connect the regulated power supply and the digital voltmeter to the battery terminal as shown in Fig. 5-3-4.

Preparations before adjustments:

- 1) Adjust the output voltage of the regulated power supply so that the digital voltmeter display is $6.1 \pm 0.1\text{Vdc}$.
- 2) Turn off the power supply.
- 3) Turn on the HOLD switch of the adjustment remote commander.
- 4) Turn on the power supply.
- 5) Load a cassette, and set to the camera recording mode.

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2				Decrease the output voltage of the regulated power supply so that the digital voltmeter display is $5.50 \pm 0.01\text{Vdc}$.
3	2	5D		Read the data, and this data is named Dref.
4	D	48	Dref	Set the data, and press PAUSE button.
5				Convert Dref to decimal notation, and obtain Dref'. (Note1)
6				Calculate D_{49}' , D_{4A}' , D_{4B}' and D_{4C}' using following equations. (decimal calculation) $D_{49}' = D_{\text{ref}}' + 7$ $D_{4A}' = D_{\text{ref}}' + 25$ $D_{4B}' = D_{\text{ref}}' + 29$ $D_{4C}' = D_{\text{ref}}' + 37$
7				Convert D_{49}' , D_{4A}' , D_{4B}' and D_{4C}' to decimal notation, and obtain D_{49} , D_{4A} , D_{4B} and D_{4C} . (Note1)
8	D	49	D_{49}	Set the data, and press PAUSE button.
9	D	4A	D_{4A}	Set the data, and press PAUSE button.
10	D	4B	D_{4B}	Set the data, and press PAUSE button.
11	D	4C	D_{4C}	Set the data, and press PAUSE button.
12	0	01	00	Set the data.

Note1: Refer to Table 5-4-1. "Hexadecimal-decimal conversion table" of "5-4.Service mode".

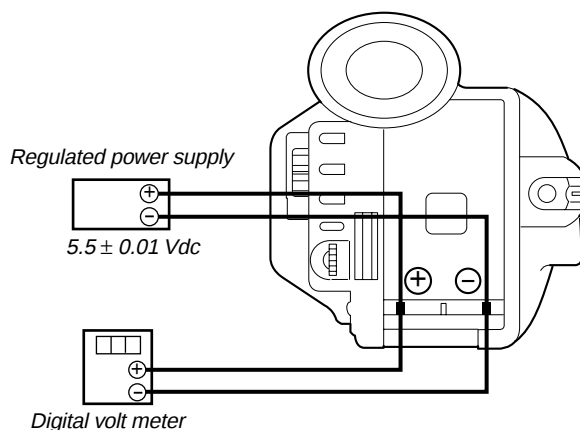


Fig. 5-3-4.

3-3. SERVO AND RF SYSTEM ADJUSTMENT

Before perform the servo and RF system adjustments, check that the specified value of “27 MHz Origin Oscillation Adjustment” of “CAMERA SYSTEM ADJUSTMENT” is satisfied.

Adjusting Procedure:

1. Cap FG duty adjustment
2. T-reel FG duty adjustment
3. PLL f_0 & LPF f_0 adjustment
4. Switching position adjustment
5. AGC center level
6. APC & AEQ adjustment
7. PLL f_0 & LPF f_0 final adjustment

1. Cap FG Duty Adjustment (VC-242 Board)

Set the Cap FG signal duty cycle to 50% to establish an appropriate capstan servo. If deviated, the uneven rotation of capstan and noise can occur.

Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	C
Adjustment Address	16
Specified Value	00

Adjusting method:

Order	Page	Address	Data	Procedure
1				Close the cassette compartment without inserting a cassette.
2	0	01	01	Set the data.
3	3	01	1B	Set the data, and press PAUSE button.
4	3	02		Check that the data changes in the following order. “1B” → “2B” → “00”
5	3	03		Check that the data is “00”. (Note)
6	0	01	00	Set the data.

Note: If the data is “01”, adjustment has errors or the mechanism deck is defective.

2. T reel FG Duty Adjustment (VC-242 Board)

Adjust the take-up reel FG signal duty cycle to an appropriate value so that the correct T-reel FG signal is obtained.

Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	C
Adjustment Address	17
Specified Value	00

Adjusting method:

Order	Page	Address	Data	Procedure
1				Close the cassette compartment without inserting a cassette.
2	0	01	01	Set the data.
3	3	01	1C	Set the data, and press PAUSE button.
4	3	02		Check that the data changes in the following order. “1C” → “2C” → “00”
5	3	03		Check that the data is “00”. (Note)
6	0	01	00	Set the data.

Note: If the data is “02”, adjustment has errors or the mechanism deck is defective.

3. PLL f_0 & LPF f_0 Adjustment (VC-242 Board)

Mode	VTR stop
Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	C
Adjustment Address	1F, 20, 22, 29
Specified Value	Bit2, bit3 and bit6 are “0”

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	3	01	30	Set the data, and press PAUSE button.
3	3	02		Check that the data changes to “00”.
4	3	03		Check that the data is “00”. (Note)
5	0	01	00	Set the data.

Note: If the data is other than “00”, there are errors.
For the error contents, see the following table. (For the bit values, refer to “5-4. SERVICE MODE”, “4-3. 3. Bit value discrimination”.)

Bit value of page: 3, address: 03 data	Error contents
bit 4 = 1	PLL f_0 even channel is defective
bit 5 = 1	PLL f_0 odd channel is defective
bit 6 = 1	LPF f_0 is defective
bit 3 = 1	PLL f_0 final adjustment is defective
bit 2 = 1	PLL f_0 final adjustment time-out

4. Switching Position Adjustment (VC-242 Board)

Mode	VTR playback
Signal	SW/OL reference tape (XH2-3)
Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	C
Adjustment Address	10, 11, 12, 13
Specified Value	00

Adjusting method:

Order	Page	Address	Data	Procedure
1				Insert the SW/OL reference tape and enter the VTR STOP mode.
2	0	01	01	Set the data.
3	3	21		Check that the data is "02". (Note1)
4	3	01	0D	Set the data, and press PAUSE button.
5	3	02		Check that the data changes to "00".
6	3	03		Check that the data is "00". (Note2)
7	0	01	00	Set the data.

Note1: If the data of page: 3, address: 21 is "72", the tape top being played. After playing the tape for 1 to 2 seconds, stop it, perform step 4 and higher.

Note2: If bit 0 of the data is "1", the even channel is defective. If bit 1 is "1", the odd channel is defective. Contents of the defect is written into page: C, addresses: 10 and 12. See the following table. (For the bit values, refer to "5-4. SERVICE MODE", "4-3. 3. Bit value discrimination".)

When the even channel is defective

Data of page: C, address: 10	Contents of defect
EE	Writing into EEPROM (IC502) is defective
E8	Adjustment data is out of range
E7	No data is returned from IC301 (CAIN)

When the odd channel is defective

Data of page: C, address: 12	Contents of defect
EE	Writing into EEPROM (IC502) is defective
E8	Adjustment data is out of range
E7	No data is returned from IC301 (CAIN)

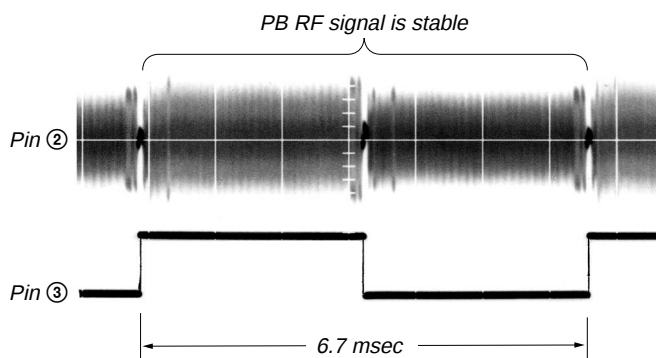


Fig. 5-3-5.

5. AGC Center Level and APC & AEQ Adjustment

5-1. Preparations before adjustments

Mode	Camera recording
Subject	Arbitrary

Adjusting method:

Order	Page	Address	Data	Procedure
1	2	30	40	Set the data.
2				Record the camera signal for three minutes.

5-2. AGC Center Level Adjustment (VC-242 Board)

Mode	Playback
Signal	Recorded signal at "Preparations before adjustments"
Measurement Point	Pin ② of CN007 (RF MON) (Note 1) Ext. trigger: Pin ③ of CN007 (SWP)
Measuring Instrument	Oscilloscope
Adjustment Page	C
Adjustment Address	1E
Specified Value	The data of page: 3, address: 03 is "00"

Note 1: Connect a 75Ω resistor between Pin ② and Pin ① (GND) of CN007.
75Ω resistor (Parts code: 1-247-804-11)

Adjusting method:

Order	Page	Address	Data	Procedure
1				Playback the recorded signal at "Preparations before adjustments"
2	0	01	01	Set the data.
3	3	33	08	Set the data.
4				Confirm that the playback RF signal is stable. (Fig. 5-3-5.)
5	3	01	23	Set the data, and press PAUSE button.
6	3	02		Check that the data is "00".
7	3	03		Check that the data is "00". (Note2)
8				Perform "APC & AEQ Adjustment".

Note2: If the data of page: 3, address: 03 is other than "00", adjustment has errors. (Take an appropriate remedial measures according to the errors referring to the following table.)

Data	Contents of defect
20	Perform re-adjustment. (Note 3)
30	The machine is defective
40	Perform re-adjustment. (Note 3)
50	The machine is defective

Note 3: If this data is displayed twice successively, the machine is defective.

5-3. APC & AEQ Adjustment (VC-242 Board)

Mode	Playback
Signal	Recorded signal at “Preparations before adjustments”
Measurement Point	Pin ② of CN007 (RF MON) (Note 1) Ext. trigger: Pin ③ of CN007 (SWP)
Measuring Instrument	Oscilloscope
Adjustment Page	C
Adjustment Address	18, 19, 1B, 1C, 21, 2C
Specified Value	The data of page: 3, address: 03 is “00”

Note 1: Connect a 75Ω resistor between Pin ② and Pin ① (GND) of CN007.

75Ω resistor (Parts code: 1-247-804-11)

Note 2: The “AGC Center Level Adjustment” must have already been completed before starting this adjustment.

Adjusting method:

Order	Page	Address	Data	Procedure
1				Playback the recorded signal at “Preparations before adjustments”
2	0	01	01	Set the data.
3	3	33	08	Set the data.
4				Confirm that the playback RF signal is stable. (Fig. 5-3-6.)
5	3	01	07	Set the data, and press PAUSE button.
6	3	02		Check that the data changes from “07” to “00” in about 20 seconds after pressing PAUSE button.
7	3	03		Check that the data is “00”. (Note3)
8				Perform “Processing after Completing Adjustments”.

Note3: If the data is other than “00”, adjustment has errors. Take an appropriate remedial measures according to the errors referring to the following table.

Data	Contents of defect
20	Perform re-adjustment. (Note 4)
30	The machine is defective
50	Perform re-adjustment. (Note 4)
60	The machine is defective
80	The machine is defective

Note 4: If this data is displayed twice successively, the machine is defective.

5-4. Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	2	30	00	Set the data.
2	3	33	00	Set the data.
3	0	01	00	Set the data.

6. PLL f₀ & LPF f₀ Final Adjustment (VC-242 Board)

Mode	VTR stop
Signal	Arbitrary
Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	C
Adjustment Address	1F, 20, 22, 29
Specified Value	Bit2, bit3 and bit6 are “0”

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	3	01	30	Set the data, and press PAUSE button.
3	3	02		Check that the data changes to “00”.
4	3	03		Check that bit2, bit3 and bit6 of the data are “0”. (Note)
5	0	01	00	Set the data.

Note: If bit2, bit3 or bit 6 of the data is “1”, there are errors.

For the error contents, see the following table. (For the bit values, refer to “5-4. SERVICE MODE”, “4-3. 3. Bit value discrimination”).

Bit value of page: 3, address: 03	Error contents
bit 4 = 1	PLL f ₀ even channel is defective
bit 5 = 1	PLL f ₀ odd channel is defective
bit 6 = 1	LPF f ₀ is defective
bit 3 = 1	PLL f ₀ final adjustment is defective
bit 2 = 1	PLL f ₀ final adjustment time-out

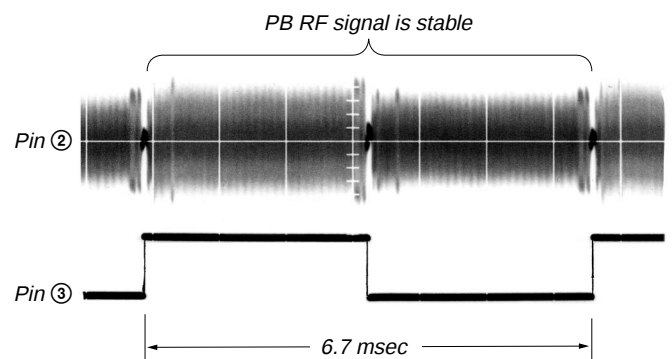


Fig. 5-3-6.

3-4. VIDEO SYSTEM ADJUSTMENTS

Before perform the video system adjustments, check that the specified value of “27MHz Origin Oscillation Adjustment” of “CAMERA SYSTEM ADJUSTMENT” is satisfied.

3-4-1. Base Band Block Adjustments

1. Chroma BPF f_0 Adjustment (VC-242 Board)


Set the center frequency of IC1301 chroma band-pass filter.

Mode	Camera
Subject	All black (Cover the lens with the lens cap)
Measurement Point	CH1: Chroma signal terminal of S VIDEO jack (75Ω terminated) CH2: Y signal terminal of S VIDEO jack (75Ω terminated)
Measuring Instrument	Oscilloscope
Adjustment Page	C
Adjustment Address	28
Specified Value	A = 100mVp-p or less B = 200mVp-p or more

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2				Check that the burst signal (B) is output to the chroma signal terminal of S VIDEO jack.
3	3	0C	04	Set the data, and press PAUSE button.
4	C	28		Change the data for minimum amplitude of the burst signal level (A). (The data should be “00” to “07”.)
5	C	28		Press PAUSE button.
6	3	0C	00	Set the data, and press PAUSE button.
7				Check that the burst signal level (B) satisfies the specified value.
8	0	01	00	Set the data.

When the data of page: 3, address: 0C, is 04:

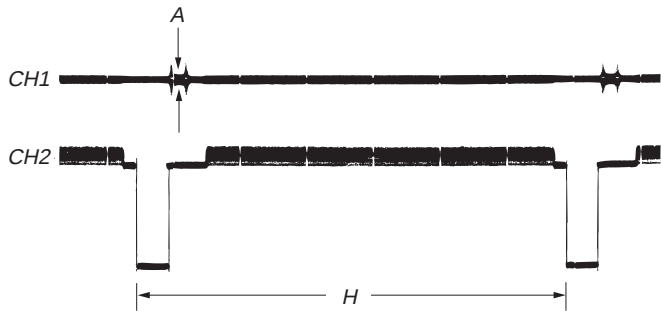

When the data of page: 3, address: 0C, is 00:

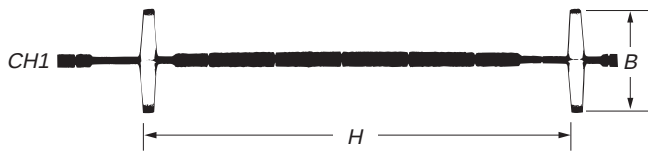


Fig. 5-3-7.

2. S VIDEO OUT Y Level Adjustment (VC-242 Board)

Mode	Camera
Subject	Arbitrary
Measurement Point	Y signal terminal of S VIDEO jack (75Ω terminated)
Measuring Instrument	Oscilloscope
Adjustment Page	C
Adjustment Address	25
Specified Value	A = 1000 ± 14mV

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	2	35		Note down the data.
3	2	35	01	Set the data.
4	3	0C	02	Set the data, and press PAUSE button.
5	C	25		Change the data and set the Y signal level (A) to the specified value.
6	C	25		Press PAUSE button.
7	3	0C	00	Set the data, and press PAUSE button.
8	2	35		Set the data that is noted down at step 2.
9	0	01	00	Set the data.

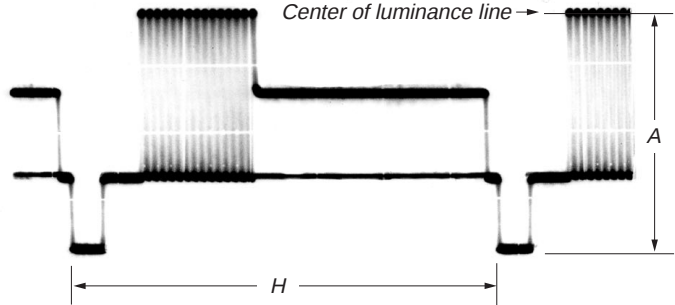


Fig. 5-3-8.

3. S VIDEO OUT Chroma Level Adjustment (VC-242 Board)

Mode	Camera
Subject	Arbitrary
Measurement Point	Chroma signal terminal of S VIDEO jack (75Ω terminated) External trigger: Y signal terminal of S VIDEO jack
Measuring Instrument	Oscilloscope
Adjustment Page	C
Adjustment Address	26, 27
Specified Value	Cr level: A = 714 ± 14mV(NTSC) A = 700 ± 14mV(PAL) Cb level: B = 714 ± 14mV(NTSC) B = 700 ± 14mV(PAL) Burst level: C = 286 ± 6mV(NTSC) C = 300 ± 6mV(PAL)

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	2	35		Note down the data.
3	2	35	01	Set the data.
4	3	0C	02	Set the data, and press PAUSE button.
5	C	26		Change the data and set the Cr signal level (A) to the specified value.
6	C	26		Press PAUSE button.
7	C	27		Change the data and set the Cb signal level (B) to the specified value.
8	C	27		Press PAUSE button.
9				Check that the burst signal level (C) is satisfied the specified value.
10	3	0C	00	Set the data, and press PAUSE button.
11	2	35		Set the data that is noted down at step 2.
12	0	01	00	Set the data.

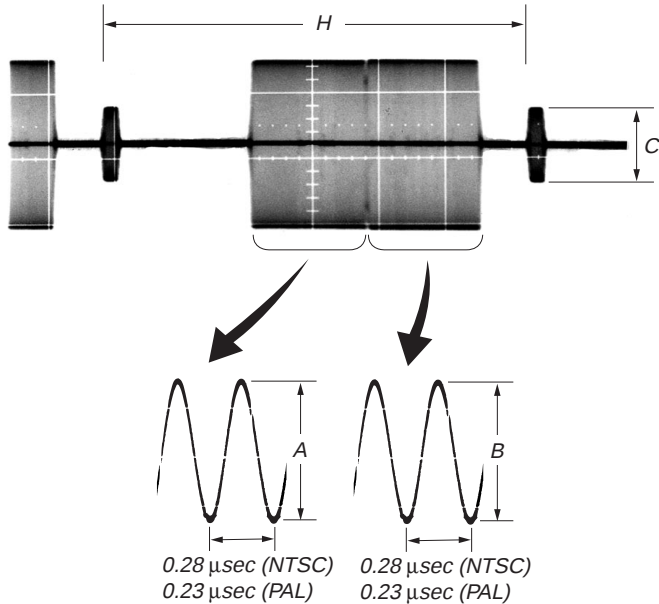


Fig. 5-3-9.

4. VIDEO OUT Y, Chroma Level Check (VC-242 Board)

Mode	Camera
Subject	Arbitrary
Measurement Point	VIDEO jack (75Ω terminated)
Measuring Instrument	Oscilloscope
Specified Value	Sync level: A = 286 ± 18mV(NTSC) A = 300 ± 18mV(PAL) Burst level: B = 286 ± 18mV(NTSC) B = 300 ± 18mV(PAL)

Adjusting method:

Order	Page	Address	Data	Procedure
1	2	35		Note down the data.
2	2	35	01	Set the data.
3	3	0C	02	Set the data, and press PAUSE button.
4				Check that the sync signal level (A) satisfies the specified value.
5				Check that the burst signal level (B) satisfies the specified value.
6	3	0C	00	Set the data, and press PAUSE button.
7	2	35		Set the data that is noted down at step 1.
8	0	01	00	Set the data.

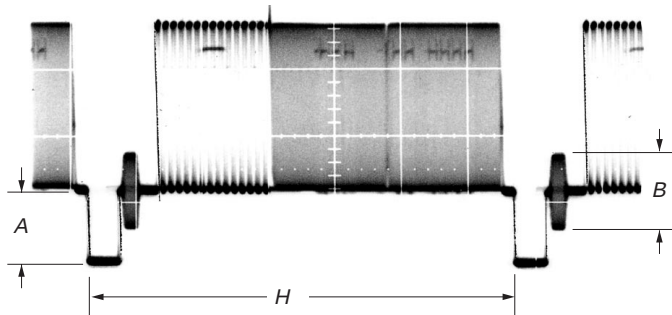


Fig. 5-3-10.

3-4-2. BIST Check

Switch setting:

LCD panel Open

1. Playback System Check

1-1. Preparations for Playback

Order	Page	Address	Data	Procedure
1				Set the POWER switch to VCR position.
2				Connect the adjustment remote commander and set the HOLD switch to ON (SERVICE) position.
3	0	01	01	Set the data.
4	C	42	00	Set the data, and press PAUSE button.
5				Playback the BIST check tape. (XH5-6 (NTSC), XH5-6P (PAL))

Note1: Perform the following checks in the playback mode.

Note2: Use the AC power adaptor or the battery (Info LITHIUM L series).

1-2. IC301 TRX (RF) PB BIST Check

Order	Page	Address	Data	Procedure
1	3	70	04	Set the data, and press PAUSE button.
2	3	70	00	Set the data, and press PAUSE button.
3	3	73		Check that the data is equal to either of the following values. And memorize the case number of the value. NTSC model: 63 (Case1), C5 (Case2), 75 (Case3), D3 (Case4), 59 (Case5), FF (Case6) PAL model: 86 (Case1), AA (Case2), 90 (Case3)
4	3	74		Check that the data is equal to the following value which case number is equal to that of address 73. NTSC model: 84 (Case1), 55 (Case2), 07 (Case3), D6 (Case4), 01 (Case5), D0 (Case6) PAL model: 35 (Case1), 33 (Case2), B6 (Case3)
5	3			If the data of address 73 and address 74 are correct, IC301 TRX (RF) playback system is normal.

1-3. IC301 AUD (ABUS) PB BIST Check

Order	Page	Address	Data	Procedure
1	3	11	04	Set the data, and press PAUSE button.
2	3	12	08	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	03	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: 41 PAL model: 2D
6	3	15		Check that the data is the following value. NTSC model: 81 PAL model: 7C
7	3			If the data of address 14 and address 15 are correct, IC301 AUD (ABUS) playback system is normal.

1-4. IC301 VFD PB BIST Check

• EX Y BIST Check

Order	Page	Address	Data	Procedure
1	3	12	10	Set the data, and press PAUSE button.
2	3	12	00	Set the data, and press PAUSE button.
3	3	13	04	Set the data, and press PAUSE button.
4	3	14		Check that the data is the following value. NTSC model: FB PAL model: 54
5	3	15		Check that the data is the following value. NTSC model: F4 PAL model: ED
6	3			If the data of address 14 and address 15 are correct, IC301 EX Y playback system is normal.

• EVF Y BIST Check

Order	Page	Address	Data	Procedure
1	3	10	88	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: 9B PAL model: 20
6	3	15		Check that the data is the following value. NTSC model: C3 PAL model: F8
7	3			If the data of address 14 and address 15 are correct, IC301 EVF Y playback system is normal.

• EVF Cb BIST Check

Order	Page	Address	Data	Procedure
1	3	10	8A	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: A9 PAL model: AA
6	3	15		Check that the data is the following value. NTSC model: 39 PAL model: 03
7	3			If the data of address 14 and address 15 are correct, IC301 EVF Cb playback system is normal.

• EVF Cr BIST Check

Order	Page	Address	Data	Procedure
1	3	10	89	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: 2E PAL model: 33
6	3	15		Check that the data is the following value. NTSC model: 34 PAL model: DD
7	3			If the data of address 14 and address 15 are correct, IC301 EVF Cr playback system is normal.

• PANEL Y BIST Check

Order	Page	Address	Data	Procedure
1	3	10	98	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: 9B PAL model: 20
6	3	15		Check that the data is the following value. NTSC model: C3 PAL model: F8
7	3			If the data of address 14 and address 15 are correct, IC301 PANEL Y playback system is normal.

• **PANEL Cr BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	99	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: 2E PAL model: 33
6	3	15		Check that the data is the following value. NTSC model: 34 PAL model: DD
7	3			If the data of address 14 and address 15 are correct, IC301 PANEL Cr playback system is normal.

• **PANEL Cb BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	9A	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: A9 PAL model: AA
6	3	15		Check that the data is the following value. NTSC model: 39 PAL model: 03
7	3			If the data of address 14 and address 15 are correct, IC301 PANEL Cb playback system is normal.

1-5. IC301 ENCODER BIST Check

• **Preparations**

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	8	21	0F	Set the data, and press PAUSE button.

• **ENCODER Ya BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	8B	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: FD PAL model: 58
6	3	15		Check that the data is the following value. NTSC model: 3E PAL model: BE
7	3			If the data of address 14 and address 15 are correct, IC301 ENCODER Ya playback system is normal.

• **ENCODER Yb BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	8C	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: 94 PAL model: A1
6	3	15		Check that the data is the following value. NTSC model: D6 PAL model: ED
7	3			If the data of address 14 and address 15 are correct, IC301 ENCODER Yb playback system is normal.

• ENCODER Ca BIST Check

Order	Page	Address	Data	Procedure
1	3	10	8D	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is equal to either of the following values. And memorize the case number of the value. NTSC model: 11 (Case1), 4E (Case2) PAL model: E8 (Case1), 7B (Case2)
6	3	15		Check that the data is equal to the following value which case number is equal to that of address 14. NTSC model: FD (Case1), 3B (Case2) PAL model: 62 (Case1), B0 (Case2)
7	3			If the data of address 14 and address 15 are correct, IC301 ENCODER Ca playback system is normal.

1-6. Processing after Completing Playback System Check

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	C	42	0A	Set the data, and press PAUSE button.
3	8	21	03	Set the data, and press PAUSE button.
4	0	01	00	Set the data.
5				Turn off the power and turn on again.

• ENCODER Cb BIST Check

Order	Page	Address	Data	Procedure
1	3	10	8E	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is equal to either of the following values. And memorize the case number of the value. NTSC model: 5C (Case1), BC (Case2) PAL model: 96 (Case1), 35 (Case2)
6	3	15		Check that the data is equal to the following value which case number is equal to that of address 14. NTSC model: 20 (Case1), A8 (Case2) PAL model: 79 (Case1), 7C (Case2)
7	3			If the data of address 14 and address 15 are correct, IC301 ENCODER Cb playback system is normal.

2. Recording System Check

2-1. Preparations for recording

Order	Page	Address	Data	Procedure
1				Playback the BIST check tape. (XH5-6(NTSC), XH5-6P(PAL))
2	3	10	C0	Set the data, and press PAUSE button.
3	3	11	07	Set the data, and press PAUSE button.
4				Enter the stop mode.
5				While keep the HOLD switch of the adjustment remote commander at ON (SERVICE) position, eject the BIST check tape.
6				Close the cassette compartment without inserting a cassette.
7				Set the power switch to "CAMERA".
8	3	01	0C	Set the data, and press PAUSE button.

2-2. IC301 TRX (RF) REC BIST Check

Order	Page	Address	Data	Procedure
1	3	70	04	Set the data, and press PAUSE button.
2	3	70	00	Set the data, and press PAUSE button.
3	3	71		Check that the data is equal to either of the following values. And memorize the case number of the value. NTSC model: 26 (Case1), 5E (Case2) PAL model: 53 (Case1), 77 (Case2)
4	3	72		Check that the data is equal to the following value which case number is equal to that of address 71. NTSC model: 95 (Case1), E3 (Case2) PAL model: DF (Case1), D5 (Case2)
5	3			If the data of address 71 and address 72 are correct, IC301 TRX (RF) recording system is normal.

2-3. Processing after Completing Recording System Check

Order	Page	Address	Data	Procedure
1	3	01	00	Set the data, and press PAUSE button.
2				Turn off the power and turn on again.

3-5. AUDIO SYSTEM ADJUSTMENTS

Switch setting:
MIC/LINE MIC
MIC LEVEL (Menu) AUTO

[Connection of Audio System Measuring Devices]
Connect the audio system measuring devices as shown in Fig. 5-3-11.

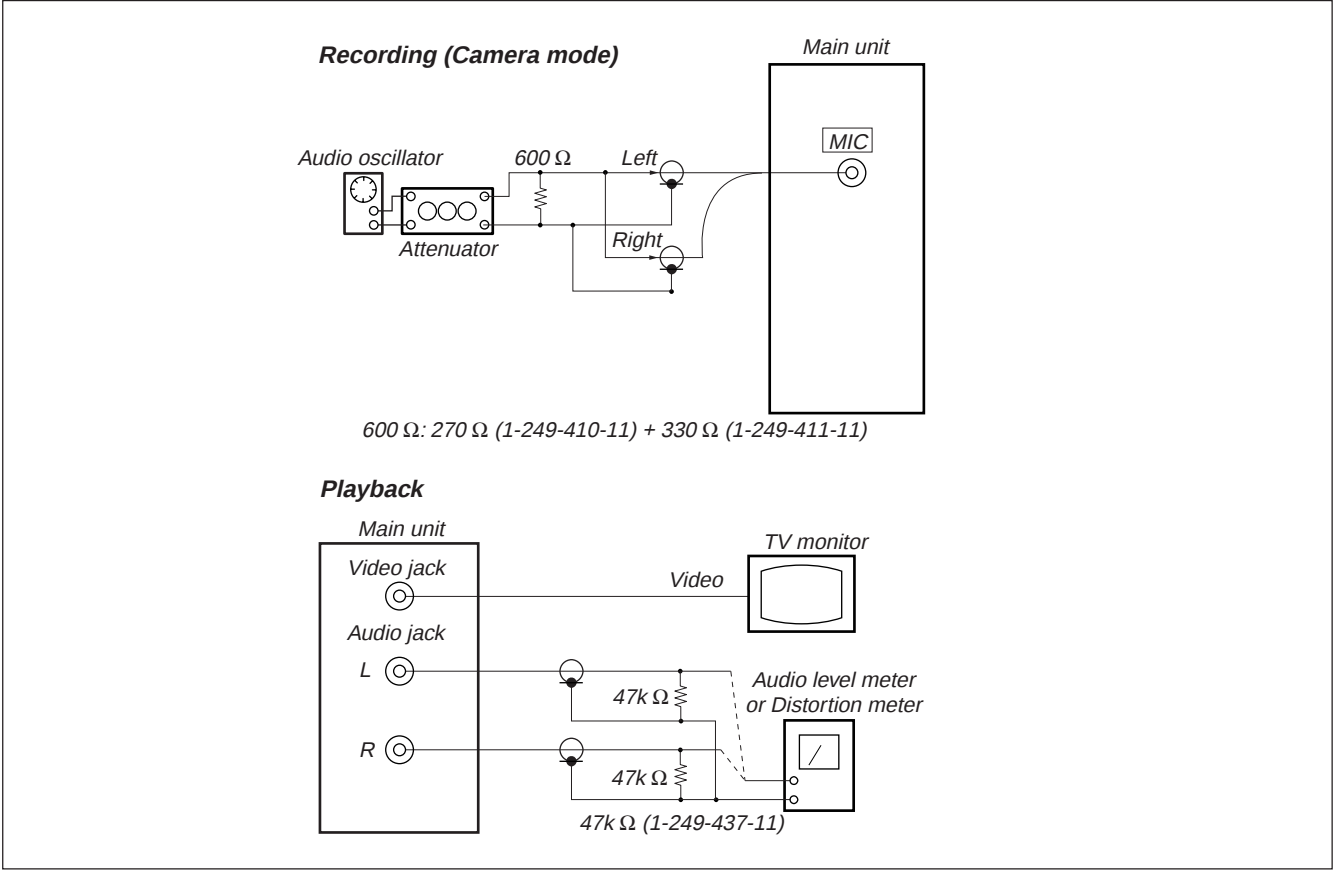


Fig. 5-3-11.

1. Playback Level Check

Mode	VTR playback
Signal	Alignment tape: For audio operation check (XH5-3 (NTSC)) (XH5-3P (PAL))
Measurement Point	Audio left or right terminal of AUDIO jack
Measuring Instrument	Audio level meter and frequency counter
Specified Value	32 kHz mode: 1 kHz, $+2.2 \pm 2.0$ dBs 48 kHz mode: 1 kHz, $+2.2 \pm 2.0$ dBs 44.1 kHz mode: The 7.35kHz signal level during EMP OFF is $+2.2 \pm 2.0$ dBs. The 7.35kHz signal level during EMP ON is -6.2 ± 2 dB from the signal level during EMP OFF.

Checking Method:

- 1) Check that the playback signal level is the specified value.

2. Overall Level Characteristics Check

Mode	Camera recording and playback
Signal	400Hz, -66 dBs signal: MIC jack left and right
Measurement Point	Audio left or right terminal of AUDIO jack
Measuring Instrument	Audio level meter
Specified Value	-7.5 ± 3.0 dBs

Checking Method:

- 1) Input the 400Hz, -66 dBs signal in the MIC jack.
- 2) Record in the camera mode.
- 3) Playback the recorded section.
- 4) Check that the 400Hz signal level is the specified value.

3. Overall Distortion Check

Mode	Camera recording and playback
Signal	400Hz, -66 dBs signal: MIC jack left and right
Measurement Point	Audio left or right terminal of AUDIO jack
Measuring Instrument	Audio distortion meter
Specified Value	Below 0.4% (200Hz to 6kHz BPF ON)

Checking Method:

- 1) Input the 400Hz, -66 dBs signal in the MIC jack.
- 2) Record in the camera mode.
- 3) Playback the recorded section.
- 4) Check that the distortion is the specified value.

4. Overall Noise Level Check

Mode	Camera recording and playback
Signal	No signal: Insert a shorting plug in the MIC jack
Measurement Point	Audio left or right terminal of AUDIO jack
Measuring Instrument	Audio level meter
Specified Value	Below -45 dBs (IHF-A filter ON, 20kHz LPF ON)

Checking Method:

- 1) Insert a shorting plug in the MIC jack.
- 2) Record in the camera mode.
- 3) Playback the recorded section.
- 4) Check that the noise level is the specified value.

5. Overall Separation Check

Mode	Camera recording and playback
Signal	400Hz, -66 dBs signal: MIC jack <right> [left] (Connect the MIC jack <left> [right] to GND)
Measurement Point	Audio <left> [right] terminal of AUDIO jack
Measuring Instrument	Audio level meter
Specified Value	Below -40 dBs (IHF-A filter ON)

< > : Left channel check

[] : Right channel check

Checking Method:

- 1) Input the 400Hz, -66 dBs signal in the <right> [left] terminal of the MIC jack only.
- 2) Record in the camera mode.
- 3) Playback the recorded section.
- 4) Check that the signal level of the audio <left> [right] terminal is the specified value.

5-4. SERVICE MODE

4-1. ADJUSTMENT REMOTE COMMANDER

The adjustment remote commander is used for changing the calculation coefficient in signal processing, EVR data, etc. The adjustment remote commander performs bi-directional communication with the unit using the remote commander signal line (LANC). The resultant data of this bi-directional communication is written in the non-volatile memory.

1. Using the adjustment remote commander

- 1) Connect the adjustment remote commander to the LANC terminal.
- 2) Set the HOLD switch of the adjustment remote commander to "HOLD" (SERVICE position). If it has been properly connected, the LCD on the adjustment remote commander will display as shown in Fig. 5-4-1.



Fig. 5-4-1

- 3) Operate the adjustment remote commander as follows.
 - Changing the page
The page increases when the EDIT SEARCH+ button is pressed, and decreases when the EDIT SEARCH- button is pressed. There are altogether 16 pages, from 0 to F.

Hexadecimal notation	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
LCD Display	0	1	2	3	4	5	6	7	8	9	A	b	c	d	E	F
Decimal notation conversion value	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

- Changing the address
The address increases when the FF (▶▶) button is pressed, and decreases when the REW (◀◀) button is pressed. There are altogether 256 addresses, from 00 to FF.
 - Changing the data (Data setting)
The data increases when the PLAY (▶) button is pressed, and decreases when the STOP (■) button is pressed. There are altogether 256 data, from 00 to FF.
 - Writing the adjustment data
The PAUSE button must be pressed to write the adjustment data (B, C, D, E, 8 page) in the nonvolatile memory. (The new adjusting data will not be recorded in the nonvolatile memory if this step is not performed.)
- 4) After completing all adjustments, turn off the main power supply once.

2. Precautions upon using the adjustment remote commander

Mishandling of the adjustment remote commander may erase the correct adjustment data at times. To prevent this, it is recommended that all adjustment data be noted down before beginning adjustments and new adjustment data after each adjustment.

4-2. DATA PROCESS

The calculation of the DDS display and the adjustment remote commander display data (hexadecimal notation) are required for obtaining the adjustment data of some adjustment items. In this case, after converting the hexadecimal notation to decimal notation, calculate and convert the result to hexadecimal notation, and use it as the adjustment data. Indicates the hexadecimal-decimal conversion table.

Hexadecimal-decimal Conversion Table																	②
Lower digit of hexadecimal Upper digit of hexadecimal	0	1	2	3	4	5	6	7	8	9	A (H)	B (b)	C (c)	D (d)	E (E)	F (F)	
0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	
1	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	
2	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	
3	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	
4	64	65	66	67	68	69	70	71	72	73	74	77	76	77	78	79	
5	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	
6	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	
7	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	
8	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	
9	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	
A (H)	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	
① B (b)	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	
C (c)	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	
D (d)	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	
E (E)	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	
F (F)	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	

Note: The characters shown in the parenthesis () shown the display on the adjustment remote commander.

(Example) If the DDS display or the adjustment remote commander shows BD (bd);
Because the upper digit of the adjustment number is B (b), and the lower digit is D (d), the meeting point “189” of ① and ② in the above table is the corresponding decimal number.

Table. 5-4-1.

4-3. SERVICE MODE

1. Setting the Test Mode

Page D	Address 10
--------	------------

Data	Function
00	Normal
01	Forced camera power ON
02	Forced VTR power ON
03	Forced camera + VTR power ON
05	Forced memory power ON

- Before setting the data, select page: 0, address: 01, and set data: 01.
- For page D, the data set is recorded in the non-volatile memory by pressing the PAUSE button of the adjustment remote commander. In this case, take note that the test mode will not be exited even when the main power is turned off.
- After completing adjustments/repairs, be sure to return the data of this address to 00, and press the PAUSE button of the adjustment remote commander.
Select page: 0, address: 01, and set data: 00.

2. Emergence Memory Address

Page C	Address F4 to FF
--------	------------------

Address	Contents
F4	EMG code when first error occurs
F6	Upper: MSW code when shift starts when first error occurs Lower: MSW code when first error occurs
F7	Lower: MSW code to be moved when first error occurs
F8	EMG code when second error occurs
FA	Upper: MSW code when shift starts when second error occurs Lower: MSW code when second error occurs
FB	Lower: MSW code to be moved when second error occurs
FC	EMG code when last error occurs
FE	Upper: MSW code when shift starts when last error occurs Lower: MSW code when last error occurs
FF	Lower: MSW code to be moved when last error occurs

When no error occurs in this unit, data "00" is written in the above addresses (F4 to FF). when first error occurs in the unit, the data corresponding to the error is written in the first emergency address (F4 to F7). In the same way, when the second error occurs, the data corresponding to the error is written in the second emergency address (F8 to FB). Finally, when the last error occurs, the data corresponding to the error is written in the last emergency address (FC to FF).

Note: After completing adjustments, be sure to initialize the data of addresses F4 to FF to "00".

Initializing method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 37, and press the PAUSE button.
- 3) Select page: 0, address: 01, and set data: 00.

2-1. EMG Code (Emergency Code)

Codes corresponding to the errors which occur are written in addresses F4, F8 and FC. The type of error indicated by the code are shown in the following table.

Code	Emergency Type
00	No error
10	Loading motor emergency during loading
11	Loading motor emergency during unloading
22	T reel emergency during normal rotation
23	S reel emergency during normal rotation
24	T reel emergency (Short circuit between S reel terminal and T reel terminal)
30	FG emergency at the start up of the capstan
40	FG emergency at the start up of the drum
42	FG emergency during normal rotation of the drum

2-2. MSW Code

MSW when errors occur:

Information on MSW (mode SW) when errors occur


MSW when movement starts:

Information on MSW when movements starts when the mechanism position is moved (When the L motor is moved)

MSW of target of movement:

Information on target MSW of movement when the mechanism position is moved

Mechanical Position

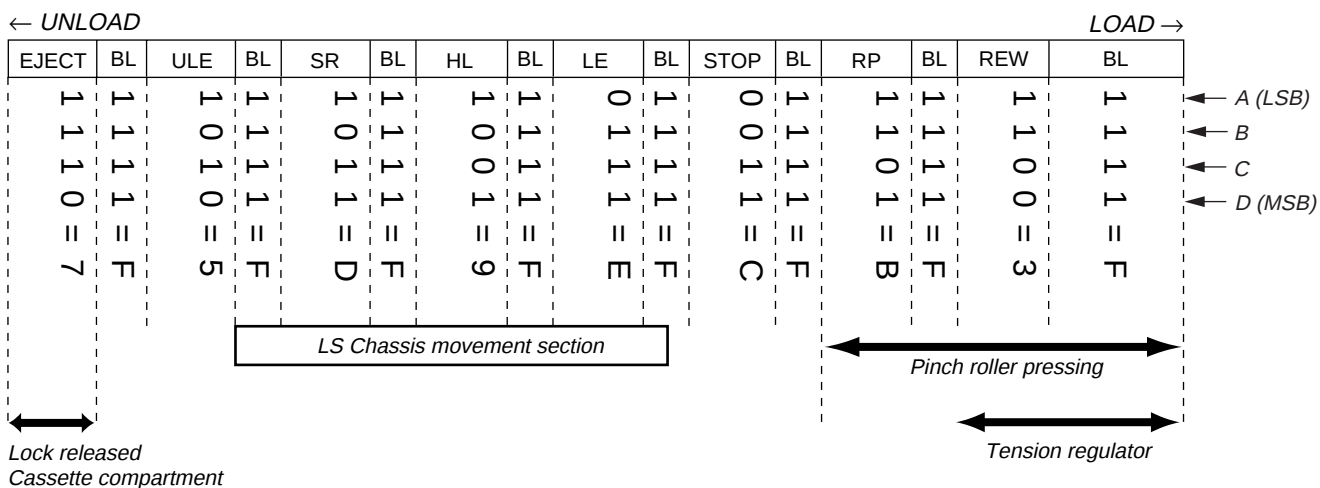


Position	Code	Contents
EJECT	7	Position at which the cassette component lock is released, at the farthest unload side mechanically at which the mechanism can move no further in the UNLOAD direction.
BL	F	BLANK code, at the boundary between codes.
USE	5	EJECT completion position. When the cassette is ejected, the mechanism will stop at this position. Cassette IN standby. The guide will start protruding out as the mechanism moves towards the LOAD position.
SR	D	Code during loading.
HL	9	Guide loading are performed here.
LE	E	Current limiter turned off.
STOP	C	Stop position in the loading state. The pinch roller separates, the tension regulator returns, and the brake is imposed on both reels.
RP	B	PB, REC, CUE, PAUSE positions. When pinch roller is pressed, and the tension regulator is ON, the mechanism is operating at this position in modes in which normal images are shown.
REW	3	REW position. The tension regulator is half on. This position is not used except for the REW mode.

3. Bit value discrimination

Bit values must be discriminated using the display data of the adjustment remote commander for following items. Use the table below to discriminate if the bit value is “1” or “0”.

Display on the adjustment remote commander

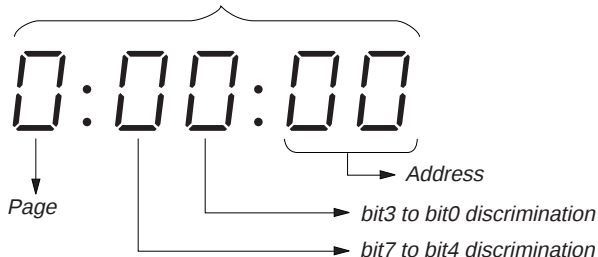

Display on the adjustment remote commander	Bit values			
	bit3 or bit7	bit2 or bit6	bit1 or bit5	bit0 or bit4
0	0	0	0	0
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
8	1	0	0	0
9	1	0	0	1
A (H)	1	0	1	0
B (b)	1	0	1	1
C (c)	1	1	0	0
D (d)	1	1	0	1
Ⓑ E (E)	1	1	1	0
F (F)	1	1	1	1

Example: If “8E” is displayed on the adjustment remote commander, the bit values for bit7 to bit4 are shown in the Ⓐ column, and the bit values for bit3 to bit0 are shown in the Ⓑ column.

4. Switch check (1)

Page 2	Address 43
--------	------------

Bit	Function	When bit value=1	When bit value=0
0	VTR MODE SW (CF-4980 block)	OFF	ON
1	CAM STBY SW (CF-4980 block)	OFF	ON
2	START/STOP SW (CF-4980 block)	OFF	ON
3	EJECT SW (CF-4980 block)	OFF	ON
4	CC DOWN SW (Mechanism chassis)	OFF (UP)	ON (DOWN)
5	PHOTO FREEZE SW (CF-4980 block)	OFF	ON
6	PHOTO STBY SW (CF-4980 block)	OFF	ON
7			

Using method:

- 1) Select page: 2, address: 43.
- 2) By discriminating the bit value of display data, the state of the switch can be discriminated.

5. Switch check (2)

Page 2	Address 5F to 67
--------	------------------

Using method:

- 1) Select page: 2, address: 5F to 67.
- 2) By discriminating the display data, the pressed key can be discriminated.

Address	Data						
	00 (00 to 0A)	19 (0B to 24)	32 (25 to 44)	59 (45 to 6E)	85 (6F to 9F)	B8 (A0 to D4)	EE (D5 to FF)
5F (KEY AD8) (IC1104 ⑨2)	PHOTO (PHOTO REC) (CF-4980)	CUSTOM PRESET (MA-386) (S1100)	EXECUTE (KP-010) (S550)				No key input
60 (KEY AD0) (IC1104 ⑨3)	STOP (FK-076) (S500)	REW (FK-076) (S502)	PLAY (FK-076) (S504)	REC (FK-076) (S506,507)	EDIT SEARCH+ (FK-076)(S509)	EDIT SEARCH- (FK-076) (S511)	No key input
61 (KEY AD1) (IC1104 ⑨4)	PAUSE (FK-076) (S501)	FF (FK-076) (S503)	SLOW (FK-076) (S505)	AUDIO DUB (FK-076) (S508)	END SEARCH (FK-076) (S510)		No key input
62 (KEY AD2) (IC1104 ⑨5)	FADER (FP-189)	BACK LIGHT (FP-189)	SPOT LIGHT (FP-189)	INDEX (FP-188)	FOCUS (INFINITY) (FP-188)	FOCUS (AUTO) (PUSH AUTO) (FP-188)	FOCUS (MANUAL) (FP-188)
63 (KEY AD3) (IC1104 ⑨6)	REC LEVEL (MK-014) (S001)	WHITE BALANCE (MK-014)(S002)	SHUTTER (MK-014) (S003)	PROGRAM AE (MK-014) (S004)	AUTO LOCK (HOLD) (MK-014)(S005)	AUTO LOCK (AUTO LOCK) (MK-014)(S005)	AUTO LOCK (OFF) (MK-014)(S005)
64 (KEY AD4) (IC1104 ⑨7)	TITLE (CK-093) (S250)	DIGITAL EFFECT (CK-093)(S255)	PICTURE EFFECT (CK-093)(S258)	MEMORY MIX (CK-093) (S260)	ZEBRA (100%) (CK-093) (S263)	ZEBRA (OFF) (CK-093) (S263)	ZEBRA (70%) (CK-093) (S263)
65 (KEY AD5) (IC1104 ⑨8)	DISPLAY (CK-093) (S251)	SELF TIMER (CK-093) (S253)	EXPOSURE (ED-4980)	MENU (FP-194)	DATA CODE (CK-093) (S261)	PANEL CLOSE (FP-197)	PANEL OPEN (FP-197)
66 (KEY AD6) (IC1104 ⑨9)	MEMORY INDEX (CK-093)(S252)	MEMORY + (CK-093) (S254)	MEMORY - (CK-093) (S257)	MEMORY DELETE (CK-093)(S259)	MEMORY PLAY (CK-093)(S262)	PANEL REVERSE (FP-197)	PANEL NORMAL (FP-197)
67 (KEY AD7) (IC1104 ⑩0)	VOLUME - (FP-196)	VOLUME + (FP-196)	LCD BRIGHT - (FP-196)	LCD BRIGHT + (FP-196)			No key input

6. Record of Use check

Note: When replacing the drum assembly, initialize the data of address: A2 to AA.

Page 2	Address A2 to AA
--------	------------------

Address	Function		Remarks
A2	Drum rotation counted time (BCD code)	Minutes	
A3		Hour (L)	10th place digit and 1st place digit of counted time (decimal digit)
A4		Hour (H)	1000th place digit and 100th place digit of counted time (decimal digit)
A5	User initial power on date (BCD code)	Year	After setting the clock, set the date of power on next.
A6		Month	
A7		Day	
A8	Final condensation occurrence date (BCD code)	Year	
A9		Month	
AA		Day	

Using method:

- 1) The record of use data is displayed at page: 2, addresses: A2 to AA.
Note: This data will be erased (reset) when the cabinet (R) assy (CK-093 board) is removed.

Initializing method:

- 1) Using the adjustment remote commander, select the object address and set data: 00.

7. Record of Self-diagnosis check

Page 2	Address B0 to C6
--------	------------------

Address	Self-diagnosis code
B0	“Repaired by” code (Occurred 1st time) *1
B1	“Block function” code (Occurred 1st time)
B2	“Detailed” code (Occurred 1st time)
B4	“Repaired by” code (Occurred 2nd time) *1
B5	“Block function” code (Occurred 2nd time)
B6	“Detailed” code (Occurred 2nd time)
B8	“Repaired by” code (Occurred 3rd time) *1
B9	“Block function” code (Occurred 3rd time)
BA	“Detailed” code (Occurred 3rd time)
BC	“Repaired by” code (Occurred 4th time) *1
BD	“Block function” code (Occurred 4th time)
BE	“Detailed” code (Occurred 4th time)
C0	“Repaired by” code (Occurred 5th time) *1
C1	“Block function” code (Occurred 5th time)
C2	“Detailed” code (Occurred 5th time)
C4	“Repaired by” code (Occurred the last time) *1
C5	“Block function” code (Occurred the last time)
C6	“Detailed” code (Occurred the last time)

*1 : “01” → “C”, “03” → “E”

Using method:

- 1) The past self-diagnosis codes are displayed at page: 2, addresses: BC to C6. Refer to “SELF-DIAGNOSIS FUNCTION” for detail of the self-diagnosis code.

Note: This data will be erased (reset) when the cabinet (R) assy (CK-093 board) is removed.