

PHILIPS

32" LCD TV

Service Manual

32HFL5763D/F7 (Serial No.: DS1)

32HFL5763L/F7 (Serial No.: DS1)

In this service manual, there are some models which consist of two Inverter CBAs. The main Inverter CBA and the sub Inverter CBA are compatible with each other for a board level repair but they are not compatible with each other for a component level repair.

When you conduct on a component level repair for the Inverter CBA for any models within this service manual, make sure to refer the right Block Diagrams, Schematic Diagrams/CBA and Parts List.

For the main CBA, the last digit of the board number, which is engraved on every board, should be a number(e.g. BA17F4F0103 2).

For the sub CBA, the last digit of the board number, which is engraved on every board, should be an alphabet(e.g. BA17F4F0103 Z).

© 2012 Funai Electric Co., Ltd.

All rights reserved. No part of this manual may be reproduced, copied, transmitted, disseminated, transcribed, downloaded or stored in any storage medium, in any form or for any purpose without the express prior written consent of Funai. Furthermore, any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Funai reserves the right to change the content herein without the obligation to notify any person or organization of such changes.

FUNAI with the  design is a registered trademark of Funai Electric Co., Ltd and may not be used in any way without the express written consent of Funai. All other trademarks used herein remain the exclusive property of their respective owners. Nothing contained in this manual should be construed as granting, by implication or otherwise, any license or right to use any of the trademarks displayed herein. Misuse of any trademarks or any other content in this manual is strictly prohibited. Funai shall aggressively enforce its intellectual property rights to the fullest extent of the law.

IMPORTANT SAFETY NOTICE

Proper service and repair is important to the safe, reliable operation of all P&F Equipment. The service procedures recommended by P&F and described in this service manual are effective methods of performing service operations. Some of these service special tools should be used when and as recommended.

It is important to note that this service manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It also is important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. P&F could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, P&F has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by P&F must first use all precautions thoroughly so that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

The LCD panel is manufactured to provide many years of useful life. Occasionally a few non active pixels may appear as a tiny spec of color. This is not to be considered a defect in the LCD screen.

TABLE OF CONTENTS

Specifications	1-1
Important Safety Precautions	2-1
Standard Notes for Servicing	3-1
Cabinet Disassembly Instructions.....	4-1
Electrical Adjustment Instructions.....	5-1
How to Initialize the LCD TV.....	6-1
How to Initialize the Smart Module Settings	6-2
Firmware Renewal Mode	7-1
Hospitality TV Mode	8-1
Troubleshooting.....	9-1
Block Diagrams.....	10-1
Schematic Diagrams / CBA and Test Points	11-1
Wiring Diagram	12-1
Exploded Views.....	13-1
Parts List	14-1

SPECIFICATIONS

< TUNER / NTSC >

ANT. Input ----- 75 Ω Unbal., F type

Description	Condition	Unit	Nominal	Limit
1. AFT Pull-In Range	---	MHz	±2.3	±2.1
2. Synchronizing Sens.	TV.ch.4 CA.ch.31 CA.ch.87	dBµ dBµ dBµ	18 18 18	26 26 29

< TUNER / ATSC >

Description	Condition	Unit	Nominal	Limit
1. Received Freq. Range (-28dBm)	---	kHz	---	±100
2. ATSC Dynamic Range (min / max)	ch.4 ch.10 ch.41	dBm dBm dBm	---	-70/0 -70/0 -70/0

< LCD PANEL >

Description	Condition	Unit	Nominal	Limit
1. Native Pixel Resolution	Horizontal Vertical	pixels pixels	1366 768	---
2. Brightness (w / filter)	---	cd/m²	350	---
3. Viewing Angle	Horizontal Vertical	° °	-88 to 88 -88 to 88	---

< VIDEO >

Description	Condition	Unit	Nominal	Limit
1. Over Scan	Horizontal Vertical	% %	5 5	5±5 5±5
2. Color Temperature	--- x y	°K	12000 0.272 0.278	--- ±3% ±3%
3. Resolution (composite video)	Horizontal Vertical	line line	400 350	---

< AUDIO >

All items are measured across 8 Ω load at speaker output terminal with L.P.F.

Description	Condition	Unit	Nominal	Limit
1. Audio Max Output (ATSC 0 dBfs)	Lch/Rch	W	10.0/10.0	8.0/8.0
2. Audio Distortion (NTSC)	500mW: Lch/Rch	%	0.5/0.5	2.0/2.0
3. Audio Freq. Response (NTSC)	-6dB: Lch -6dB: Rch	Hz Hz	70 to 10 k 70 to 10 k	--- ---


IMPORTANT SAFETY PRECAUTIONS

Prior to shipment from the factory, our products are strictly inspected for recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Safety Precautions for LCD TV Circuit

1. **Before returning an instrument to the customer,** always make a safety check of the entire instrument, including, but not limited to, the following items:
 - a. Be sure that no built-in protective devices are defective and have been defeated during servicing. (1) Protective shields are provided on this chassis to protect both the technician and the customer. Correctly replace all missing protective shields, including any removed for servicing convenience. (2) When reinstalling the chassis and/or other assembly in the cabinet, be sure to put back in place all protective devices, including but not limited to, nonmetallic control knobs, insulating fishpapers, adjustment and compartment covers/shields, and isolation resistor/capacitor networks. **Do not operate this instrument or permit it to be operated without all protective devices correctly installed and functioning. Servicers who defeat safety features or fail to perform safety checks may be liable for any resulting damage.**
 - b. Be sure that there are no cabinet openings through which an adult or child might be able to insert their fingers and contact a hazardous voltage. Such openings include, but are not limited to, (1) spacing between the Liquid Crystal Panel and the cabinet mask, (2) excessively wide cabinet ventilation slots, and (3) an improperly fitted and/or incorrectly secured cabinet back cover.
 - c. **Antenna Cold Check** - With the instrument AC plug removed from any AC source, connect an electrical jumper across the two AC plug prongs. Place the instrument AC switch in the on position. Connect one lead of an ohmmeter to the AC plug prongs tied together and touch the other ohmmeter lead in turn to each tuner antenna input exposed terminal screw and, if applicable, to the coaxial connector. If the measured resistance is less than 1.0 megohm or greater than 5.2 megohm, an abnormality exists that must be corrected before the instrument is returned to the customer. Repeat this test with the instrument AC switch in the off position.

d. **Leakage Current Hot Check** - With the instrument completely reassembled, plug the AC line cord directly into a 120 V AC outlet. (Do not use an isolation transformer during this test.) Use a leakage current tester or a metering system that complies with American National Standards Institute (ANSI) C101.1 Leakage Current for Appliances and Underwriters Laboratories (UL) 1410, (50.7). With the instrument AC switch first in the on position and then in the off position, measure from a known earth ground (metal water pipe, conduit, etc.) to all exposed metal parts of the instrument (antennas, handle brackets, metal cabinet, screw heads, metallic overlays, control shafts, etc.), especially any exposed metal parts that offer an electrical return path to the chassis. Any current measured must not exceed 3.5 milli-ampere. Reverse the instrument power cord plug in the outlet and repeat the test.

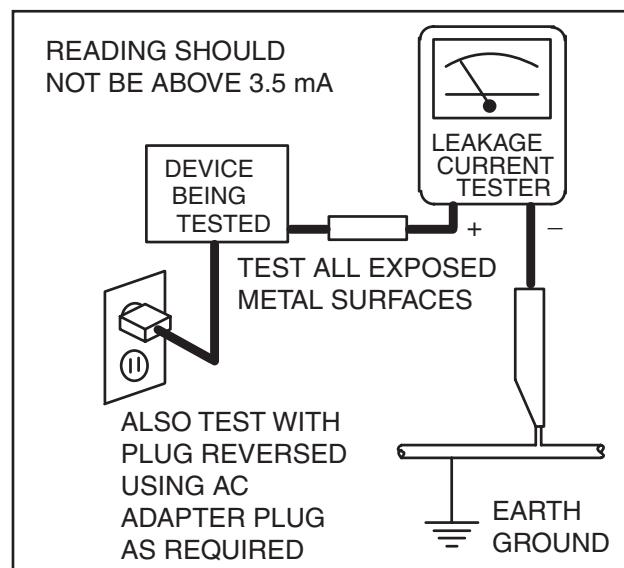

ANY MEASUREMENTS NOT WITHIN THE LIMITS SPECIFIED HEREIN INDICATE A POTENTIAL SHOCK HAZARD THAT MUST BE ELIMINATED BEFORE RETURNING THE INSTRUMENT TO THE CUSTOMER OR BEFORE CONNECTING THE ANTENNA OR ACCESSORIES.

2. Read and comply with all caution and safety-related notes on or inside the receiver cabinet, on the receiver chassis, or on the Liquid Crystal Panel.

3. Design Alteration Warning - Do not alter or add to the mechanical or electrical design of this TV receiver. Design alterations and additions, including, but not limited to circuit modifications and the addition of items such as auxiliary audio and/or video output connections, might alter the safety characteristics of this receiver and create a hazard to the user. Any design alterations or additions will void the manufacturer's warranty and may make you, the servicer, responsible for personal injury or property damage resulting therefrom.

4. Hot Chassis Warning -

a. Some TV receiver chassis are electrically connected directly to one conductor of the AC power cord and maybe safety-serviced without an isolation transformer only if the AC power plug is inserted so that the chassis is connected to the ground side of the AC power source. To confirm that the AC power plug is inserted correctly, with an AC voltmeter, measure between the chassis and a known earth ground. If a voltage reading in excess of 1.0 V is obtained, remove and reinsert the AC power plug in the opposite polarity and again measure the voltage potential between the chassis and a known earth ground.

b. Some TV receiver chassis normally have 85V AC(RMS) between chassis and earth ground regardless of the AC plug polarity. This chassis can be safety-serviced only with an isolation transformer inserted in the power line between the receiver and the AC power source, for both personnel and test equipment protection.

c. Some TV receiver chassis have a secondary ground system in addition to the main chassis ground. This secondary ground system is not isolated from the AC power line. The two ground systems are electrically separated by insulation material that must not be defeated or altered.

5. Observe original lead dress. Take extra care to assure correct lead dress in the following areas: a. near sharp edges, b. near thermally hot parts-be sure that leads and components do not touch thermally hot parts, c. the AC supply, d. high voltage, and, e. antenna wiring. Always inspect in all areas for pinched, out of place, or frayed wiring. Check AC power cord for damage.

6. Components, parts, and/or wiring that appear to have overheated or are otherwise damaged should be replaced with components, parts, or wiring that meet original specifications.

Additionally, determine the cause of overheating and/or damage and, if necessary, take corrective action to remove any potential safety hazard.

7. Product Safety Notice - Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc. Parts that have special safety characteristics are identified by a  on schematics and in parts lists. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire, and/or other hazards. The product's safety is under review continuously and new instructions are issued whenever appropriate. Prior to shipment from the factory, our products are strictly inspected to confirm they comply with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Precautions during Servicing

- A.** Parts identified by the  symbol are critical for safety.
Replace only with part number specified.
- B.** In addition to safety, other parts and assemblies are specified for conformance with regulations applying to spurious radiation. These must also be replaced only with specified replacements.
Examples: RF converters, RF cables, noise blocking capacitors, and noise blocking filters, etc.
- C.** Use specified internal wiring. Note especially:
 - 1) Wires covered with PVC tubing
 - 2) Double insulated wires
 - 3) High voltage leads
- D.** Use specified insulating materials for hazardous live parts. Note especially:
 - 1) Insulation Tape
 - 2) PVC tubing
 - 3) Spacers
 - 4) Insulators for transistors.
- E.** When replacing AC primary side components (transformers, power cord, etc.), wrap ends of wires securely about the terminals before soldering.
- F.** Observe that the wires do not contact heat producing parts (heat sinks, oxide metal film resistors, fusible resistors, etc.)
- G.** Check that replaced wires do not contact sharp edged or pointed parts.
- H.** When a power cord has been replaced, check that 11~13 lb (5~6 kg) of force in any direction will not loosen it.
- I.** Also check areas surrounding repaired locations.
- J.** Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.
- K.** When connecting or disconnecting the internal connectors, first, disconnect the AC plug from the AC supply outlet.
- L.** When installing parts or assembling the cabinet parts, be sure to use the proper screws and tighten certainly.

Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

1. Clearance Distance

When replacing primary circuit components, confirm specified clearance distance (d) and (d') between soldered terminals, and between terminals and surrounding metallic parts. (See Fig. 1)

Table 1: Ratings for selected area

AC Line Voltage	Region	Clearance Distance (d), (d')
110 to 130 V	U.S.A. or Canada	≥ 3.2 mm (0.126 inches)

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

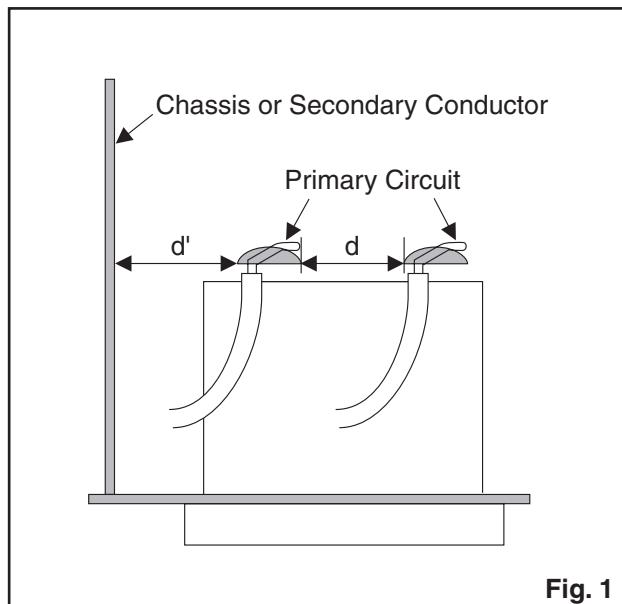


Fig. 1

2. Leakage Current Test

Confirm the specified (or lower) leakage current between B (earth ground, power cord plug prongs) and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.) is lower than or equal to the specified value in the table below.

Measuring Method: (Power ON)

Insert load Z between B (earth ground, power cord plug prongs) and exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z . See Fig. 2 and following table.

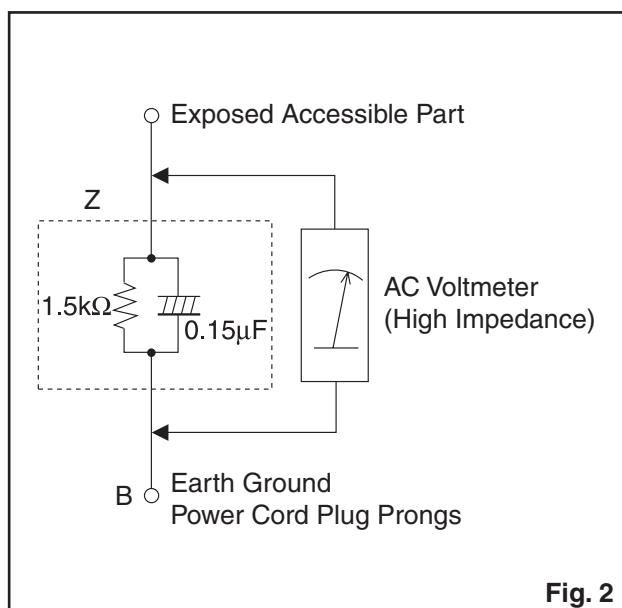


Fig. 2

Table 2: Leakage current ratings for selected areas


AC Line Voltage	Region	Load Z	Leakage Current (i)	Earth Ground (B) to:
110 to 130 V	U.S.A. or Canada	0.15 μF CAP. & 1.5 kΩ RES. Connected in parallel	$i \leq 0.5$ mA rms	Exposed accessible parts

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.


STANDARD NOTES FOR SERVICING

Circuit Board Indications


1. The output pin of the 3 pin Regulator ICs is indicated as shown.

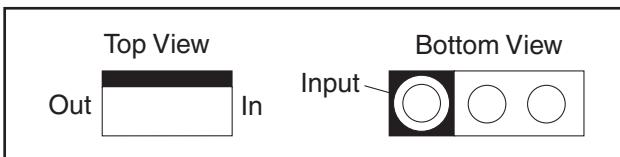

2. For other ICs, pin 1 and every fifth pin are indicated as shown.

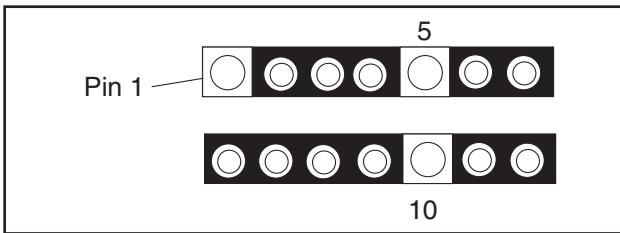


3. The 1st pin of every male connector is indicated as shown.

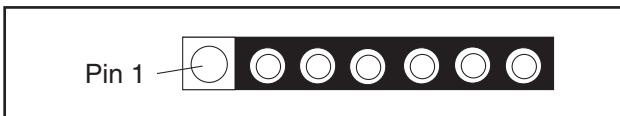

Pb (Lead) Free Solder

Pb free mark will be found on PCBs which use Pb free solder. (Refer to figure.) For PCBs with Pb free mark, be sure to use Pb free solder. For PCBs without Pb free mark, use standard solder.

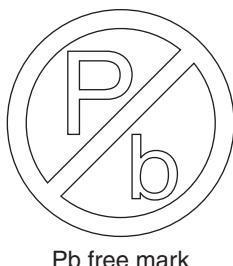

How to Remove / Install Flat Pack-IC

1. Removal

With Hot-Air Flat Pack-IC Desoldering Machine:

1. Prepare the hot-air flat pack-IC desoldering machine, then apply hot air to the Flat Pack-IC (about 5 to 6 seconds). (Fig. S-1-1)

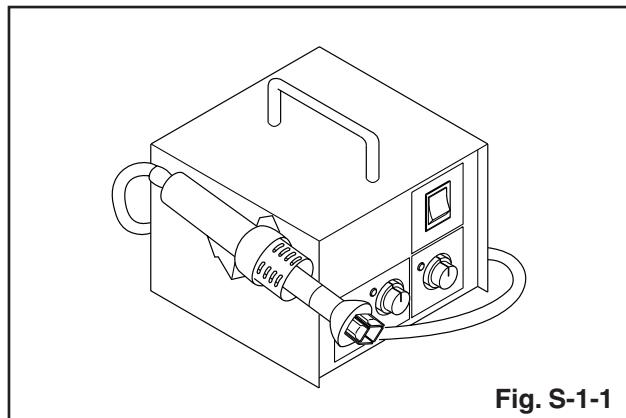



Fig. S-1-1

2. Remove the flat pack-IC with tweezers while applying the hot air.
3. Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
4. Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

CAUTION:


1. The Flat Pack-IC shape may differ by models. Use an appropriate hot-air flat pack-IC desoldering machine, whose shape matches that of the Flat Pack-IC.
2. Do not supply hot air to the chip parts around the flat pack-IC for over 6 seconds because damage to the chip parts may occur. Put masking tape around the flat pack-IC to protect other parts from damage. (Fig. S-1-2)

- The flat pack-IC on the CBA is affixed with glue, so be careful not to break or damage the foil of each pin or the solder lands under the IC when removing it.

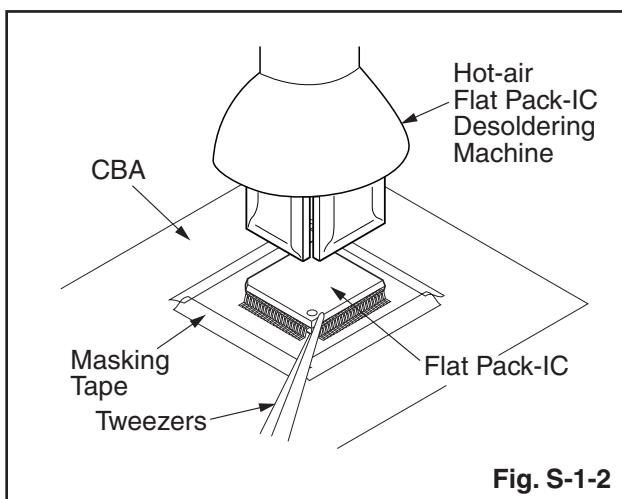


With Soldering Iron:

- Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)

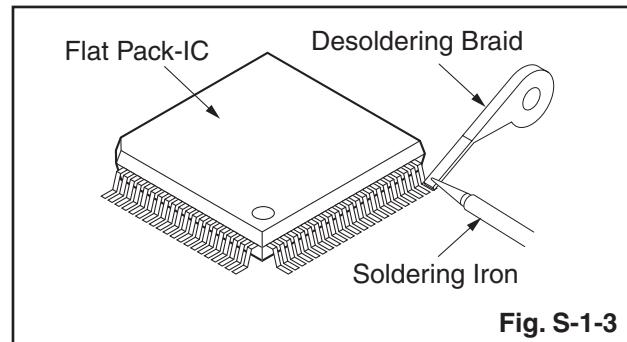

- Lift each lead of the flat pack-IC upward one by one, using a sharp pin or wire to which solder will not adhere (iron wire). When heating the pins, use a fine tip soldering iron or a hot air desoldering machine. (Fig. S-1-4)


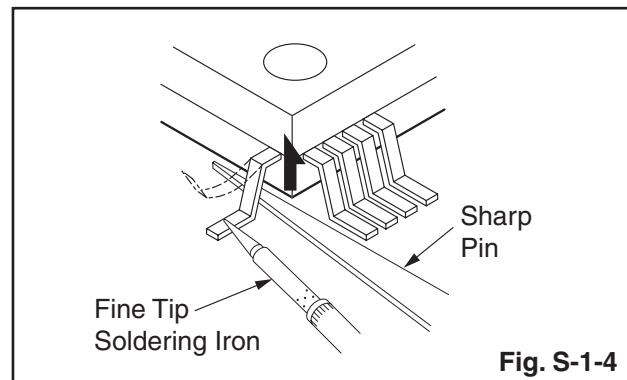


- Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
- Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

With Iron Wire:

1. Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)
2. Affix the wire to a workbench or solid mounting point, as shown in Fig. S-1-5.
3. While heating the pins using a fine tip soldering iron or hot air blower, pull up the wire as the solder melts so as to lift the IC leads from the CBA contact pads as shown in Fig. S-1-5.
4. Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
5. Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)


Note: When using a soldering iron, care must be taken to ensure that the flat pack-IC is not being held by glue. When the flat pack-IC is removed from the CBA, handle it gently because it may be damaged if force is applied.

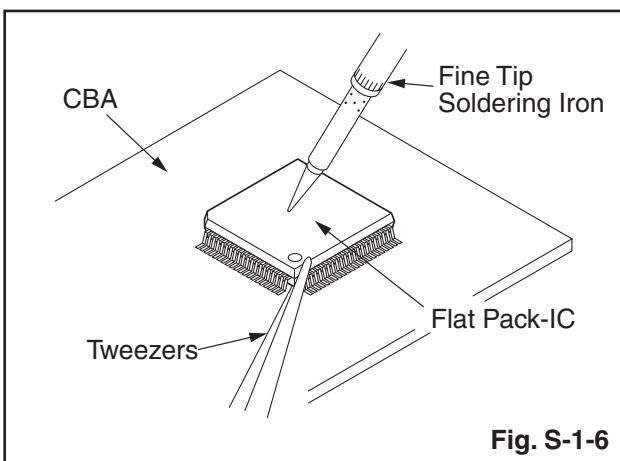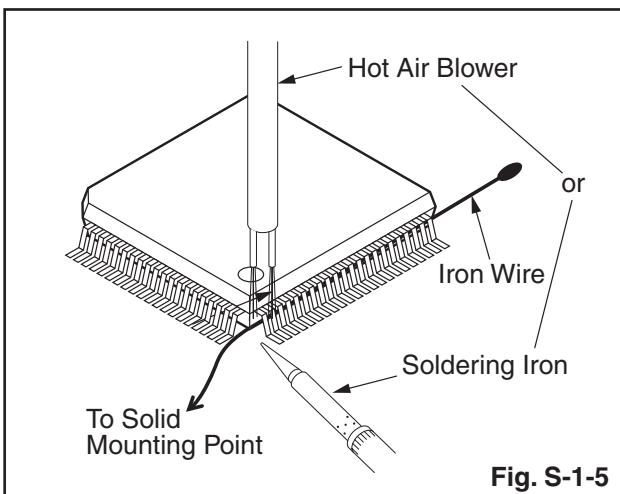

2. Installation

1. Using desoldering braid, remove the solder from the foil of each pin of the flat pack-IC on the CBA so you can install a replacement flat pack-IC more easily.
2. The “●” mark on the flat pack-IC indicates pin 1. (See Fig. S-1-7.) Be sure this mark matches the pin 1 on the PCB when positioning for installation. Then presolder the four corners of the flat pack-IC. (See Fig. S-1-8.)
3. Solder all pins of the flat pack-IC. Be sure that none of the pins have solder bridges.

Example :

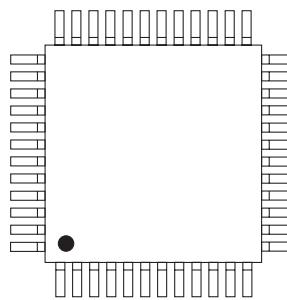

Pin 1 of the Flat Pack-IC
is indicated by a "●" mark.

Fig. S-1-7

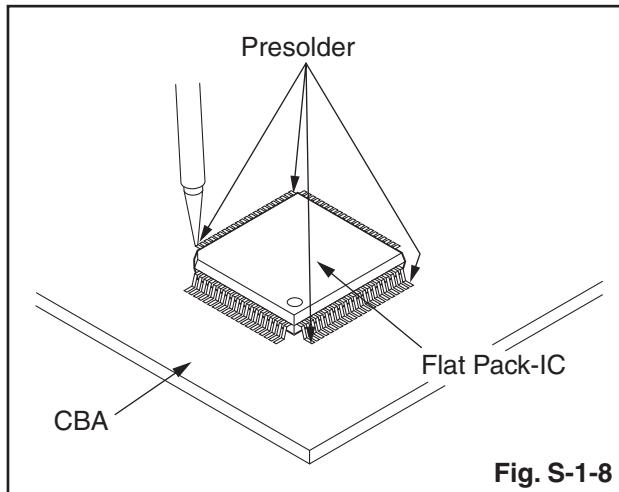


Fig. S-1-8

Instructions for Handling Semi-conductors



Electrostatic breakdown of the semi-conductors may occur due to a potential difference caused by electrostatic charge during unpacking or repair work.

1. Ground for Human Body

Be sure to wear a grounding band ($1\text{ M}\Omega$) that is properly grounded to remove any static electricity that may be charged on the body.

2. Ground for Workbench


Be sure to place a conductive sheet or copper plate with proper grounding ($1\text{ M}\Omega$) on the workbench or other surface, where the semi-conductors are to be placed. Because the static electricity charge on clothing will not escape through the body grounding band, be careful to avoid contacting semi-conductors with your clothing.

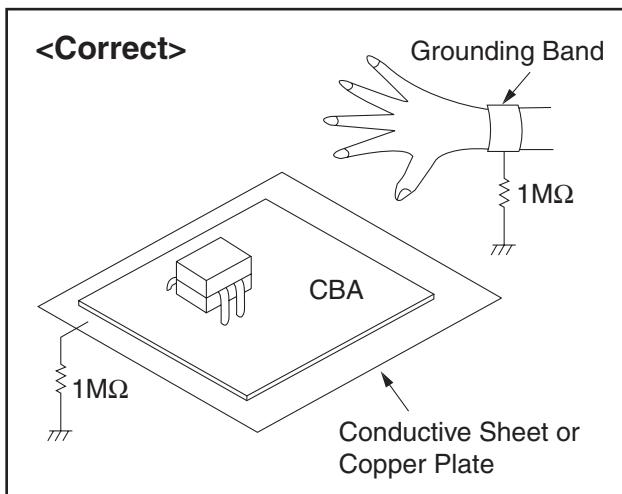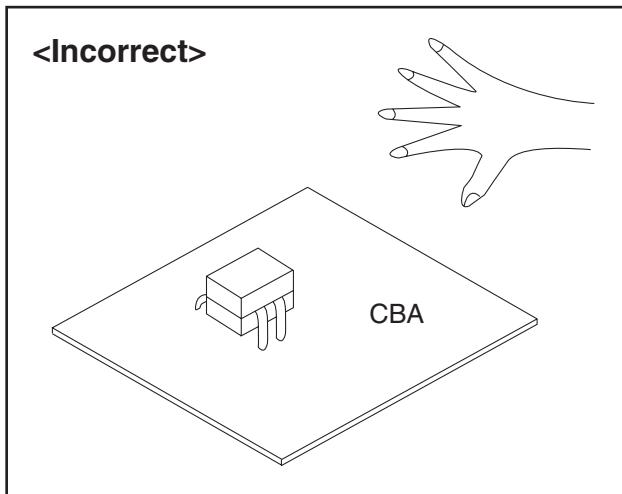

CABINET DISASSEMBLY INSTRUCTIONS

1. Disassembly Flowchart

This flowchart indicates the disassembly steps for the cabinet parts and the CBA in order to gain access to items to be serviced. When reassembling, follow the steps in reverse order. Bend, route and dress the cables as they were.

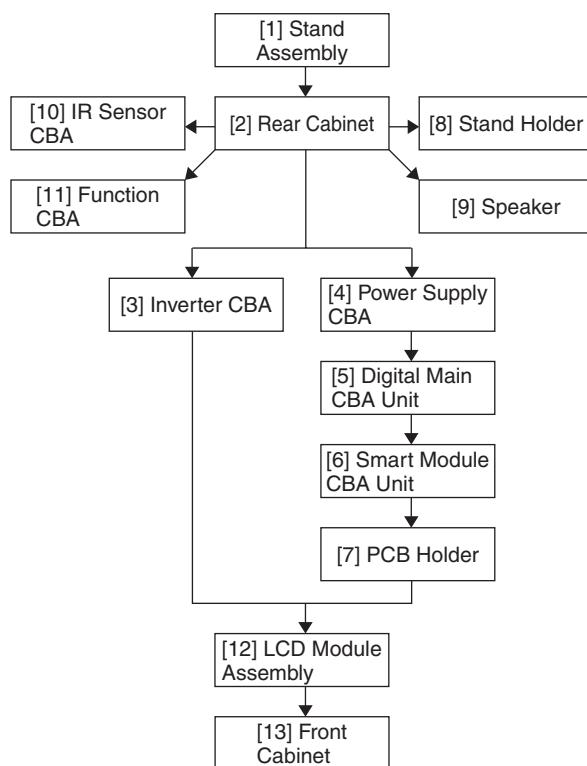

2. Disassembly Method

Step/ Loc. No.	Part	Fig. No.	Removal	Note
[1]	Stand Assembly	D1	3(S-1)	---
[2]	Rear Cabinet	D1	32HFL5763D/F7: 12(S-2), 3(S-3), 3(S-4), 8(S-5), (N-1) 11(L-1), Rear Cover, Tuner Cover, RF Connector, Washer 32HFL5763L/F7: 12(S-2), 3(S-3), 3(S-4), 8(S-5), 11(L-1), Rear Cover, Tuner Cover	---
[3]	Inverter CBA	D2 D5	7(S-6), CN1001, CN1003, CN1100, CN1101, CN1102, CN1901	---

Step/ Loc. No.	Part	Fig. No.	Removal	Note
[4]	Power Supply CBA	D2 D5	5(S-7), CN601, CN651	---
[5]	Digital Main CBA Unit	D2 D5	5(S-8), CN3003, CN3004, CN3801, CN3802, CN3901	---
[6]	Smart Module CBA Unit	D2	6(S-9), Separation Sheet	---
[7]	PCB Holder	D3	9(S-10)	---
[8]	Stand Holder	D3	2(S-11), 2(S-12), CL601, AC Inlet Holder	---
[9]	Speaker	D4	4(S-13), Speaker Holder	---
[10]	IR Sensor CBA	D4 D5	CL103A	---
[11]	Function CBA	D4 D5	Function Knob, Knob Frame	---
[12]	LCD Module Assembly	D4	3(S-14)	---
[13]	Front Cabinet	D4	-----	---

↓ ↓ ↓ ↓ ↓
 (1) (2) (3) (4) (5)

Note:

- (1) Order of steps in procedure. When reassembling, follow the steps in reverse order. These numbers are also used as the Identification (location) No. of parts in figures.
- (2) Parts to be removed or installed.
- (3) Fig. No. showing procedure of part location
- (4) Identification of parts to be removed, unhooked, unlocked, released, unplugged, unclamped, or desoldered.
 P = Spring, L = Locking Tab, S = Screw, H = Hex Screw, CN = Connector, N = Nut
 e.g. 2(S-2) = two Screws of (S-2),
 2(L-2) = two Locking Tabs of (L-2)
- (5) Refer to the following "Reference Notes in the Table."

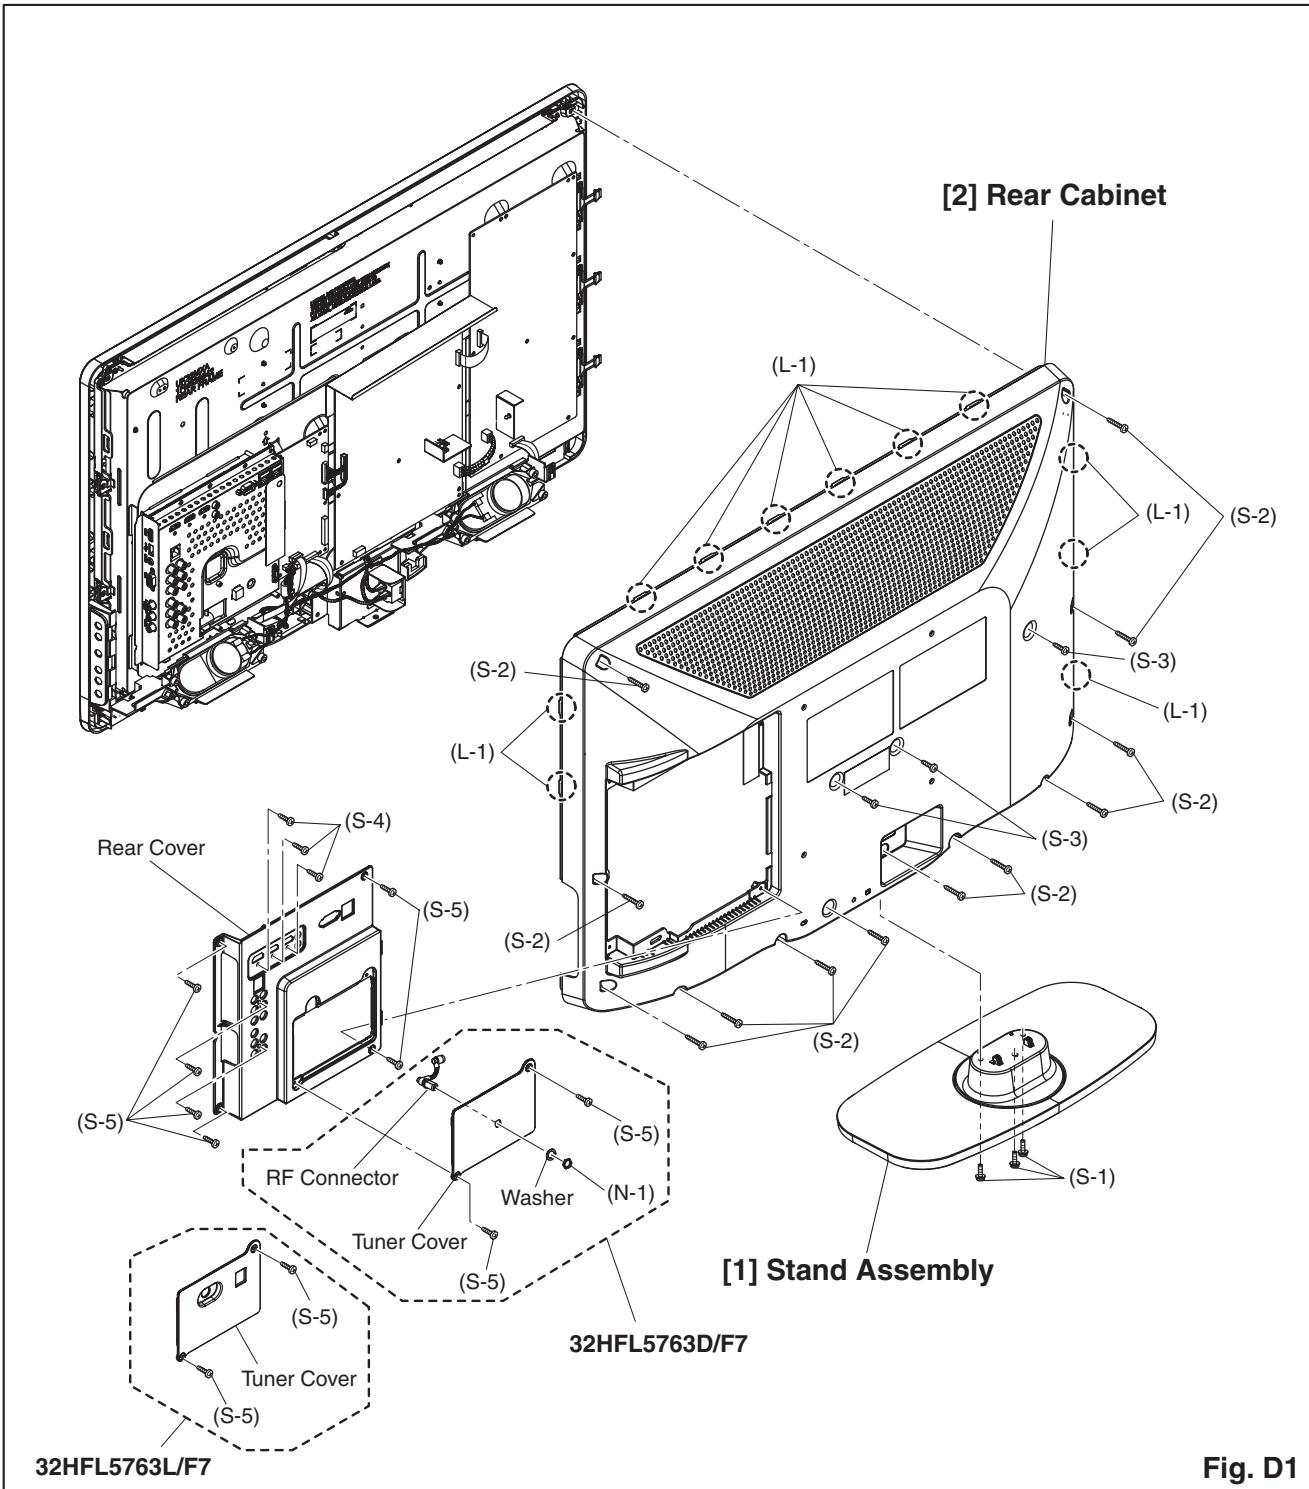


Fig. D1

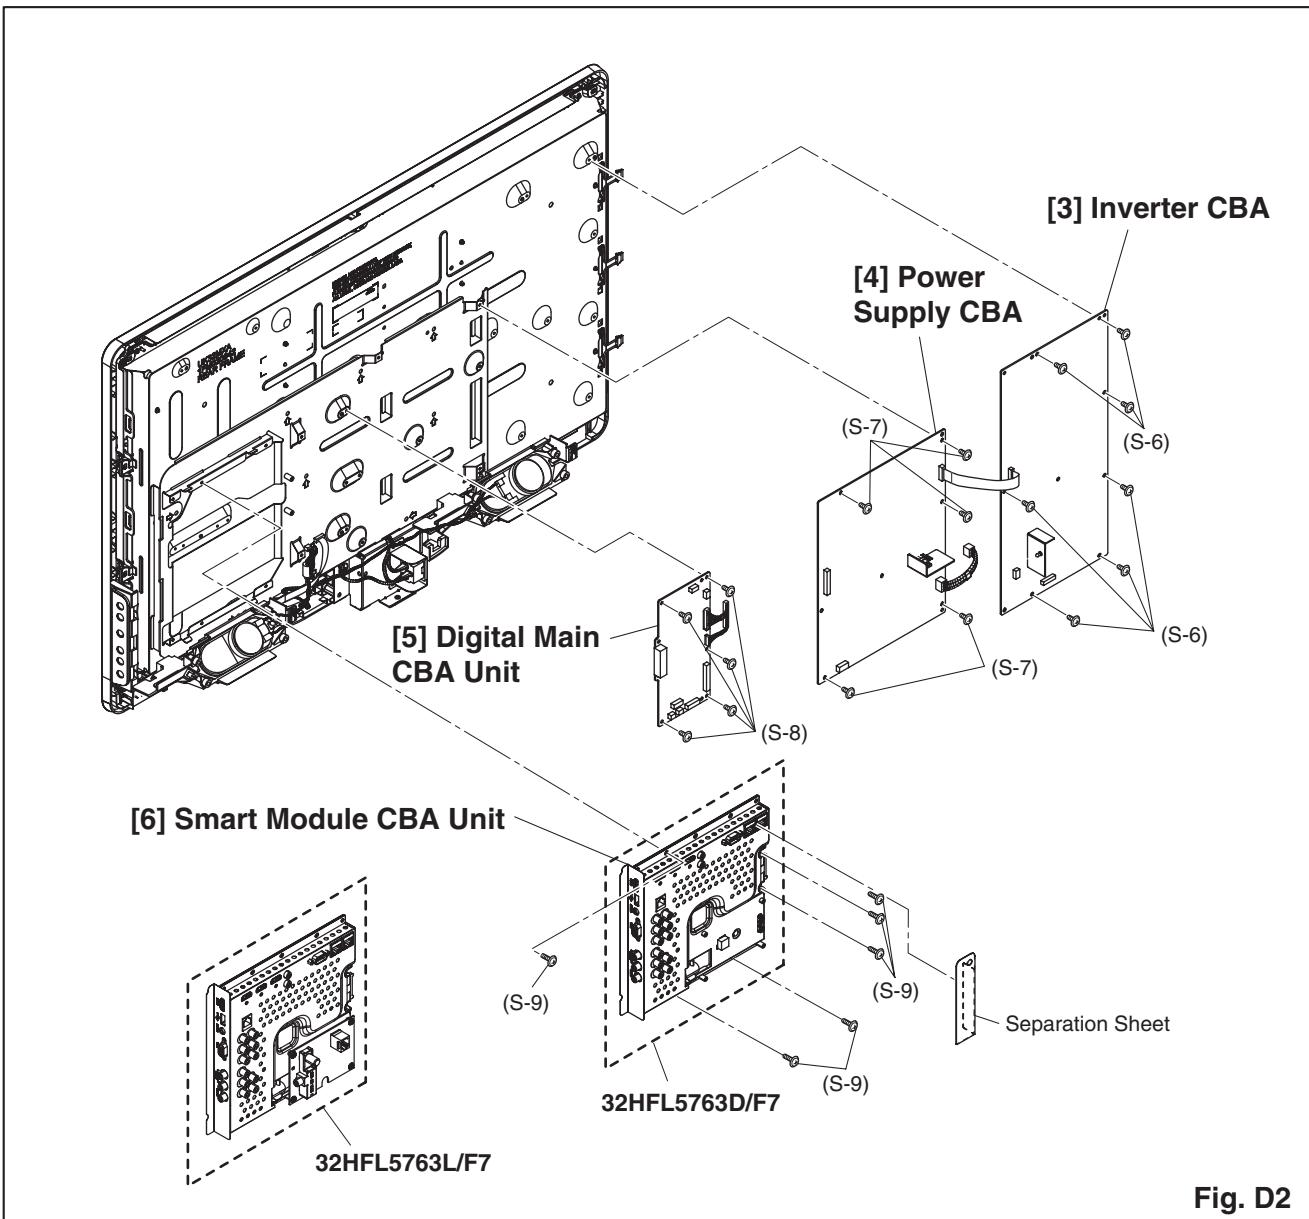


Fig. D2

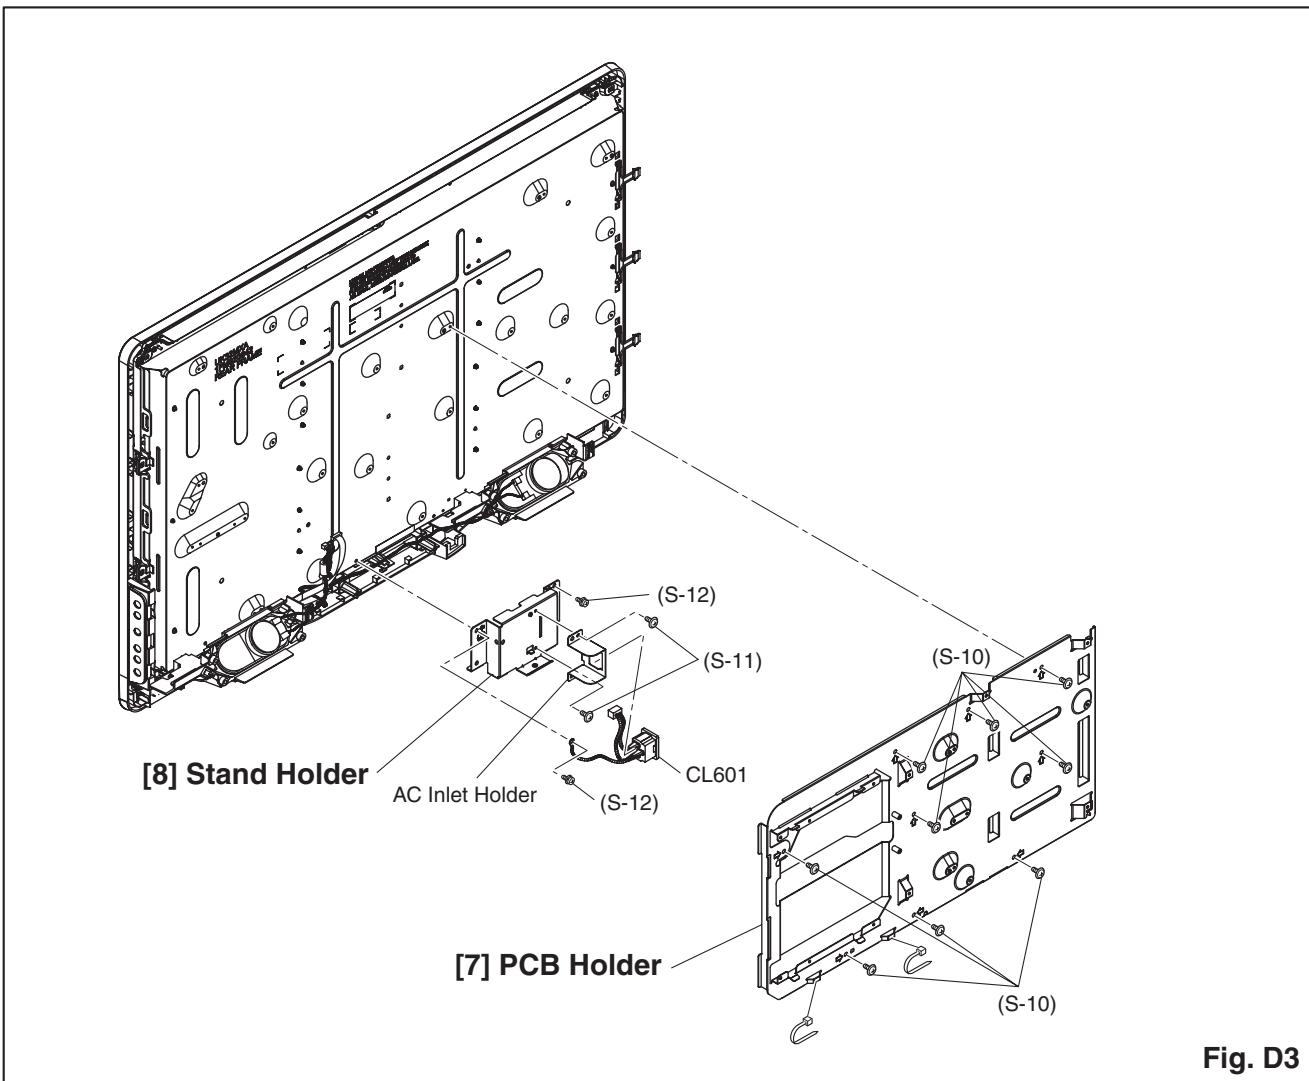


Fig. D3

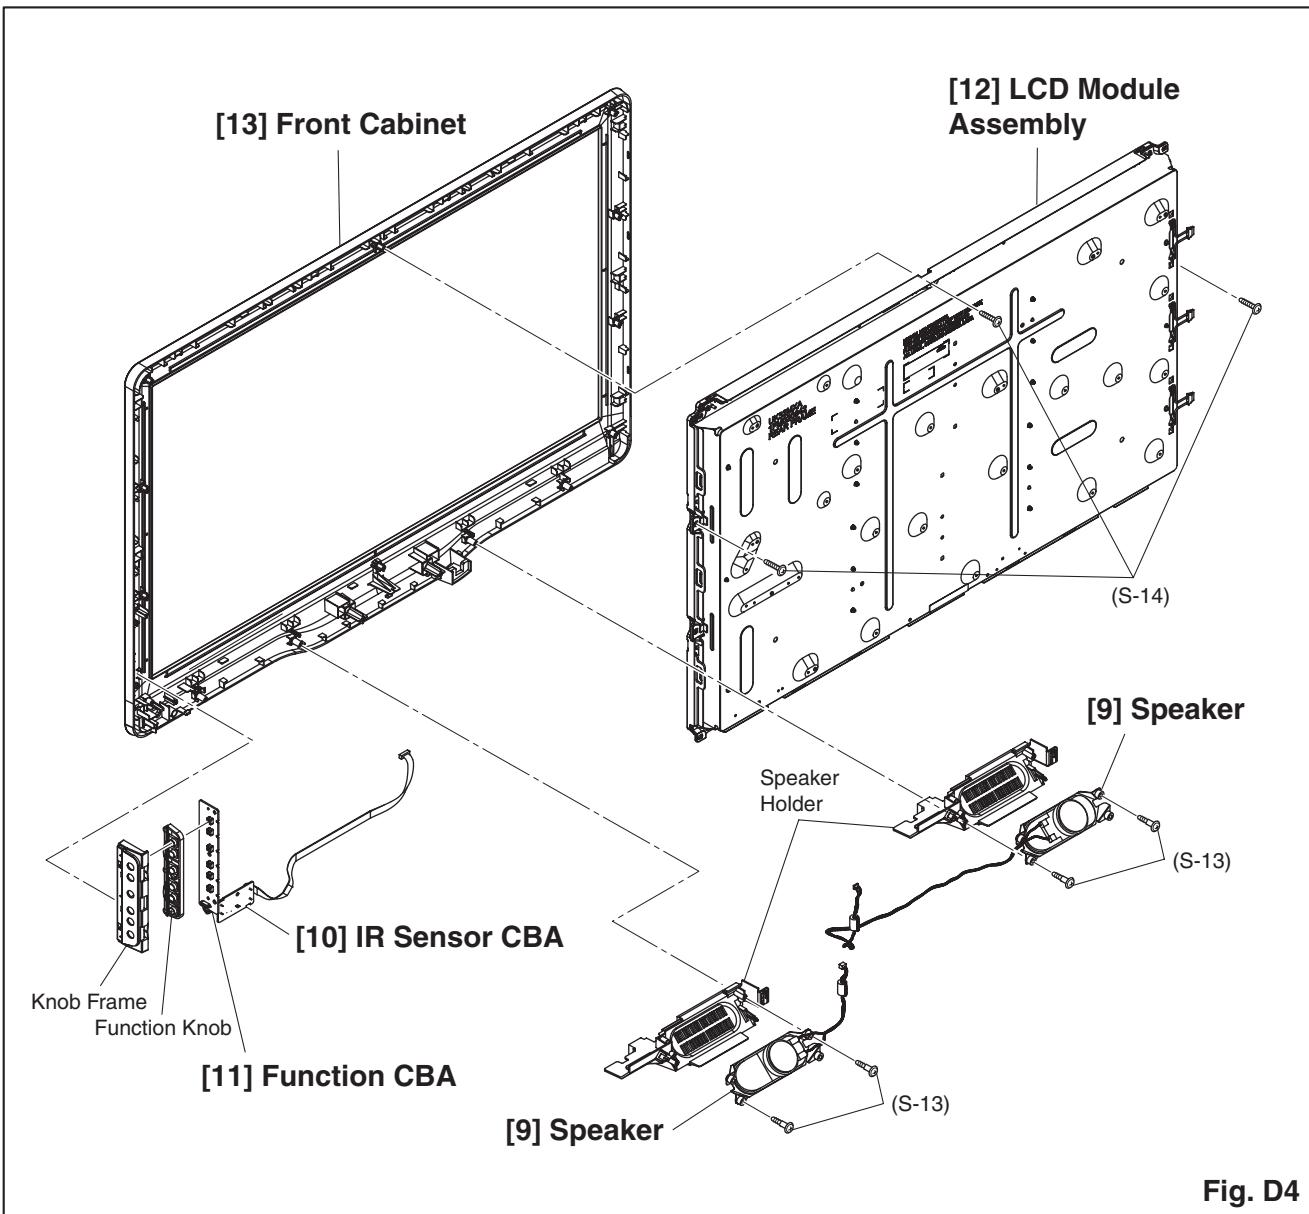


Fig. D4

TV Cable Wiring Diagram

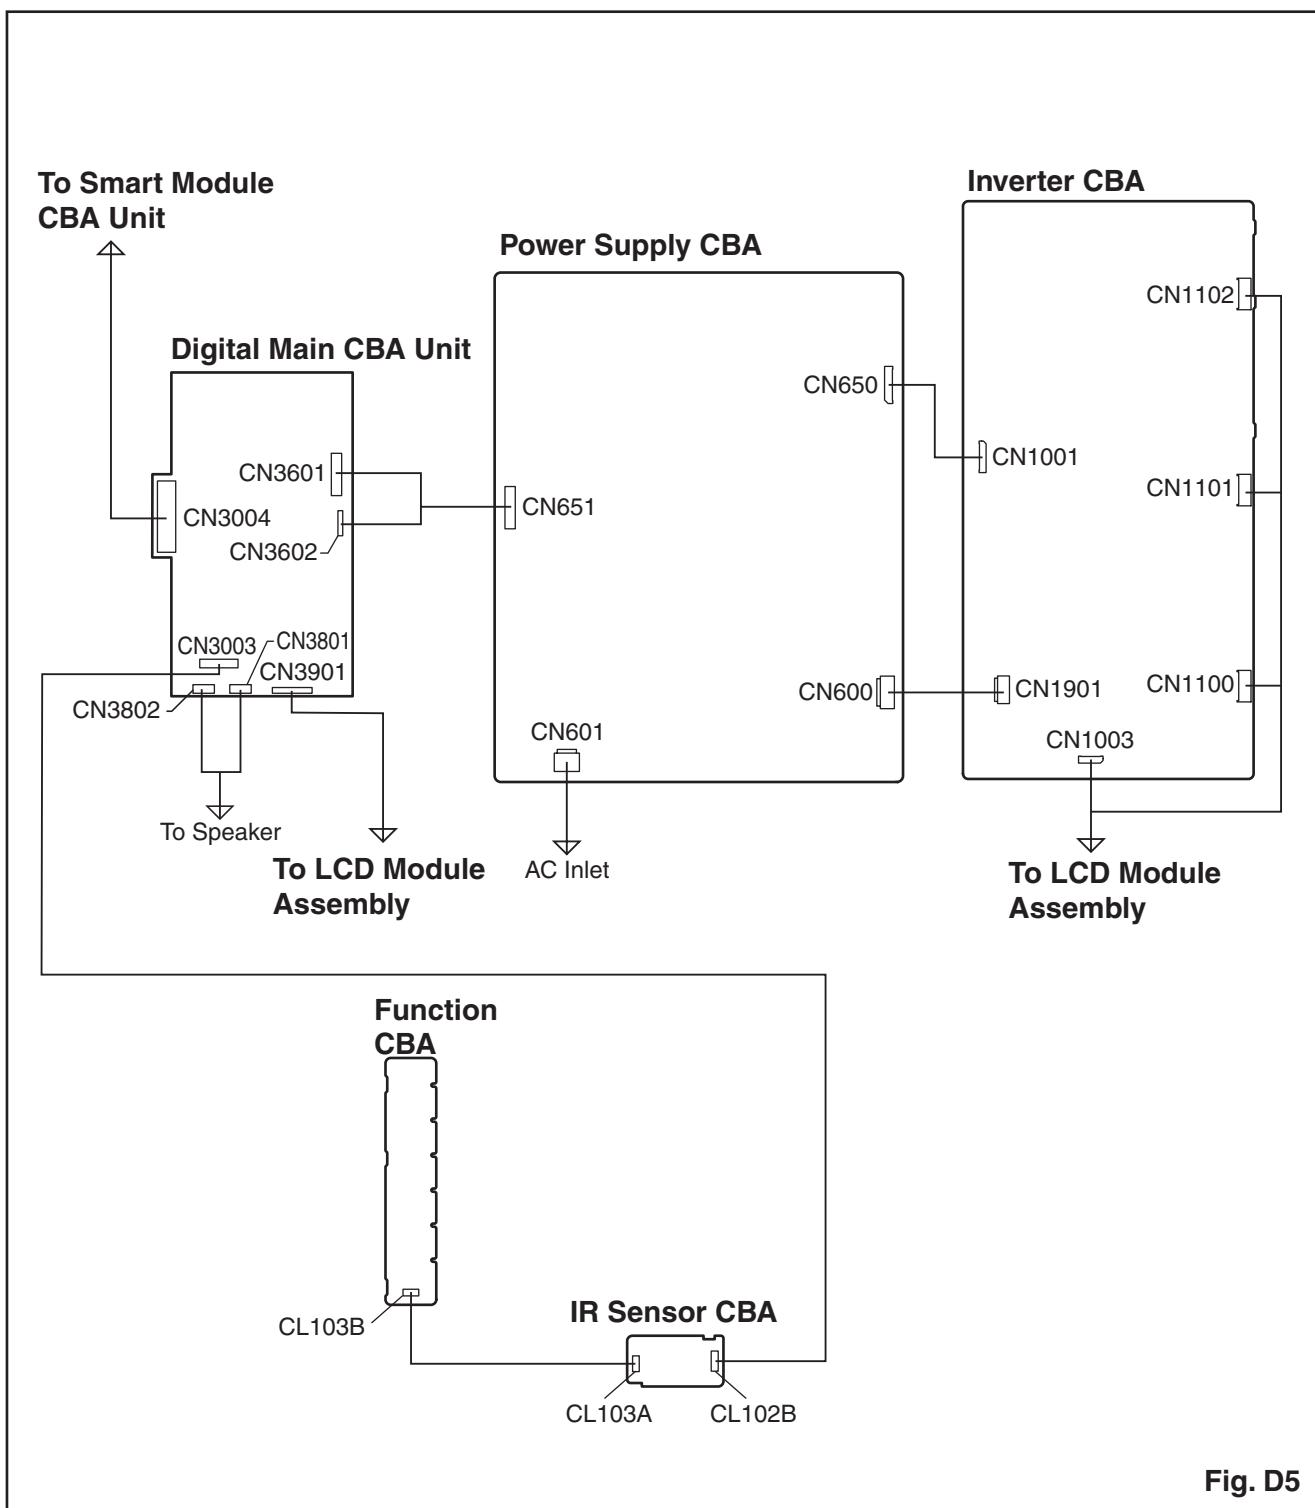


Fig. D5

ELECTRICAL ADJUSTMENT INSTRUCTIONS

[32HFL5763D/F7]

General Note: "CBA" is abbreviation for "Circuit Board Assembly."

Note: Electrical adjustments are required after replacing circuit components and certain mechanical parts. It is important to perform these adjustments only after all repairs and replacements have been completed. Also, do not attempt these adjustments unless the proper equipment is available.

Test Equipment Required

1. Remote control unit
2. Color Analyzer,
CA-310 (KONICA MINOLTA Luminance meter) or
measuring instrument as good as CA-310.

How to set up the service mode

How to set up the service mode with Guest Remote Control Unit

1. Turn the power on.
2. Press [0], [6], [2], [5], [9], [6] and [INFO] buttons on the remote control unit in this order.
3. Select "Quality" - "BE Factory Mode" and press the [OK] button. The following screen appears.

"*" differs depending on the models.

Code:	*****_**_**_**
Pic code:	*****_*_*_*
Option code:	**_**_**_**
MIPS:	Push 0 key

Press "POWER" key to exit.

Safety:	Safety_Non	Total Watch Time: ****
		Lightsensor: ***

How to set up the service mode with Set Up Remote Control Unit (optional)

1. Turn the power on.
2. Press [0], [6], [2], [5], [9], [6] and [RECALL/INFO] buttons on the set up remote control unit in this order.
3. Select "Quality" - "BE Factory Mode" and press the [OK] button. The following screen appears.

"*" differs depending on the models.

Code:	*****_**_**_**
Pic code:	*****_*_*_*
Option code:	**_**_**_**
MIPS:	Push 0 key


Press "POWER" key to exit.

Safety:	Safety_Non	Total Watch Time: ****
		Lightsensor: ***

1. Purity Check Mode

This mode cycles through full-screen displays of red, green, blue, and white to check for non-active pixels.

1. Enter the service mode.
2. Each time the [7] button on the remote control unit is pressed, the display changes as follows.

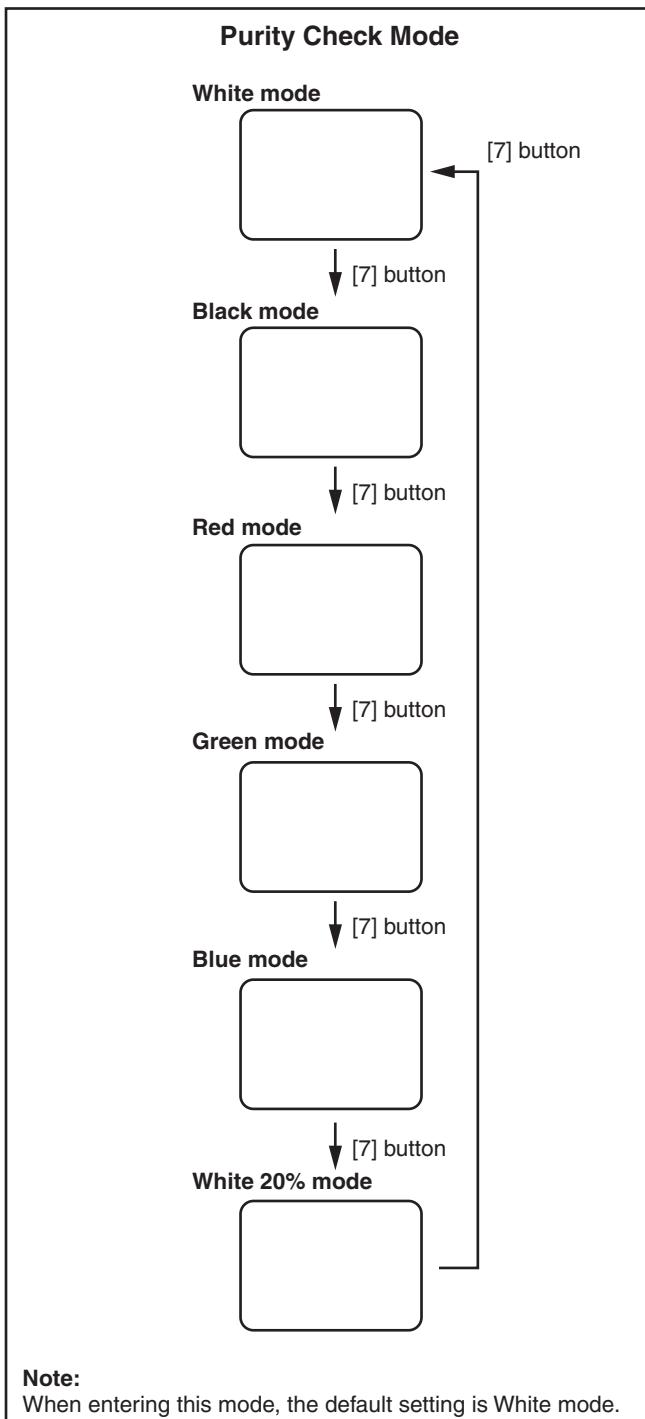


3. To cancel or to exit from the Purity Check Mode, press [PREV CH] button.

2. VCOM Adjustment

Test Point	Adj. Point
Screen	[CH + or -] buttons
M. EQ.	Spec.
Color analyzer	See below

Figure

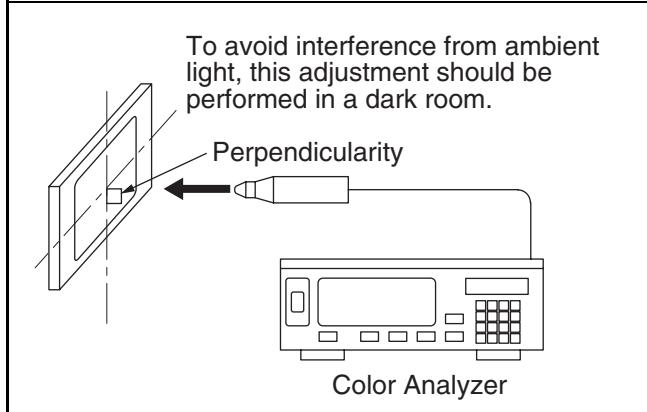

1. Set the color analyzer at the zero point calibration and bring the optical receptor pointing at the center of the LCD-Panel.
Note: The optical receptor must be set perpendicularly to the LCD Panel surface.
2. Enter the service mode.
3. Press [2] button on the remote control unit.
4. Press [CH + or -] buttons on the remote control unit so that the color analyzer value becomes minimum.
5. To cancel or to exit from the VCOM Adjustment, press [PREV CH] button.

The White Balance Adjustment should be performed when replacing the LCD Panel or Digital Main CBA.


3. White Balance Adjustment

Purpose: To mix red and blue beams correctly for pure white.

Symptom of Misadjustment: White becomes bluish or reddish.


ITEM	SPECIFICATION
Color temperature	$x= 0.272 \pm 0.002$ $y= 0.278 \pm 0.002$
Input Signal	Internal pattern (40/70% raster)
Measurement point	Screen center
M. EQ.	CA-310 (KONICA MINOLTA Luminance meter) or measuring instrument as good as CA-310.
Aging time	60min. (Rich MODE/100IRE Raster HDMI 1080i@60)
MODE setting of TV	Rich MODE
Ambient temperature	$25^{\circ}\text{C} \pm 5^{\circ}\text{C}$

1. Operate the unit for more than 60 minutes.
2. Enter the service mode.
3. Press [VOL -] button two times on the remote control unit to select "Drive setting" mode. "Drive" appears in the screen.
4. Set the color analyzer at the CHROMA mode and zero point calibration. Bring the optical receptor pointing at the center of the LCD-Panel.

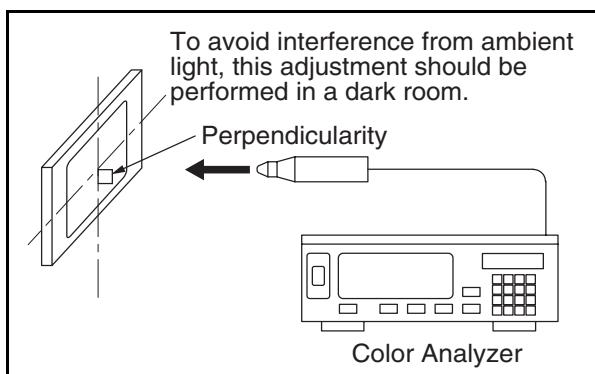


- Note:** The optical receptor must be set perpendicularly to the LCD Panel surface.
5. Press [3] button to select the "HDB" for High Drive Blue adjustment. ("HDB" appears in the screen.)

6. Press [MENU] button. The internal Raster signal appears in the screen. ("Internal (Single)" appears in the upper right of the screen as shown below.)

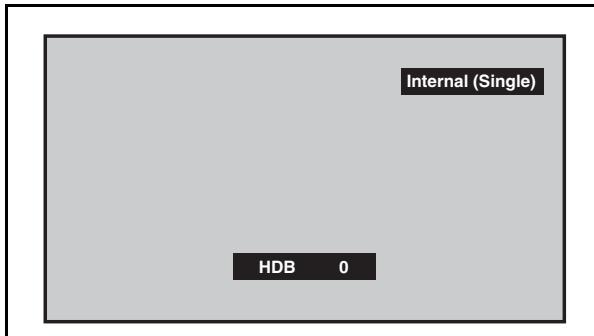

7. Press [CH + or -] buttons to adjust the color temperature becomes 12000°K ($x= 0.272 / y= 0.278 \pm 0.002$).
8. Press [1] button to select the "HDR" for High Drive Red adjustment ("HDR" appears in the screen.) and press [CH + or -] buttons to adjust the color temperature.
9. If necessary, adjust the "HDB" or "HDR" again.
10. Press [6] button to select the "LDB" for Low Drive Blue adjustment ("LDB" appears in the screen.) and press [CH + or -] buttons to adjust the color temperature.

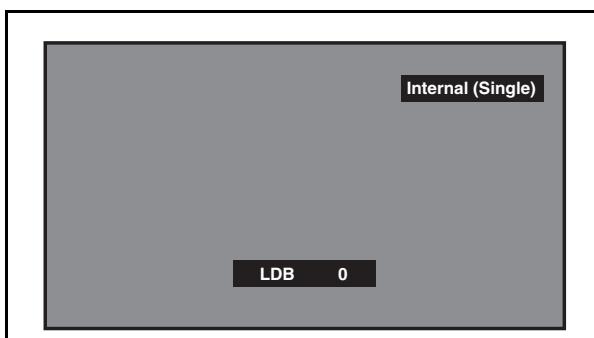

11. Press [4] button to select the "LDR" for Low Drive Red adjustment ("LDR" appears in the screen.) and press [CH + or -] buttons to adjust the color temperature.
12. If necessary, adjust the "LDB" or "LDR" again.
13. Press [VOL -] button to shift to the "Debugging Message" mode.
- If there is no message under "[WB]" section, this adjustment completes.
- If "Drive settings are NG. Retry." is displayed, repeat above steps from 5. to 12. Then check "Debugging Message" again. If "Drive settings are NG. Retry." is displayed, replace the LCD Panel or Digital Main CBA.
14. To cancel or to exit from the White Balance Adjustment, press [PREV CH] button.

[32HFL5763L/F7]

**General Note: "CBA" is abbreviation for
"Circuit Board Assembly."**

Note: Electrical adjustments are required after replacing circuit components and certain mechanical parts. It is important to perform these adjustments only after all repairs and replacements have been completed. Also, do not attempt these adjustments unless the proper equipment is available.


Test Equipment Required

1. Set up remote control unit
2. Color Analyzer,
CA-310 (KONICA MINOLTA Luminance meter) or
measuring instrument as good as CA-310.

How to set up the service mode with Set Up Remote Control Unit

1. Turn the power on.
2. Press [0], [6], [2], [5], [9], [6] and [RECALL/INFO] buttons on the set up remote control unit in this order.
3. Select "Quality" - "BE Factory Mode" and press the [OK] button. The following screen appears.


"*" differs depending on the models.

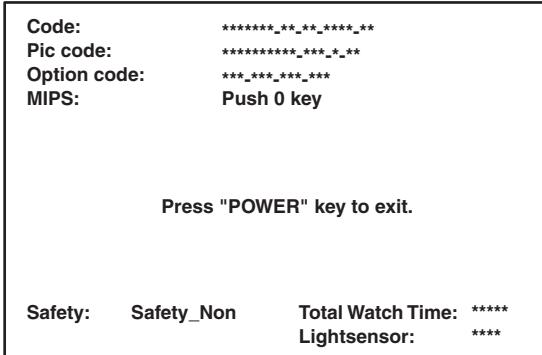

1. Purity Check Mode

This mode cycles through full-screen displays of red, green, blue, and white to check for non-active pixels.

1. Enter the service mode.
2. Each time the [7] button on the set up remote control unit is pressed, the display changes as follows.

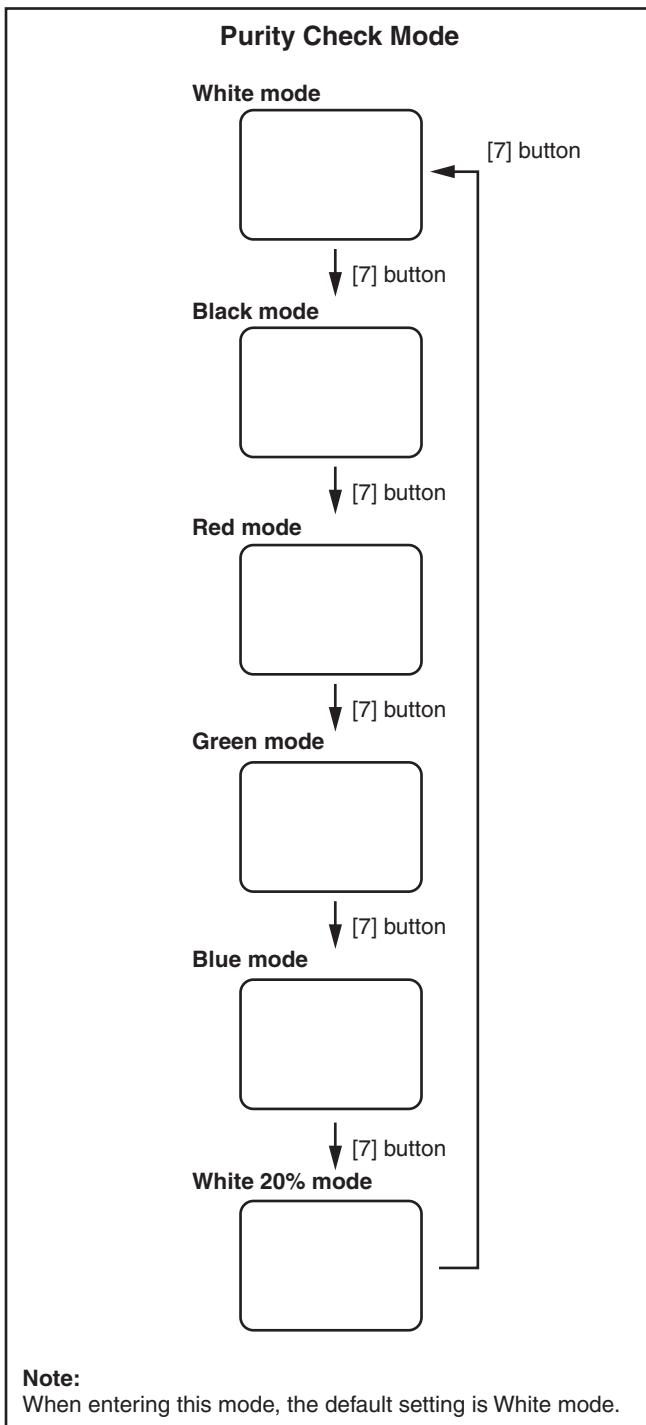

3. To cancel or to exit from the Purity Check Mode, press [BACK/PP] button.

2. VCOM Adjustment

Test Point	Adj. Point
Screen	[CH + or -] buttons
M. EQ.	Spec.
Color analyzer	See below
Figure	
<p>To avoid interference from ambient light, this adjustment should be performed in a dark room.</p> <p>Perpendicularity</p> <p>Color Analyzer</p>	

1. Operate the unit for more than 60 minutes.
2. Set the color analyzer at the zero point calibration and bring the optical receptor pointing at the center of the LCD-Panel.
Note: The optical receptor must be set perpendicularly to the LCD Panel surface.
3. Enter the service mode.
4. Press [3] button on the set up remote control unit.
5. Press [CH + or -] buttons on the set up remote control unit so that the color analyzer value becomes minimum.
6. To cancel or to exit from the VCOM Adjustment, press [BACK/PP] button.

The White Balance Adjustment should be performed when replacing the LCD Panel or Digital Main CBA.


3. White Balance Adjustment

Purpose: To mix red and blue beams correctly for pure white.

Symptom of Misadjustment: White becomes bluish or reddish.

ITEM	SPECIFICATION
Color temperature	$x= 0.272 \pm 0.002$ $y= 0.278 \pm 0.002$
Input Signal	Internal pattern (40/70% raster)
Measurement point	Screen center
M. EQ.	CA-310 (KONICA MINOLTA Luminance meter) or measuring instrument as good as CA-310.
Aging time	60min. (Rich MODE/100IRE Raster HDMI 1080i@60)
MODE setting of TV	Rich MODE
Ambient temperature	$25^{\circ}\text{C} \pm 5^{\circ}\text{C}$


1. Operate the unit for more than 60 minutes.
2. Enter the service mode.
3. Press [VOL -] button two times on the set up remote control unit to select “Drive setting” mode. “Drive” appears in the screen.
4. Set the color analyzer at the CHROMA mode and zero point calibration. Bring the optical receptor pointing at the center of the LCD-Panel.

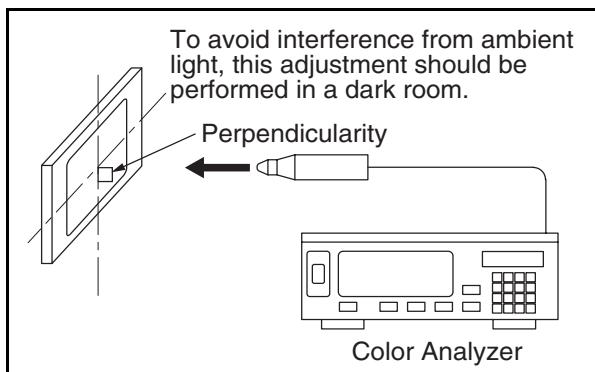


Note: The optical receptor must be set perpendicularly to the LCD Panel surface.

5. Press [3] button to select the “HDB” for High Drive Blue adjustment. (“HDB” appears in the screen.)

6. Press [MENU] button. The internal Raster signal appears in the screen. (“Internal (Single)” appears in the upper right of the screen as shown below.)

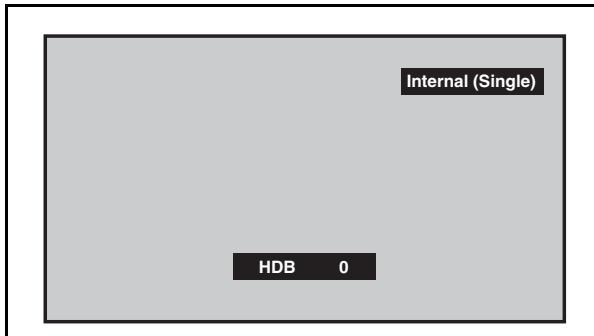

7. Press [CH + or -] buttons to adjust the color temperature becomes 12000°K ($x= 0.272 / y= 0.278 \pm 0.002$).
8. Press [1] button to select the “HDR” for High Drive Red adjustment (“HDR” appears in the screen.) and press [CH + or -] buttons to adjust the color temperature.
9. If necessary, adjust the “HDB” or “HDR” again.
10. Press [6] button to select the “LDB” for Low Drive Blue adjustment (“LDB” appears in the screen.) and press [CH + or -] buttons to adjust the color temperature.

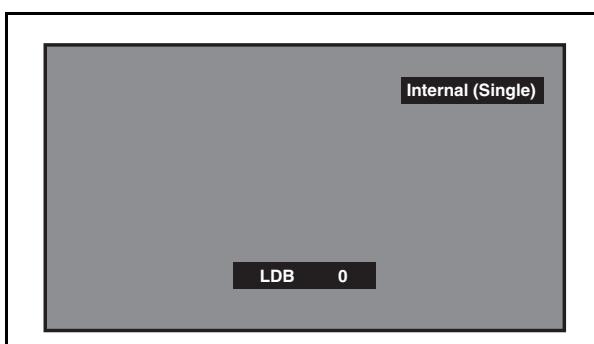

11. Press [4] button to select the “LDR” for Low Drive Red adjustment (“LDR” appears in the screen.) and press [CH + or -] buttons to adjust the color temperature.
12. If necessary, adjust the “LDB” or “LDR” again.
13. Press [VOL -] button to shift to the “Debugging Message” mode.
If there is no message under “[WB]” section, this adjustment completes.
If “Drive settings are NG. Retry.” is displayed, repeat above steps from 5. to 12. Then check “Debugging Message” again. If “Drive settings are NG. Retry.” is displayed, replace the LCD Panel or Digital Main CBA.
14. To cancel or to exit from the White Balance Adjustment, press [BACK/PP] button.

HOW TO INITIALIZE THE LCD TV

The purpose of initialization is to place the set in a new out of box condition. The customer will be prompted to select a language and program channels after the set has been initialized.

To put the program back at the factory-default, initialize the LCD TV using the following procedure.

Note: Disconnect any device from the USB Port before you conduct on this procedure.

1. Turn the power on.
2. Enter the service mode.
3. Press [RC5 GUEST] button on the set up remote control unit.
4. Press [RECALL/INFO] button on the set up remote control unit to initialize the LCD television.
5. After confirming that "INITIALIZED FINISH" appears on the screen, unplug the AC cord.

Note: To cancel the service mode, press [\odot] button on the set up remote control unit.

HOW TO INITIALIZE THE SMART MODULE SETTINGS

Note:

Make sure to clone the setting data if necessary before you conduct on this procedure.
Refer to the “HOSPITALITY TV MODE” for further detail.

1. Press [RC5 GUEST] button on the set up remote control unit.
2. Press [0], [6], [2], [5], [9], [6] and [RECALL/INFO] buttons on the set up remote control unit in this order to enter the service mode.
3. Press [\blacktriangle], [\blacktriangledown], [\blacktriangleright] or [\blacktriangleleft] button to select “Quality”.
4. Press [\blacktriangle], [\blacktriangledown], [\blacktriangleright] or [\blacktriangleleft] button to select “Initialize Settings” and press the [OK] button.

FIRMWARE RENEWAL MODE

This section enables the upgrading of the TV software via USB, RF or IP. It also allows the configuration of the Auto Update feature to enable the TV to be automatically upgraded.

Guest TV Settings	Source	RF
PPV/VOD Options	Direction	USB
Installer TV Settings	RF Channel Number	IP
TV Clone	Upgrade Path	
TV Upgrade	Upgrade Type	
	SW Version Check	
	Start	
	Auto Update	

- Source: "RF", "USB", "IP" – This function allows you to select the Source from which the TV Upgrade data will be received. Like the TV Clone function, the RF option requires a PSG installed in the property head end to broadcast the data to the TVs. For more information, contact your P&F sales representative.

Guest TV Settings	Source	USB To TV
PPV/VOD Options	Direction	TV To USB
Installer TV Settings	RF Channel Number	
TV Clone	Upgrade Path	
TV Upgrade	Upgrade Type	
	SW Version Check	
	Start	
	Auto Update	

- Direction: "USB To TV", "TV to USB"

Guest TV Settings	Source	• USB
PPV/VOD Options	Direction	• USB To TV
Installer TV Settings	RF Channel Number	• 087
TV Clone	Upgrade Path	• Http://www.philips.com.tw
TV Upgrade	Upgrade Type	• All
	SW Version Check	• Yes
	Start	• >
	Auto Update	• Yes

- RF Channel Number

Guest TV Settings	Source	All
PPV/VOD Options	Direction	Software Update Pakage
Installer TV Settings	RF Channel Number	Software Asset Pakage
TV Clone	Upgrade Path	
TV Upgrade	Upgrade Type	
	SW Version Check	
	Start	
	Auto Update	

- Upgrade Type: "All", "Software Upgrade Package", "Software Asset Package"
- This section allows you to select the type of software to be upgraded to the TV.
 - If set to ALL, then all software types (Software Upgrade Package and Software Asset Package) will be upgraded automatically.
 - If set to Software Upgrade Package, there is an option to selectively upgrade individual software components such as main software, standby software and back-end software.
 - If set to Software Asset Package, there is an option to selectively upgrade individual software assets such as Hotel Logo, Channel Logo, Welcome Logo, Customizable UI, Programmable UI and SmartModule Clone Data.

Guest TV Settings	Source	• USB
PPV/VOD Options	Direction	• USB To TV
Installer TV Settings	RF Channel Number	• TV087
TV Clone	Upgrade Path	• Http://www.philips.com.tw
TV Upgrade	Upgrade Type	• All
	SW Version Check	• Yes
	Start	• >
	Auto Update	• Yes

- SW Version Check: "Yes", "No" - If set to Yes, this feature causes the TV to perform a version check of the TV upgrade software to ensure that only a newer version will be installed.

	
Guest TV Settings	Source • USB
PPV/VOD Options	Direction • USB To TV
Installer TV Settings	RF Channel Number • TV087
TV Clone	Upgrade Path • Http://www.philips.com.tw
TV Upgrade	Upgrade Type • All
	SW Version Check • Yes
Start	• >
	Auto Update • Yes
	

- Start - This function will initiate the TV upgrading process.

	
Guest TV Settings	Source • USB
PPV/VOD Options	Direction • USB To TV
Installer TV Settings	RF Channel Number • TV087
TV Clone	Upgrade Path • Http://www.philips.com.tw
TV Upgrade	Upgrade Type • All
	SW Version Check • Yes
Start	• >
Auto Update	• <input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
	

- Auto Update: "Yes", "No" - This function enables/disables the Auto Update feature of the TV. If set to Yes, then Auto Update will automatically check for new TV upgrades and upgrade the TV software and/or clone data if newer versions are found. Like all previous RF download functions, this too requires a PSG to be installed in the property head end.

	
Guest TV Settings	Direction • USB To TV
PPV/VOD Options	RF Channel Number • TV087
Installer TV Settings	Upgrade Path • Http://www.philips.com.tw
TV Clone	Upgrade Type • All
TV Upgrade	SW Version Check • Yes
	Start • >
Auto Update	• No
Auto Update RF Channel	• <input type="text"/> 087
	

- Auto Update RF Channel: This function selects the RF channel number where the TV will search for Auto Update data (if Auto Update is enabled).

HOSPITALITY TV MODE

TV to USB settings

- The channel map and all other settings except for the factory setting will be copied from TV to USB storage device.
- The Clone data will be stored in the root directory of the USB storage device.
- The picture data such as logos will be stored in “BUH_Logos” file and any other setting such as the channel map will be stored in “BUH_SmartSettings” file.
- When a same file name exists in the USB storage device, the new file will overwrite the previous file.
- All the key input and the shutdown timers will be invalid during the cloning process.
- Audio and Video will be muted during the cloning process.

How to clone the TV settings to USB storage device

1. Turn the power on.
2. Insert an empty USB storage device to the USB port.
3. Press the [HOME/MENU] button on the set up remote control to display the menu.
4. Select “TV Clone”.
5. Select “TV to USB” and press the [OK] button.
6. After the successful completion, “Setting copied to USB” message appears on the screen.

USB to TV settings


- The channel map and all other settings except for the factory setting will be copied from USB storage device to TV.
- All the key input and the shutdown timers will be invalid during the cloning process.
- Audio and Video will be muted during the cloning process.
- When illegal data exist in the file, the cloning process will be aborted.
- After the successful completion of the cloning process, the new set of values will be adopted by the TV.

How to read the setting values from the USB storage device

1. Turn the power on.
2. Insert an USB storage device to the USB port.
3. Press the [HOME/MENU] button on the set up remote control to display the menu screen.
4. Select “TV Clone”.
5. Select “Source to TV” and press [OK] button.
6. After the successful completion, the TV will restart and initialize with the new values. TV shifts to Standby (Green) and TV shifts to Live mode automatically.

Status menu screen (optional)


1. Turn the power on.
2. Press the [RECALL/INFO] button on the set up remote control to display the status menu.
You can switch the screen by using [▶] or [◀] button as shown below.

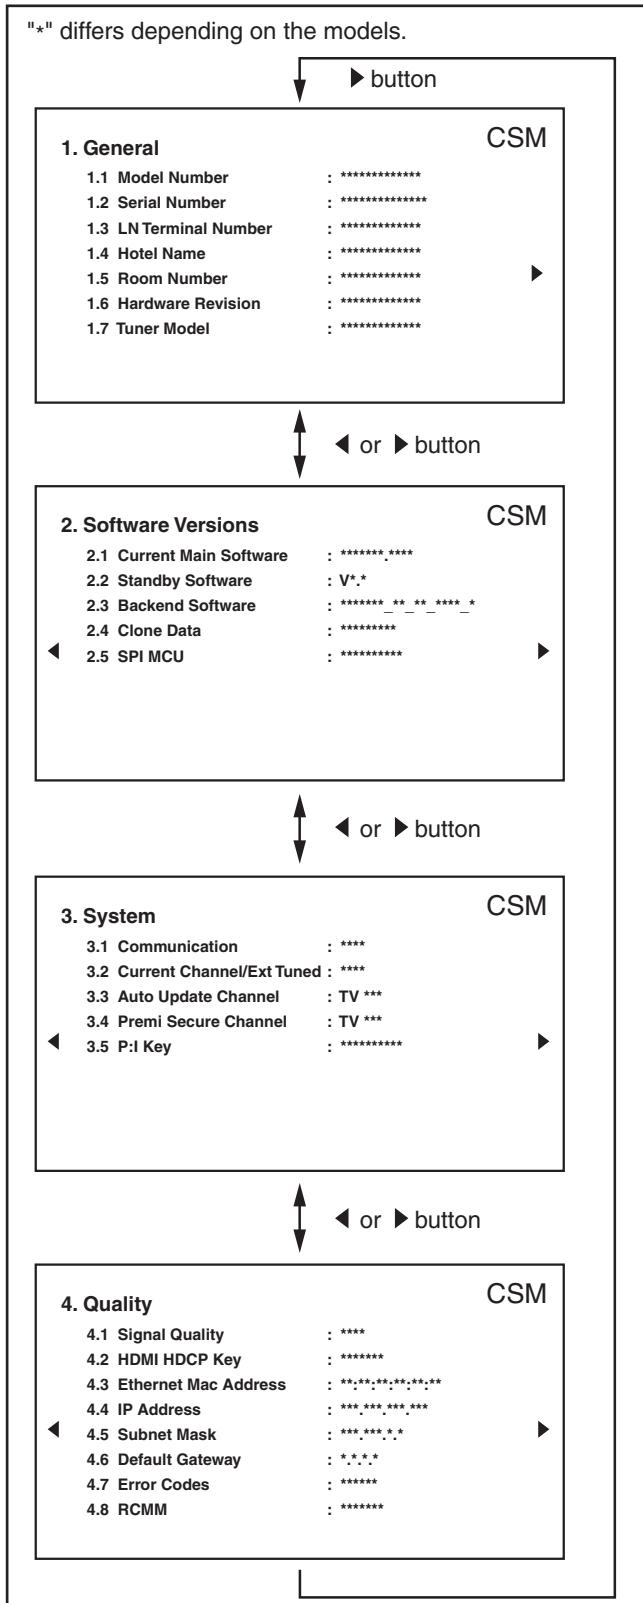


3. Press the [RECALL/INFO] button again to cancel the status menu.

TROUBLESHOOTING


FLOW CHART NO.1

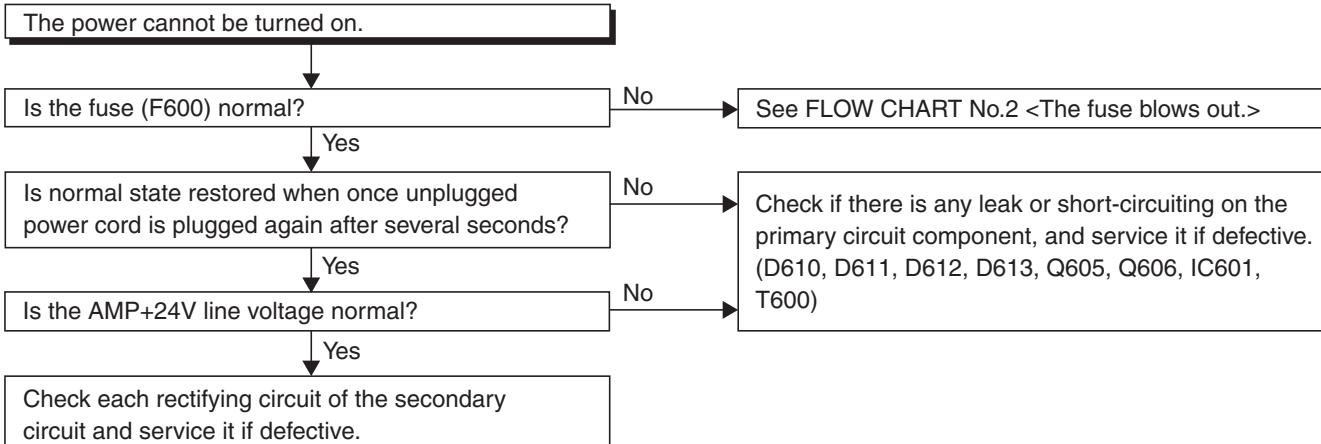


FLOW CHART NO.2

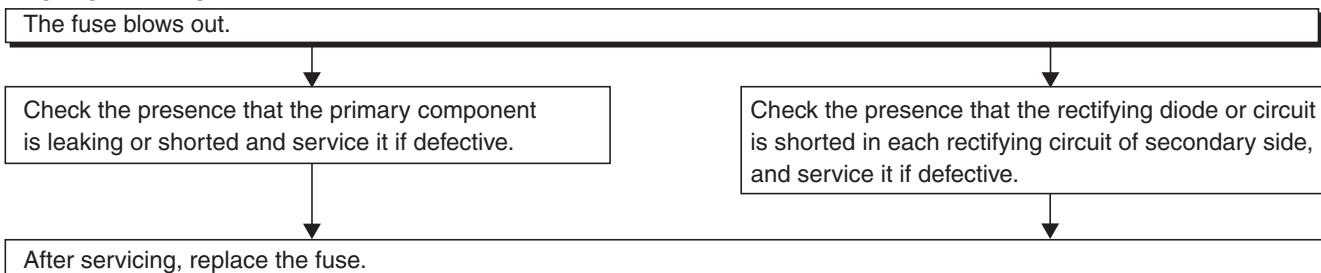


FLOW CHART NO.3



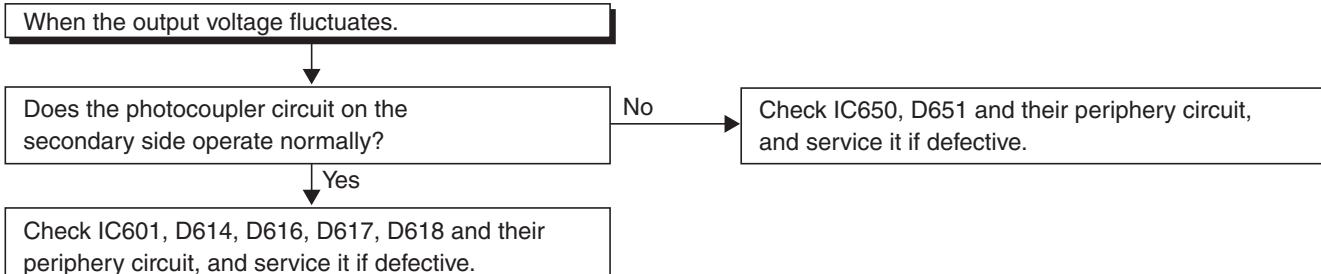





FLOW CHART NO.4




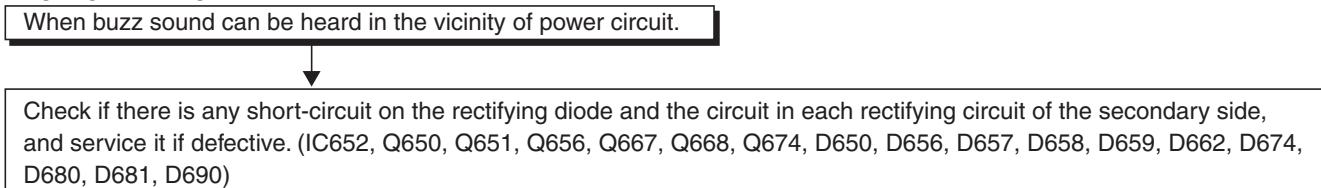


FLOW CHART NO.5

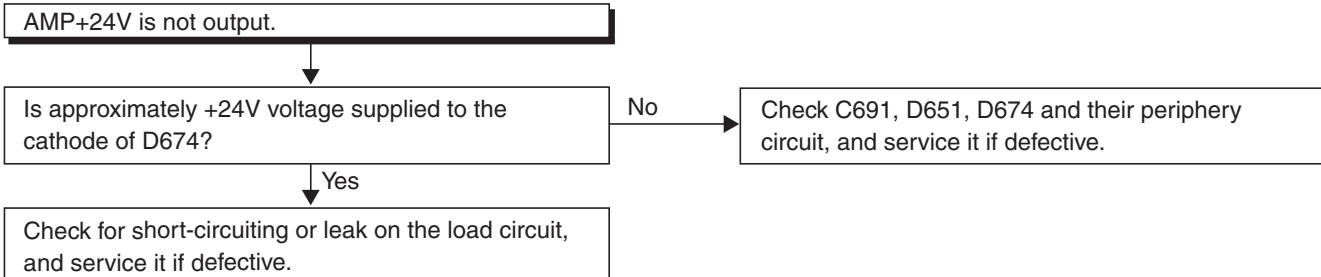

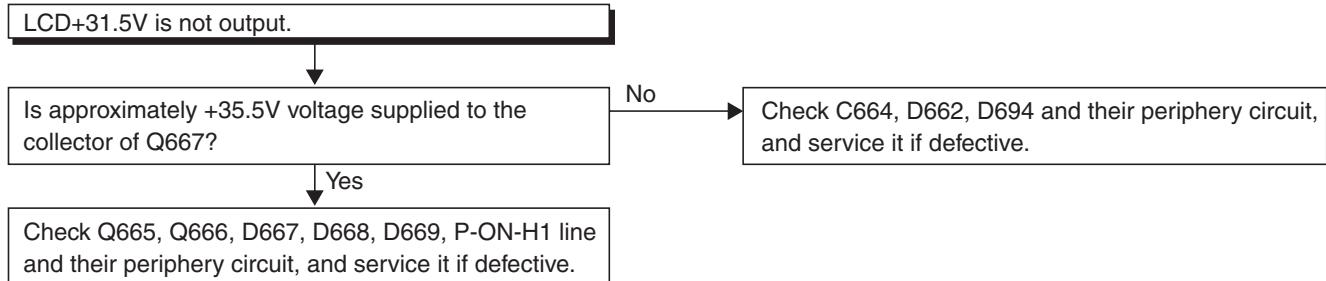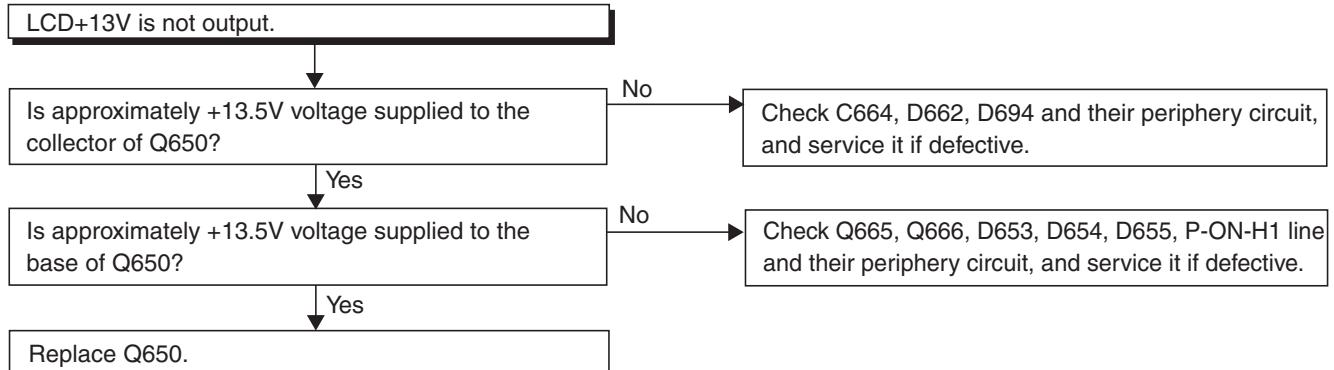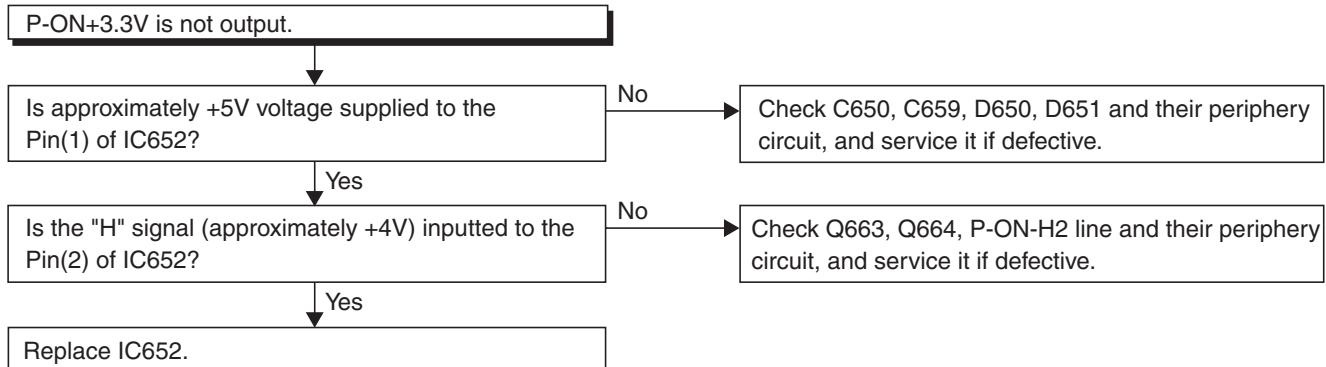
FLOW CHART NO.6**FLOW CHART NO.7****FLOW CHART NO.8**

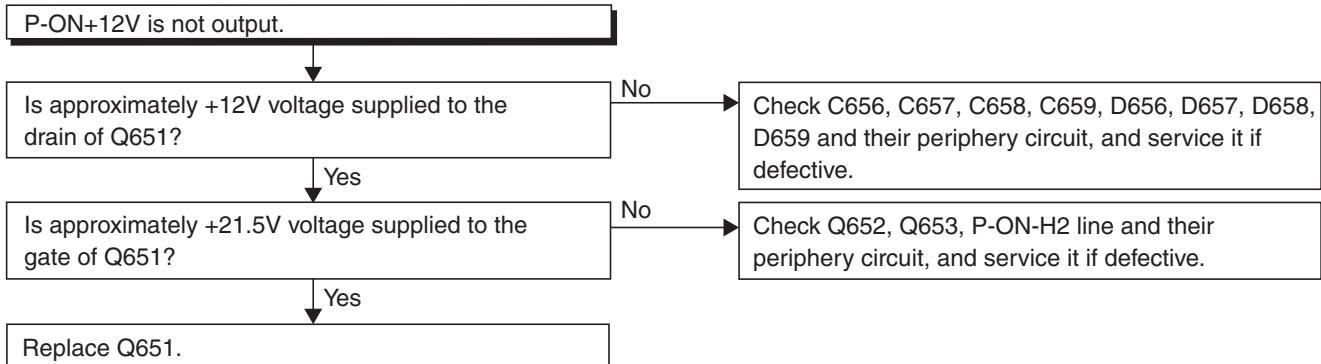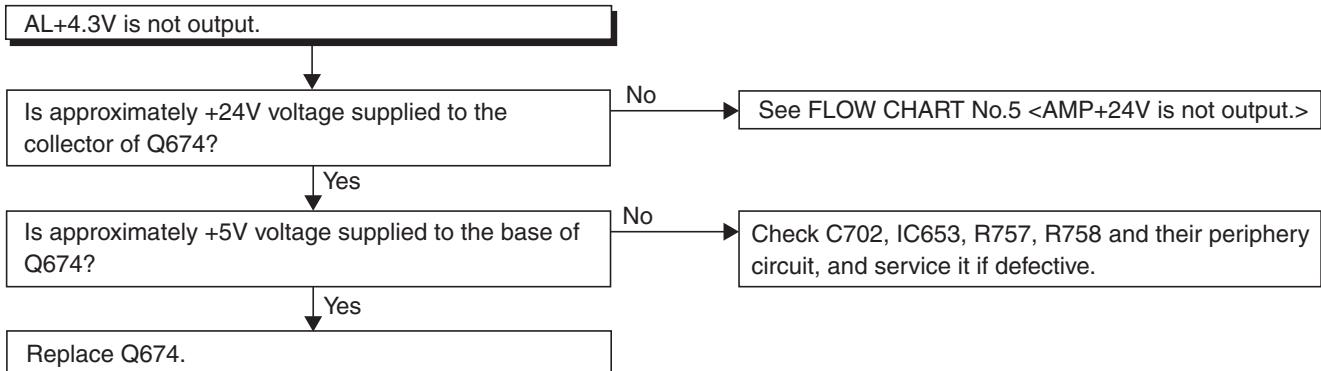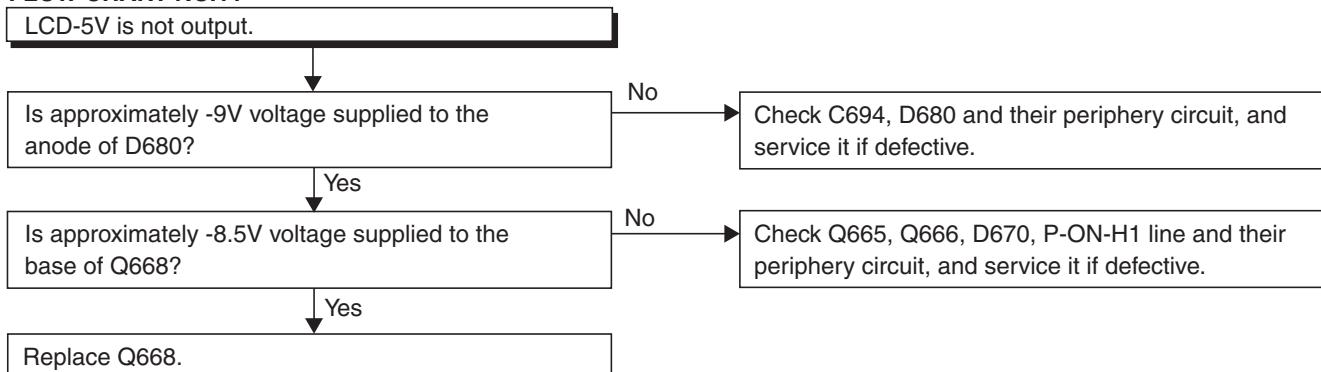FLOW CHART NO.9**FLOW CHART NO.10****FLOW CHART NO.11**

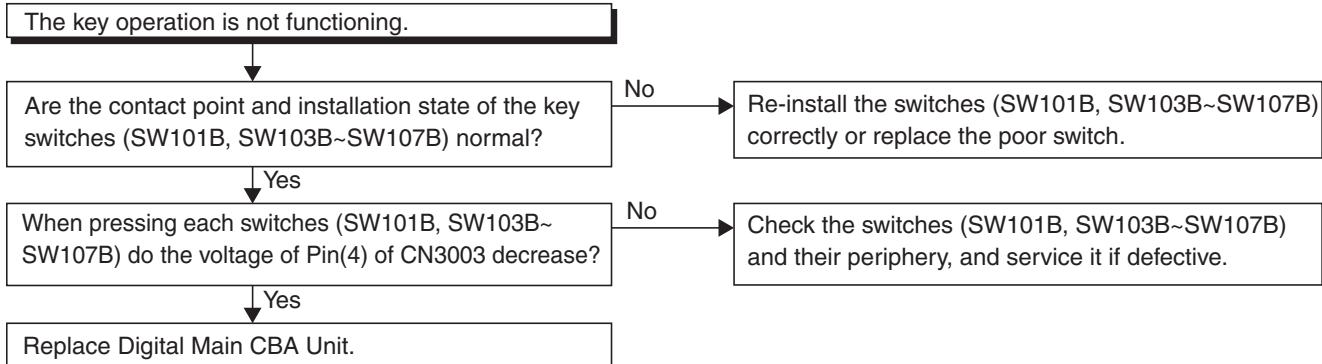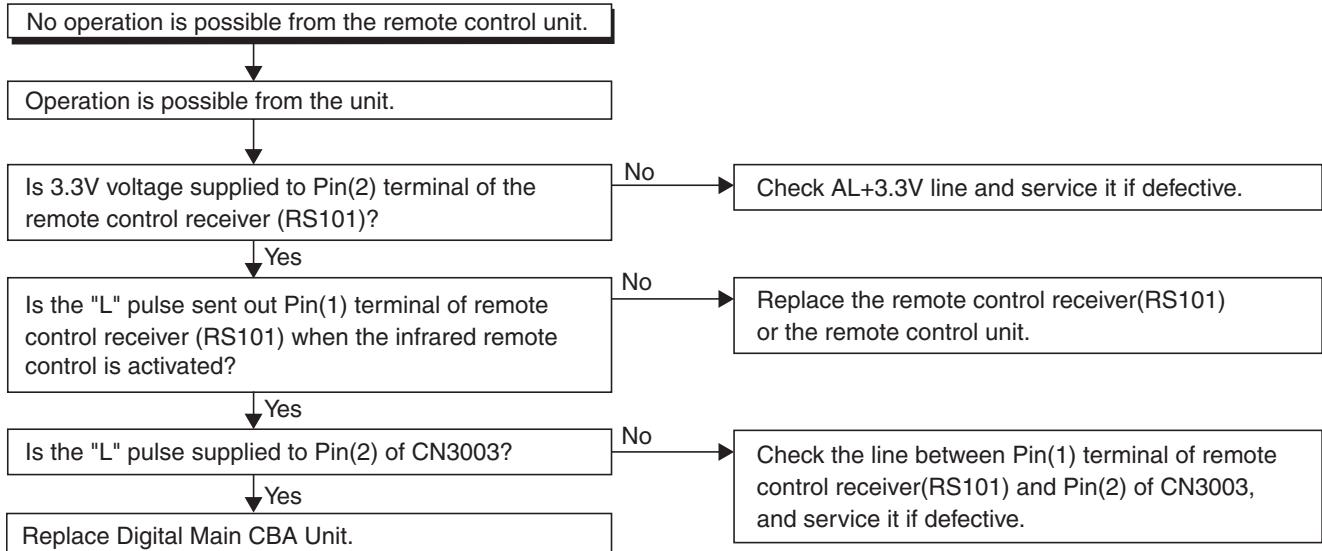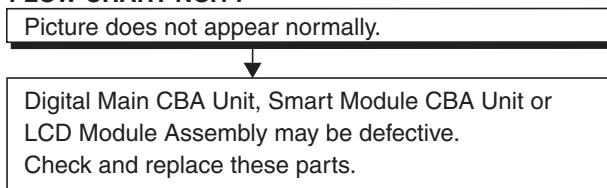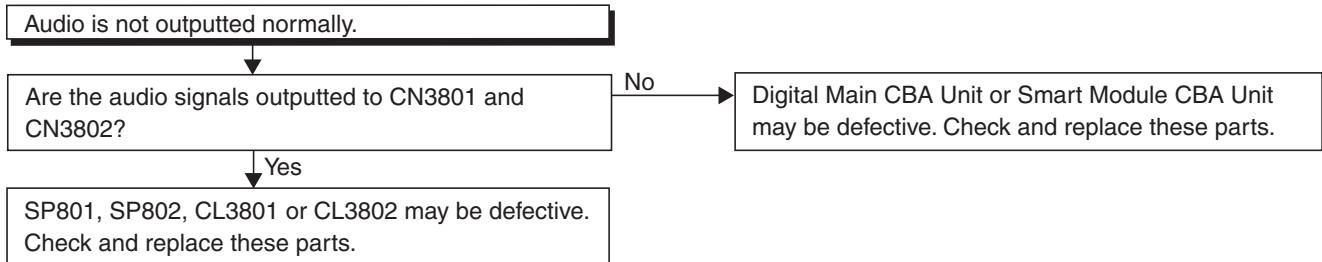
FLOW CHART NO.12**FLOW CHART NO.13****FLOW CHART NO.14****FLOW CHART NO.15**

BLOCK DIAGRAMS


1. System Control Block Diagram

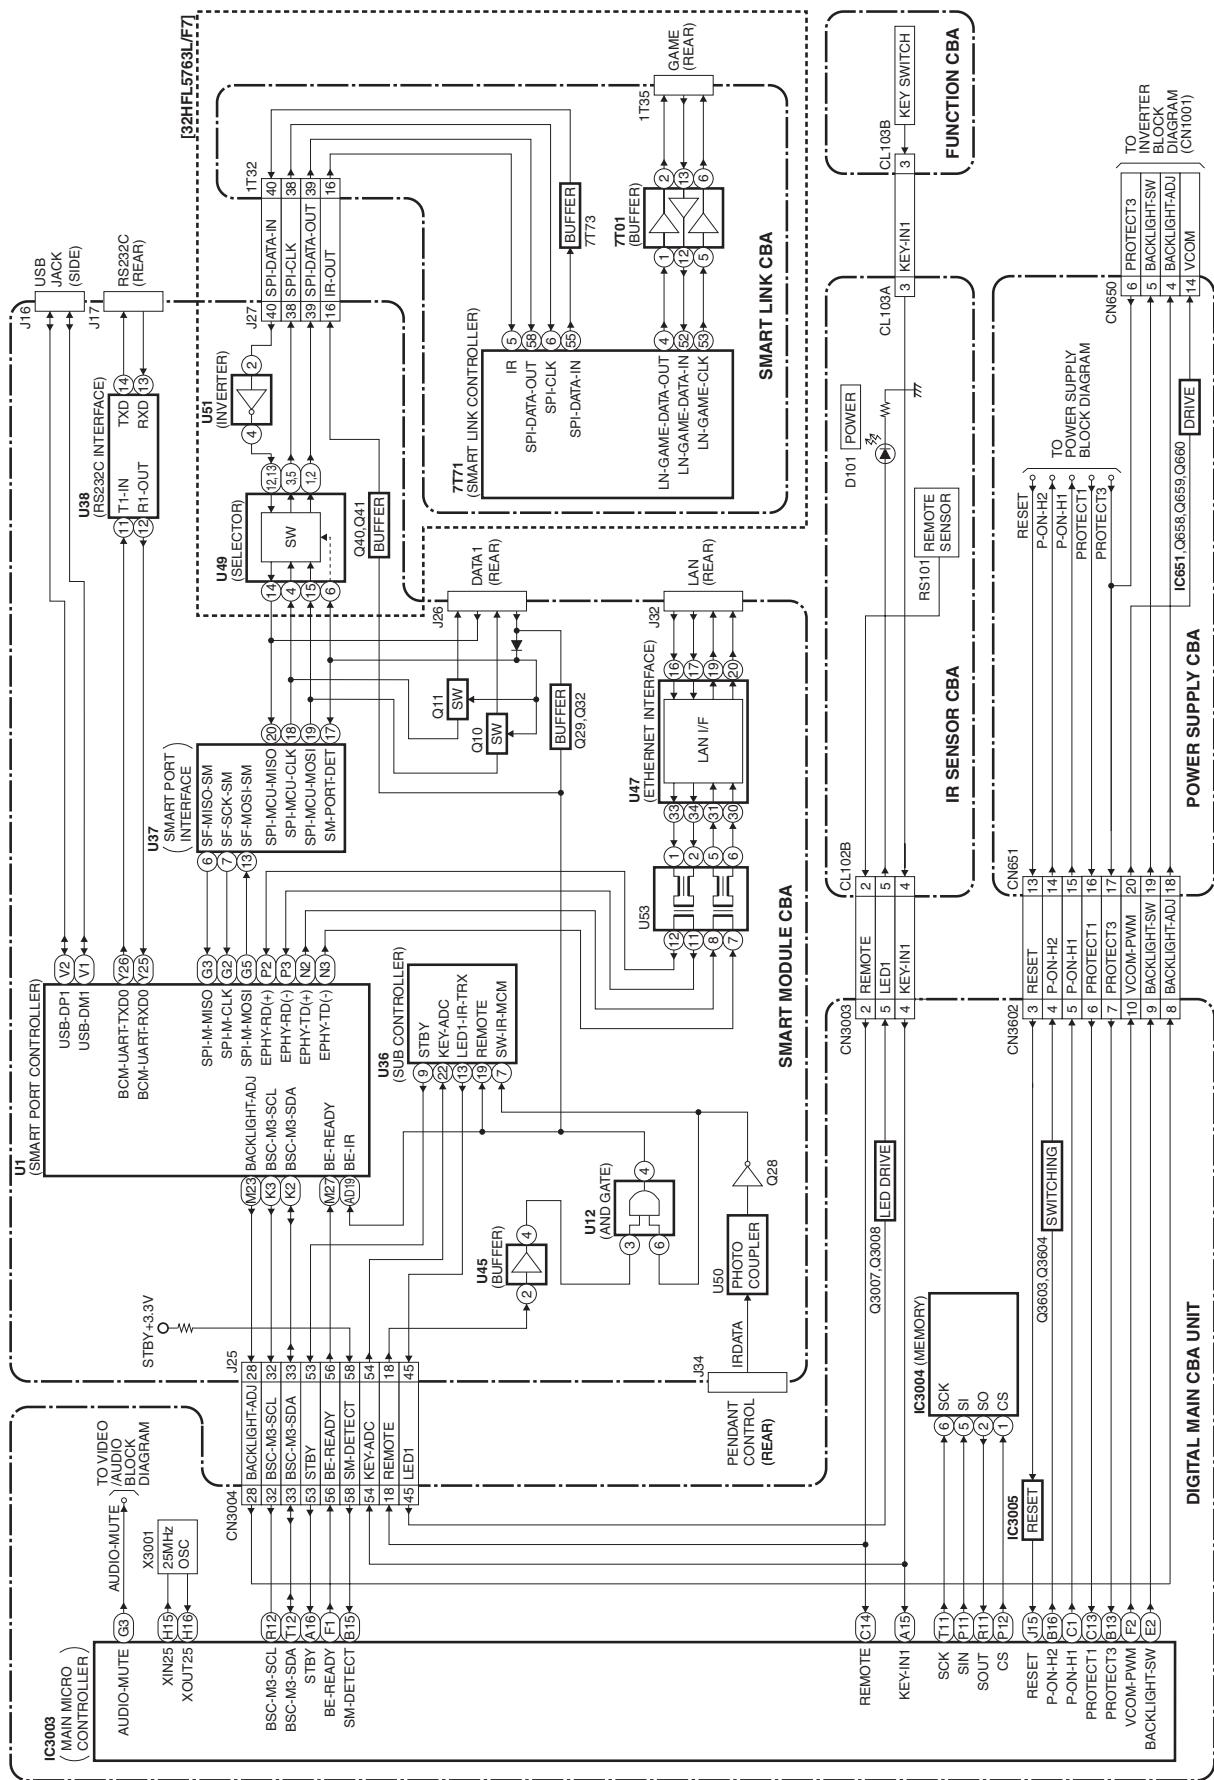

2. Video/Audio Block Diagram

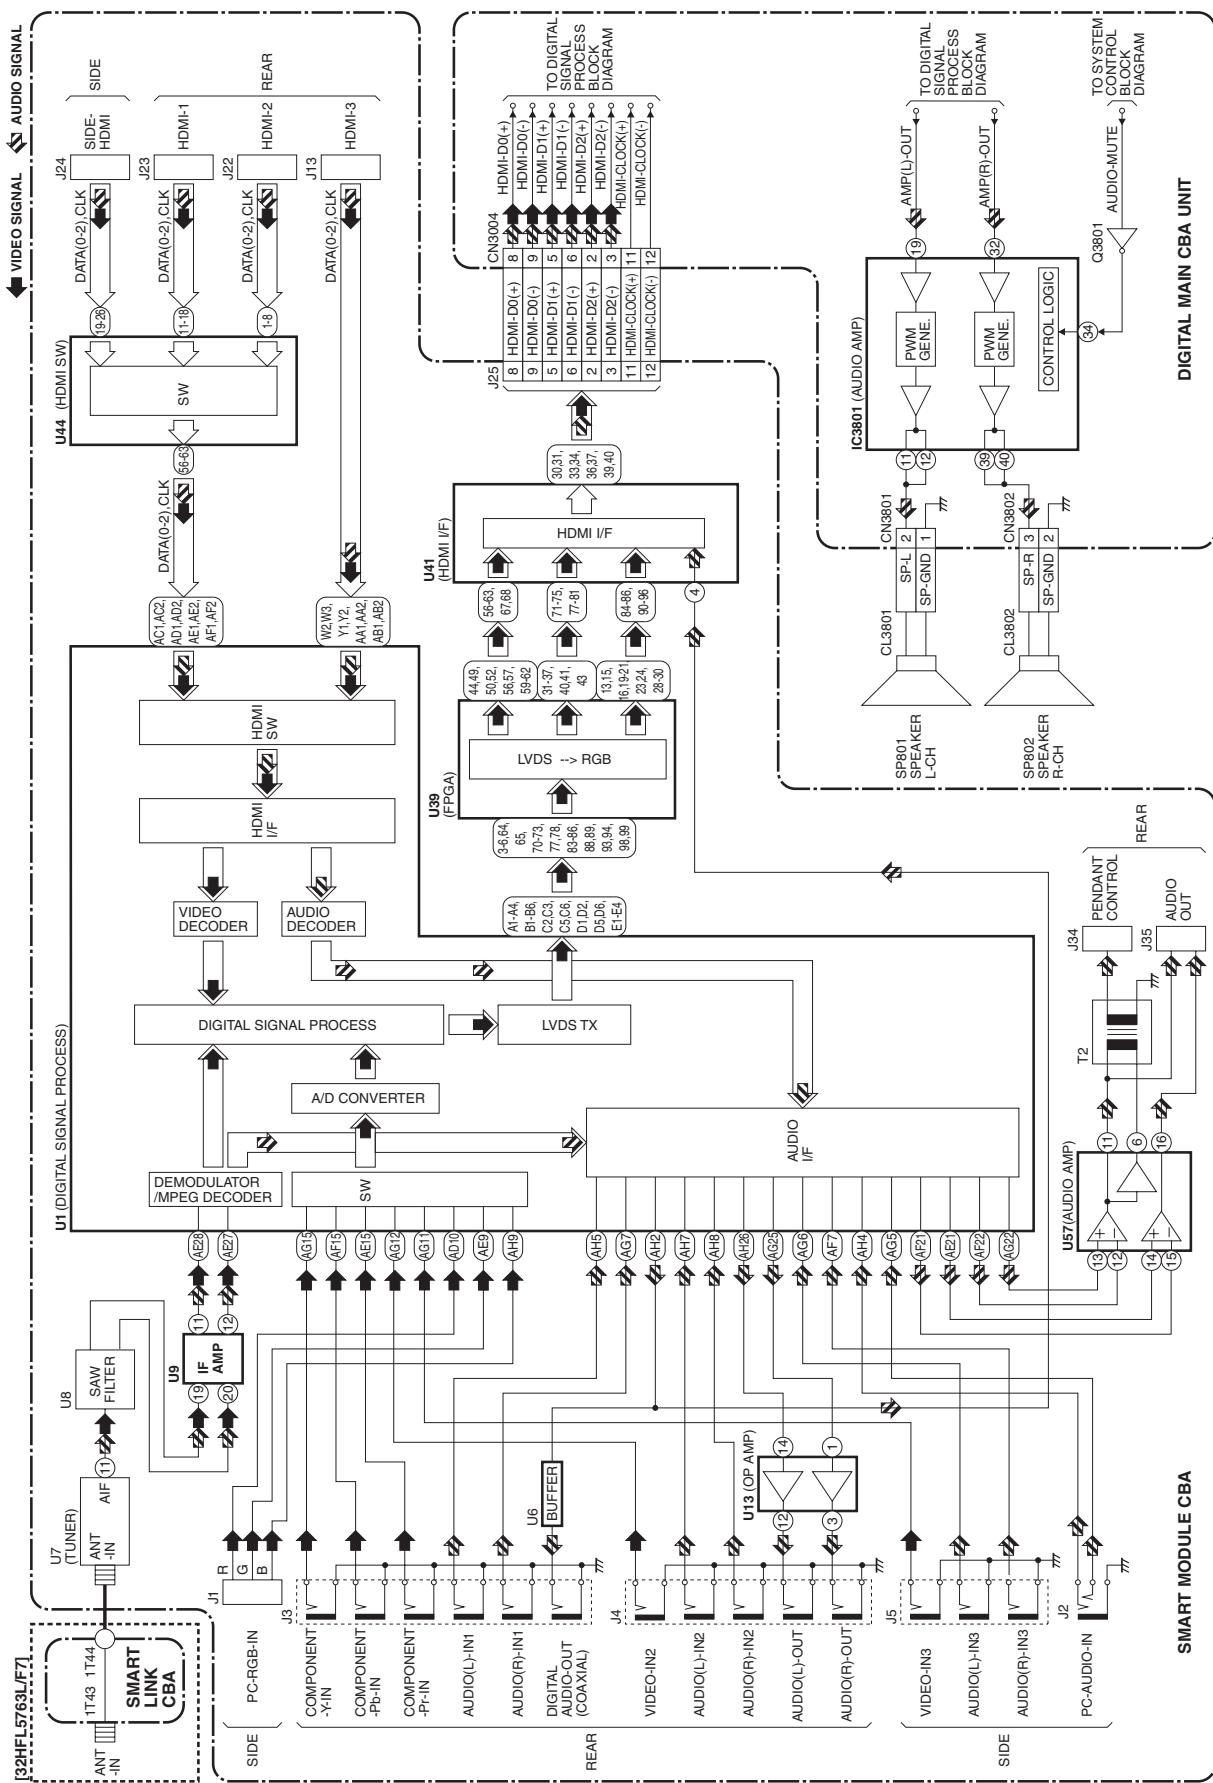


3. Digital Signal Process Block Diagram

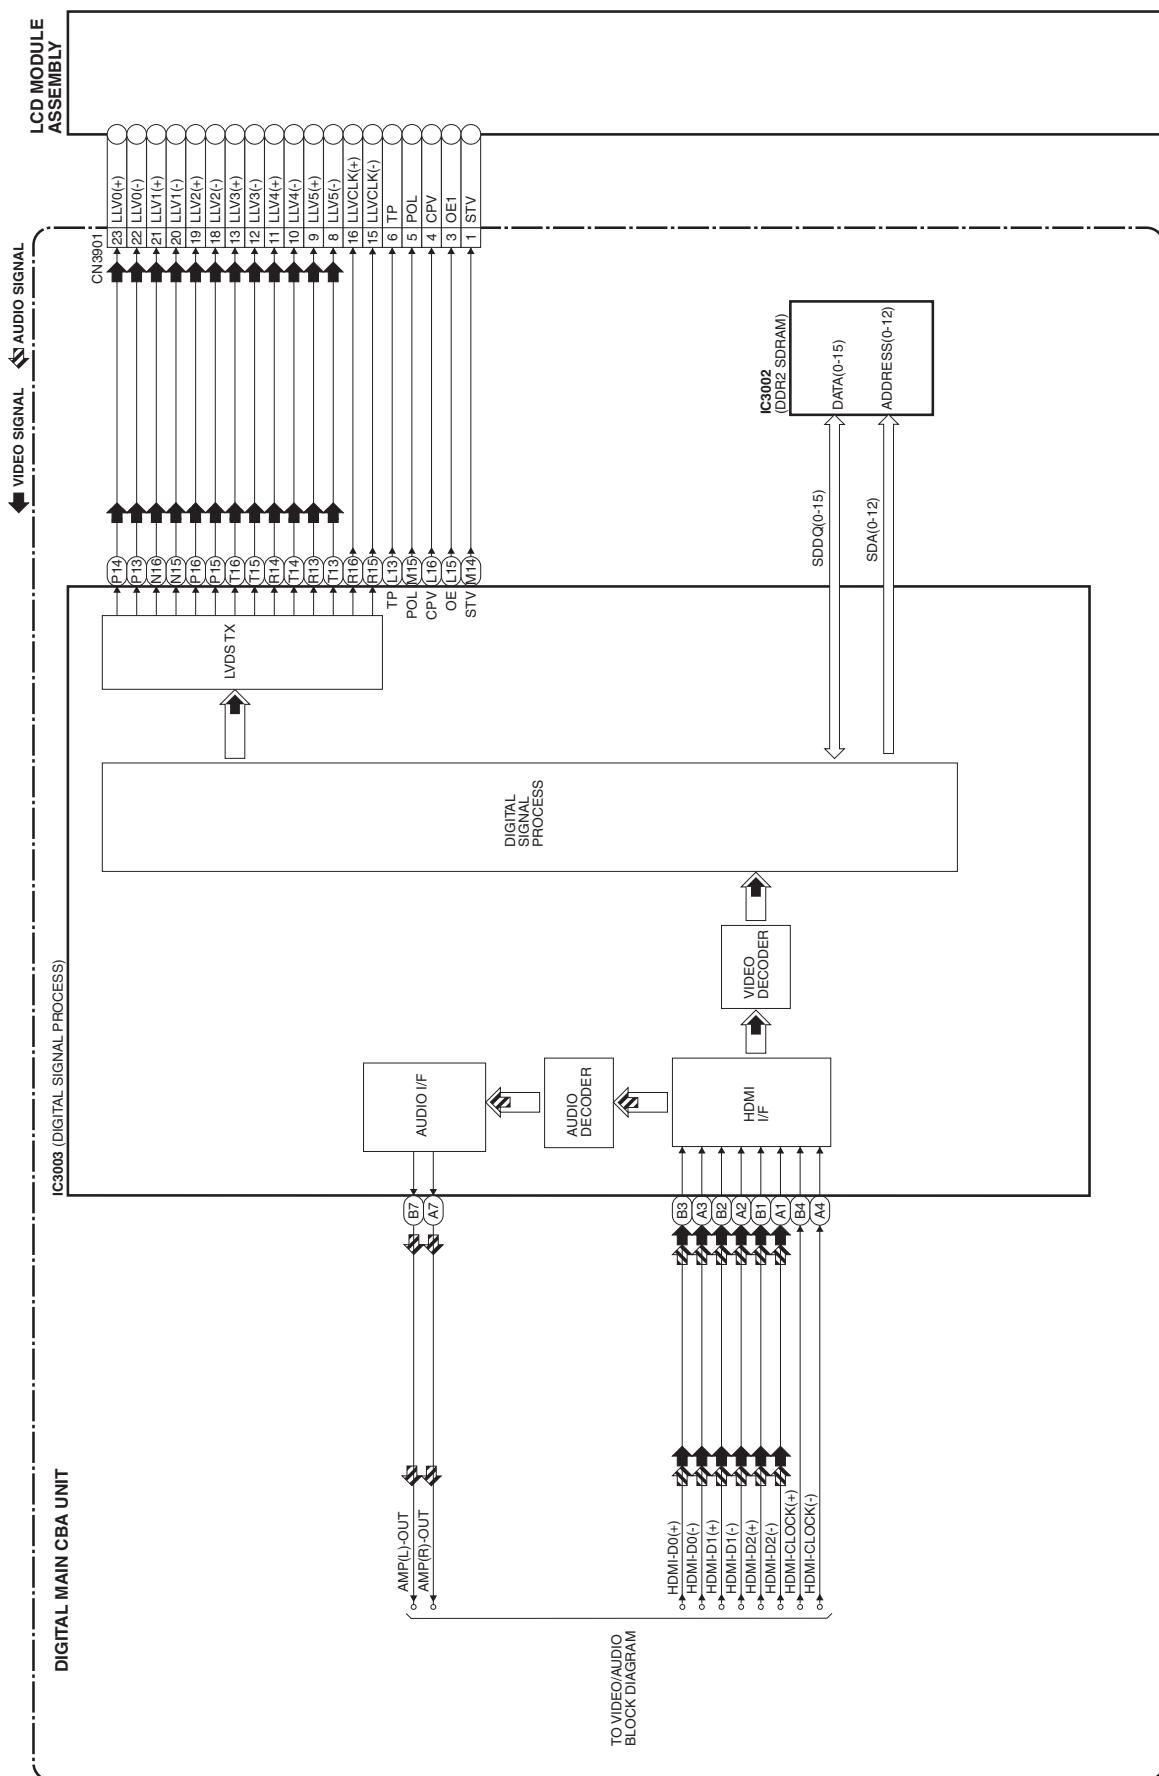

4. Inverter Block Diagram (main Inverter CBA)

NOTE:
The voltage for parts in hot circuit is measured using
hot GND as a common terminal.

When you conduct on a component level repair for the Inverter CBA for any models within this service manual,
make sure to refer the right Block Diagrams, Schematic Diagrams/CBA and Parts List.
For the main CBA, the last digit of the board number, which is engraved on every board, should be a number(e.g. BA17FY4F0103 2).
For the sub CBA, the last digit of the board number, which is engraved on every board, should be an alphabet(e.g. BA17FY4F0103 Z).

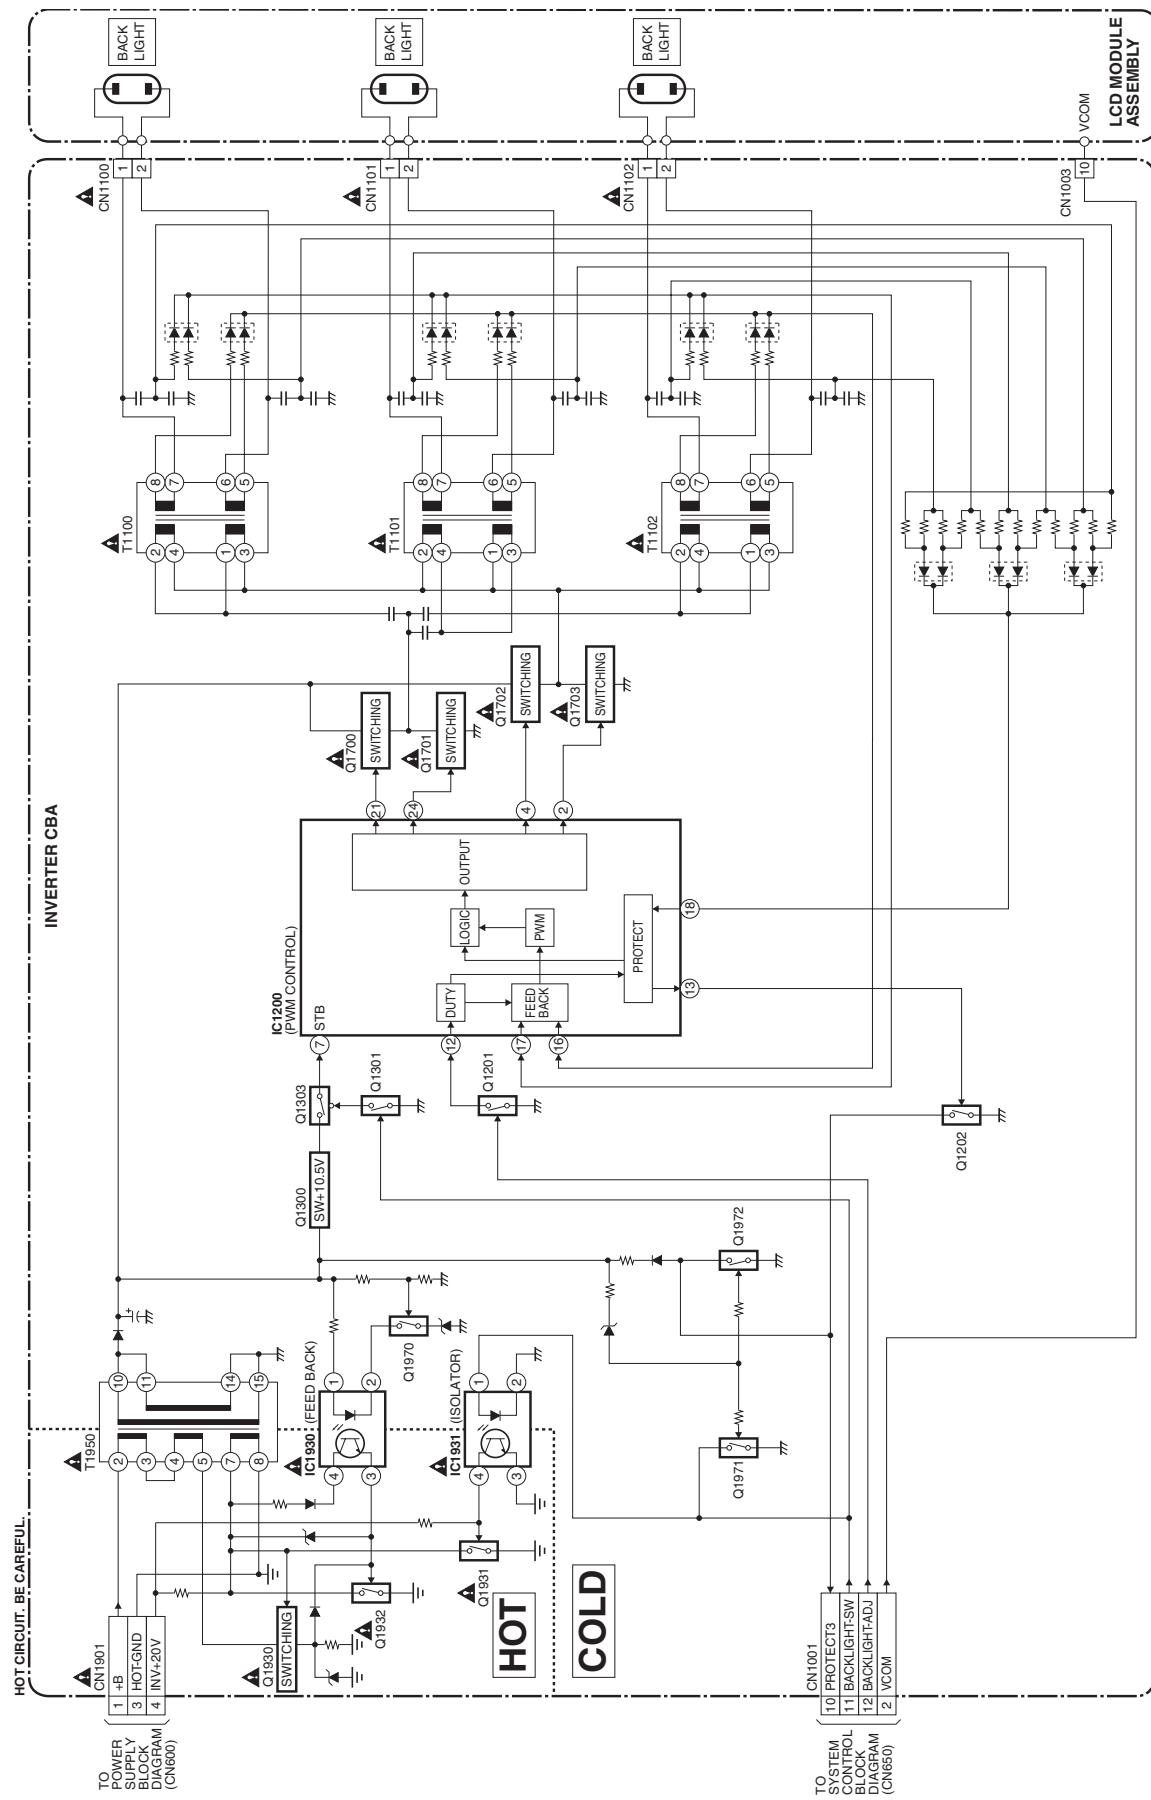


4. Inverter Block Diagram (sub Inverter CBA)

NOTE:
The voltage for parts in hot circuit is measured using
hot GND as a common terminal.

When you conduct on a component level repair for the Inverter CBA for any models within this service manual,
make sure to refer the right Block Diagrams, Schematic Diagrams/CBA and Parts List.

For the main CBA, the last digit of the board number, which is engraved on every board, should be a number(e.g. BA17F4F0103 2).

For the sub CBA, the last digit of the board number, which is engraved on every board, should be an alphabet(e.g. BA17F4F0103 Z).

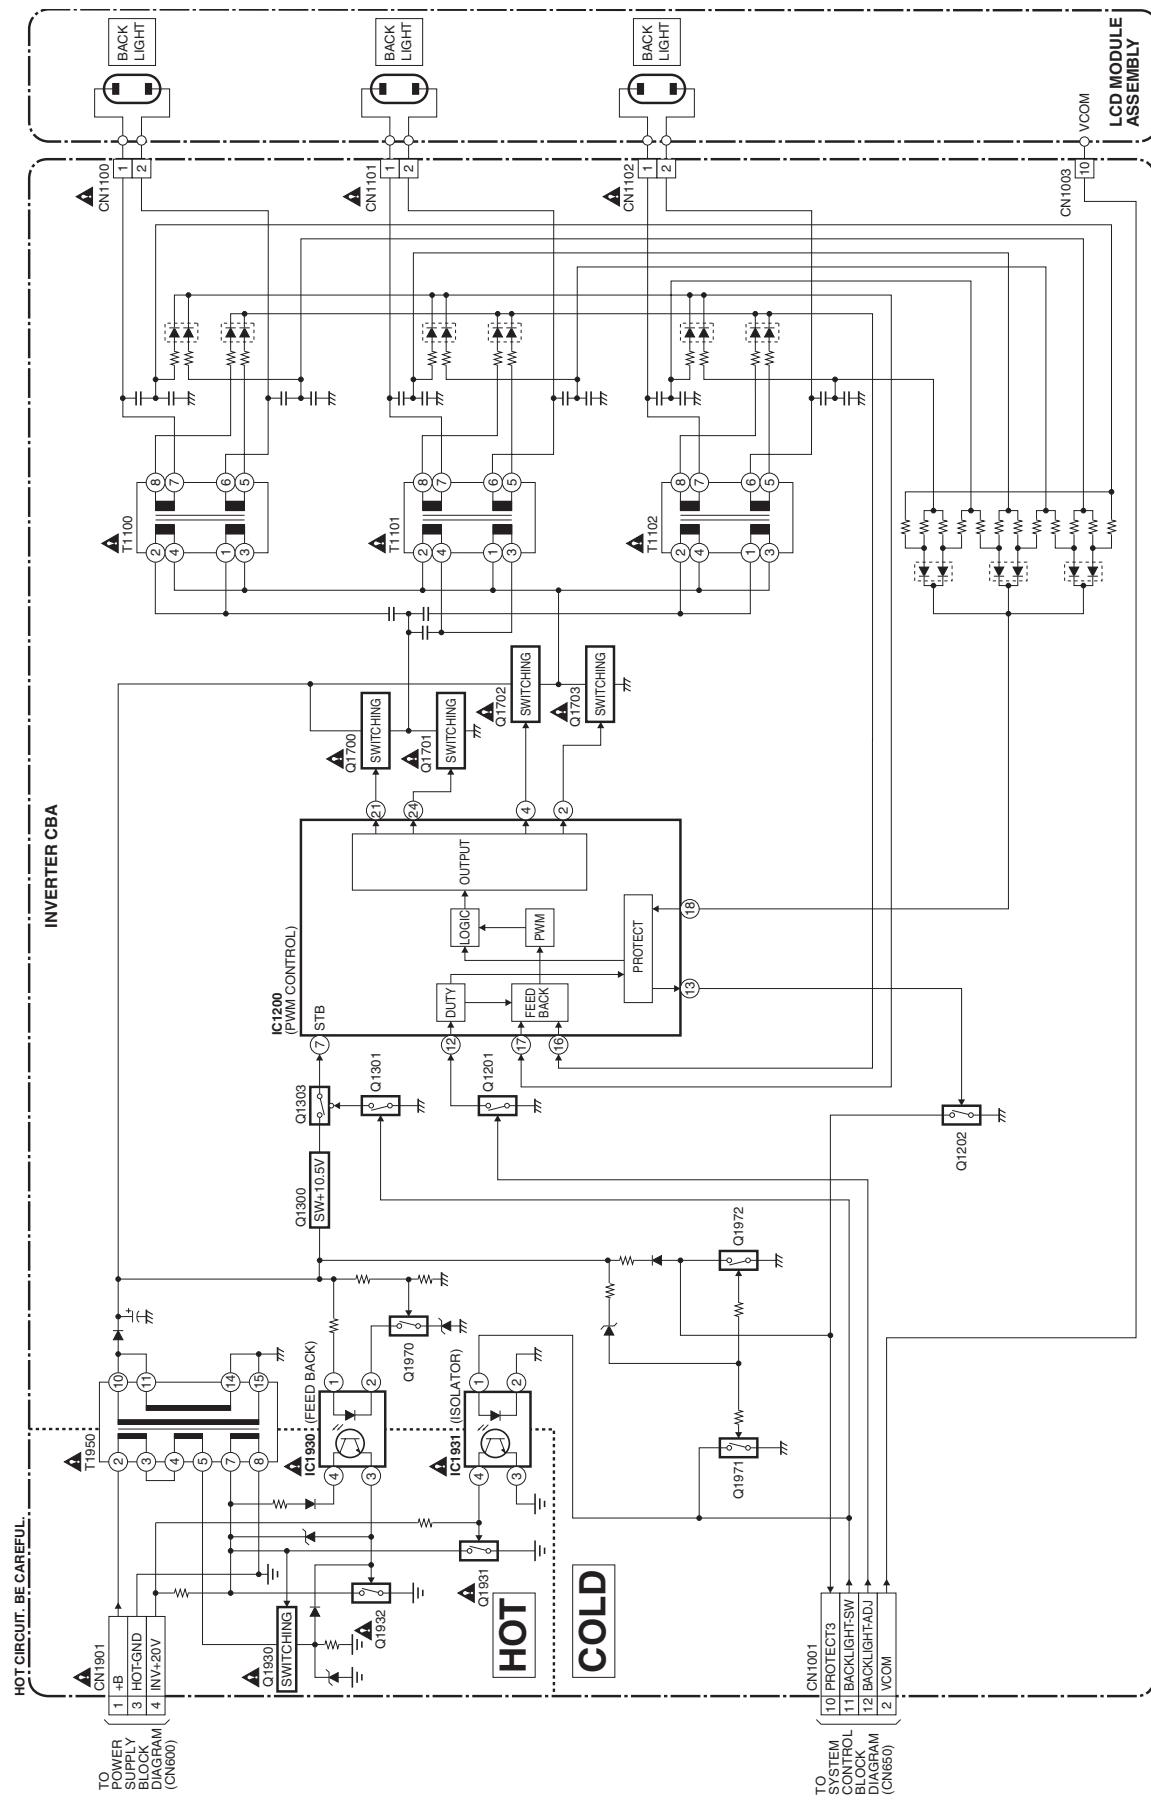


5. Power Supply Block Diagram

CAUTION !
Fixed voltage (or Auto voltage selectable) power supply circuit is used in this unit.
If Main Fuse (F600) is blown , check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply. Otherwise it may cause some components in the power supply circuit to fail.

CAUTION : 4A 125V
For continued protection against risk of fire, replace only with same type 4A, 125V fuse.
ATTENTION : 4A 125V
Utiliser un fusible de recharge de même type de 4A, 125V.

NOTE:
The voltage for parts in hot circuit is measured using hot GND as a common terminal.

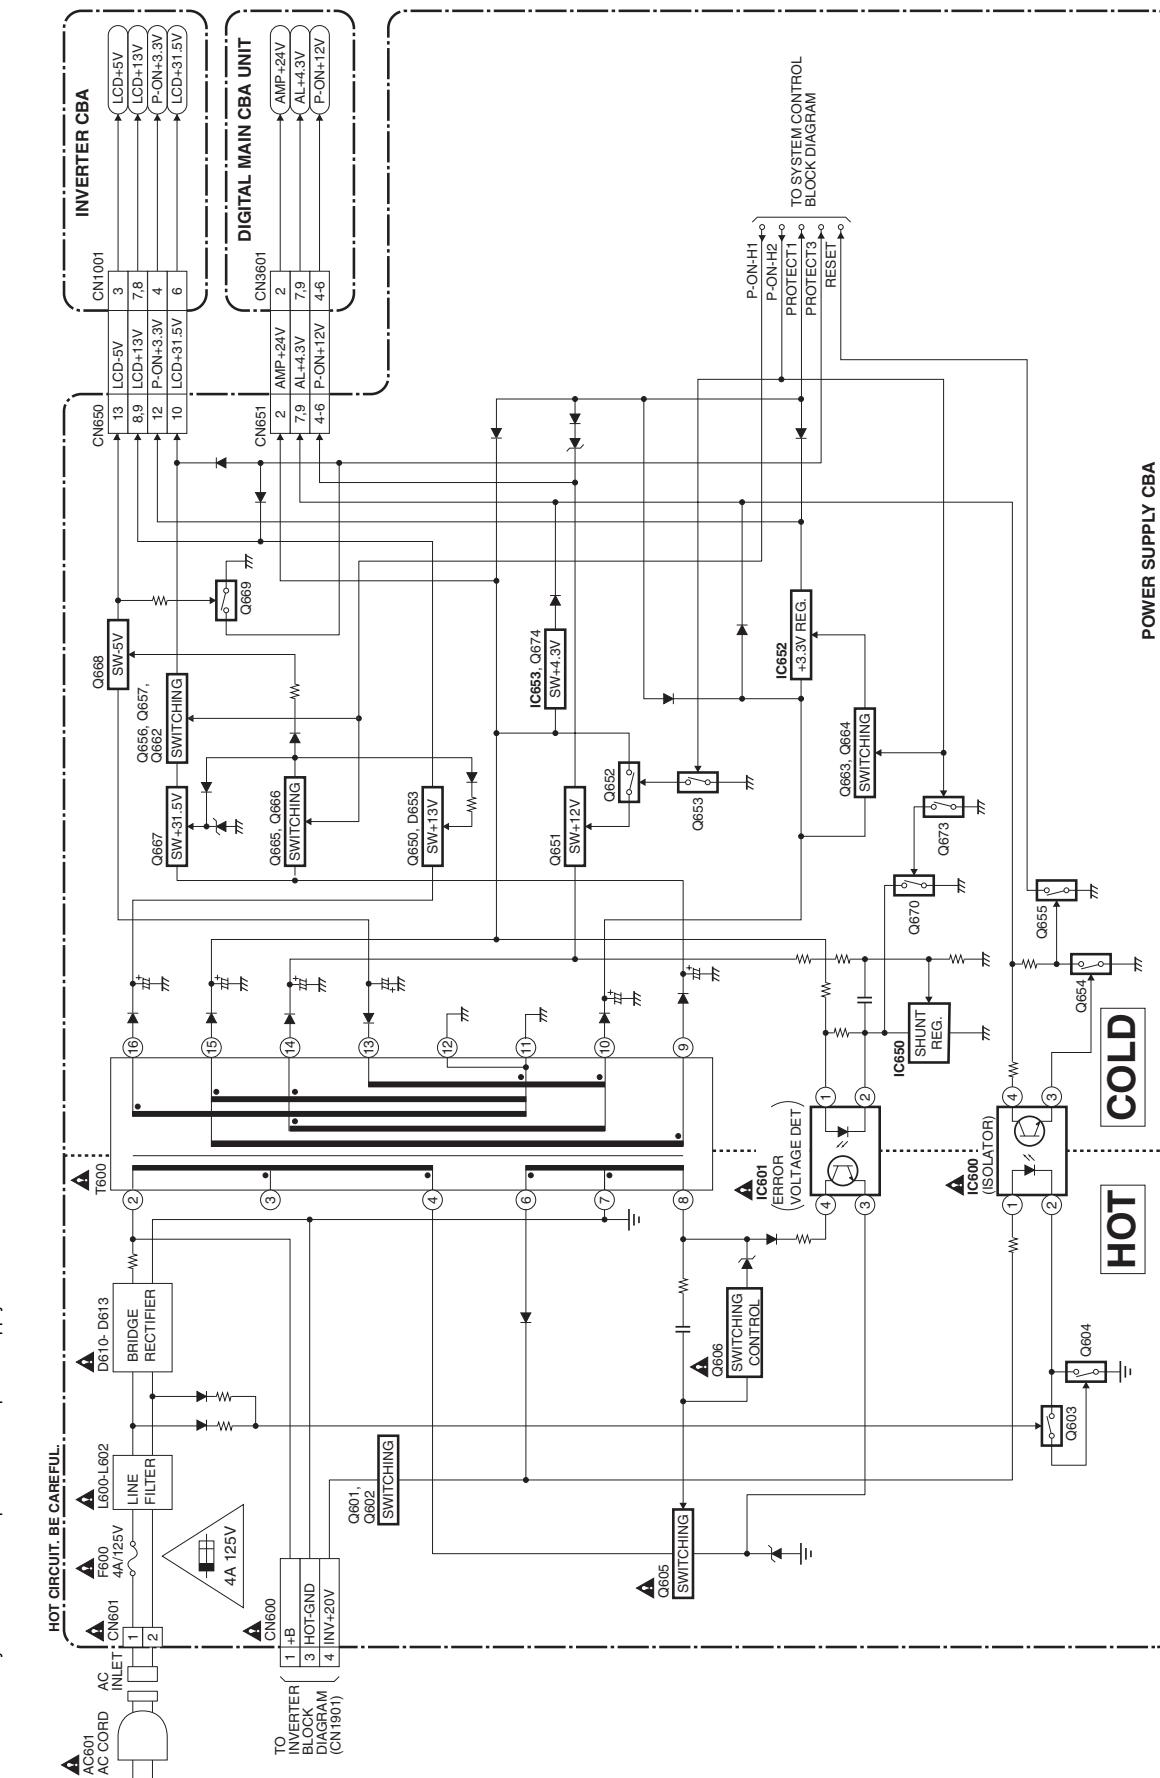

SCHEMATIC DIAGRAMS / CBA AND TEST POINTS

Standard Notes

WARNING

Many electrical and mechanical parts in this chassis have special characteristics. These characteristics often pass unnoticed and the protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts that have these special safety characteristics are identified in this manual and its supplements; electrical components having such features are identified by the mark "▲" in the schematic diagram and the parts list. Before replacing any of these components, read the parts list in this manual carefully. The use of substitute replacement parts that do not have the same safety characteristics as specified in the parts list may create shock, fire, or other hazards.

Notes:

1. Do not use the part number shown on these drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since these drawings were prepared.
2. All resistance values are indicated in ohms ($K = 10^3$, $M = 10^6$).
3. Resistor wattages are 1/4W or 1/6W unless otherwise specified.
4. All capacitance values are indicated in μF ($P = 10^{-6} \mu F$).
5. All voltages are DC voltages unless otherwise specified.

LIST OF CAUTION, NOTES, AND SYMBOLS USED IN THE SCHEMATIC DIAGRAMS ON THE FOLLOWING PAGES:

1. CAUTION:

CAUTION: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE_A,_V FUSE.

ATTENTION: UTILISER UN FUSIBLE DE RECHANGE DE MÊME TYPE DE_A,_V.

2. CAUTION:

Fixed Voltage (or Auto voltage selectable) power supply circuit is used in this unit.


If Main Fuse (F600) is blown, first check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply. Otherwise it may cause some components in the power supply circuit to fail.

3. Note:

1. Do not use the part number shown on the drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since the drawings were prepared.
2. To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list section of the service manual.

4. Voltage indications on the schematics are as shown below:

Plug the TV power cord into a standard AC outlet.:.

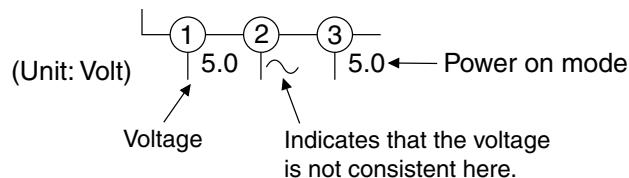


5. How to read converged lines

1-D3
↑
Distinction Area
Line Number
(1 to 3 digits)

Examples:

1. "1-D3" means that line number "1" goes to the line number "1" of the area "D3".
2. "1-B1" means that line number "1" goes to the line number "1" of the area "B1".

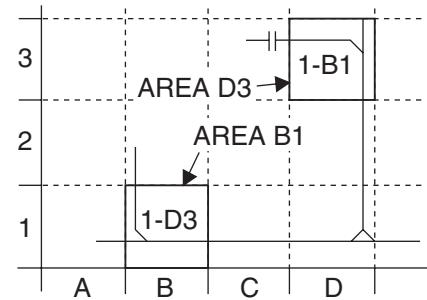

6. Test Point Information

○ : Indicates a test point with a jumper wire across a hole in the PCB.

□→ : Used to indicate a test point with a component lead on foil side.

○ : Used to indicate a test point with no test pin.


● : Used to indicate a test point with a test pin.

The reference number of parts on Schematic Diagrams/CBA can be retrieved by application search function.

Power Supply 1 Schematic Diagram

CAUTION !

Fixed voltage (or Auto voltage selectable) power supply circuit is used in this unit. If Main Fuse (F600) is blown, check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply. Otherwise it may cause some components in the power supply circuit to fail.

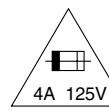


CAUTION ! : For continued protection against risk of fire, replace only with same type 4A, 125V fuse.


ATTENTION : Utiliser un fusible de rechange de même type de 4A, 125V.

NOTE:

The voltage for parts in hot circuit is measured using hot GND as a common terminal.

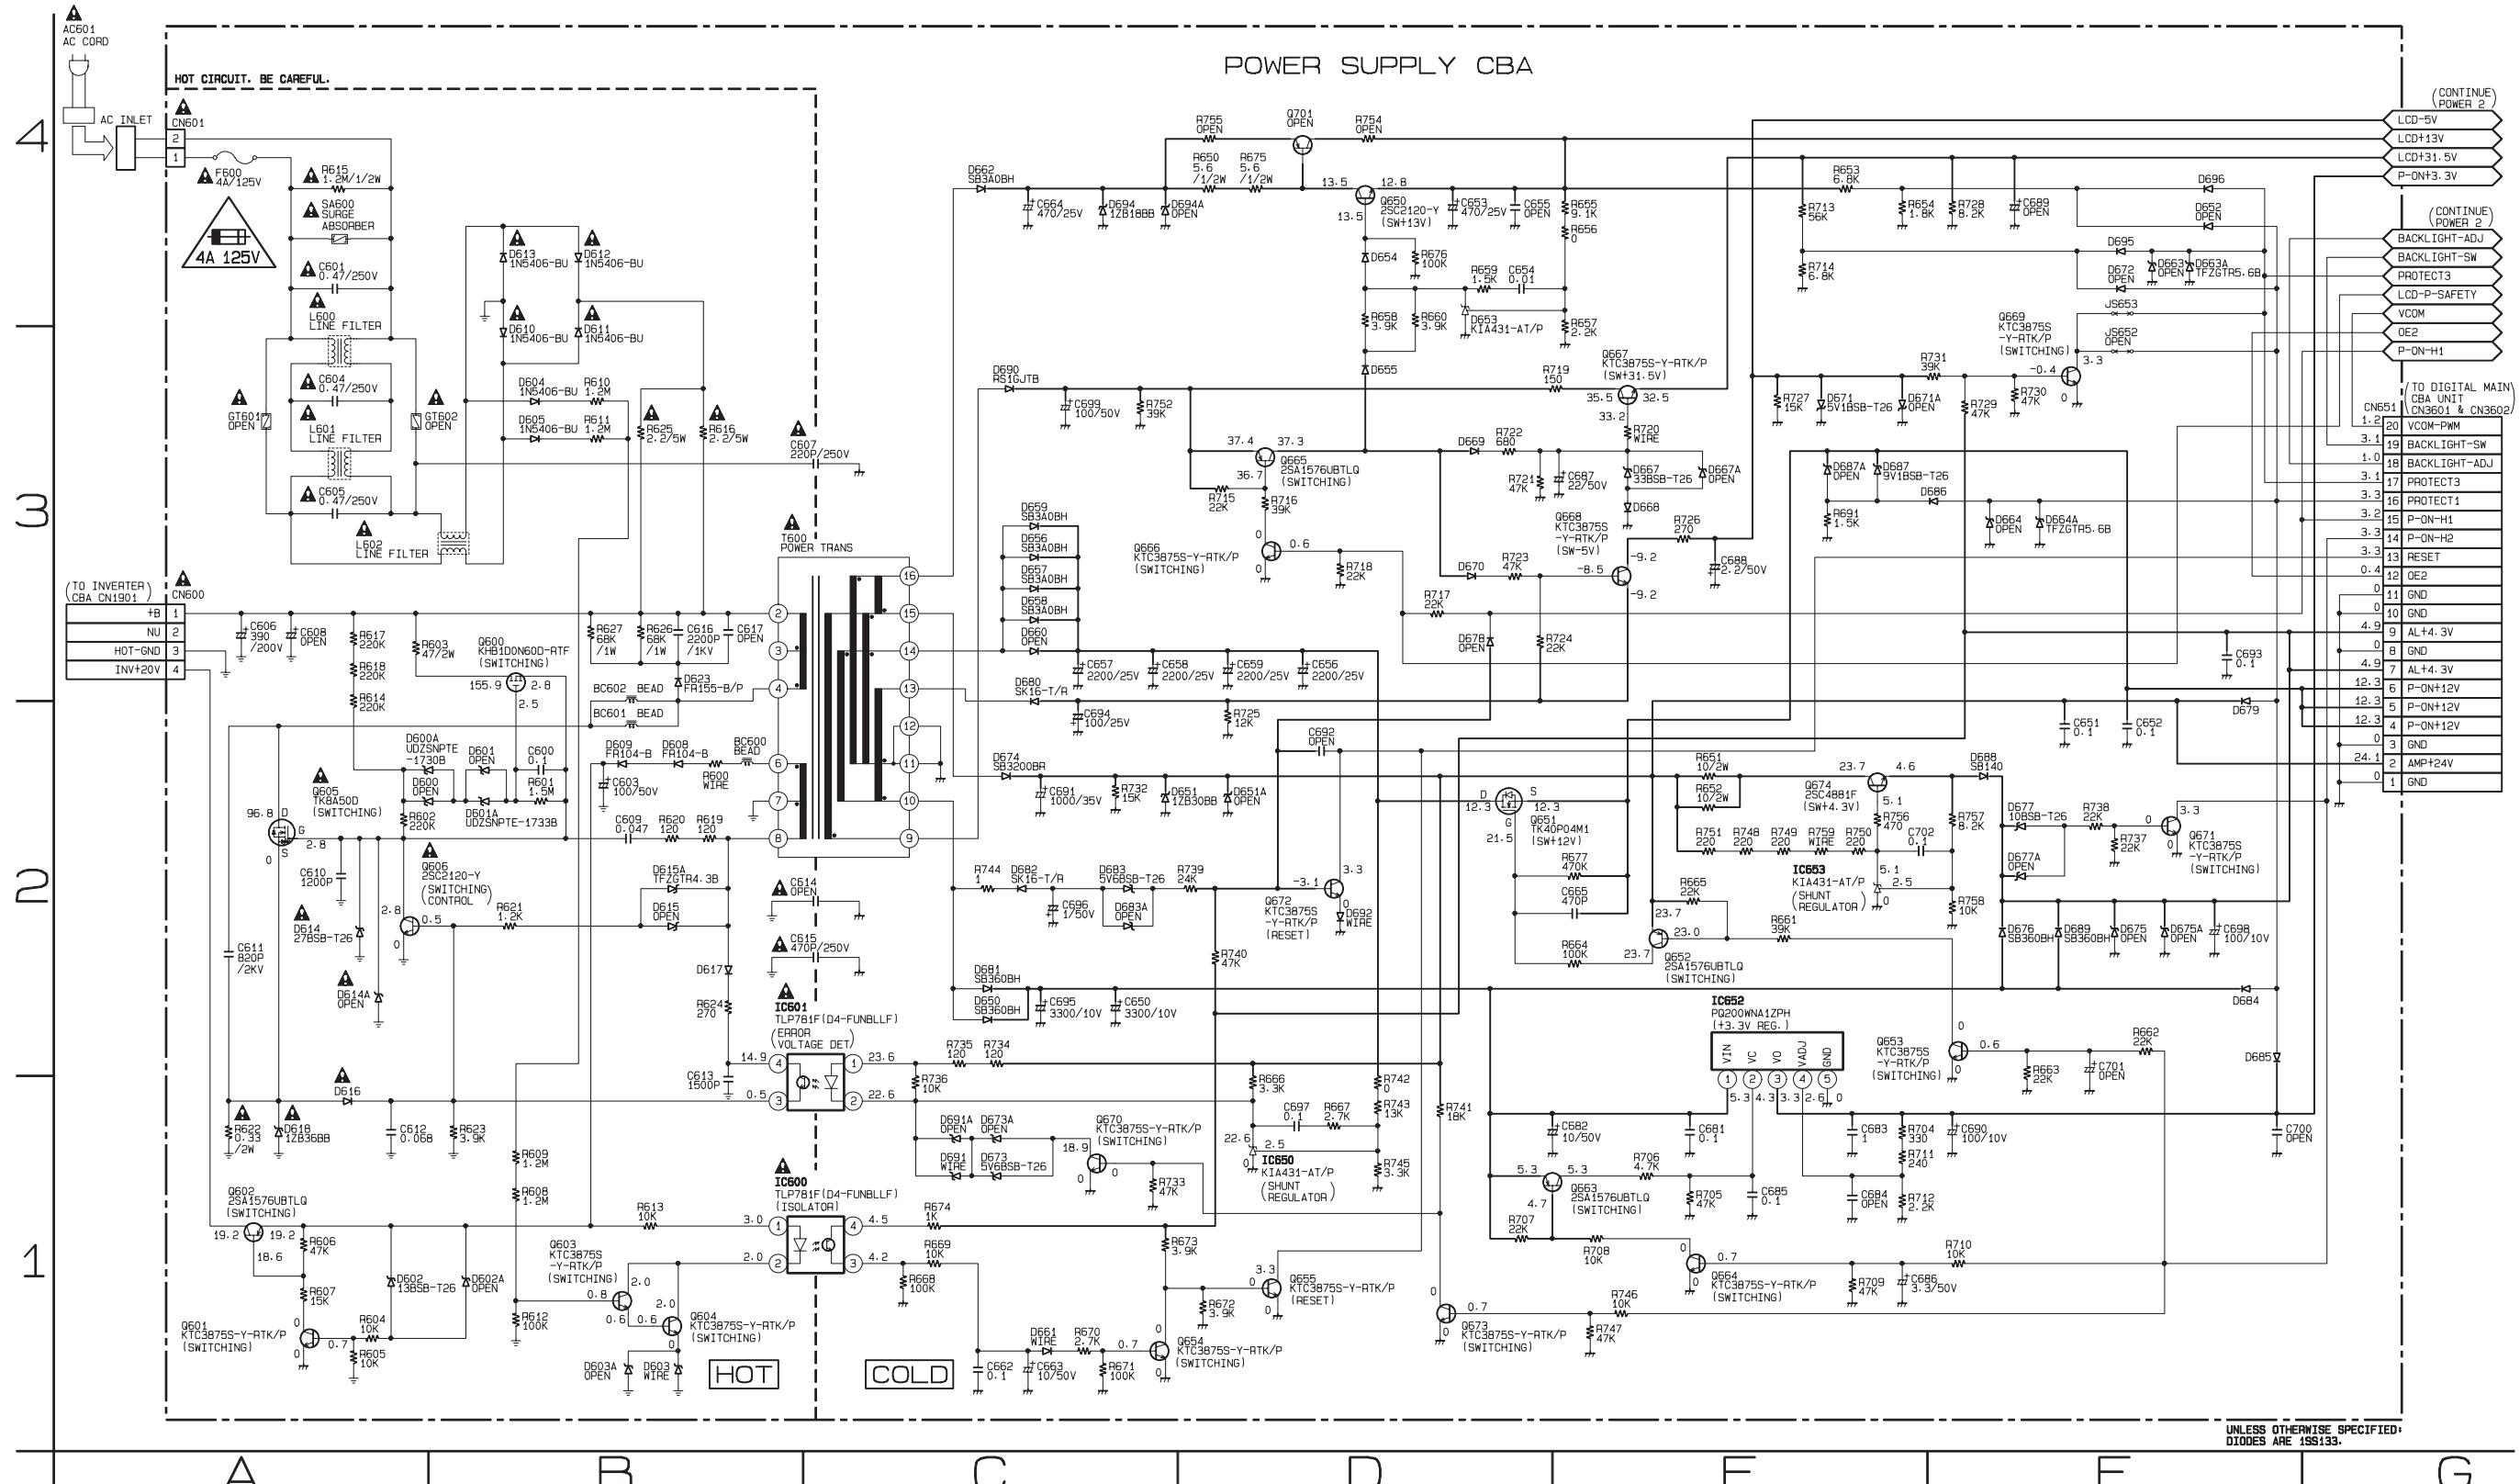

Power Supply 2 Schematic Diagram

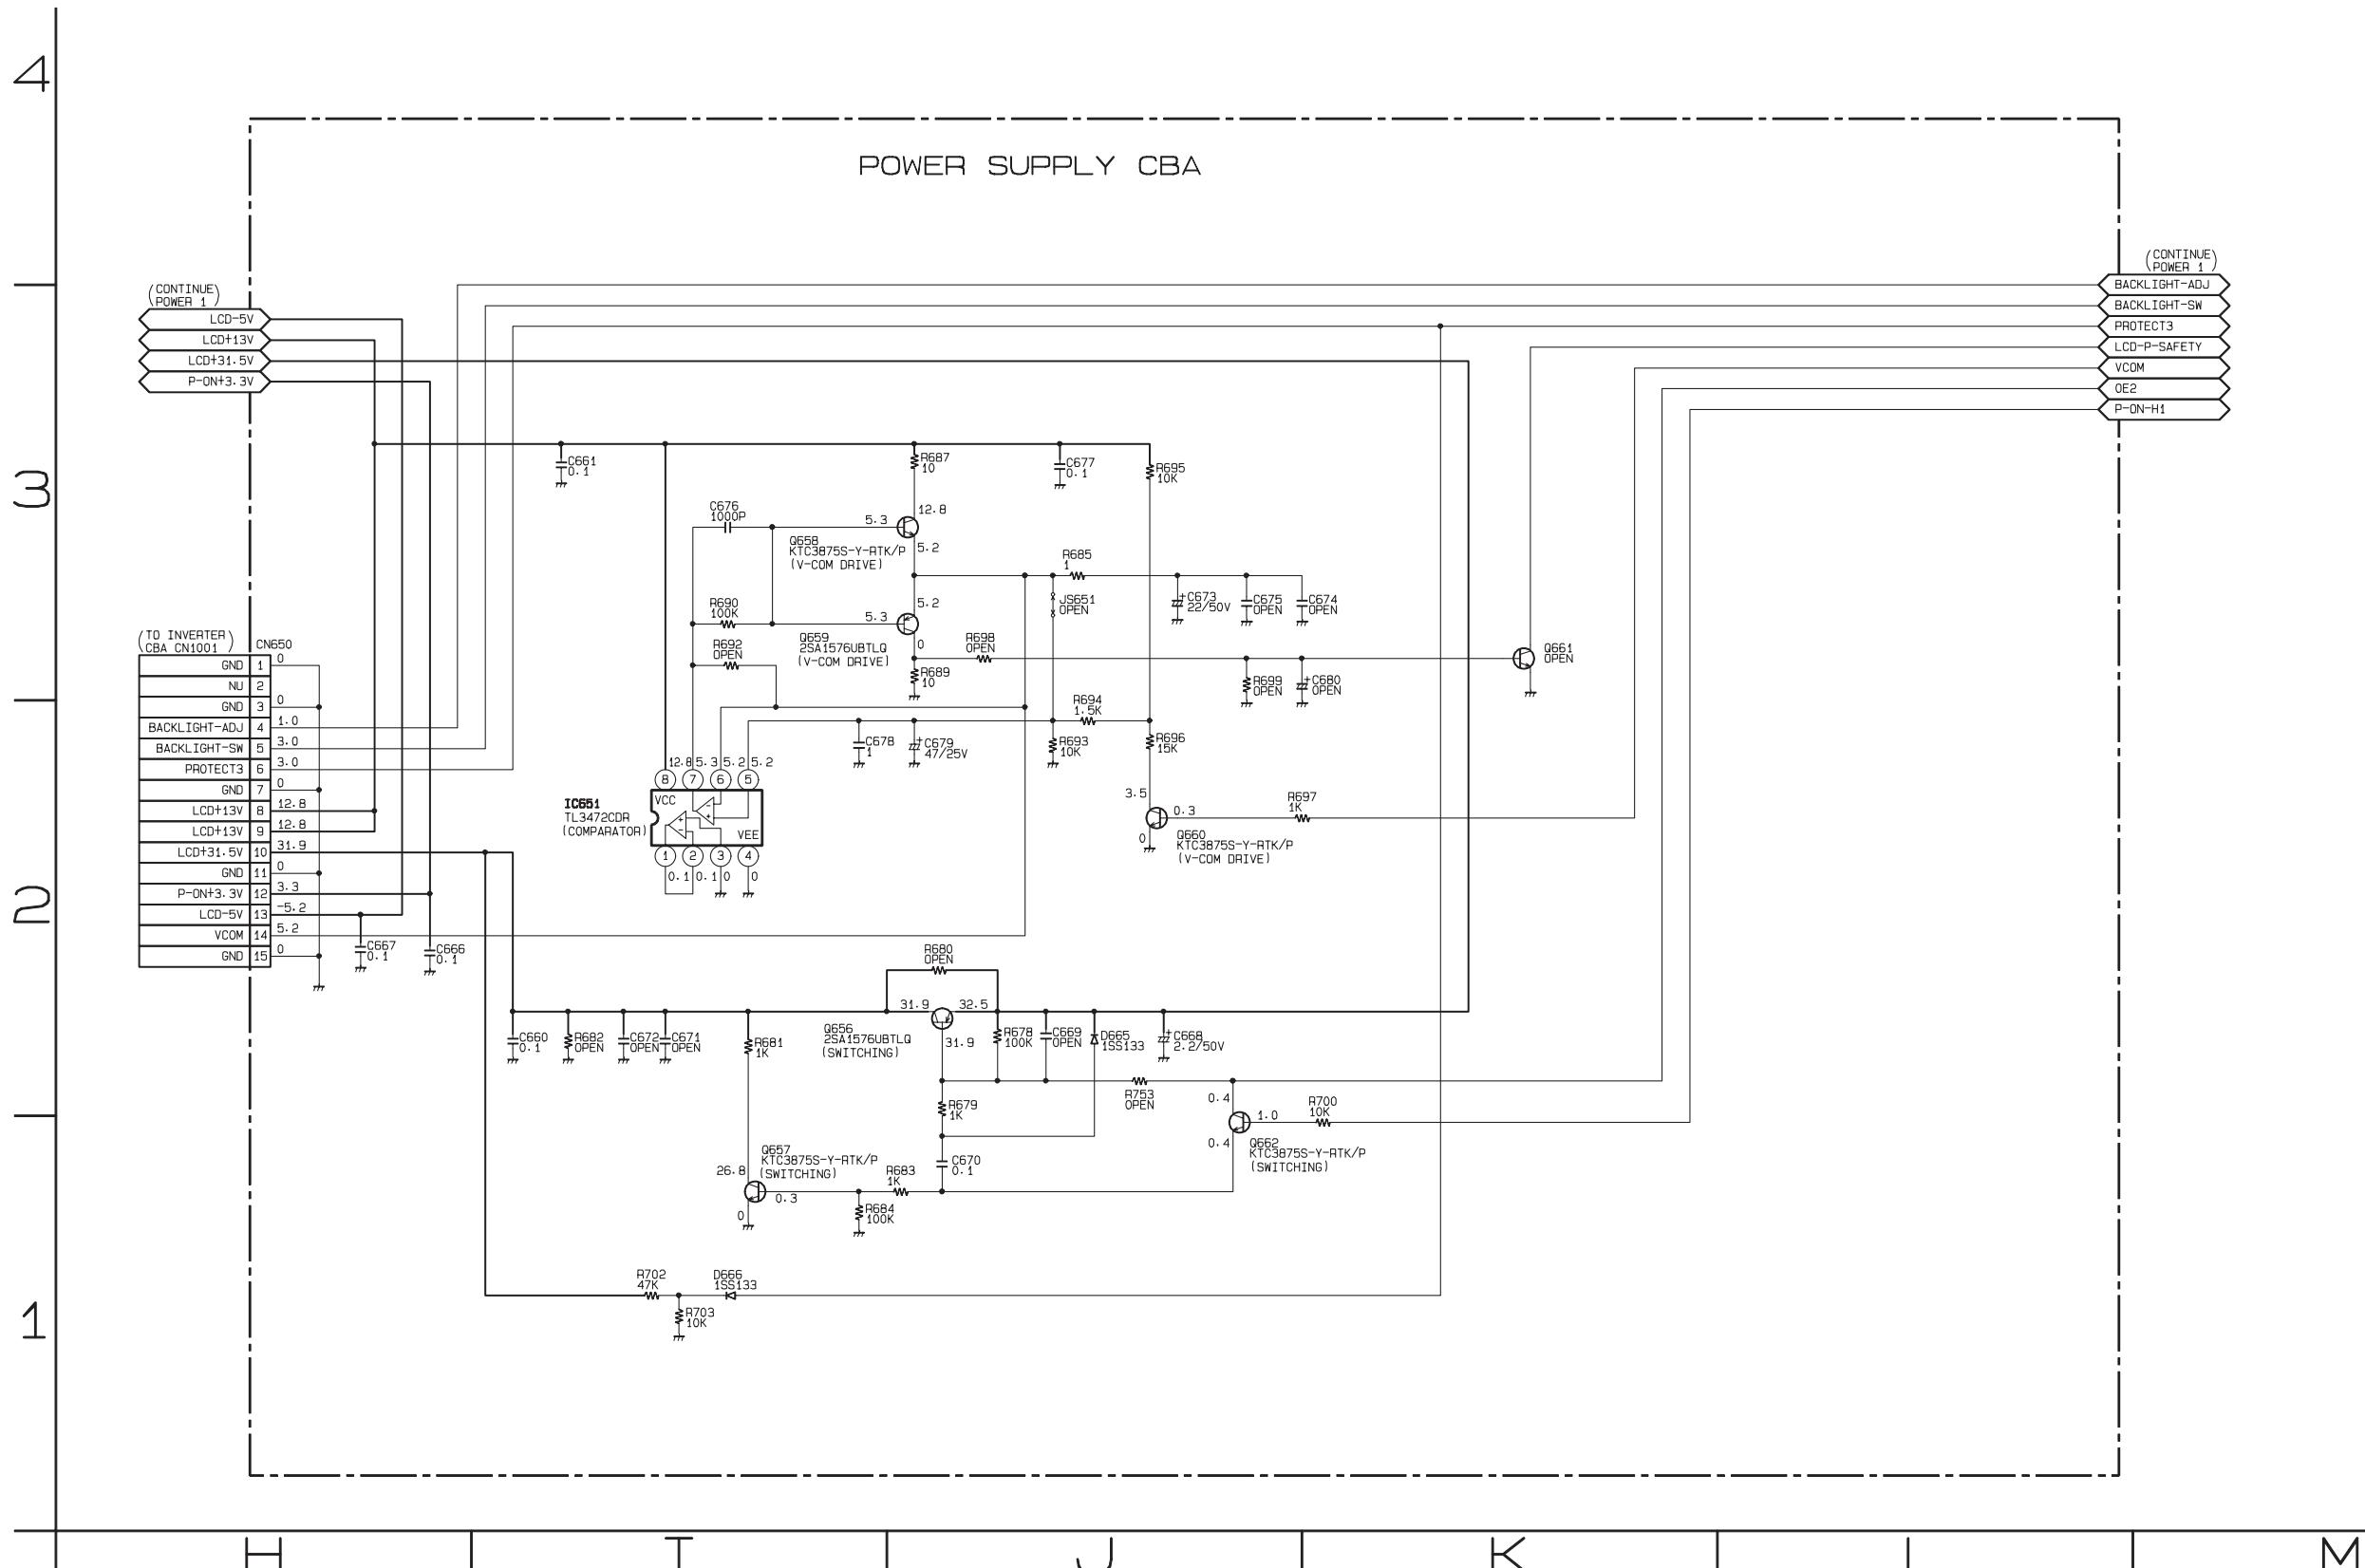

Inverter Schematic Diagram (main Inverter CBA)


NOTE:

The voltage for parts in hot circuit is measured using hot GND as a common terminal.

When you conduct on a component level repair for the Inverter CBA for any models within this service manual, make sure to refer the right Block Diagrams, Schematic Diagrams/CBA and Parts List.

For the main CBA, the last digit of the board number, which is engraved on every board, should be a number(e.g. BA17F4F0103 2).

For the sub CBA, the last digit of the board number, which is engraved on every board, should be an alphabet(e.g. BA17F4F0103 Z).

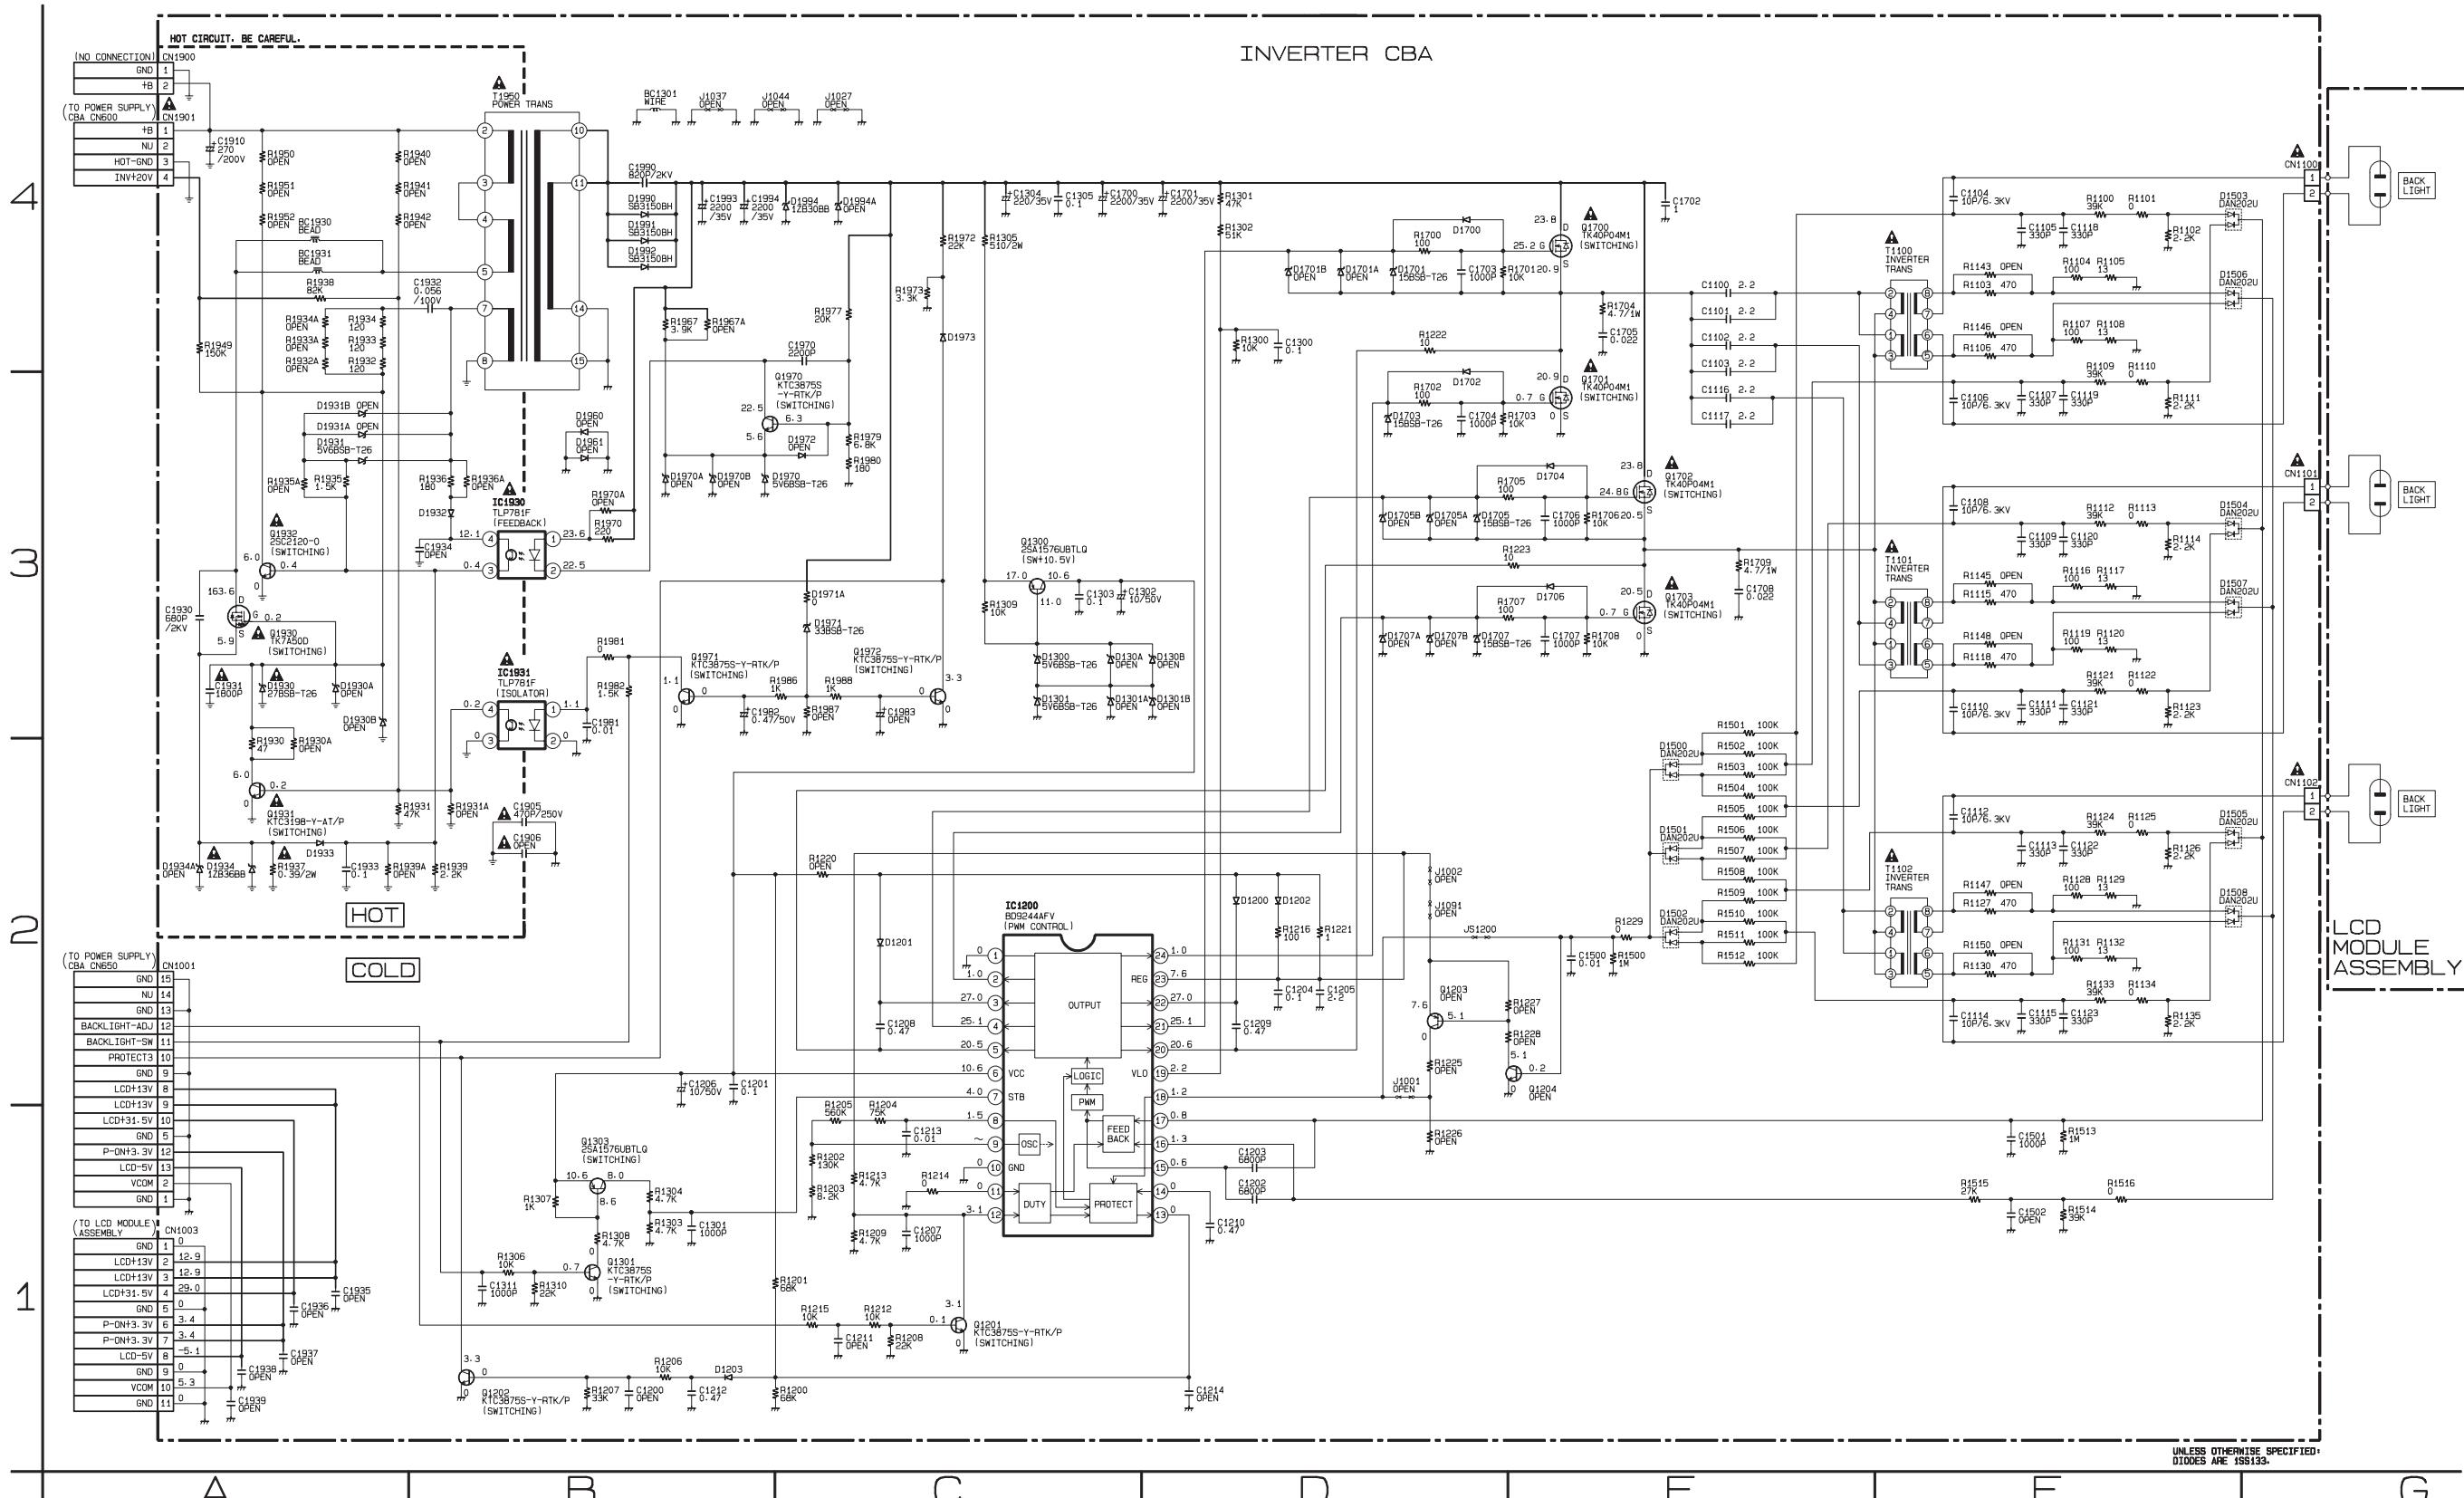

Inverter Schematic Diagram (sub Inverter CBA)


NOTE:

The voltage for parts in hot circuit is measured using hot GND as a common terminal.


When you conduct on a component level repair for the Inverter CBA for any models within this service manual, make sure to refer the right Block Diagrams, Schematic Diagrams/CBA and Parts List.

For the main CBA, the last digit of the board number, which is engraved on every board, should be a number(e.g. BA17F4F0103 2).


For the sub CBA, the last digit of the board number, which is engraved on every board, should be an alphabet(e.g. BA17F4F0103 Z).

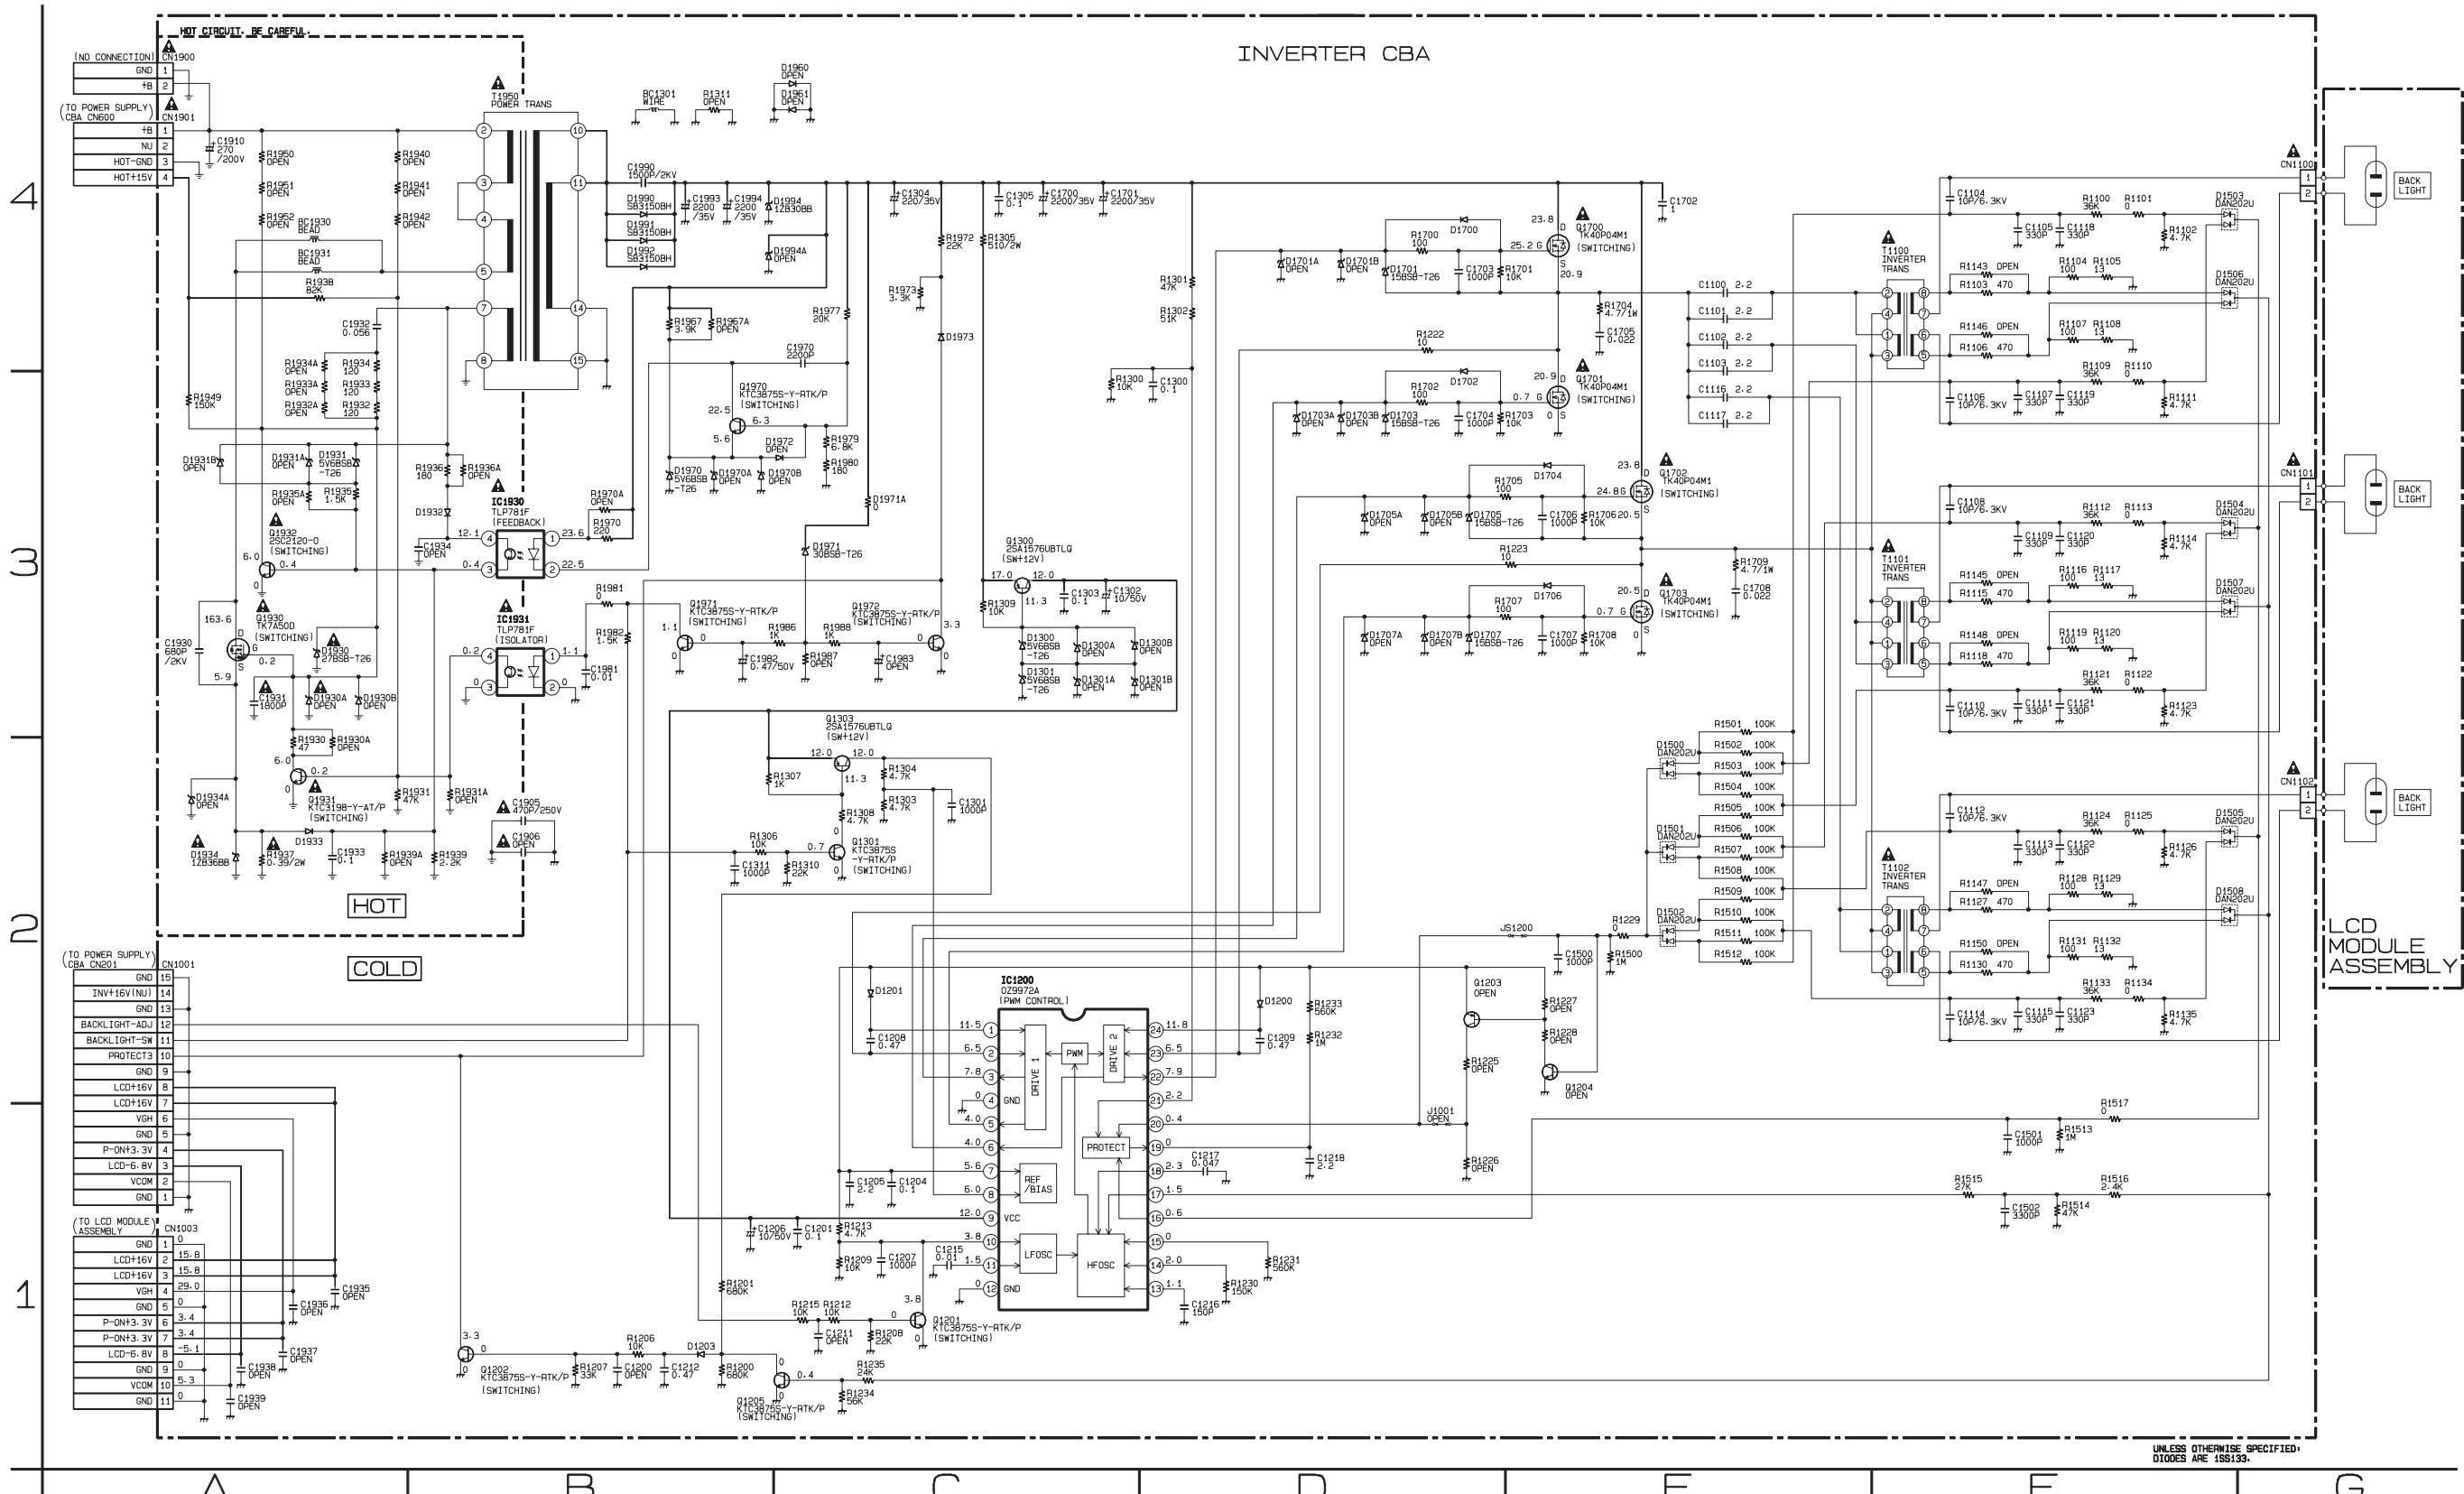

Function Schematic Diagram

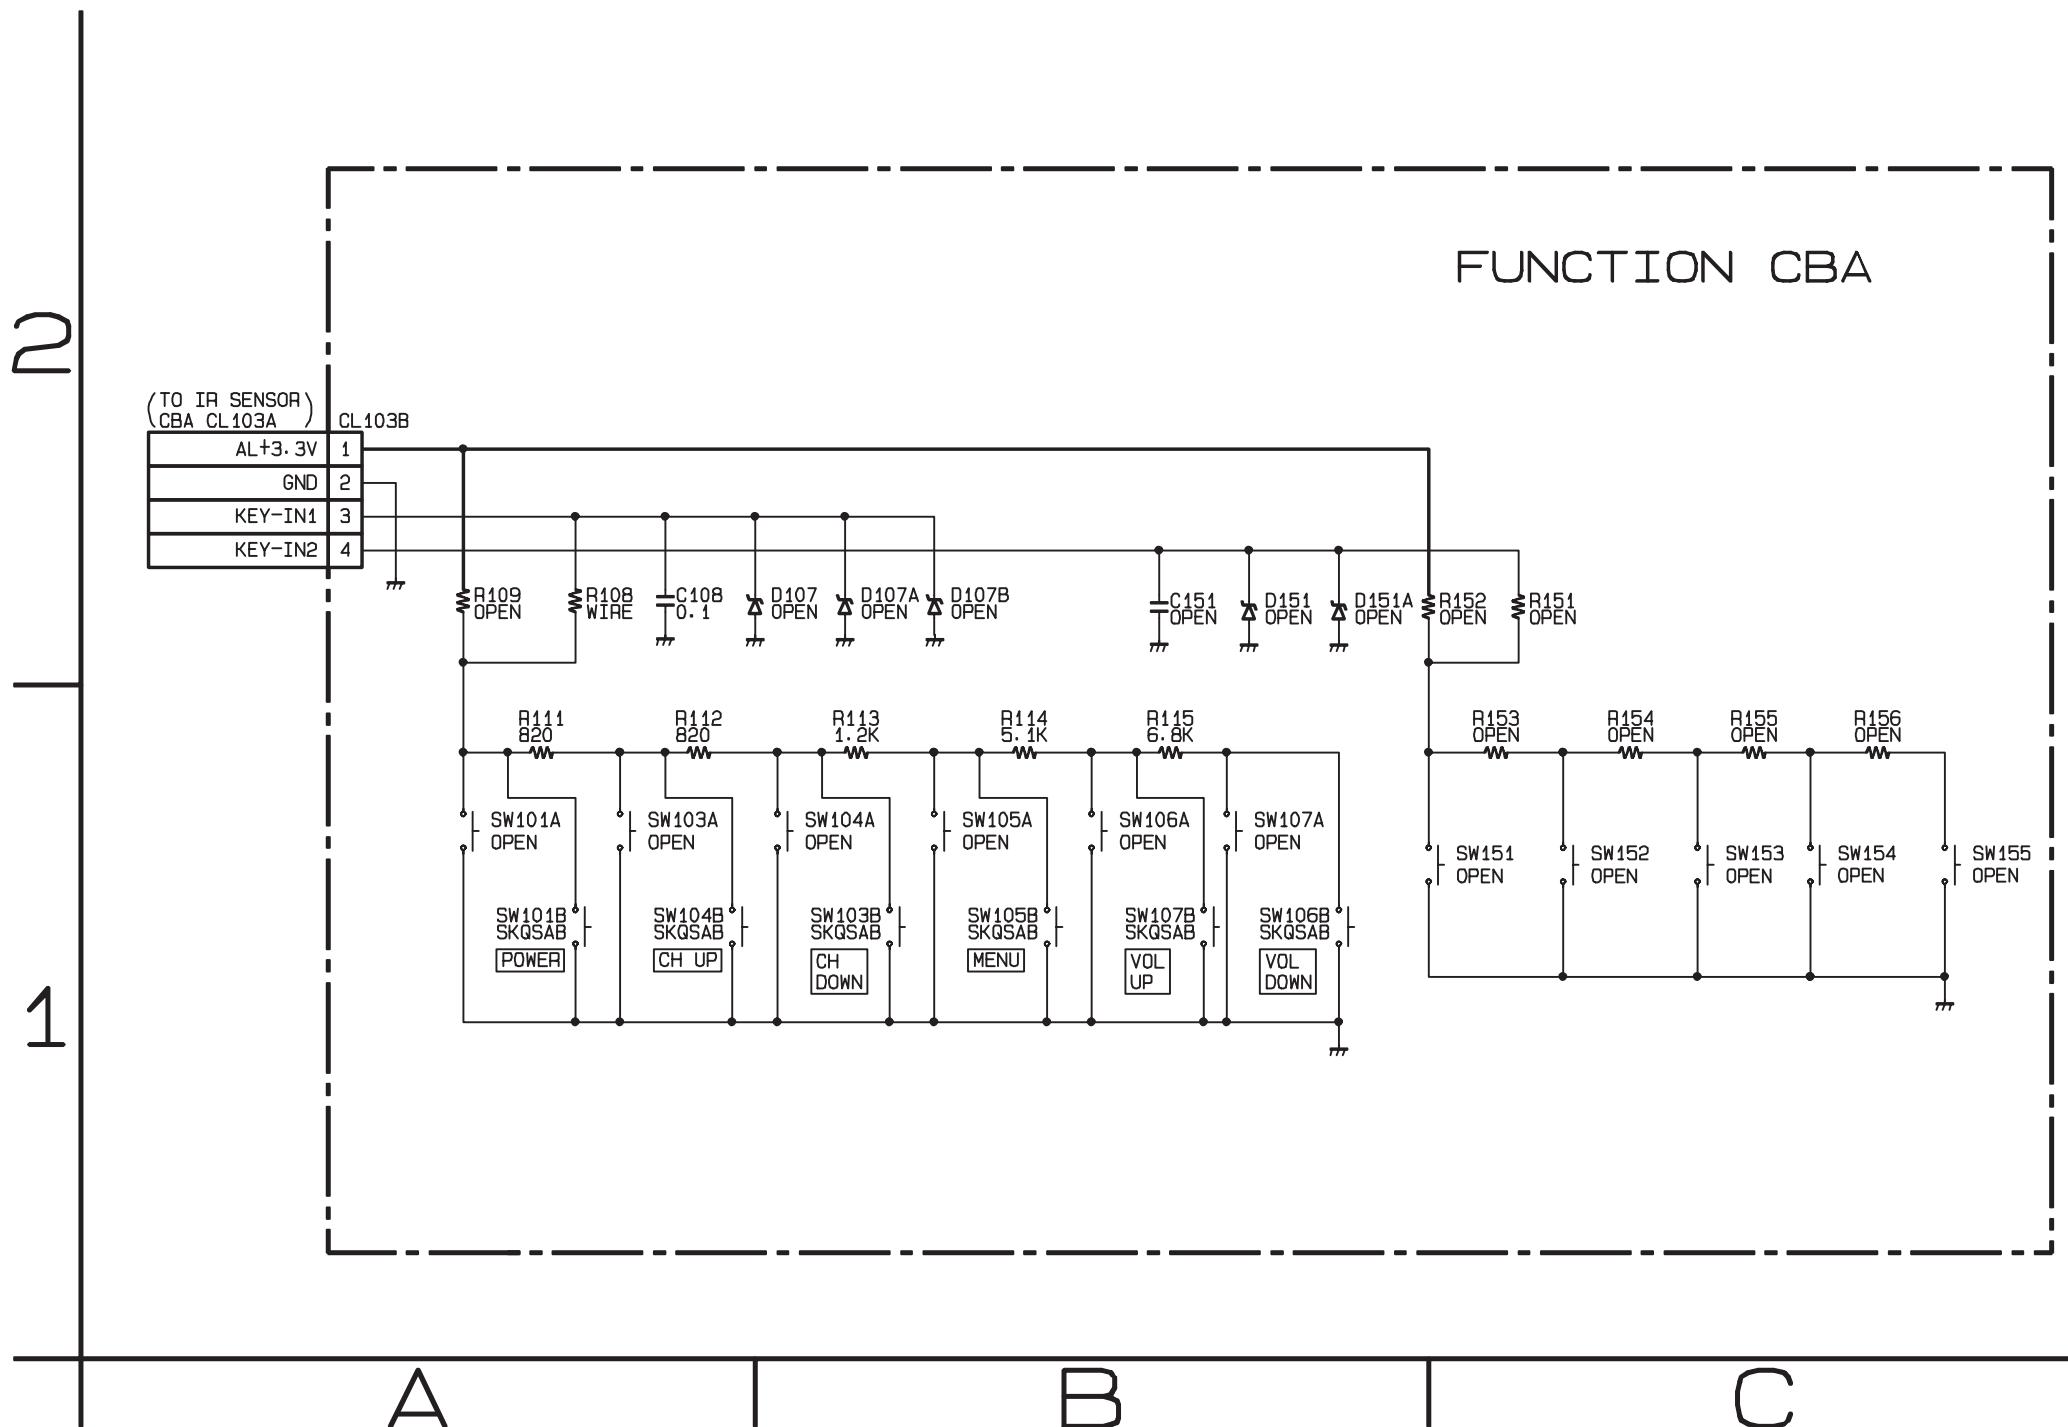

IR Sensor Schematic Diagram

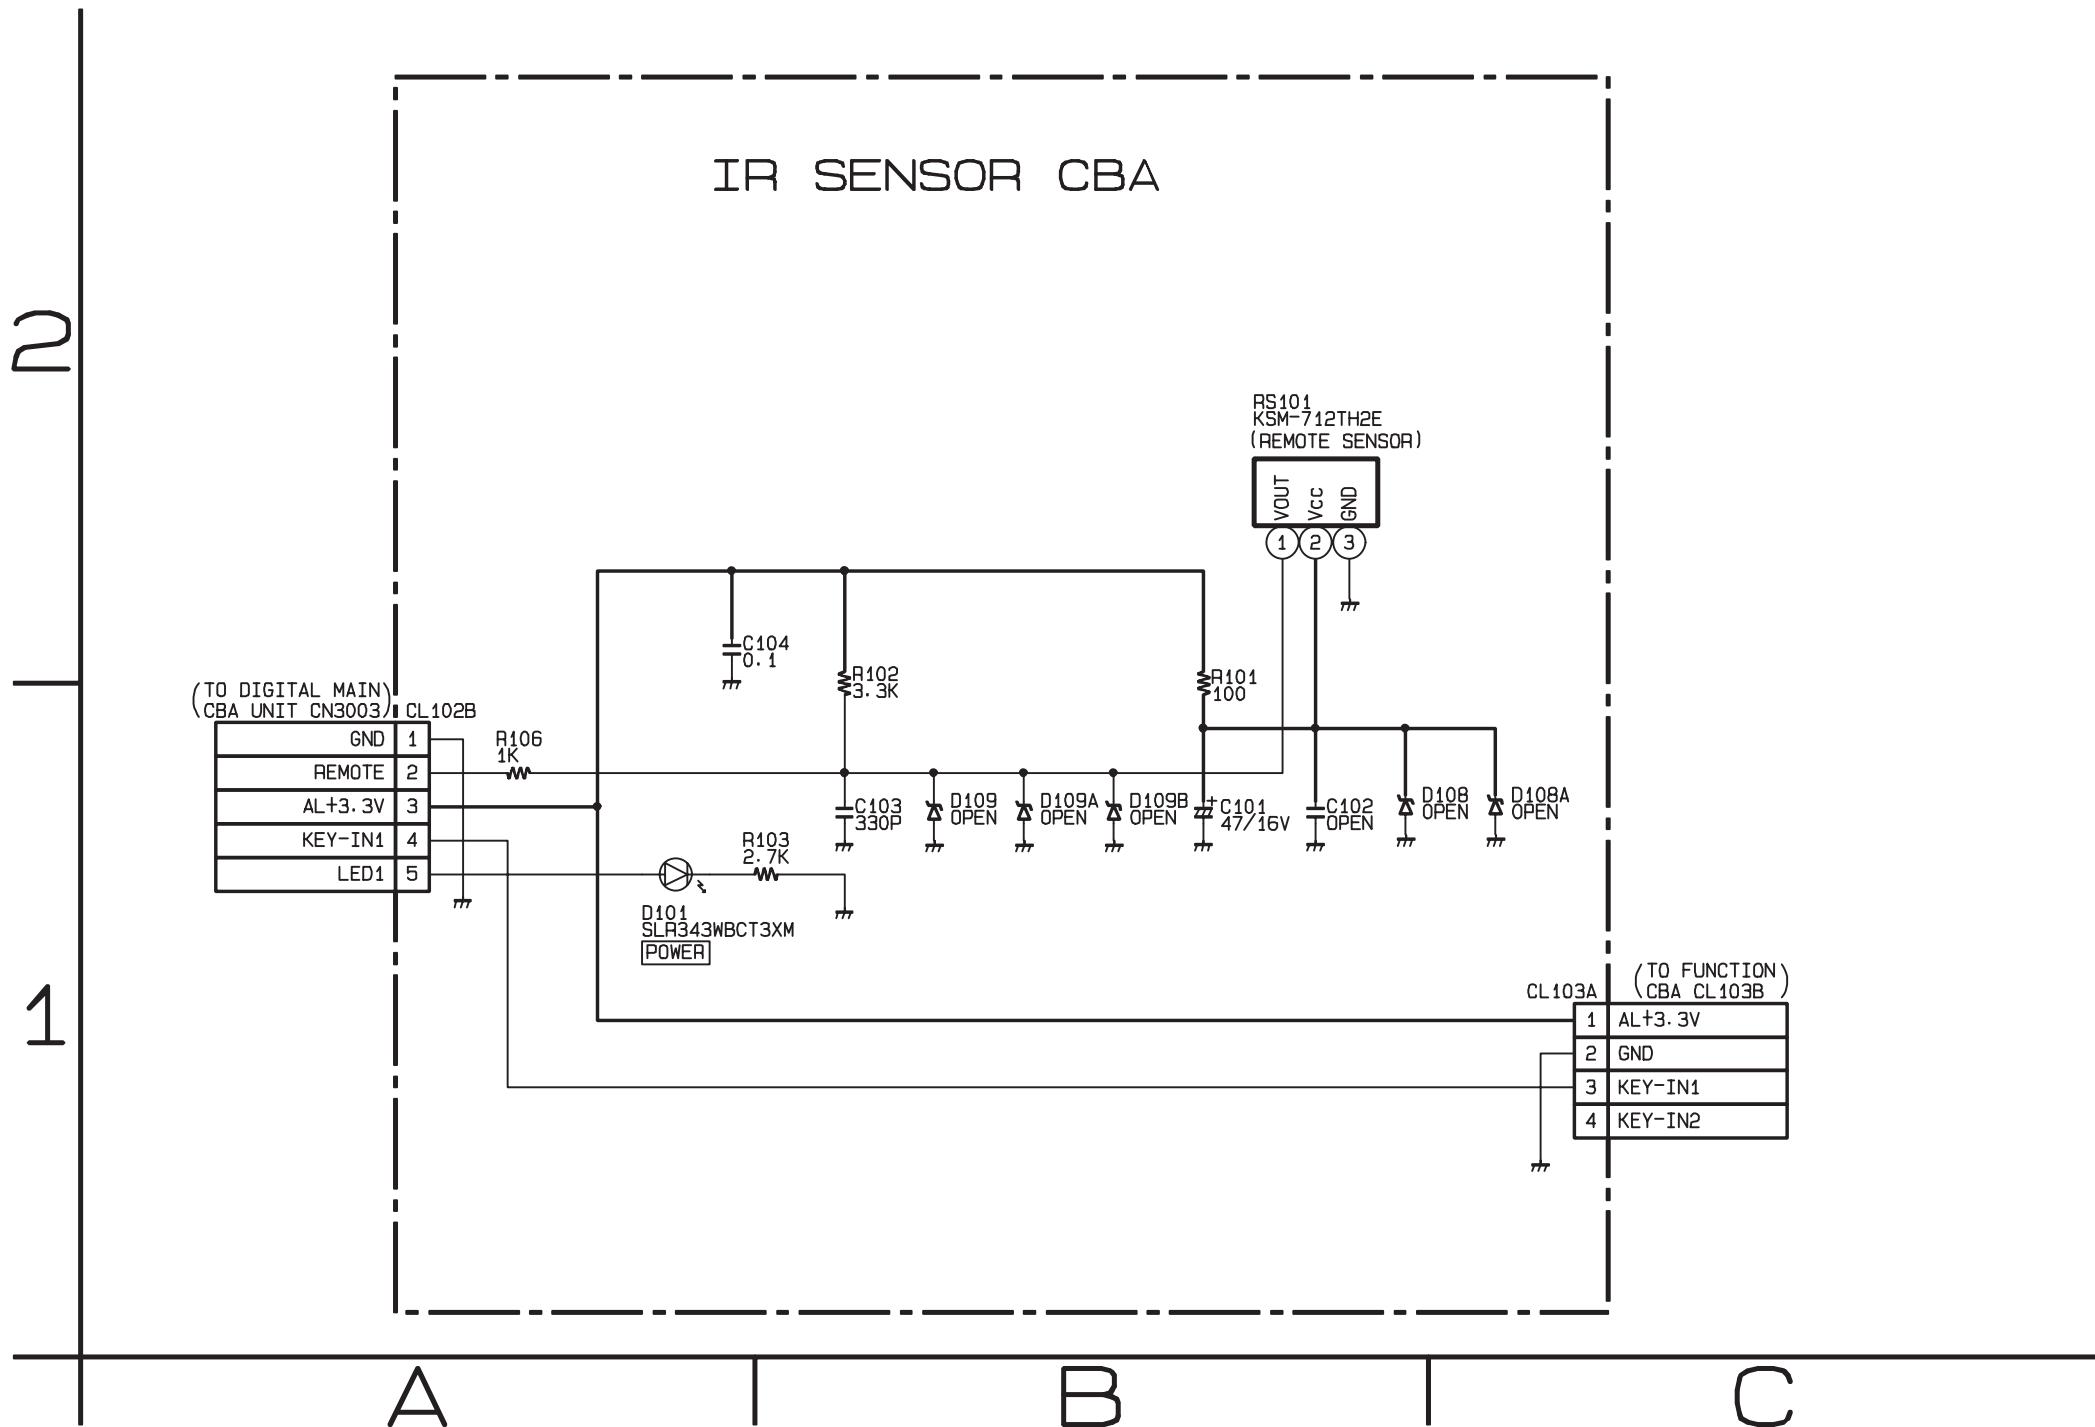


Digital Main 1 Schematic Diagram

*1 NOTE:

The order of pins shown in this diagram is different from that of actual IC3003.


IC3003 is divided into five and shown as IC3003 (1/5) ~ IC3003 (5/5) in this Digital Main Schematic Diagram Section.

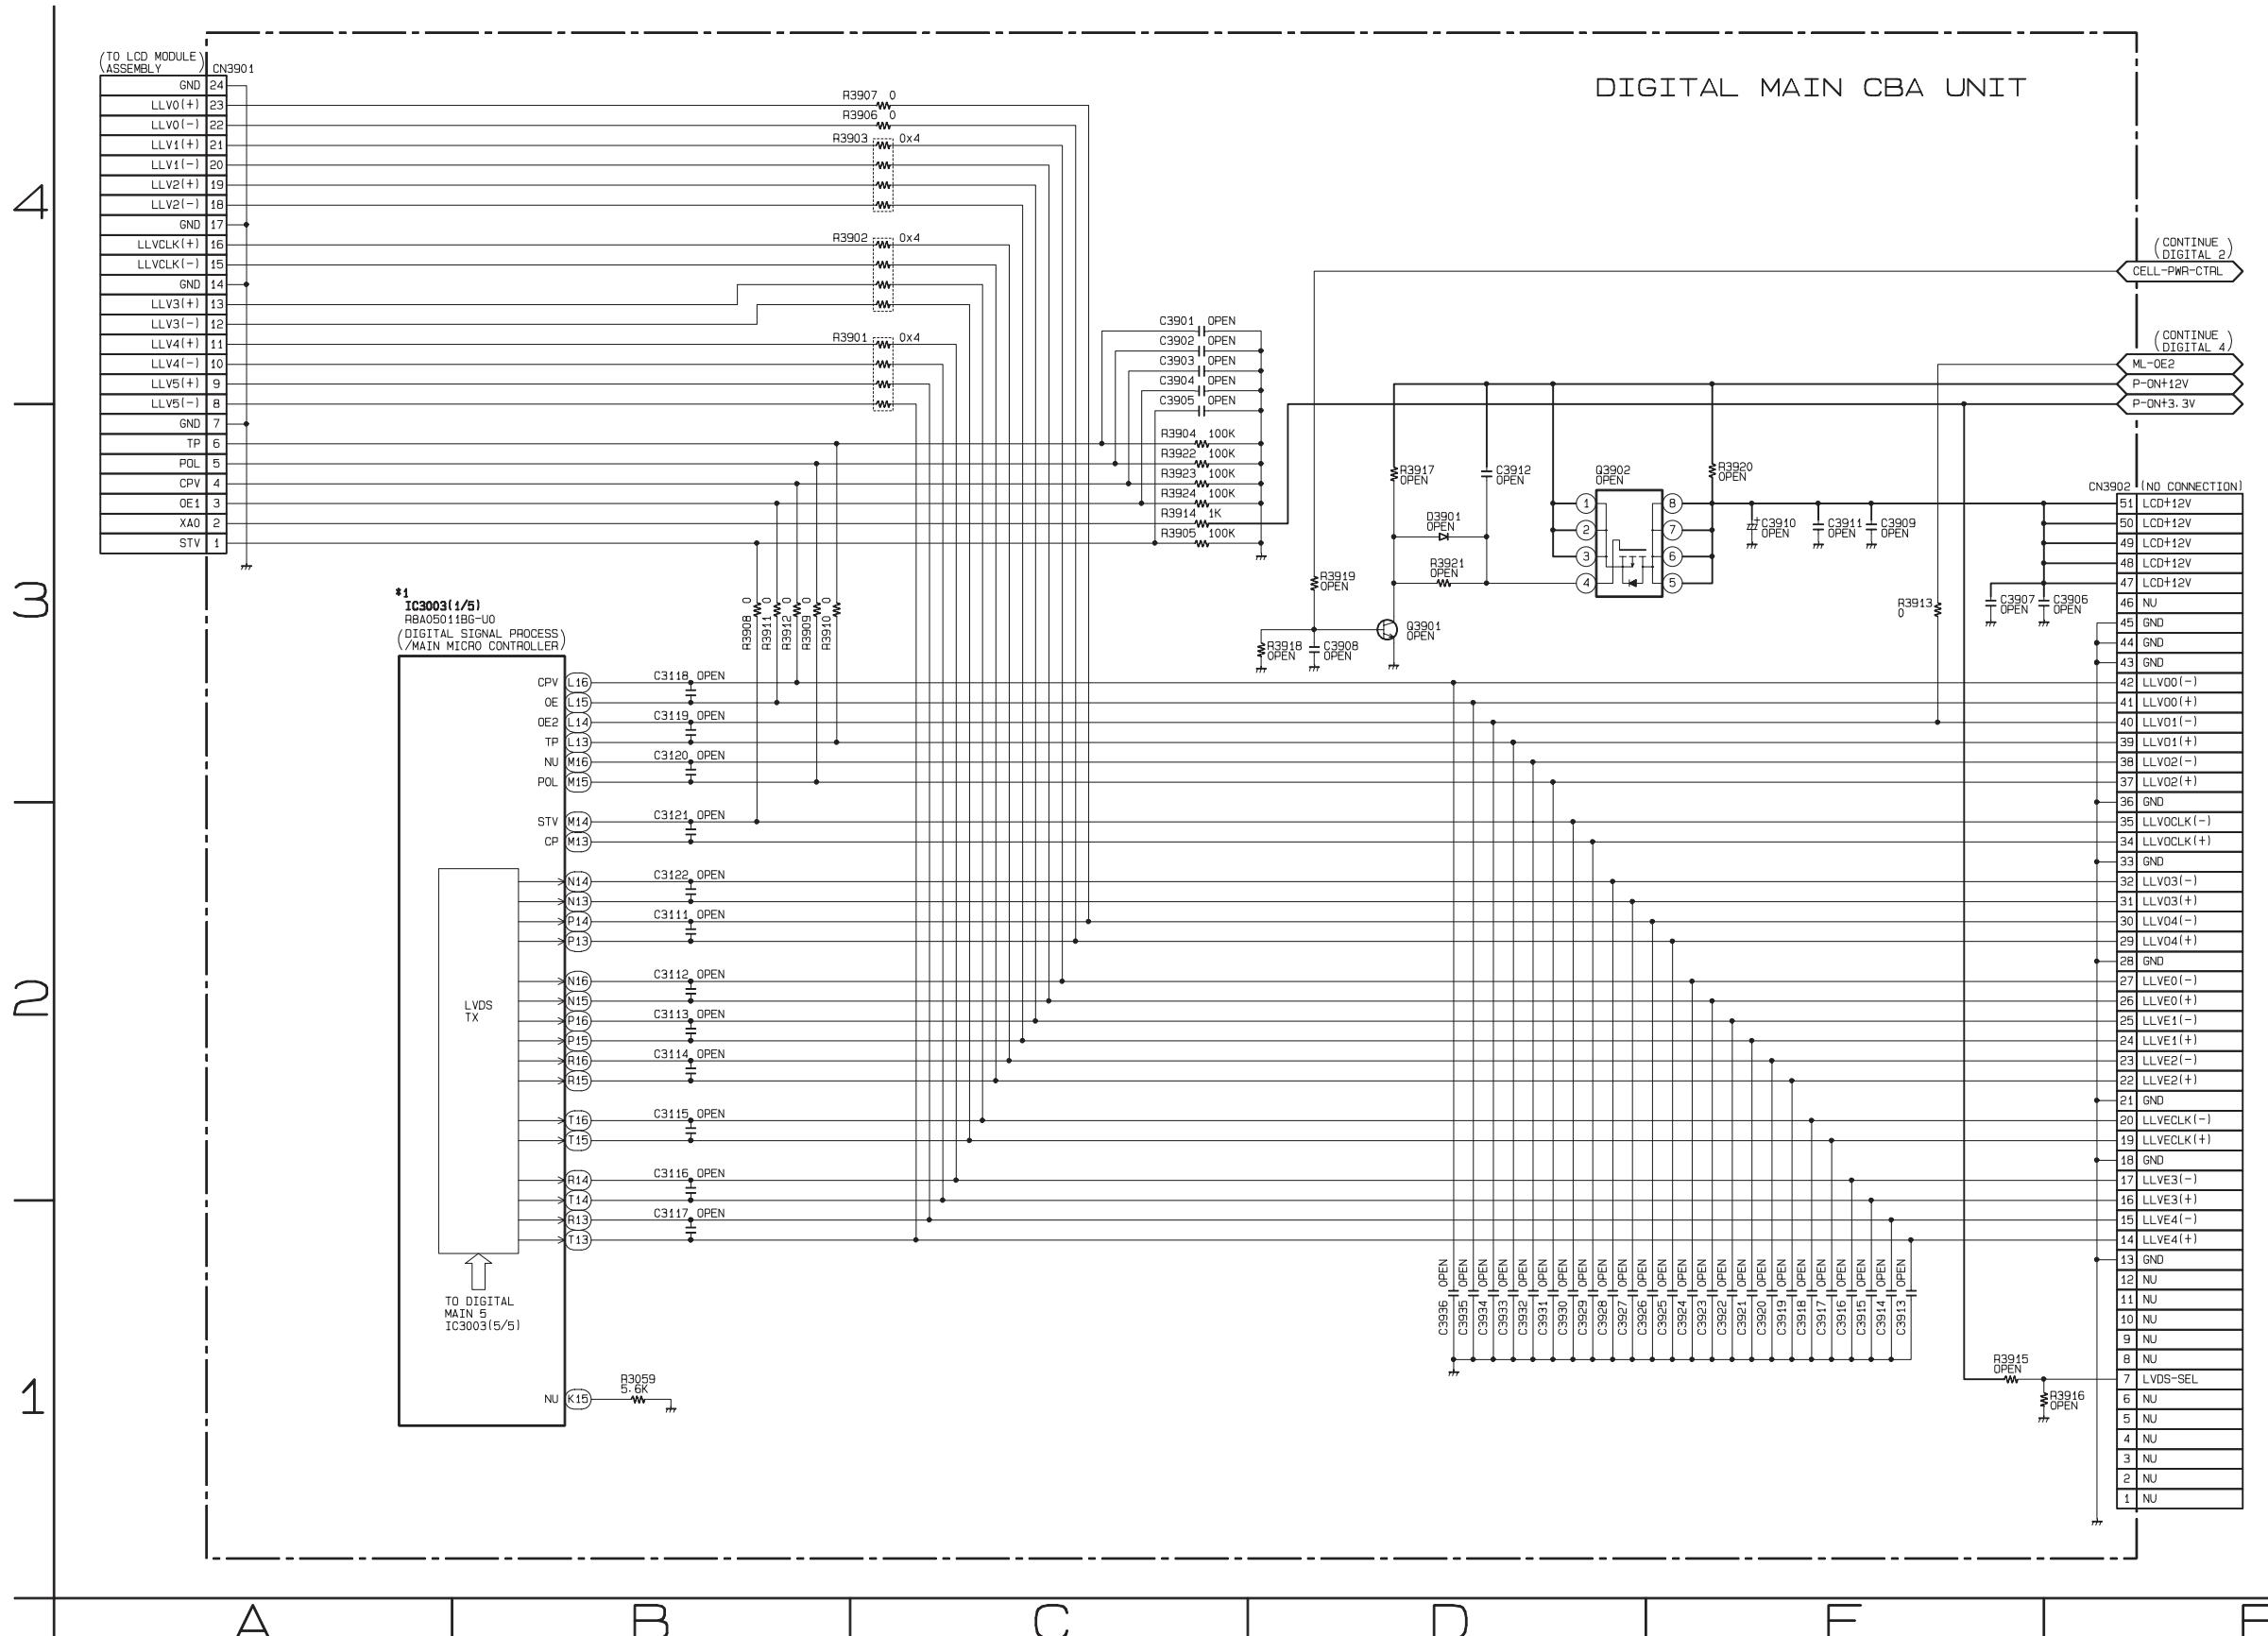

Digital Main 2 Schematic Diagram

*1 NOTE:

The order of pins shown in this diagram is different from that of actual IC3003.
IC3003 is divided into five and shown as IC3003 (1/5) ~ IC3003 (5/5) in this Digital Main Schematic Diagram Section.

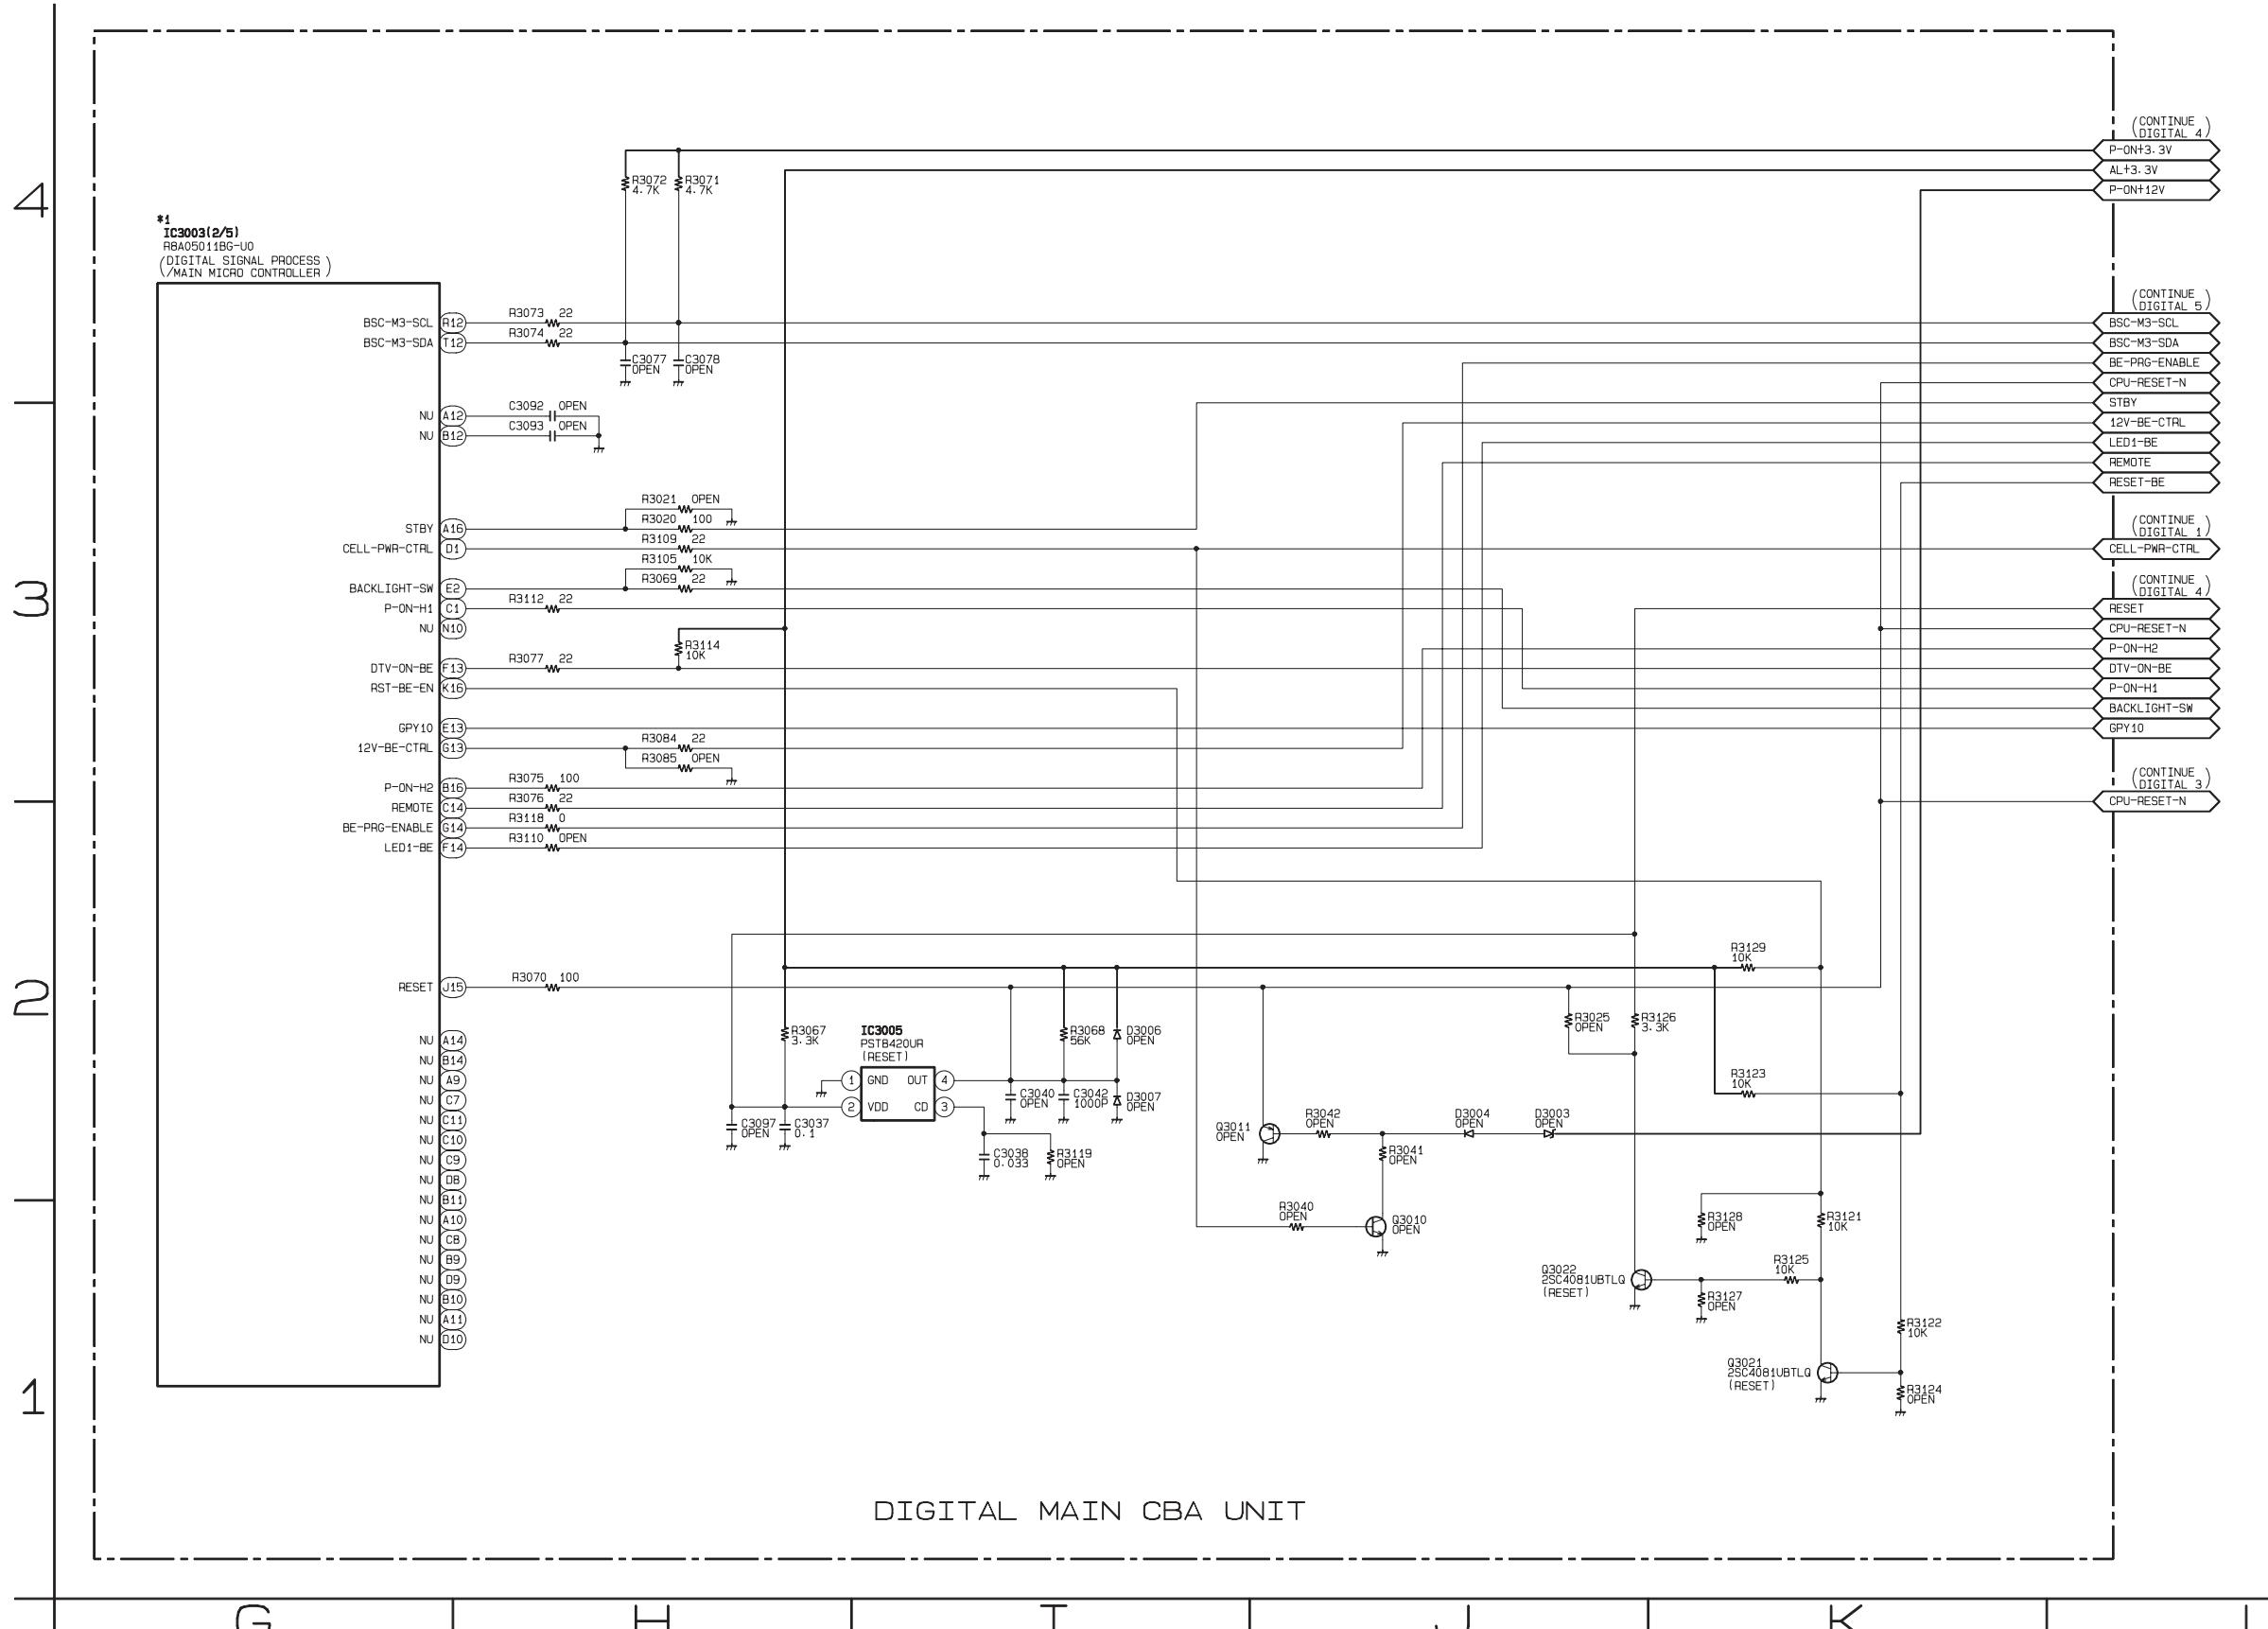


Digital Main 3 Schematic Diagram

*1 NOTE:

The order of pins shown in this diagram is different from that of actual IC3003.

IC3003 is divided into five and shown as IC3003 (1/5) ~ IC3003 (5/5) in this Digital Main Schematic Diagram Section.

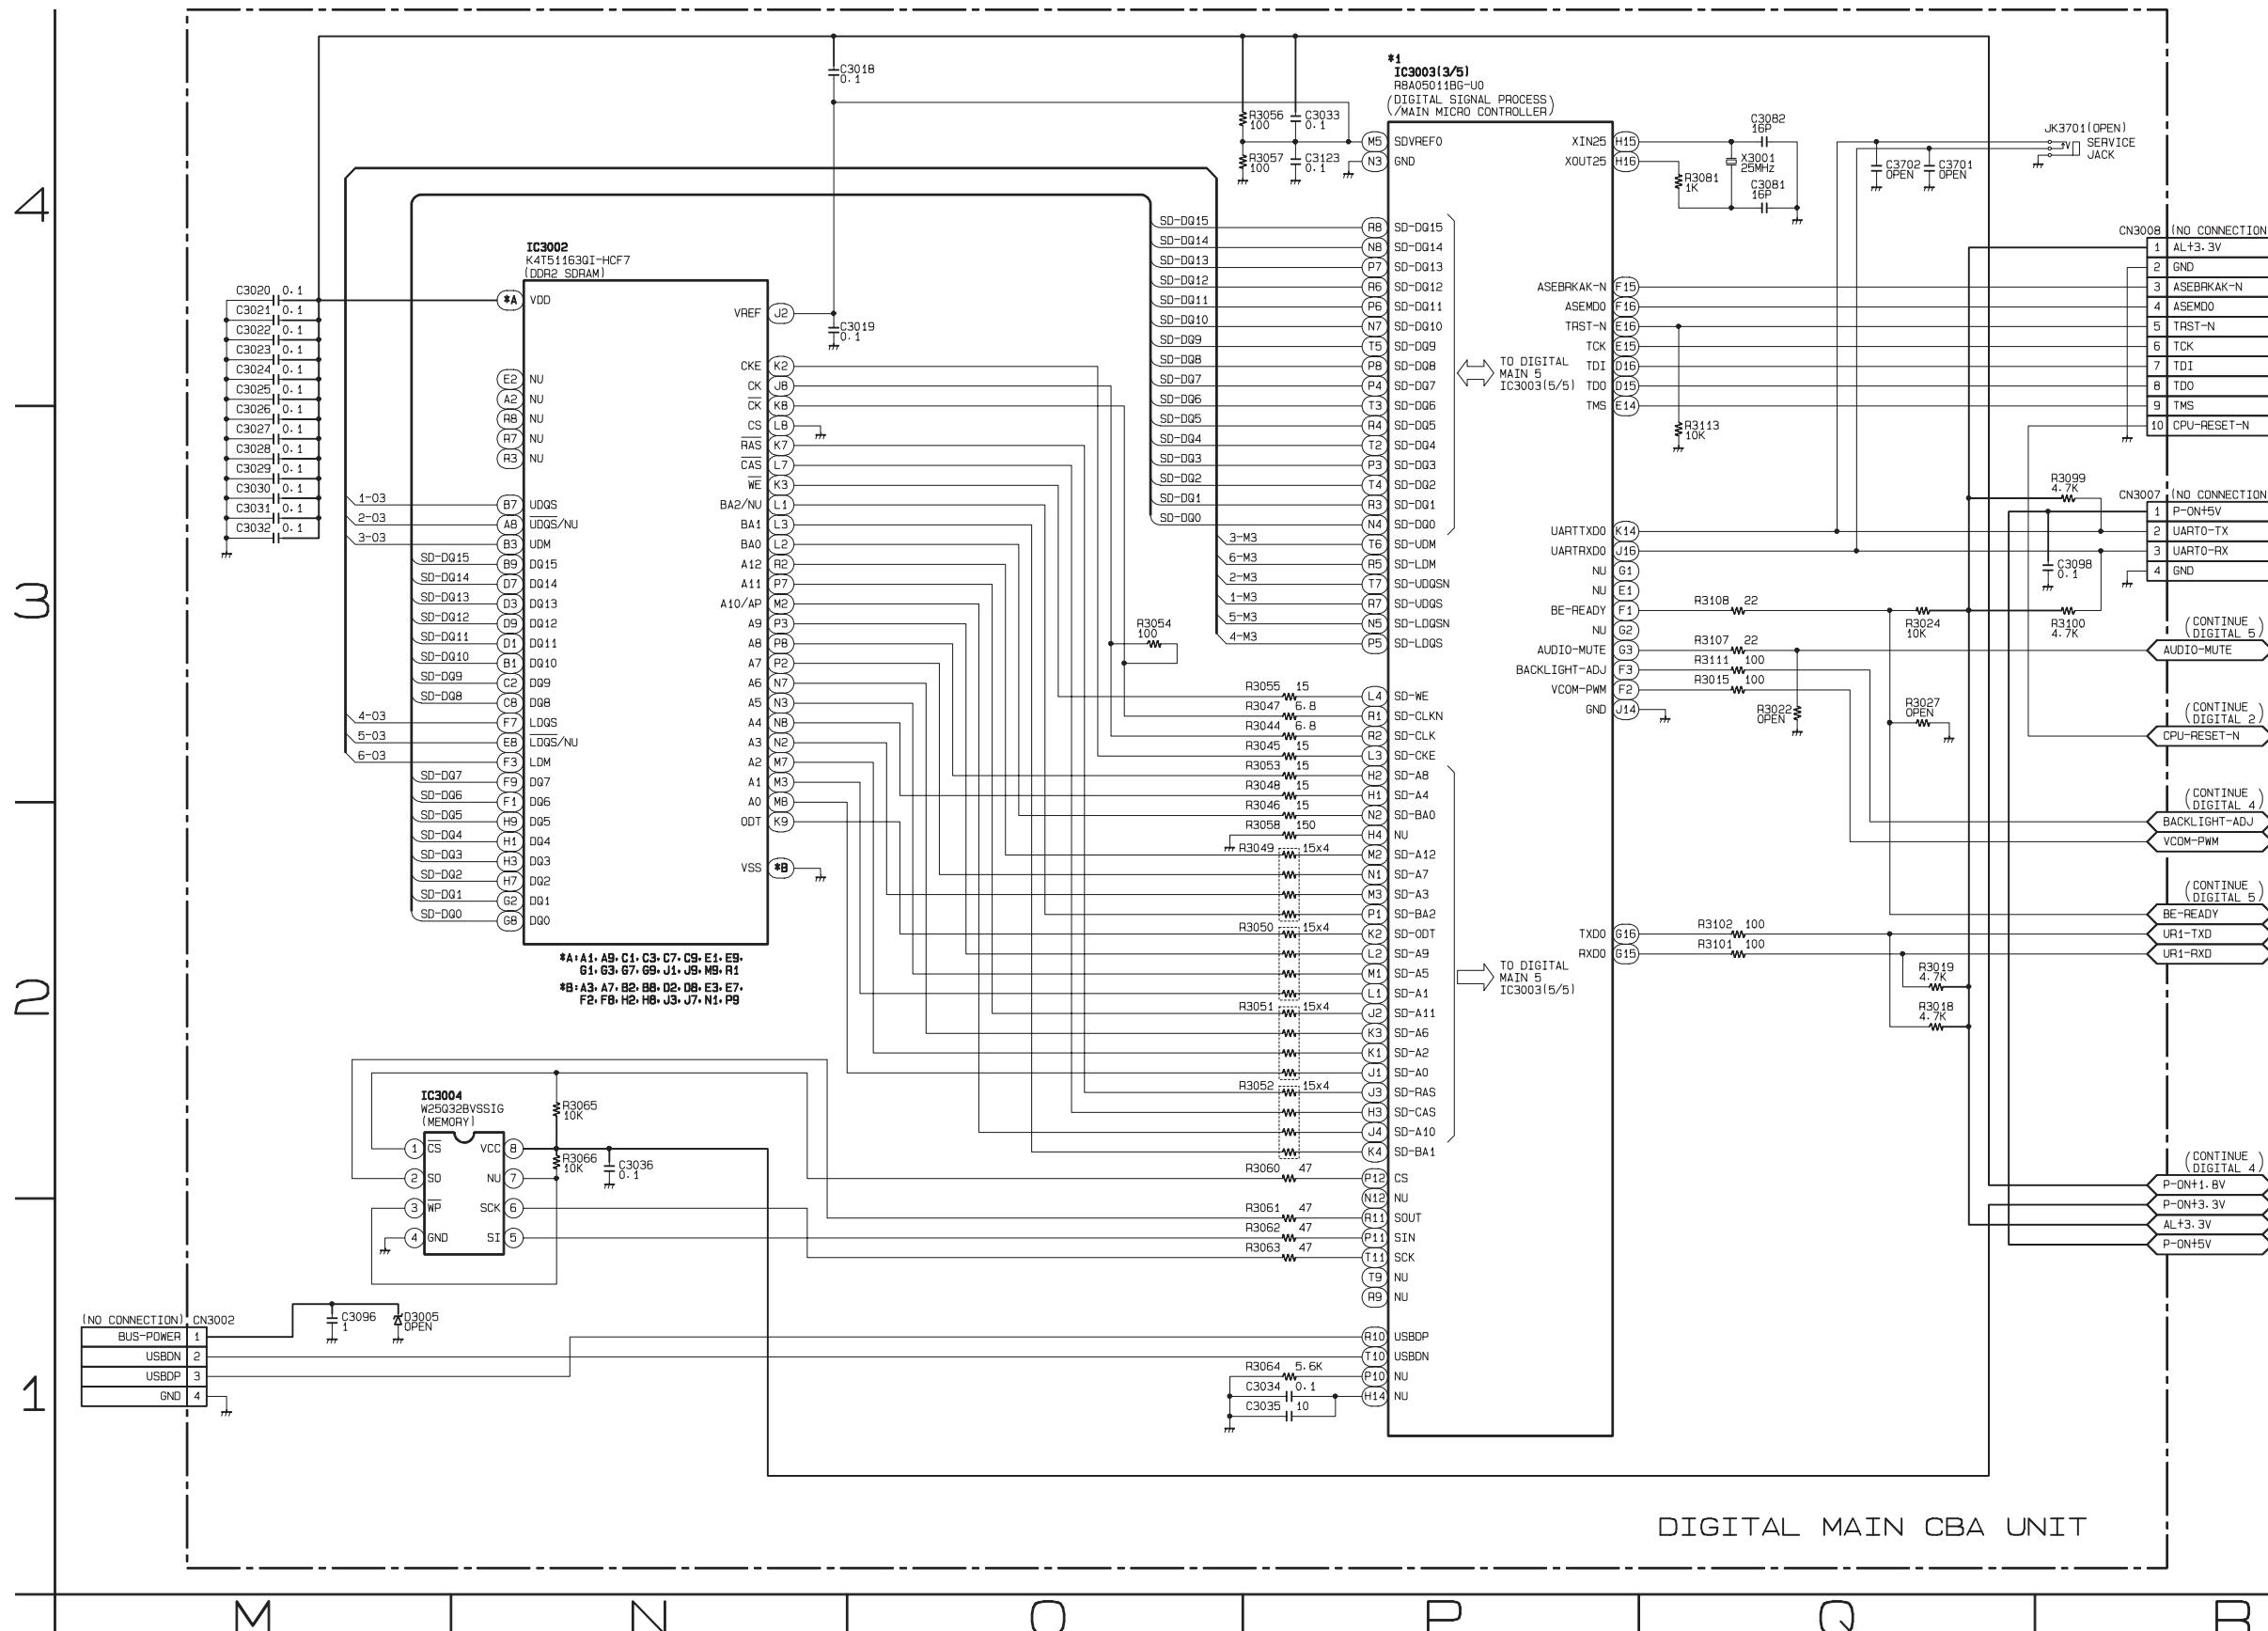


Digital Main 4 Schematic Diagram

*1 NOTE:

The order of pins shown in this diagram is different from that of actual IC3003.

IC3003 is divided into five and shown as IC3003 (1/5) ~ IC3003 (5/5) in this Digital Main Schematic Diagram Section.

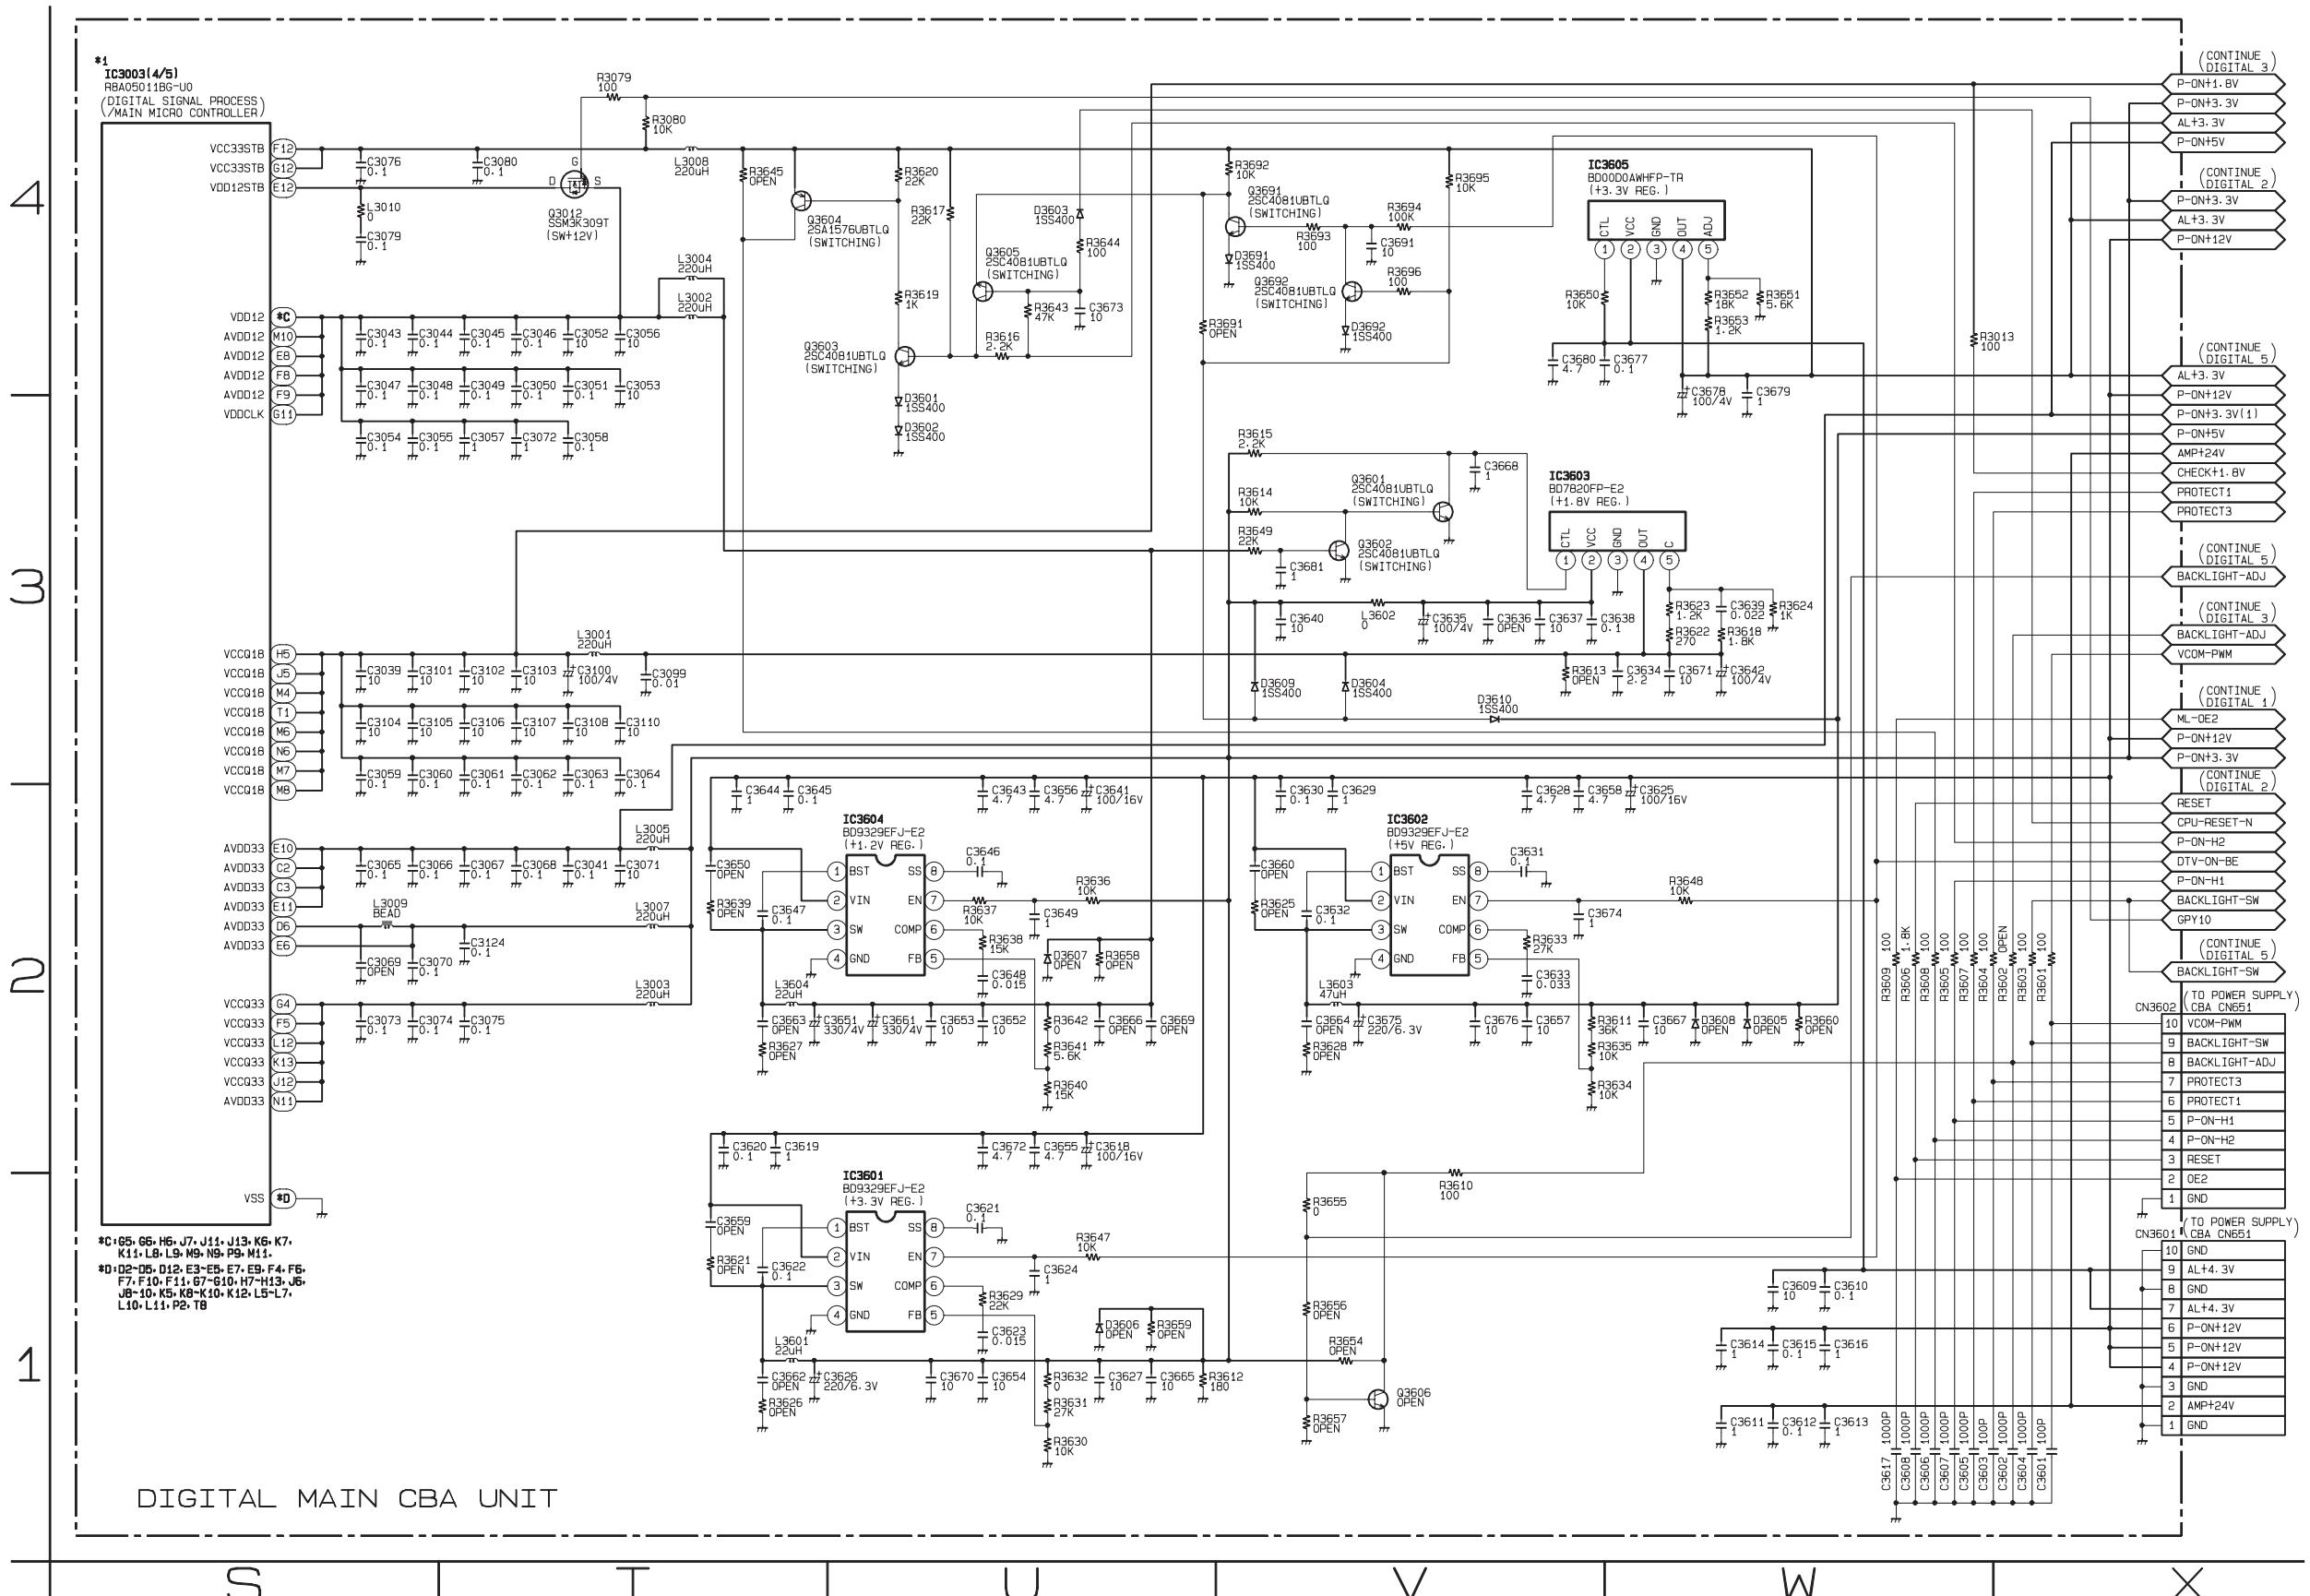


Digital Main 5 Schematic Diagram

*1 NOTE:

The order of pins shown in this diagram is different from that of actual IC3003.

IC3003 is divided into five and shown as IC3003 (1/5) ~ IC3003 (5/5) in this Digital Main Schematic Diagram Section.

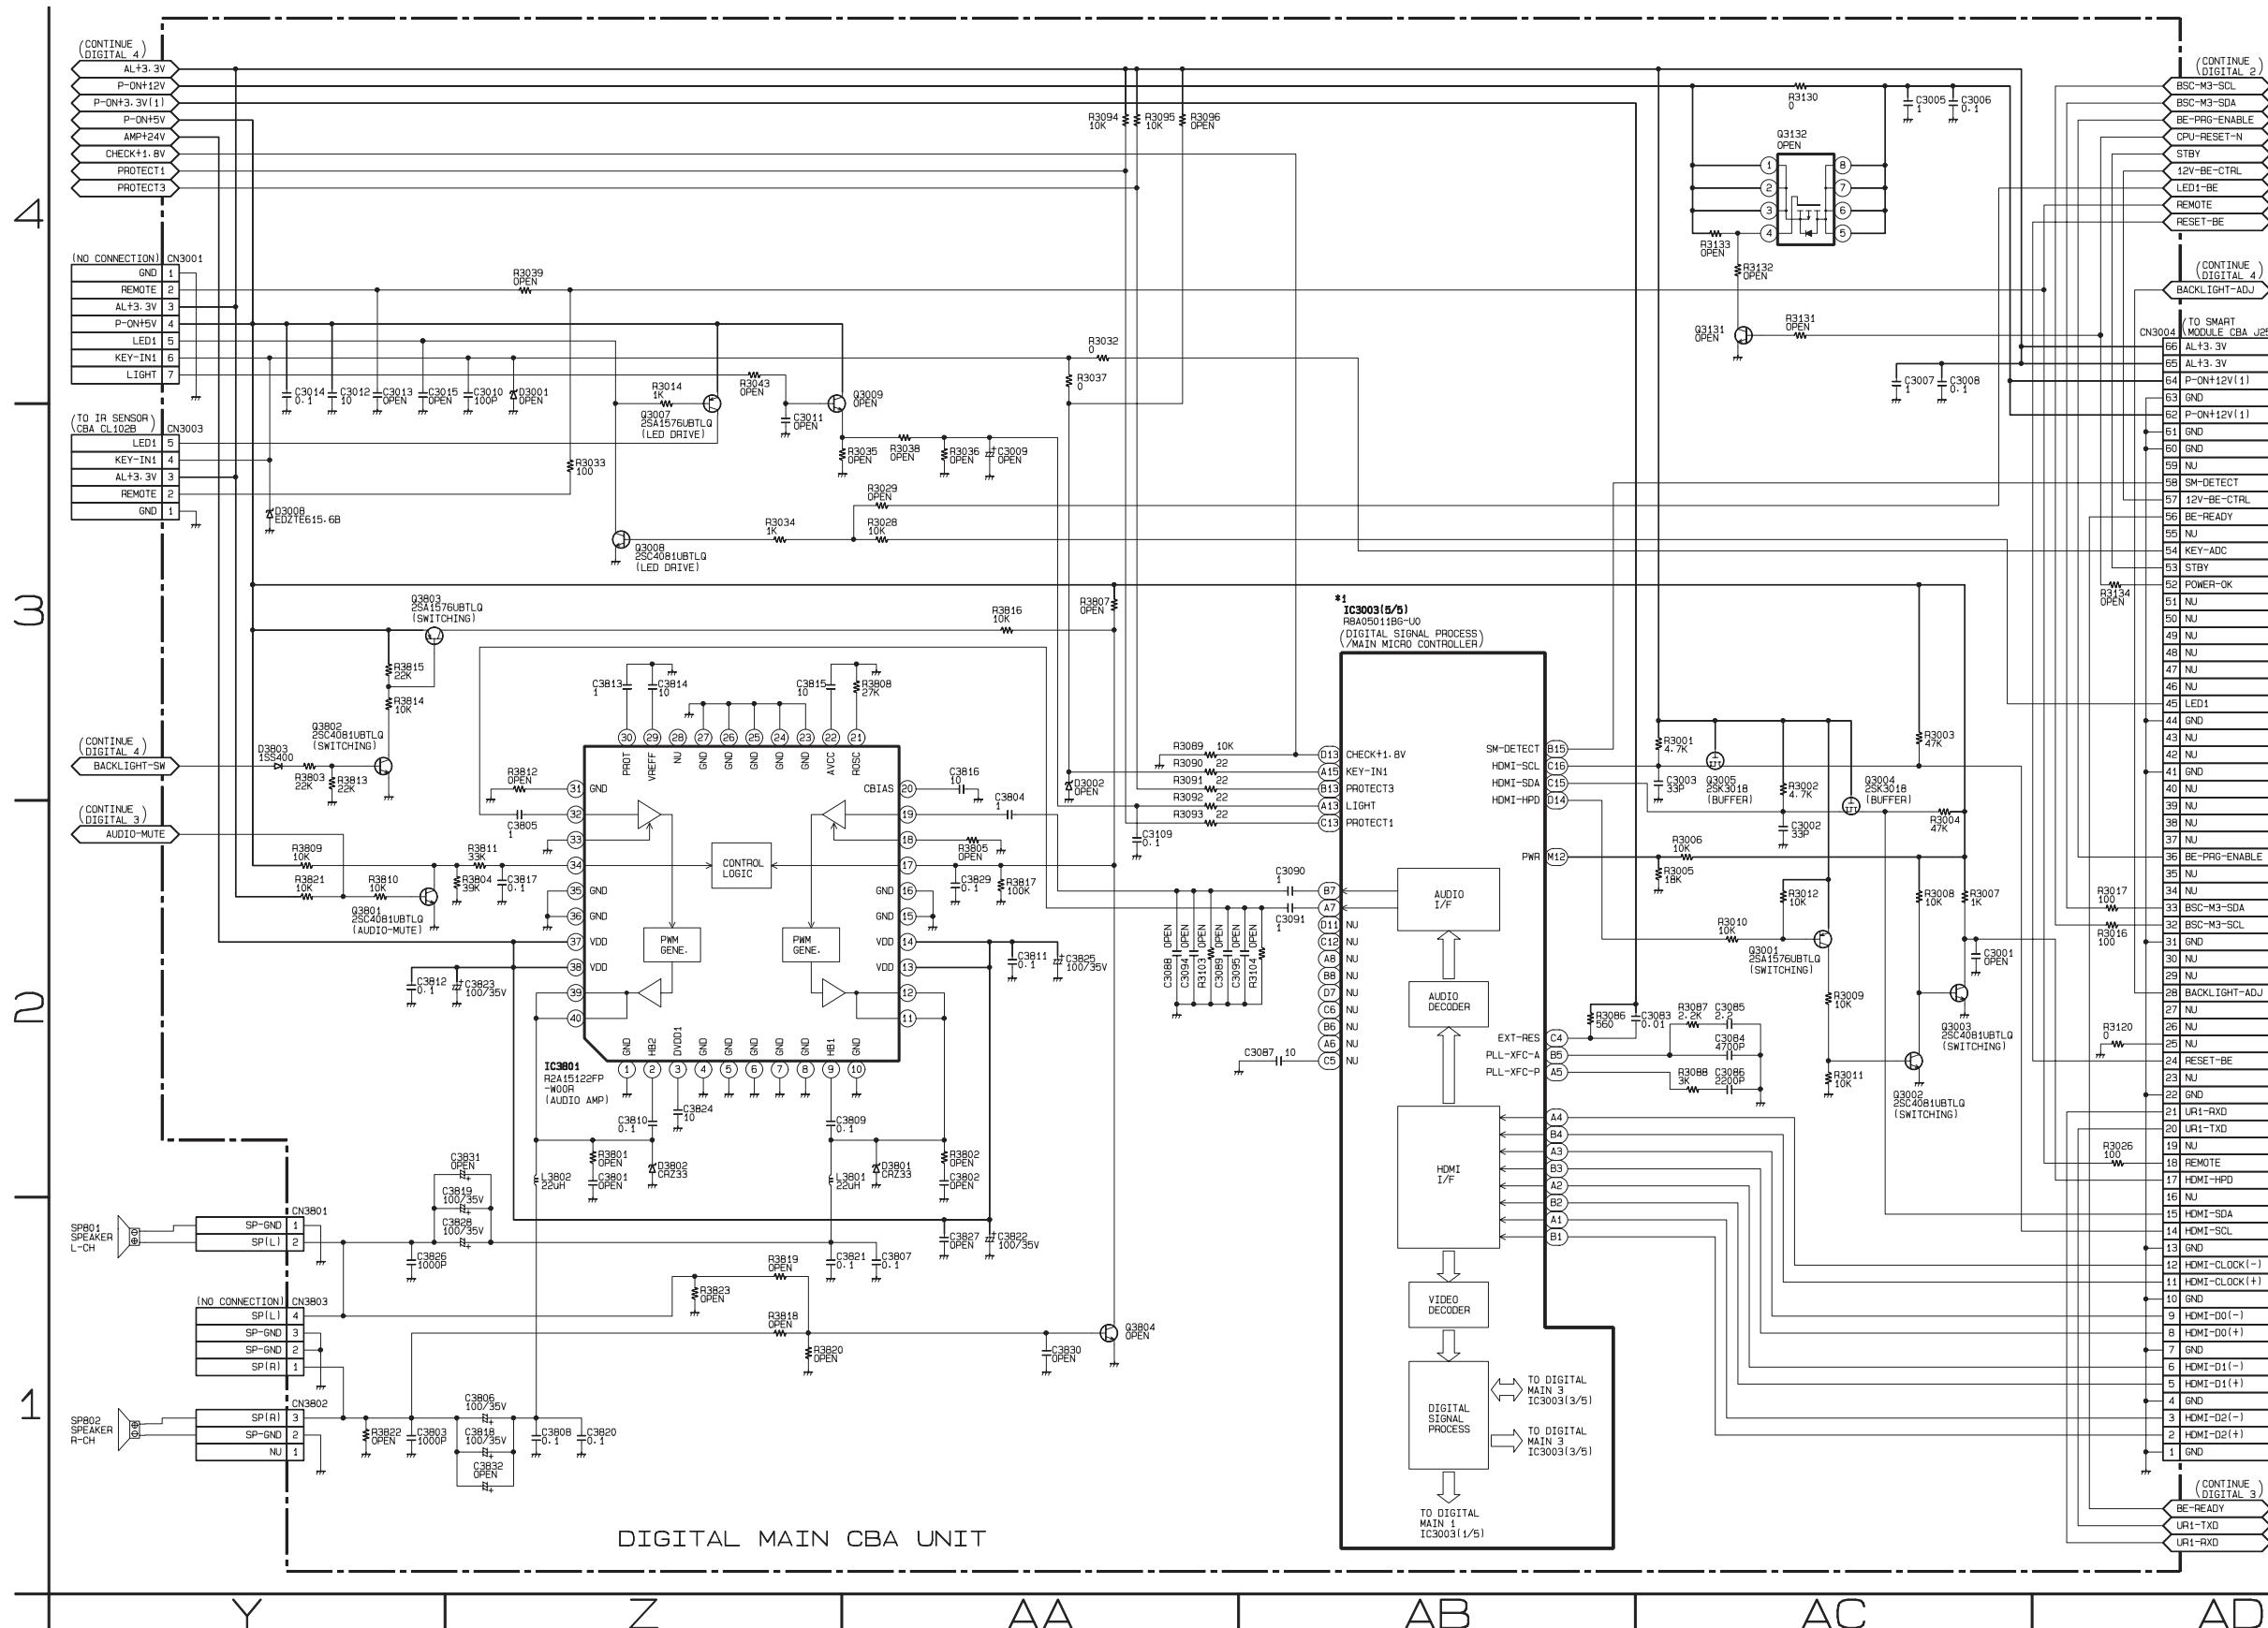


Smart Module 1 Schematic Diagram

*1 NOTE:

The order of pins shown in this diagram is different from that of actual U1.

U1 is divided into ten and shown as U1 (1/10) ~ U1 (10/10) in this Smart Module Schematic Diagram Section.

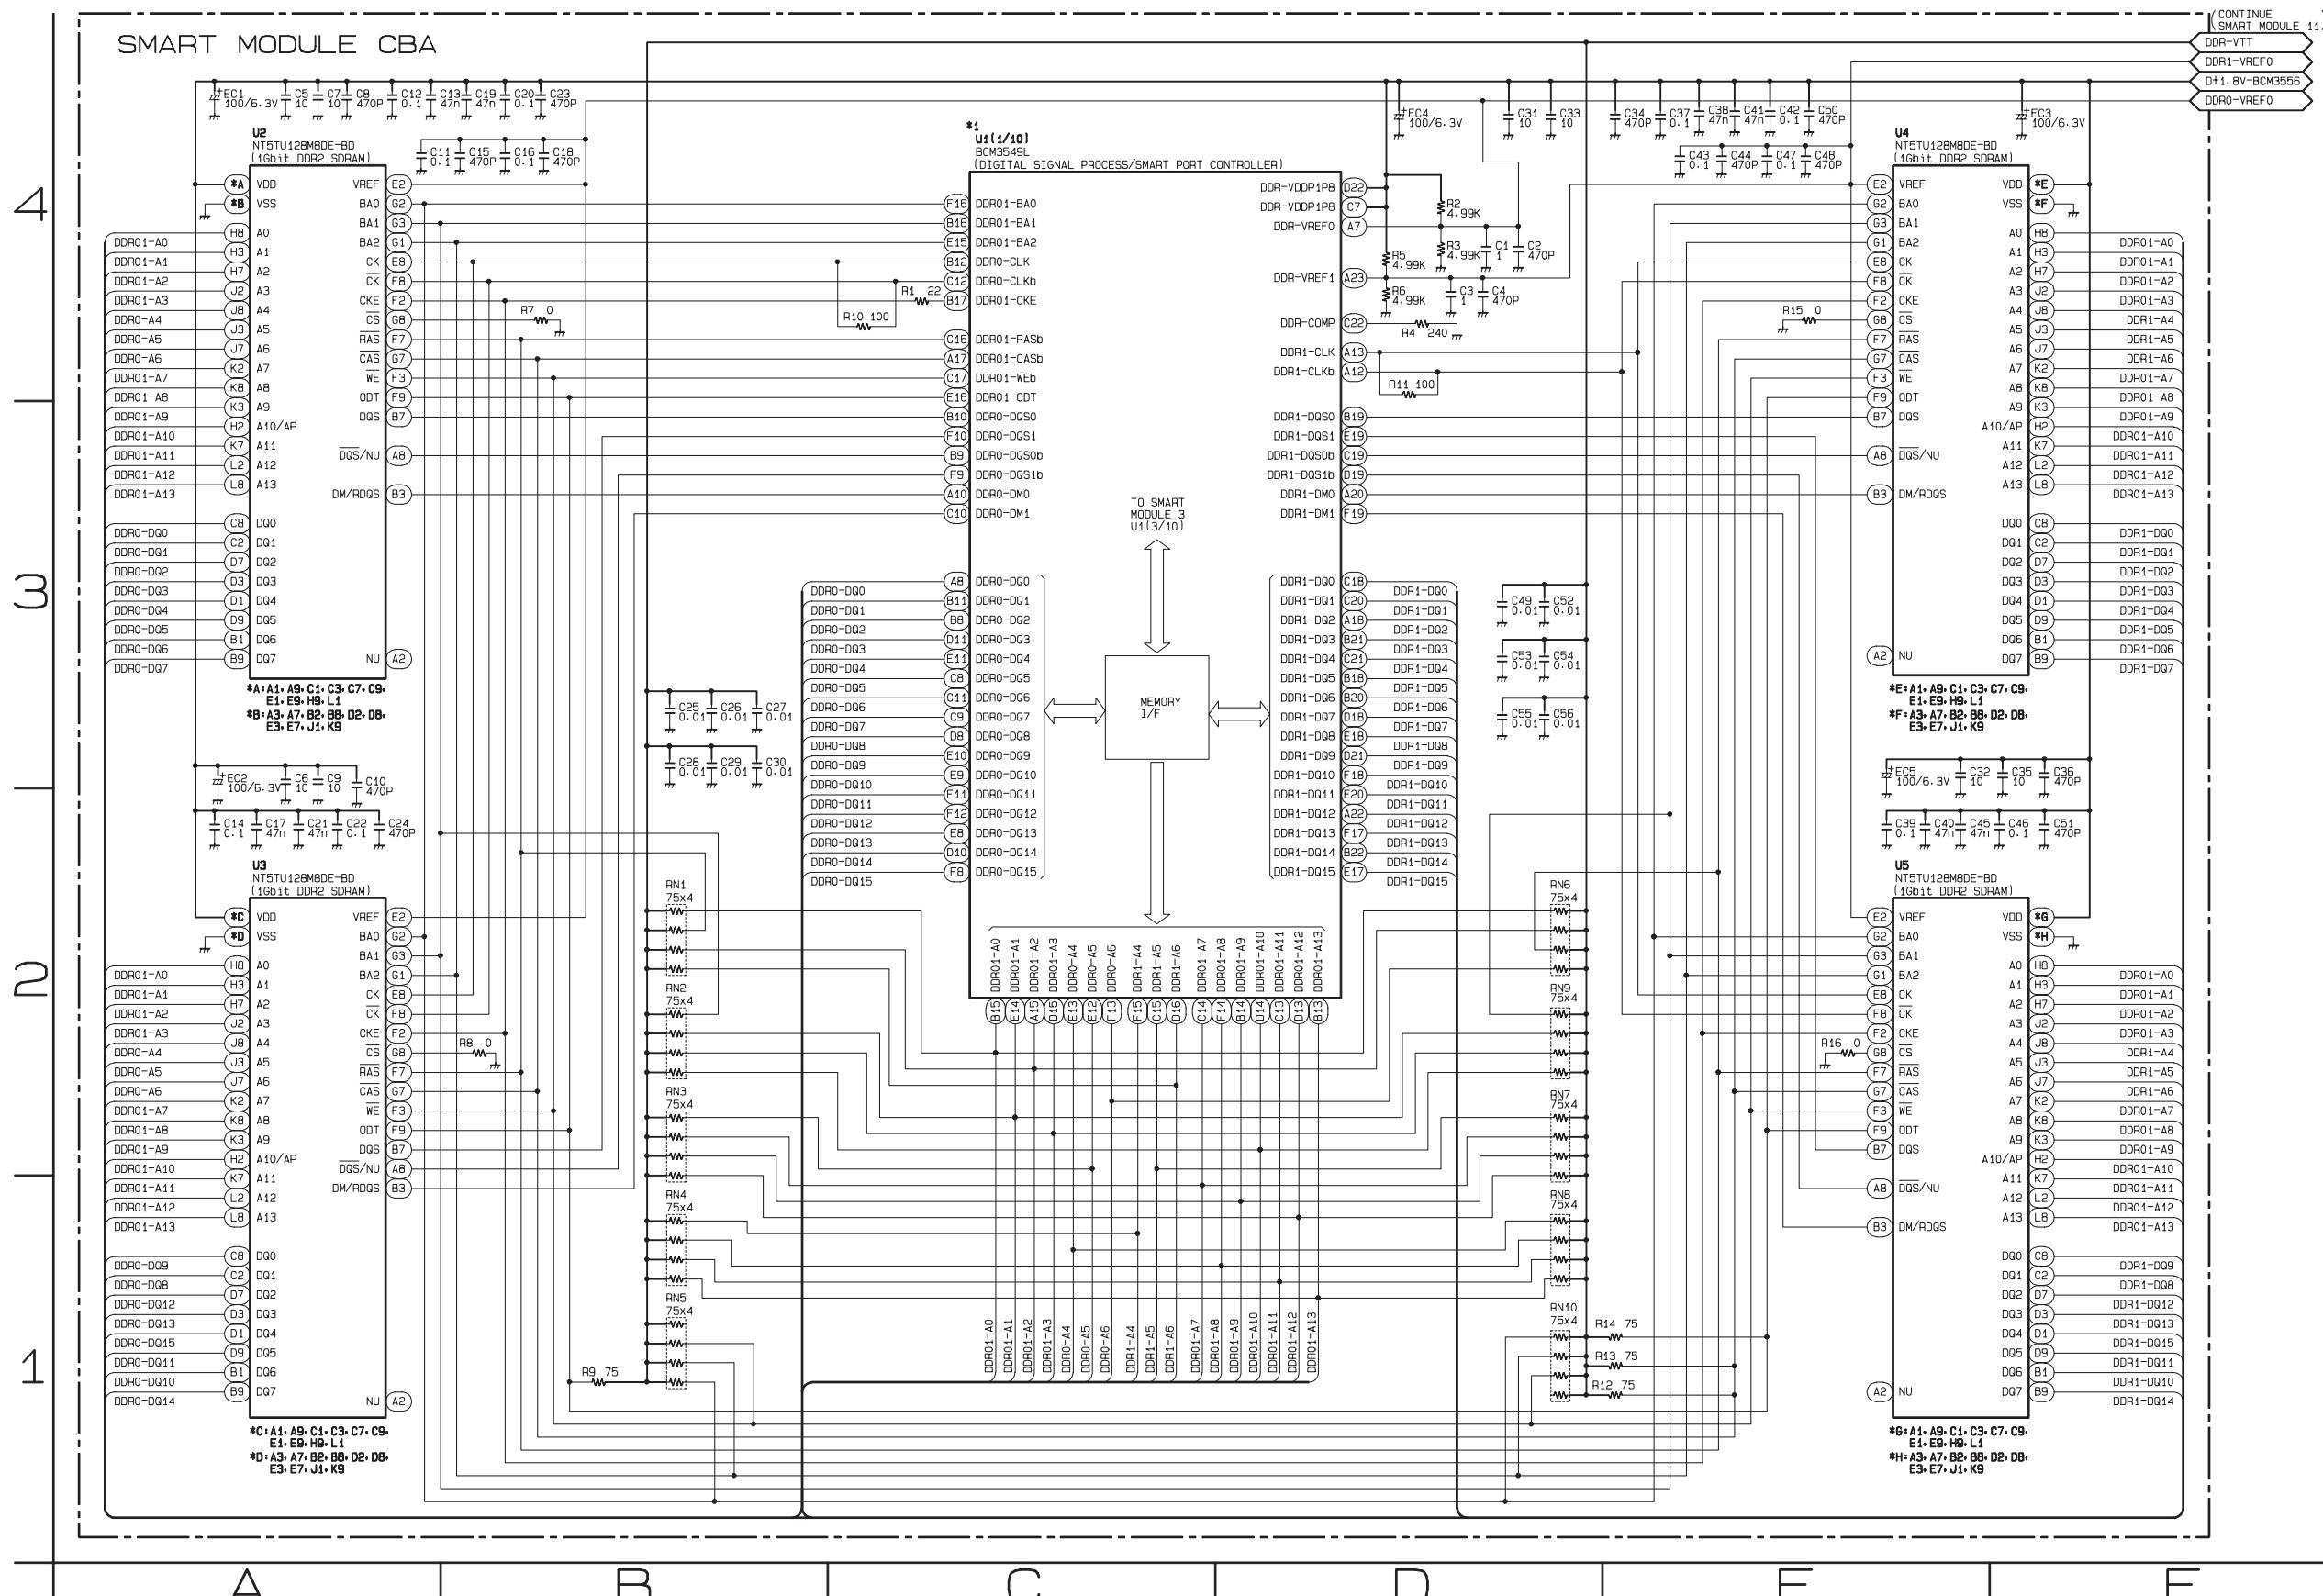


Smart Module 2 Schematic Diagram

*1 NOTE:

The order of pins shown in this diagram is different from that of actual U1.

U1 is divided into ten and shown as U1 (1/10) ~ U1 (10/10) in this Smart Module Schematic Diagram Section.

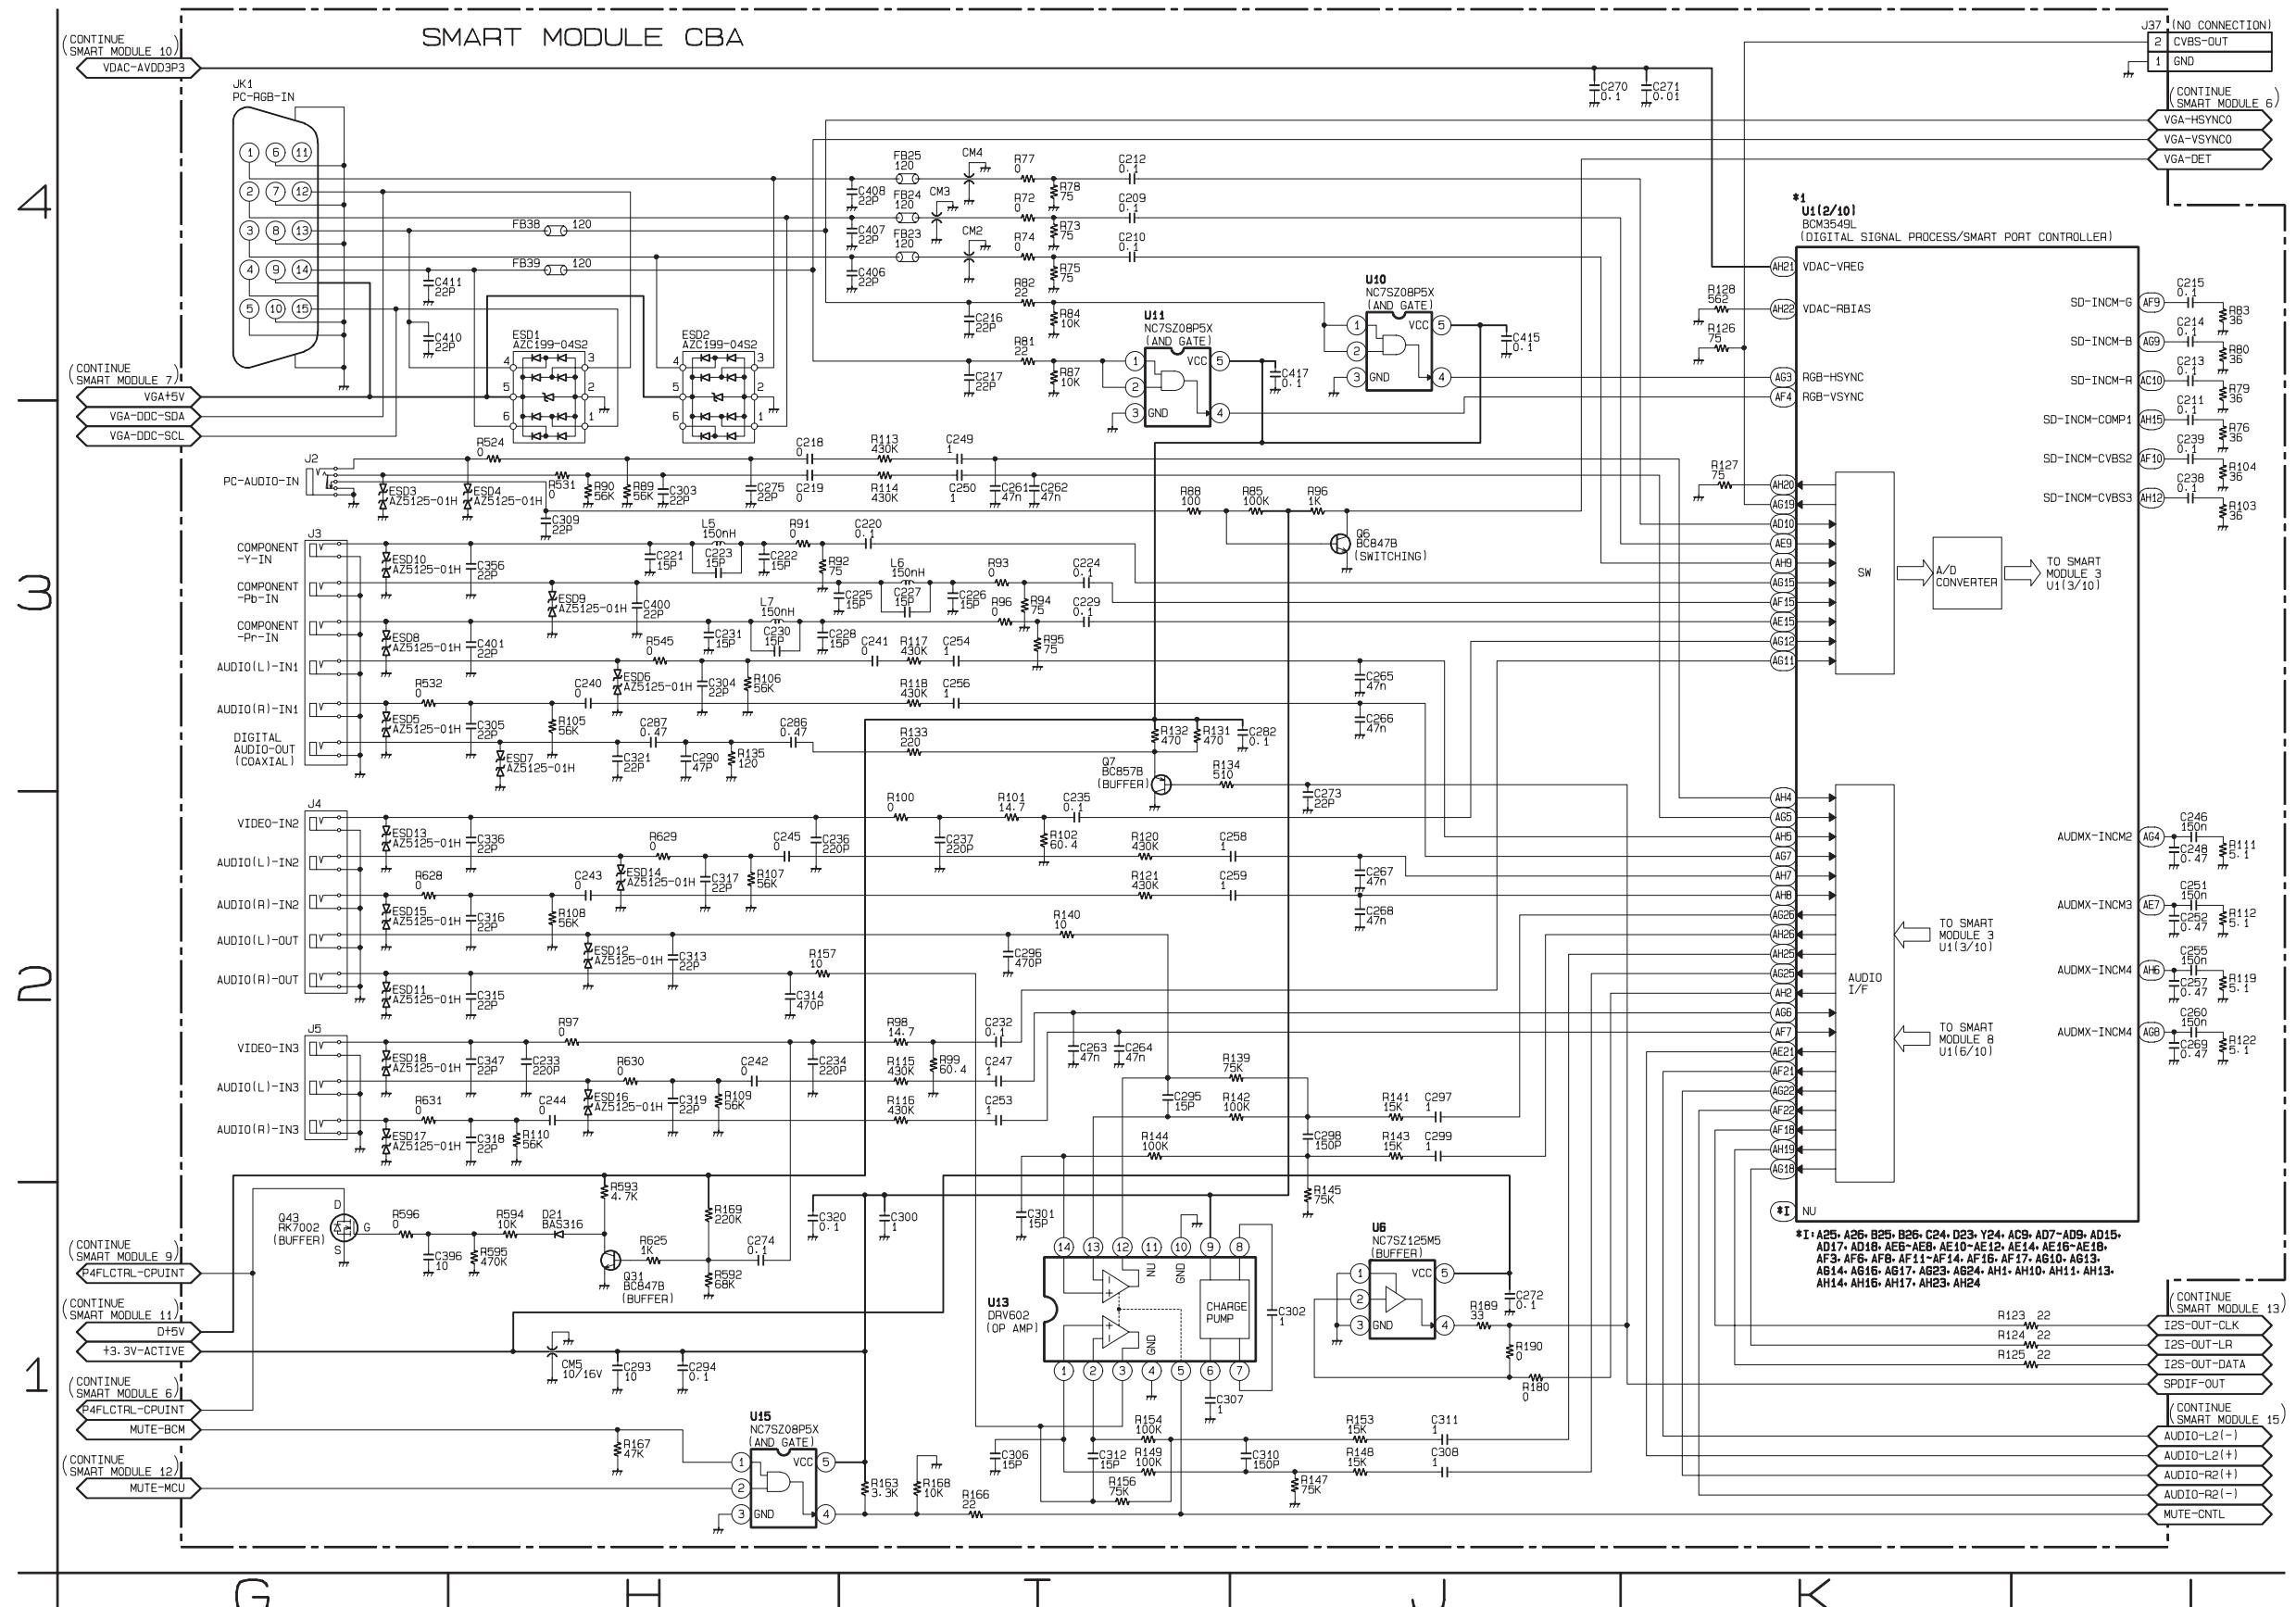


Smart Module 3 Schematic Diagram

*1 NOTE:

The order of pins shown in this diagram is different from that of actual U1.

U1 is divided into ten and shown as U1 (1/10) ~ U1 (10/10) in this Smart Module Schematic Diagram Section.

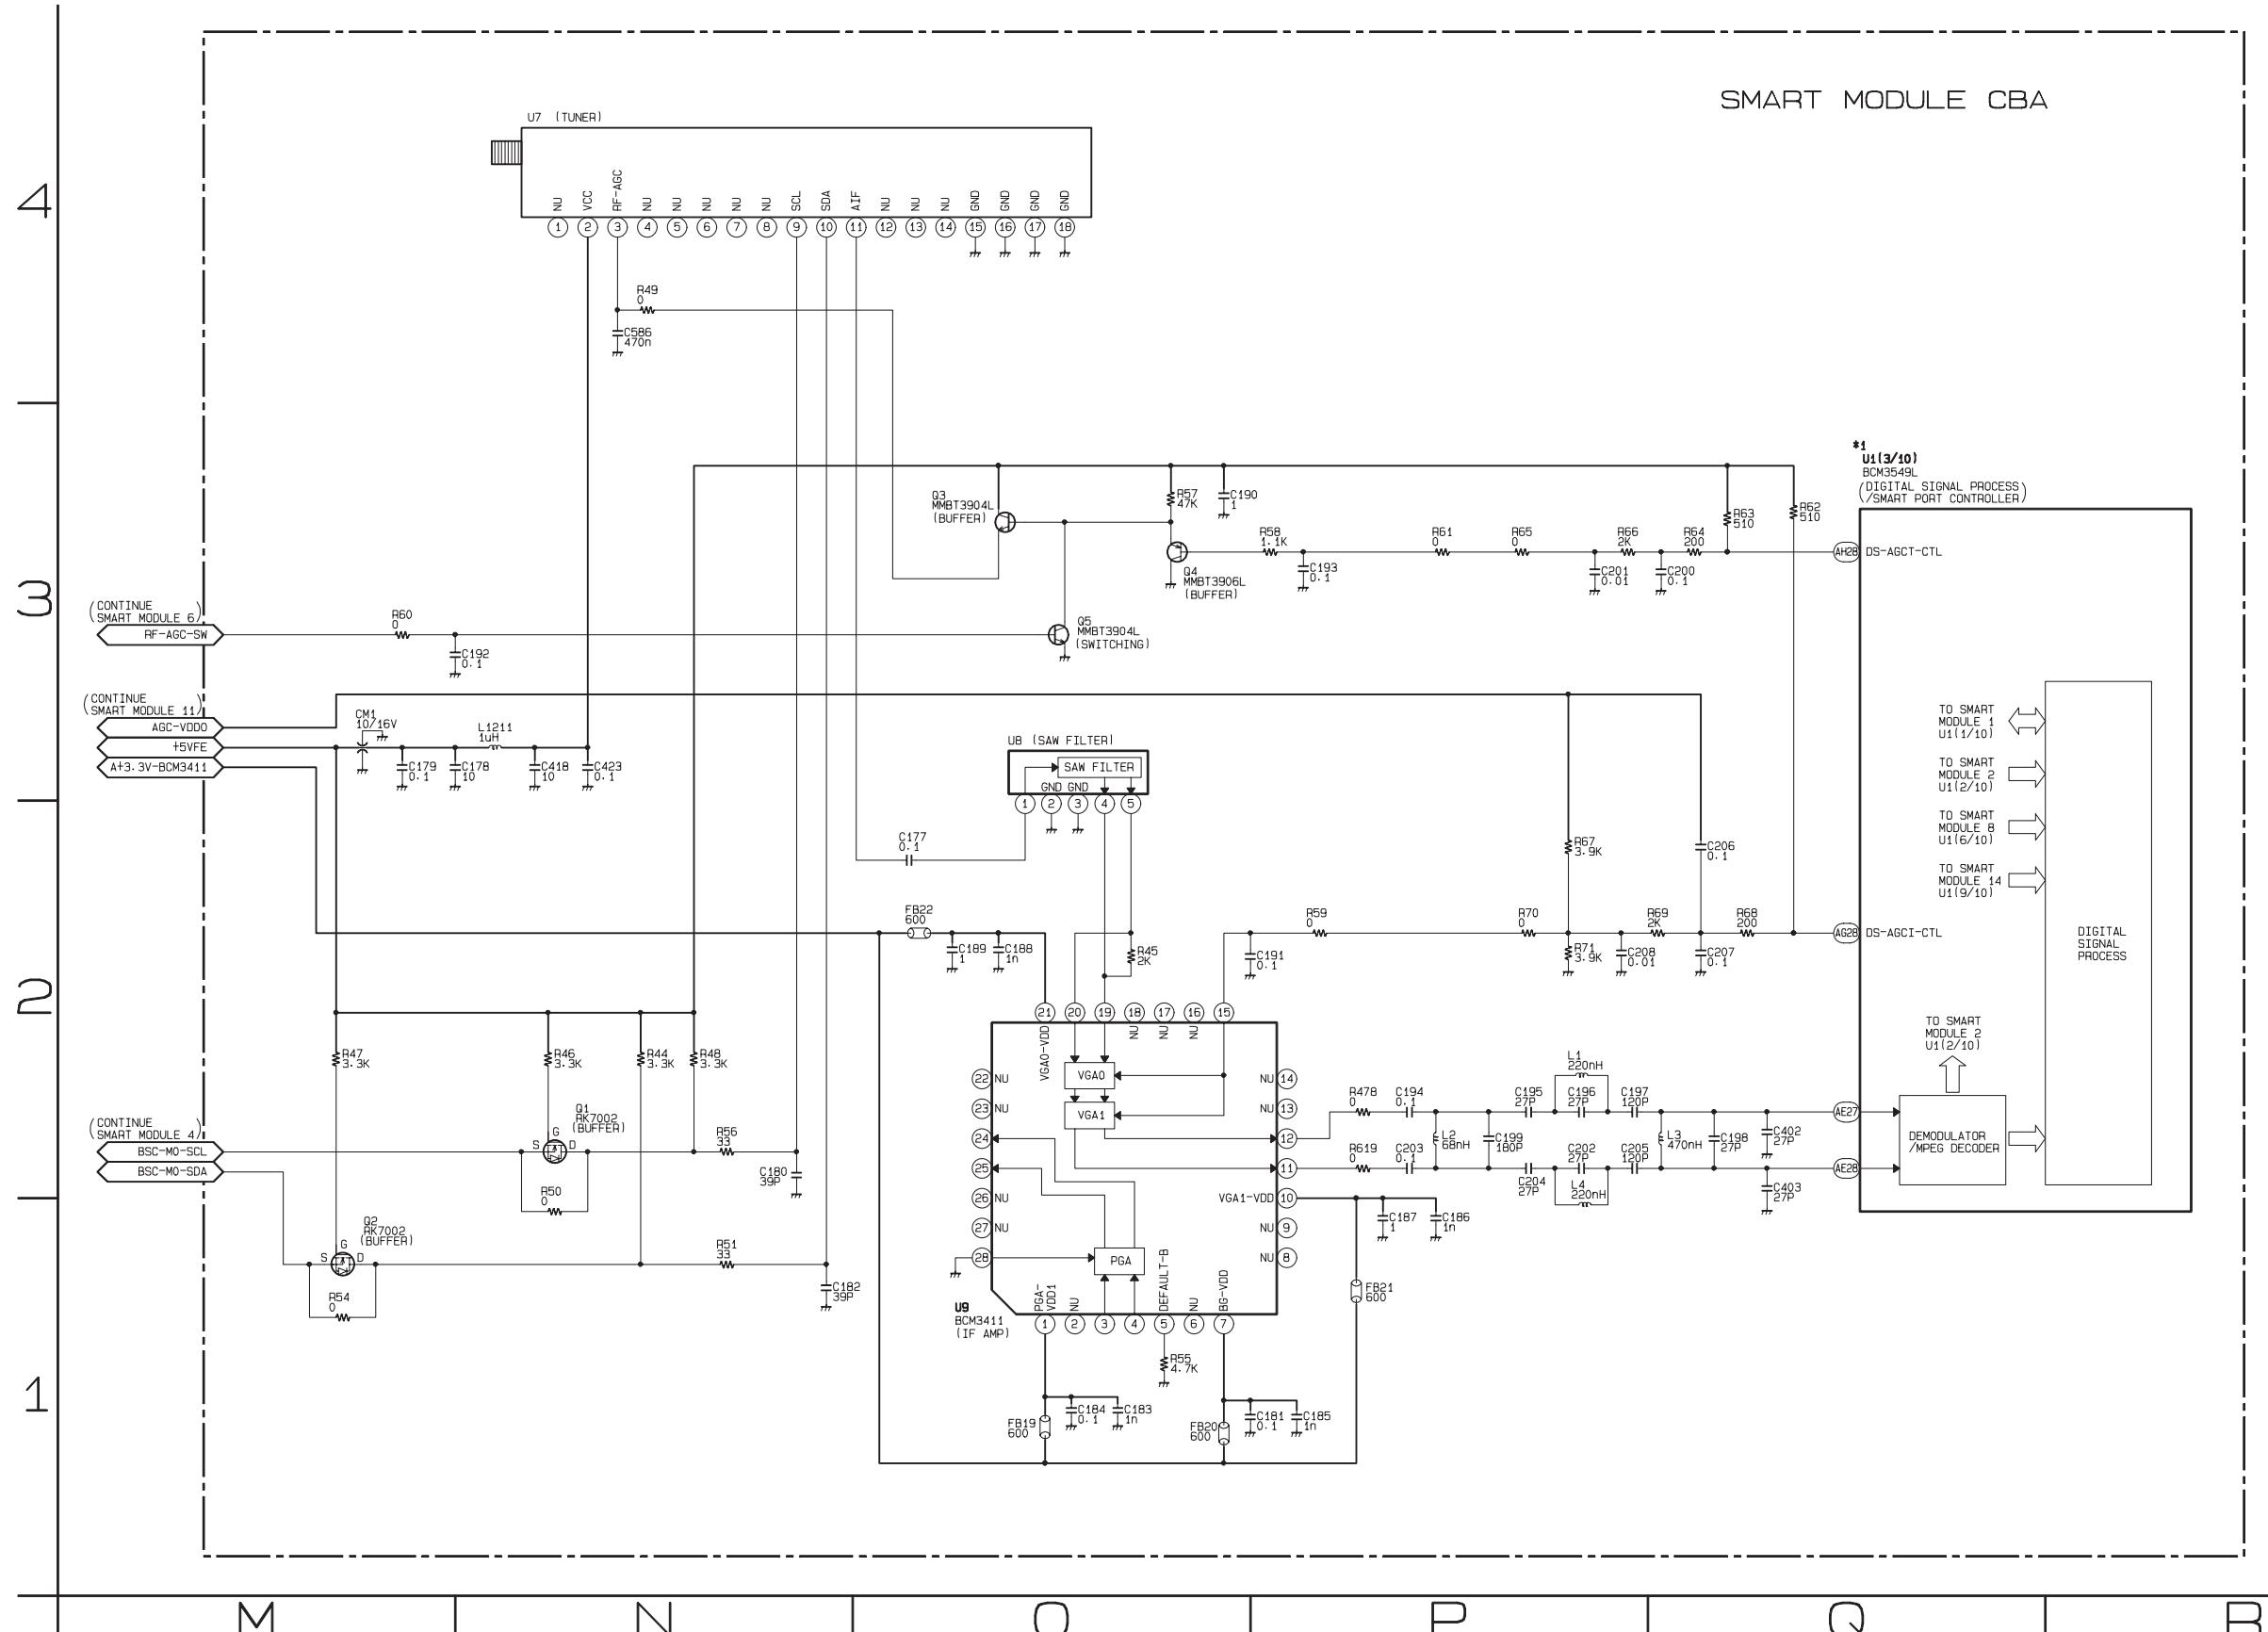


Smart Module 4 Schematic Diagram


*1 NOTE:

The order of pins shown in this diagram is different from that of actual U1.

U1 is divided into ten and shown as U1 (1/10) ~ U1 (10/10) in this Smart Module Schematic Diagram Section.

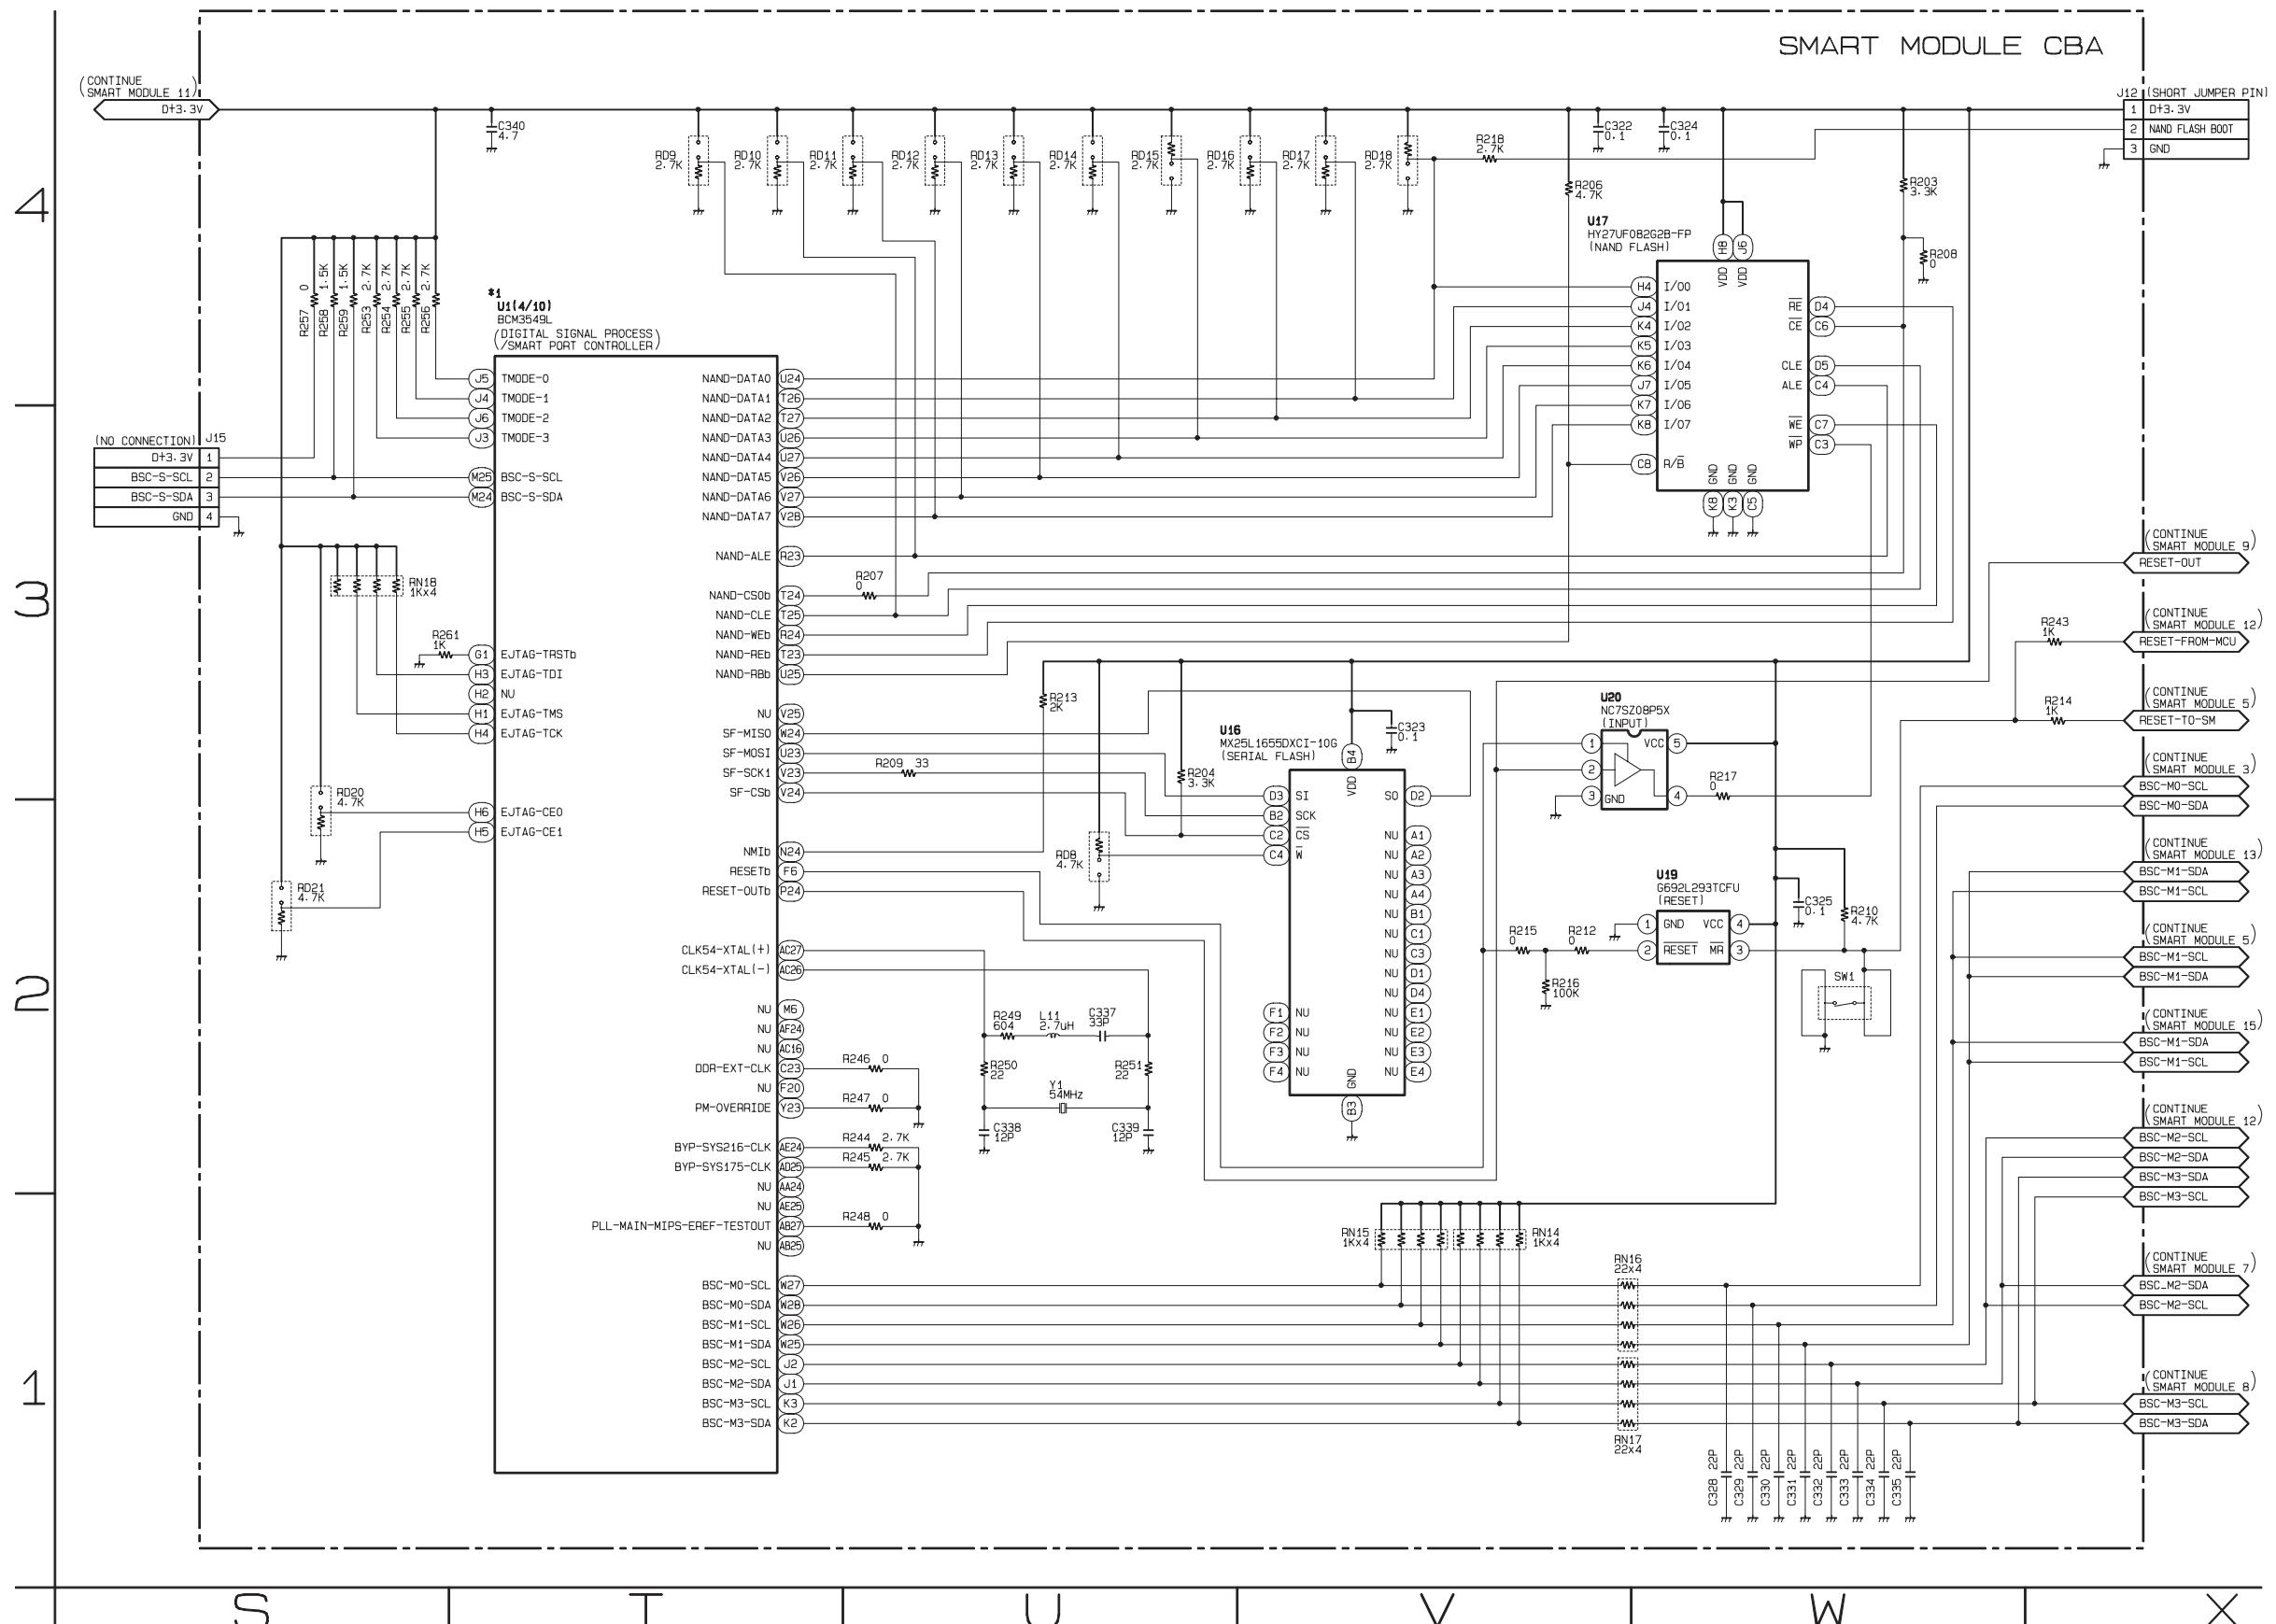

Smart Module 5 Schematic Diagram

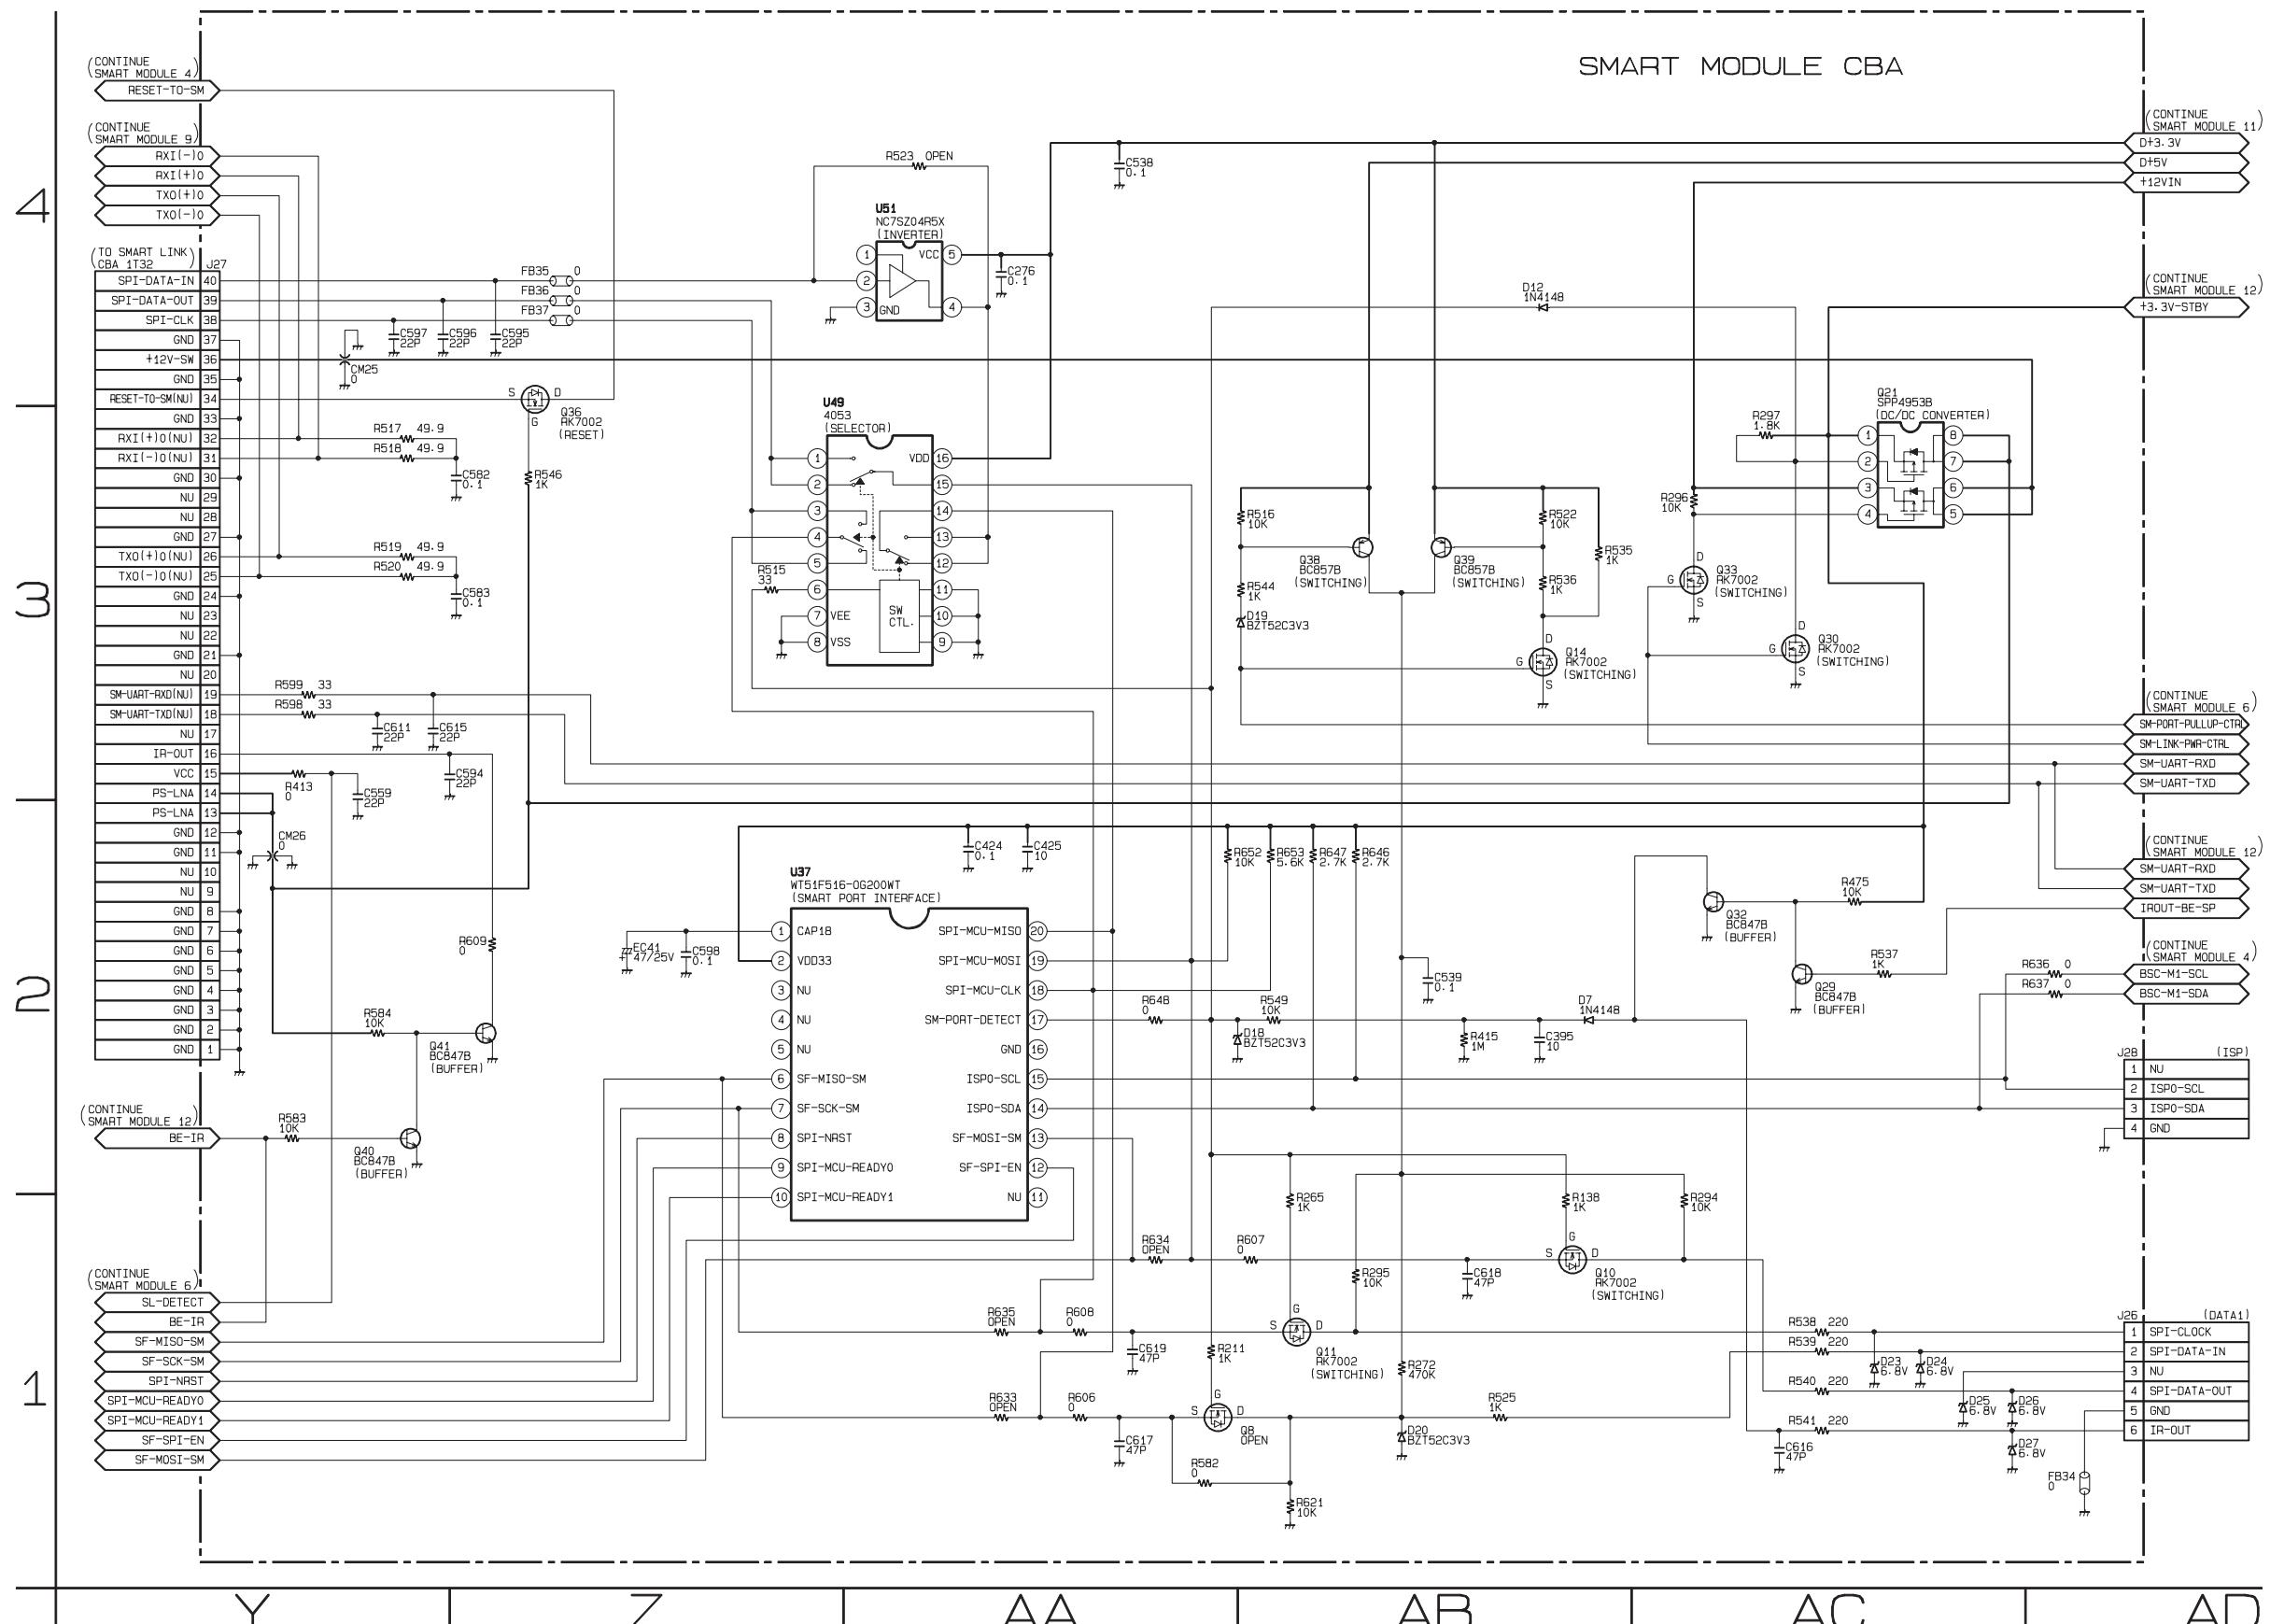


Smart Module 6 Schematic Diagram


*1 NOTE:

The order of pins shown in this diagram is different from that of actual U1.

U1 is divided into ten and shown as U1 (1/10) ~ U1 (10/10) in this Smart Module Schematic Diagram Section.

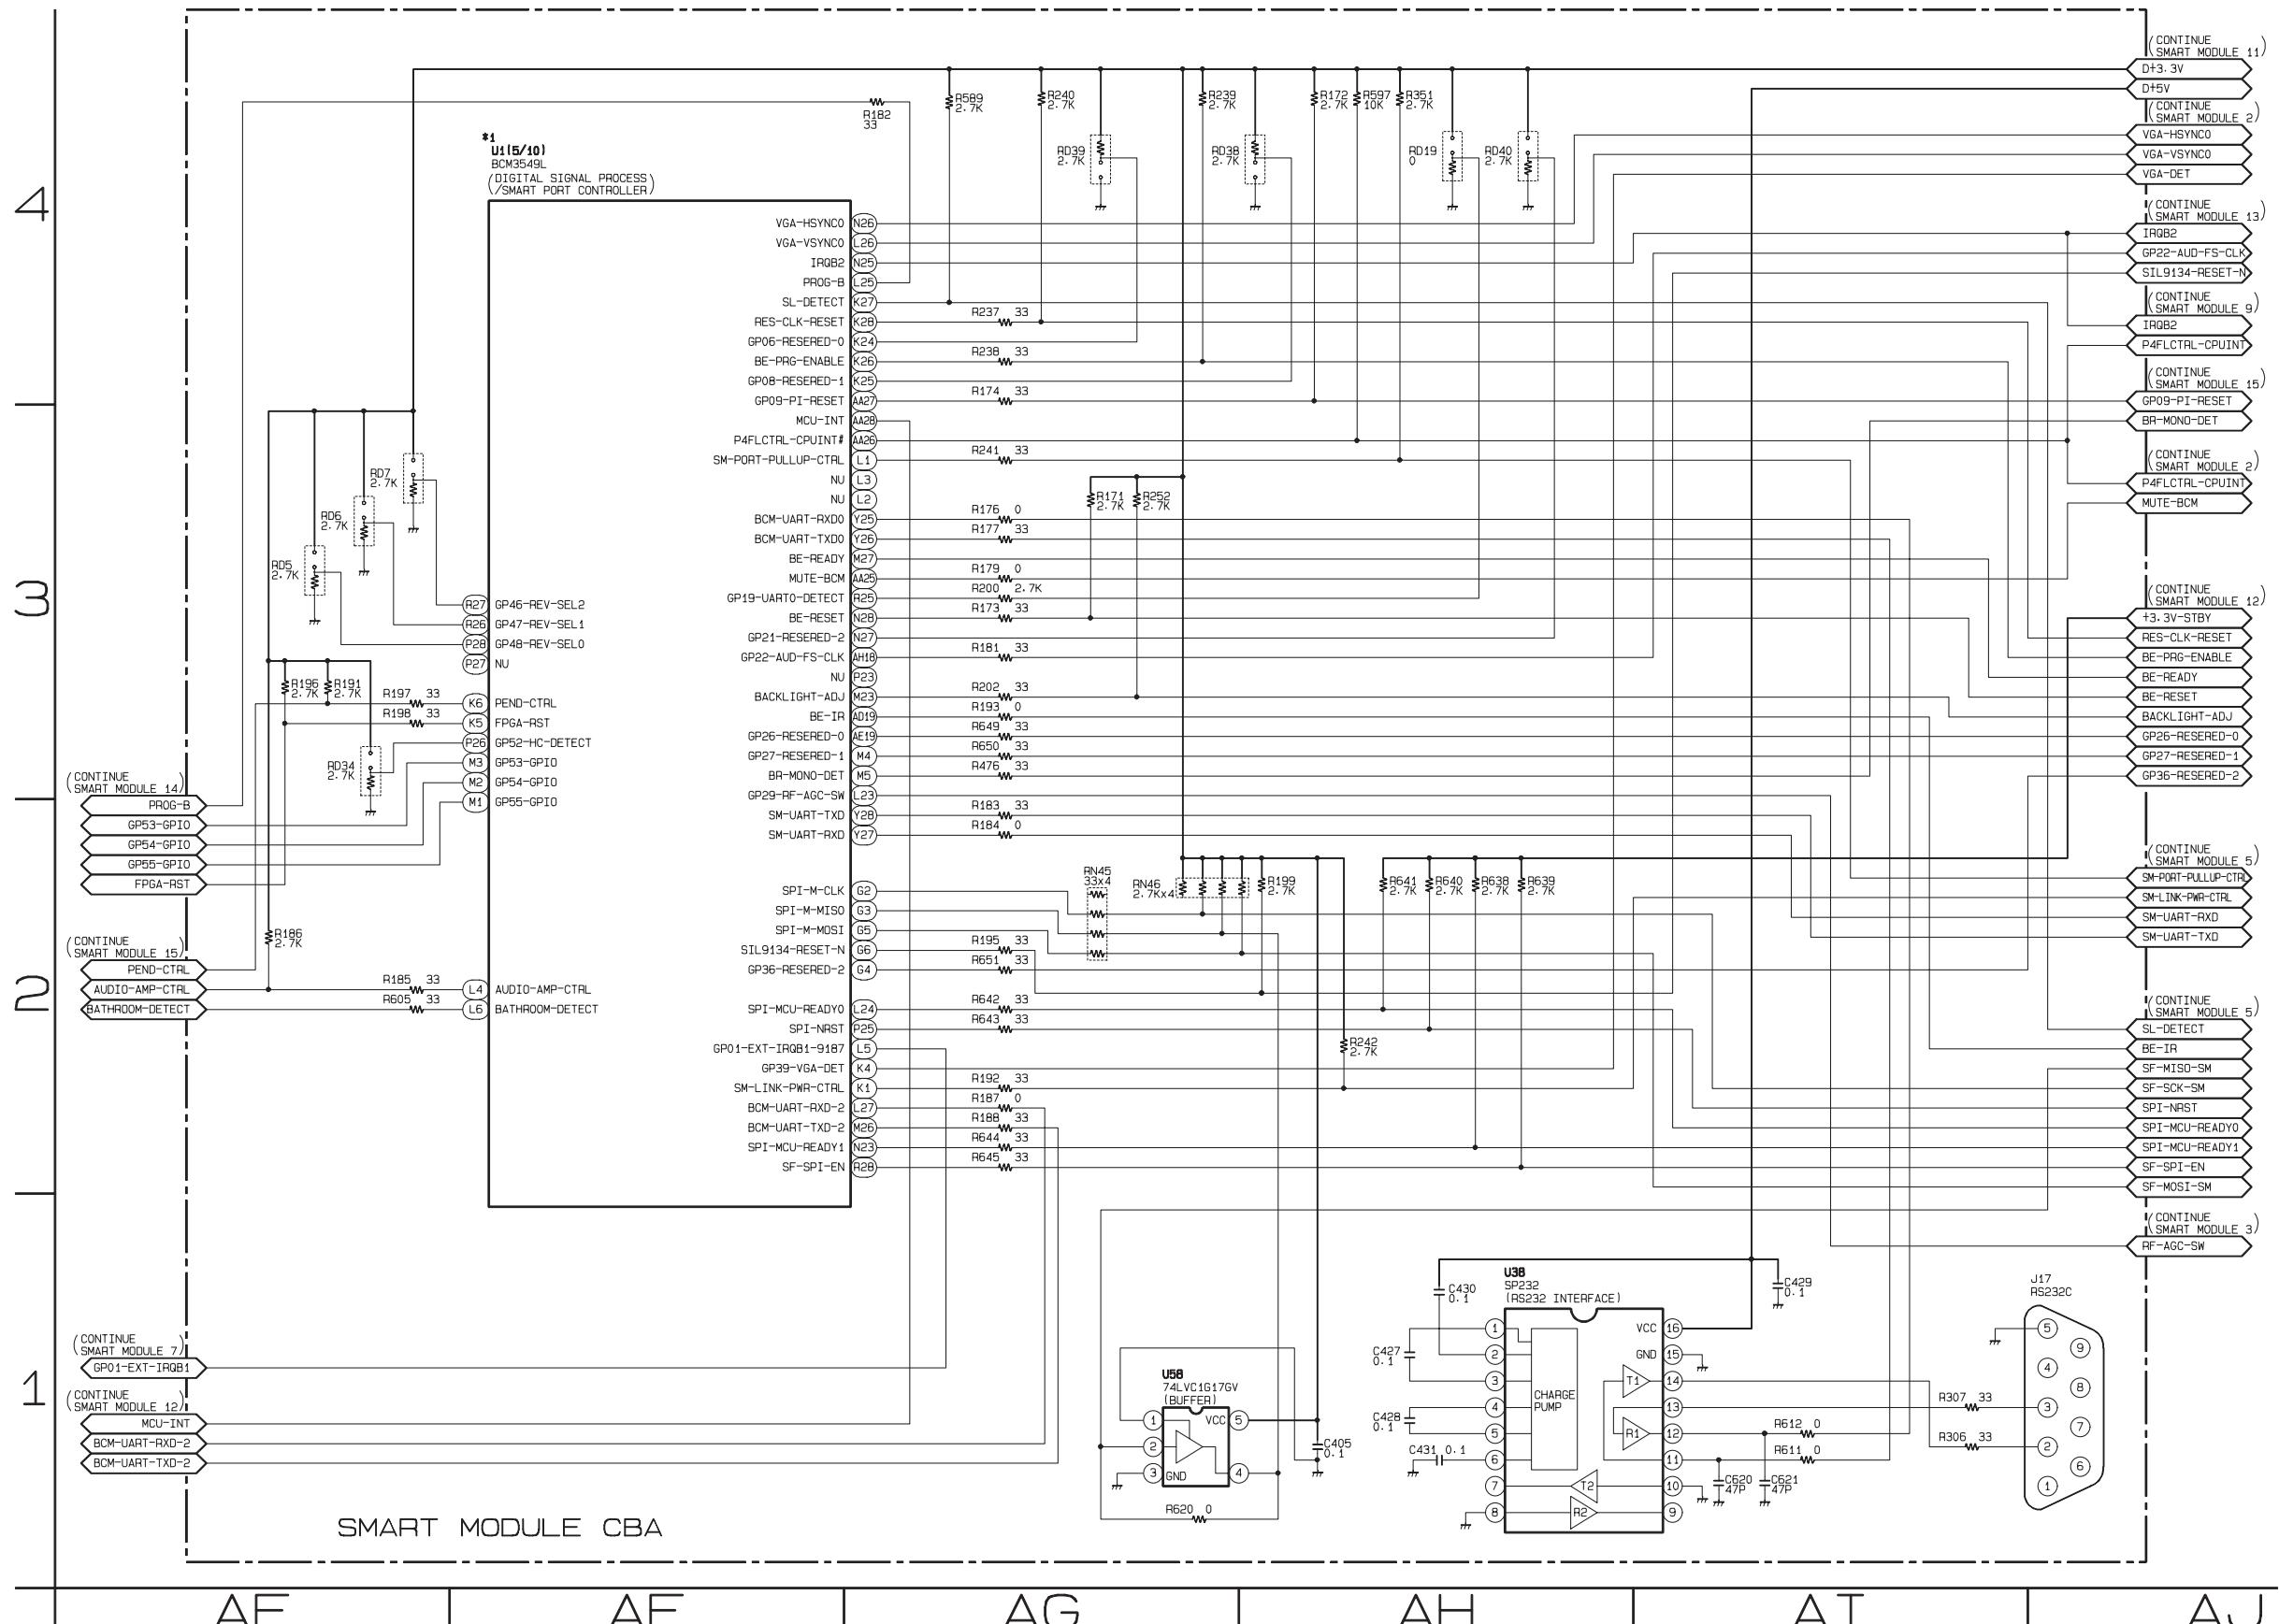

Smart Module 7 Schematic Diagram

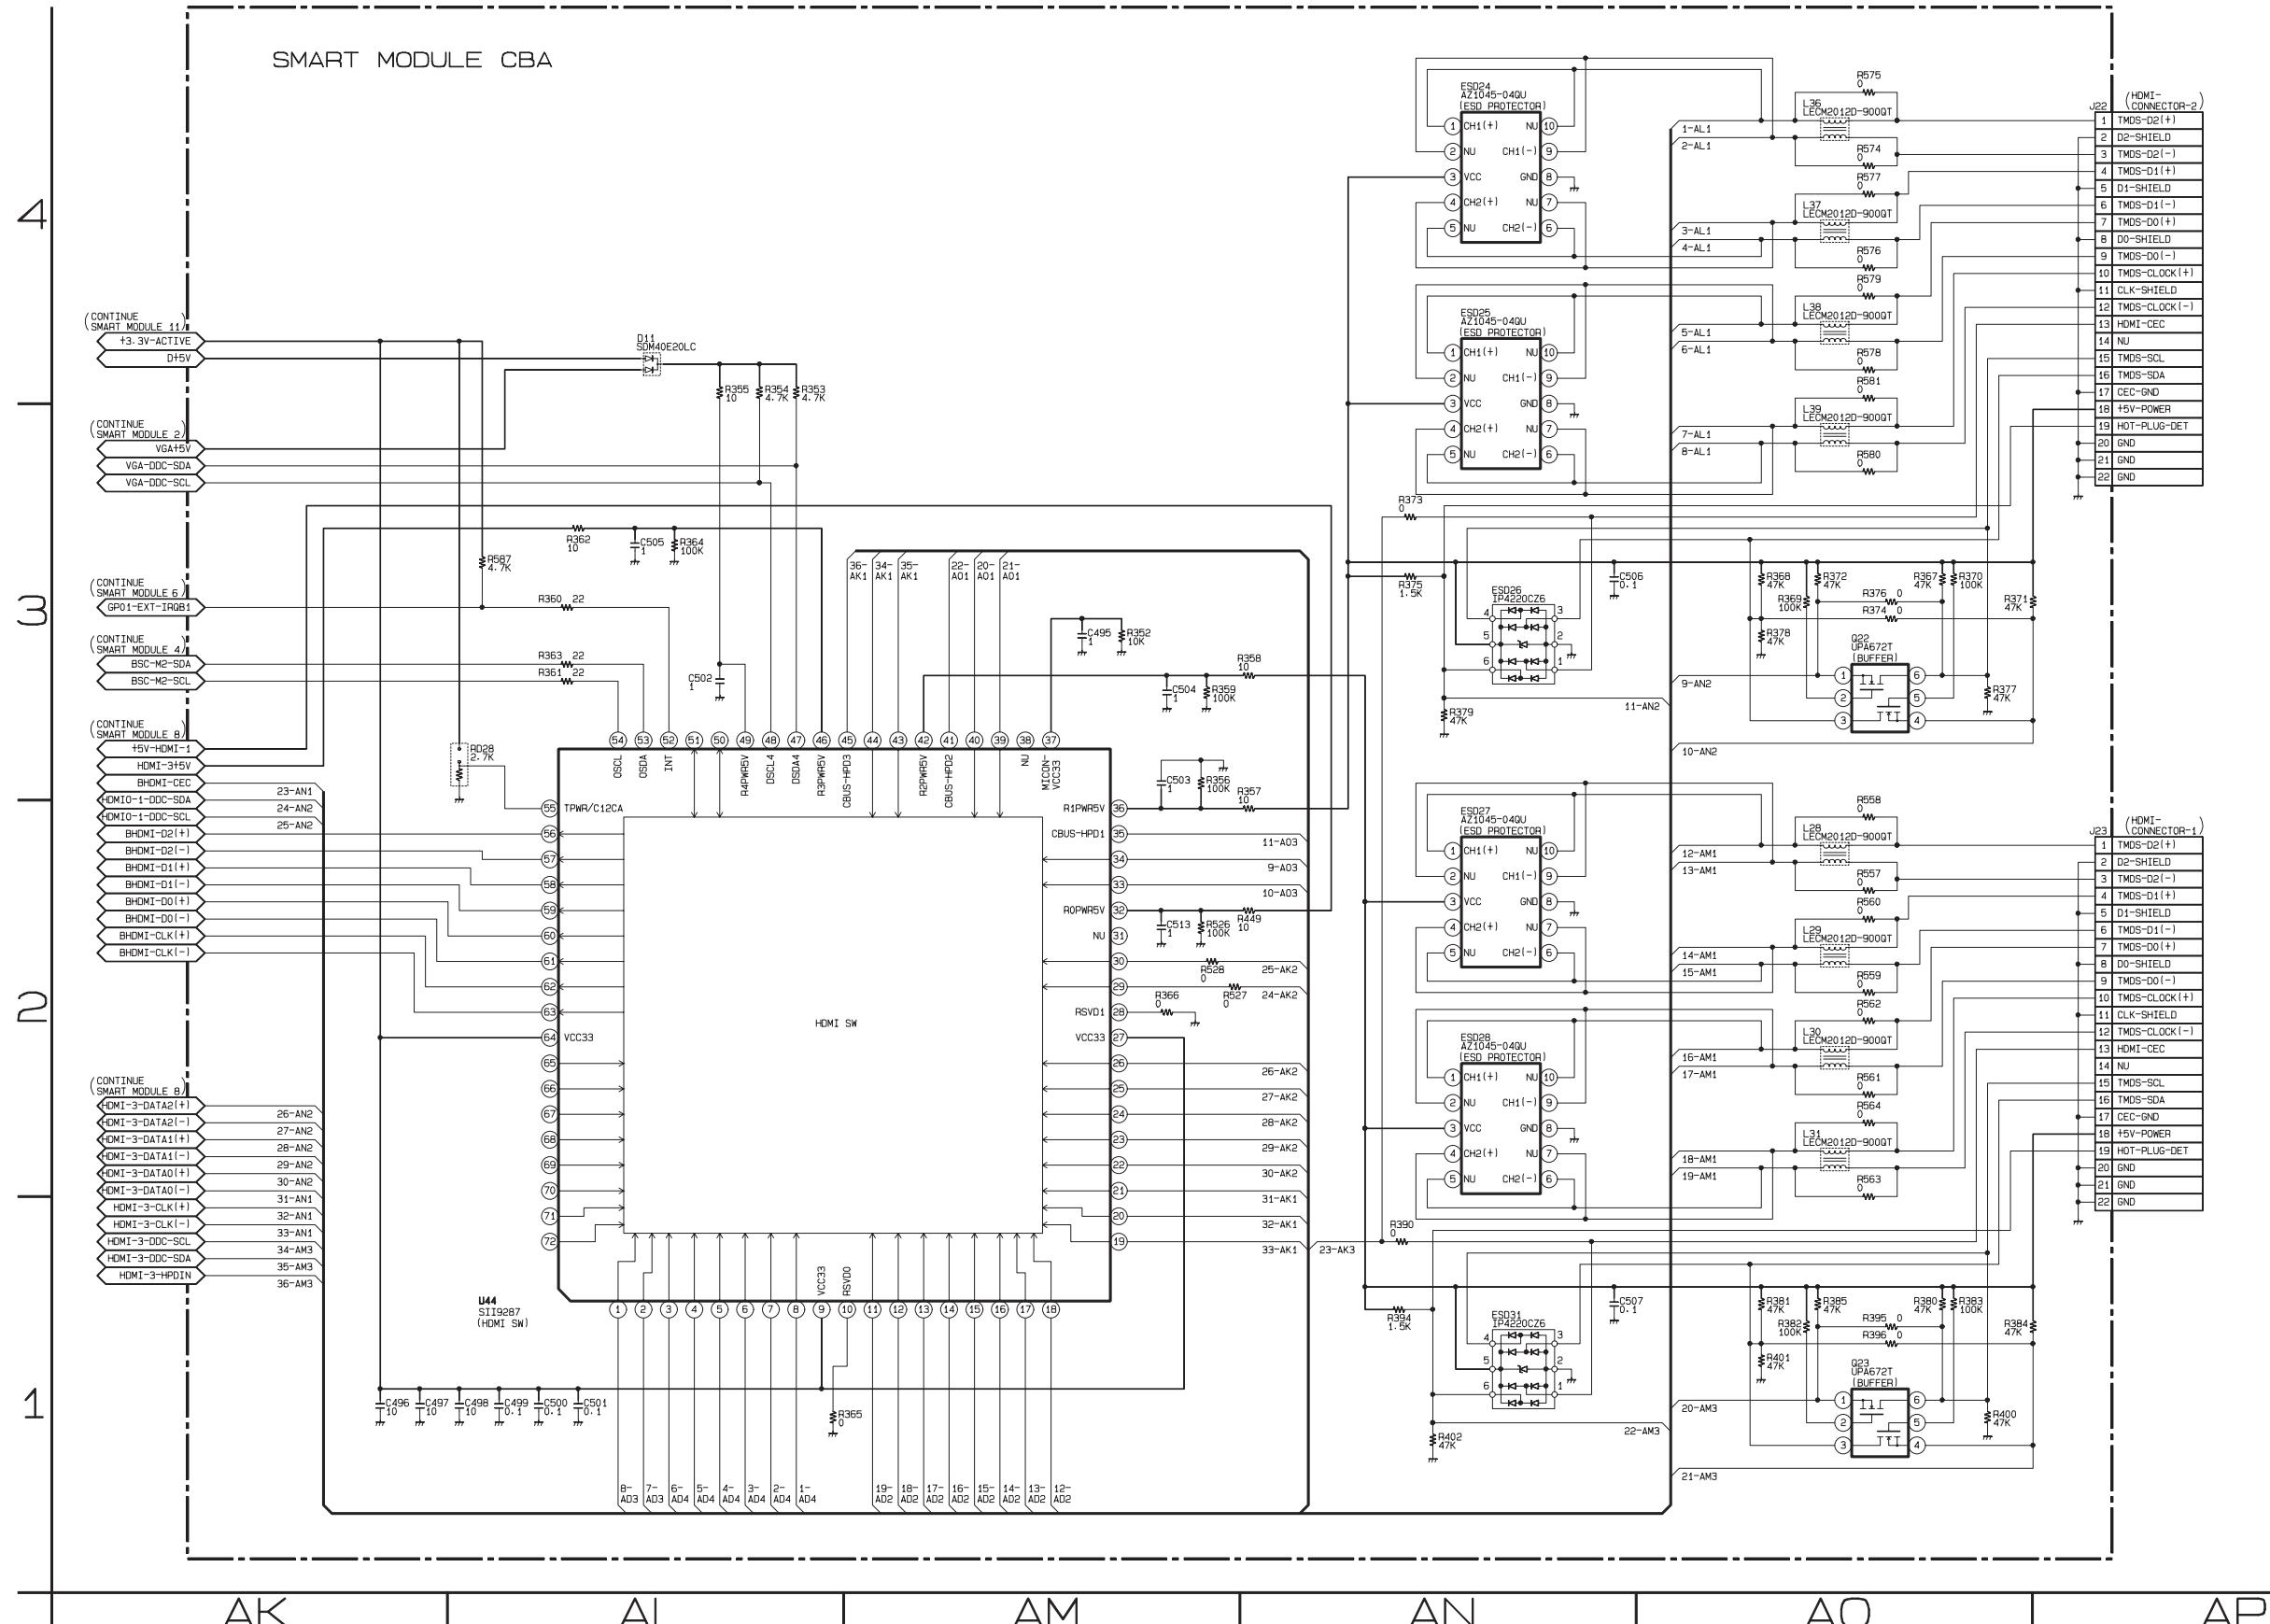


Smart Module 8 Schematic Diagram

*1 NOTE:

The order of pins shown in this diagram is different from that of actual U1.

U1 is divided into ten and shown as U1 (1/10) ~ U1 (10/10) in this Smart Module Schematic Diagram Section.

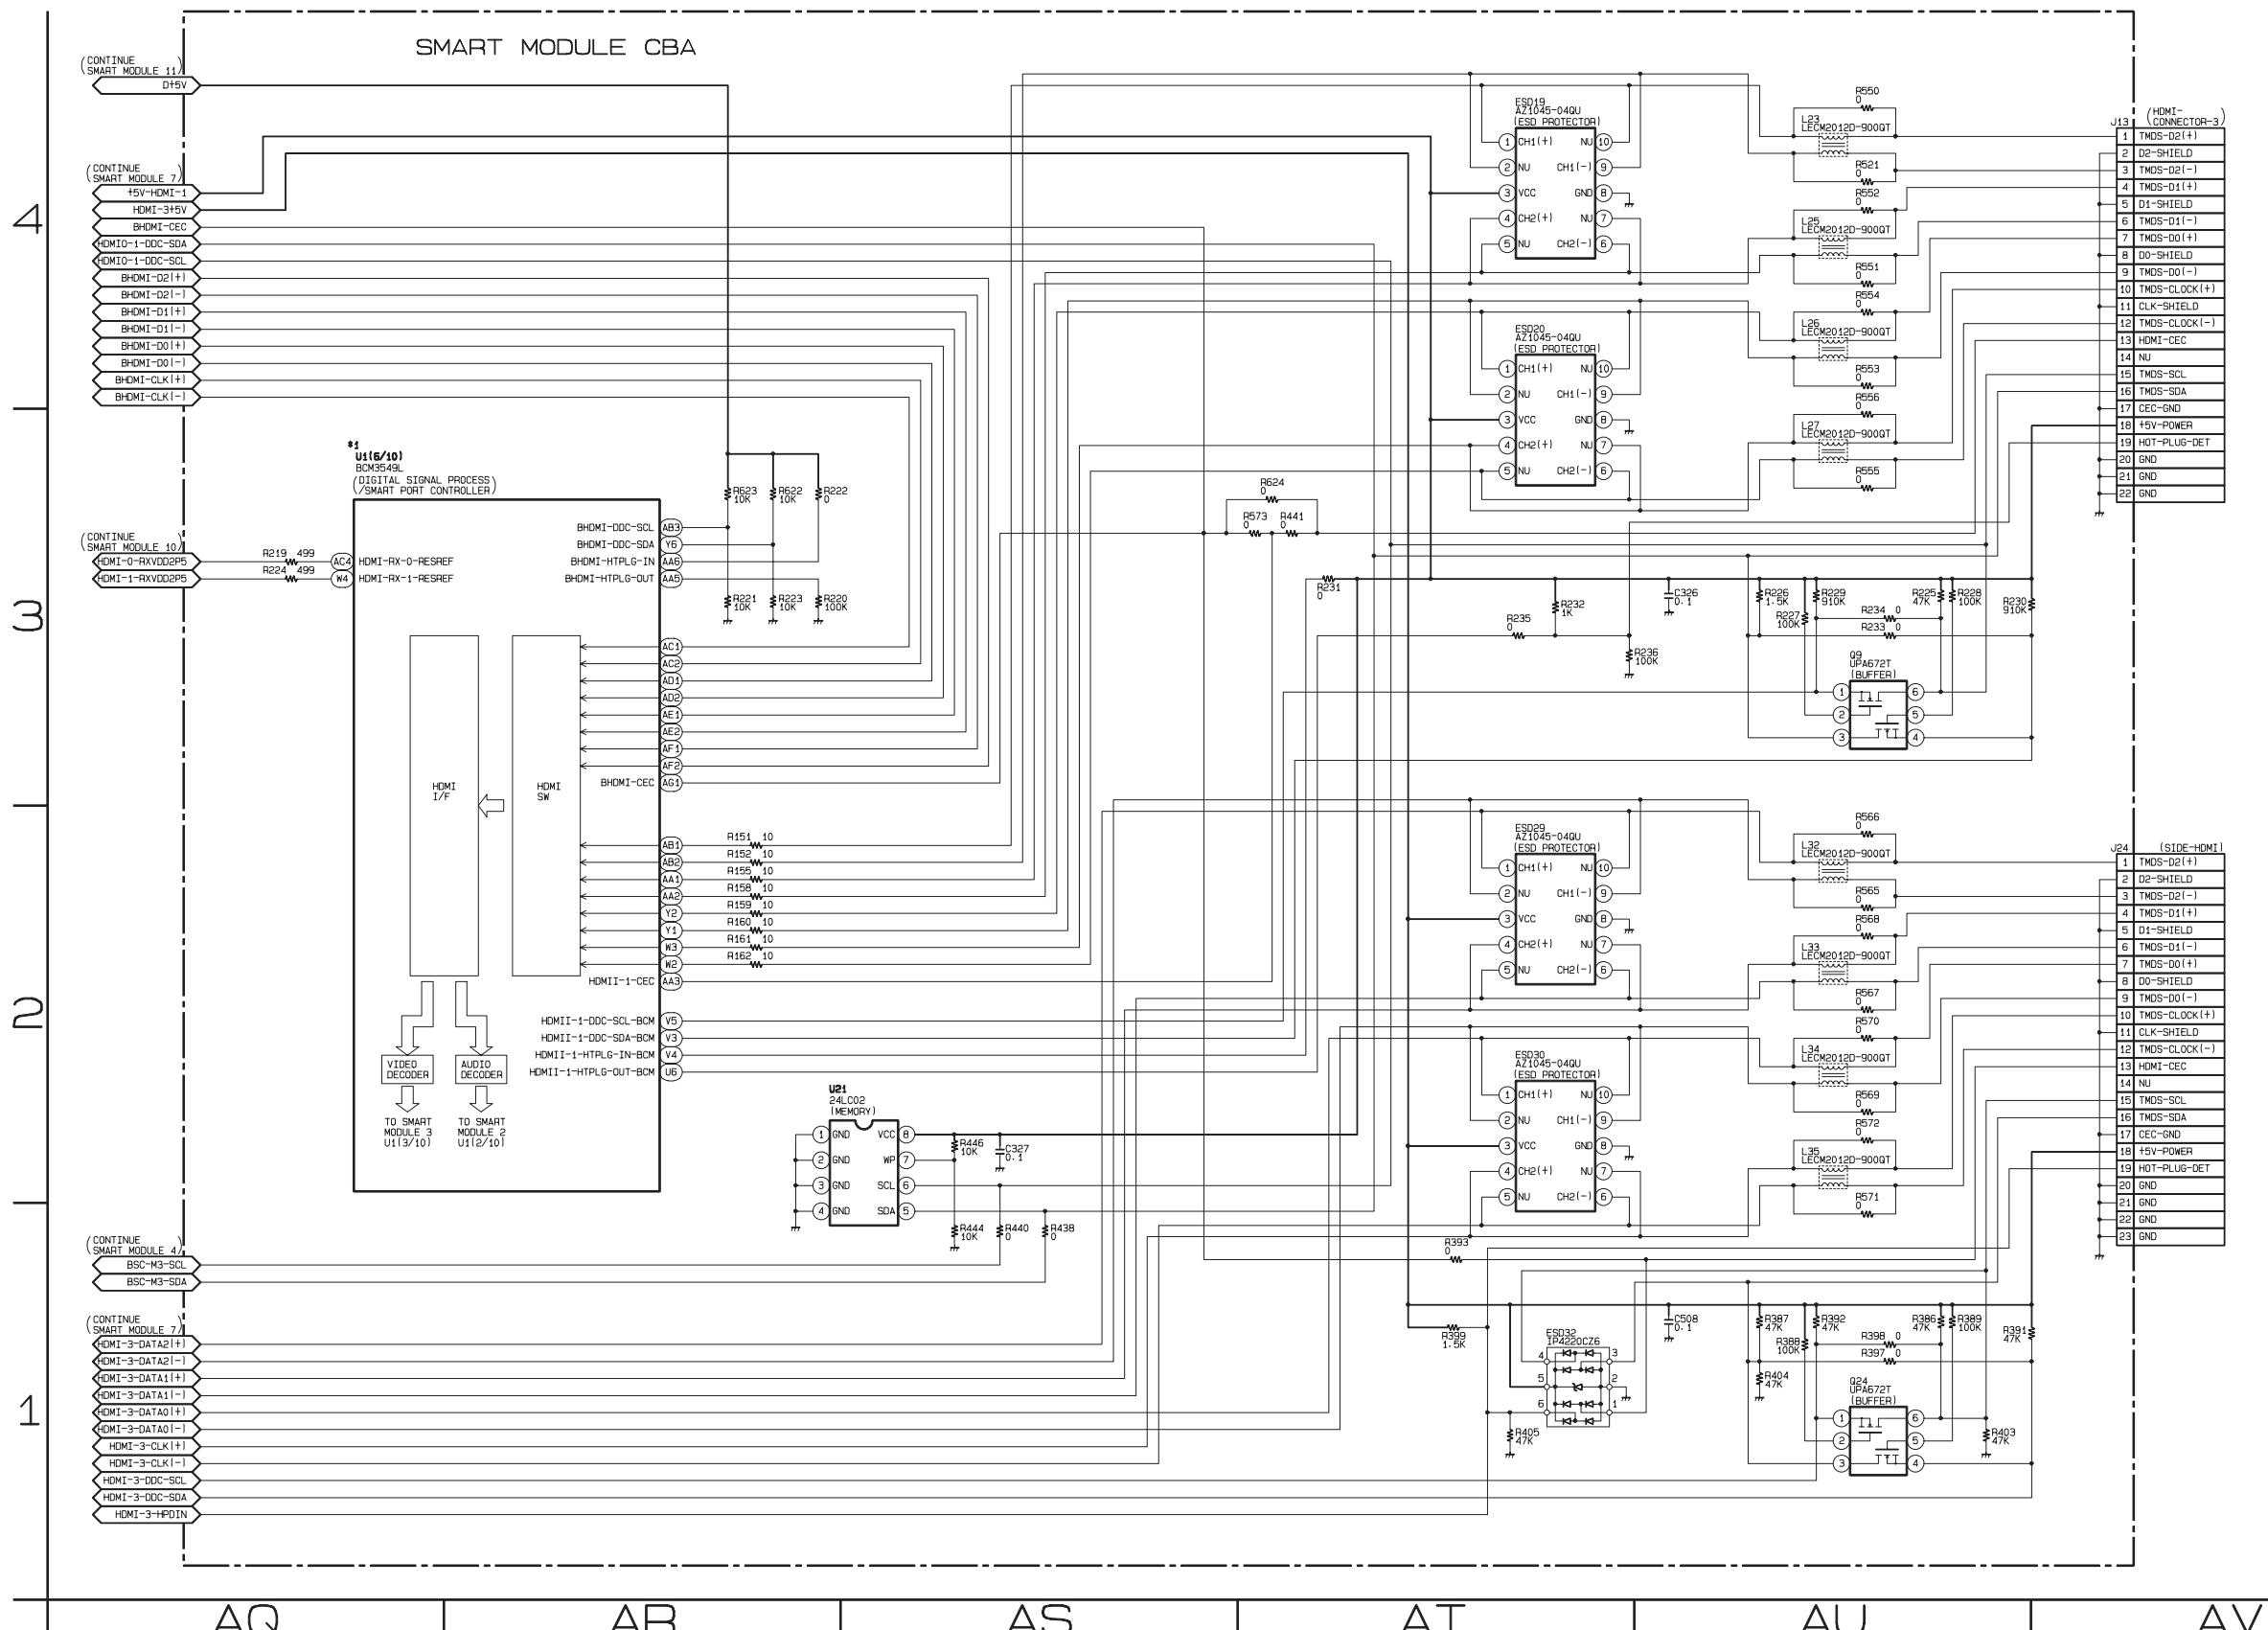


Smart Module 9 Schematic Diagram

*1 NOTE:

The order of pins shown in this diagram is different from that of actual U1.

U1 is divided into ten and shown as U1 (1/10) ~ U1 (10/10) in this Smart Module Schematic Diagram Section.

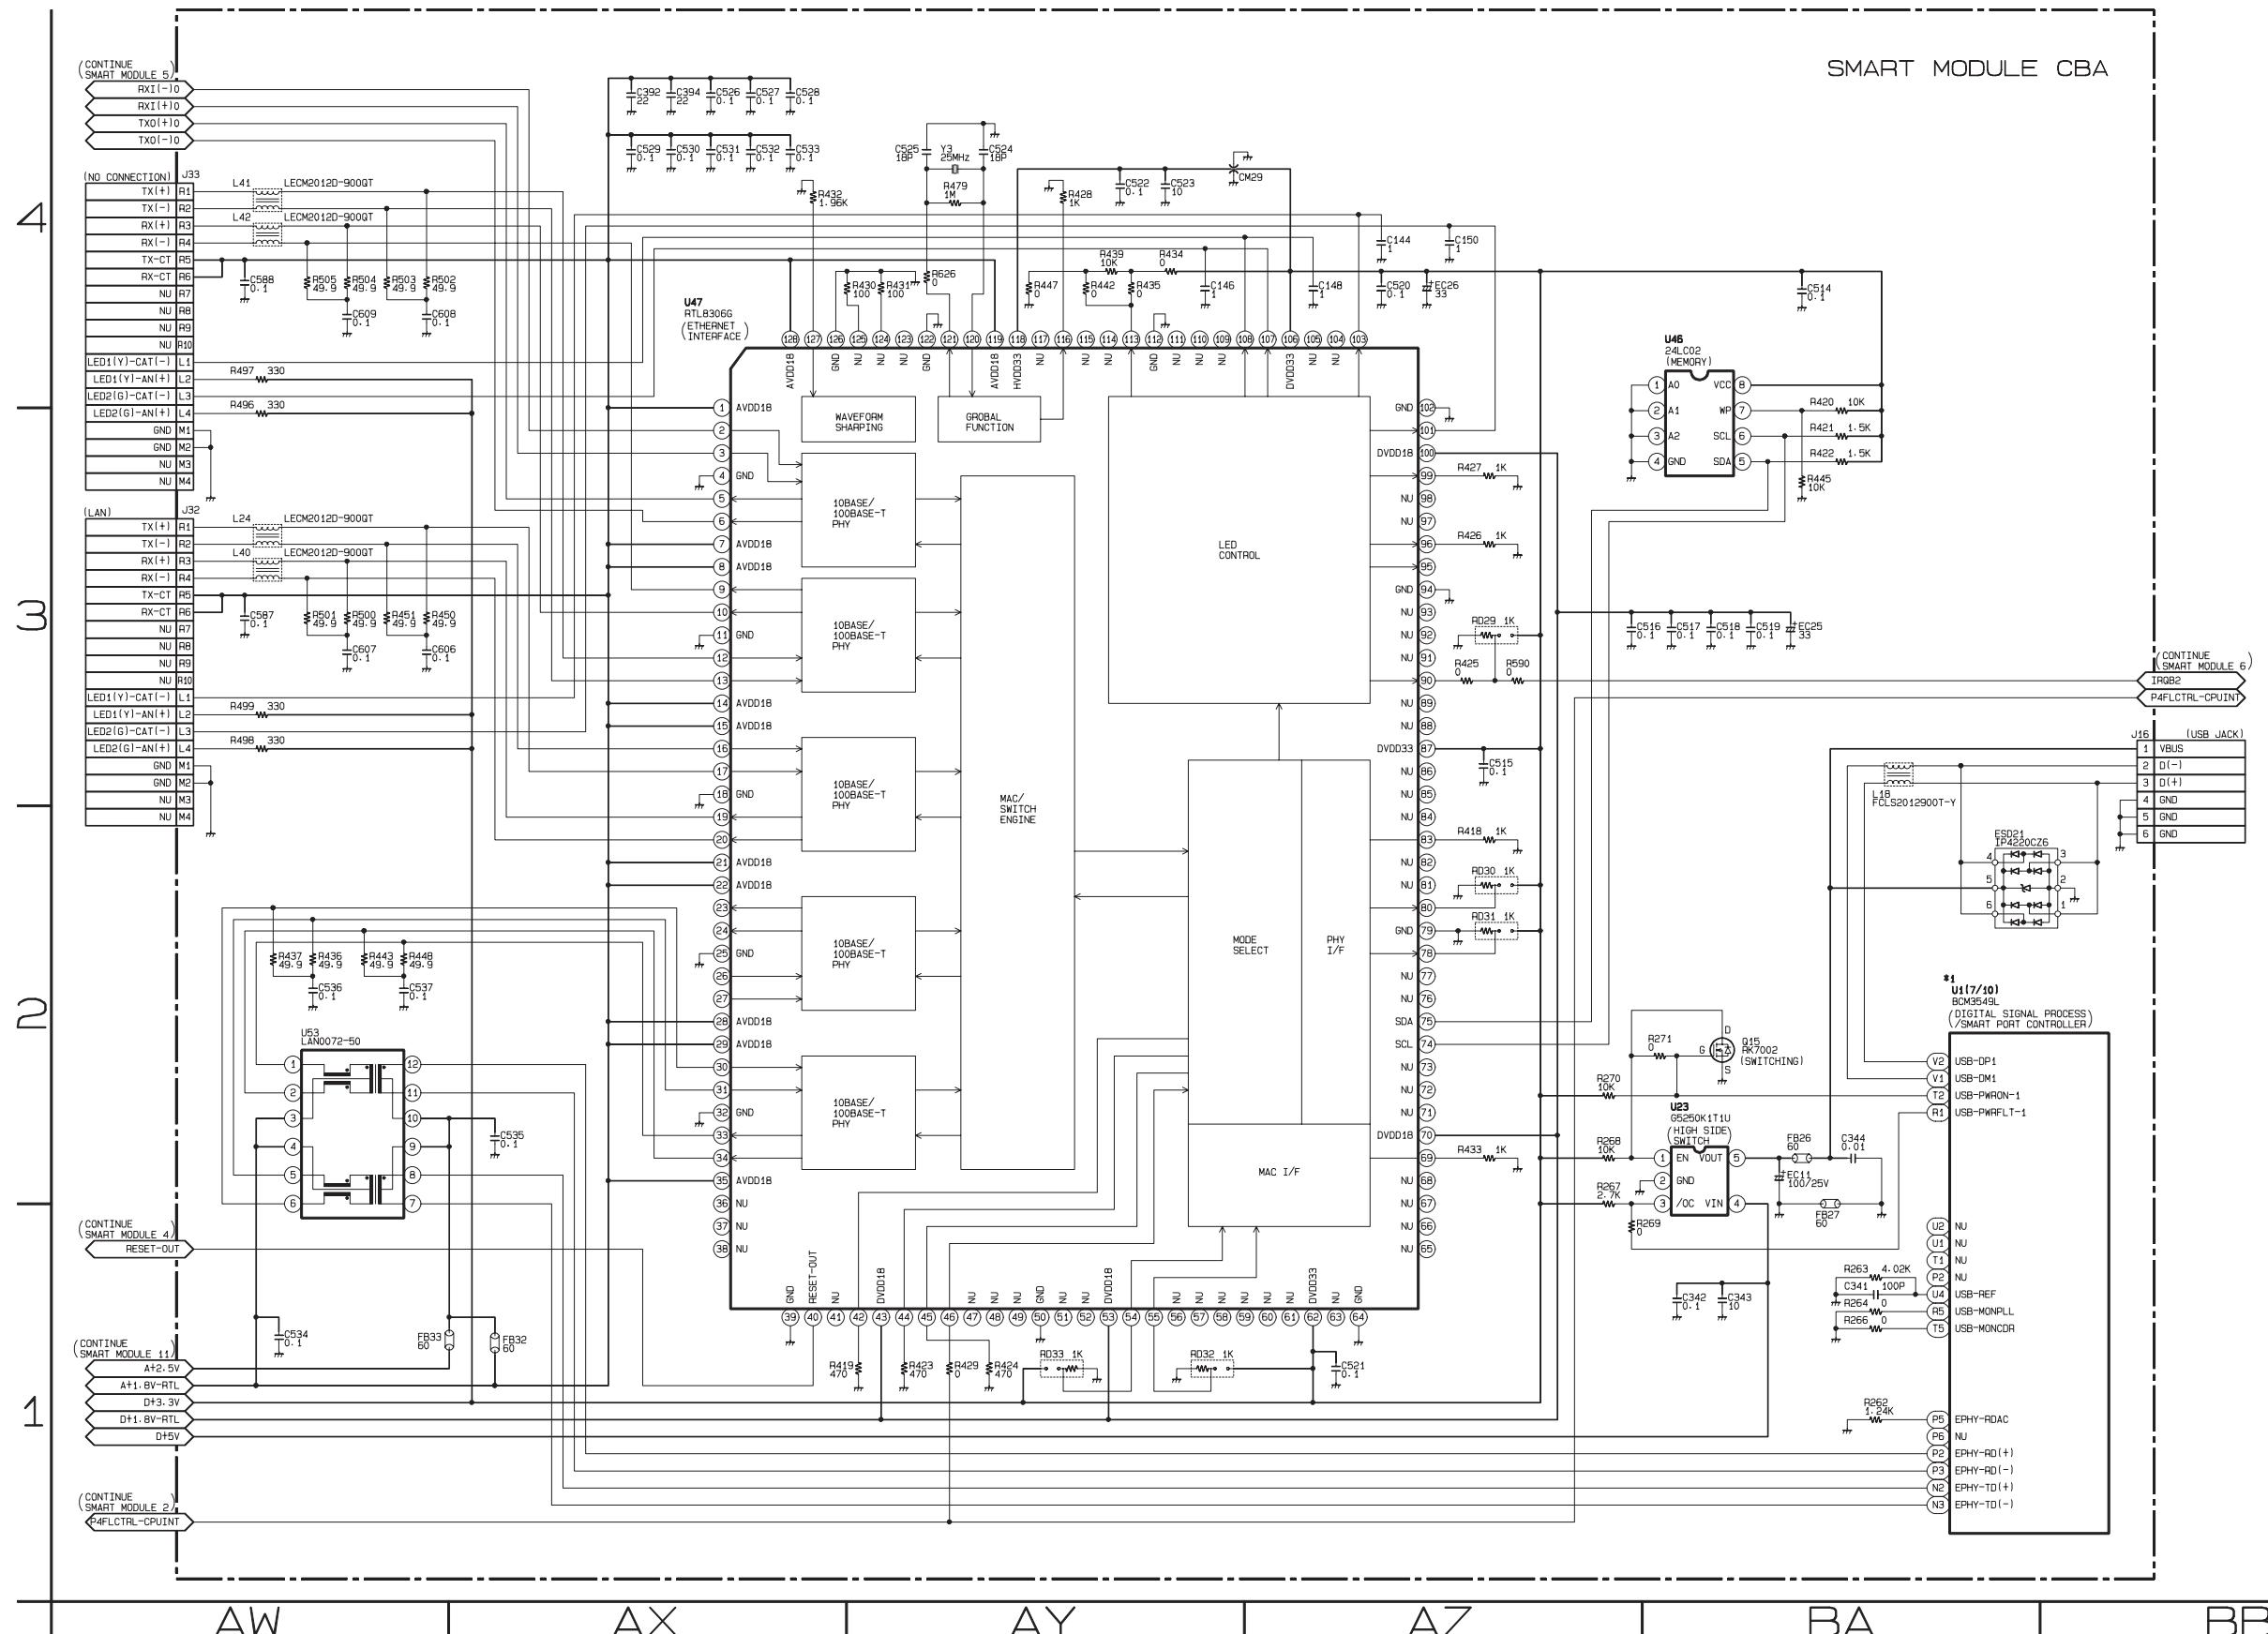


Smart Module 10 Schematic Diagram


*1 NOTE:

The order of pins shown in this diagram is different from that of actual U1.


U1 is divided into ten and shown as U1 (1/10) ~ U1 (10/10) in this Smart Module Schematic Diagram Section.

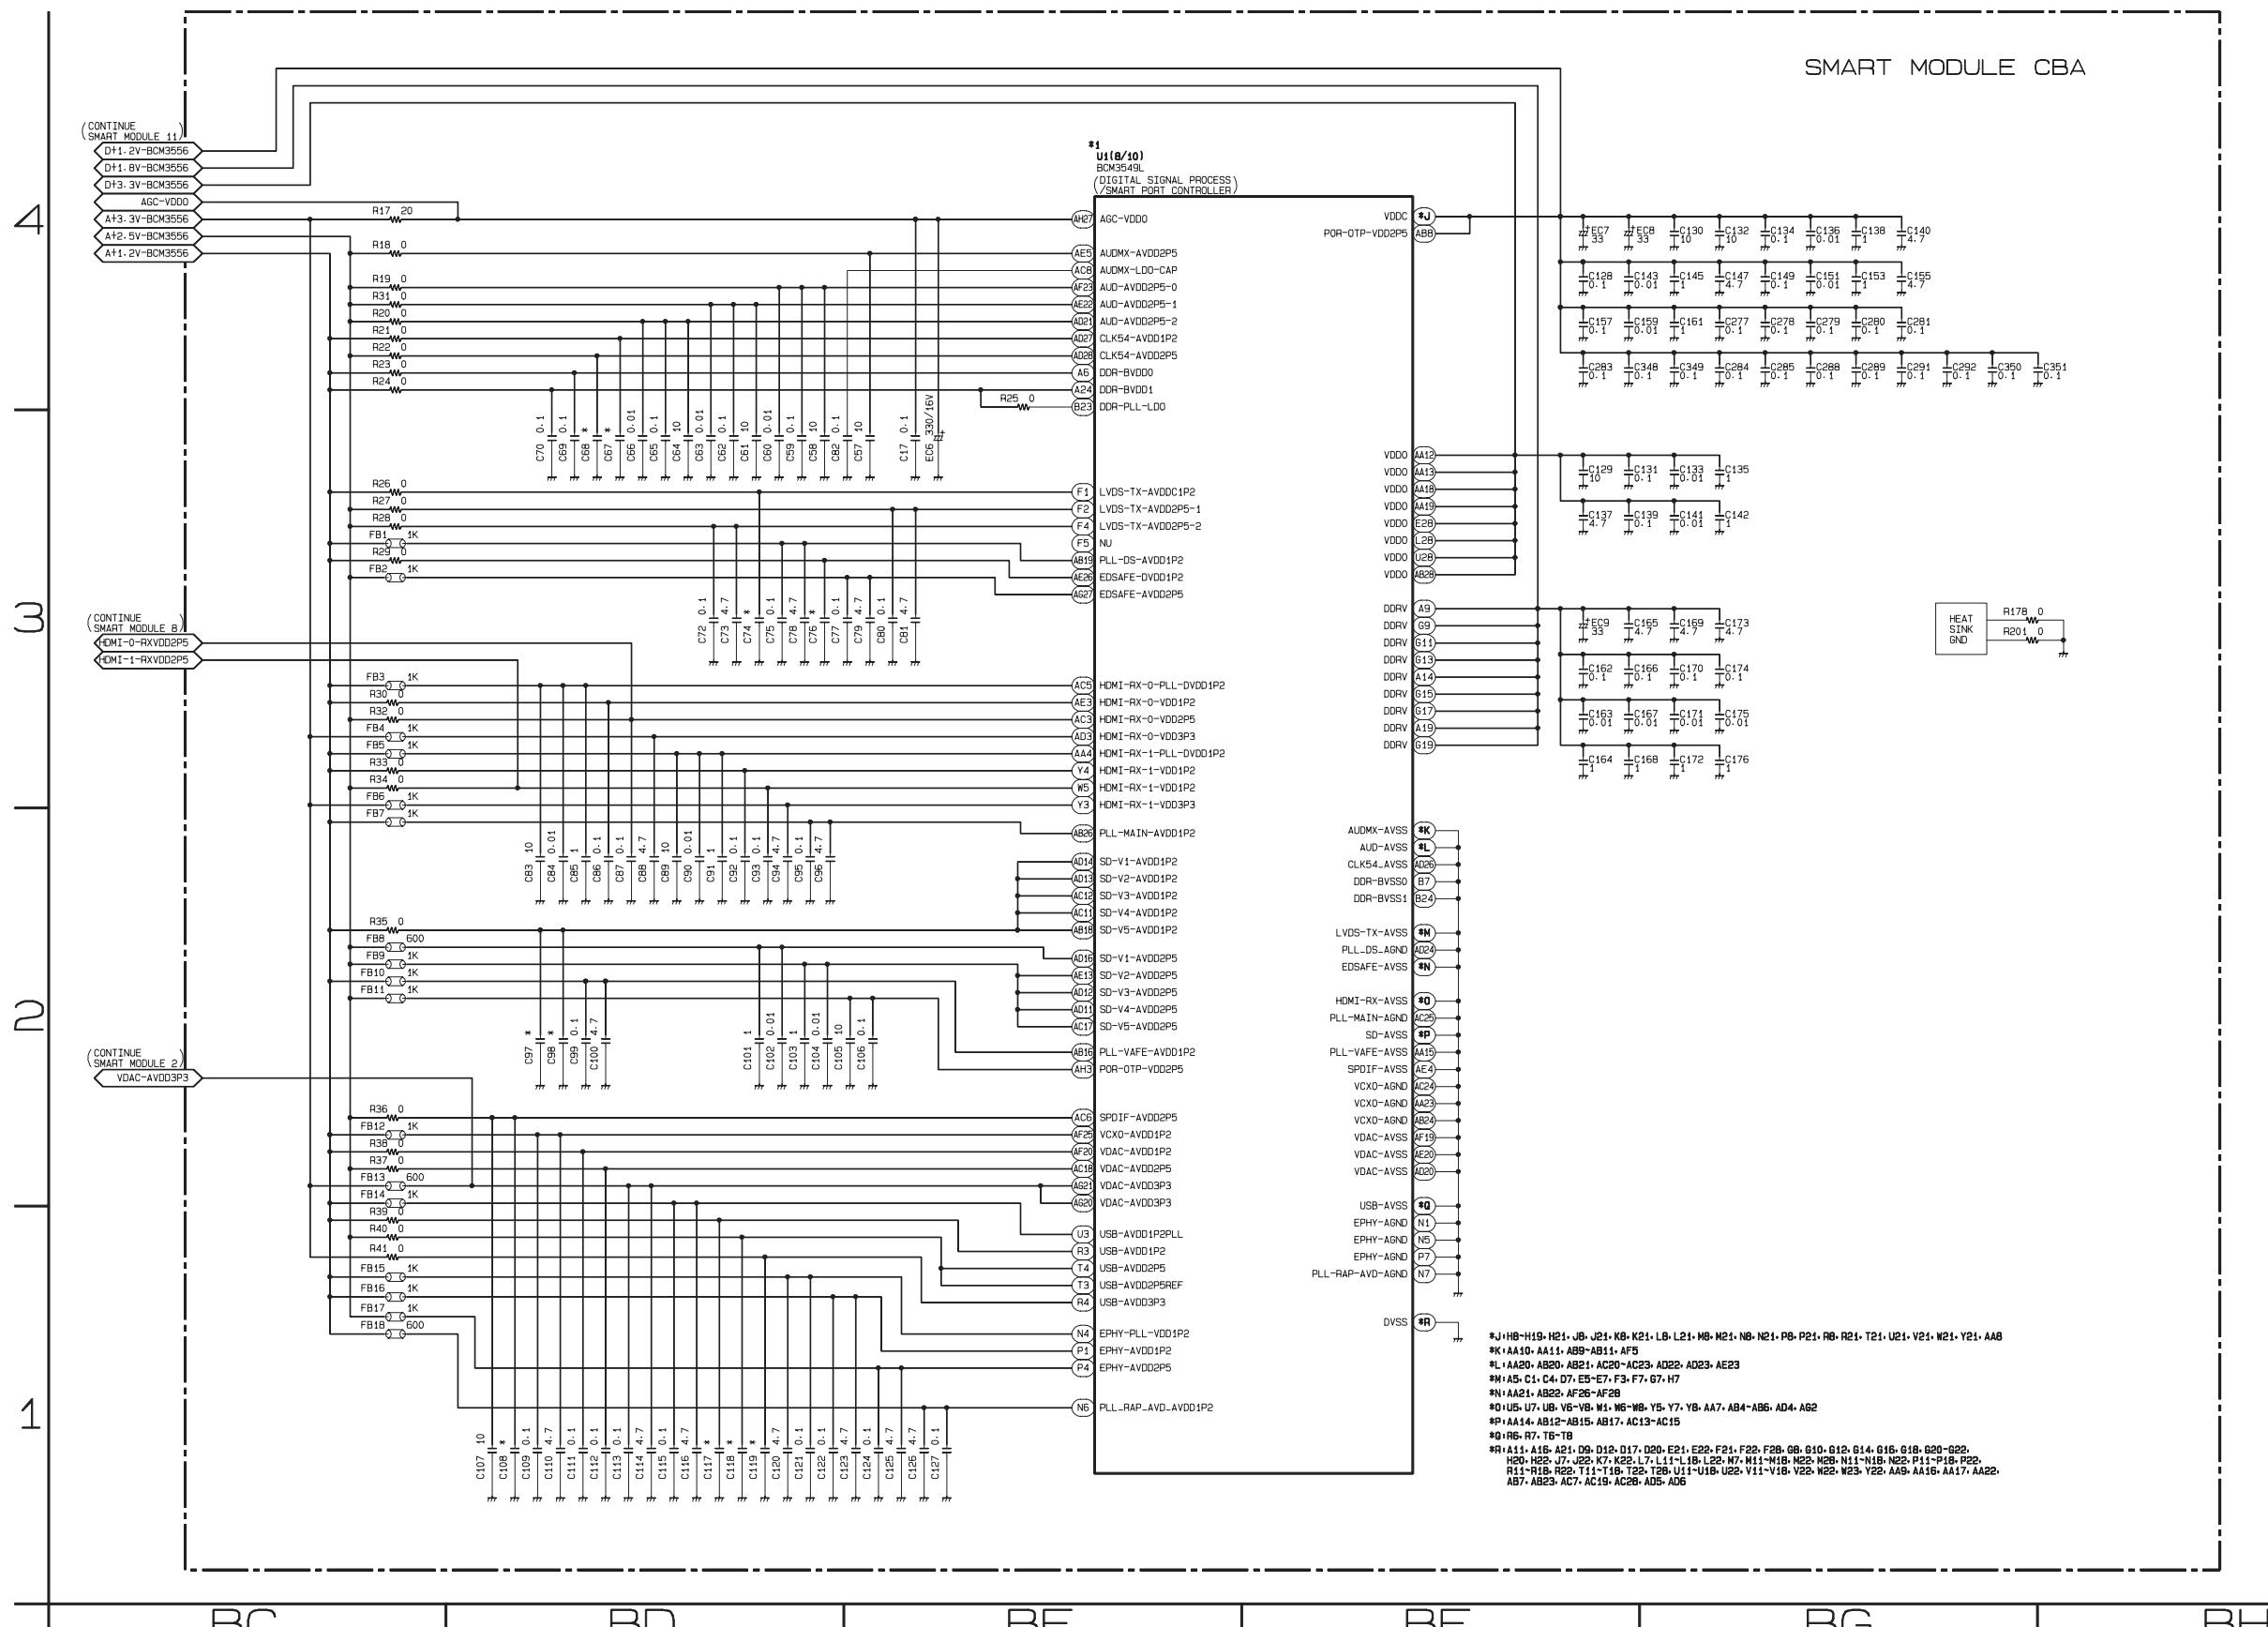


Smart Module 11 Schematic Diagram

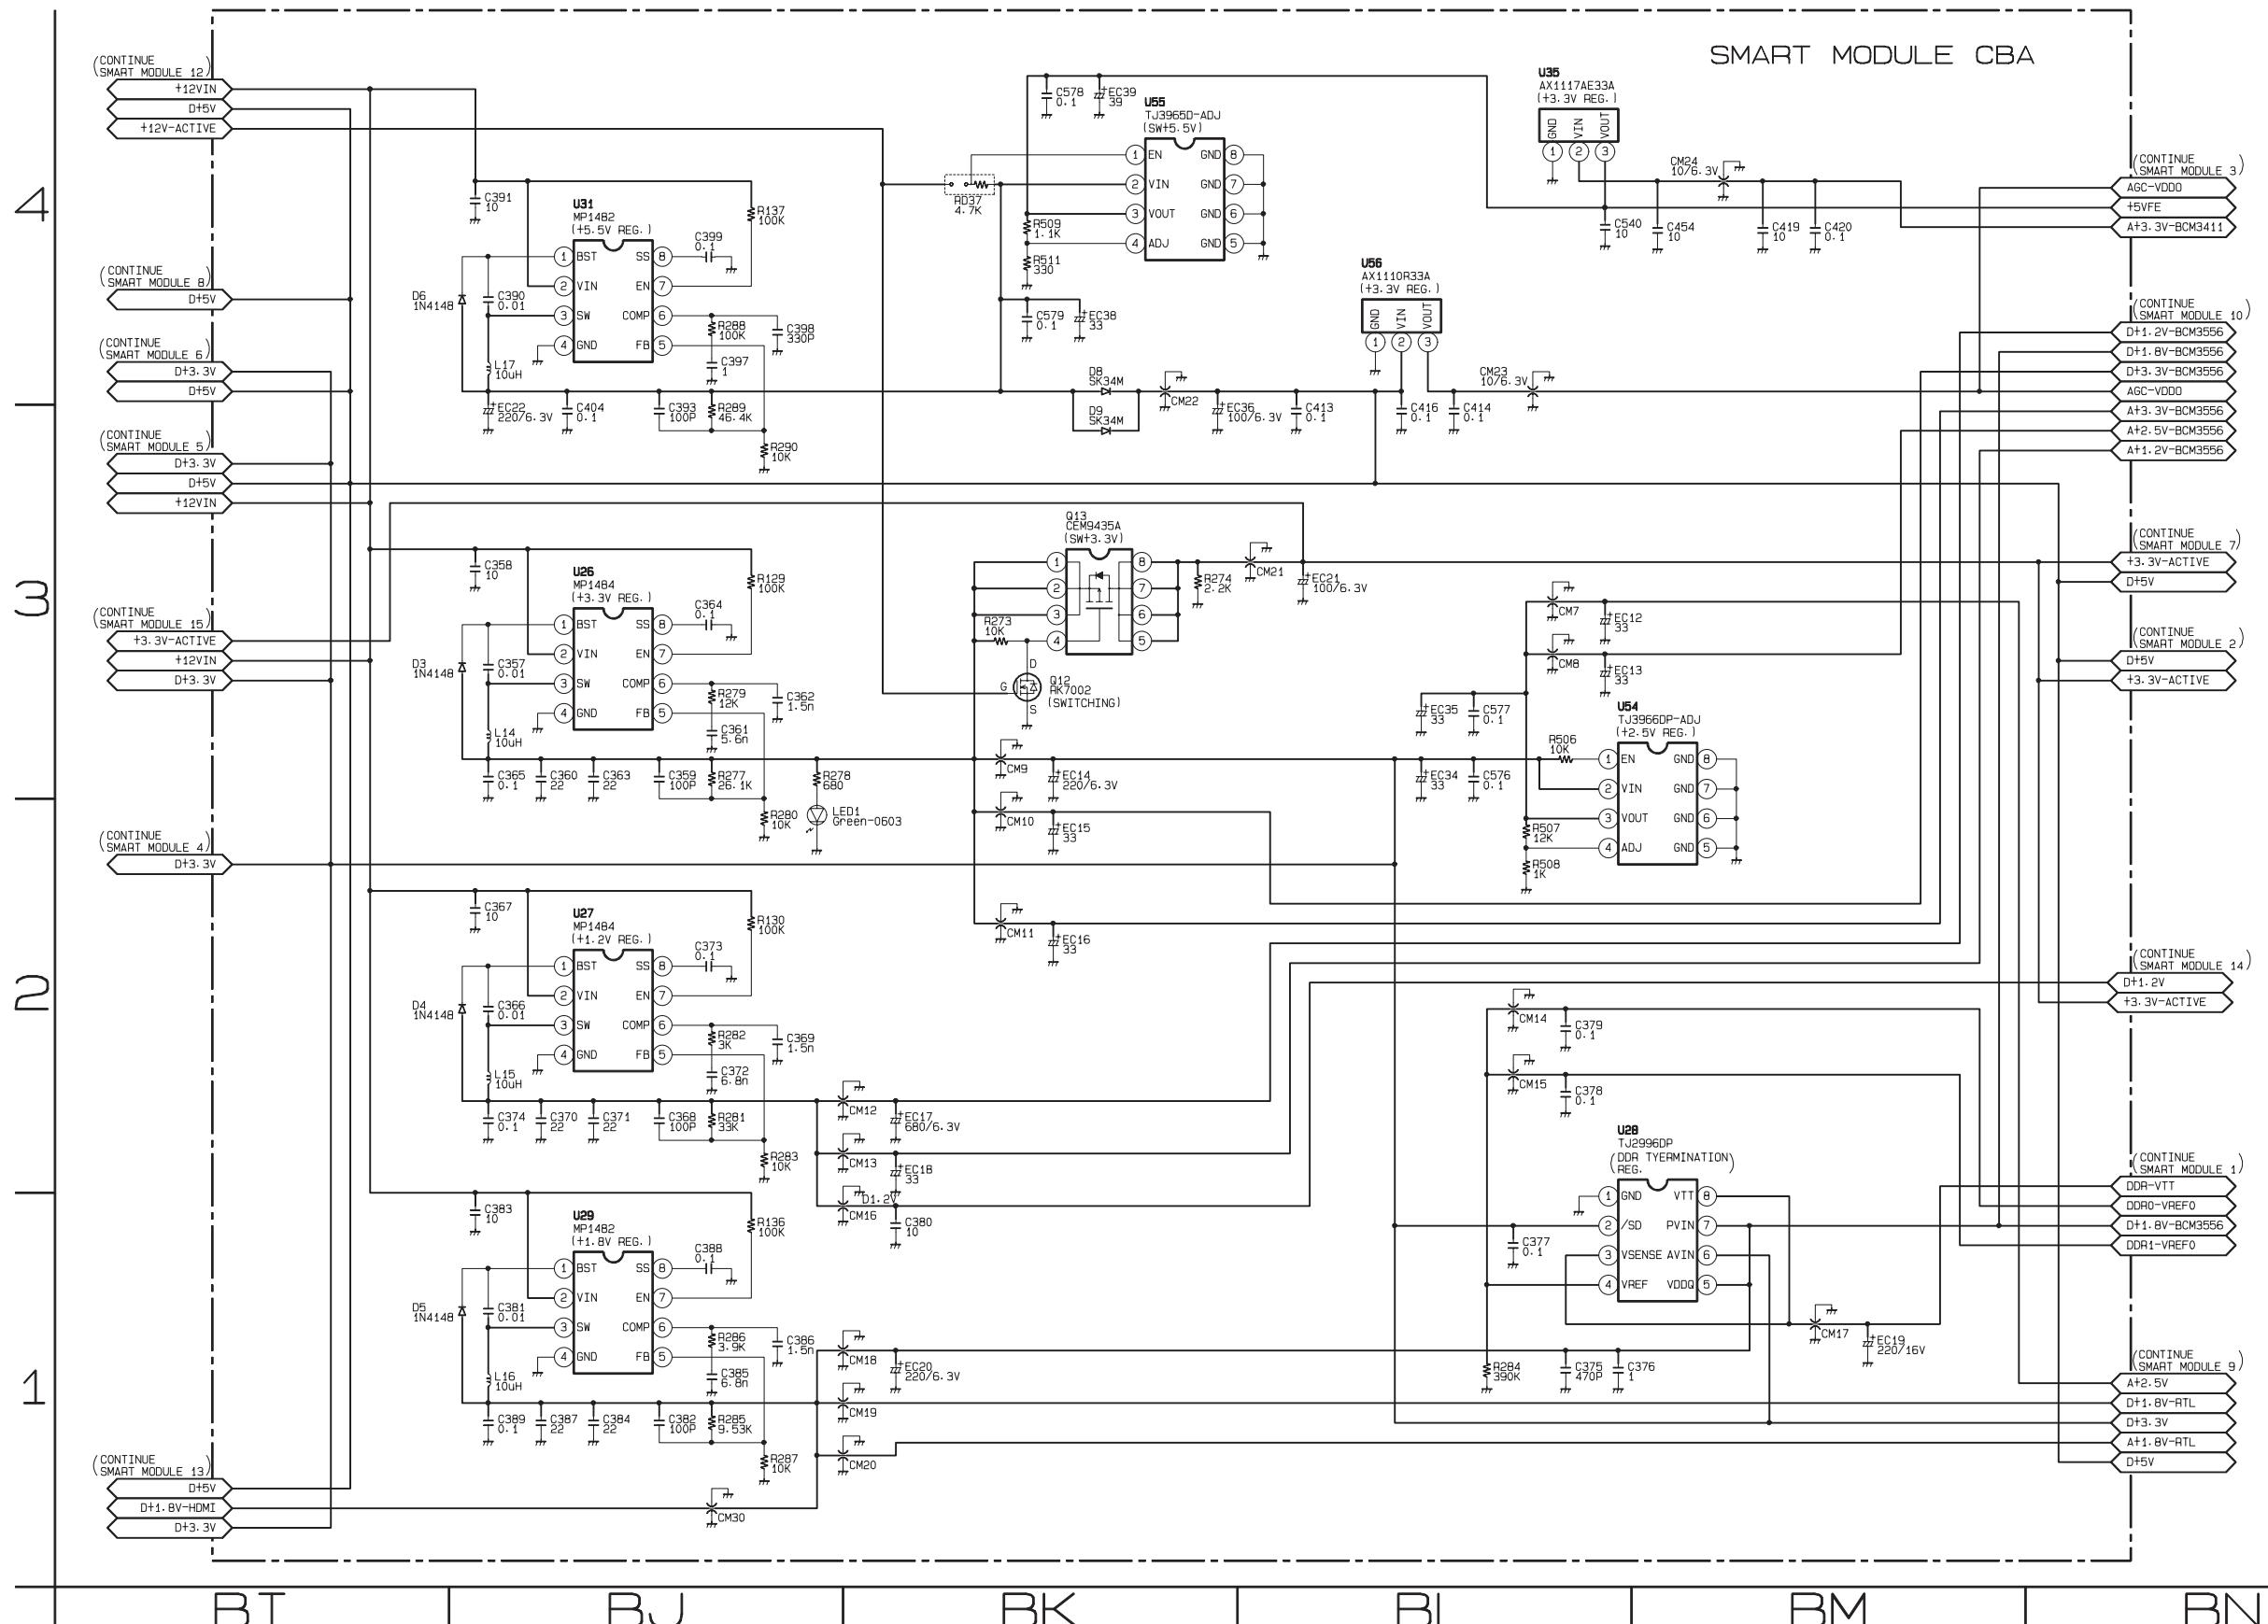

Smart Module 12 Schematic Diagram

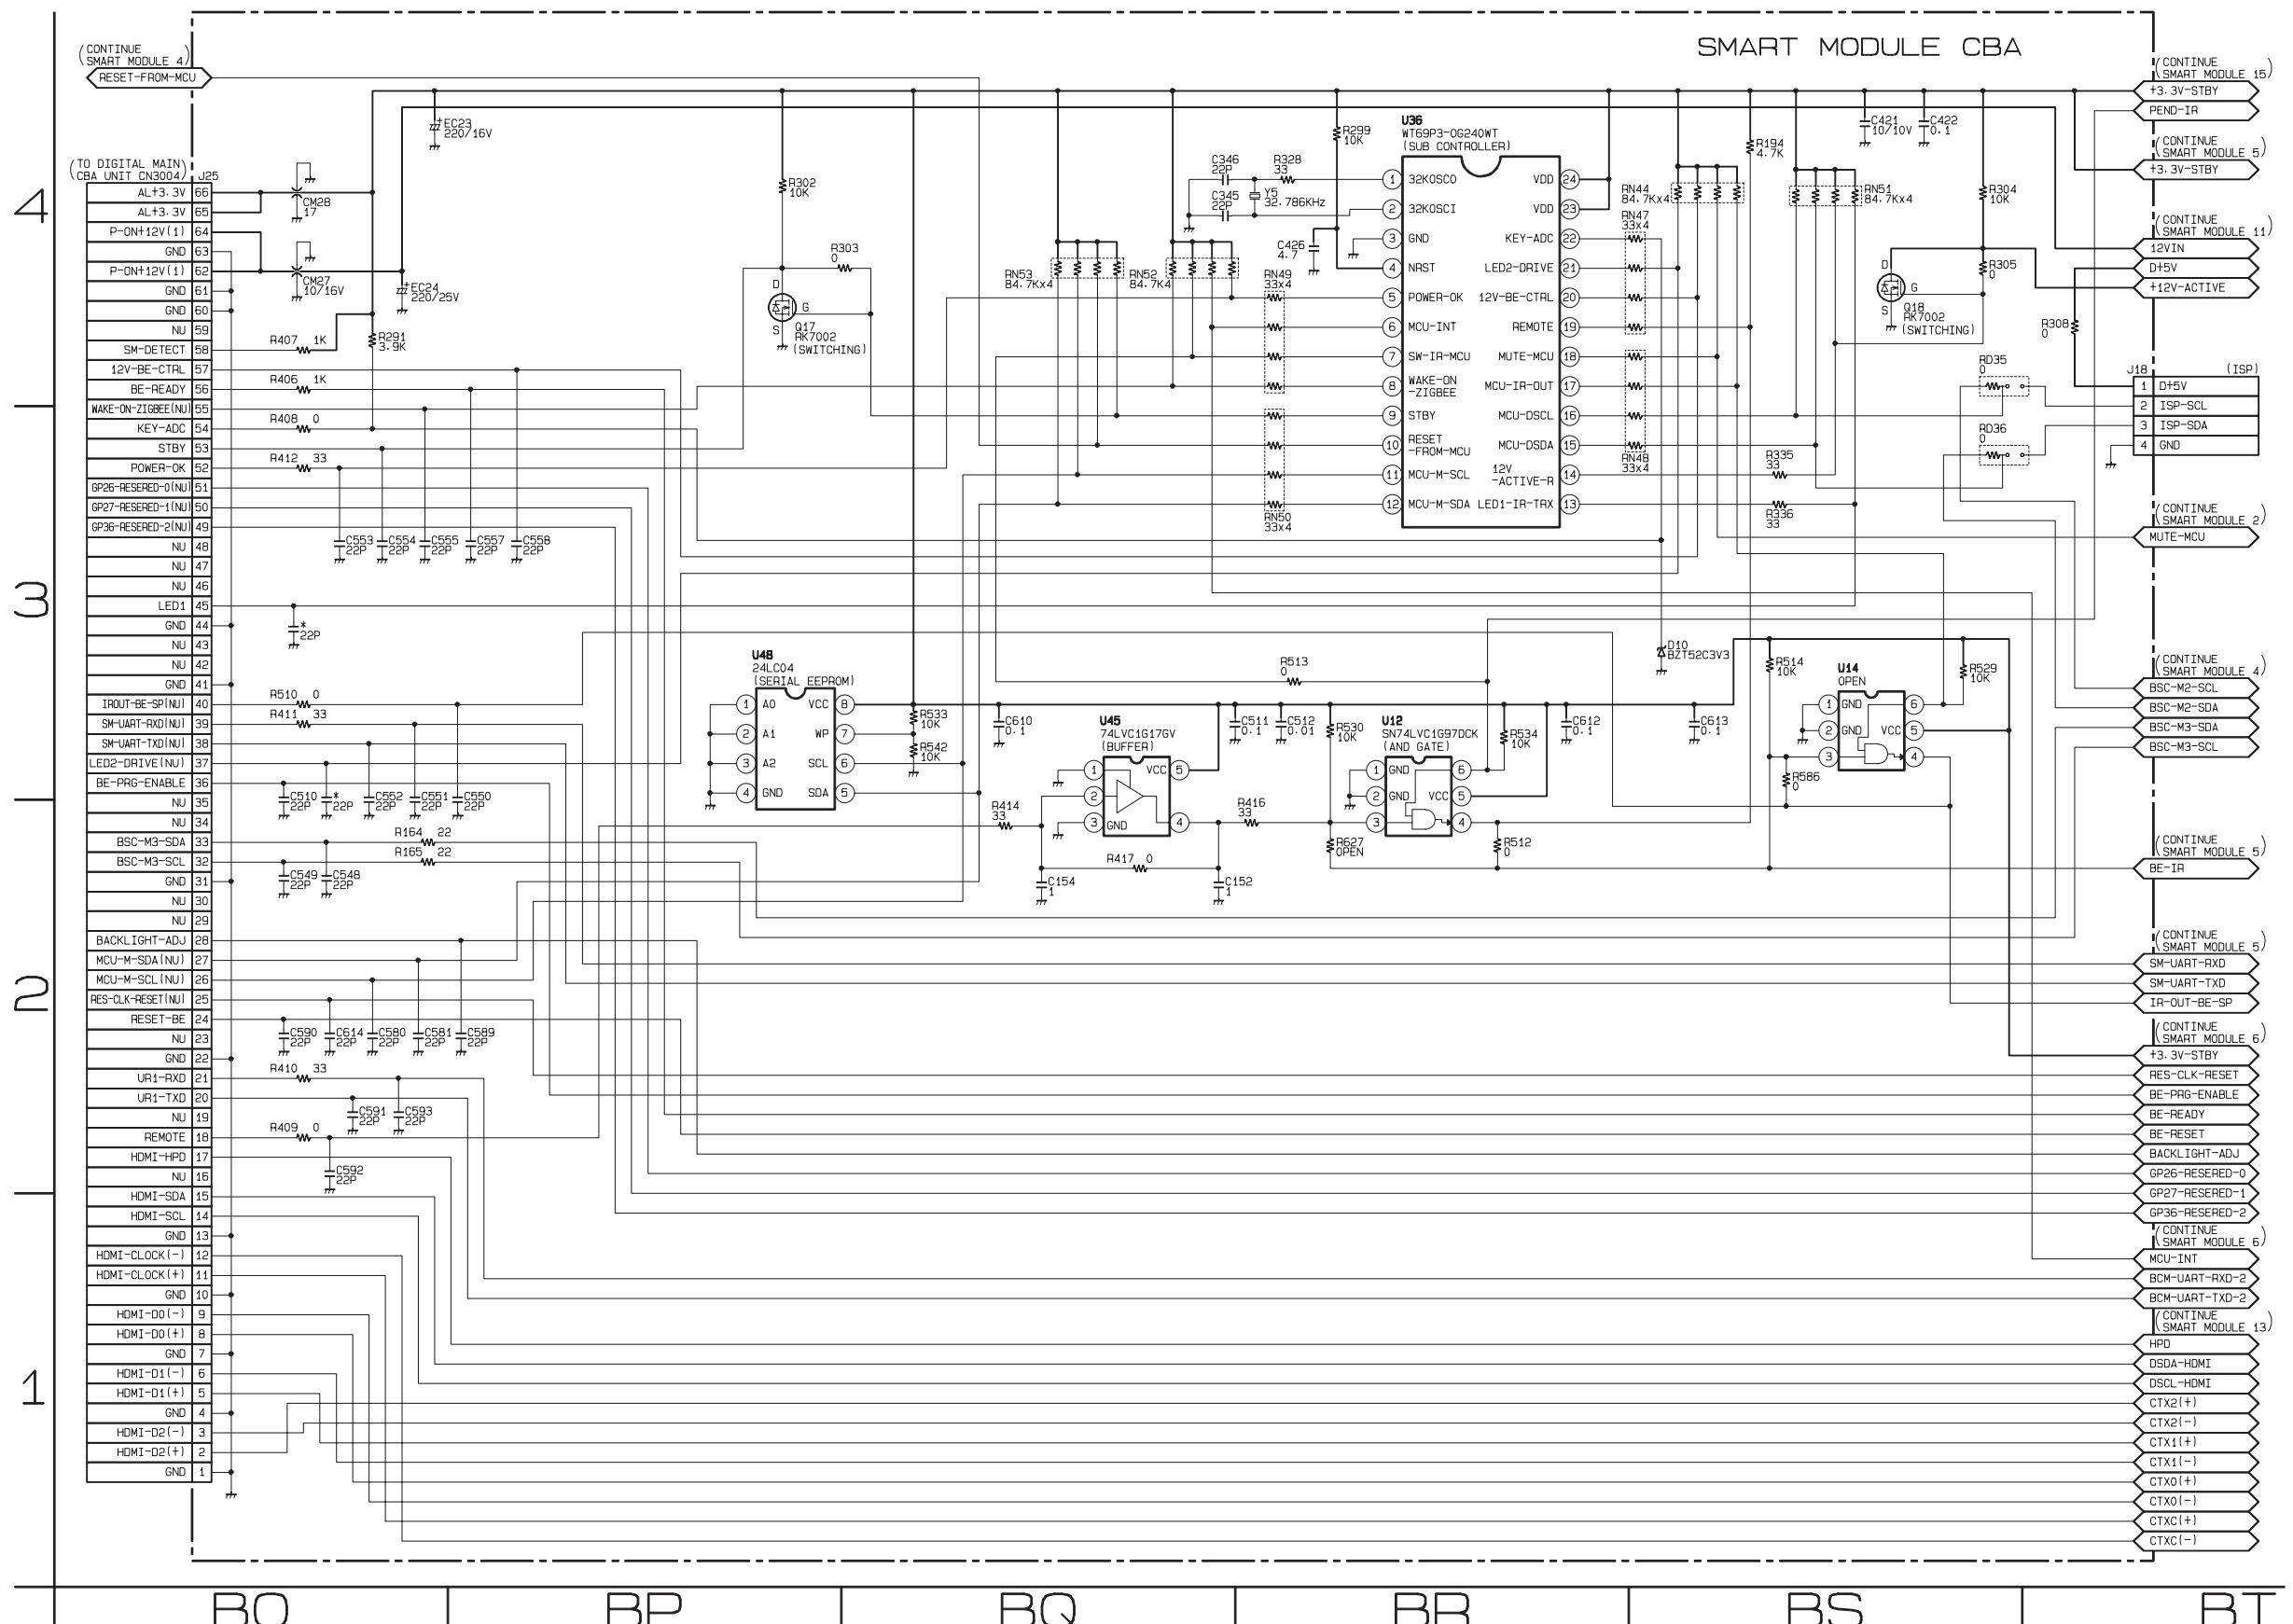

Smart Module 13 Schematic Diagram

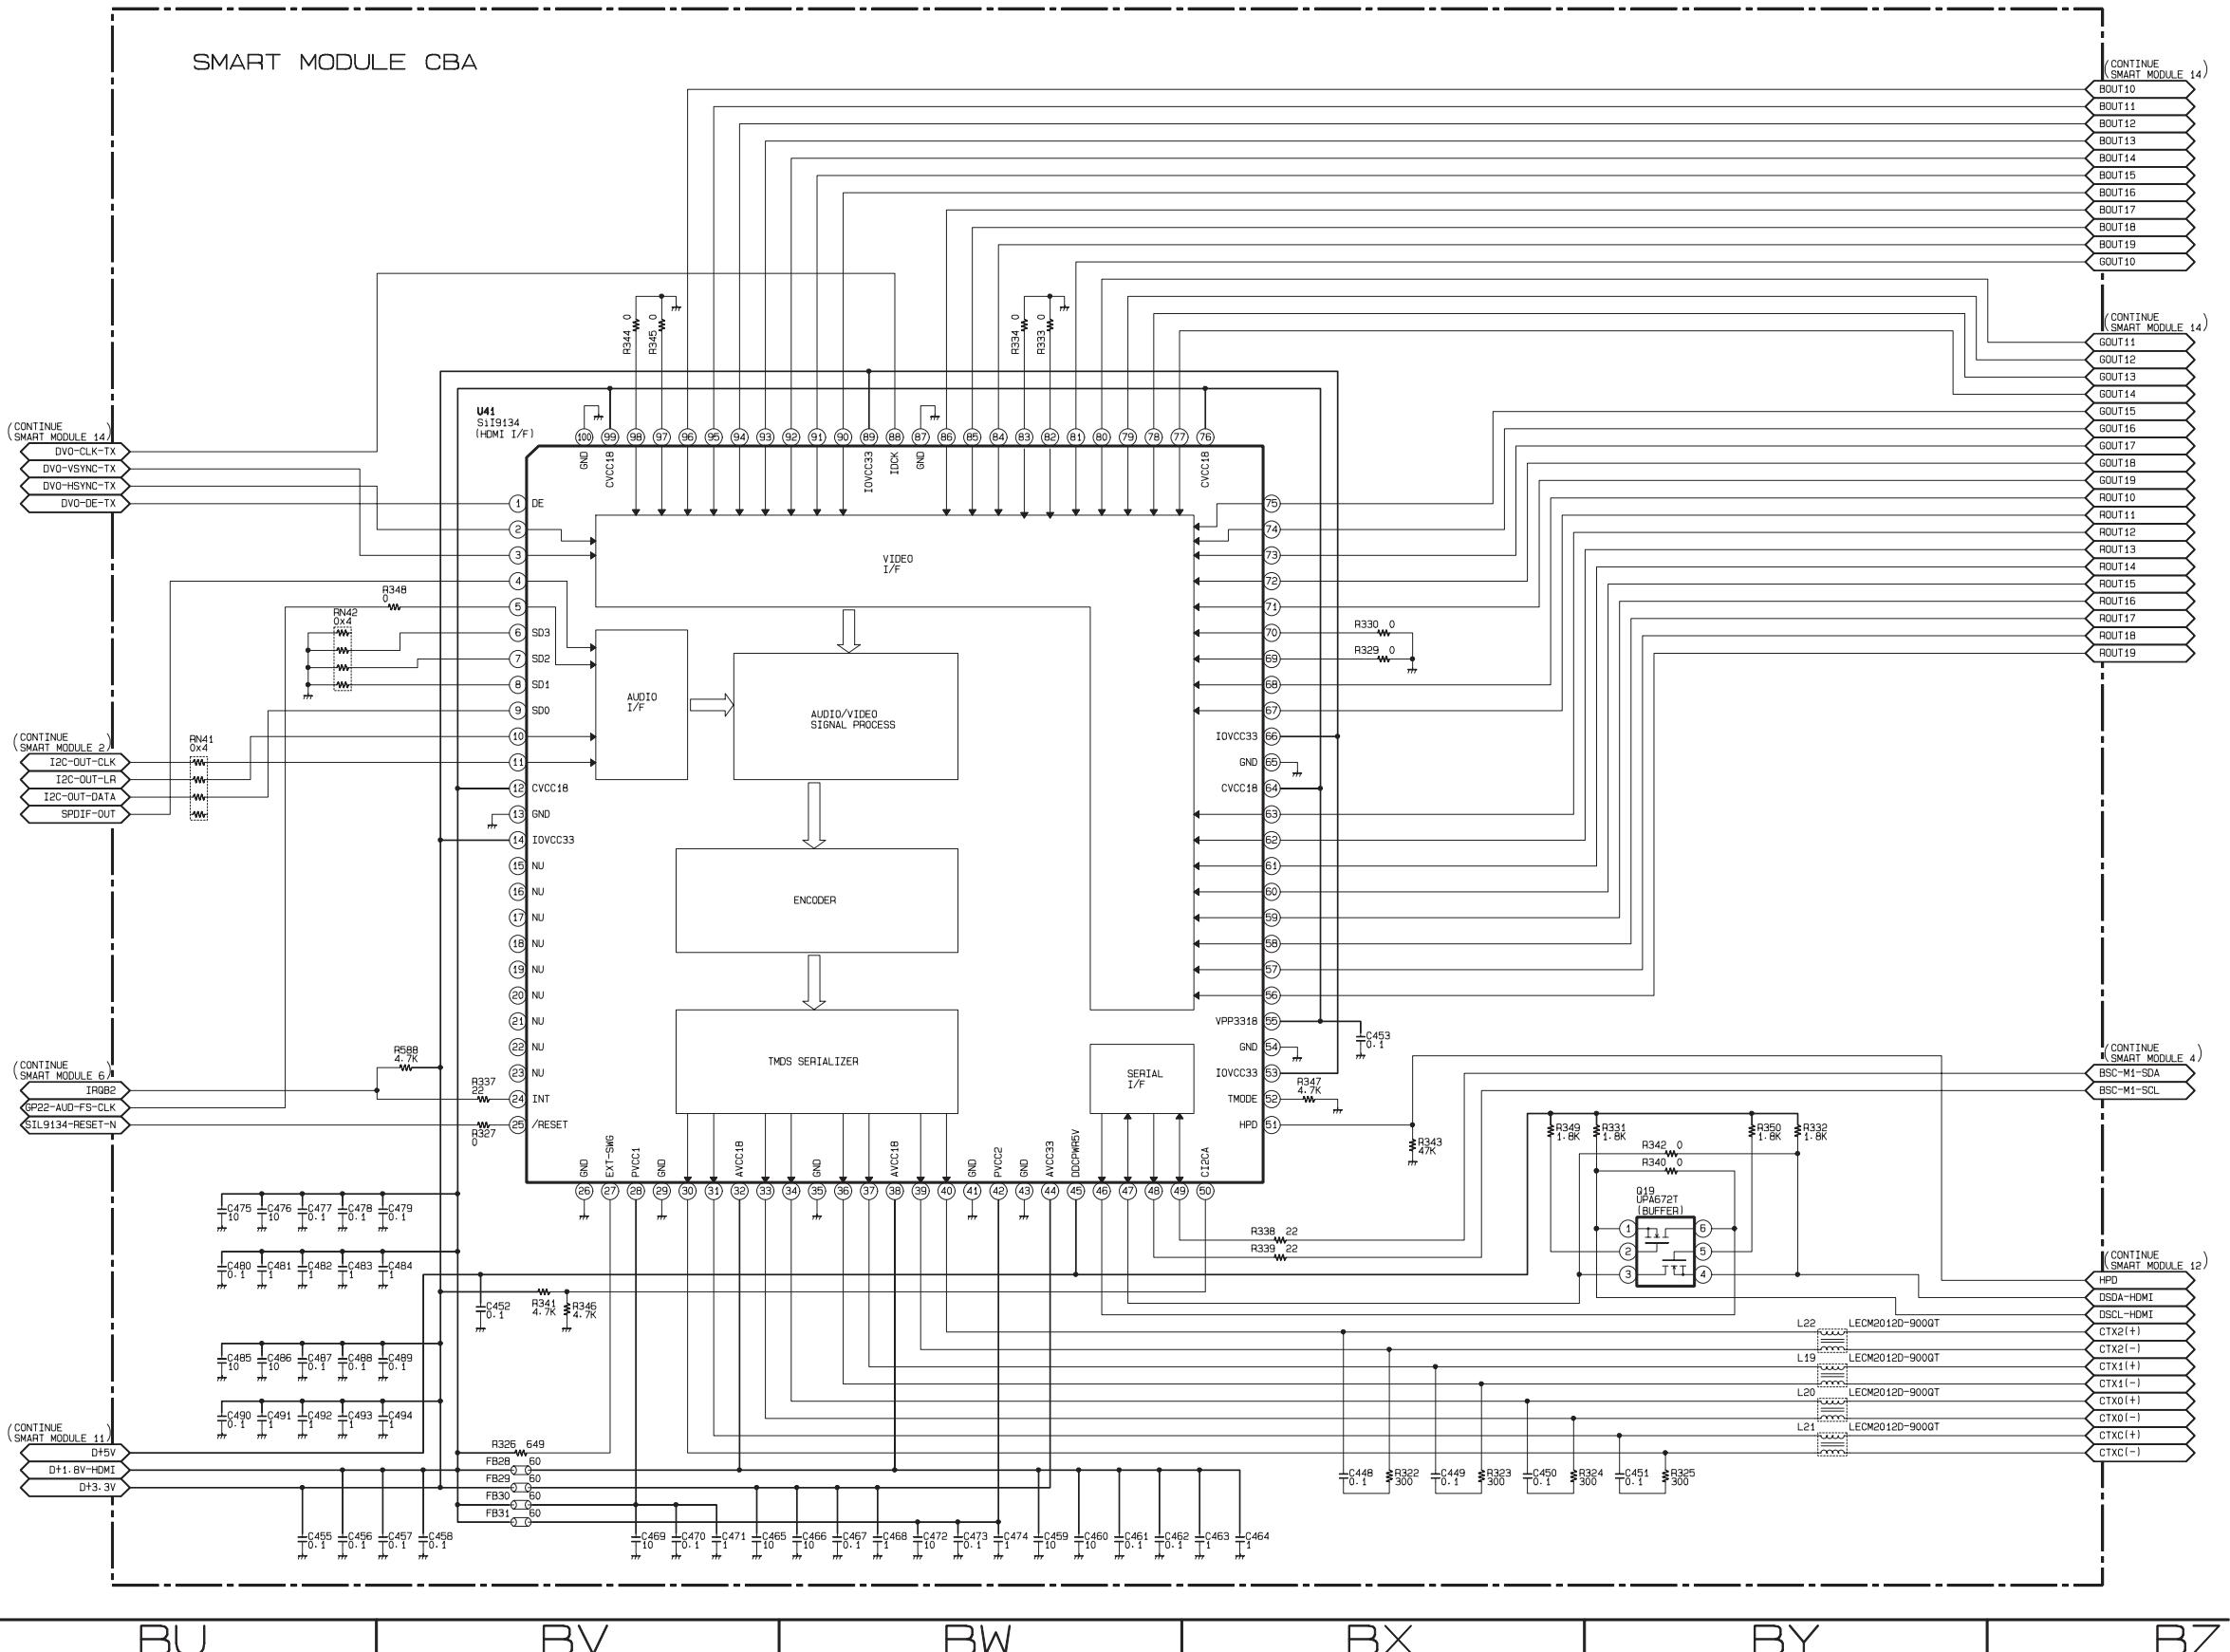


Smart Module 14 Schematic Diagram

*1 NOTE:

The order of pins shown in this diagram is different from that of actual U1.

U1 is divided into ten and shown as U1 (1/10) ~ U1 (10/10) in this Smart Module Schematic Diagram Section.

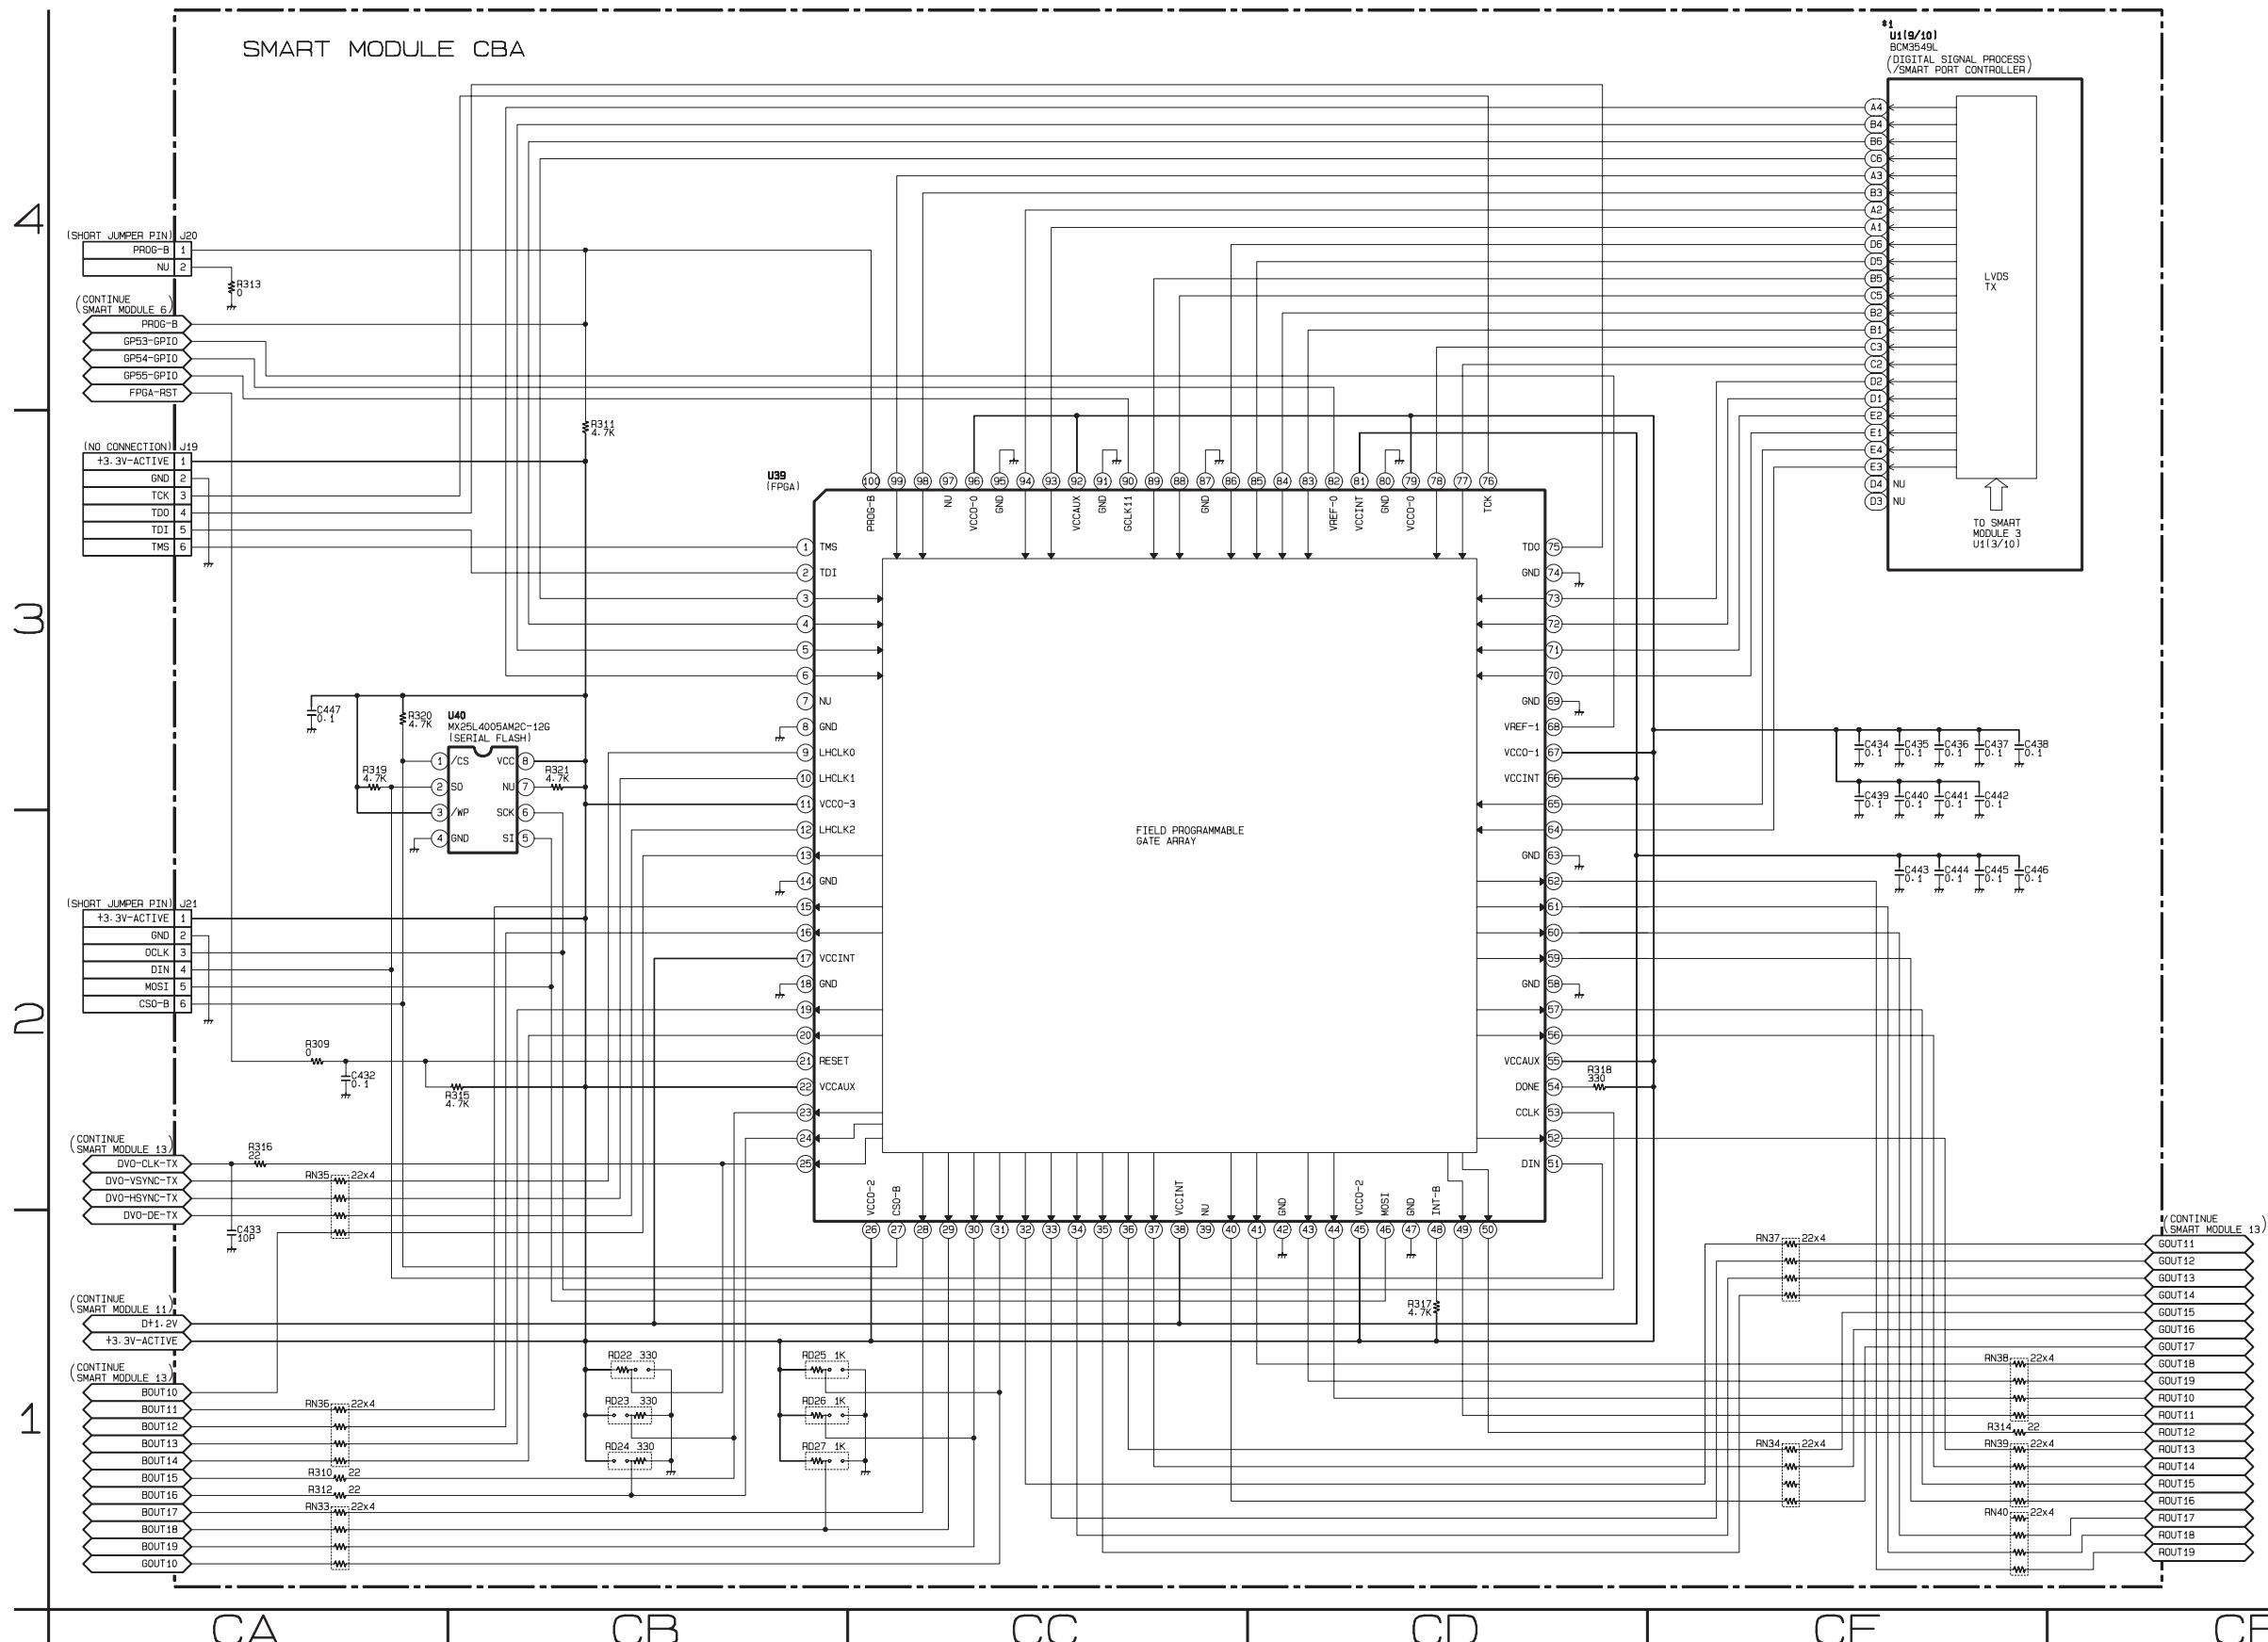


Smart Module 15 Schematic Diagram


*1 NOTE:

The order of pins shown in this diagram is different from that of actual U1.


U1 is divided into ten and shown as U1 (1/10) ~ U1 (10/10) in this Smart Module Schematic Diagram Section.

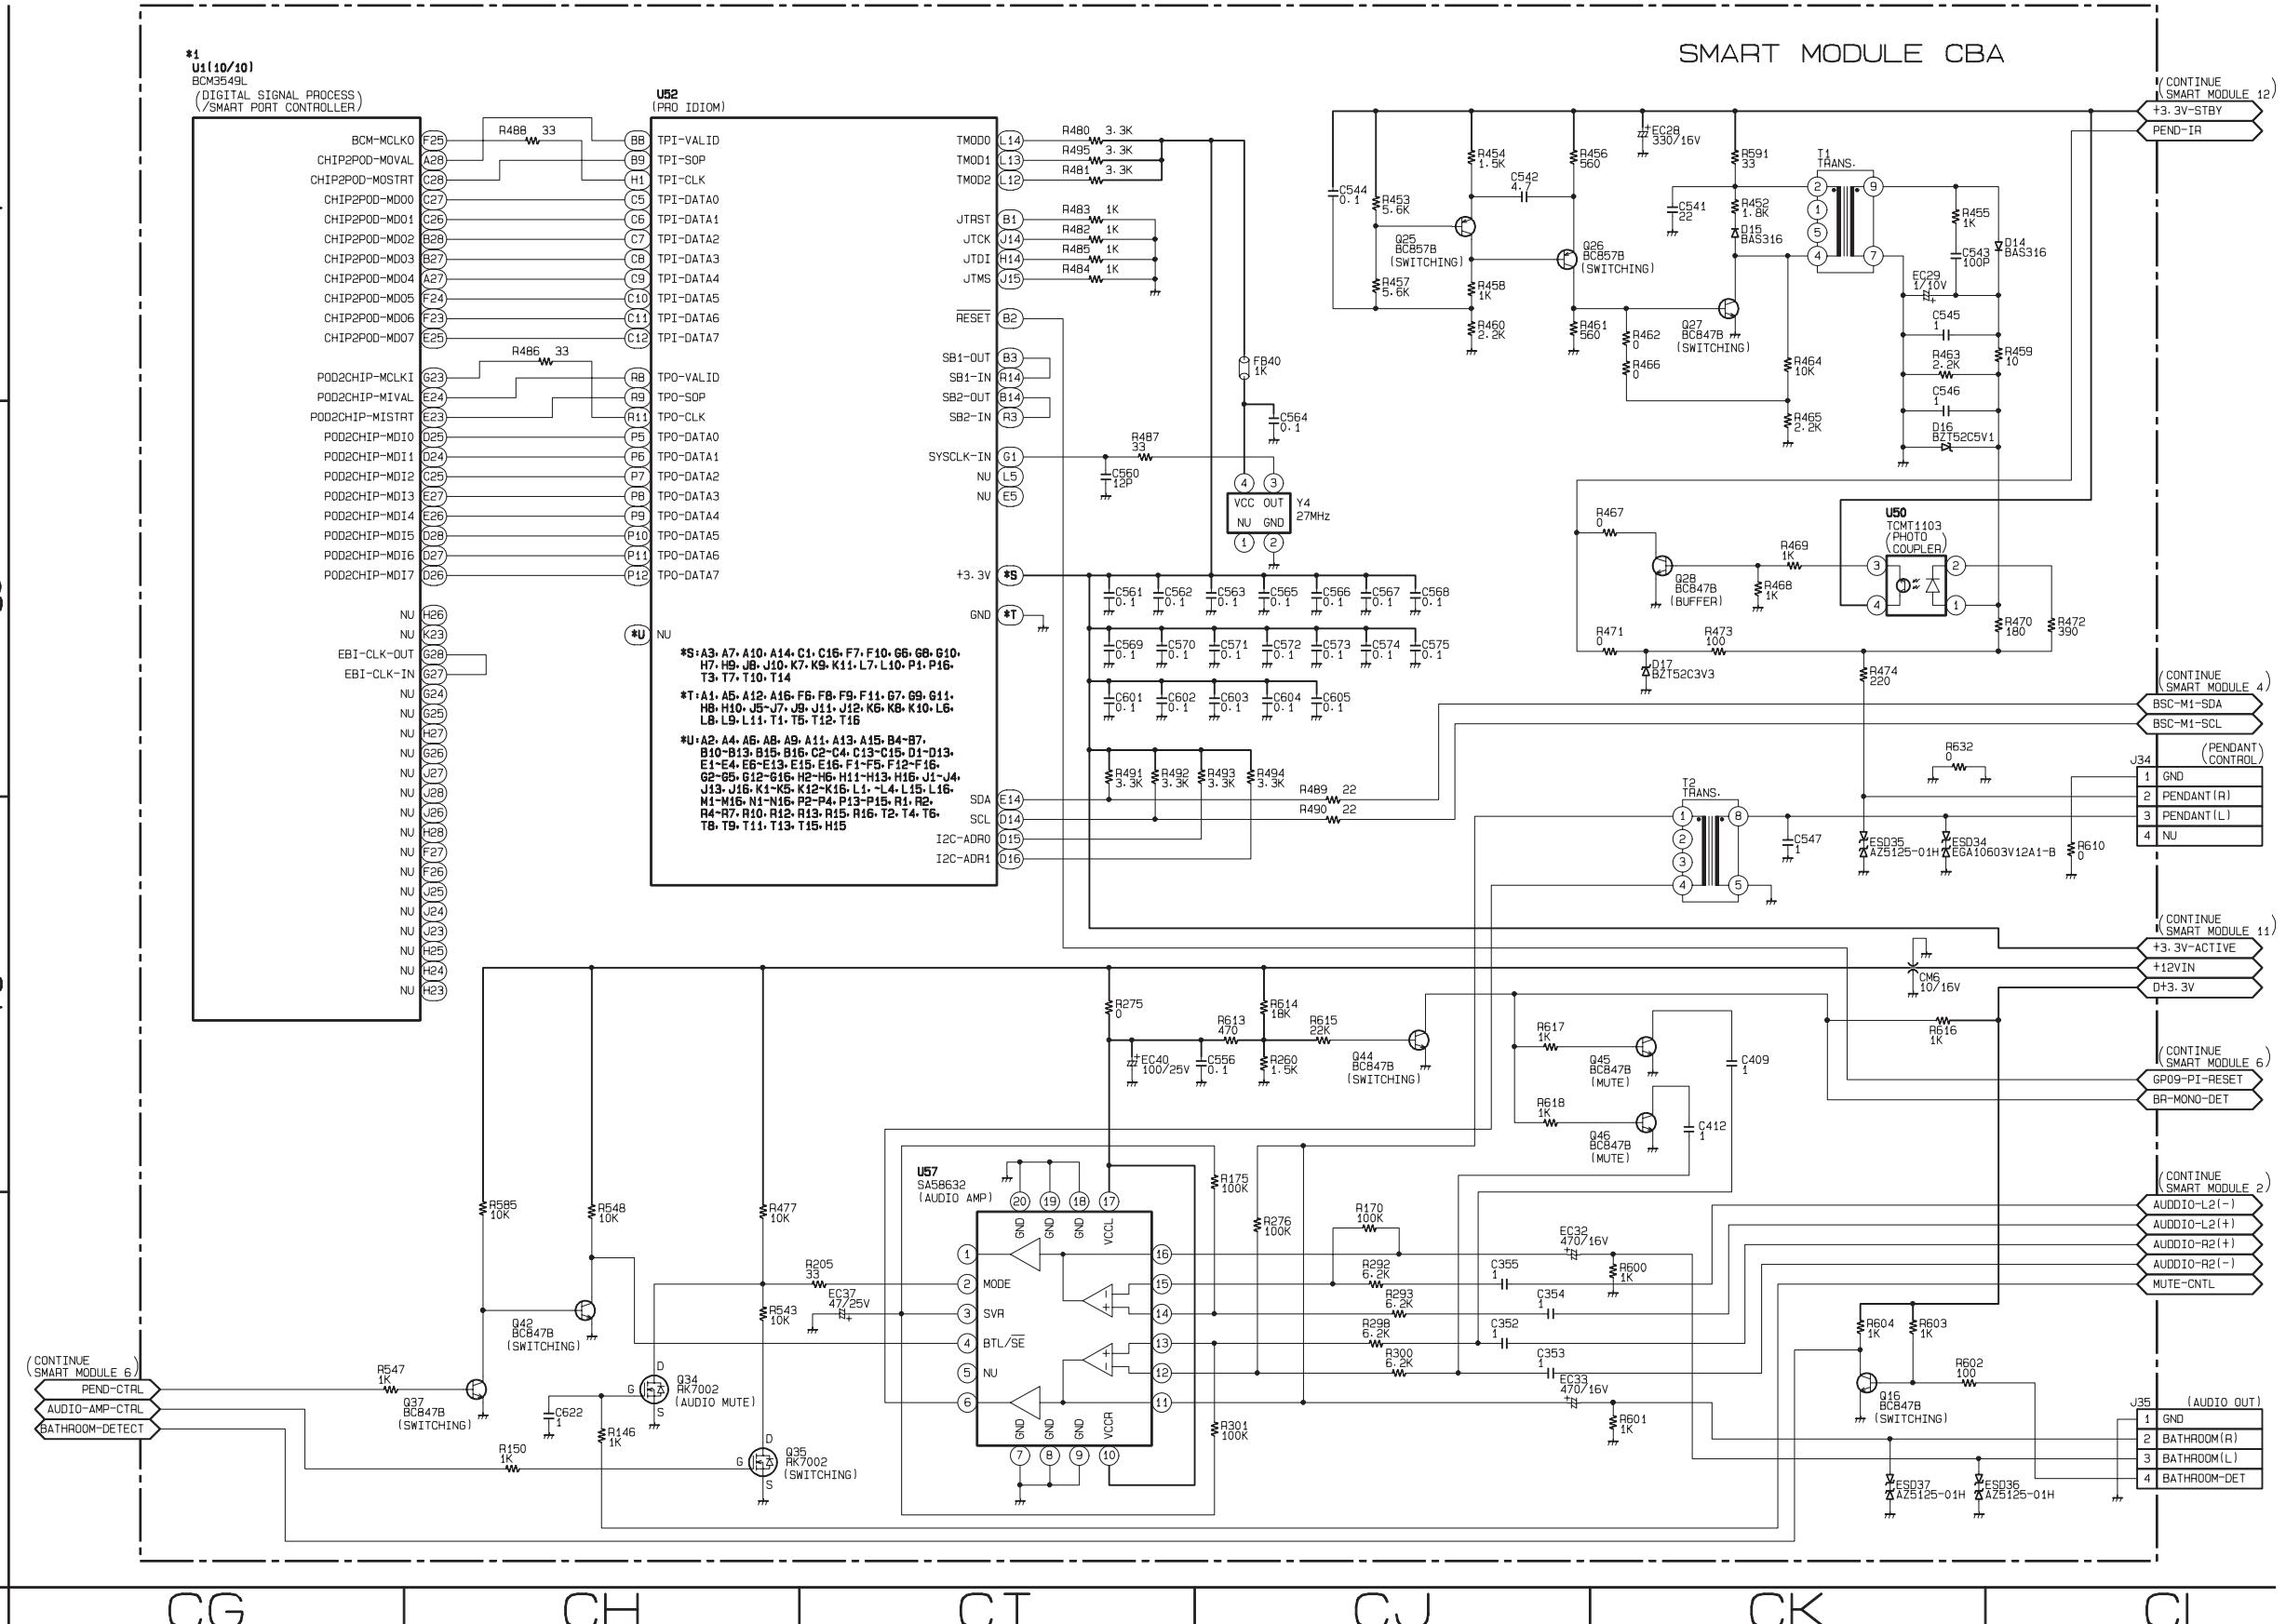

Smart Link 1 Schematic Diagram [32HFL5763L/F7]

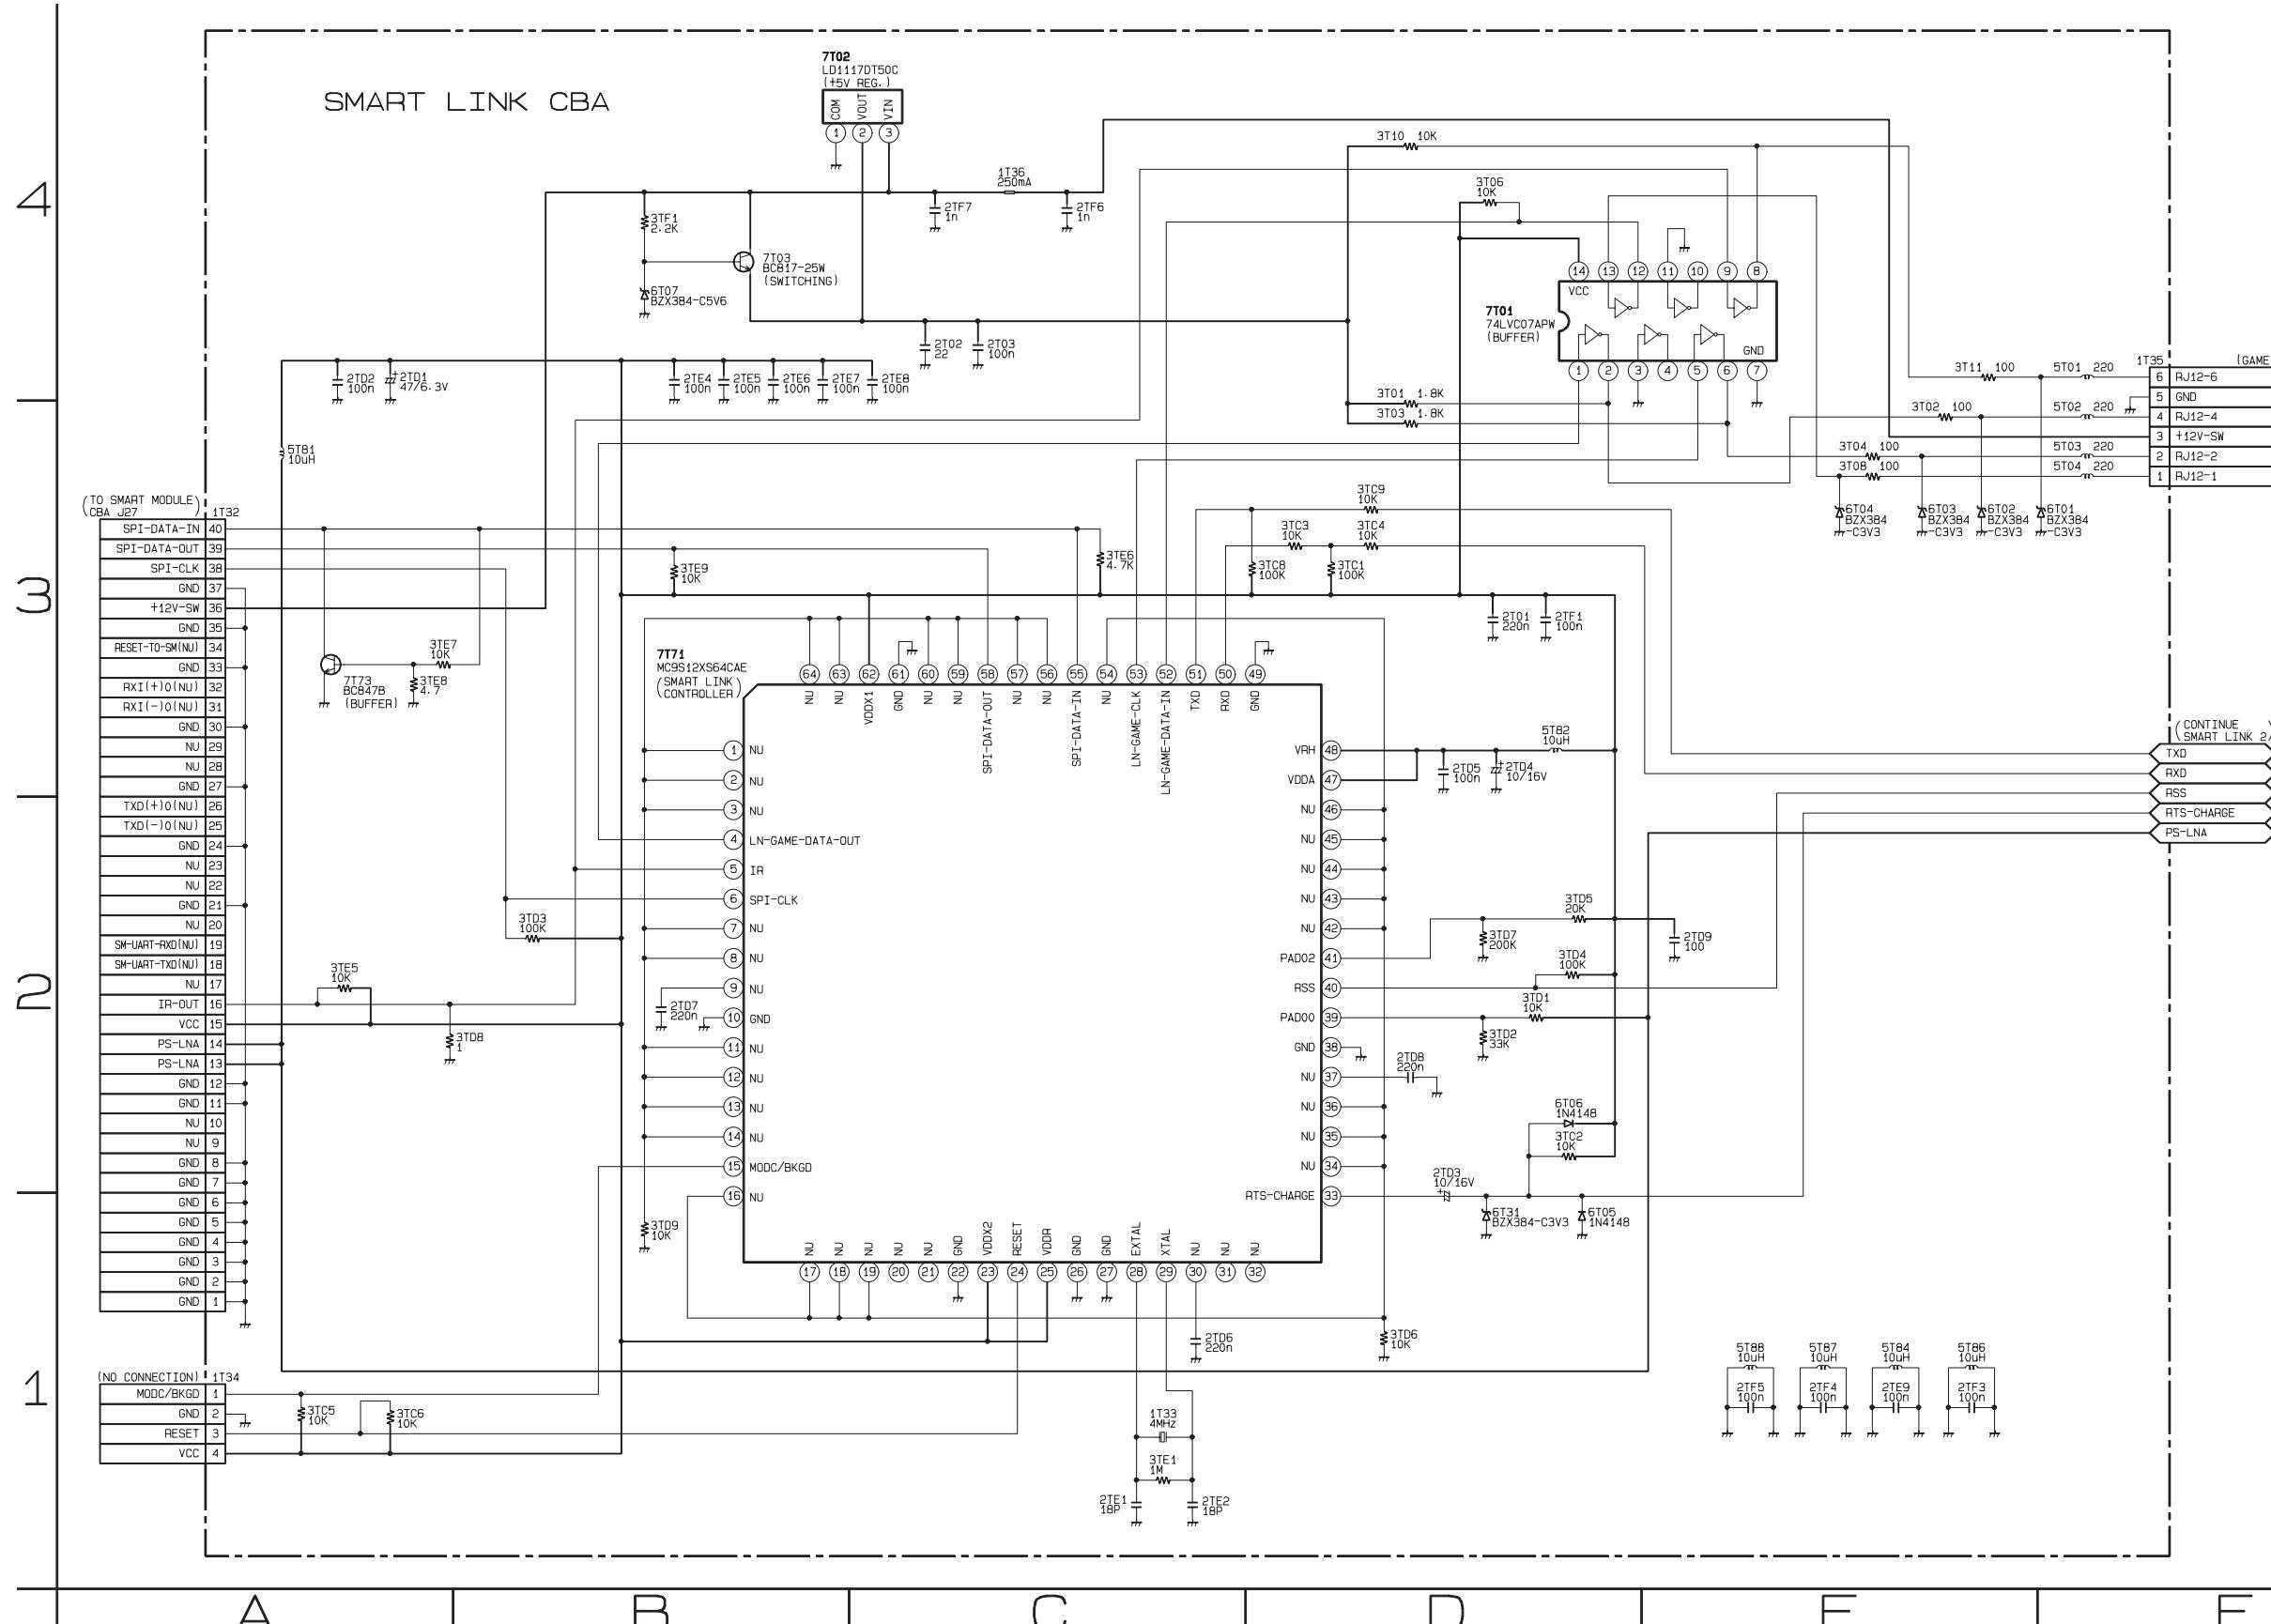

Smart Link 2 Schematic Diagram [32HFL5763L/F7]

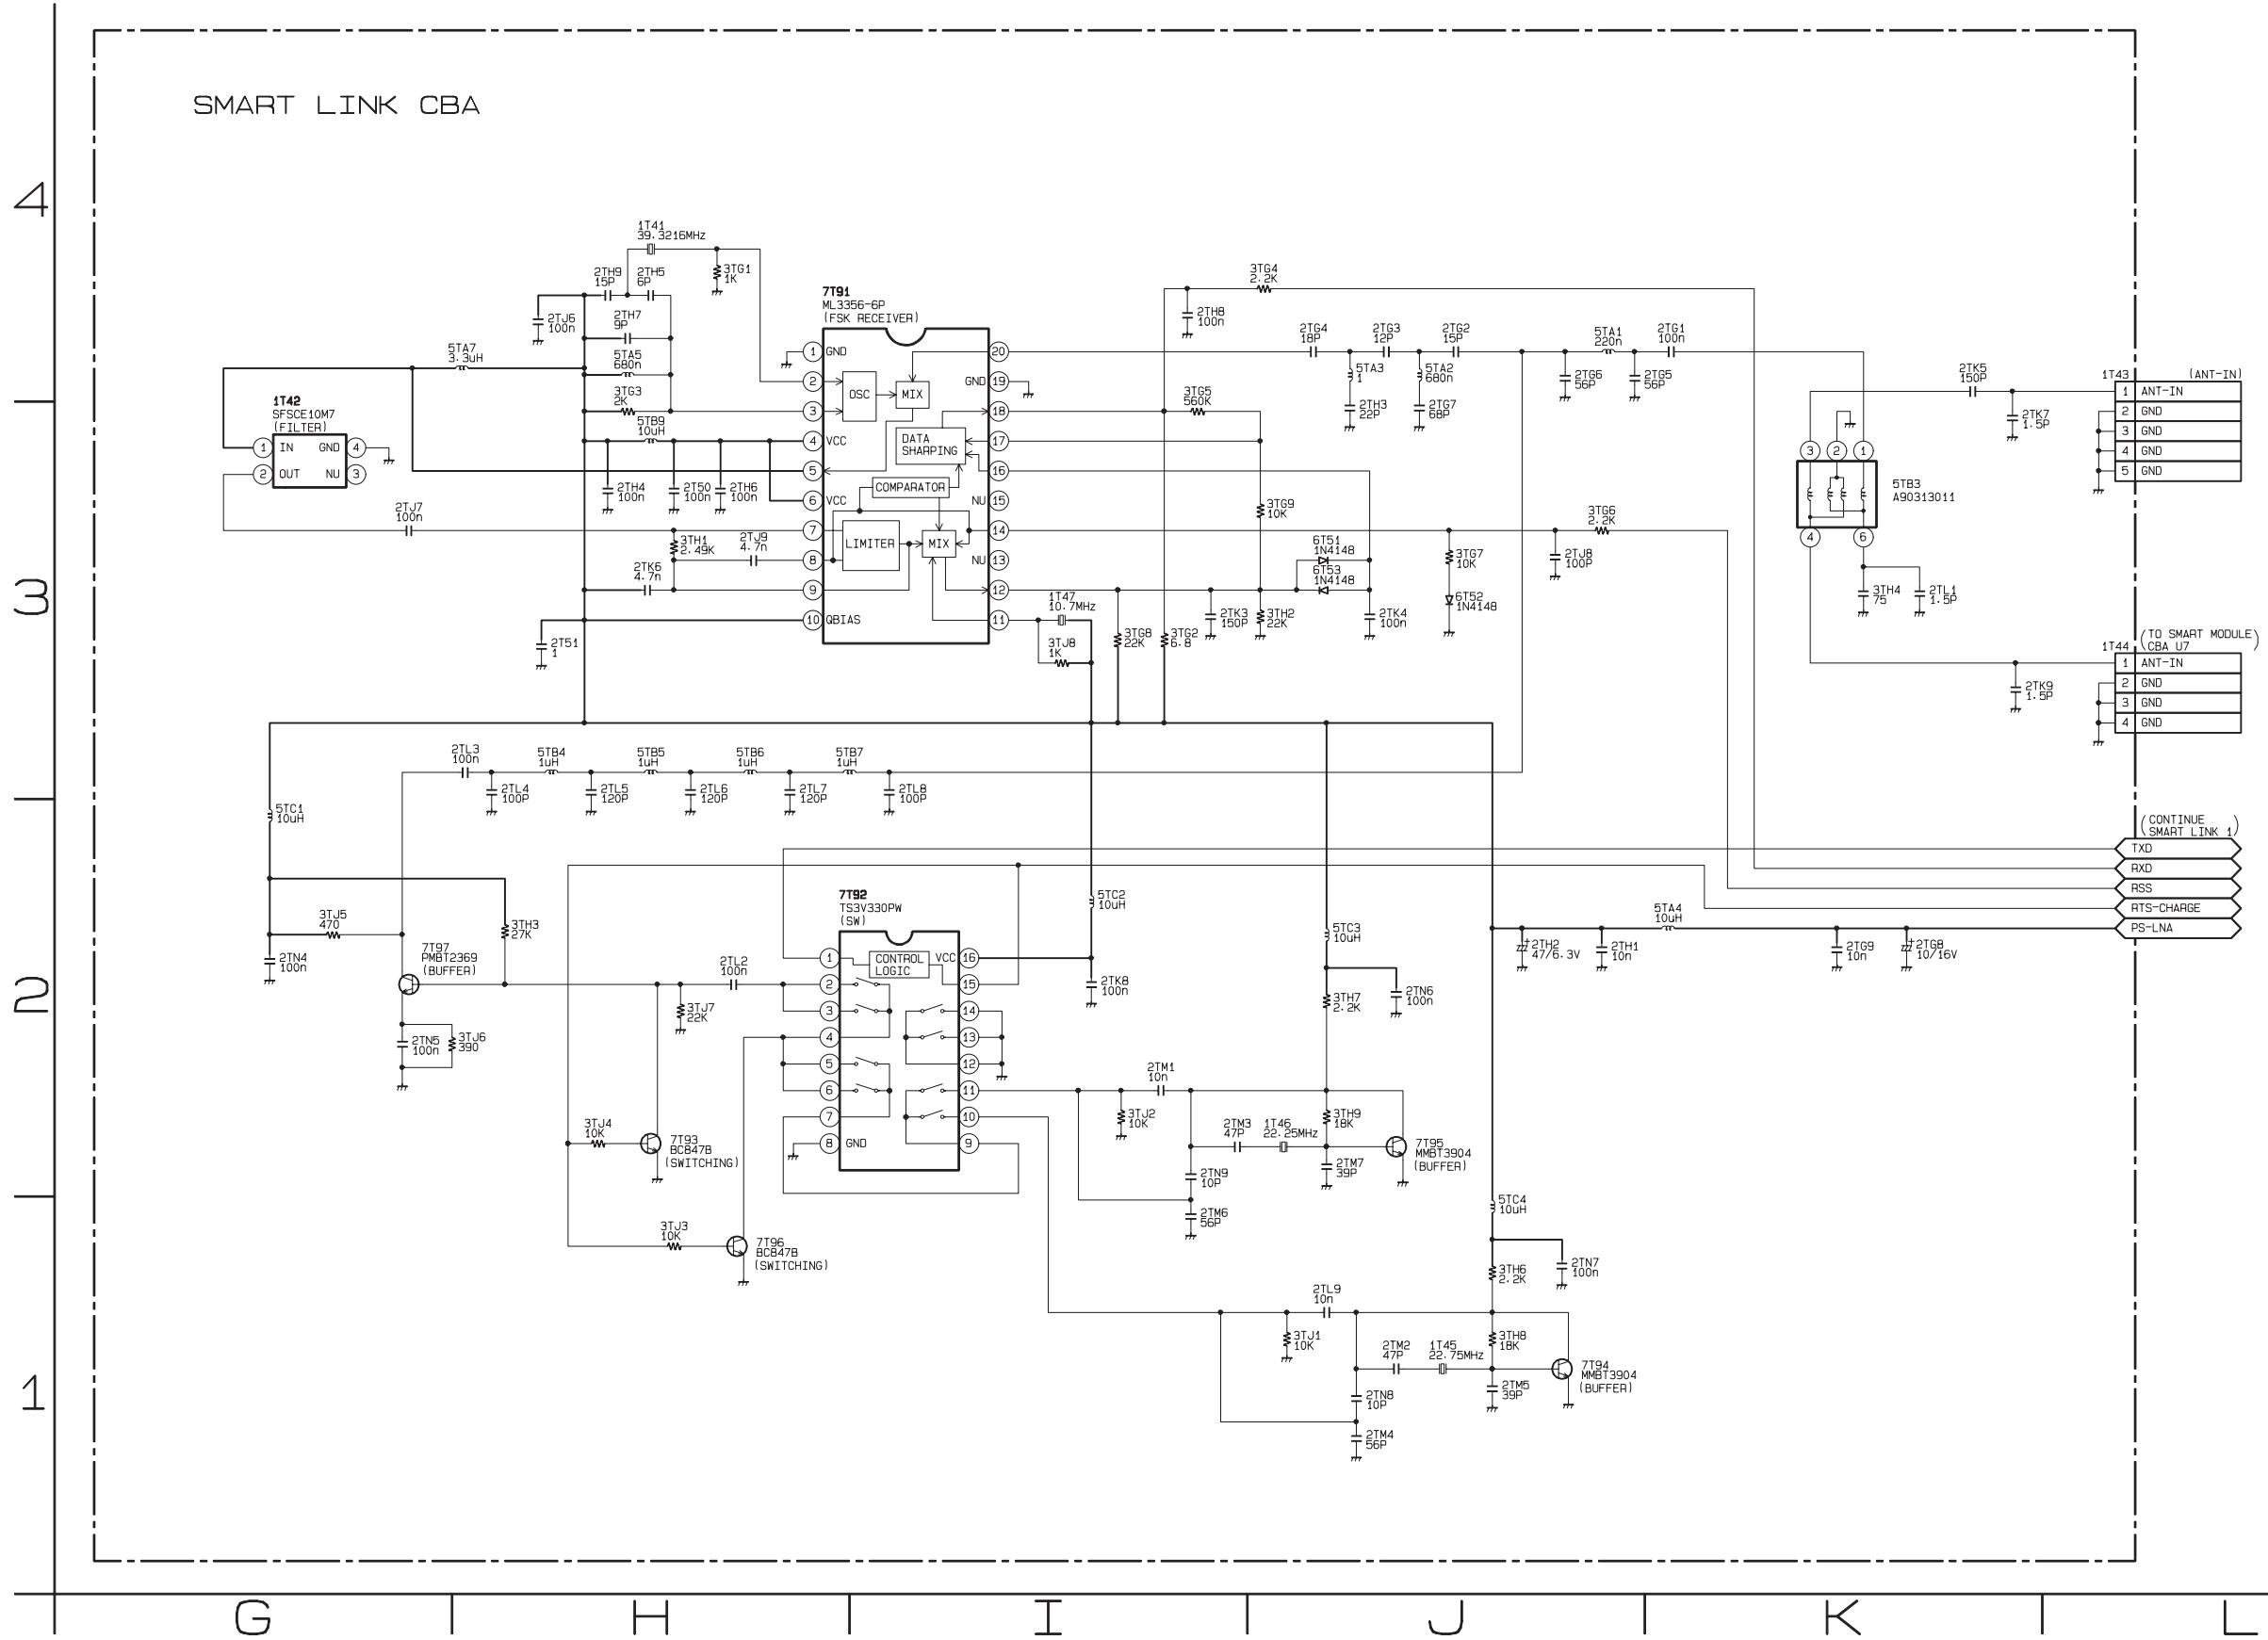


Power Supply CBA Top View

Because a hot chassis ground is present in the power supply circuit, an isolation transformer must be used when repairing. Also, in order to have the ability to increase the input slowly, when troubleshooting this type of power supply circuit, a variable isolation transformer is required.

CAUTION !

Fixed voltage (or Auto voltage selectable) power supply circuit is used in this unit. If Main Fuse (F600) is blown, check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply. Otherwise it may cause some components in the power supply circuit to fail.

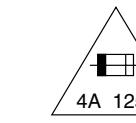


CAUTION ! : For continued protection against risk of fire, replace only with same type 4A, 125V fuse.

ATTENTION : Utiliser un fusible de rechange de même type de 4A, 125V.

NOTE:

The voltage for parts in hot circuit is measured using hot GND as a common terminal.

Power Supply CBA

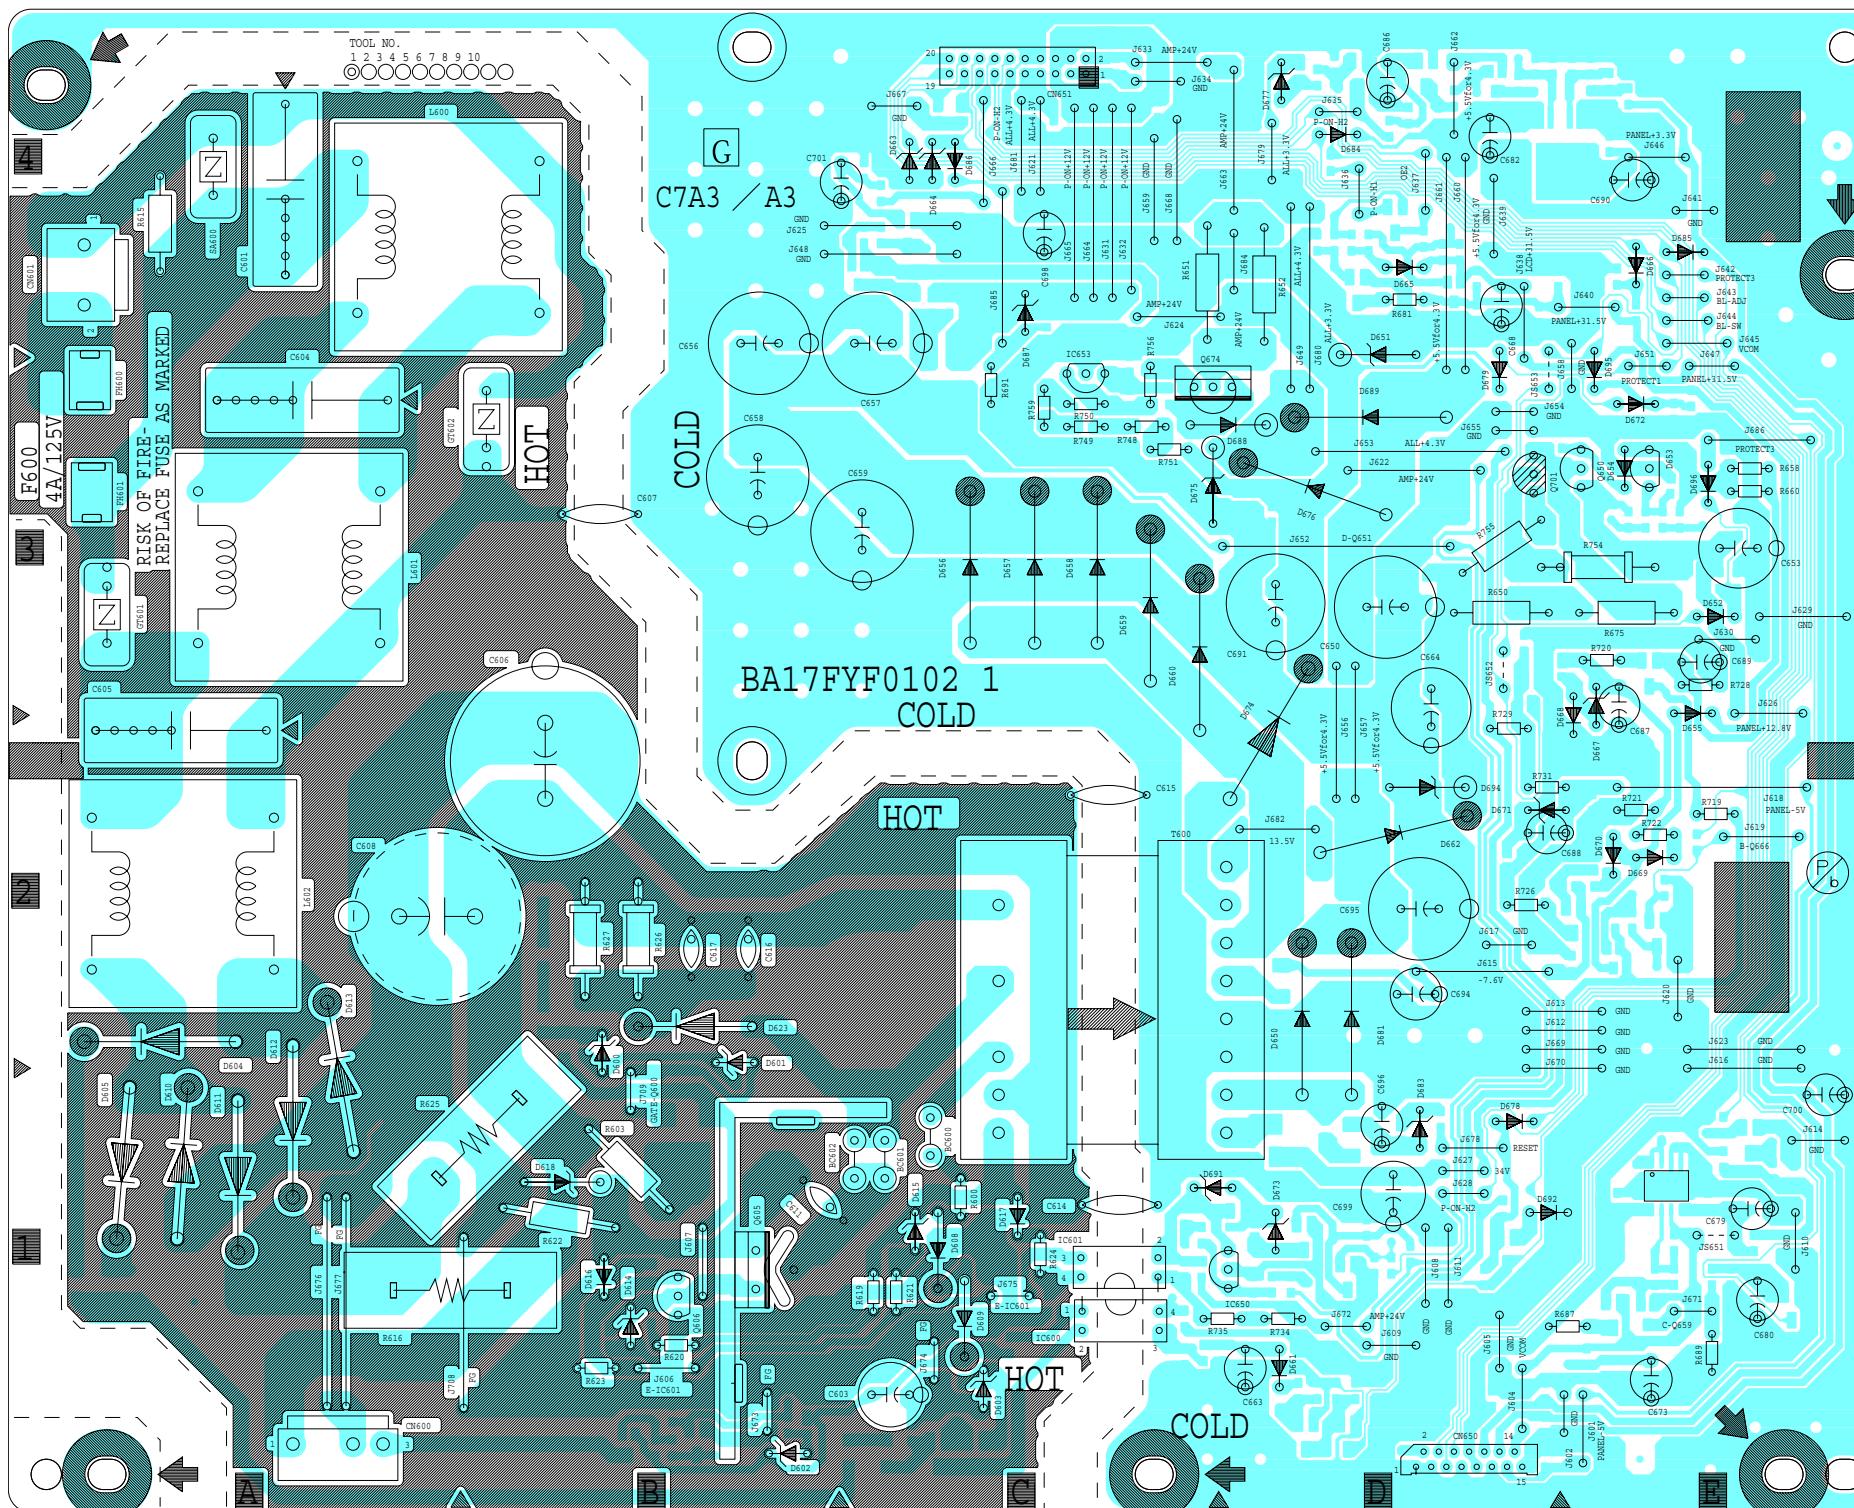


Power Supply CBA Bottom View

Because a hot chassis ground is present in the power supply circuit, an isolation transformer must be used when repairing. Also, in order to have the ability to increase the input slowly, when troubleshooting this type of power supply circuit, a variable isolation transformer is required.

CAUTION !

Fixed voltage (or Auto voltage selectable) power supply circuit is used in this unit. If Main Fuse (F600) is blown, check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply. Otherwise it may cause some components in the power supply circuit to fail.

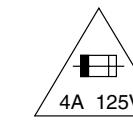


CAUTION ! : For continued protection against risk of fire, replace only with same type 4A, 125V fuse.

ATTENTION : Utiliser un fusible de recharge de même type de 4A, 125V.

NOTE:

The voltage for parts in hot circuit is measured using hot GND as a common terminal.

Power Supply CBA

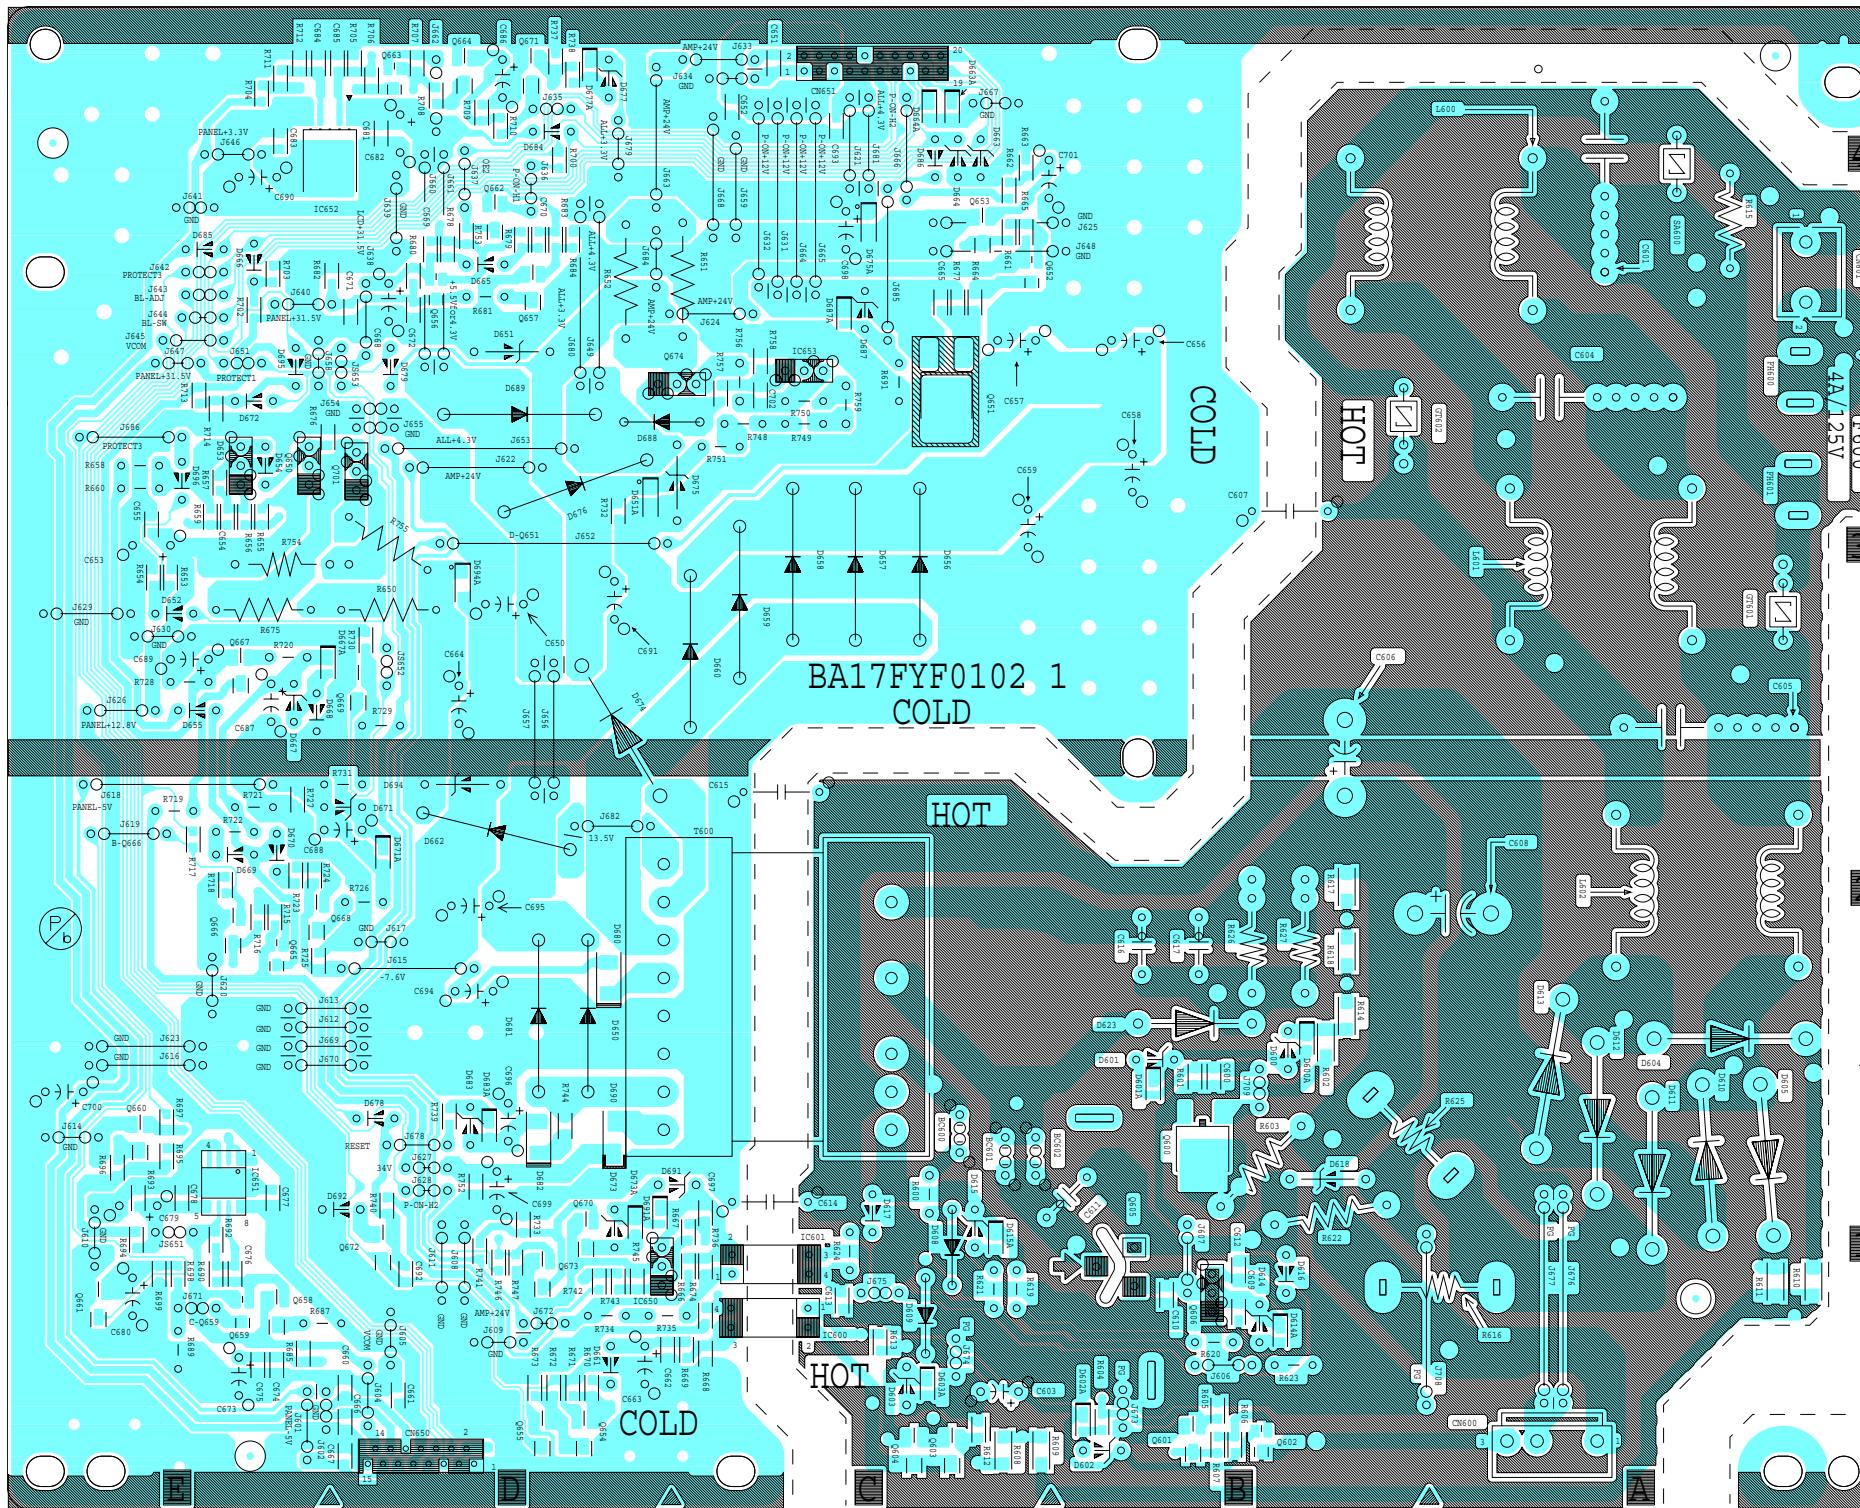

Inverter CBA, Function CBA & IR Sensor CBA Top View (main Inverter CBA)

Because a hot chassis ground is present in the power supply circuit, an isolation transformer must be used when repairing. Also, in order to have the ability to increase the input slowly, when troubleshooting this type of power supply circuit, a variable isolation transformer is required.


NOTE:

The voltage for parts in hot circuit is measured using hot GND as a common terminal.

* When you conduct on a component level repair for the Inverter CBA for any models within this service manual, make sure to refer the right Block Diagrams, Schematic Diagrams/CBA and Parts List.

For the main CBA, the last digit of the board number, which is engraved on every board, should be a number(e.g. BA17F4F0103 2). For the sub CBA, the last digit of the board number, which is engraved on every board, should be an alphabet(e.g. BA17F4F0103 Z).

Function CBA

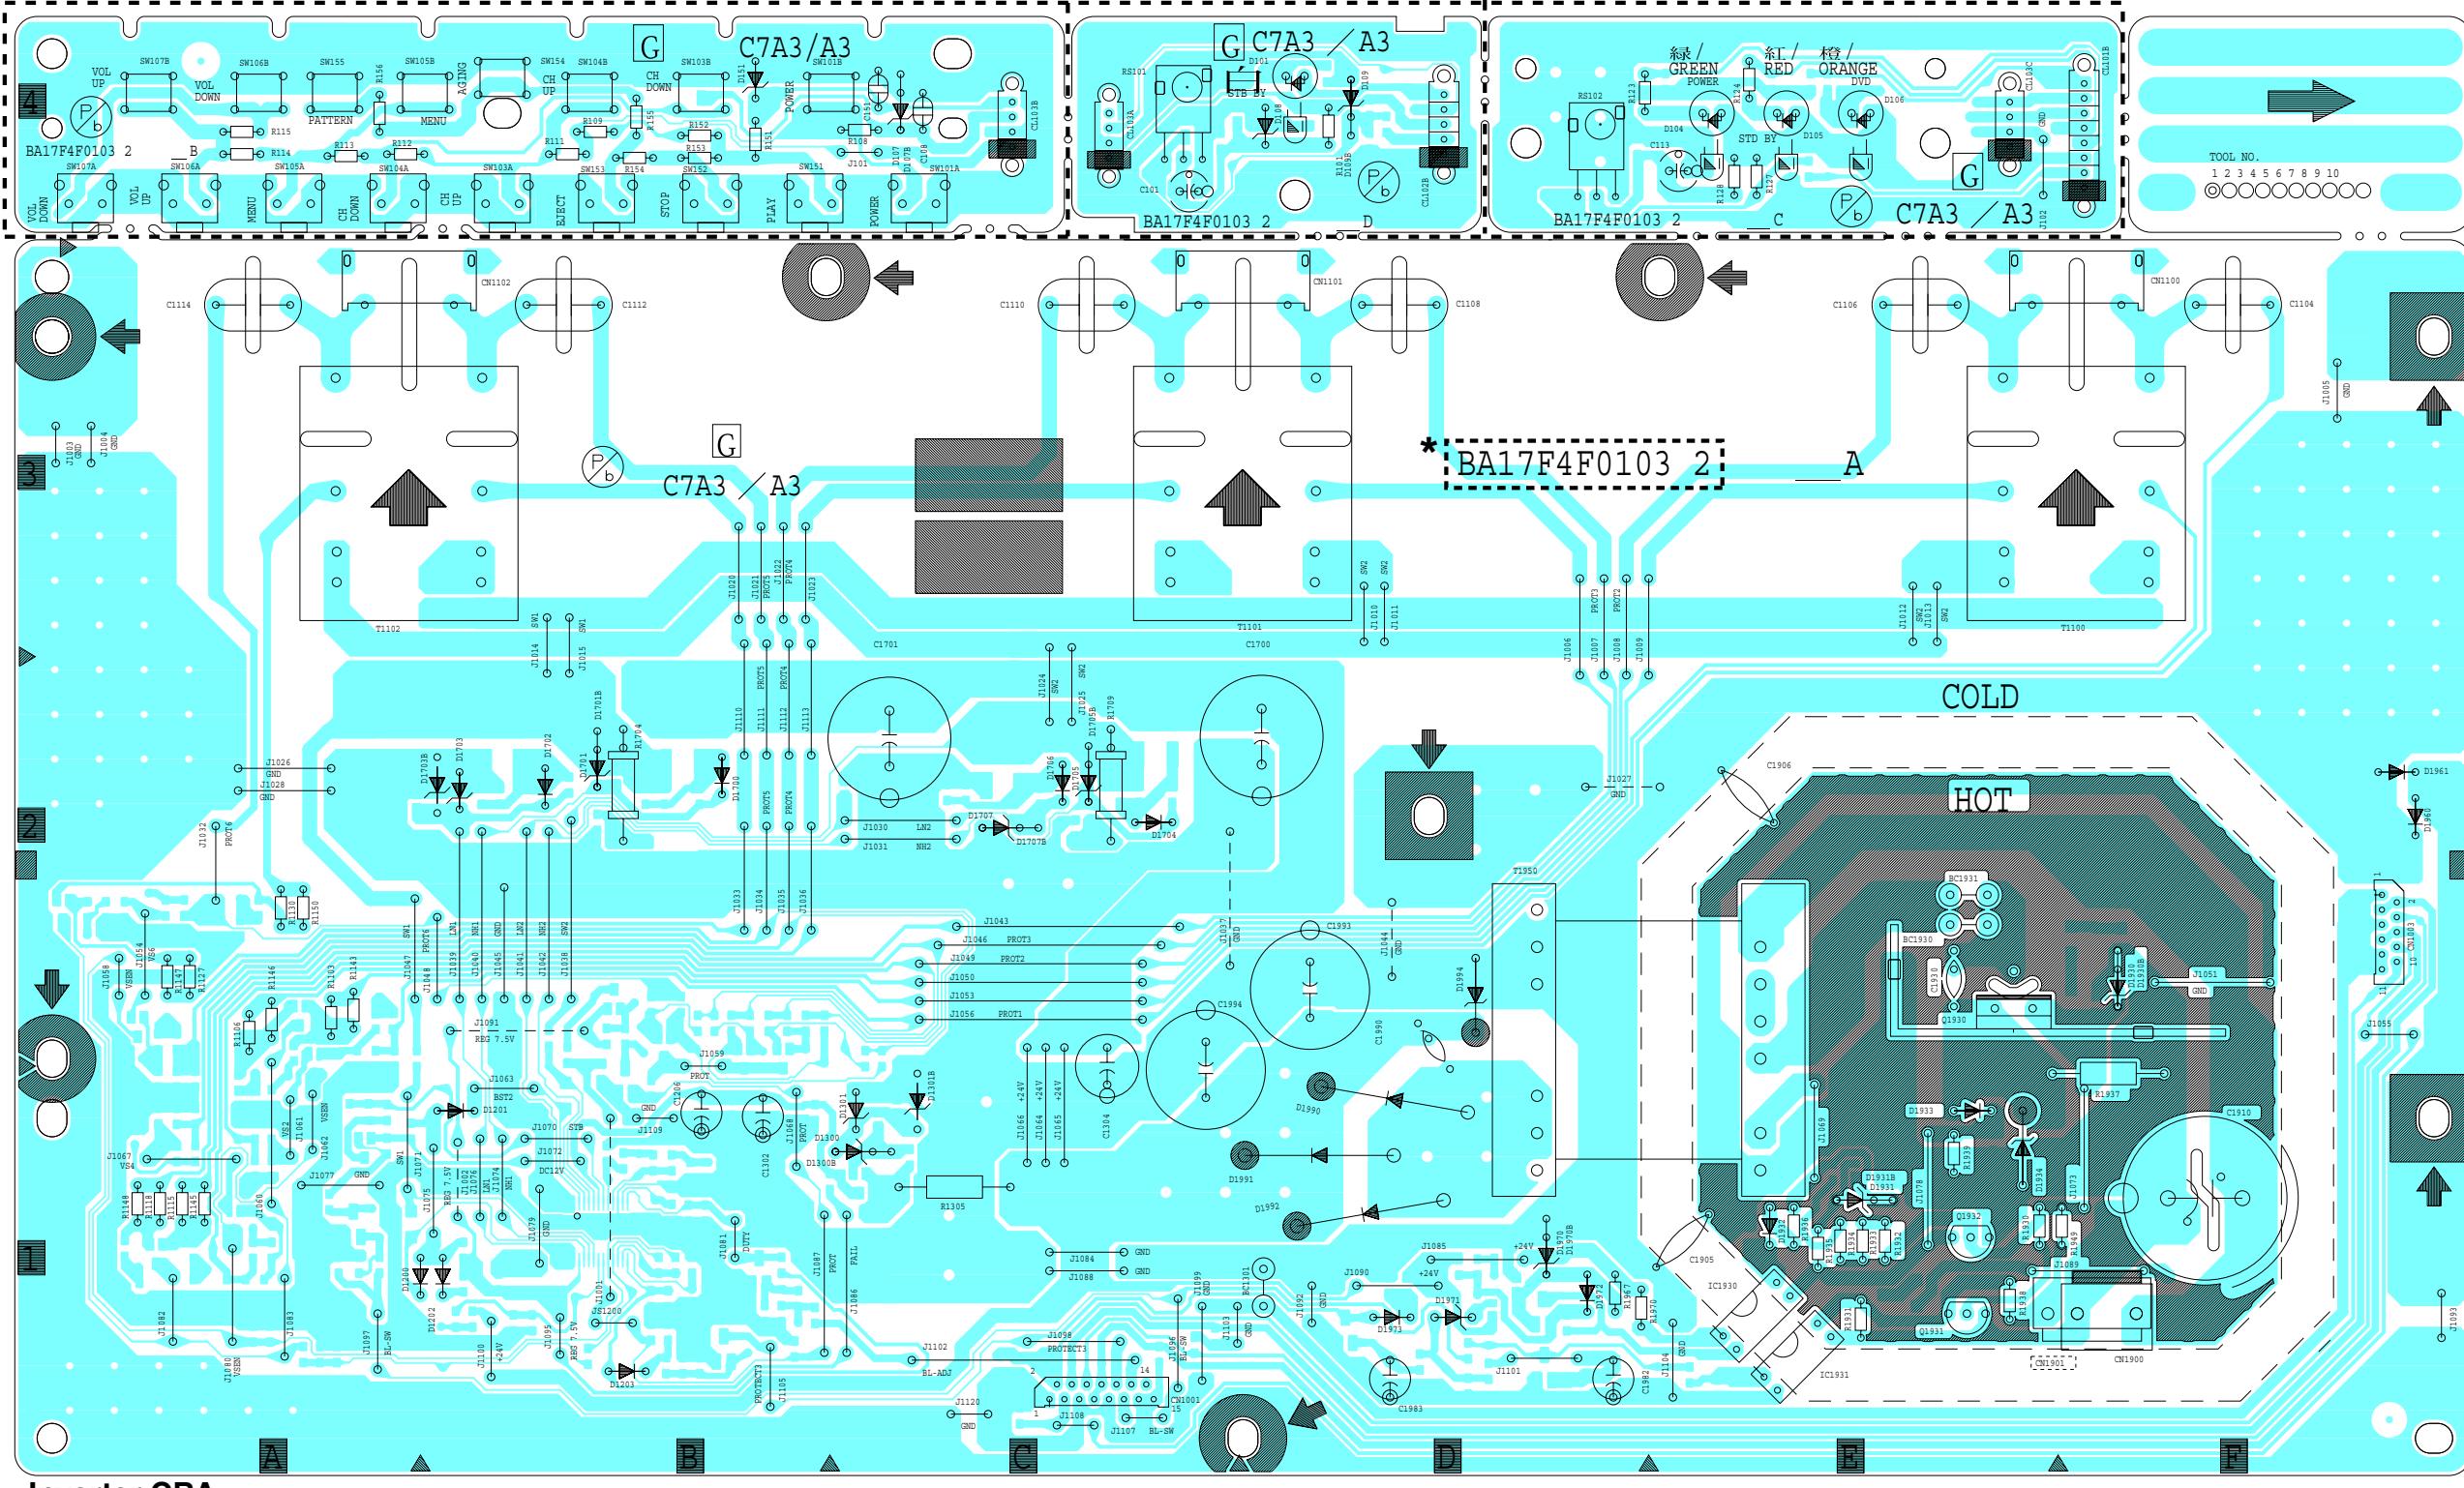


Inverter CBA, Function CBA & IR Sensor CBA Bottom View (main Inverter CBA)

Because a hot chassis ground is present in the power supply circuit, an isolation transformer must be used when repairing. Also, in order to have the ability to increase the input slowly, when troubleshooting this type of power supply circuit, a variable isolation transformer is required.

NOTE:
The voltage for parts in hot circuit is measured using hot GND as a common terminal.

* When you conduct on a component level repair for the Inverter CBA for any models within this service manual, make sure to refer the right Block Diagrams, Schematic Diagrams/CBA and Parts List.
For the main CBA, the last digit of the board number, which is engraved on every board, should be a number(e.g. BA17F4F0103 2).
For the sub CBA, the last digit of the board number, which is engraved on every board, should be an alphabet(e.g. BA17F4F0103 Z).

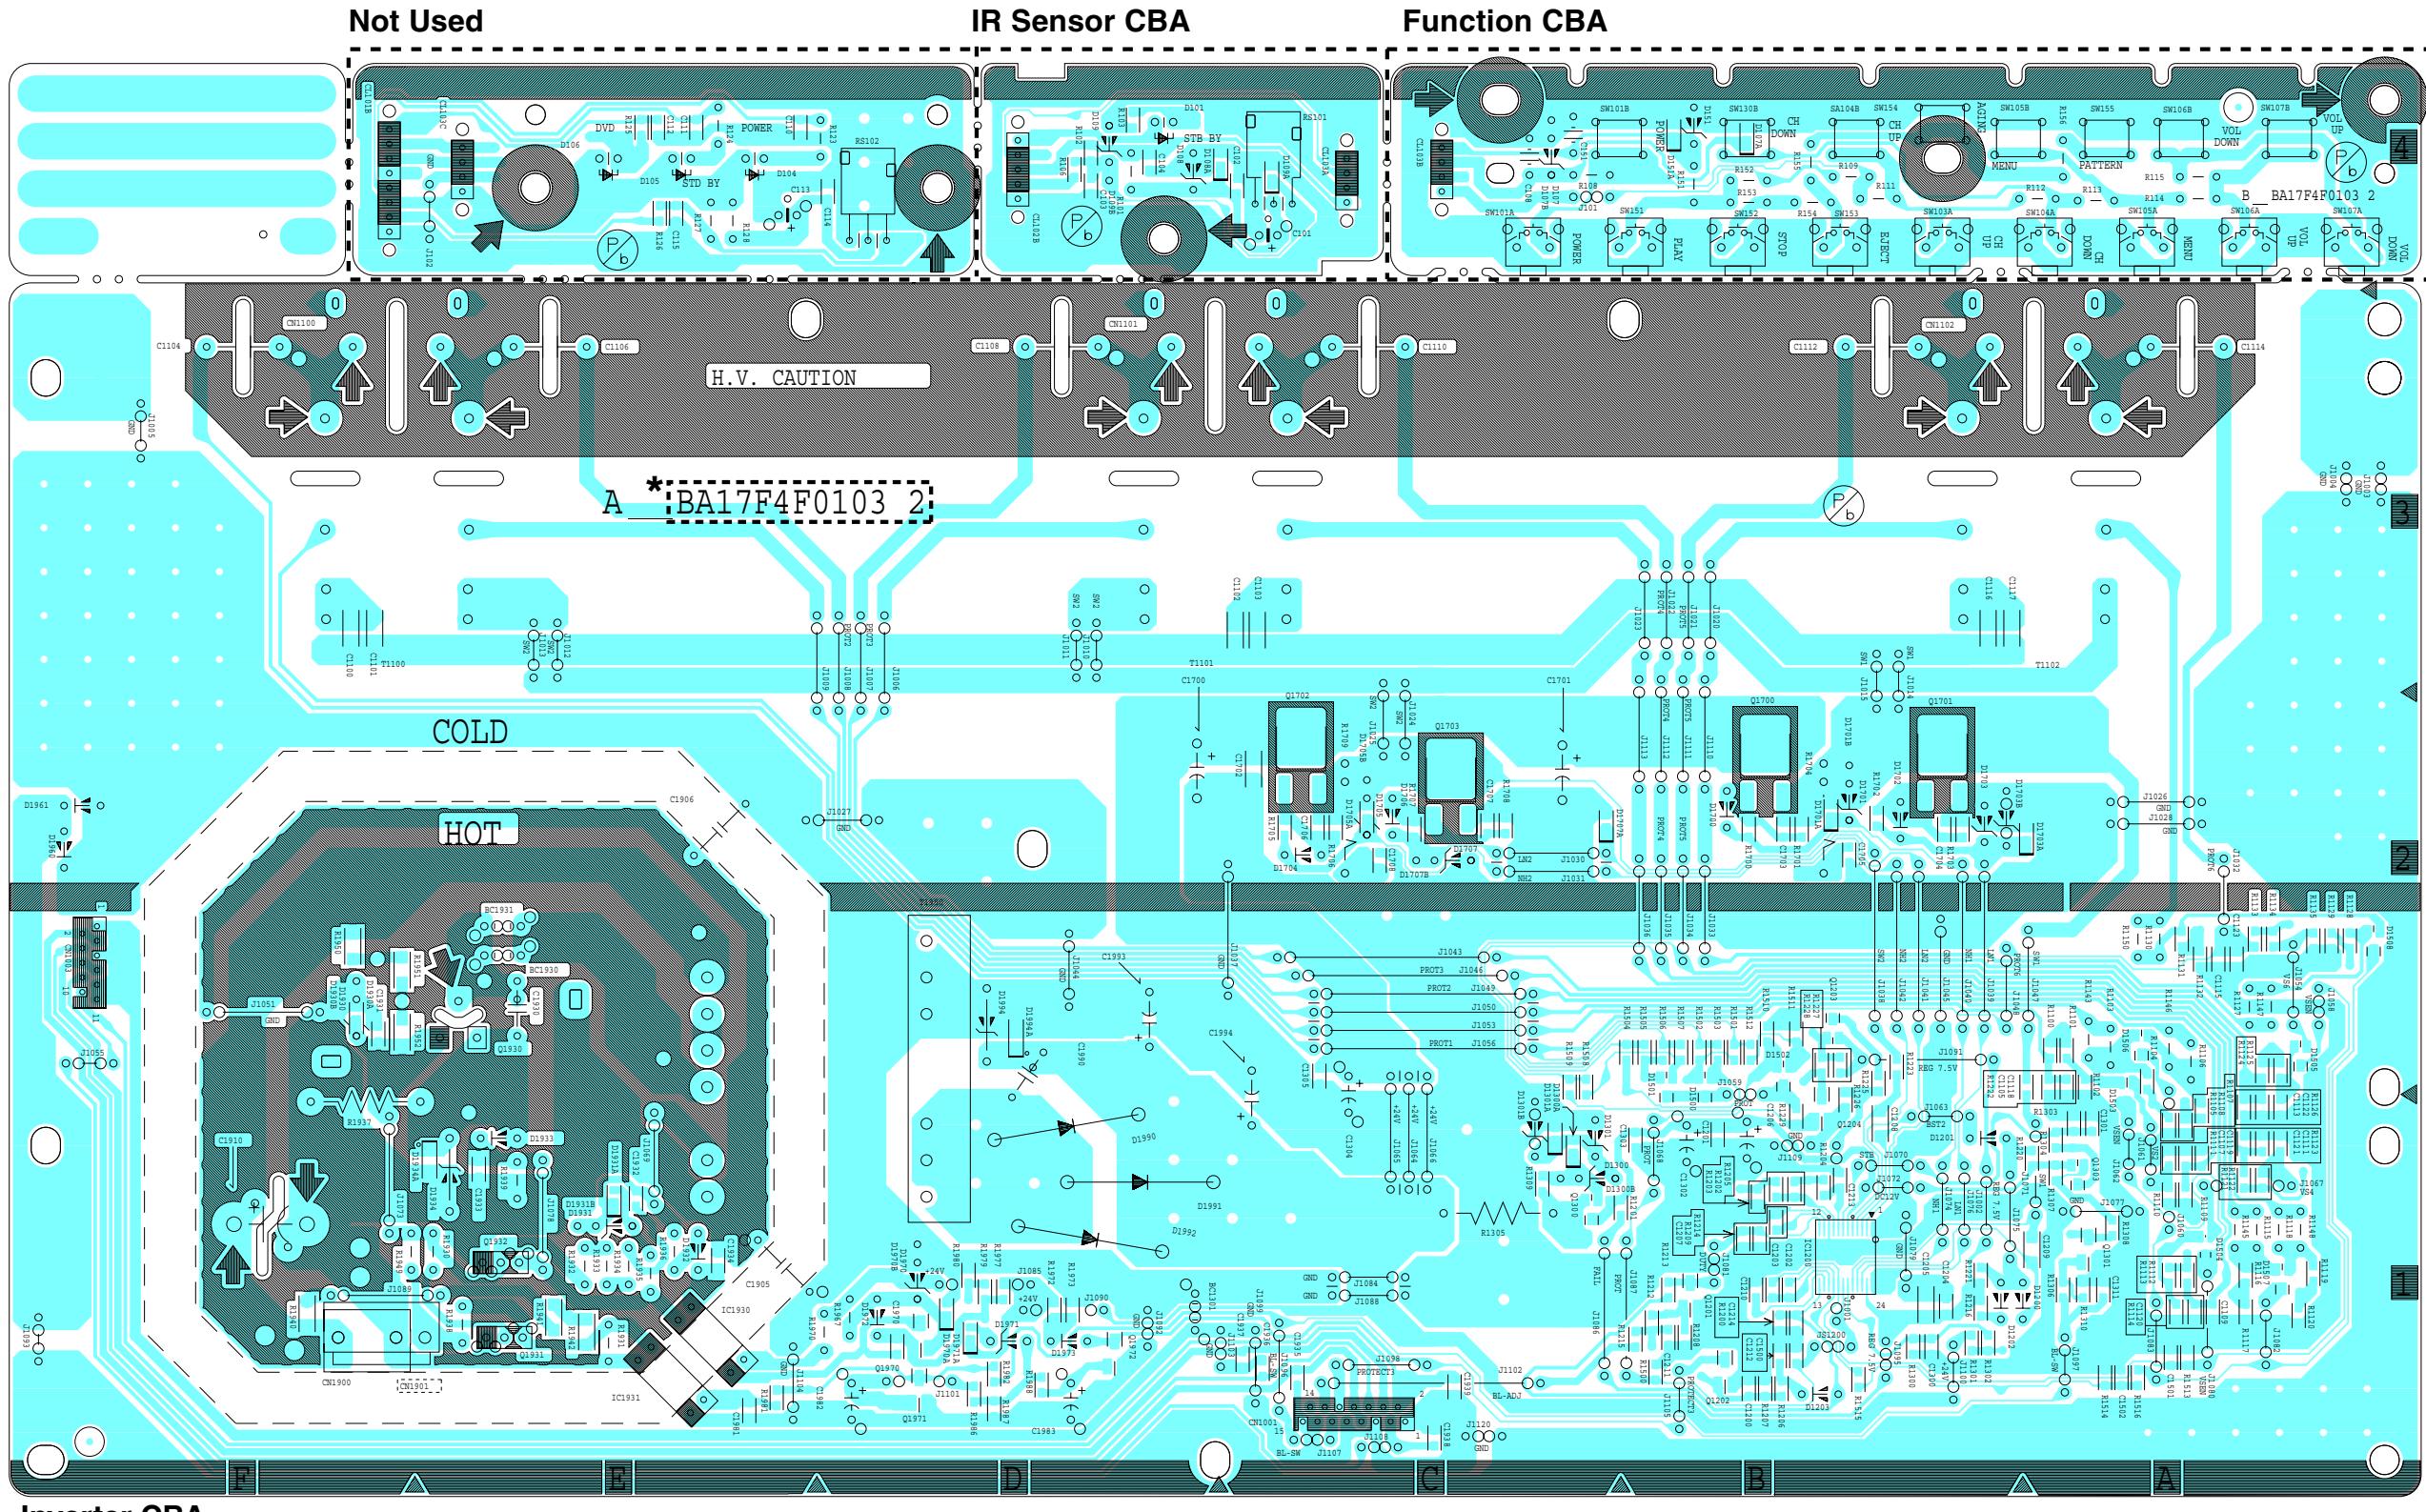

Inverter CBA

Inverter CBA, Function CBA & IR Sensor CBA Top View (sub Inverter CBA)

Because a hot chassis ground is present in the power supply circuit, an isolation transformer must be used when repairing. Also, in order to have the ability to increase the input slowly, when troubleshooting this type of power supply circuit, a variable isolation transformer is required.


NOTE:

The voltage for parts in hot circuit is measured using hot GND as a common terminal.

* When you conduct a component level repair for the Inverter CBA for any models within this service manual, make sure to refer the right Block Diagrams, Schematic Diagrams/CBA and Parts List.

For the main CBA, the last digit of the board number, which is engraved on every board, should be a number(e.g. BA17F4F0103 2). For the sub CBA, the last digit of the board number, which is engraved on every board, should be an alphabet(e.g. BA17F4F0103 Z).

Function CBA

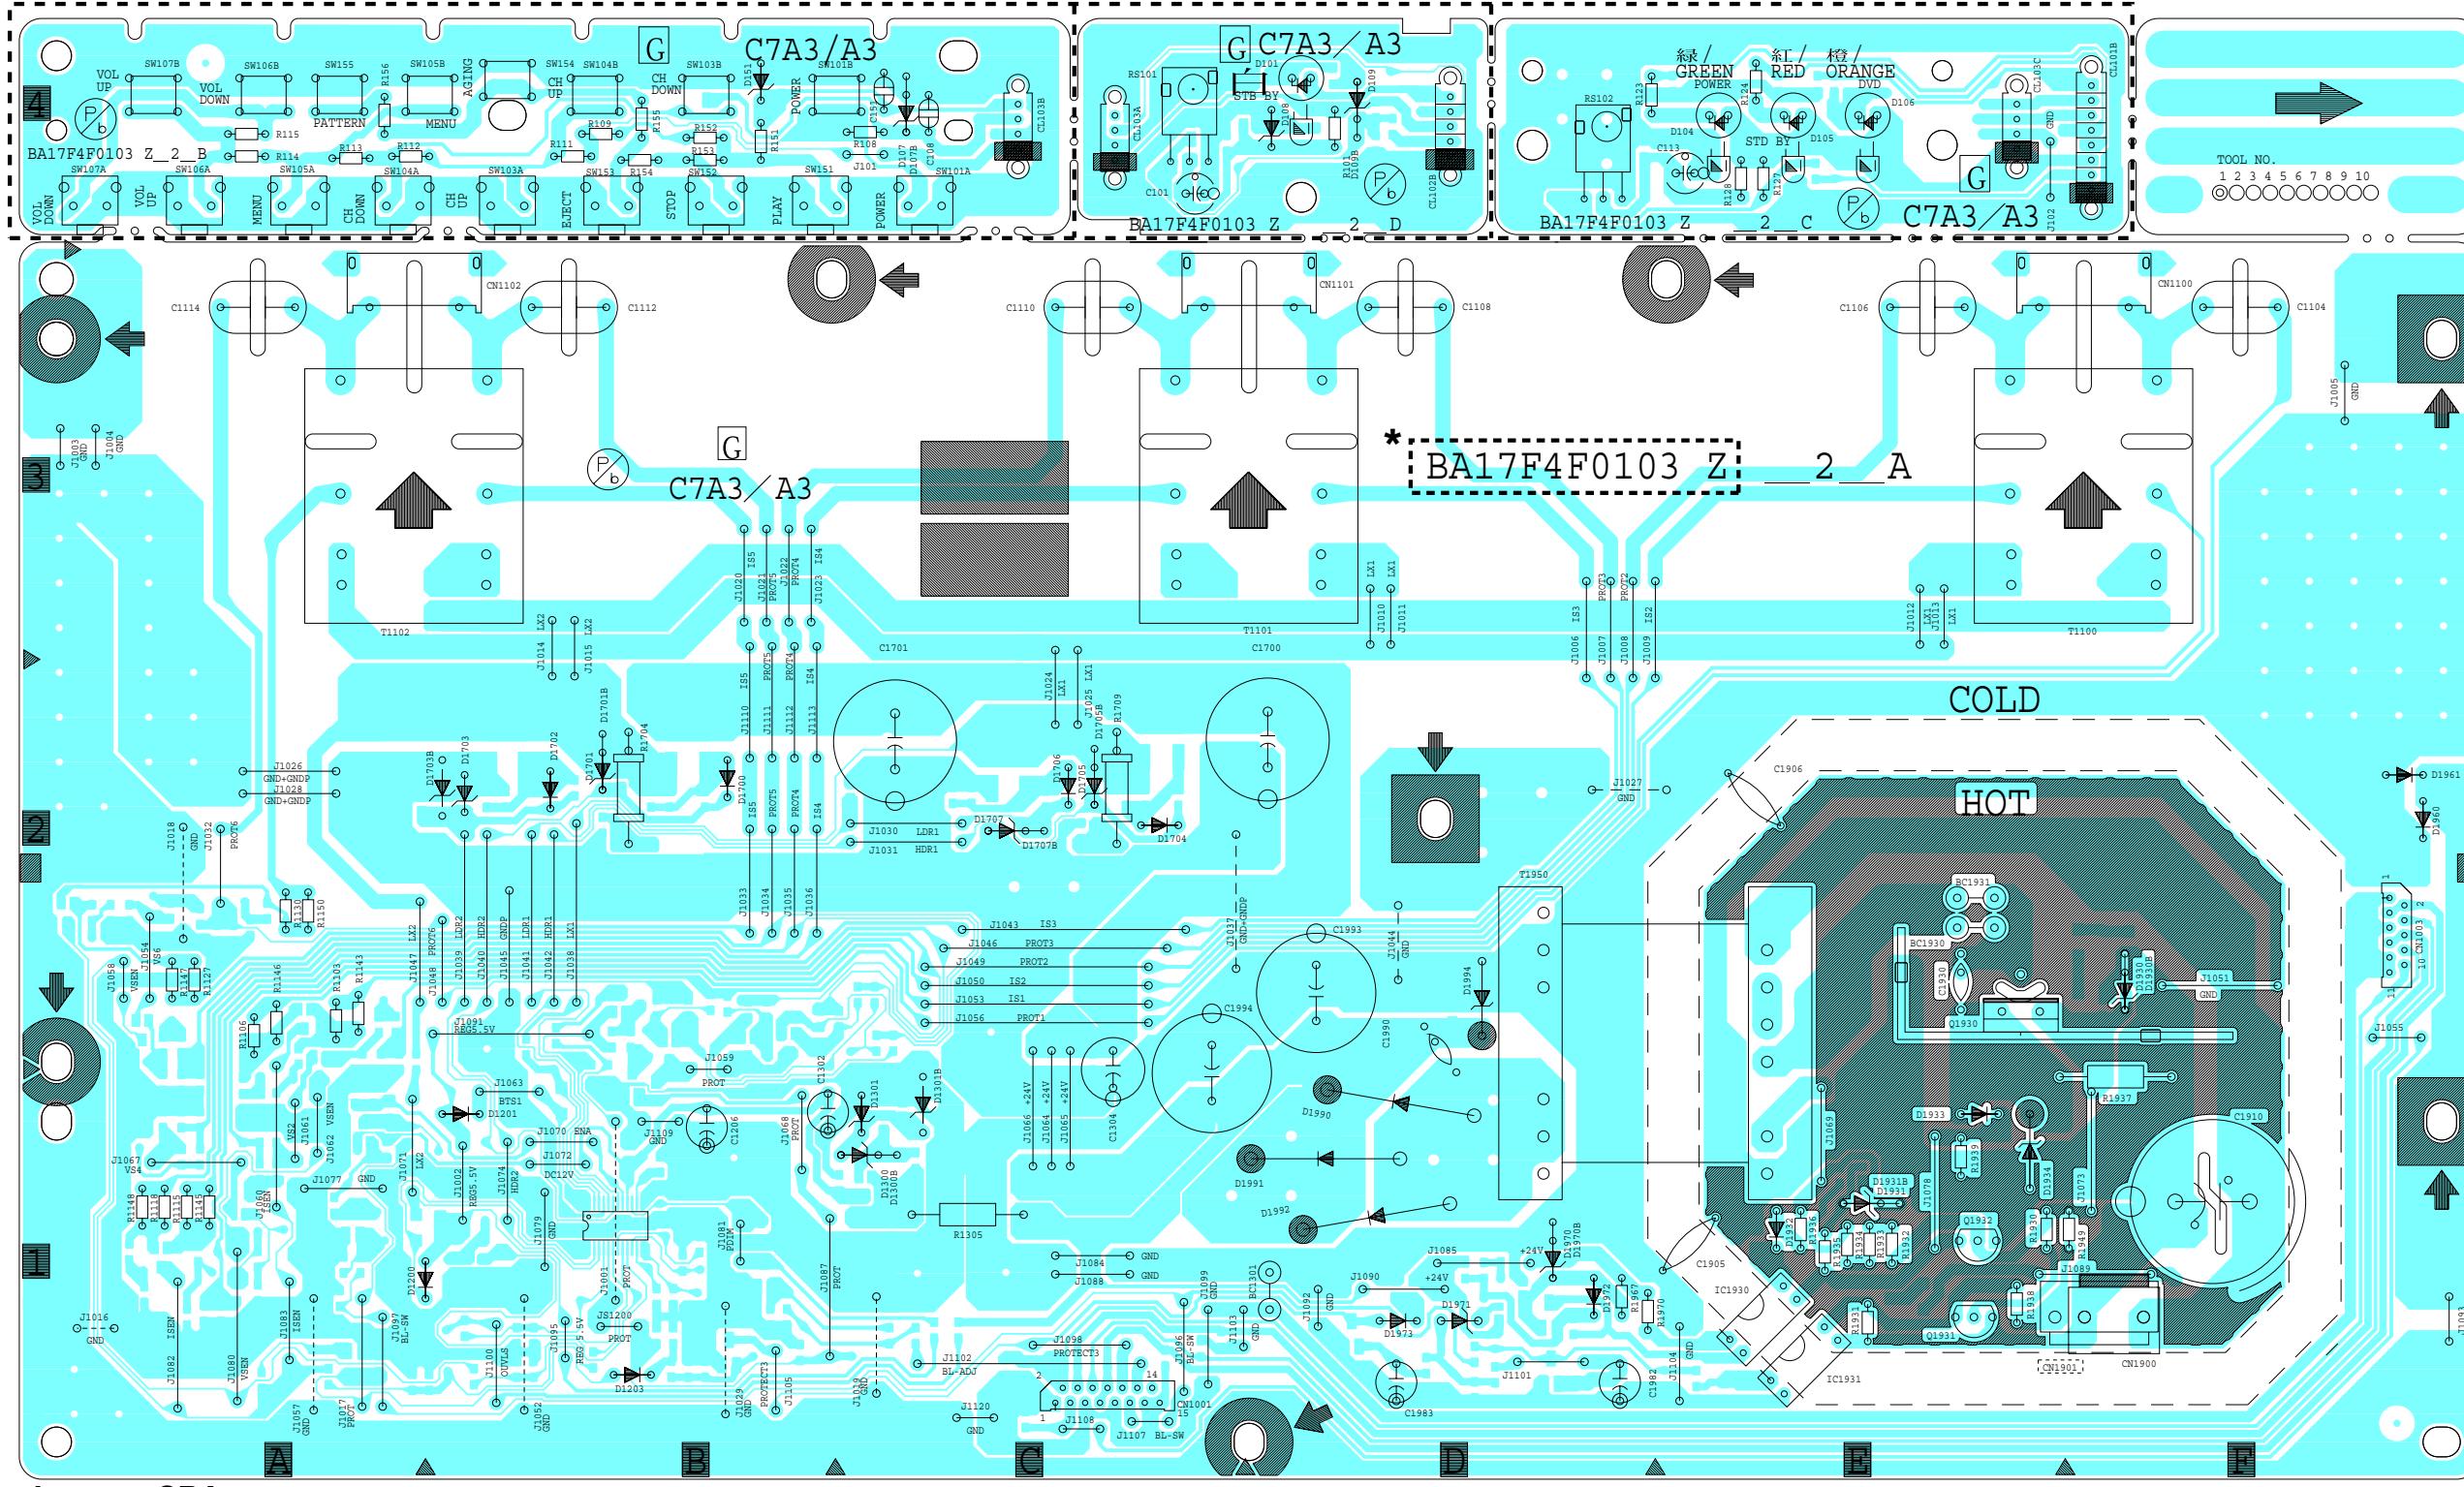


Inverter CBA

Inverter CBA, Function CBA & IR Sensor CBA Bottom View (sub Inverter CBA)

Because a hot chassis ground is present in the power supply circuit, an isolation transformer must be used when repairing. Also, in order to have the ability to increase the input slowly, when troubleshooting this type of power supply circuit, a variable isolation transformer is required.


NOTE:
The voltage for parts in hot circuit is measured using hot GND as a common terminal.

* When you conduct on a component level repair for the Inverter CBA for any models within this service manual, make sure to refer the right Block Diagrams, Schematic Diagrams/CBA and Parts List.
For the main CBA, the last digit of the board number, which is engraved on every board, should be a number(e.g. BA17F4F0103 2).
For the sub CBA, the last digit of the board number, which is engraved on every board, should be an alphabet(e.g. BA17F4F0103 Z).

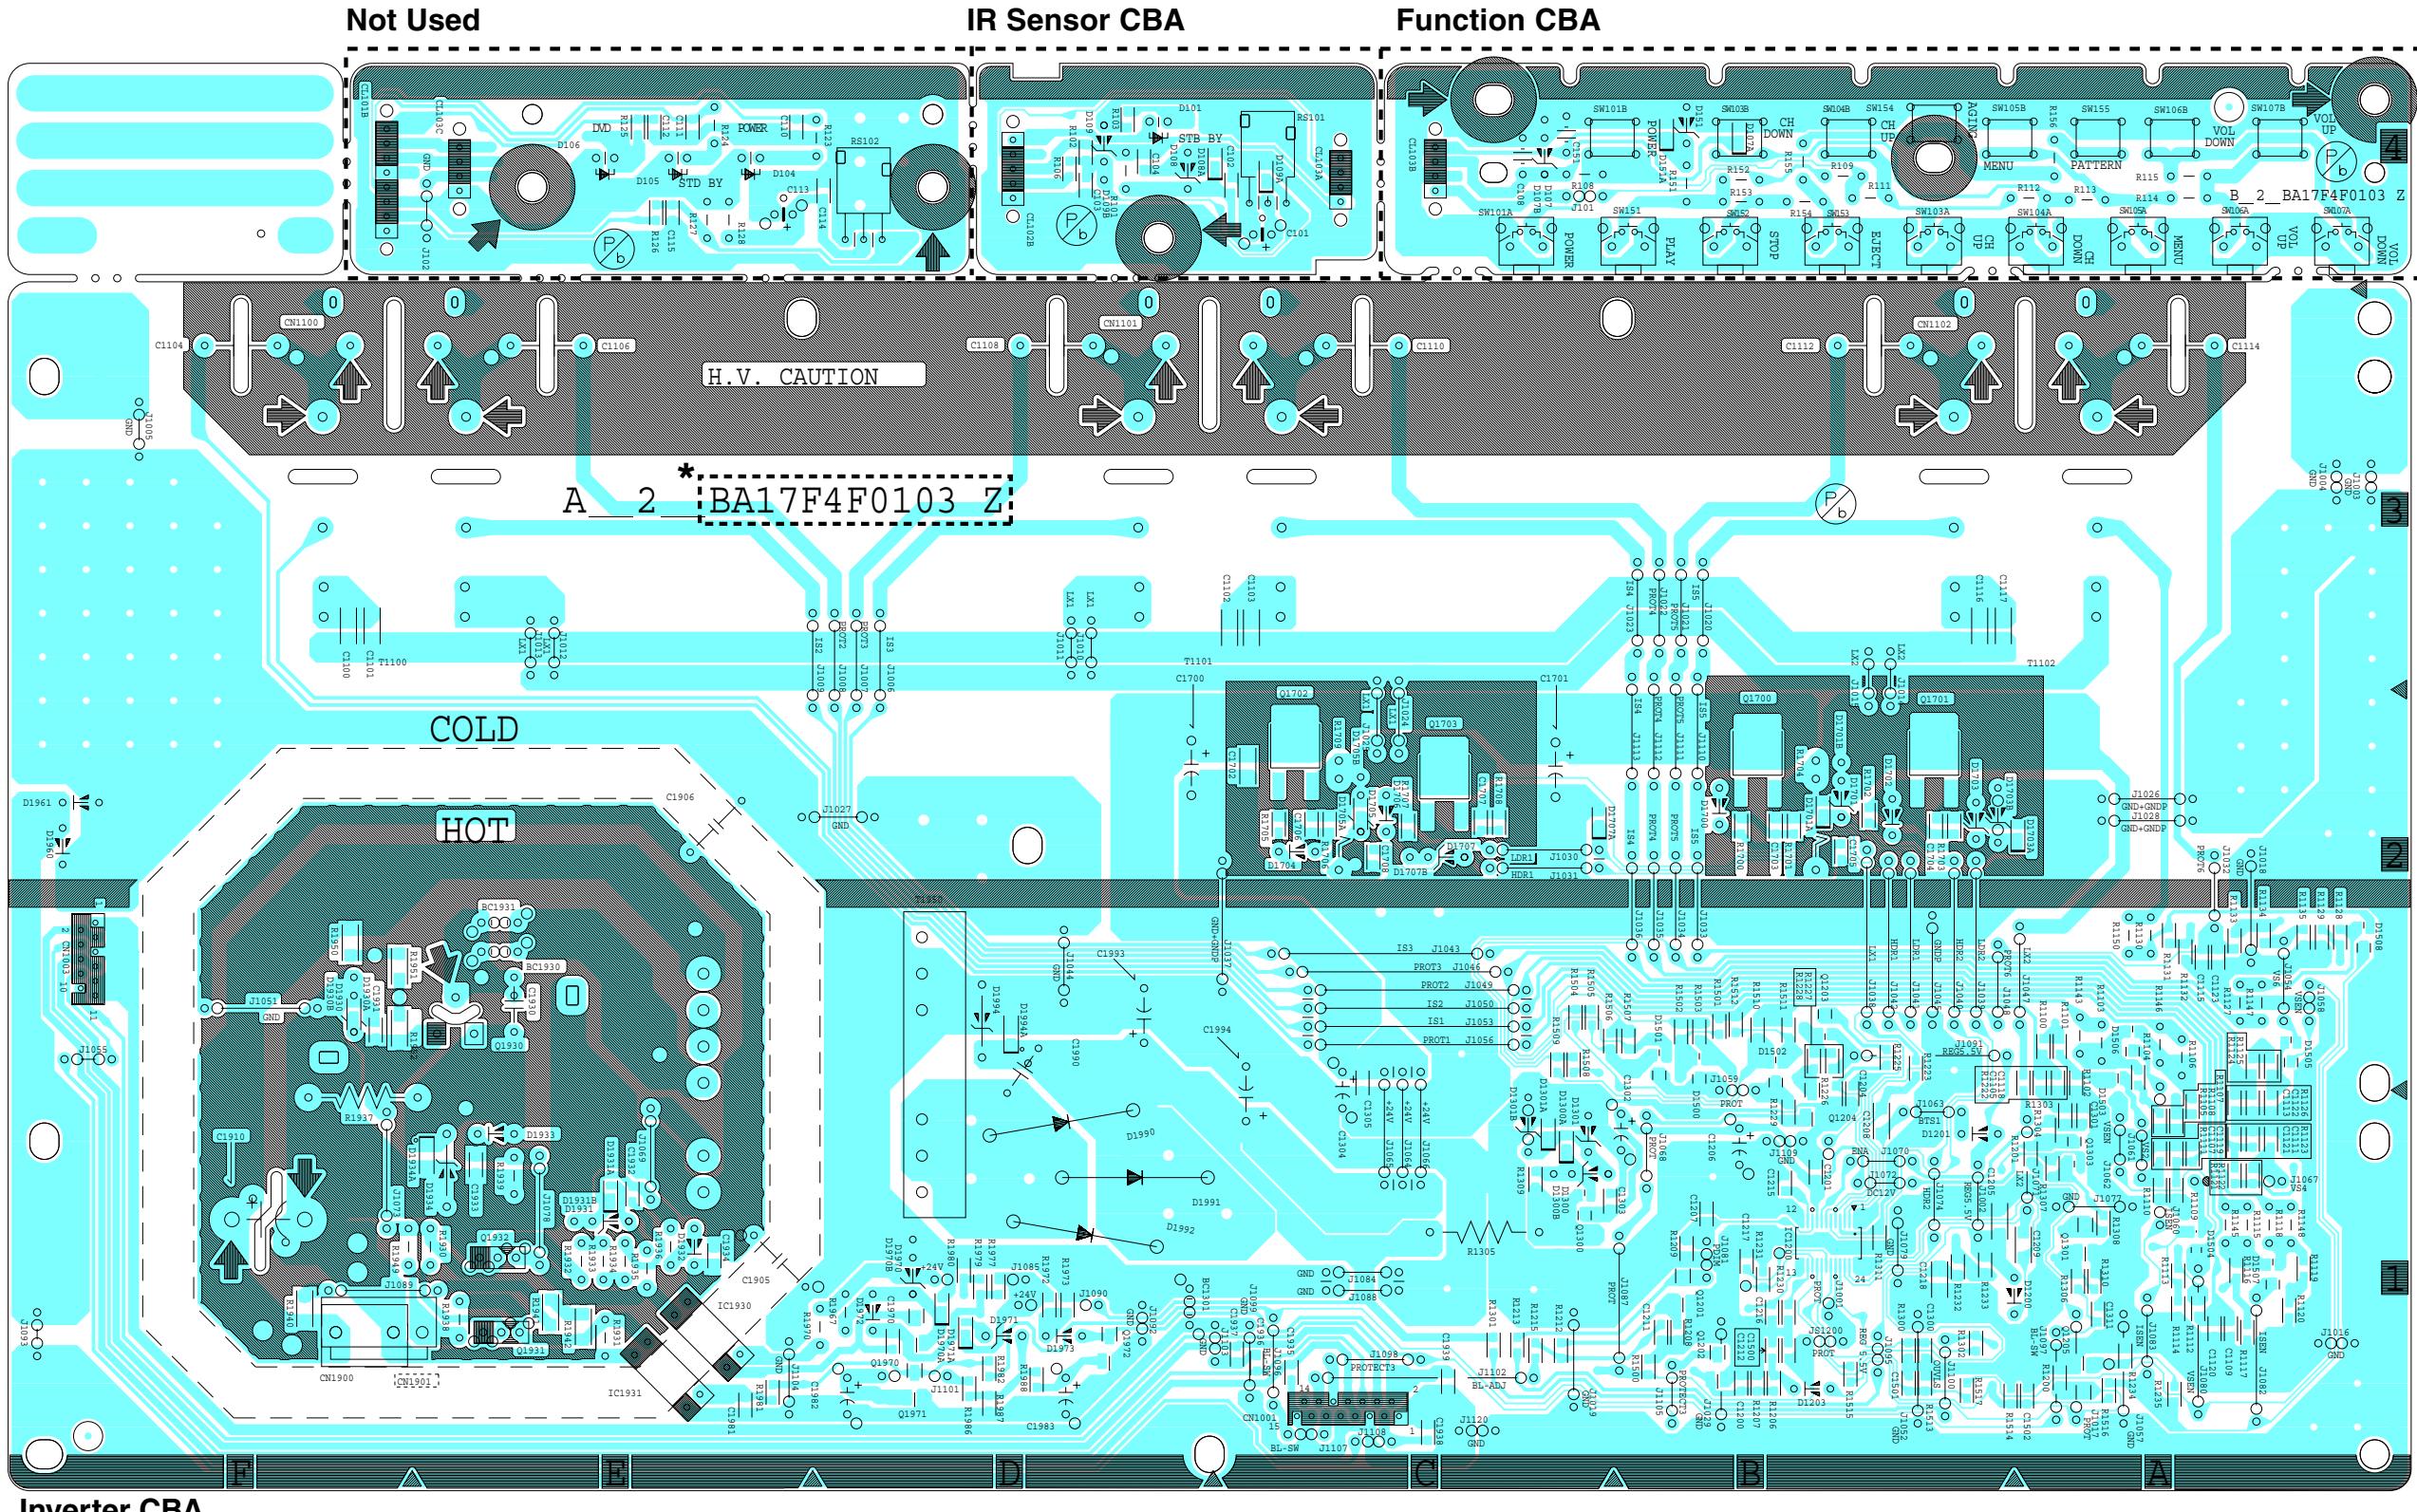


Inverter CBA

WIRING DIAGRAM

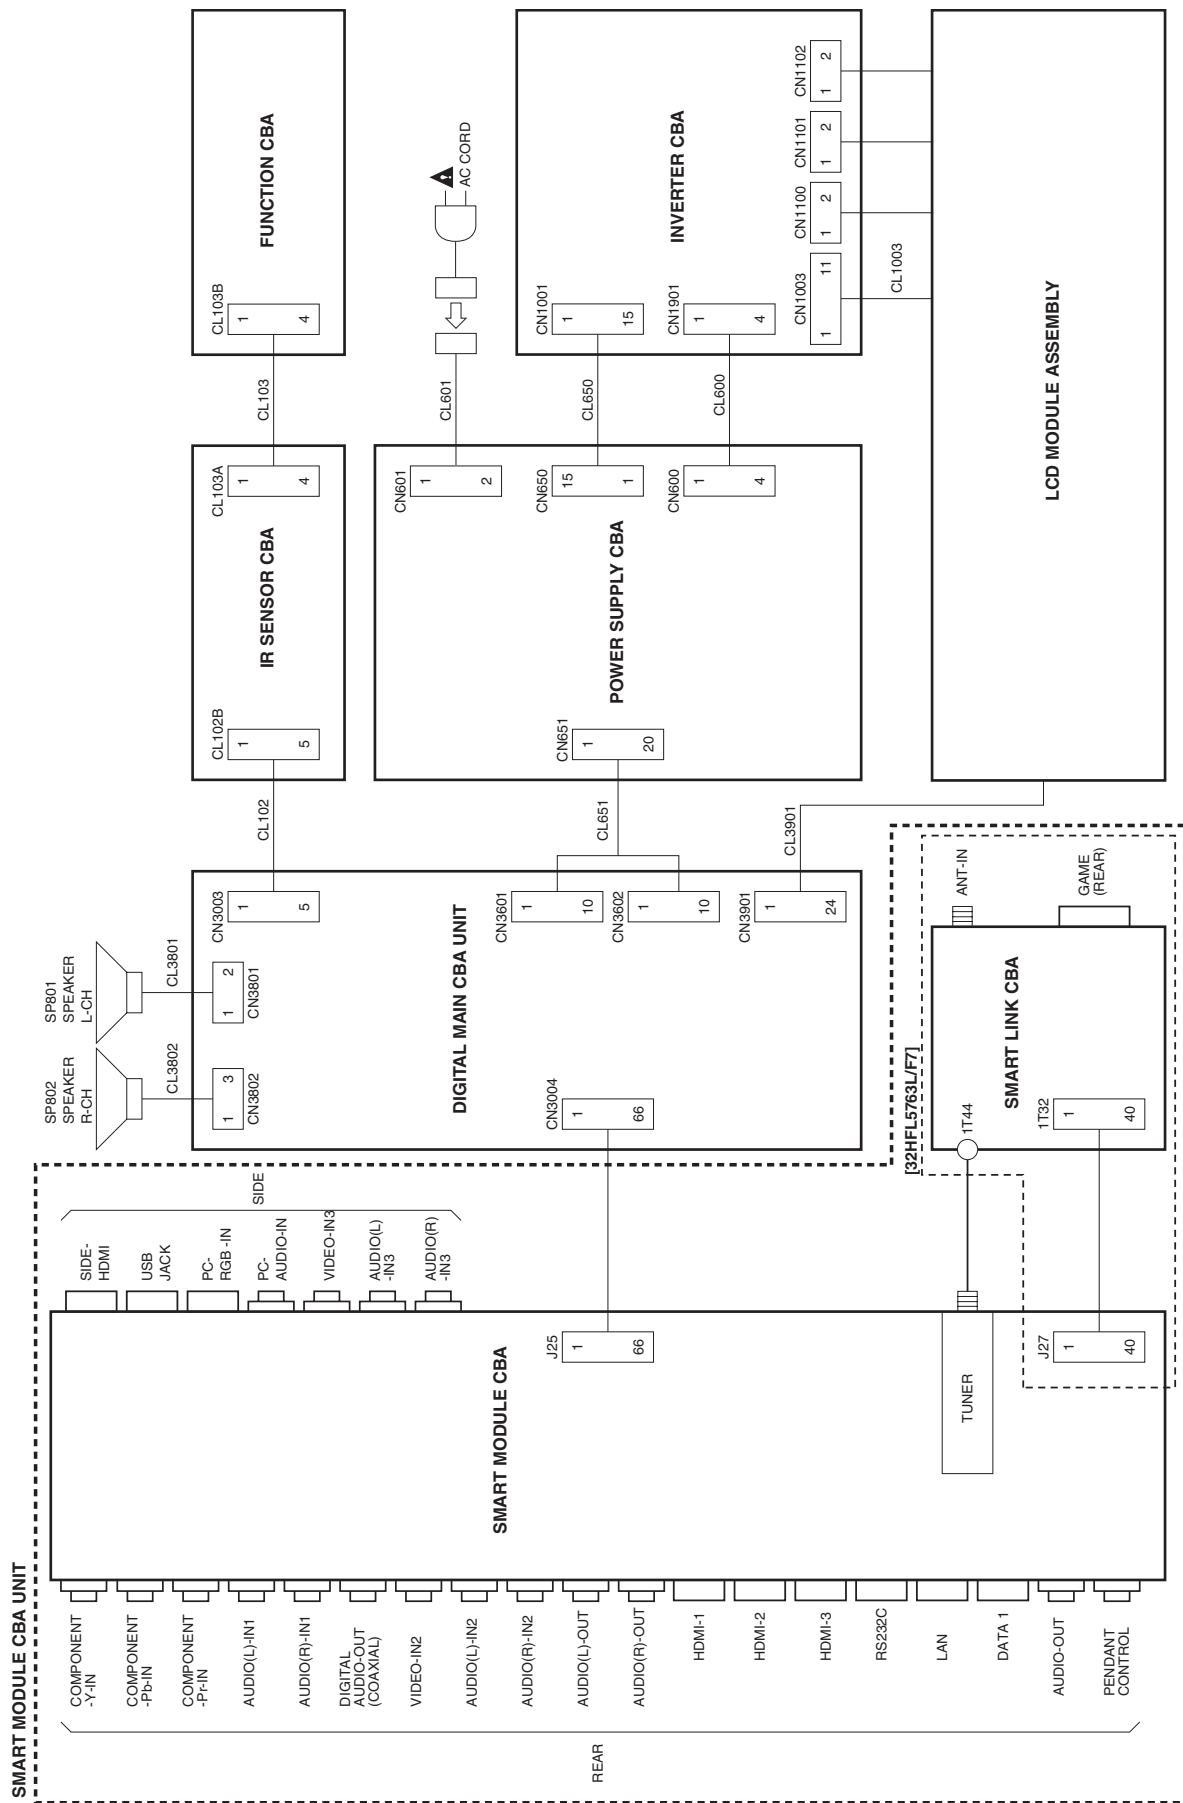


EXPLODED VIEWS

Cabinet [32HFL5763D/F7]

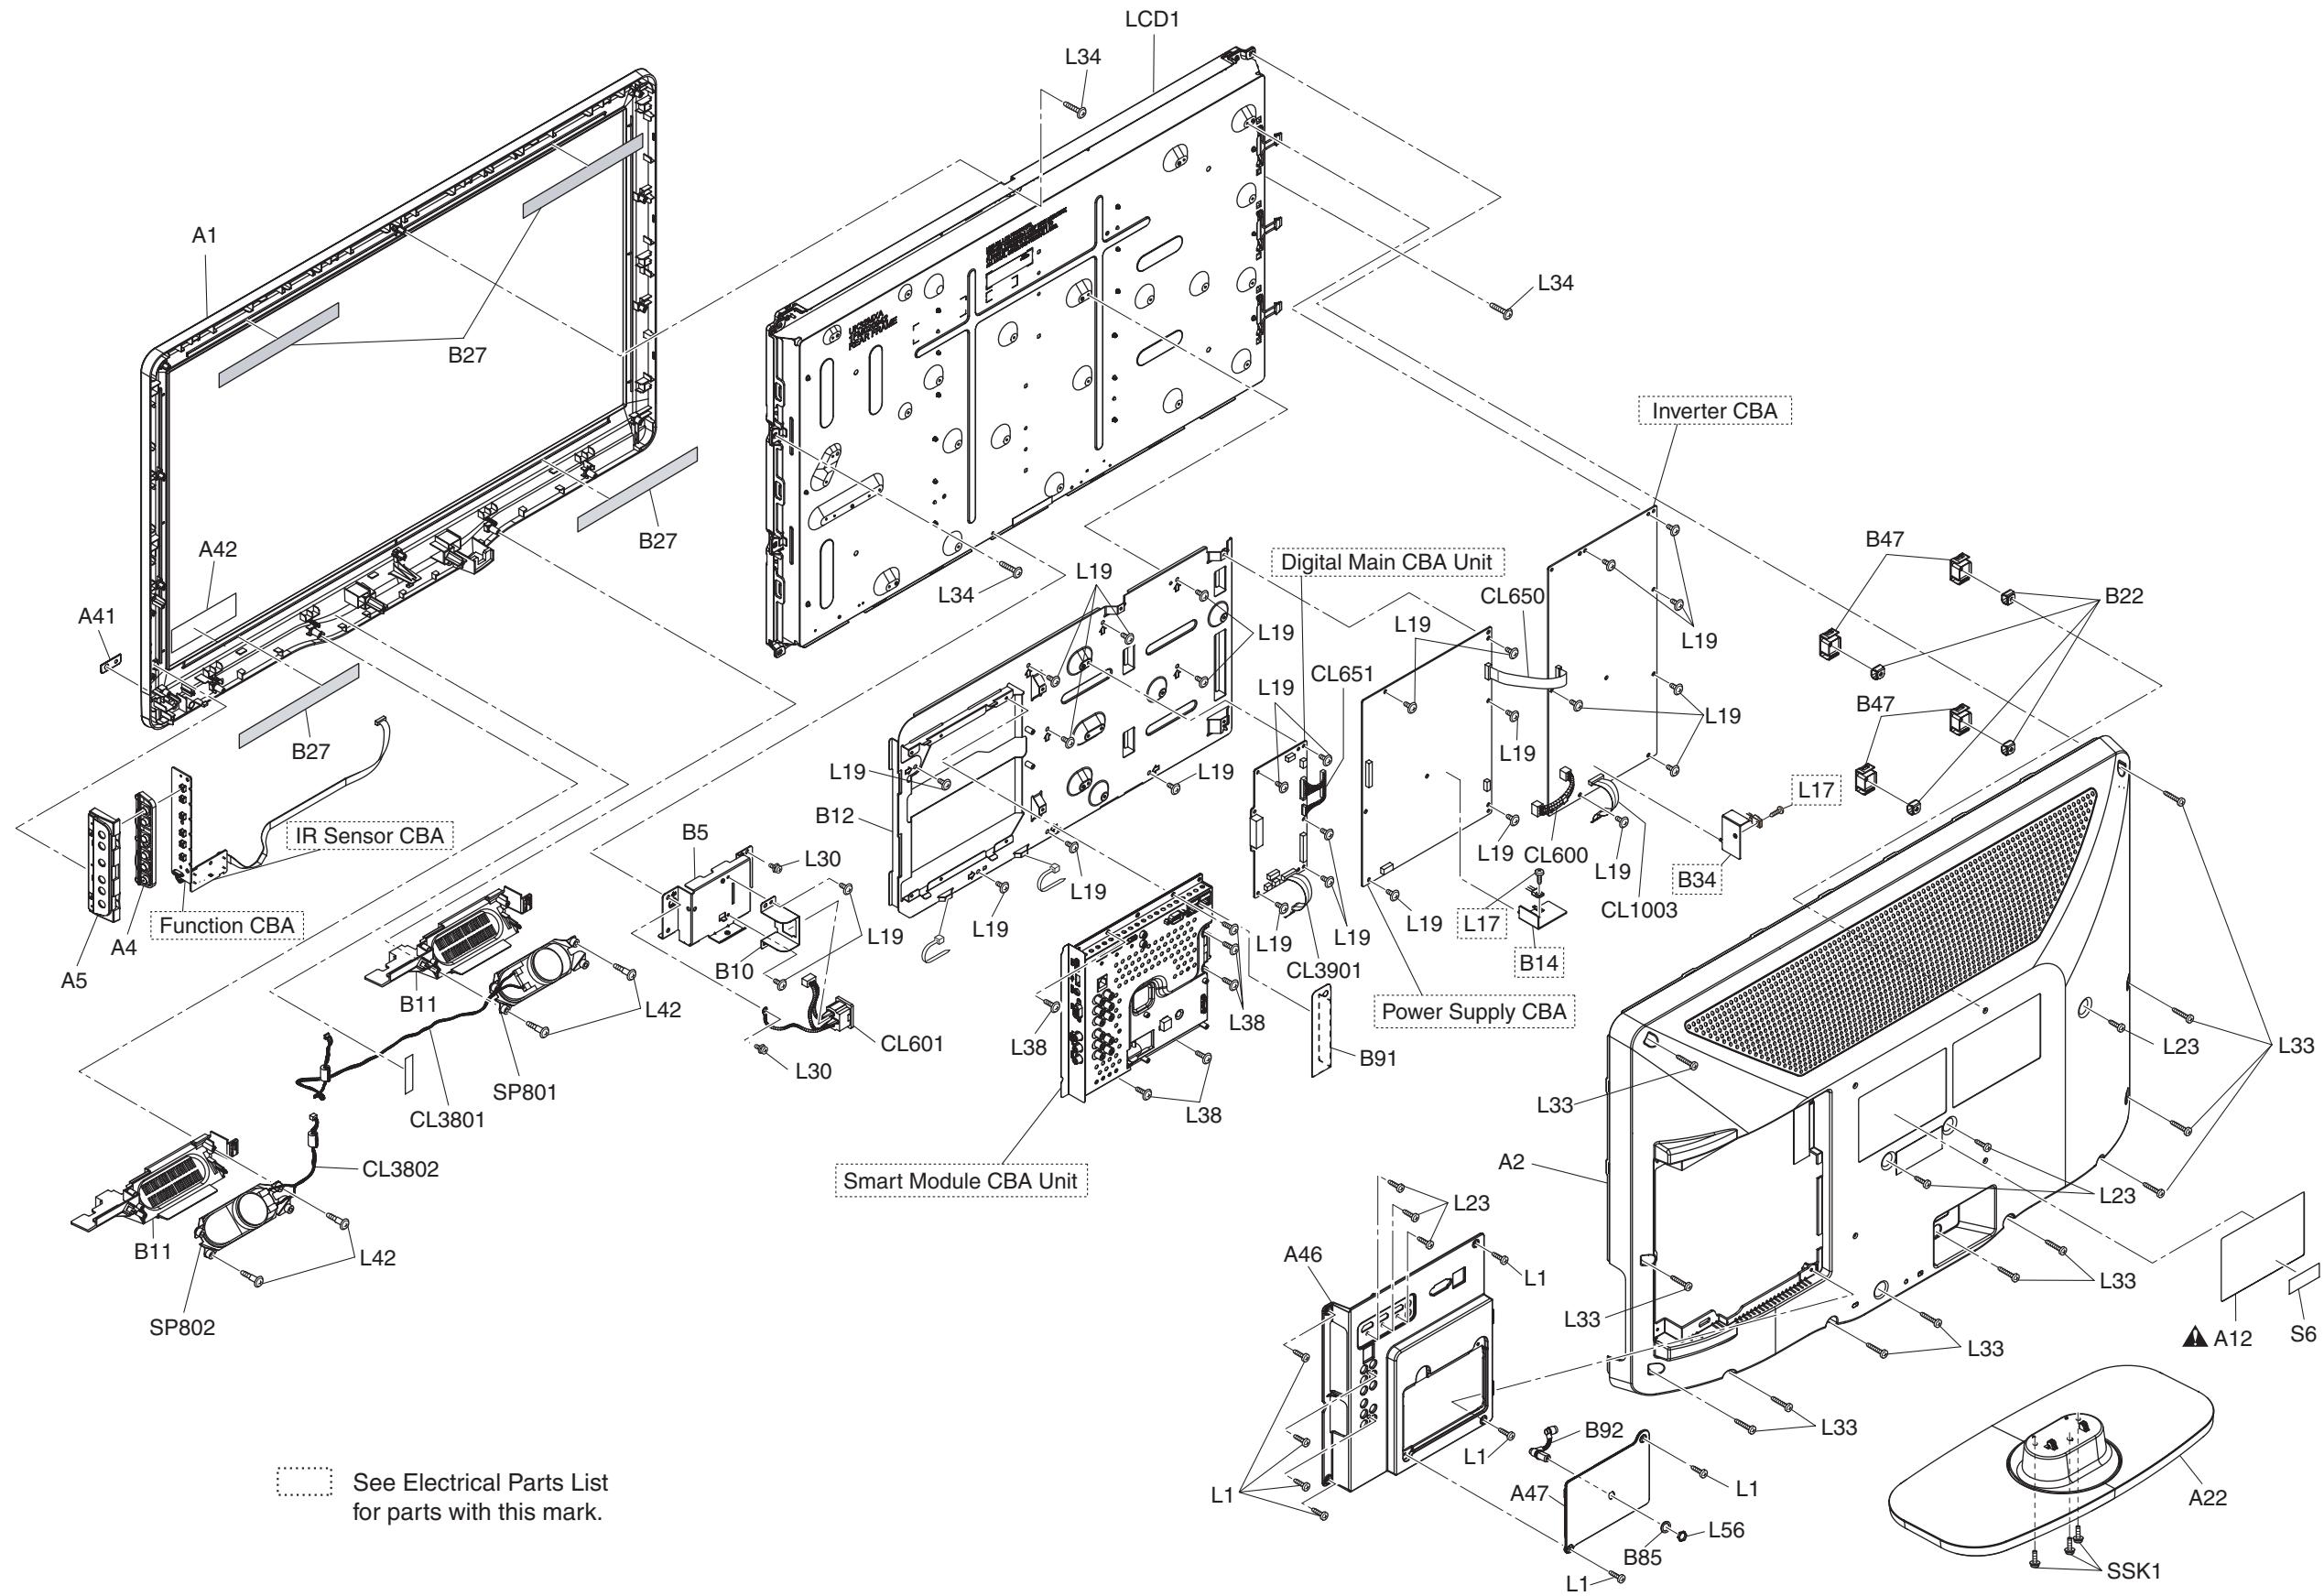


Cabinet [32HFL5763L/F7]

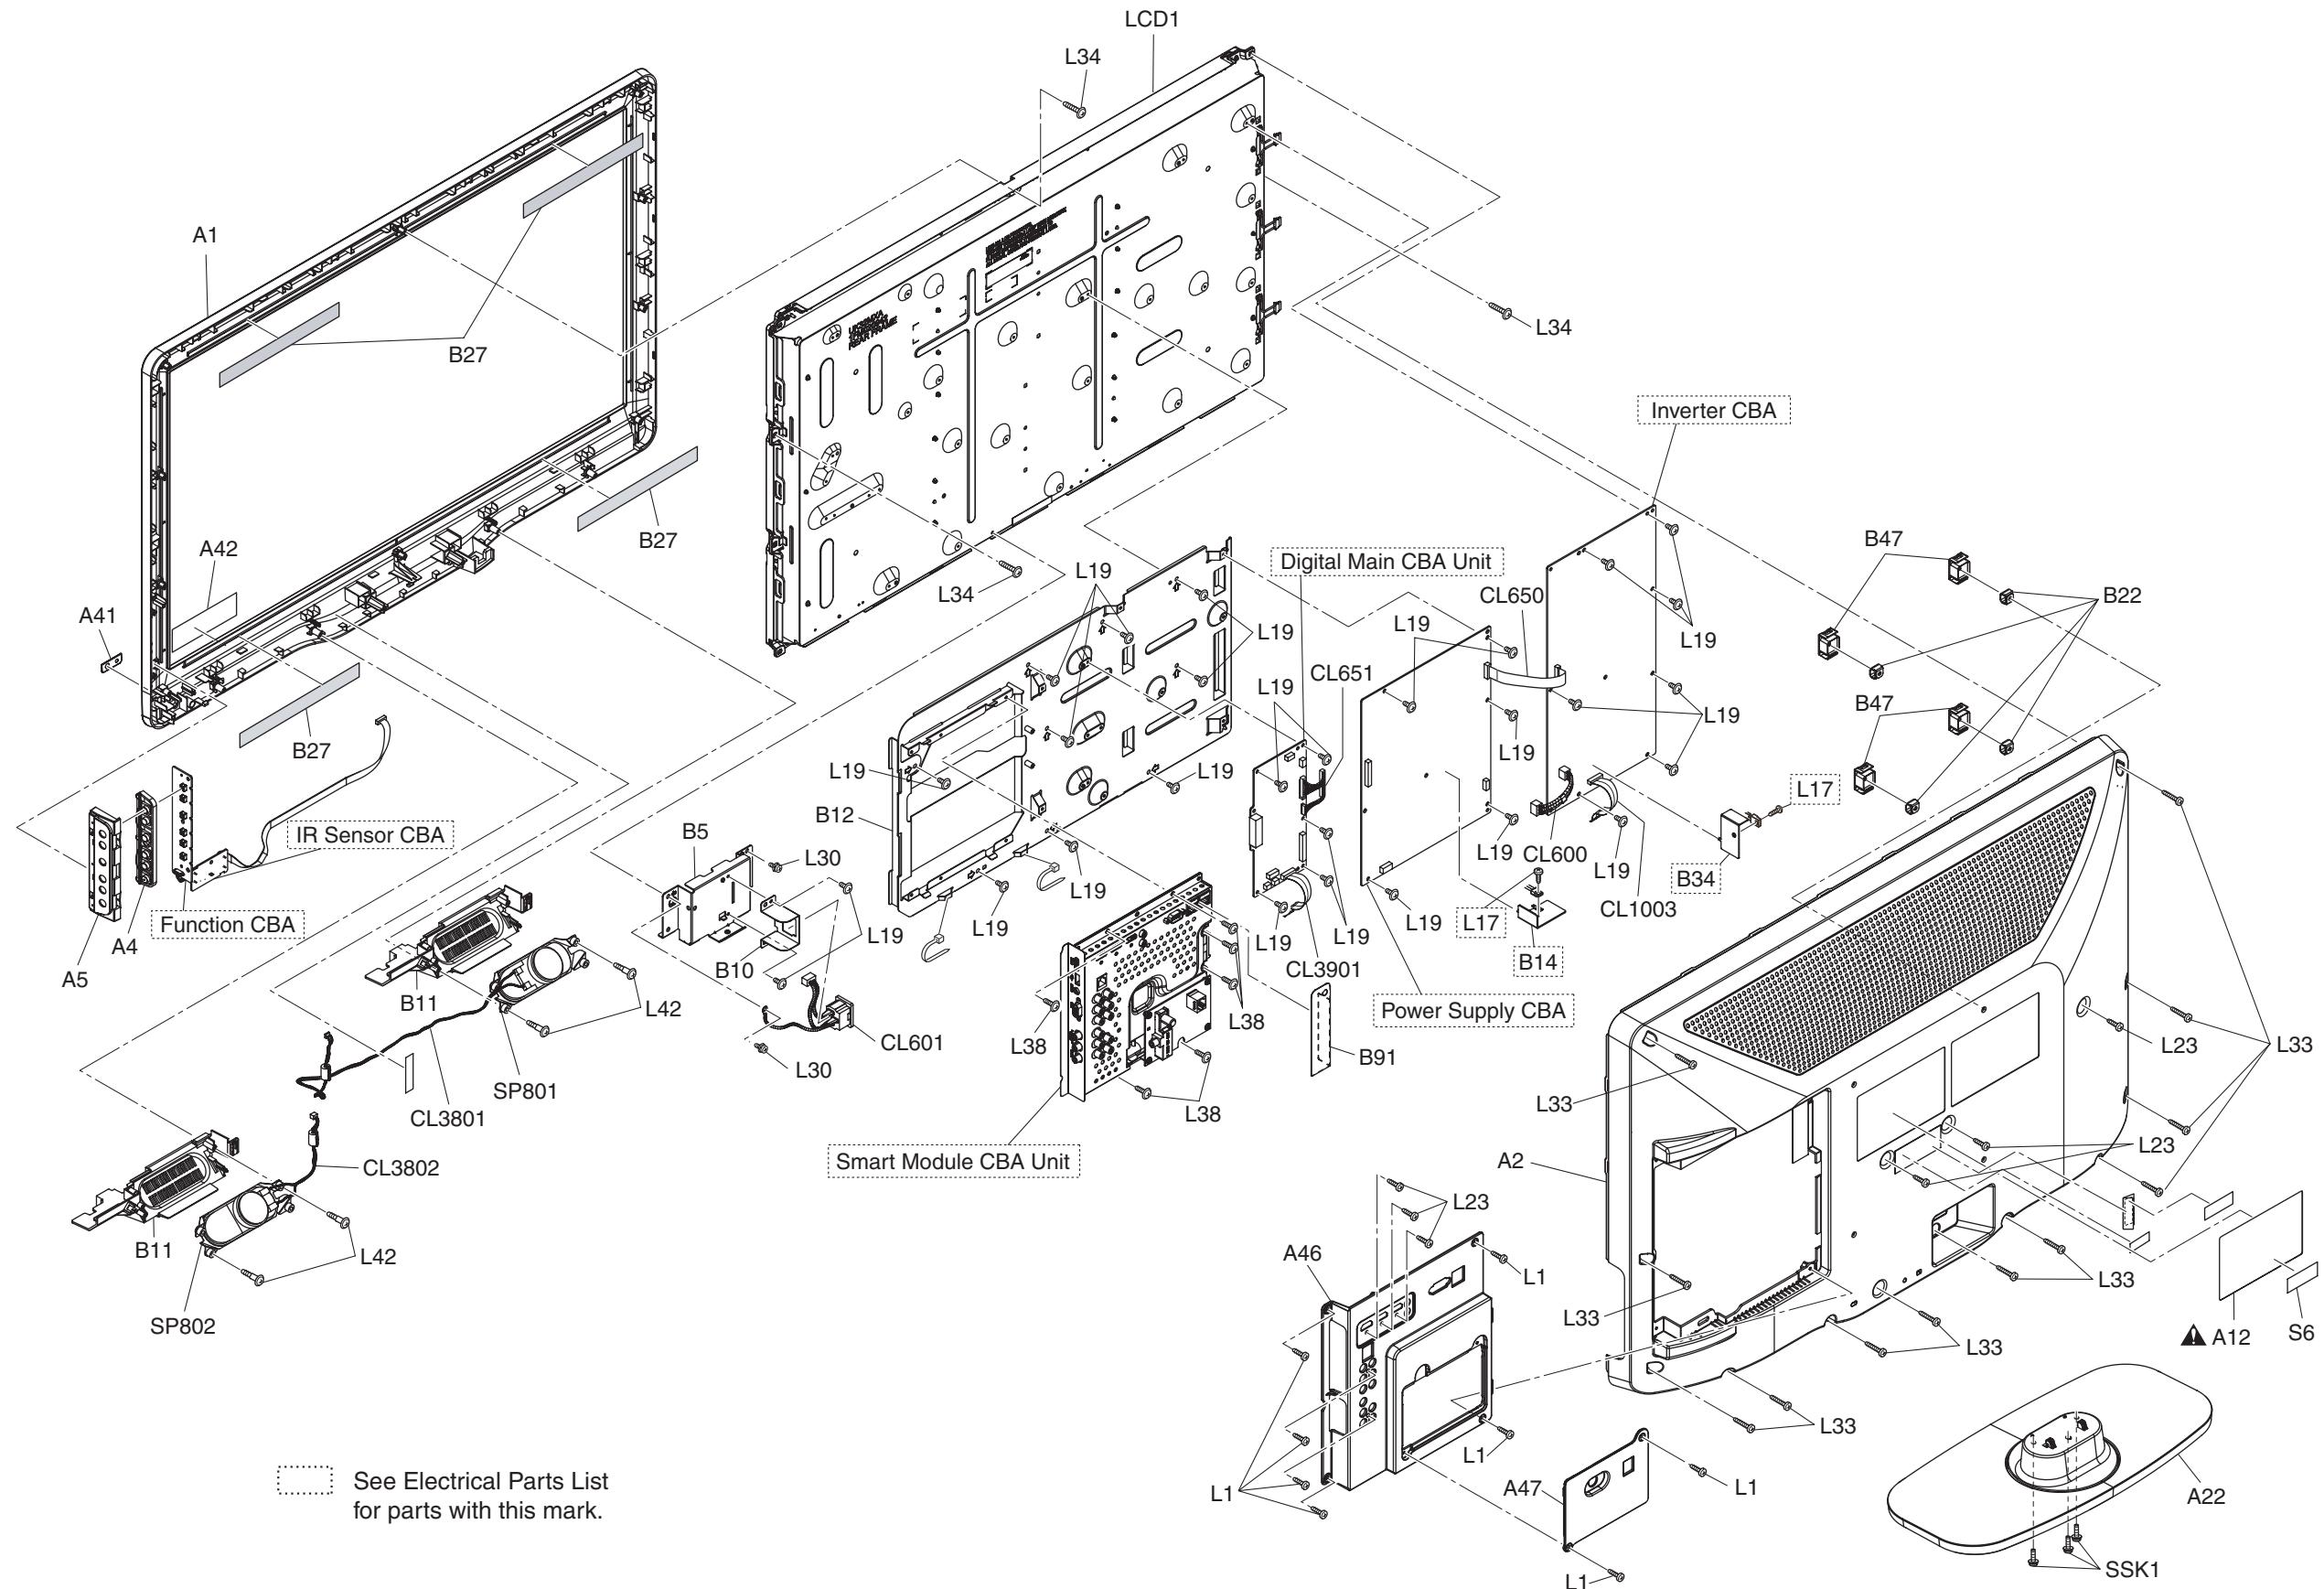

See Electrical Parts List
for parts with this mark.

Packing

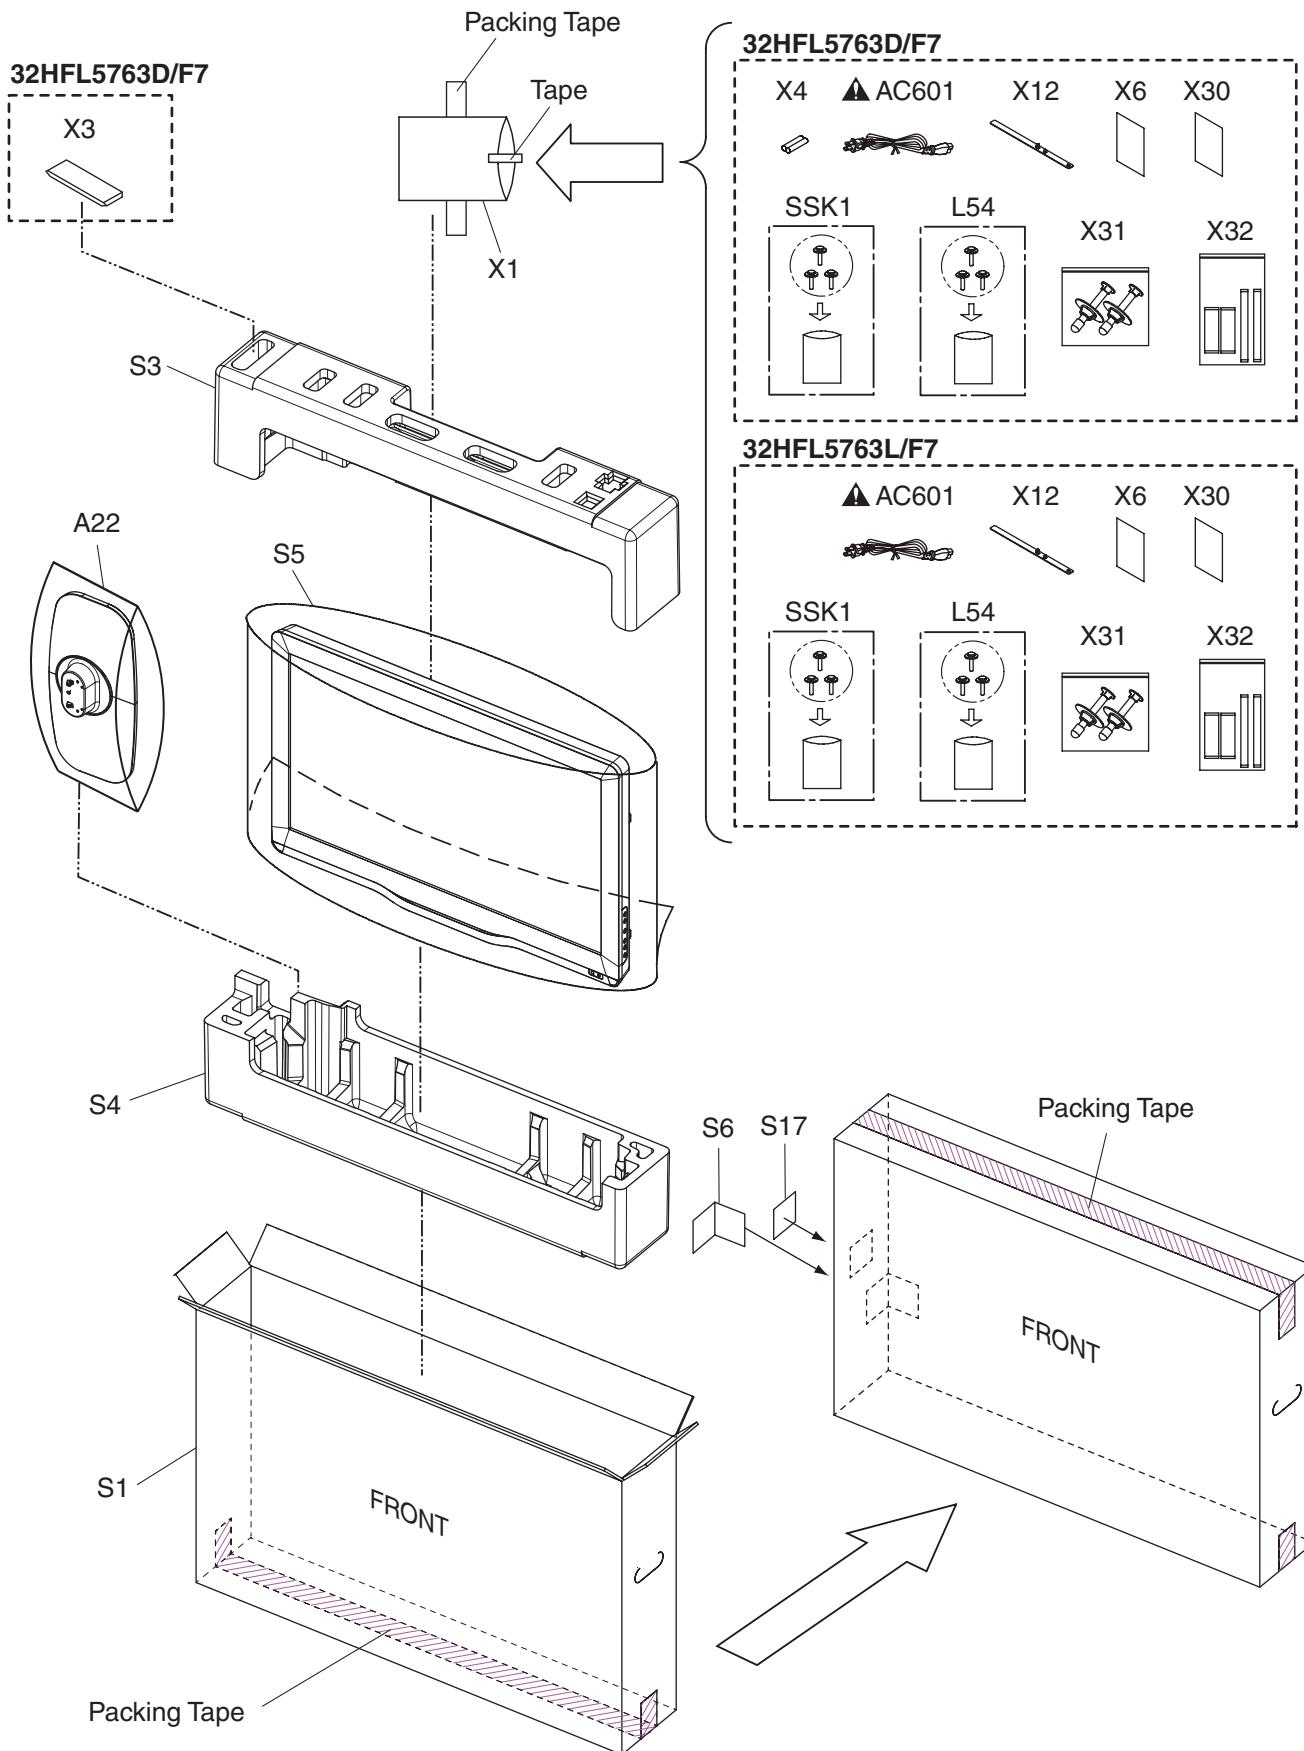

PARTS LIST [32HFL5763D/F7 (Serial No.: DS1)]

Mechanical Parts

PRODUCT SAFETY NOTE: Products marked with a **▲** have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

NOTE: Parts that are not assigned part numbers (-----) are not available.

Ref. No.	Description	Part No.
A1	FRONT CABINET A17F6UH	1EM027428
A2	REAR CABINET A17FXUH	1EM028705
A4	FUNCTION KNOB A17FXUH	1EM332258
A5	KNOB FRAME A17FXUH	1EM332259
A12▲	RATING LABEL A17FYUH	-----
A22	32W STAND ASSEMBLY A17FZUH	1EM028605
A41	SENSOR PLATE A17F6UH	1EM330357A
A42	ENERGY GUIDE LABEL A17FYUH	-----
A46	REAR COVER A17FXUH	1EM027580
A47	TUNER COVER A17FYUH	1EM331999
B5	STAND HOLDER A17FXUH	1EM226763
B10	AC INLET HOLDER A17FXUH	1EM332058
B11	SPEAKER HOLDER A17F6UH	1EM126056
B12	PCB HOLDER A17FXUH	1EM028706
B22	WALL MOUNT BRACKET A11N0UH	1EM434637
B27	CLOTH(10X180XT0.5) L0336JG	0EM408827
B47	WALL MOUNT COVER A2170UT	1EM332137
B85	WASHER(D14XD9.6XT1) ST200UA	0EM408262A
B91	SEPARATION SHEET ESD A17FXUH	1EM333017
B92	F TO RCA CONNECTOR FR360-7ZNNNP0-B	UCGANNU001
CL600	WIRE ASSEMBLY 4PIN 75MM 4PIN/75MM	WX1A17FY-002
CL601	WIRE ASSEMBLY 3PIN 90MM 3PIN/90MM	WX1A17FY-010
CL650	FFC WIRE ASSEMBLY 15PIN 70MM 15PIN/70MM	WX1A17FY-001
CL651	WIRE ASSEMBLY 20PIN 50MM 20PIN/50MM	WX1A17FY-006
CL1003	WIRE ASSEMBLY 11PIN FFC 11PIN/129MM	WX1A01F4-111
CL3801	WIRE ASSEMBLY 2PIN 500MM 2PIN/500MM	WX1A17FY-013
CL3802	WIRE ASSEMBLY 2PIN 120MM 2PIN/120MM	WX1A17FY-024
CL3901	FFC WIRE ASSEMBLY 24PIN 268MM 24PIN/268MM	WX1A17FY-011
L1	SCREW P-TIGHT 3X10 BIND HEAD+	GBHP3100
L19	ASSEMBLED SCREW (D9 M3X6) A71F0UH	1EM424392B
L23	SCREW TAP TIGHT M3X10 BIND HEAD+BLK NI	GBHS3100
L30	SCREW SEMS M4X8 PAN HEAD +	FPJ34080
L33	SCREW P-TIGHT 3X14 BIND HEAD+ BLK	GBHP3140
L34	SCREW P-TIGHT 3X14 WASHER HEAD+	GCJP3140
L38	SCREW S-TIGHT 3X8 WASHER HEAD+BLAC	GCHS3080
L42	SHOULDER SCREW A01Q0UF	1EM328277
L56	NUT 3/8-32UNEF	0EM401451A
SSK1	STAND SCREW KIT A17F1UH	1ESA27587
LCD1	LCD MODULE	UK32AXB
SP801	SPEAKER MAGNETIC S0412F28B	DS08130XQ002
SP802	SPEAKER MAGNETIC S0412F28C	DS08130XQ003
PACKING		
S1	CARTON A17FXUH	1EM436940

Ref. No.	Description	Part No.
S3	STYROFOAM TOP A17FXUH	1EM028851
S4	STYROFOAM BOTTOM A17FXUH	1EM028852
S5	SET BAG A17F6UH	1EM330877
S6	SERIAL NO. LABEL A17FZUH	-----
S17	CARTON LABEL A17FYUH	-----
AC601▲	AC CORD WITH GND WIRE PH8CFEDGN0A-09B/3030	WBV3020LW001
L54	STAND SCREW KIT(SECURITY) A17FZUH	1ESA30905
ACCESSORIES		
X1	BAG POLYETHYLENE 235X365XT0.03	0EM408420A
X3	REMOTE CONTROL UNIT YKF230-024	URMT36JHG002
X4	BATTERY R03-B500/01S	XB0M451CZB01
X6	QUICK START GUIDE A17PXUH	1EMN28959
X12	CABLE MANAGEMENT TIE(BLACK) A01F2UH	1EM431197
X30	WARRANTY SHEET A17FZUH	1EMN29039
X31	SECURITY SCREW KIT A17FZUH	1EM332298
X32	SECURITY TAPE KIT A17FZUH	1EM332299

Electrical Parts

PRODUCT SAFETY NOTE: Products marked with a **▲** have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

NOTES:

1. Parts that are not assigned part numbers (-----) are not available.
2. Tolerance of Capacitors and Resistors are noted with the following symbols.

C.....±0.25%	D.....±0.5%	F.....±1%
G.....±2%	J.....±5%	K.....±10%
M.....±20%	N.....±30%	Z.....+80/-20%

3. When you conduct on a component level repair for the Inverter CBA for any models within this service manual, make sure to refer the right Block Diagram/Schematic Diagram/ CBA and Parts List.

For the main CBA, the last digit of the board number, which is engraved on every board, should be a number (e.g. BA17F4F0103 2).

For the sub CBA, the last digit of the board number, which is engraved on every board, should be an alphabet (e.g. BA17F4F0103 Z).

SMART MODULE CBA UNIT

Ref. No.	Description	Part No.
	SMART MODULE CBA UNIT	UPBMATZNW001

DIGITAL MAIN CBA UNIT

Ref. No.	Description	Part No.
	DIGITAL MAIN CBA UNIT	A17FYMMA-001

POWER SUPPLY CBA

Ref. No.	Description	Part No.
	POWER SUPPLY CBA Consists of the following:	A17FYMPW-001
CAPACITORS		
C600	CHIP CERAMIC CAP.(1608) F Z 0.1µF/50V	CHD1JZ30F104
C601▲	CAP METALIZED FILM 0.47µF/250V/K/MPX	CTA474EUR001
C603	ELECTROLYTIC CAP. 100µF/50V M	CE1JMASDL101
C604▲	CAP METALIZED FILM 0.47µF/250V/K/MPX	CTA474EUR001
C605▲	CAP METALIZED FILM 0.47µF/250V/K/MPX	CTA474EUR001
C606	CAP ELECTROLYTIC 390µF/200V	CEB391DYG006
C607▲	SAFTY CAP. 220pF/250V KX	CA2E221MR100
C609	CHIP CERAMIC CAP.(1608) B K 0.047µF/50V	CHD1JK30B473
C610	CHIP CERAMIC CAP. B K 1200pF/50V	CHD1JK30B122
C611	CERAMIC CAP. 820pF/2KV	CA3D821PAN04
C612	CHIP CERAMIC CAP. B K 0.068µF/50V	CHD1JK30B683

Ref. No.	Description	Part No.
C613	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C615▲	CAP CERAMIC 470pF/250V KX	CA2E471MR100
C616	CERAMIC CAP. 2200pF/1KV	CCD3AKA0R222
C650	ELECTROLYTIC CAP 3300µF/10V	CE1AMZNDL332
C651	CHIP CERAMIC CAP.(1608) F Z 0.1µF/50V	CHD1JZ30F104
C652	CHIP CERAMIC CAP.(1608) F Z 0.1µF/50V	CHD1JZ30F104
C653	ELECTROLYTIC CAP. 470µF/25V M	CE1EMASDL471
C654	CHIP CERAMIC CAP.(1608) B K 0.01µF/50V	CHD1JK30B103
C656	ELECTROLYTIC CAP. 2200µF/25V M	CE1EMZNDL222
C657	ELECTROLYTIC CAP. 2200µF/25V M	CE1EMZNDL222
C658	ELECTROLYTIC CAP. 2200µF/25V M	CE1EMZNDL222
C659	ELECTROLYTIC CAP. 2200µF/25V M	CE1EMZNDL222
C660	CHIP CERAMIC CAP.(1608) F Z 0.1µF/50V	CHD1JZ30F104
C661	CHIP CERAMIC CAP.(1608) F Z 0.1µF/50V	CHD1JZ30F104
C662	CHIP CERAMIC CAP.(1608) B K 0.1µF/50V	CHD1JK30B104
C663	ELECTROLYTIC CAP. 10µF/50V M	CE1JMASDL100
C664	ELECTROLYTIC CAP. 470µF/25V M	CE1EMASDL471
C665	CHIP CERAMIC CAP. B K 470pF/50V	CHD1JK30B471
C666	CHIP CERAMIC CAP.(1608) F Z 0.1µF/50V	CHD1JZ30F104
C667	CHIP CERAMIC CAP.(1608) F Z 0.1µF/50V	CHD1JZ30F104
C668	ELECTROLYTIC CAP. 2.2µF/50V M	CE1JMASDL2R2
C670	CHIP CERAMIC CAP.(1608) B K 0.1µF/50V	CHD1JK30B104
C673	ELECTROLYTIC CAP. 22µF/50V M	CE1JMASDL220
C676	CHIP CERAMIC CAP.(1608) CH J 1000pF/50V	CHD1JJ3CH102
C677	CHIP CERAMIC CAP.(1608) B K 0.1µF/50V	CHD1JK30B104
C678	CHIP CERAMIC CAP.(1608) B K 1µF/25V	CHD1EK30B105
C679	ELECTROLYTIC CAP. 47µF/25V M	CE1EMASDL470
C681	CHIP CERAMIC CAP.(1608) B K 0.1µF/50V	CHD1JK30B104
C682	ELECTROLYTIC CAP. 10µF/50V M	CE1JMASDL100
C683	CHIP CERAMIC CAP.(1608) B K 1µF/25V	CHD1EK30B105
C685	CHIP CERAMIC CAP.(1608) B K 0.1µF/50V	CHD1JK30B104
C686	ELECTROLYTIC CAP. 3.3µF/50V M	CE1JMASDL3R3
C687	ELECTROLYTIC CAP. 22µF/50V M	CE1JMASDL220
C688	ELECTROLYTIC CAP. 2.2µF/50V M	CE1JMASDL2R2
C690	ELECTROLYTIC CAP. 100µF/10V M	CE1AMASDL101
C691	ELECTROLYTIC CAP. 1000µF/35V M	CE1GMZADL102
C693	CHIP CERAMIC CAP.(1608) F Z 0.1µF/50V	CHD1JZ30F104
C694	ELECTROLYTIC CAP. 100µF/25V M	CE1EMASDL101
C695	ELECTROLYTIC CAP. 3300µF/10V	CE1AMZNDL332
C696	ELECTROLYTIC CAP. 1µF/50V M	CE1JMASDL1R0
C697	CHIP CERAMIC CAP.(1608) B K 0.1µF/50V	CHD1JK30B104
C698	ELECTROLYTIC CAP. 100µF/10V M	CE1AMASDL101
C699	ELECTROLYTIC CAP. 100µF/50V M	CE1JMASDL101
C702	CHIP CERAMIC CAP.(1608) B K 0.1µF/50V	CHD1JK30B104

CONNECTORS

CN600▲	CONNECTOR PRINT OSU 3 S B3P4-VH-L	J3VH030JG015
CN601▲	CONNECTOR B2P3-VH(LF)(SN)	J3VH020JG001
CN650	FFC CONNECTOR 15P IMSA-9615S-15A-PP-A	JC96J15ER007
CN651	PH CONNECTOR TOP 20P B20B-PHDSS-B(LF)(SN)	J3F5D20JG003

DIODES

D600A	DIODE ZENER SMD UDZSNPTE-1730B	QD1B0UDZNP30
D601A	DIODE ZENER SMD UDZSNPTE-1733B	QD1B0UDZNP33
D602	DIODE ZENER 13BSB-T26	NDTB013BST26
D603	WIRE COPPER 6111-06003-0120	XZ40C0SHG002
D604	DIODE GENERAL PURPOSE 1N5406-BU	NDLZ1N5406BU
D605	DIODE GENERAL PURPOSE 1N5406-BU	NDLZ1N5406BU
D608	DIODE FR104-B	NDLZ000FR104
D609	DIODE FR104-B	NDLZ000FR104
D610▲	DIODE GENERAL PURPOSE 1N5406-BU	NDLZ1N5406BU

Ref. No.	Description	Part No.
RESISTORS		
R101	RES CARBON FILM T 1/4W J 100 Ω	RCX4101T1001
R102	RES CHIP 1608 1/10W J 3.3k Ω	RRXA332HH013
R103	RES CHIP 1608 1/10W J 2.7k Ω	RRXA272HH013
R106	RES CHIP 1608 1/10W J 1.0k Ω	RRXA102HH013
MISCELLANEOUS		
CL103	WIRE ASSEMBLY 4PIN 4PIN/35MM	WX1A17F6-202
RS101	SENSOR REMOTE RECEIVER KSM-712TH2E	USESJRSKK044

PARTS LIST [32HFL5763L/F7 (Serial No.: DS1)]

Mechanical Parts

PRODUCT SAFETY NOTE: Products marked with a  have special characteristics important to safety.

Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

NOTE: Parts that are not assigned part numbers (-----) are not available.

Different parts from the original model

32HFL5763D/F7 (Serial No. : DS1)

Ref. No.	Description	Part No.
A12 	RATING LABEL A17FXUH	-----
A42	ENERGY GUIDE LABEL A17FXUH	-----
A47	TUNER COVER A17FXUH	1EM226783
B85	Not used	
B92	Not used	
L56	Not used	
S17	CARTON LABEL A17FXUH	-----
X3	Not used	
X4	Not used	

Electrical Parts

PRODUCT SAFETY NOTE: Products marked with a  have special characteristics important to safety.

Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

NOTES:

1. Parts that are not assigned part numbers (-----) are not available.
2. Tolerance of Capacitors and Resistors are noted with the following symbols.

C.....±0.25% D.....±0.5% F.....±1%

G.....±2% J.....±5% K.....±10%

M.....±20% N.....±30% Z.....+80/-20%

3. When you conduct on a component level repair for the Inverter CBA, make sure to refer the right Block Diagram/Schematic Diagram/ CBA and Parts List.

For the main CBA, the last digit of the board number, which is engraved on every board, should be a number (e.g. BA17F4F0103 2).

For the sub CBA, the last digit of the board number, which is engraved on every board, should be an alphabet (e.g. BA17F4F0103 Z).

Different parts from the original model 32HFL5763D/F7 (Serial No. : DS1)

Ref. No.	Description	Part No.
	SMART MODULE CBA UNIT	UPBMATZNW002
	DIGITAL MAIN CBA UNIT	A17FXMMA-001